



ISA6500 Hardware Guide

Copyright Notice

This document is provided strictly as a guide. No guarantees can be provided or expected. This document contains the confidential information and/or proprietary property of Ivanti, Inc. and its affiliates (referred to collectively as "Ivanti") and may not be disclosed or copied without prior written consent of Ivanti.

Ivanti retains the right to make changes to this document or related product specifications and descriptions, at any time, without notice. Ivanti makes no warranty for the use of this document and assumes no responsibility for any errors that can appear in the document nor does it make a commitment to update the information contained herein. For the most current product information, please visit www.lvanti.com.

Copyright © 2026, Ivanti, Inc. All rights reserved.

Protected by patents, see <https://www.ivanti.com/patents>.

Contents

Revision History	4
Package Contents	5
System Overview	6
Introduction	6
LED Control Panel	6
Management Port LEDs	10
Air Flow Direction	10
Hardware Specifications	11
System Measurements	11
Power Rating	11
Environmental Requirements	11
Component Specifications	12
Where to Get Replacement Components	12
Console and Initial Configuration	13
Accessing ISA6500 Serial Console through Laptop	13
Accessing ISA6500 Console through Console Server	13
Powering On the System	14
Configuring Basic Settings	14
Accessing the Web Admin Interface	15
Licensing the System	15
Installation	16
Preparing for Setup	16
Rack Mounting Instructions	18
Standard Warnings and Compliance	20
About Standard Warnings	20
Safety Certifications	20
Electrical Safety	21
General Safety	21
Installation Instructions	24
Circuit Breaker	26
Power Disconnection Warning	28
Equipment Installation	30
Restricted Area	32
Redundant Power Supplies	35
Backplane Voltage	37
Comply with Local and National Electrical Codes	39
Product Disposal	41
Power Cable and AC Adapter	43
Certification Statements	47

Revision History

Revision Number and Date	Description
1.0, March 2026	Initial release.

Package Contents

The ISA6500 package typically includes the following:

Item	Quantity
Cable, Console, Blue, RJ45 to DB9, 6 ft.	1
Cable, Generic, C13, 1 Power Cord	1
Cable, Power, C13/C14, 13A/125V, 1m	1
Screw Kit, Rack Mount, ISA6500	1
Packaging box, accessory kit, ISA	1
Quick Start Guide, ISA6500	1

System Overview

Introduction

The ISA6500 features a unique and highly optimized design for low wattage processor platforms. It is equipped with a high-efficiency low noise power supply. High-performance fans provide ample optimized cooling.

ISA6500 - Front View



ISA6500 - Rear View



For added system security, the USB ports have been disabled.

LED Control Panel

The control panel located on the front of the ISA6500 chassis includes power control buttons and status LEDs. This section describes the LED indicators and the appropriate responses.




Control Panel Buttons

The control panel includes a power on/off button and a reset button.




Power button: The main power switch is used to apply or remove power from the power supply to the server system. To turn off the device, press the power button for four seconds. You must unplug the system before servicing.

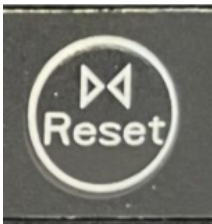

Reset button: The reset button is used to reboot the system.

Control Panel LEDs

The control panel displays five LEDs to monitor the system.

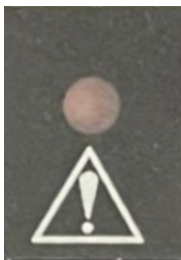

Information LED: Alerts operator of several states, as noted in the table below:

Status	Description
Red OFF	Indicates system is operating normally.

Status	Description
Red ON	Indicates critical condition, may include: <ul style="list-style-type: none"> - System fan failure - System temperature
Red and Blink	Indicates non-critical condition, may include: <ul style="list-style-type: none"> - Temperature and voltage issue



NIC1: Associated with the Management port. It indicates network activity when flashing.

LED	Color	Description
On	Blue	Link between system and network or no access.
Blink	Blue	Data transmission or receiving is occurring
Off	N/A	No data transmission or receiving is occurring



NIC2: Unused. Will always be off.



HDD: Indicates SATA drive activity when flashing.

- Amber and ON: indicates HDD locate.
- Amber, ON and Blink: indicates HDD access.
- Off: No HDD access or no HDD fault.




Power: Indicates power is being supplied to the system power supply. This LED should be illuminated when the system is operating.

- On and Blue: System is powered on.
- Blue and Blink: System is in sleep mode.
- Off: System is powered off or in hibernate mode.

Management Port LEDs

The management port has two LEDs..

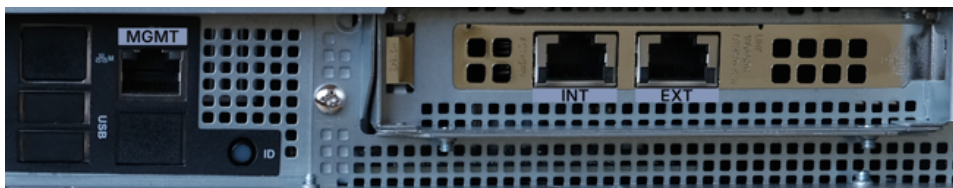

LED	Name	Color	Status	Description
1	1 GbE Speed LED	Yellow	On	1 Gbps data rate
		Green	On	100 Mbps data rate
		N/A	Off	10 Mbps data rate
2	1 GbE Link / Activity LED	Green	On	Link between system and network or no access
			Blink	Data transmission or reception is occurring
		N/A	Off	No data transmission or reception is occurring

Air Flow Direction

The following table gives the air flow direction of the power supply fan and internal CPU fan.

Component	Air Flow Direction
Power Supply Fan	To the rear of the unit
Internal CPU Fan	To the rear of the unit

Hardware Specifications

This chapter describes the specifications and components for ISA6500.

System Measurements

These figures are for an unpackaged system.

Category	ISA6500
Form factor	1 RU
Width	393.2 mm
Height	43.5 mm
Depth	430 mm
Weight	10 Kg

Power Rating

Below is the maximum power rating for the power supply:

Category	ISA6500
Power supply	1 x 400 W
Input voltage range	100 - 240 V, 60 - 50 Hz
Input current	6 - 3 A
Power consumption	250 W
Power connector	1x IEC 60320-C13

Environmental Requirements

Category	ISA6500
Operating temperature	10 °C to 35 °C
Non-operating temperature	-40 °C to 60 °C

Category	ISA6500
Operating Relative humidity	8% to 80% (non-condensing)
Non-operating Relative humidity	20% to 95% (non-condensing)

Component Specifications

Category	ISA6500
CPU	INTEL XEON E4-2434, 2.60 GHZ / 2.6G
No. of CPU sockets	1
Total Cores	8
Memory	16GB DDR5
Storage	1 X 480 GB SATA HDD
Controller data transfer rate	6 GB/s
Network ports	2 x 10Gb Base-T RJ-45 1x 1Gb Base-T RJ-45
Serial Ports	1 x DB-9
Cooling	Fans 4 x 40x40x56mm, 29,700 rpm

Where to Get Replacement Components

Although not frequently, you may need replacement parts for your system. To ensure the highest level of professional service and technical support, go to [Support Center](#).

Console and Initial Configuration

Accessing ISA6500 Serial Console through Laptop

1. Get the USB-to-DB9 (female) cable (this cable is not provided by Ivanti).



2. Connect the USB port to the laptop and serial DB9 female port to the ISA6500 console.
3. Configure a terminal emulation utility running on the laptop, such as HyperTerminal or PuTTY, to use these serial connection parameters: 9600 bits per second, 8-bit no parity (8N1), 1 stop bit, no flow control.
4. Connect a network cable from the INT port (internal port) on the appliance to a switch port.



To find your COM port in Windows, go to Start > Search > Device Manager > Ports (COM & LPT) > USB Serial Port (COM#).

Accessing ISA6500 Console through Console Server

1. Get the RJ45-to-DB9 serial cable.



2. Connect the RJ45 port in RJ45-to-DB9 serial cable to the console server and serial DB9 female to the ISA6500 console (DB9 male).

3. Configure a terminal emulation utility running on the laptop, such as HyperTerminal or PuTTY, connect using telnet to the console server IP and the port number it is connected to.
4. Connect a network cable from the INT port (internal port) on the appliance to a switch port.

Powering On the System

Do this:

1. Connect the AC power cord from the power supply to a power source.
2. Press the power switch on the front of the system.



After powering off a power supply, wait at least 60 seconds before turning it back on. After powering on a power supply, wait at least 60 seconds before turning it off.

After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the show chassis command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

Configuring Basic Settings

When you bring up a new ISA6500 for the first time, you need to enter basic network information through the console to make it accessible to the network. After entering these settings, you can continue configuring the ISA6500 through the administrator Web console.

The installation process may take up to 30 minutes.

Do this to perform basic setup:

1. In Serial console, check that the image loaded from local disk. i.e., current partition.
 2. Enter `y` to select the appliance as a stand-alone node.
 3. Enter `y` to accept the license terms (or enter `r` to read the license first).
 4. Follow the directions in the console, and enter the information for which you are prompted, including the following:
 - Internal port IP address (you configure the external port through the administrator Web console after initial configuration)
 - Internal port network mask
 - Internal port default gateway address
-

- Internal port default VLAN (optional)
- Primary DNS server address
- Digital certificate
- Admin username
- Admin password
- Common name (example: secure.company.com)
- Organization name (example: Company Inc.)
- Register Ivanti Connect Secure with Ivanti Neurons for Secure Access (optional)

After you perform the basic setup, you are ready to license the software, verify accessibility, and complete the configuration process through the ISA6500 administrator Web console.

Accessing the Web Admin Interface

1. Launch a web browser from a laptop that is network connected.
2. Point the browser at the same IP address that was assigned to the internal port followed by /admin (for example, https://a.b.c.d/admin).
3. When prompted with the security alert to proceed without a signed certificate, click Yes. When the administrator sign-in page appears, you have successfully connected your device to the network.
4. On the sign-in page, enter the administrator username and password you created earlier. Then click Sign In. The administrator Web console opens to the Overview page.

Licensing the System

After you install the device and perform basic setup, you are ready to license it.

To license your device, follow instructions received in an email from Ivanti. For more information, contact [Support Center](#).

The device uses the common machine and organization names to create a self-signed digital certificate for use during product evaluation and initial setup.

We strongly recommend that you import a signed digital certificate from a trusted certificate authority (CA) before you deploy the device for production use.

Installation

This chapter provides instructions and tips for installing the chassis into a rack.

Preparing for Setup

Please read this section in its entirety before beginning the installation procedure.

Choosing a Setup Location

Decide on a suitable location for the rack. It should be a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. Place it near a grounded power outlet.

- Leave at least 25 inches clearance in front of the rack to open the front door completely.
- Leave approximately 30 inches of clearance in the back of the rack to allow for sufficient airflow and ease in servicing.
- Install in a restricted access location, such as a dedicated equipment room or service closet.

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the ambient temperature of the room. Install the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (TMRA).

Adequate Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Circuit Overloading

Avoid overloading the power supply circuitry or any overcurrent protection equipment. Use equipment nameplate ratings to calculate your requirements.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, ground the rack, itself. Pay attention to power supply connections other than the direct connections to the branch circuit, such as power strips.

Physical Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are fully extended to the floor with the full weight of the rack resting on them.
- In single rack installation, stabilizers should be attached to the rack.
- In multiple rack installations, the racks should be coupled together.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack. If this is the only unit in the rack, mount it at the bottom.
- Always make sure the rack is stable before extending a component from the rack. Extend only one component at a time. Extending two or more simultaneously may cause the rack to become unstable.

Warning: Follow these guidelines to prevent injury. Take all precautions to ensure the system remains stable


General Server Precautions

- Review the electrical and general safety precautions that came with the components you are adding to your chassis.
- Determine the placement of each component in the rack.
- Install the heaviest server components on the bottom of the rack first, and then work up.
- Use a regulating, uninterruptible power supply (UPS) to protect the server from power surges, voltage spikes and to keep your system operating in case of a power failure.
- Allow the hard drives and power supply modules to cool before touching them.
- Always keep the rack front door, all panels and all components on the servers closed when not servicing, to maintain proper cooling.

Warning: If you unscrew and open the chassis cover, it will void your product warranty.

Rack Mounting Instructions

There are a variety of rack units on the market, so the assembly procedure might differ slightly. Refer to the installation instructions that came with your rack unit.

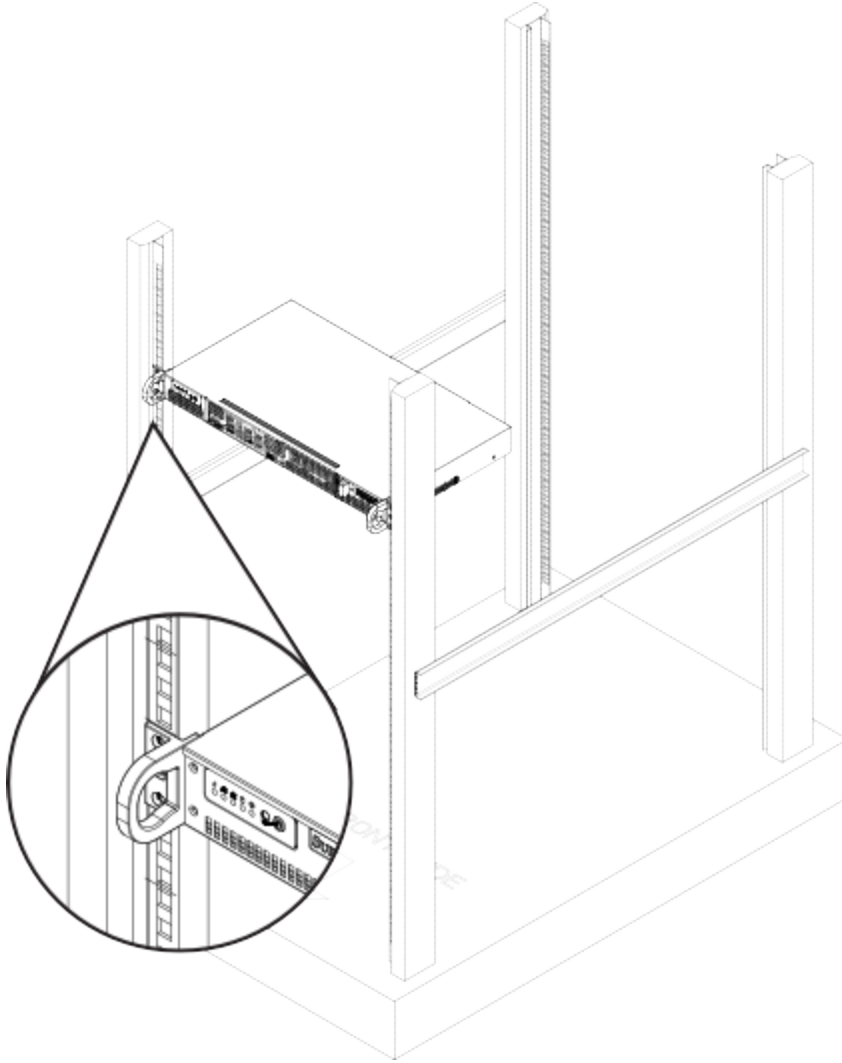

Figures are for illustrative purposes only. Servers should always be installed in racks from the bottom up

Installing the Chassis into a Standard Rack

Installing the Chassis in a Standard Rack

1. Confirm that chassis includes the four mounting screws required to mount the chassis into a rack.
2. Align the thru holes of the chassis with the thru holes of the rack.

3. Insert the mounting screws into the thru holes in the front of the chassis and through the thru holes in the rack.

Warning: Do not pick up the server by the front handles. They are designed to pull the system from a rack only.

Standard Warnings and Compliance

- ["About Standard Warnings" below](#)
- ["Safety Certifications" below](#)
- ["Electrical Safety" on the next page](#)
- ["General Safety" on the next page](#)
- ["Installation Instructions" on page 24](#)
- ["Circuit Breaker" on page 26](#)
- ["Equipment Installation" on page 30](#)
- ["Restricted Area" on page 32](#)
- ["Redundant Power Supplies" on page 35](#)
- ["Backplane Voltage" on page 37](#)
- ["Comply with Local and National Electrical Codes" on page 39](#)
- ["Product Disposal" on page 41](#)
- ["Power Cable and AC Adapter" on page 43](#)
- ["Certification Statements" on page 47](#)

About Standard Warnings

The following statements are industry standard warnings, provided to warn the user of situations that have the potential for bodily injury. Should you have questions or experience difficulty, contact Ivanti's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Safety Certifications

- USA - CSA
- Canada -CSA
- Europe/CE Mark
- EN 62368/IEC 62368-Compliant

- CCC Exemption

Electrical Safety

Basic electrical safety precautions should be followed to protect yourself from harm and the system from damage:

- Be aware of the locations of the power on/off switch on the system, as well as the room's emergency power-off switch, disconnection switch, or electrical outlet. If an electrical accident occurs, you can quickly remove power from the system.
- Do not work alone when working with high voltage components.
- Power should always be disconnected from the system when removing or installing system components. When disconnecting power, you should first power down the system with the operating system and then unplug the power cords from all the power supply modules in the system.
- When working around exposed electrical circuits, another person who is familiar with the power-off controls should be nearby to switch off the power, if necessary.
- Use only one hand when working with powered-on electrical equipment. This is to avoid making a complete circuit, which will cause electrical shock. Use extreme caution when using metal tools, which can easily damage any electrical components they come into contact with.
- Do not use mats designed to decrease electrostatic discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- The power supply power cord must include a grounding plug and must be plugged into grounded electrical outlets.
- Use a grounded wrist strap designed to prevent static discharge.

General Safety

- Keep the area around the system clean and free of clutter.
- While working on the system, do not wear loose clothing such as neckties and unbuttoned shirt sleeves, which can come into contact with electrical circuits or be pulled into a fan.
- Remove any jewelry or metal objects from your body, which are excellent metal conductors that can create short circuits and harm you if they come into contact with areas where power is present.



Warning!

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

警告の定義 この警告サインは危険を意味します

。

人身事故につながる可能性がありますので、いずれの機器でも動作させる前に、電気回路に含まれる危険性に注意して、標準的な事故防止策に精通して下さい。

此警告符号代表危險。

您正处于可能受到严重危害的工作环境中。在您使用任何设备开始工作之前，务必充分意识到触电的危险，并熟练掌握防止事故发生的准备工作程序。请根据每次警告末尾的声明号码找到此处的安全性警告说明的翻译文本。

此警告符號代表危險。

您正處於可能身體可能會受損傷的工作環境中。在您使用任何設備之前，請注意觸電的危險，並且要熟悉預防事故發生的標準工作程序。請

依照每一注意事項後的號碼找到相關的翻譯說明內容。

Warnung

WICHTIGE SICHERHEITSHINWEISE

Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.

BEWAHREN SIE DIESE HINWEISE GUT AUF.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

GUARDE ESTAS INSTRUCCIONES.

IMPORTANTES INFORMATIONS DE SÉCURITÉ

Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.

CONSERVEZ CES INFORMATIONS.

תקנון הצהרות אזהרה

הצהרות הבאות הן אזהרות על פי תקני התעשייה, על מנת להזהיר את המשתמש מפני חבלה פיזית אפשרית. במידה ויש שאלות או היתקלות בבעיה כלשהי, יש ליצור קשר עם מחלקת תמיכה

טכנית של סופרמיקרו. טכנאים מוסמכים בלבד רשאים להתקין או להגדיר את הרכיבים

יש לקרוא את הנספח במלואו לפני התקנת או הגדרת הרכיבים במארגי סופרמיקרו

تحذّر! هذا الزهزُع خطر أك ف حالة وكي أي تتسبب ف إصابة جسدة . تعول على أي هعدات، كي على علن بالوخطز الأوجة عي الذوائز قبل أي

الكهزبائة وكي على درأة بالووارسات السقاية لوع وقع أي حادث استخدم رقن الپای الوصص ف هأة كل تحذّر للعشر تزجوتها

안전을 위한 주의사항 경고!

이 경고 기호는 위험이 있음을 알려 줍니다. 작업자의 신체에 부상을 야기 할 수 있는 상태에 있게 됩니다. 모든 장비에 대한 작업을 수행하기 전에 전기회로와 관련된 위험요소들을 확인하시고 사전에 사고를 방지할 수 있도록 표준 작업절차를 준수해 주시기 바랍니다.

해당 번역문을 찾기 위해 각 경고의 마지막 부분에 제공된 경고문 번호를 참조하십시오

BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Dit waarschuwings symbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij een elektrische installatie betrokken risico's en dient u op de hoogte te zijn van de standaard procedures om ongelukken te voorkomen. Gebruik de nummers aan het eind van elke waarschuwing om deze te herleiden naar de desbetreffende locatie.

BEWAAR DEZE INSTRUCTIES

Installation Instructions



Warning!

Read the installation instructions before connecting the system to the power source.

設置手順書 システムを電源に接続する前に、設置手順書をお読み下さい。

警告

将此系 接 源前, 先 安 明。

警告 將系統與電源連接前, 請先閱讀安裝說明。

Warnung

Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

¡Advertencia!

Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Attention

Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

יש לקרוא את הוראות התקנה לפני חיבור המערכת למקור מתח.

اقر إرشادات التركيب قبل توصيل النظام إلى مصدر للطاقة

시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Waarschuwing

Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Circuit Breaker



Warning!

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 V, 20 A.

サーキット・ブレーカー この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。保護装置の定格が250 V、20 Aを超えないことを確認下さい。

警告

此产品的短路(过流)保护由建筑物的供电系统提供,确保短路保护的额定流不大于250V,20A。

警告 此产品的短路(过载电流)保护由建筑物的供电系统提供,确保短路保护设备的额定电流不大于250V,20A。

Warnung

Dieses Produkt ist darauf angewiesen, dass im Gebäude ein Kurzschluss- bzw. Überstromschutz installiert ist. Stellen Sie sicher, dass der Nennwert der Schutzvorrichtung nicht mehr als: 250 V, 20 A beträgt.

¡Advertencia!

Este equipo utiliza el sistema de protección contra cortocircuitos (o sobrecorrientes) del edificio. Asegúrese de que el dispositivo de protección no sea superior a: 250 V, 20 A.

Attention

מוצר זה מסתמך על הגנה המותקנת במבנים למניעת קצר חשמלי. יש לוודא כי

250 V, 20 A-המכשיר המגן מפני הקצר החשמלי הוא לא יותר מ

هذا المنتج يعتمد على معدات الحماية مه الدوائر القصيرة التي تم تثبيتها في

المبنى

20A, تأكد من أن تقييم الجهاز الوقائي ليس أكثر من: 250

경고!

이 제품은 전원의 단락(과전류)방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호장치의 정격이 반드시 250V(볼트), 20A(암페어)를 초과하지 않도록 해야 합니다.

Waarschuwing

Dit product is afhankelijk van de kortsluitbeveiliging (overspanning) van uw elektrische installatie. Controleer of het beveiligde apparaat niet groter gedimensioneerd is dan 220V, 20A.

Power Disconnection Warning



Warning!

The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components.

電源切断の警告 システムコンポーネントの取り付けまたは取り外しのために、シャーシ内部にアクセスするには、システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

警告

在你打 机箱并安 或移除内部器件前,必 将系 完全断 ,并移除 源 。

警告 在您打開機殼安裝或移除內部元件前,必須將系統完全斷電,並移除電源線。

Warnung

Das System muss von allen Quellen der Energie und vom Netzanschlusskabel getrennt sein, das von den Spg.Versorgungsteilmodulen entfernt wird, bevor es auf den Chassisinnenraum zurückgreift, um Systemsbestandteile anzubringen oder zu entfernen.

¡Advertencia!

El sistema debe ser disconnected de todas las fuentes de energía y del cable eléctrico quitado de los módulos de fuente de alimentación antes de tener acceso el interior del chasis para instalar o para quitar componentes de sistema.

Attention

Le système doit être débranché de toutes les sources de puissance ainsi que de son cordon d'alimentation secteur avant d'accéder à l'intérieur du chasis pour installer ou enlever des composants de système.

אזהרה! יש לנתק את המערכת מכל מקורות החשמל ויש להסיר את כבל החשמלי מהספק

לפני גישה לחלק הפנימי של המארז לצורך התקנת או הסרת רכיבים.

يجب فصل المنظمو من جميع مصادر انطاقت وإزانت سهك انكهرباء من وحدة امداد
انطاقت قيم انصلل إنى انمناطق انداخييت نههيكم تتشيح أو إزانت مكنناث الجهاز

경고!

시스템에 부품들을 장착하거나 제거하기 위해서는 쉐시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Waarschuwing

Voordat u toegang neemt tot het binnenwerk van de behuizing voor het installeren of verwijderen van systeem onderdelen, dient u alle spanningsbronnen en alle stroomkabels aangesloten op de voeding (en) van de behuizing te verwijderen

Equipment Installation



Warning!

Only trained and qualified personnel should be allowed to install, replace, or service this equipment.

機器の設置 トレーニングを受け認定された人だけがこの装置の設置、交換、またはサービスを許可されています。

警告

只有过培且具有格的人才能行此的安、更和修。

警告 只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Warnung

Das Installieren, Ersetzen oder Bedienen dieser Ausrüstung sollte nur geschultem, qualifiziertem Personal gestattet werden.

¡Advertencia!

Solamente el personal calificado debe instalar, reemplazar o utilizar este equipo.

אזהרה!

צוות מוסמך בלבד רשאי להתקין, להחליף את הציוד או לתת שירות עבור הציוד.

لتزكيب واستبدال أو خدمة هذا الجهاز

يجب أن يسمح فقط للموظف المؤهليه والمدريه

경고!

훈련을 받고 공인된 기술자만이 이 장비의 설치, 교체 또는 서비스를 수행할 수 있습니다.

Waarschuwing

Deze apparatuur mag alleen worden geïnstalleerd, vervangen of hersteld door geschoold en gekwalificeerd personeel.

Restricted Area



Warning!

This unit is intended for installation in restricted access areas. A restricted access area can be accessed only through the use of a special tool, lock and key, or other means of security. (This warning does not apply to workstations).

アクセス制限区域 このユニットは、アクセス制限区域に設置されることを想定しています。

アクセス制限区域は、特別なツール、鍵と錠前、その他のセキュリティの手段を用いてのみ出入りが可能です。

警告

此部件安装在限制出的所，限制出的所指只能通过使用特殊工具、和匙或其它安全手段出的所。

警告 此装置仅限安装於进出管制区域，进出管制区域係指仅能以特殊工具、锁头及钥匙或其他安全方式才能进入的区域。

Warnung

Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Der Zutritt zu derartigen Bereichen ist nur mit einem Spezialwerkzeug, Schloss und Schlüssel oder einer sonstigen Sicherheitsvorkehrung möglich.

¡Advertencia!

Esta unidad ha sido diseñada para instalación en áreas de acceso restringido. Sólo puede obtenerse acceso a una de estas áreas mediante la utilización de una herramienta especial, cerradura con llave u otro medio de seguridad.

Attention

Cet appareil doit être installé dans des zones d'accès réservés. L'accès à une zone d'accès réservé n'est possible qu'en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

אזור עם גישה מוגבלת אזור עם גישה מוגבלת

אזהרה! יש להתקין את היחידה באזורים שיש בהם הגבלת גישה. הגישה ניתנת בעזרת
'כלי אבטחה בלבד (מפתח, מנעול וכד

. تم تخصيص هذه انحدة تتركبها في مناطق محظورة
،مكن انصلل إن منطقت محظورة فقط من خلال استخداو أداة خاصت

أو وسهت أخري نالمالما
قفم ومفتاح

경고!

이 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 특수도구, 잠금 장치 및 키, 또는 기타 보안 수단을 통해서만 접근 제한 구역에 들어갈 수 있습니다.

Waarschuwing

Dit apparaat is bedoeld voor installatie in gebieden met een beperkte toegang. Toegang tot dergelijke gebieden kunnen alleen verkregen worden door gebruik te maken van speciaal gereedschap, slot en sleutel of andere veiligheidsmaatregelen.

Redundant Power Supplies



Warning!

This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

冗長電源装置 このユニットは複数の電源装置が接続されている場合があります。ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

警告

此部件 接的 源可能不止一个, 必 将所有 源断 才能停止 部件供 。

警告 此裝置連接的電源可能不只一個, 必須切斷所有電源才能停止對該裝置的供電。

Warnung

Dieses Gerät kann mehr als eine Stromzufuhr haben. Um sicherzustellen, dass der Einheit kein Strom zugeführt wird, müssen alle Verbindungen entfernt werden.

¡Advertencia!

Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Attention

Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

אם קיים יותר מספק אחד

אם קיים יותר מספק אחד

אזהרה! ליחידה יש יותר מחיבור אחד של ספק. יש להסיר את כל החיבורים על מנת לרוקן

את היחידה.

경고!

يجب إزالة كافة الاتصالات لعسل الوحدة عن الكهرباء قد يكون لهذا الجهاز عدة اتصالات بوحدات امداد الطاقة.

이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해 서는 모든 연결 단자를 제거해야만 합니다.

Waarschuwing

Backplane Voltage



Warning!

Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

バックプレーンの電圧 システム稼働中は危険な電圧または電力が、バックプレーン上にかかっています。修理する際には注意 ください。

警告

当系正在行时, 背板上有很危的压或能量, 行修时必小心。

警告 當系統正在進行時, 背板上有危險的電壓或能量, 進行維修時務必小心。

Warnung

Wenn das System in Betrieb ist, treten auf der Rückwandplatine gefährliche Spannungen oder Energien auf. Vorsicht bei der Wartung.

¡Advertencia!

Cuando el sistema está en funcionamiento, el voltaje del plano trasero es peligroso. Tenga cuidado cuando lo revise.

Attention

Lorsque le système est en fonctionnement, des tensions électriques circulent sur le fond de panier. Prendre des précautions lors de la maintenance.

מתח בפנל האחורי

מתח בפנל האחורי

אזהרה! קיימת סכנת מתח בפנל האחורי בזמן תפעול המערכת. יש להיזהר במהלך העבודה.

خطر من التيار الكهربائي أو الطاقة المخزنة على اللوحة النظام يعمل كه حذرا عند خدمة هذا الجهاز هناك عندما يكن

경고!

시스템이 동작 중일 때 후면판 (Backplane)에는 위험한 전압이나 에너지가 발생 합니다. 서비스 작업 시 주의하십시오.

Waarschuwing

Een gevaarlijke spanning of energie is aanwezig op de backplane wanneer het systeem in gebruik is. Voorzichtigheid is geboden tijdens het onderhoud.

Comply with Local and National Electrical Codes



Warning!

Installation of the equipment must comply with local and national electrical codes.

地方および国の電気規格に準拠 機器の取り付けはその地方および国の電気規格に準拠する必要があります。

警告

安 必 符合本地与本国 气法 。警告

Warnung

Die Installation der Geräte muss den Sicherheitsstandards entsprechen.

¡Advertencia!

La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Attention

L'équipement doit être installé conformément aux normes électriques nationales et locales.

תיאום חוקי החשמל הארצי

תיאום חוקי החשמל הארצי

אזהרה!

התקנת הציוד חייבת להיות תואמת לחוקי החשמל המקומיים והארציים.

تركيب المعدات الكهربائية يجب أن يمتثل للقوانين المحلية والوطنية المتعلقة

بالكهرباء

경고!

현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Waarschuwing

Product Disposal



Warning!

Ultimate disposal of this product should be handled according to all national laws and regulations.

製品の廃棄 この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

警告

本品的 弃处理 根据所有国家的法律和 章 行。

警告 本產品的廢棄處理應根據所有國家的法律和規章進行。

Warnung

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Attention

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

סילוק המוצר

סילוק המוצר

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين واللوائح الوطنية

경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Power Cable and AC Adapter



Warning!

When installing the product, use the provided or designated connection cables, power cables and AC adaptors. Using any other cables and adaptors could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the code) for any other electrical devices than products designated by AMAX only.

電源コードとACアダプター

製品を設置する場合、提供または指定された接続ケーブル、電源コードとACアダプターを使用下さい。他のケーブルやアダプタを使用すると故障や火災の原因になることがあります。電気用品安全法は、ULまたはCSA認定のケーブル(UL/CSEマークがコードに表記)を Ivanti が指定する製品以外に使用することを禁止しています。

警告

安此品時,使用本身提供的或指定的接,源和源适配器.使用其它材或适配器可能会引起故障或火灾。除了Ivanti所指定的品,气用品和材料安全法律定禁止使用未UL或CSA的材。(材上会示UL/CSA符号)。

警告

安裝此產品時,請使用本身提供的或指定的連接線,電源線和電源適配器.使用其它線材或適配器可能會引起故障或火災。除了Ivanti所指定的產品,電氣用品和材料安全法律規定禁止使用未經UL或CSA認證的線材。(線材上會顯示UL/CSA符號)。

Warnung

Bei der Installation des Produkts, die zur Verfügung gestellten oder benannt Anschlusskabel, Stromkabel und Netzteile. Verwendung anderer Kabel und Adapter kann zu einer Fehlfunktion oder ein Brand entstehen. Elektrische Geräte und Material Safety Law verbietet die Verwendung von UL-oder CSA-zertifizierte Kabel, UL oder CSA auf der Code für alle anderen elektrischen Geräte als Produkte von Ivanti nur bezeichnet gezeigt haben.

¡Advertencia!

Al instalar el producto, utilice los cables de conexión previstos o designados, los cables y adaptadores de CA. La utilización de otros cables y adaptadores podría ocasionar un mal funcionamiento o un incendio. Aparatos Eléctricos y la Ley de Seguridad del Material prohíbe el uso de UL o CSA cables certificados que tienen UL o CSA se muestra en el código de otros dispositivos eléctricos que los productos designados por Ivanti solamente.

Attention

Lors de l'installation du produit, utilisez les bables de connection fournis ou désigné. L'utilisation d'autres cables et adaptateurs peut provoquer un dysfonctionnement ou un incendie. Appareils électroménagers et de loi sur la sécurité Matériel interdit l'utilisation de UL ou CSA câbles certifiés qui ont UL ou CSA indiqué sur le code pour tous les autres appareils électriques que les produits désignés par Ivanti seulement.

חשמליים ומתאמי

AC חשמליים ומתאמי

אזהרה!

אשר לשם כך. שימוש בכל כבל או מתאם AC מתקינים את המוצר, יש להשתמש בכבלים, ספקים ומתאמים אחר יכול לגרום לתקלה או כאשר על פי חוקי שימוש במכשירי חשמל וחוקי בטיחות, קיים איסור נועדו וסופקו קצר חשמלי.

כשאר מופיע עליהם קוד של)

CSA- או ב UL- להשתמש בכבלים המוסמכים ב

עבור כל מוצר חשמלי אחר שלא צוין על ידי סופרמיקרו בלבד UL/CSA)

עند تركيب الجهاز يجب استخدام كابات التوصيل، والكابات الكهربائية
ومحولات التيار المتردد
التي . أن استخدام أي كابات ومحولات أخرى يتسبب في حدوث عطل أو حريق.
تم توفيرها لك مع المنتج
الأجهزة الكهربائية ومواد قانون السلامة يحظر استخدام الكابات UL أو CSA
معتمدة من قبل
لأي أجهزة كهربائية أخرى غير المنتجات المعينة من قبل Supermicro
(التي تحمل علامة UL/CSA)

Ivanti

경고!

제품을 설치할 때에는 제공되거나 지정된 연결케이블과 전원케이블, AC어댑터를 사용해야 합니다. 그 밖의 다른 케이블들이나 어댑터들은 고장 또는 화재의 원인이 될 수 있습니다. 전기용품안전법 (Electrical Appliance and Material Safety Law)은 슈퍼마이크로에서 지정한 제품들 외에는 그 밖의 다른 전기 장치들을 위한 UL또는 CSA에서 인증한 케이블(전선 위에 UL/CSA가 표시) 들의 사용을 금지합니다.

Waarschuwing

Bij het installeren van het product, gebruik de meegeleverde of aangewezen kabels, stroomkabels en adapters. Het gebruik van andere kabels en adapters kan leiden tot een storing of een brand. Elektrisch apparaat en veiligheidsinformatiebladen wet verbiedt het gebruik van UL of CSA gecertificeerde kabels die UL of CSA die op de code voor andere elektrische apparaten dan de producten die door Ivanti alleen.

Certification Statements

China

Japan

この装置は、クラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。VCCI-A

Israel

אזהרה
מוצר זה הוא מוצר Class A.
בסביבה ביתית, מוצר זה עלול לגרום הפרעות בתדר רדיו, ובמקרה זה, המשתמש עשוי להידרש לנקוט אמצעים מתאימים.

Saudi Arabia

Complies with the CITC Technical Specification CITC GEN001, IT001.

South Korea

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Taiwan

警告使用者:這是甲類的資訊產品,在居住的環境中使用時,可能會造成射頻干擾,在這種情況下,使用者會被要求採取某些適當的對策

Thailand

เครื่องโทรคมนาคม และอุปกรณ์นี้ มีความสอดคล้องตามข้อกำหนดของ กสทช.