



Pulse Policy Secure

Administration Guide

Product Release 9.0R3

Document Revision 3.2

Published: January 2019

Pulse Secure, LLC
2700 Zanker Road, Suite 200
San Jose, CA 95134
<https://www.pulsesecure.net>

© 2019 by Pulse Secure, LLC. All rights reserved

Pulse Secure and the Pulse Secure logo are trademarks of Pulse Secure, LLC in the United States. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Pulse Secure, LLC assumes no responsibility for any inaccuracies in this document. Pulse Secure, LLC reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Pulse Policy Secure Administration Guide

The information in this document is current as of the date on the title page.

END USER LICENSE AGREEMENT

The Pulse Secure product that is the subject of this technical documentation consists of (or is intended for use with) Pulse Secure software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://www.pulsesecure.net/support/eula>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA."

Revision History

The following table lists the changes to this document from the previous release.

Table Lists changes to this document from the previous release

| Feature | Add/Update/Remove | Document Published Date/Document Version | Effective Release | Notes |
|--|---|--|-------------------|-------|
| Cloud Secure documentation link | Cloud Secure documentation link is included | Jan 2019/3.2 | 9.0R3 | |
| Juniper SDSN Integration (Alert Based Integration) | Added "Alert Based Admission Control using Juniper SDSN" section | November 2018/3.0 | 9.0R3 | |
| Behavioral Analytics | Added "Behavioral Analytics" section. | November 2018/3.1 | 9.0R3 | |
| IoT Auto Provisioning using PAN firewall | Modified "IoT Access" section. Modified Configuring IoT Access Policy using Juniper SRX Firewall Added Configuring IoT Access Policy using PAN Firewall | November 2018/3.0 | 9.0R3 | |

| Feature | Add/Update/Remove | Document Published Date/Document Version | Effective Release | Notes |
|---|--|--|-------------------|-------|
| Host Checker – NETBIOS and Mac address check for MacOS | Updated HC “Support Platform Matrix” section. Updated “NetBios rule and MacOS rule” sections. | November 2018/3.0 | 9.0R3 | |
| RADIUS dictionary updates | Updated standard dictionary “Using RADIUS Attributes” section. | November 2018/3.0 | 9.0R3 | |
| Profile Groups | Added “Configuring Profiler Group” section | November 2018/3.0 | 9.0R3 | |
| L2 Simplification | Modified “Configuring RADIUS Attributes Policies” under Configuring 802.1X. | November 2018/3.0 | 9.0R3 | |
| Additional Authentication Server | Added “Configuring Admin/User Realm to associate an additional Authentication Server” section | November 2018/3.0 | 9.0R3 | |
| Default VLAN ID support in cluster environment | Updated the “Configuring the Internal Port” section. | November 2018/3.0 | 9.0R3 | |
| Huawei Switch support | Added sample “Configuration Commands for Huawei Switch” | November 2018/3.0 | 9.0R3 | |
| AAA decoupling | Added “AAA traffic management” section. | November 2018/3.0 | 9.0R3 | |
| Upgrade to OpenSSL 1.0.2n | Updated the “Upgrading the System Software” sections. | November 2018/3.0 | 9.0R3 | |
| Custom HTTP Header Support | Updated the “Configuring Custom HTTP Headers” section. | November 2018/3.0 | 9.0R3 | |
| Skip revocation check when OCSP/CRL server is not reachable | Updated the Configuring Auto-Importing of Client Certificates “Configuring Options for Trusted Client CA Certificates” sections. | November 2018/3.0 | 9.0R3 | |
| RSA (ACE server) external authentication support in TACACS+ | Modified “Configuring Admin Realm” section | November 2018/3.0 | 9.0R3 | |

| Feature | Add/Update/Remove | Document Published Date/Document Version | Effective Release | Notes |
|---|---|--|-------------------|-------|
| iOT Access | Added a new chapter for "iOT Access and iOT policy provisioning". | August 2018/2.0 | 9.0R2 | |
| Provisioning PCS sessions to Check Point Next Generation Firewall | Updated the "Provisioning PCS sessions to PAN/Check Point Firewall" section | August 2018/2.0 | 9.0R2 | |
| Endpoint Security Assessment Plug-In enhancement | Updated the "Endpoint Security Assessment Plug-In (ESAP)" section | April 2018/1.0 | 9.0R1 | |
| MAG support | Removed references to MAG | April 2018/1.0 | 9.0R1 | |

Abbreviated Table of Contents

| | |
|--|------|
| Table of Contents..... | vii |
| About This Guide | xxii |
| Introduction | 1 |
| Introduction to Pulse Policy Secure | 2 |
| Pulse Secure Profiler | 5 |
| Roles, Realms, and Sign-In Policy | 6 |
| Initial Configuration | 37 |
| Using the Initial Setup Wizard | 37 |
| Layer 2 Enforcement..... | 57 |
| Policy Enforcement using 802.1X..... | 58 |
| Policy Enforcement using SNMP | 91 |
| Policy Enforcement using MAC Authentication..... | 108 |
| Policy Enforcement using 802.1X Native Supplicant | 119 |
| Layer 3 Enforcement..... | 135 |
| Enforcement using Check Point Next-Generation Firewall..... | 136 |
| Enforcement using Palo Alto Networks Firewall | 148 |
| Identity Based Enforcement using FortiGate Products..... | 166 |
| Enforcement using SRX Series Firewall..... | 177 |
| Enforcement using Screen OS Firewall..... | 186 |
| IPsec Policy enforcement using SRX and ScreenOS | 201 |
| Enforcement using EX Series Ethernet Switches..... | 208 |
| IF-MAP Federation | 214 |
| Provisioning PCS sessions to PAN/Check Point Firewall..... | 235 |
| Deployments with Juniper IDP..... | 241 |
| Behavioral Analytics..... | 249 |
| IoT Access..... | 262 |
| Admission Control Using Network Security Devices | 278 |
| Alert Based Admission Control using Fortinet Products..... | 278 |
| Alert Based Admission Control using PAN Next Generation Firewall | 294 |
| Alert Based Admission Control using Juniper SDSN..... | 304 |

| | |
|--|------------|
| Endpoint Compliance | 318 |
| Host Checker | 318 |
| MDM Interoperability with PPS..... | 360 |
| AAA Servers | 404 |
| Network Device Administration using TACACS+ | 482 |
| Guest Access | 502 |
| Enterprise Onboarding | 643 |
| Clustering | 660 |
| Cloud Secure..... | 683 |
| System Management | 683 |
| Network and Host Administration..... | 684 |
| Certificate Security Administration | 723 |
| FIPS Level 1 Support (Software FIPS) | 747 |
| File Management | 755 |
| Dashboard and Reports..... | 785 |
| System Maintenance..... | 818 |
| Troubleshooting..... | 828 |
| Logging and Monitoring | 829 |
| Troubleshooting..... | 863 |
| Appendix | 883 |
| Custom Expressions and System Variables Reference | 883 |
| REST API Support..... | 902 |

Table of Contents

| | |
|--|-------------|
| Revision History | ii |
| Table of Contents..... | vii |
| About This Guide | xxii |
| Objectives | xxii |
| Audience | xxii |
| Documentation Conventions | xxii |
| Documentation | xxiii |
| Obtaining Documentation | xxiii |
| Documentation Feedback..... | xxiv |
| Requesting Technical Support..... | xxiv |
| <i>Self-Help Online Tools and Resources</i> | xxiv |
| <i>Opening a Case with PSGSC</i> | xxiv |
| Introduction | 1 |
| Introduction to Pulse Policy Secure | 2 |
| <i>Overview</i> | 2 |
| <i>PPS Components</i> | 3 |
| <i>PPS Enforcement Modes</i> | 3 |
| Pulse Secure Profiler | 5 |
| Overview | 5 |
| Roles, Realms, and Sign-In Policy | 6 |
| Overview | 7 |
| Configuring User Roles | 8 |
| <i>Creating Roles</i> | 8 |
| <i>Configuring User Access Options</i> | 9 |
| <i>Customizing UI Options</i> | 10 |
| <i>Customizing the Session Options</i> | 13 |
| <i>Configuring Role Restrictions</i> | 15 |
| <i>Configuring Password Access Realm Restriction</i> | 18 |
| Configuring Authentication Realm | 18 |
| <i>Creating an Authentication Realm</i> | 19 |
| <i>Configuring Admin/User Realm to associate an additional Authentication Server</i> | 21 |
| <i>Configuring Role Mapping</i> | 21 |
| <i>User Role Evaluation</i> | 23 |
| Configuring Sign-in Policies..... | 25 |
| <i>Configuring Administrator Sign-In Policies</i> | 25 |
| <i>Configuring User Sign-In Policies</i> | 27 |
| <i>Associating Authentication Realms and Protocols with User Sign-in Policies</i> | 28 |
| Managing Sign-In Policies | 30 |
| <i>Enabling and Disabling Sign-in Policies</i> | 30 |
| <i>Specifying the Order of Evaluation</i> | 30 |
| Configuring Sign-In Notifications | 32 |
| <i>Configuring and Implementing Sign-In Notifications</i> | 32 |
| Configuring Sign-In Pages..... | 34 |
| <i>Configuring Standard Sign-In Pages</i> | 34 |
| <i>Configuring Custom Sign-In Pages</i> | 36 |

| | |
|---|-----------|
| Initial Configuration | 37 |
| Using the Initial Setup Wizard | 37 |
| Overview..... | 37 |
| Benefits..... | 37 |
| Prerequisites..... | 37 |
| Limitations | 38 |
| Configuring PPS using Initial Setup Wizard | 39 |
| Basic Settings..... | 39 |
| Configuring Profiling for Network Visibility..... | 42 |
| Configuring Layer 2 Enforcement | 45 |
| Configuring Guest Authentication | 54 |
| Verification and Troubleshooting..... | 56 |
| Layer 2 Enforcement..... | 57 |
| Policy Enforcement using 802.1X | 58 |
| Overview..... | 58 |
| Benefits of 802.1X Authentication | 58 |
| Deployments using 802.1X Authentication | 59 |
| Deployment of PPS with External Authentication Server | 59 |
| Deployment of PPS as a RADIUS Server | 61 |
| Deployment of PPS as a RADIUS Proxy | 62 |
| Configuring 802.1X on PPS..... | 63 |
| Configuring Authentication Protocol Set..... | 64 |
| Creating and modifying the sign-in policy..... | 68 |
| Configuring a Location Group | 69 |
| Configuring the network access device as a RADIUS Client..... | 70 |
| Configuring Role and Role Mapping | 72 |
| Configuring RADIUS Attributes Policies | 73 |
| Verifying the RADIUS Dictionary..... | 83 |
| Verifying RADIUS Vendor List | 84 |
| Additional Configurations..... | 85 |
| Configuration Commands for Cisco Switch | 85 |
| Configuration Commands for Huawei Switch..... | 87 |
| Configuration Commands for Juniper EX Series Switch | 88 |
| RADIUS Dictionary Files..... | 89 |
| Policy Enforcement using SNMP | 91 |
| About SNMP Enforcement | 91 |
| Overview..... | 91 |
| Benefits of SNMP Enforcement | 91 |
| Policy Enforcement Using Simple Network Management Protocol | 92 |
| Policy Enforcement using SNMP for Unmanaged Devices | 92 |
| Policy Enforcement using SNMP for Managed Devices..... | 93 |
| Configuring SNMP on PPS..... | 94 |
| Configuring a MAC address Authentication Server | 94 |
| Configuring a MAC address Authentication Realm and Role Mapping | 95 |
| Configuring a Location Group | 97 |
| Configuring SNMP Devices | 98 |
| Verifying the status of SNMP Devices..... | 103 |
| Configuring SNMP Enforcement Policy..... | 104 |
| Appendix | 105 |
| Configuration Commands for Cisco | 105 |
| Cisco SNMP v3 configuration | 105 |
| Configuring Port Security Traps | 106 |

| | |
|--|------------|
| Configuration Commands for HP | 107 |
| Policy Enforcement using MAC Authentication..... | 108 |
| Overview..... | 108 |
| Benefits of MAC authentication..... | 108 |
| Deployments using MAC Authentication..... | 109 |
| Deployment of PPS using Local MAC Authentication Server..... | 110 |
| Deployment of PPS using Pulse Secure Profiler..... | 110 |
| Configuring MAC Authentication on PPS..... | 111 |
| Configuring the MAC Address Authentication Server..... | 112 |
| Configuring the MAC Address Authentication Realm and Role Mapping Rules | 114 |
| Configuring User Roles for the MAC Address Authentication Realm | 115 |
| Configuring a Location Group | 116 |
| Configuring RADIUS Client..... | 117 |
| Configuring RADIUS Attributes | 118 |
| Policy Enforcement using 802.1X Native Supplicant | 119 |
| Overview..... | 119 |
| Benefits..... | 119 |
| Deployments using 802.1X Authentication with Native Supplicant | 120 |
| 802.1X Authentication with Native Supplicant | 120 |
| Agentless Host Checking with Native Supplicant | 121 |
| Host Checking with Native Supplicant | 122 |
| Configuring Agentless Host Checking with Native Supplicant | 123 |
| Configuring 802.1X for Native Supplicant on PPS | 125 |
| Configuring Native Supplicant for 802.1X Authentication..... | 126 |
| Example: Configuring Windows 7 Native Supplicant for PPS 802.1X Authentication..... | 126 |
| Example: Configuring Mac OSX Native Supplicant for PPS 802.1X Authentication | 130 |
| Layer 3 Enforcement..... | 135 |
| Enforcement using Check Point Next-Generation Firewall..... | 136 |
| Overview..... | 136 |
| Deployment of PPS using Check Point Next-Generation Firewall | 137 |
| Deployment of PPS with Check Point Next-Generation Firewall for a Large Enterprise | 138 |
| Configuring PPS with Check Point Next-Generation Firewall | 139 |
| Configuring Check Point Infranet Enforcer in PPS..... | 139 |
| Configuring Auth Table Mapping Policies | 141 |
| Configuring Check Point Next-Generation Firewall..... | 143 |
| Configuring Identity Awareness in SmartConsole | 143 |
| Troubleshooting..... | 147 |
| Unsupported Features | 147 |
| Enforcement using Palo Alto Networks Firewall | 148 |
| Overview..... | 148 |
| Deployment of PPS using PAN Firewall | 149 |
| Deploying PPS with a PAN firewall for a Small Enterprise..... | 150 |
| Deploying multiple PPS with PAN firewall..... | 151 |
| Deploying PPS with PAN firewall for a Large Enterprise..... | 152 |
| Specification for deploying PPS and PAN Appliances | 153 |
| Configuring PPS with PAN Firewall | 154 |
| Configuring PAN Infranet Enforcer in PPS..... | 154 |
| Configuring Auth Table Mapping Policies | 156 |
| Configuring Palo Alto Networks Firewall..... | 158 |
| Configuring User Identification on Security Zones | 159 |
| Configuring Dynamic Address Groups..... | 160 |

| | |
|--|------------|
| <i>Configuring Security Policies</i> | 161 |
| <i>Configuring PAN Device Certificates</i> | 163 |
| Troubleshooting..... | 165 |
| Unsupported Features..... | 165 |
| Related Documentation..... | 165 |
| Identity Based Enforcement using FortiGate Products..... | 166 |
| Enforcement using Fortinet Firewall | 166 |
| <i>Overview</i> | 166 |
| Deployment of PPS using FortiAuthenticator and FortiGate Firewall | 167 |
| Configuring PPS with FortiAuthenticator..... | 168 |
| <i>Creating Custom Filter for User Access Logs</i> | 168 |
| <i>Editing the Custom Filter</i> | 169 |
| <i>Configuring Syslog Server</i> | 170 |
| Configuring FortiAuthenticator..... | 171 |
| Configuring FortiGate Firewall..... | 173 |
| Reports and Logging | 176 |
| Enforcement using SRX Series Firewall..... | 177 |
| Firewall Enforcement using Juniper SRX | 177 |
| <i>Overview</i> | 177 |
| Deployment of PPS using SRX Firewall | 178 |
| Configuring PPS with SRX Firewall | 179 |
| <i>Configuring SRX Infranet Enforcer in PPS</i> | 179 |
| <i>Configuring Auth Table Mapping Policies</i> | 180 |
| <i>Configuring Resource Access Policy</i> | 182 |
| Configuring SRX Firewall | 184 |
| <i>Configuring SRX as an Enforcer</i> | 184 |
| Enforcement using Screen OS Firewall..... | 186 |
| <i>Overview</i> | 186 |
| Deployment of PPS using ScreenOS Firewall | 187 |
| Configuring PPS with ScreenOS Firewall | 188 |
| <i>Configuring ScreenOS Infranet Enforcer in PPS</i> | 188 |
| <i>Configuring Auth Table Mapping Policies</i> | 189 |
| <i>Configuring Resource Access Policy</i> | 190 |
| Configuring ScreenOS Firewall | 191 |
| <i>Configuring ScreenOS as an Enforcer</i> | 191 |
| <i>Configuring the ScreenOS in Route Mode</i> | 192 |
| <i>Configuring the ScreenOS in Transparent Mode</i> | 194 |
| <i>Verifying the PPS Configuration on ScreenOS Enforcer</i> | 195 |
| Appendix | 197 |
| <i>Configuring Dynamic Auth Table Policies</i> | 197 |
| <i>Binding an Interface to a Security Zone on a Junos Enforcer</i> | 198 |
| Captive Portal..... | 199 |
| <i>Configuring Captive Portal</i> | 199 |
| <i>Creating a Redirect Policy on the Junos Enforcer</i> | 200 |
| <i>Creating a Redirect Policy on the ScreenOS Enforcer</i> | 200 |
| IPsec Policy enforcement using SRX and ScreenOS | 201 |
| About IPsec Enforcement..... | 202 |
| <i>Overview</i> | 202 |
| Configuring IPsec Policy Enforcement..... | 203 |
| <i>Configuring IPsec Routing Policies</i> | 203 |
| <i>Configuring IP Address Pool Policy</i> | 205 |
| <i>Example: Configuring Junos Enforcer IPsec Routing Policy</i> | 206 |

| | |
|--|------------|
| Enforcement using EX Series Ethernet Switches | 208 |
| Enforcement using Juniper EX switch | 210 |
| Overview..... | 210 |
| Configuring EX switch with PPS | 211 |
| Configuring EX switch as an Infranet Enforcer | 211 |
| Configuring an Authentication Table | 212 |
| Configuring Resource Access Policy | 212 |
| IF-MAP Federation | 214 |
| About IF-MAP..... | 214 |
| Overview..... | 214 |
| IF-MAP Federation Use Cases | 215 |
| Access Control in the Federated Enterprise..... | 216 |
| Session Migration across PCS and PPS using IF-MAP | 217 |
| IF-MAP Configuration | 219 |
| Configuring IF-MAP Server..... | 219 |
| Configuring IF-MAP Client | 221 |
| Configuring IF MAP Policies | 222 |
| Active Federated Session Details..... | 226 |
| Imported Session Details | 226 |
| Exported Session Details..... | 227 |
| Federated Session Details..... | 227 |
| Troubleshooting..... | 229 |
| Appendix | 230 |
| Clustering in a Federated Deployment..... | 230 |
| Replica IF-MAP Server | 231 |
| Coordinated Threat Control in a Federated Environment | 233 |
| Performance and Scalability | 234 |
| Provisioning PCS sessions to PAN/Check Point Firewall..... | 235 |
| Overview | 235 |
| Deployment of PPS/PCS using PAN/Check Point Next Generation Firewall | 236 |
| IF-MAP Configuration | 237 |
| Step1: Configuring IF-MAP Server..... | 238 |
| Step 2: Configuring IF-MAP Client..... | 239 |
| Step 3: Viewing the Federated Session Details | 240 |
| Deployments with Juniper IDP..... | 241 |
| About IDP Technology..... | 241 |
| IDP Deployment Scenarios Overview | 242 |
| Understanding PPS Deployments with IDP Devices | 242 |
| About IDP Devices..... | 242 |
| Coordinated Threat Control Overview..... | 243 |
| Deployments with IDP Series Devices..... | 243 |
| Deployments with IDP-Enabled Infranet Enforcers | 243 |
| Monitoring IDP-Reported Events | 244 |
| Activating IDP for the ScreenOS or Junos Enforcer | 245 |
| Managing Interoperation with IDP Devices | 245 |
| Configuring Communication with an IDP Device..... | 245 |
| Enabling or Disabling IDP Sensors | 246 |
| Reconnecting to an IDP Sensor..... | 246 |
| Refreshing and Displaying the Connection Status | 246 |
| Deleting an IDP Sensor Entry | 246 |
| Identifying and Managing Quarantined Users Manually..... | 247 |
| Using Role-Based Policies to Monitor User Activity | 247 |

| | |
|---|------------|
| Behavioral Analytics | 249 |
| Overview | 249 |
| Licensing..... | 250 |
| Benefits | 250 |
| Configurations | 251 |
| Pre-Requisites | 251 |
| Summary of Configuration..... | 251 |
| Configuring PPS for enabling Behavioral Analytics | 252 |
| <i>Configuring PPS for Adaptive Authentication</i> | <i>252</i> |
| <i>Configuring PPS to detect Anomaly Traffic from IoT devices</i> | <i>253</i> |
| <i>Configuring PPS to detect Potential Malware</i> | <i>254</i> |
| Dashboard and Reports | 256 |
| Troubleshooting..... | 258 |
| Appendix | 259 |
| IoT Access..... | 262 |
| IoT Policy Provisioning | 262 |
| <i>Overview.....</i> | <i>262</i> |
| <i>Benefits.....</i> | <i>262</i> |
| Deployments | 263 |
| Configuring IoT Policy Provisioning | 264 |
| <i>Basic Configurations</i> | <i>264</i> |
| Configuring IoT Access Policy | 267 |
| <i>Viewing Devices in Enforcer Policy Report</i> | <i>267</i> |
| <i>Configuring IoT Access Policy using Juniper SRX Firewall</i> | <i>268</i> |
| <i>Configuring IoT Access Policy using Palo Alto Networks Firewall</i> | <i>271</i> |
| Configuring Additional Device Category/Profile Groups..... | 274 |
| <i>Configuring Profiler Groups</i> | <i>275</i> |
| Troubleshooting..... | 276 |
| Admission Control Using Network Security Devices | 278 |
| Alert Based Admission Control using Fortinet Products..... | 278 |
| <i>Overview.....</i> | <i>278</i> |
| Deployment of PPS using Fortigate Products..... | 279 |
| Configuring PPS with Fortinet Products..... | 280 |
| <i>Admission Control Template.....</i> | <i>281</i> |
| <i>Admission Control Policies</i> | <i>283</i> |
| <i>Admission Control Client.....</i> | <i>285</i> |
| Configuring FortiGate Firewall | 287 |
| Configuring FortiGate Analyser | 290 |
| Troubleshooting..... | 293 |
| Alert Based Admission Control using PAN Next Generation Firewall | 294 |
| <i>Overview.....</i> | <i>294</i> |
| Deployment of PPS using PAN Next Generation Firewall | 295 |
| Configuring PPS with PAN Next Generation Firewall | 296 |
| <i>Admission Control Template.....</i> | <i>297</i> |
| <i>Admission Control Policies</i> | <i>298</i> |
| <i>Admission Control Client.....</i> | <i>300</i> |
| Configuring PAN Next Generation Firewall..... | 301 |
| Troubleshooting..... | 303 |
| Alert Based Admission Control using Juniper SDSN..... | 304 |
| <i>Overview.....</i> | <i>304</i> |

| | |
|--|------------|
| Deployment of PPS in Juniper SDSN Environment | 305 |
| Configuring PPS with Juniper SDSN | 306 |
| <i>Admission Control Template</i> | 307 |
| <i>Admission Control Policies</i> | 308 |
| <i>Admission Control Client</i> | 310 |
| Configuring Juniper SDSN | 311 |
| <i>Configuring PPS with Juniper SD</i> | 311 |
| <i>Configuring Juniper Policy Enforcer with SKY ATP</i> | 315 |
| Troubleshooting | 316 |
| Endpoint Compliance | 318 |
| Host Checker | 318 |
| Host Checker Overview | 318 |
| <i>Trusted Network Connect</i> | 319 |
| Policies | 320 |
| <i>Support Platform Matrix</i> | 321 |
| Host Checker Installation Options | 322 |
| <i>Auto-upgrading Host Checker</i> | 323 |
| Endpoint Security Assessment Plug-In (ESAP) | 323 |
| <i>Upgrading the ESAP</i> | 323 |
| <i>Activating the Opswat SDK Version</i> | 324 |
| <i>Changing the Active ESAP Package</i> | 326 |
| <i>Enabling the Active ESAP Package</i> | 327 |
| <i>Updating Virus Signature Database</i> | 328 |
| Understanding Host Checker Policy Remediation | 329 |
| <i>Remediation Options</i> | 329 |
| <i>Remediation User Experience</i> | 329 |
| Configuring Host Checker Policy | 330 |
| <i>Configuring Antivirus Rule with Remediation Options</i> | 331 |
| <i>Configuring Firewall Rule with Remediation Options</i> | 332 |
| <i>Configuring Malware Rule</i> | 334 |
| <i>Configuring AntiSpyware Rule</i> | 335 |
| <i>Configuring Hard Disk Encryption Rule</i> | 336 |
| <i>Configuring Common Vulnerability and Exposure (CVE) Check Rules</i> | 337 |
| <i>Configuring Patch Management Rules</i> | 339 |
| <i>Configuring OS Checks Rule</i> | 342 |
| <i>Configuring Third-Party NHC Rule</i> | 344 |
| <i>Configuring Ports Rule</i> | 344 |
| <i>Configuring Process Rule</i> | 345 |
| <i>Configuring File Rule</i> | 346 |
| <i>Configuring Registry Settings Rule</i> | 347 |
| <i>Configuring NetBIOS Rule</i> | 348 |
| <i>Configuring MAC Address Rule</i> | 349 |
| <i>Configuring Machine Certificate Rule</i> | 350 |
| <i>Configuring Advanced Host Checking Rule</i> | 351 |
| <i>Configuring Statement of Health Rule</i> | 354 |
| <i>Using a Wildcard or Environment Variable in a Host Checker Rule</i> | 355 |
| <i>Configuring Third-Party Integrity Measurement Verifiers (IMV)</i> | 356 |
| <i>Configuring a Remote IMV Server</i> | 356 |
| <i>Configuring a Third-Party IMV Policy</i> | 356 |
| <i>Configuring General Host Checker Remediation</i> | 357 |
| Store and Reuse Host Checker Policy Results | 358 |
| MDM Interoperability with PPS | 360 |
| Overview | 360 |
| <i>Supported MDM Servers</i> | 361 |

| | |
|--|------------|
| MDM Integration Work Flow | 361 |
| MDM Dictionary Attributes | 361 |
| Configuring PPS with MDM Servers | 366 |
| Configuring an Authentication Protocol Set..... | 366 |
| Configuring the MDM Authentication Server | 366 |
| Configuring the Certificate Server | 369 |
| Adding the MDM Certificate to the Trusted Client CA Configuration | 370 |
| Configuring User Roles..... | 371 |
| Configuring a Realm and Role Mapping Rules | 375 |
| Configuring a Sign-In Policy..... | 384 |
| Configuring PPS with Pulse Workspace | 385 |
| Configuring PPS with Microsoft Intune | 387 |
| Configuring the Microsoft Intune MDM | 389 |
| Configuring the PWS MDM | 395 |
| Configuring the AirWatch MDM | 396 |
| Configuring the MobileIron MDM | 399 |
| Troubleshooting..... | 401 |
| Using the Debug Logs | 402 |
| AAA Servers..... | 404 |
| AAA Server Overview | 404 |
| Overview..... | 404 |
| Authentication Protocols Used by AAA Servers | 405 |
| AAA Traffic Management | 405 |
| Configuring AAA Traffic Management Across Interfaces | 406 |
| AAA Server Configuration Task Summary | 407 |
| Using the Local Authentication Server..... | 408 |
| Local Authentication Server Overview | 408 |
| Configuring the Local Authentication Server | 408 |
| Creating User Accounts..... | 410 |
| Managing User Accounts..... | 411 |
| Creating Administrator User Accounts | 413 |
| Using Active Directory | 413 |
| Microsoft Windows Platform Active Directory Service Overview | 414 |
| Configuring Authentication and Authorization with Active Directory Service (Standard Mode) | 417 |
| Configuring Authentication and Authorization with Active Directory Service (Legacy Mode) | 420 |
| Using Kerberos SSO | 423 |
| Kerberos SSO Support Overview | 424 |
| Requirements and Limitations..... | 424 |
| Enabling Kerberos SSO..... | 424 |
| Understanding Multidomain User Authentication | 424 |
| Multi-Domain User Authentication Overview..... | 425 |
| Windows NT User Normalization | 425 |
| Kerberos Support..... | 425 |
| Windows NT4 Support..... | 426 |
| Understanding Active Directory and Windows NT Group Information Support | 426 |
| Active Directory Group Information Overview | 426 |
| Windows NT4 Group Information Overview | 426 |
| Importing and Exporting an Active Directory Mode Configuration | 426 |
| Using the Anonymous Server | 427 |
| Anonymous Server Overview | 427 |
| Configuring Authentication with the Anonymous Server..... | 428 |
| Monitoring Anonymous User Sessions | 428 |
| Using the Certificate Server | 430 |
| Certificate Server Overview | 430 |
| Configuring Authentication with the Certificate Server | 430 |
| Displaying the User Accounts Table | 431 |

| | |
|--|------------|
| Using an LDAP Server | 432 |
| LDAP Server Overview | 432 |
| Configuring Authentication with an LDAP Server | 433 |
| Displaying the User Accounts Table | 436 |
| Using the LDAP Password Management Feature | 437 |
| LDAP Password Management Feature Overview | 437 |
| Enabling LDAP Password Management | 437 |
| LDAP Password Management Support | 438 |
| LDAP Password Management for Windows AD Versions | 439 |
| Troubleshooting LDAP Password Management | 440 |
| Using the MAC Address Authentication Server | 440 |
| MAC Address Authentication Server Overview | 440 |
| Configuring the EX Series Switch | 442 |
| Using an NIS Server | 449 |
| NIS Server Overview | 449 |
| Configuring Authentication with an NIS Server | 450 |
| Using a RADIUS Server | 450 |
| RADIUS Server Overview | 450 |
| Configuring Authentication with a RADIUS Server | 458 |
| Using an ACE Server | 461 |
| RSA Authentication Manager Overview | 461 |
| Configuring Authentication with RSA Authentication Manager | 463 |
| Displaying the User Accounts Table | 464 |
| Using a SiteMinder Server | 464 |
| SiteMinder Server Overview | 464 |
| Configuring the Back-End SiteMinder Server | 467 |
| Configuring Authentication with a SiteMinder Server | 470 |
| Displaying the User Accounts Table | 474 |
| Troubleshooting the SiteMinder Server Configuration | 475 |
| Using an SQL Auth Server | 475 |
| SQL Auth Server Overview | 475 |
| Configuring Authentication with an Oracle SQL Auth Server | 478 |
| Troubleshooting Oracle Error Codes | 481 |
| Network Device Administration using TACACS+ | 482 |
| Overview | 482 |
| Licensing | 483 |
| Authentication | 483 |
| Authorization | 483 |
| Accounting | 484 |
| Configuration | 485 |
| Configuring Admin Role | 485 |
| Configuring Admin Realm | 487 |
| Configuring Device Group | 490 |
| Configuring TACACS+ Client | 491 |
| Configuring Shell Policies | 492 |
| TACACS+ Command Sets | 495 |
| Regex (Wildcards) | 495 |
| Multiple command Sets | 495 |
| Monitoring Device Administration | 496 |
| Troubleshooting | 497 |
| TACACS+ Event and Admin Logs | 497 |
| Appendix | 501 |
| Guest Access | 502 |
| Overview | 502 |
| Deployments | 504 |

| | |
|---|------------|
| Guest Access using WLC | 504 |
| Guest Access using EX switch/SRX Firewall | 505 |
| Guest Access using Cisco Switch | 506 |
| Configuring PPS for WLC Deployment | 507 |
| Default Configurations for Guest Access | 507 |
| Sign-In-Policies | 508 |
| User Realms | 510 |
| User Roles | 513 |
| Location Groups | 514 |
| Authentication Protocol Set | 516 |
| Authentication Server | 518 |
| Configuring RADIUS Client on PPS | 521 |
| Configuring SMTP and SMS gateway settings on PPS | 524 |
| SMTP Settings for Guest User Accounts | 524 |
| SMS Gateway Settings for Guest User Accounts | 524 |
| Configuring Guest Access Settings on PPS | 528 |
| Configuring PPS for SRX/EX Deployment | 530 |
| Configuring PPS for Guest Wired Authentication using Cisco Switch | 531 |
| Configuring PPS for Sponsored Guest Access | 537 |
| Enabling Onboarding Feature | 541 |
| Localization | 543 |
| Guest Self Registration | 544 |
| Guest Self Registration for Sponsor Approved Guest Access | 546 |
| Guest User Administration | 550 |
| Creating Guest User Accounts | 550 |
| Creating Guest Sponsor Portal | 557 |
| Customizing Guest Self Registration User Pages | 563 |
| Downloading the Sample Template Files | 564 |
| Modifying the Sample Template Files | 564 |
| Configuring Cisco 2500 WLC | 571 |
| Configuring Cisco WLC for PPS GUAM and Guest Self-Registration | 571 |
| Configuration required on Cisco WLC for Local AP mode | 571 |
| Configuration Required on Cisco WLC in Remote AP mode | 579 |
| Configuring Cisco 3850 WLC | 588 |
| Configuring Cisco WLC using Web GUI | 588 |
| Configuring Cisco WLC using CLI | 603 |
| Configuring Cisco 2620 for Guest Wired Authentication | 605 |
| Configuring Aruba WLC | 606 |
| Configuring Aruba WLC for PPS Guest Self-Registration | 606 |
| Configuration required on Aruba WLC for Campus Only mode | 606 |
| External Captive Portal Configuration | 617 |
| RFC 3576 server configuration | 617 |
| WLAN Configuration for Remote Networking mode on Aruba WLC | 619 |
| Configuring Aruba WLC in campus only mode using CLI | 623 |
| Configuring Aruba WLC in Remote Networking mode using CLI | 624 |
| Configuring Aruba Instant Access Point | 626 |
| Configuring Ruckus WLC | 635 |
| Ruckus SmartZone WLC Configuration | 636 |
| Ruckus ZoneDirector WLC Configuration | 639 |
| Verifying Device Certificates | 641 |
| Enterprise Onboarding | 643 |
| Overview | 643 |
| Deployments | 644 |
| Configuring Enterprise Onboarding | 645 |
| Configuring Enterprise Onboarding for a User Role | 645 |
| Configuring the SCEP Server | 646 |

| | |
|---|------------|
| Configuring CSR Templates | 647 |
| Configuring VPN Profiles | 648 |
| Configuring Wi-Fi Profiles | 649 |
| Configuring Certificate Profiles..... | 653 |
| Example: Onboarding Android Devices | 655 |
| Viewing Onboarded Devices..... | 658 |
| Troubleshooting | 659 |
| Clustering | 660 |
| Overview | 660 |
| Deployments | 661 |
| Deployment of Active/Active Cluster | 661 |
| Deployment of Active/Passive Cluster | 662 |
| Cluster Configuration..... | 663 |
| Admin UI Configuration | 663 |
| Creating a Cluster..... | 663 |
| Adding Cluster Members | 668 |
| Joining Existing Cluster..... | 669 |
| Deleting a Cluster | 670 |
| Verifying the Cluster Status | 670 |
| Serial Console Configuration | 672 |
| Joining a Node to a Cluster..... | 672 |
| Disabling a Clustered Node | 673 |
| Restarting or Rebooting Cluster Nodes Using Its Serial Console..... | 673 |
| Monitoring and Troubleshooting | 674 |
| Group Monitoring..... | 674 |
| Node Monitoring | 675 |
| Network Connectivity Monitoring..... | 676 |
| Monitoring using SNMP Traps | 677 |
| Troubleshooting..... | 677 |
| Restarting or Rebooting Cluster Nodes..... | 678 |
| Appendix | 680 |
| Licensing | 680 |
| Configuring IPv6 on an Existing IPv4 Active/Passive Cluster..... | 681 |
| Cloud Secure..... | 683 |
| System Management | 683 |
| Network and Host Administration..... | 684 |
| Network and Host Administration Overview..... | 684 |
| Configuring the Internal Port..... | 685 |
| Configuring the External Port | 687 |
| JITC Mode Option | 690 |
| Using the Management Port..... | 696 |
| Management Port Overview | 696 |
| Supported Platforms..... | 696 |
| Configuring the Management Port | 696 |
| Using the Serial Console to Configure the Management Port | 699 |
| Configuring Administrator Access | 699 |
| Configuring VLAN Ports | 700 |
| Using Virtual Ports..... | 702 |
| Configuring Virtual Ports | 702 |
| Using Device Certificates with Virtual Ports | 704 |
| Configuring the System Date and Time | 705 |
| Configuring Network Services | 706 |
| Managing the Routes Table | 707 |

| | |
|--|------------|
| Managing the Hosts Table | 708 |
| Managing the ARP Table | 708 |
| Managing the Neighbor Discovery Table | 709 |
| Configuring SSL Options | 710 |
| Enabling Granular Cipher Selection for Setting the Security Options | 710 |
| <i>Enabling Inbound SSL Options</i> | 711 |
| <i>Enabling Outbound SSL Options</i> | 713 |
| Configuring Health Check Options | 716 |
| Configuring Miscellaneous Security Options | 717 |
| Configuring Custom HTTP Headers | 718 |
| Using the Serial Port | 719 |
| <i>Connecting to the Serial Port Console</i> | 719 |
| <i>Using the Serial Console to Roll Back to a Previous OS Version</i> | 721 |
| <i>Using the Serial Console to Reset the System to the Factory Image</i> | 721 |
| Certificate Security Administration | 723 |
| Understanding Digital Certificate Security | 723 |
| Using Device Certificates | 724 |
| <i>Understanding Device Certificates</i> | 724 |
| <i>Understanding Self-Signed Certificates</i> | 724 |
| <i>Importing a Device Certificate and Private Key</i> | 725 |
| <i>Creating a Certificate Signing Request</i> | 726 |
| <i>Importing a Signed Certificate Created from a CSR</i> | 727 |
| <i>Understanding Intermediate Certificates</i> | 728 |
| <i>Importing Intermediate CA Certificates</i> | 729 |
| <i>Importing a Renewed Certificate That Uses the Existing Private Key</i> | 729 |
| <i>Downloading a Device Certificate</i> | 731 |
| <i>Using Device Certificates with Virtual Ports</i> | 731 |
| <i>Enabling Certificate Revocation Check for Device Certificate</i> | 732 |
| Using Trusted Client CAs | 734 |
| <i>Understanding Trusted Client CAs</i> | 734 |
| <i>Trusted Client CA Implementation Notes</i> | 735 |
| <i>Understanding CRLs</i> | 735 |
| <i>Understanding OCSP</i> | 736 |
| <i>Importing a Trusted Client CA Certificate</i> | 736 |
| <i>Renewing a Certificate</i> | 736 |
| <i>Configuring Auto-Importing of Client Certificates</i> | 736 |
| <i>Configuring Options for Trusted Client CA Certificates</i> | 738 |
| <i>Configuring a Proxy Server for CRL Downloads and OCSP Status Checks</i> | 739 |
| Using Client Auth Certificates | 741 |
| <i>Understanding Client Auth Certificates</i> | 741 |
| <i>Importing a Client Auth Certificate</i> | 742 |
| <i>Renewing a Client Auth Certificate</i> | 742 |
| <i>Configuring Two-Way SSL Authentication</i> | 742 |
| <i>Enabling Certificate Revocation Check for Client Auth Certificate</i> | 743 |
| Using Trusted Server CAs | 744 |
| <i>Understanding Trusted Server CAs</i> | 744 |
| <i>Uploading Trusted Server CA Certificates</i> | 745 |
| <i>Restoring the Prepopulated Group of Trusted Server CA Certificates</i> | 745 |
| <i>Renewing a Trusted Server CA Certificate</i> | 745 |
| <i>Deleting a Trusted Server CA Certificate</i> | 745 |
| Understanding ECC Certificates | 745 |
| <i>About Suite B</i> | 746 |
| <i>Using ECC Certificates</i> | 746 |
| FIPS Level 1 Support (Software FIPS) | 747 |
| Understanding Pulse Secure FIPS Level 1 Support | 747 |

| | |
|--|------------|
| FIPS Supported Platforms | 747 |
| Enabling FIPS Level 1 Support..... | 747 |
| Turning Off FIPS Level 1 Support from the Serial Console | 751 |
| Supported Cipher Suites When FIPS Level 1 Support is Enabled | 751 |
| File Management..... | 755 |
| Overview | 755 |
| Configuration | 756 |
| Archiving..... | 756 |
| Backup and Restore | 759 |
| Importing/Exporting Binary System Configuration Files | 759 |
| Importing/Exporting Binary User Configuration Files | 762 |
| Importing/Exporting XML Configuration Files | 763 |
| Exporting Universal XML | 768 |
| Modifying Configuration XML Files | 768 |
| Understanding the XML Export File | 769 |
| Comparing Configuration Settings | 770 |
| Understanding Referential Integrity Constraints..... | 771 |
| Using Operation Attributes..... | 772 |
| Example: Importing/Exporting XML file configuration to add Multiple Users..... | 774 |
| Pushing the Configuration..... | 775 |
| Dashboard and Reports..... | 785 |
| Dashboard and Report Overview | 785 |
| Enabling the Dashboard | 786 |
| Using the Dashboard..... | 787 |
| Dashboard Overview | 787 |
| Displaying the Dashboard..... | 789 |
| Selecting a Data Time Frame | 790 |
| Refreshing Data..... | 790 |
| Drilling Down to Detailed Reports | 791 |
| Using the User Summary Report..... | 792 |
| Overview..... | 792 |
| Applying Data Filters..... | 794 |
| Sorting Records | 795 |
| Drilling Down to the Single User Report..... | 796 |
| Exporting User Summary Report | 797 |
| Using the Device Summary Report | 798 |
| Overview..... | 798 |
| Applying Data Filters..... | 800 |
| Sorting Records | 801 |
| Exporting Device Summary Report..... | 802 |
| Using the Single Device Report..... | 803 |
| Overview..... | 803 |
| Applying Data Filters..... | 805 |
| Sorting Records | 806 |
| Exporting Single Device Activities Report | 807 |
| Using the Device Discovery Report | 808 |
| Using the Authentication Report | 808 |
| Overview..... | 808 |
| Displaying the Authentication Report | 808 |
| Applying Data Filters..... | 809 |
| Sorting Records | 810 |
| Exporting Authentication Report | 811 |
| Using the Compliance Report..... | 812 |
| Overview..... | 812 |
| Applying Data Filters..... | 815 |

| | |
|---|------------|
| <i>Sorting Records</i> | 816 |
| <i>Exporting Compliance Report</i> | 817 |
| System Maintenance | 818 |
| Overview | 818 |
| Configuring System Platform | 819 |
| Configuring System Maintenance Options | 820 |
| Installing the Service Package | 822 |
| <i>Downloading and Uploading the Software Package</i> | 822 |
| <i>Upgrading the System Software</i> | 823 |
| <i>Downgrading the System Software</i> | 825 |
| <i>Changing the Device Personality</i> | 825 |
| Downloading Client Installer Files | 826 |
| Testing Network Connectivity | 827 |
| Troubleshooting | 828 |
| Logging and Monitoring | 829 |
| Logging Overview | 830 |
| Displaying System Logs | 831 |
| <i>Displaying Events Logs</i> | 831 |
| <i>Displaying User Access Logs</i> | 833 |
| <i>Displaying Admin Access Logs</i> | 834 |
| <i>Displaying Sensor Logs</i> | 835 |
| Configuring Log Events Settings | 836 |
| Log Filtering | 839 |
| <i>Creating a Custom Log Collection Filter</i> | 839 |
| <i>Reviewing the Configuration of Predefined Log Format Filters</i> | 841 |
| <i>Example: Using the Source IP Address Filter</i> | 842 |
| <i>Displaying User Access Statistics</i> | 843 |
| Monitoring using SNMP | 844 |
| Configuring an External Syslog Server | 849 |
| Configuring Advanced Settings | 851 |
| Enabling Client-Side Logging | 852 |
| Displaying System Status | 853 |
| Displaying Hardware Status | 856 |
| Using Software RAID on PSA7000 | 857 |
| <i>Overview of Software RAID</i> | 857 |
| <i>Configuring RAID Controller</i> | 857 |
| <i>Checking RAID Statuses</i> | 858 |
| LCD Display | 858 |
| <i>Overview of adding LCD for PPS</i> | 858 |
| <i>Modes Supported by the LCD</i> | 859 |
| <i>Display Mode</i> | 859 |
| <i>Detecting Error Conditions in Display Mode</i> | 860 |
| <i>Menu Mode</i> | 861 |
| Displaying Active Users | 861 |
| Troubleshooting | 863 |
| Overview | 863 |
| Policy Tracing | 864 |
| Debug Logs | 867 |
| RADIUS Diagnostic Logs | 868 |
| Samba Diagnostic Logs | 870 |
| TCP Dump | 871 |
| Network Troubleshooting Commands | 873 |

| | |
|---|------------|
| <i>Troubleshooting TCP and UDP Port Status</i> | <i>875</i> |
| <i>Testing Server Connectivity</i> | <i>877</i> |
| Kerberos Debugging | 878 |
| Remote Debugging | 879 |
| Troubleshooting the Common Issues with PPS | 880 |
| Appendix | 883 |
| Custom Expressions and System Variables Reference | 883 |
| Using Custom Expressions in Rule Configuration | 883 |
| <i>Custom Expressions</i> | <i>883</i> |
| <i>Custom Expression Elements</i> | <i>884</i> |
| <i>Wildcard Matching</i> | <i>886</i> |
| <i>Using Multivalued Attributes</i> | <i>886</i> |
| <i>Specifying Multivalued Attributes in a Bookmark Name</i> | <i>887</i> |
| <i>Distinguished Name Variables</i> | <i>888</i> |
| <i>System Variables</i> | <i>889</i> |
| <i>Custom Variables and Macros</i> | <i>899</i> |
| append | 899 |
| daysdiff | 900 |
| regmatch | 900 |
| <i>Specifying Fetch Attributes in a Realm</i> | <i>901</i> |
| <i>Specifying the homeDirectory Attribute for LDAP</i> | <i>901</i> |
| REST API Support | 902 |
| Overview | 902 |
| <i>Authentication for REST APIs</i> | <i>903</i> |
| <i>Enabling REST API Configuration</i> | <i>905</i> |
| Sample GET/POST/PUT/DELETE Request and Responses | 906 |
| <i>GET API call: It will fetch the details under Endpoint Policy in PPS</i> | <i>906</i> |
| <i>POST API call : It will create SRX Enforcer in Infranet Enforcer connection</i> | <i>906</i> |
| <i>PUT API call: It will update the existing configuration. Configured Location Group as "Guest" and updated to "Default"</i> | |
| <i>Location group</i> | <i>907</i> |
| <i>Before Updating the Location Group</i> | <i>907</i> |
| <i>After Updating the Location Group</i> | <i>908</i> |
| <i>DELETE API Call: Deleting SNMP device from PPS</i> | <i>909</i> |

About This Guide

- [Objectives](#)
- [Audience](#)
- [Documentation Conventions](#)
- [Documentation](#)
- [Obtaining Documentation](#)
- [Documentation Feedback](#)
- [Requesting Technical Support](#)

Objectives

This guide provides detailed information on configuring, authenticating, securing, managing, and troubleshooting Pulse Policy Secure.

Audience

This guide is written for network administrators who are configuring and maintaining Pulse Policy Secure. This guide assumes that you have a working knowledge of networking principles and applications, and have experience as a network system administrator.

Documentation Conventions

[Table 1](#) defines the notice icons used in this guide. [Table 2](#) defines text conventions used throughout this documentation.

Table1: Notice Icons





| Icon | Meaning | Description |
|---|--------------------|---|
|  | Informational note | Indicates important features or instructions. |
|  | Caution | Indicates a situation that might result in loss of data or hardware damage. |
|  | Warning | Alerts you to the risk of personal injury or death. |
|  | Laser warning | Alerts you to the risk of personal injury from a laser. |

Table2: Text Conventions

| Convention | Description | Examples |
|---------------------------------------|---|--|
| Bold text like this | <ul style="list-style-type: none"> Represents keywords, scripts, and tools in text. Represents a GUI element that the user selects, clicks, checks, or clears. | <ul style="list-style-type: none"> Specify the keyword <code>exp-msg</code>. Run the <code>install.sh</code> script. Use the <code>pkgadd</code> tool. To cancel the configuration, click Cancel. |
| Bold text like this | Represents text that the user must type. | <code>user@host# set cache-entry-age</code> |
| Fixed-width text like this | Represents information as displayed on your terminal's screen, such as CLI commands in output displays. | <pre> nic-locators { log in { resolution { resolver-name /realms/ log in/A1; key-type LoginName; value-type SaeId; } } } </pre> |
| Regular sans serif typeface | <ul style="list-style-type: none"> Represents configuration statements. Indicates CLI commands and options in text. Represents examples in procedures. Represents URLs. | <ul style="list-style-type: none"> <code>system ldap server{ stand-alone;</code> Use the request <code>sae modify device failover</code> command with the <code>force</code> option <code>user@host# ...</code> https://www.pulsesecure.net/ |
| <i>Italic sans serif typeface</i> | Represents variables in CLI commands. | <code>user@host# set local-address</code> |
| Angle brackets | In text descriptions, indicate optional keywords or variables. | Another runtime variable is <code><gfwif></code> . |
| Key name | Indicates the name of a key on the keyboard. | Press Enter . |
| Key names linked with a plus sign (+) | Indicates that you must press two or more keys simultaneously. | Press Ctrl + b . |
| <i>Italic typeface</i> | <ul style="list-style-type: none"> Emphasizes words. Identifies book names. Identifies distinguished names. Identifies files, directories, and paths in text but not in command examples. | <ul style="list-style-type: none"> There are two levels of access: <i>user</i> and <i>privileged</i>. <i>SRC-PE Getting Started Guide</i>. <i>o=Users, o=UMC</i> The <i>/etc/default.properties</i> file. |
| Words separated by the symbol | Represent a choice to select one keyword or variable to the left or right of this symbol. (The keyword or variable may be either optional or required.) | <code>diagnostic line</code> |

Documentation

For a list of related Pulse Policy Secure (PPS) documentation, see <http://www.pulsesecure.net/support>. If the information in the latest PPS Release Notes differs from the information in the documentation, follow Pulse Policy Secure Release Notes.

Obtaining Documentation

To obtain the most current version of all Pulse Policy Secure technical documentation, see the products documentation page at <https://www.pulsesecure.net/techpubs>.

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@pulsesecure.net.

Requesting Technical Support

Technical product support is available through the Pulse Secure Global Support Center (PSGSC). If you have a support contract, then file a ticket with PSGSC.

- Product warranties—For product warranty information, visit <https://www.pulsesecure.net/techpubs>.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Pulse Secure, LLC has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.pulsesecure.net/support>
- Search for known bugs: <https://www.pulsesecure.net/support>
- Find product documentation: <https://www.pulsesecure.net/techpubs/pulse-policy-secure/pps/>
- Find solutions and answer questions using our Knowledge Base: <https://www.pulsesecure.net/support>
- Download the latest versions of software and review release notes: <https://www.pulsesecure.net/support>
- Search technical bulletins for relevant hardware and software notifications: <https://www.pulsesecure.net/support>
- Open a case online in the CSC Case Management tool: <https://www.pulsesecure.net/support>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool:

<https://www.pulsesecure.net/support>

Opening a Case with PSGSC

You can open a case with PSGSC on the Web or by telephone.

- Use the Case Management tool in the PSGSC at <https://www.pulsesecure.net/support>.
- Call 1-844-751-7629 (toll-free in the USA).

For international or direct-dial options in countries without toll-free numbers, see <https://www.pulsesecure.net/support>.

Introduction

This part covers the following chapter:

- [Introduction to Pulse Policy Secure](#)
- [Pulse Secure Profiler](#)
- [Roles, Realms, and Sign-In Policy](#)

Introduction to Pulse Policy Secure

This chapter provides an overview of the Pulse Policy Secure. It includes the following information:

- [Overview](#)
- [PPS Components](#)
- [PPS Enforcement Modes](#)


Overview

Pulse Policy Secure (PPS) is a network access control (NAC) solution which provides network access only to authorized and secured users and devices. It protects your network and guards mission critical applications and sensitive data through comprehensive NAC management, visibility, and monitoring.

It reduces the cost and complexity of delivering and deploying granular, identity, and role enabled access control from the branch to the corporate data center. It also addresses most NAC challenges, which includes insider threats, guest access control, and regulatory compliance.

The PPS solution leverages AAA framework, which contains the user profiles, attributes, group roles and identities. It then binds the user identity information to the endpoint and to the network and uses the resultant policy to map the user to the appropriate role during the access session.

Figure 1: Pulse Policy Secure

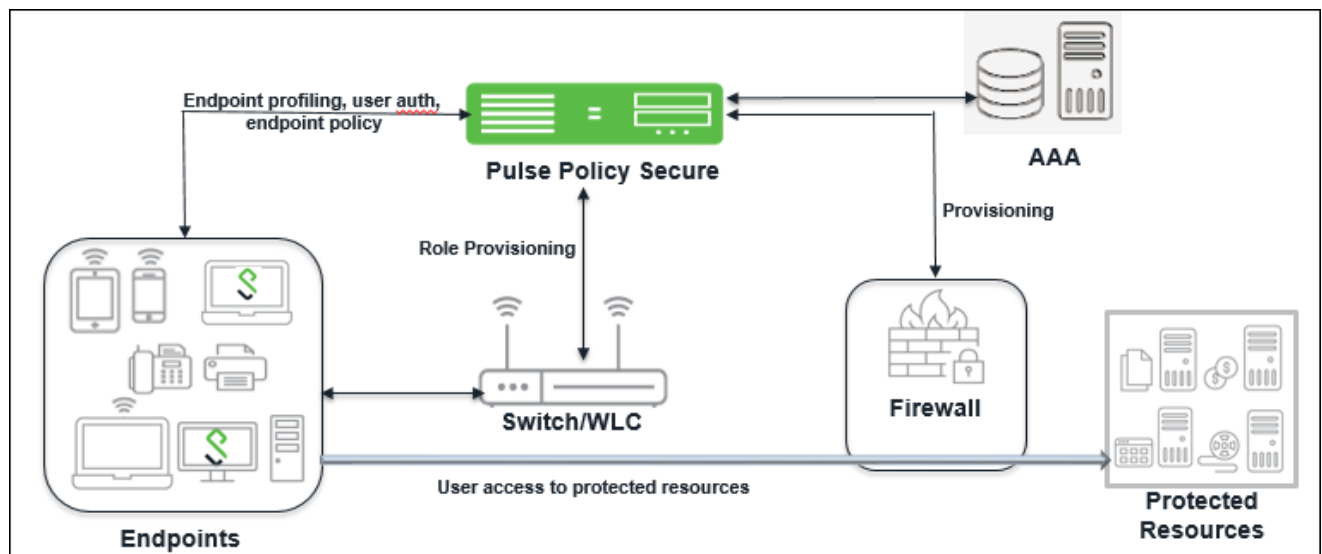

PPS solution uses endpoint validation to place the users into specific access groups. The groups can be provisioned access to different resources based on access control mechanisms such as virtual LANs (VLAN), filters, or access control lists (ACL). You can also define additional QoS parameters for the session for role-based policy enforcement so that only authorized users can access the application and data. The solution allows access only from users who are compliant with the security policies that you define. PPS also works well with unmanaged devices, such as printers, VoIP phones, and IP enabled cameras. You can configure typical hosts, such as VoIP phone, that is not 801.1X enabled to be permitted to the

network using SNMP enforcement and the Pulse Secure Profiler. The integration with Pulse Secure Profiler enables PPS to build a database of the unmanaged devices on the network and have the same access security as managed devices. PPS solution is extremely flexible and offers numerous options for integration into your existing network. When an endpoint connects to the network, PPS gathers user authentication data, endpoint security state data, and device location. It combines the information to create dynamic policies or uses the user created policies, which are then propagated to enforcement points. The enforcement can be either at the edge of the network prior to granting an IP address using 802.1X, within the network on the firewall, or both for greater granularity.

PPS Components

PPS solution consists of the following main components:

- Pulse Policy Secure (PPS)—A central policy management server that validates the user's identity, determines the endpoint's security compliance, and manages network policies.
- Enforcer—Policy enforcement points for user authentication. For example, switches, firewall, and WLCs.
- Pulse Client—Client running on endpoints for user authentication, device compliance using PPS.
- Pulse Secure Profiler—It dynamically identifies and classifies endpoints across managed and unmanaged endpoint devices, so that access to network and resources can be controlled based on the type of the device.

PPS offers the following benefits:

- Centralized management of Access and Compliance policies.
- Easy integration with several Authentication, Authorization, and Accounting (AAA) servers.
- Role-based, application-level enforcement.
- Allows context-aware policy enforcement for wired and wireless connections across desktop and mobile platforms.
- Distributed enforcement of network access policies.
- Dynamic endpoint assessment and enforcement.
- Supports compliance based network access for endpoints.
- Supports comprehensive network visibility with simplified auditing, and monitoring of devices.
- Supports interoperability with existing network infrastructure such as switches, wireless controllers, AD, firewalls, IDS, and Security Information and Event Management (SIEM).
- Extends policy enforcement with information from Enterprise Mobility Management (EMM) solutions. PPS supports leading global-device management solutions from Pulse Workspace (PWS), MobileIron, AirWatch, and Microsoft Intune. PPS works with the Mobile Device Management (MDM) solution to evaluate whether the BYOD or corporate devices are compliant with organizational and MDM policies.
- Supports automated device onboarding, self-service enrollment, and integration with existing infrastructure to simplify deployments.
- Supports Simple Network Management Protocol (SNMP) in the network device definition for the Profiling service to communicate with the network devices and profile endpoints that are connected to the network devices.
- Delivers guest user access control capabilities for simple, seamless, and authorized network access to guests.
- Supports captive portal capabilities for allowing users onto their guest networks and capturing relevant information.

PPS Enforcement Modes

To provision resource access policies, you can use 802.1X Layer 2 switch, access point, or firewall within any enterprise class network edge infrastructure that supports 802.1X and Remote Authentication Dial-In User Service (RADIUS).

The following types of devices can be used as PPS enforcement points:

- Infranet Enforcer (Firewall) —Devices that control traffic flow based on Layer 3 data. You can use Palo Alto, Check Point, Fortinet, Juniper Networks SRX series and Screen OS firewalls as enforcers. For more information, see Layer 3 Enforcement.
- 802.1X devices—You can use any 802.1X enabled switches or access points with PPS. The 802.1X protocol provides port based authenticated access to LAN. This standard applies to both wireless and wired networks. For more information, see Layer 2 Enforcement.

You can use 802.1X enabled switches or access points with or without the Infranet Enforcer as part of the solution. If you do not deploy the Enforcer, the 802.1X enabled switch or access point functions as the enforcement point. You can create different security zones by configuring VLANs on the network and assigning different roles to the appropriate VLAN.

Pulse Secure Profiler

Overview


Pulse Secure Profiler dynamically identifies and classifies endpoints across managed and unmanaged endpoint devices, so that access to network and resources can be controlled based on the type of the device. It also helps you to get visibility and enforce your security policies for corporate access, BYOD, and guest access.

The Pulse Secure Profiler has the capability to:

- Detect and classify devices using DHCP fingerprinting.
- Provide access control for devices based on the device profile - mainly characterized by Manufacturer, Operating System, and Device Category.
- Provide visibility into IP-enabled devices connecting to the network.
- Enable MAC Authentication.
- Enable granular policies based on device attributes.

A high-level overview of the configuration steps needed to set up and run Pulse Secure Profiler is shown below.

Figure 2: Pulse Secure Profiler Configuration Overview

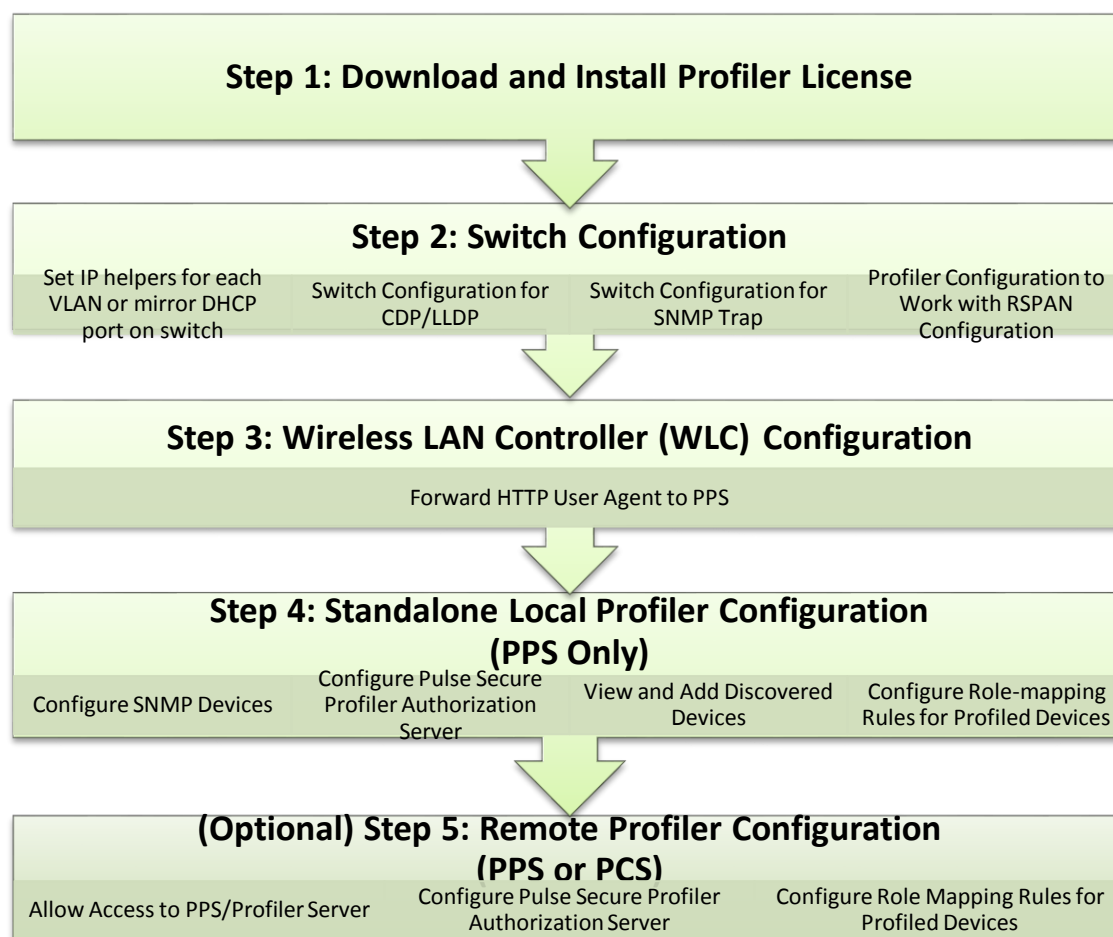

For more information on deployment and configuration, see [Pulse Secure Profiler Deployment Guide](#).

Roles, Realms, and Sign-In Policy

This chapter provides an overview of the key elements of PPS access management framework. It covers the following topics:

- [Overview](#)
- [Configuring User Roles](#)
- [Configuring Authentication Realm](#)
- [Configuring Sign-in Policies](#)
- [Managing Sign-In Policies](#)
- [Configuring Sign-In Notifications](#)
- [Configuring Sign-In Pages](#)

Overview

PPS access management framework allows only qualified users to access protected resources. The policies are created to allow or deny access to resources based on user's role and user's endpoint device. The access management framework comprises of the following key elements:

- [User roles](#)
- [Authentication realm](#)
- [Sign-in policy](#)

User Roles

User role is used to categorize a group of users and accordingly provide access to a set of protected resources for these group of users. User role defines the type of access and the permissions required for accessing a protected resource. Administrator can define multiple user roles for the end users.

For example:

- Employees- Users who require access to all the company resources.
- Contractors- Users who work on a contract basis and require access to selected network resources.
- Guests- Users who visit the company and require limited access to network resources.

Authentication Realm

Authentication realm specifies the conditions that users must meet to sign-in to the system. A realm contains details about the authentication server with which the user is authenticated and list of restrictions/checks that needs to be passed on the client machine.

It also includes mapping of different users to different groups or roles with the use of role mapping rules.

- Authentication Server- An authentication server is a database that stores user credentials (username, password, group, and attribute information). The user logs-in to PPS through a specific authentication realm, which is associated with an authentication server, PPS forwards the user's credentials to the authentication server to verify the user's identity through AAA framework.

The PPS supports the following authentication servers:

- Active Directory
- RADIUS
- LDAP
- NIS
- RSA ACE/Server
- SAML Server
- CA SiteMinder
- Local Authentication Server

For more information, see [AAA Servers](#)

- Authentication Policy- It is a set of rules and restrictions to control resource access. It includes source IP restriction, Host Checker,
- Role-Mapping- It consists of conditions a user must meet for PPS to map the user to one or more user roles. These conditions can be based on either the username, certificate, user information returned by the realm's directory server, or other administrator defined criteria.

Sign-in Policy

Sign-in policies define the URLs that users and administrators use to access the device and connect to the network. This also provides option to the administrator to select the set of pages that users see during the sign-in process. Note that, these pages can be customized by using Custom Sign-in Pages option. See

For example, if the enterprise has both PC users and mobile users, the admin can define two different URLs so that different authentication methods can be used. The PCs could log in to the PPS with an RSA token and their AD username and password. The mobile device use a client certificate (provided by an MDM solution) and the AD username and password.

Configuring User Roles

The user can be assigned to one or more roles during the sign-in process. A role is an entity which defines user session settings, role restrictions, appearance of the welcome page, and type of access methods (Pulse Client, or agentless).

This section covers the following topics:

- [Creating Roles](#)
- [Configuring User Access Options](#)
- [Customizing UI Options](#)
- [Customizing the Session Options](#)
- [Configuring Role Restrictions](#)

Creating Roles

To create a user role:

1. Select **Users > User Roles**.
For creating Administrator role, select **Administrators > Admin Role**. An administrator role specifies system management functions and session properties for administrators who map to the role. You can customize an administrator role by selecting the feature sets and user roles that members of the administrator role can view and manage.
2. Click **New Role** and then enter a name and, optionally, a description. This name is displayed in the list of Roles on the Roles page.
3. Under Options, specify the session and appearance details.
 - Session Options—Sets timeouts and user permissions that apply to each session established through the role.
 - UI Options—Sets the appearance of agentless log in pages.
 - Enable Guest User Account Management Rights—Provides limited permissions to allow users assigned to this role to create guest accounts
 - Enable Sponsored Guest User Account Management Rights—Provides limited permission to allow users assigned to this role to create sponsored guest accounts.

Figure 3: User Roles

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

Pulse Policy Secure on PPS_174

User Roles > New Role

New Role

Name: Full Access

Description:

Options

Session and appearance options are specified in [Default Options](#). Check the following if this role should override these defaults.

- ☒ Session Options
- ☒ UI Options
- ☐ Odyssey Settings for Access
- ☐ Odyssey Settings for Preconfigured Installer
- ☐ Enable Guest User Account Management Rights
- ☐ Enable Sponsored Guest User Account Management Rights

Save Changes

Configuring User Access Options

PPS supports connection through an agent (software) installed on the client device. The supported agent is Pulse Client. The Administrator can configure what agent to install on the client device and the corresponding settings to push during the installation.

To configure the user access options:

1. Select **Users > User Roles > Role Name > Agent**.

Figure 4: Agents

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users' (highlighted), 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'User Roles > Users > Agent > General'. The 'General' tab is selected, and the 'Agent' sub-tab is active. Under the 'Options' section, the 'Install Agent for this role' checkbox is checked. Below it, 'Install Odyssey' and 'Install Pulse Secure client' are radio button options, with 'Install Pulse Secure client' selected. The 'Enable Host Enforcer' checkbox is unchecked. A note explains that enabling the host enforcer blocks all traffic unless specific policies are created. Under the 'Session scripts' section, there are two fields: 'Windows: Session start script' and 'Windows: Session end script', each with a 'Script Location' input field. A 'Save Changes' button is at the bottom left.

2. To allow Pulse to download automatically on Windows endpoints, select **Install Agent for this role**, and then select the **Install Pulse Secure Client** option.
3. Under **Session Scripts**, specify scripts to run on Windows endpoints for users assigned to a role. For example, you can specify a script that maps network drives on an endpoint as a session start script, and you can specify another script that disconnects the mapped network drives as session end script.

Customizing UI Options

PPS provides options to administrators in customizing the page that gets displayed to the end users during sign-in process. These customization options are applied based on the list of user roles that are getting assigned to the end user. Using these options, administrators can change the logo, background and the welcome message that gets displayed to the end users during the sign-in process.

To customize the welcome page:

1. Select **Users > User Roles > Role Name > General > UI Options**.

Figure 5: User Roles UI Options

The screenshot shows the 'Pulse Policy Secure' administration interface. The breadcrumb trail is 'User Roles > dotix > General > UI Options'. The 'UI Options' tab is selected, with sub-tabs for 'General', 'Agent', and 'Agentless'. The 'General' sub-tab is active, showing various configuration options. At the top, there are buttons for 'Save Changes' and 'Restore Factory Defaults'. The 'Header' section includes a 'Current appearance' dropdown set to 'Pulse Secure'. The 'Logo Image' section has a 'Browse' button and a 'No file chosen' message, with a note that the recommended size is less than 40 pixels tall and 10KB. The 'Background color' is set to '#E3E3E3' with a color palette icon. The 'User Toolbar' section has a checkbox for 'Session Counter' which is unchecked. The 'Post Auth Sign In Notification' section has a dropdown set to '(None)'. The 'Personalized greeting' section has a checkbox for 'Show notification message on user's welcome page' which is unchecked. The 'Informative' section has a checkbox for 'Show instruction message' which is checked, and a text area containing the message: 'Welcome to the Pulse Policy Secure. Do not navigate away from this page, or you will lose access to protected resources.' The 'User Admin' section has a checkbox for 'Show User Admin Instruction message' which is unchecked, and a text area. There is also a checkbox for 'Enable bulk user creation' which is checked. The 'Other' section has a checkbox for 'Show copyright notice and "Secured by Pulse Secure" label in footers' which is checked. At the bottom, there are buttons for 'Save Changes' and 'Restore Factory Defaults'.

2. (Optional) Under **Header**, specify a custom logo and alternate background color for the header area of the welcome page:
 - Click **Browse** and locate your custom image file. The new logo is displayed in the **Current appearance** box only after you save your changes.
 - Type the hexadecimal number for the background color, or click the Color Palette icon and select a color. The Current appearance box updates immediately.
3. Under **User Toolbar**, select the Session Counter check box to display both a session countdown timer and an Extend button that allows agentless users to extend their session time to the maximum session length if the Enable Session Extension option is selected.
4. (Optional) Under **Post-Auth Sign-In Notification**, select a post authentication message that you configured earlier. If you select this option, the user receives an information page (for example, an end-user license agreement [EULA]) that you have created.

If you defined a post sign-in notification and you select a message for a role, the user is presented with the notification message after authentication. The user is prompted to click Proceed or Decline. If the user clicks Proceed, the protected resource is available to the user. If the user clicks Decline, they are immediately logged off and returned to the authentication page.

5. (Optional) Under **Personalized greeting**, select the Show notification message check box, and enter a message in the associated text box. The message is displayed as a header on the welcome page after the user is authenticated. You can format text and add links using the following HTML tags: `<i>`, ``, `
`, ``, and `<a href>`. This information does not appear on the initial sign-in page that is displayed prior to authentication. You can also use system variables and attributes in this field. The length of the personalized greeting cannot exceed 12K, (12288 characters). If you use unsupported HTML tags in your custom message, the system might display the user's home page incorrectly.
6. (Optional) Under **Informative**, select the Show instruction message check box and specify any instructions to appear on the welcome page. For example, you could advise users of company privacy notices or usage restrictions, or you can link to another site for more information.
7. If you include a link to an external website, a warning message appears informing the user of loss of access privileges if they leave the current page. To avoid this, add a tag for opening links in a new browser window.

For example: `Google` displays the linked text "Google," and the link opens in a new browser window.

The instruction message supports non-English languages.

8. (Optional) Under **User Admin**, select the Show User Admin instruction message checkbox and specify any instructions to appear on the user admin page. Select Enable bulk user creation to create bulk user accounts for numerous users.
9. (Optional) Under **Other**, specify whether to display the copyright notice and label in the footer. This setting applies only to users whose license permits disabling the copyright notice. For more information about this feature, call Pulse Secure Support.
10. (Optional) Click **Restore Factory Defaults** to reset all user-interface options back to factory defaults.
11. Click **Save Changes**. The changes take effect immediately, but current user browser sessions might need to be refreshed to see the changes.



- If an authenticated user attempts to close the agentless browser window or to navigate to another site, a warning message is displayed. The message advises the user that they will lose access to protected resources if the user moves away from the current page. The user can select Cancel to stay on the current page, or they can select OK to go to the new site. If the user navigates to a different site, they can click the browser back button to return to the resource page, if the session timeout is not exceeded.
- If a user maps to more than one role, then the system displays the user interface settings that correspond to the first role to which the user is mapped.
- Sign-in pages can also be customized using the Custom Sign-In page functionality. For more information, see [Configuring Custom Sign-In Pages](#).

Customizing the Session Options

PPS provides option to administrators for configuring the maximum session length and heartbeat interval for the end user sessions. Using these options Administrators can control how long the user sessions are allowed and the interval within which server should receive heartbeat from client device.

PPS also provides option to enable session roaming so that mobile users can continue to have the connection with server while roaming.

To specify general session options:

1. Select **Users > User Roles > RoleName > General > Session Options**.

Figure 6: Session Options

2. For **Max. Session Length**, specify the number of minutes an active non-administrative user session can remain open before ending. The minimum is 6 minutes. The maximum is 725 minutes. During a user session, prior to the expiration of the maximum session length, the system prompts the user to reenter authentication credentials, thereby avoiding the unexpected termination of the user session.



NOTE: With machine authentication, a role prompt fails because no user is present to extend the session.

3. For **Heartbeat Interval**, set the frequency at which the endpoint sends out a heartbeat to PPS to keep the session alive. For agentless access, the browser refreshes the page with every heartbeat. Users must not the browser, because this will interrupt the heartbeat and end the session. Pulse, and the Java agent provide the heartbeat. You should ensure that the heartbeat interval of the agent is greater than the Host Checker interval. If it is not, performance could be affected. In general, set the heartbeat interval to 50% more than the Host Checker interval.

4. For **Heartbeat Timeout**, specify the amount of time the system should “wait” before terminating a session when the endpoint does not send a heartbeat response.

5. For Auth Table Timeout, enter a timeout value for the auth table entry to be provisioned as needed. This parameter allows you to specify how long a user with no activity (for example, a user reading a static web page), can remain in the auth table before the auth table entry is cleared by the Infranet Enforcer. If the user accesses protected resources again after exceeding the timeout value specified, the system must provision the auth table entry to the Infranet Enforcer again.
6. For agentless users, you can select the **Enable Session Extension** check box to allow users with a Layer 2 or Layer 3 connection to continue a session beyond the maximum session length.

If this feature is enabled, users with agentless access can be reauthenticated and extend their current session without interruption.

When the user session nears the end of maximum session length, a pop up a new sign-in page for agentless. When the user enters credentials, Host Checker verifies that the user is still compliant and the session continues.

When the user extends the session before its expiration, the session time is restored to the original maximum session length time that you have specified for the role, and the log indicates the new session time. If the user fails to extend the session before session time expires, the session is terminated.

For agentless access, you must select the Session Counter option on the UI Options tab to enable the session timer.

7. Guest users (users created by guest user account managers) can log in with their guest account, and then tunnel into their corporate Virtual Private Network (VPN). In this case, the heartbeat connection to PPS is lost, and the user is disconnected after the heartbeat timeout expires. To prevent this, use firewall traffic as the heartbeat by selecting the Allow VPN Through Firewall check box.

This feature applies only to new sessions.

**NOTE:**

- When the “Disable use of Allow VPN Through Firewall check box is not checked (the default setting), AJAX requests are sent to the PPS at the configured interval. If the Use Traffic as Heartbeats option is enabled, AJAX heartbeat errors are masked.
- If a guest user is assigned two roles, and one of the roles has a Host Checker policy and one doesn't, the user loses the role with the Host Checker policy if the Host Checker policy expires while the user is accessing a VPN through a tunnel. The user will lose access to the resources associated with the Host Checker role.

8. Under Roaming session, specify:

- **Enabled**—To enable roaming user sessions for users mapped to this role. A roaming user session works across source IP addresses, which allows mobile users (laptop users) with dynamic IP addresses to sign in from one location and continue working from another. Disable this feature to prevent users from accessing a previously established session from a new source IP address. This prevents the spoofing attack on the user's session.
- **Limit to subnet**—To limit the roaming session to the local subnet specified in the Netmask box. Users may sign in from one IP address and continue using their sessions with another IP address if the new IP address is within the same subnet.
- **Disabled**—To disable roaming user sessions for users mapped to this role. Users who sign in from one IP address may not continue an active session from another IP address. User sessions are tied to the initial source IP address.



NOTE: You must enable roaming for roles that are created for security policies that classify sessions into VLANs, for example, VLANs that have been provisioned for Users or Remediation. A session stores the client IP address. If the session gets placed in a different VLAN transition, the control channel is re-established, and a new IP address is sent to the server. If the remediation role does not have roaming enabled, the server terminates the session. This can lead to repeated problems. When the session is terminated, it causes a new log on, which reconnects to the same session, resulting in the same

roaming problem. The Pulse client sets a connection roaming error and logs the server FATAL_ERROR message.

9. Click **Save Changes**.

Configuring Role Restrictions

The role restrictions allow only a valid user to access the network and prevents unauthorized access. You can specify security requirements based on source IP address, certificate, browser type, and Host Checker policies. If the user does not meet the requirements specified in the restriction, then the user is not allowed to access the protected resource.

Source IP Access Restriction

Use a source IP restriction at the role or realm level to control from which IP addresses users can access a sign-in page. You must specify one or more IP addresses otherwise; no IP address restriction applies.

You can restrict resource access by source IP address:

- When administrators or users try to sign in to PPS—The user must sign in from a machine whose IP address/netmask combination meets the source IP requirements for the authentication realm. If the user's machine does not have the IP address/netmask combination required by the realm, the system does not forward the user's credentials to the authentication server and the user is denied access. You can allow or deny access to any IP address/netmask combination. For example, you can deny access to all users on a wireless network (10.64.4.100), or you can allow access to all other network users (0.0.0.0).
- When administrators or users are mapped to a role—The authenticated user must be signed in from a machine whose IP address/netmask combination meets the Source IP requirements for each role to which the system might map the user. If not, then the system does not map the user to that role.

You can also use a source IP restriction in the following ways:

- Source IP restriction on realms—Suppose an Infranet Enforcer is installed between an access network and the rest of the network, and the system routes all traffic through this Infranet Enforcer. You can use a source IP restriction to allow users to log in from only the access network, because logging in from any other network results in denial of network access. For example, you can use this configuration to prevent users from logging in from networks other than a wireless network.
- Source IP restriction on roles—You can use source IP restrictions to set up different roles for different access networks. Only endpoints from an access network are assigned the role that corresponds to that network. You can then create Infranet Enforcer IPsec routing policies and Infranet Enforcer source IP specifically for that role so that endpoints route network traffic through the appropriate Infranet Enforcer.

Certificate Access Restriction

Certificate access restriction restricts access only to clients that have a client-side certificates. You can further restrict access using specific certificate attribute and value pairs.

To enable certificate access restriction:

1. Select **System > Configuration > Certificates > Trusted Client CAs**.

The user must sign in from a machine that has the specified client-side certificate (from the proper CA) and with any field/value pair requirements. If the user's machine does not possess the certificate information required by the realm, the user can access the sign-in page.

2. To implement certificate restrictions at the realm level, select:

- Administrators > Admin Realms > *Select Realm* > Authentication Policy > Certificate
- Users > User Realms > *Select Realm* > Authentication Policy > Certificate

3. If the administrators or users are mapped to a role, then the authenticated user must be signed in from a machine that meets the specified client-side certificate requirements (proper CA) and optionally field/value pair requirements for each role to which the system might map the user. If the user's machine does not possess the certificate information required by a role, then the system does not map the user to that role. Select:

- Administrators > Admin Roles > *Select Role* > General > Restrictions > Certificate
- Users > User Realms > *Select Realm* Role Mapping > *Select/CreateRule* > *Custom Expression*
- Users > User Roles > *Select Role* > General > Restrictions > Certificate

The value in the field depends on the naming attributes in the Relative Distinguished Name(RDN) in the subject DN of the certificate.

For example, if the subject DN is cn=user1, uid=uid1, sn=lastname, E=user1@sample.net, OU=QA, O=company, C=US, you can use 'cn', 'uid', 'sn', 'E', 'ou', 'o', 'c'.

But if you use 'uid' in a certificate where it does not exist, e.g. cn=user1, ou=QA, o=sample, c=us, it will not match. All the naming attributes in X509 distinguished names are supported. But to determine what you can use you must know what is in the certificate.



NOTE: This applies to (Admin/User) realm and role certificate restrictions, but not for Role Mapping rules. With role mapping rules, you can use additional certificate attributes in the rule itself, or in custom expressions.

Host Checker Restrictions

To specify Host Checker restrictions:

1. Select Authentication > Endpoint Security > Host Checker and specify global options for Host Checker to apply to any user for whom Host Checker is required in an authentication policy or a role-mapping rule.
2. To implement Host Checker restriction at the realm level:
 1. Select Administrators > Admin Realms > *Select Realm* > General > Restrictions > Host Checker or
Users > User Realms > *Select Realm* > General > Restrictions > Host Checker.
 2. Select one of the following options for either all available policies or for individual policies listed in the Available Policies column:
 - Evaluate Policies—Evaluates without enforcing the policy on the client and allows user access. This option does not require Host Checker to be installed during the evaluation process; however, Host Checker is installed once the user signs in.
 - Require and Enforce—Requires and enforces the policy on the client in order for the user to log in to the specified realm. Requires that Host Checker is running the specified Host Checker policies for the user to meet the access requirement. Requires the system to download Host Checker to client machines that do not support Pulse. If you choose this option for a realm's authentication policy, then the system downloads Host Checker to the client machine after the user is authenticated and before the user is mapped to any roles in the system. Selecting this option automatically enables the Evaluate Policies option.

3. Select the Allow access to realm if any ONE of the selected “Require and Enforce” policies is passed check box if you do not want to require users to meet all of the requirements in all of the selected policies. Instead, the user can access the realm by meeting the requirements of any one of the selected Host Checker policies.
3. To implement Host Checker restriction at the role level:
 1. Select **Administrators > Admin Roles > Select Role > General > Restrictions > Host Checker**.
Or **Users > User Roles > Select Role > General > Restrictions > Host Checker**.
 2. Select one of the following options:
 - Allow all users — Does not require Host Checker to be installed in order for the user to meet the access requirement.
 - Allow only users whose workstations meet the requirements specified by these Host Checker policies — Requires that Host Checker is running the specified Host Checker policies in order for the user to meet the access requirement.
 - Select the Allow access to role if any ONE of the selected “Require and Enforce” policies is passed check box if you do not want to require users to meet all of the requirements in all of the selected policies. Instead, the user can access the role if he meets the requirements of any one of the selected Host Checker policies.
4. To create role-mapping rules based on a user’s Host Checker status:
 1. Select **Users > User Realms > Select Realm > Role Mapping**.
 2. Click **New Rule**, select **Custom Expressions** from the Rule based on list, and click Update. Or, to update an existing rule, select it from the When users meet these conditions list.
 3. Click **Expressions**.
 4. Write a custom expression for the role-mapping rule to evaluate Host Checker’s status using the hostCheckerPolicy variable. For help writing the custom expressions, use tips in the Expressions Dictionary.
 5. Then assign these roles section, select the roles that the system should map users to when they meet the requirements specified in the custom expression. Click Add.
 6. Select the Stop processing rules when this rule matches for the system to stop evaluating role-mapping rules if the user successfully meets the requirements defined in this rule.

Browser Restriction

To specify browser restrictions:

1. Select the level at which you want to implement browser restriction.
 - For Realm level:
 - Select **Administrators > Admin Realms > Select Realm > Authentication Policy > Browser**
 - Select **Users > User Realms > Select Realm > Authentication Policy > Browser**.
 - For Role level:
 - Select **Users > User Roles > Select Role > General > Restrictions > Browser**.
 - Select **Users > User Realms > Select Realm > Role Mapping > Select|Create Rule > Custom Expression**
2. Select one of the following options:
 - **Allow all users matching any user-agent string sent by the browser**— Allows users to access the IC Series device or resources using any of the supported Web browsers.
 - **Only allow users matching the following user-agent policy**—Allows you to define browser access control rules. To create a rule:
 - a. For the user-agent string pattern, enter a string in the format

<browser_string>

where asterisk (*) is an optional character used to match any character and <browser_string> is a case-sensitive pattern that must match a substring in the user-agent header sent by the browser. You cannot include escape characters (\) in browser restrictions.

b. Select either:

- **Allow** to allow users to use a browser that has a user-agent header containing the <browser_string> substring.
- **Deny** to prevent users from using a browser that has a user-agent header containing the <browser_string> substring.

c. iii. Click **Add**.

3. Click **Save Changes** to save your settings.

Rules are applied in order, so the first matched rule applies. Literal characters in rules are case sensitive, and spaces are allowed as literal characters. For example, the string **Opera** matches any user-agent string that contains the substring Opera.

Configuring Password Access Realm Restriction

You can restrict network and resource access by password-length when administrators or users try to sign in. The user must enter a password whose length meets the minimum password-length requirement specified for the realm. Note that local user and administrator records are stored in the local authentication server. This server requires that passwords are a minimum length of 6 characters, regardless of the value you specify for the realm's authentication policy.

To specify password restrictions:

1. Select an administrator or user realm for which you want to implement password restrictions:
 - **Administrators > Admin Realms > Select Realm > Authentication Policy > Password**
 - **Users > User Realms > Select Realm > Authentication Policy > Password**
2. Select one of the following options:
 - **Allow all users (passwords of any length)** — Does not apply password restrictions on password length.
 - **Only allow users that have passwords of a minimum length** — Requires the user to enter a password with a minimum length that you specify.
3. Select **Enable Password Management** to enable password management.

You must also configure password management on the authentication server configuration page (local authentication server) or through an LDAP server.

4. Click **Save Changes** to save your settings.

By default, the system requires that user passwords entered on the sign-in page be a minimum of four characters. The authentication server used to validate a user's credentials might require a different minimum length. For example, the local authentication database requires user passwords to be a minimum length of six characters.

Configuring Authentication Realm

An authentication realm defines the authentication server with which end user is authenticated and the list of restrictions that must be satisfied on the client machine during sign-in. It also provides role mapping option to administrators for configuring the list of roles that needs to be assigned to the user. Role mapping provides flexibility to administrators in configuring how different set of roles need to be assigned to the user.

This section covers the following topics:

- [Creating an Authentication Realm](#)
- [Configuring Admin/User Realm to associate an additional Authentication Server](#)

- [Configuring Role Mapping](#)
- [User Role Evaluation](#)

Creating an Authentication Realm

To create an authentication realm:

1. Select **Administrators > Admin Realms** or **Users > User Realms**.
2. On the respective Authentication Realms page, click New.

Figure 7: Authentication Realm

Pulse Secure Pulse Policy Secure

System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Realms > New Authentication Realm

New Authentication Realm

* Name: Label to reference this realm

Description:

☐ When editing, start on the Role Mapping page

▼ Servers

Specify the servers to use for authentication and authorization. To create or manage servers, see the [Servers](#) page.

Authentication: Specify the server to use for authenticating users.

User Directory/Attribute: Specify the server to use for authorization.

Accounting: Specify the server to use for Radius accounting.

Device Attributes: Specify the server to use for device authorization.

▼ Dynamic policy evaluation

☐ Enable dynamic policy evaluation

[Save Changes](#)

* indicates required field

3. Enter a name to label this realm and, optionally, a description.
4. Select *When editing, start on the Role Mapping page* if you want the Role Mapping tab to be selected when you open the realm for editing.
5. Under **Servers**, specify:
 - An authentication server to use for authenticating users who sign in to this realm.
 - (Optional) A directory/attribute server to use for retrieving user attribute and group information for role-mapping rules and resource policies.
 - (Optional) A RADIUS accounting server to use to track when a user signs in and out.
6. If you previously selected a RADIUS server for Authentication, the RADIUS Proxy option buttons appear. Select Proxy Outer Authentication or Proxy Inner Authentication to allow the system to proxy EAP authentication methods. Select Do not proxy if you do not want to use RADIUS proxy.
7. To use dynamic policy evaluation for this realm, select Dynamic policy evaluation to enable an automatic timer for dynamic policy evaluation of this realm's authentication policy, role-mapping rules, and role restrictions. Then:

- Select the Refresh interval option to specify how often to perform an automatic policy evaluation of all currently signed in realm users. Specify the number of minutes (5 to 1440).
- Select Refresh roles to refresh the roles of all users in this realm. (This option does not control the scope of the Refresh Now button.)
- Select Refresh resource policies to also refresh the resource policies (not including Meeting and e-mail Client) for all users in this realm. (This option does not control the scope of the Refresh Now button.)
- Click Refresh Now to manually evaluate the realm's authentication policy, role-mapping rules, role restrictions, user roles, and resource policies of all currently signed-in realm users. Use this button if you make changes to an authentication policy, role-mapping rules, role restrictions, or resource policies and you want to immediately refresh the roles of this realm's users.
- To use session migration for endpoints with the Pulse client, select the Session Migration check box. Then enter the Authentication Group and specify whether you want to receive user attributes from IF-MAP or from a directory server. Note that you must also configure IF-MAP Federation for all of PPS nodes in a session migration network.
- Click Save Changes to create the realm. The General, Authentication Policy, and Role Mapping tabs for the authentication realm appear.

8. Perform the next configuration steps:

- Configure one or more role-mapping rules.
- Configure an authentication policy for the realm.
- After you configure the authentication realm, select Authentication > Signing In > Sign-in Policies, add the realm to a sign-in policy, and associate the realm with an authentication protocol set.

Configuring Admin/User Realm to associate an additional Authentication Server

To configure a user realm:

1. Select **Users > User Realms > New User Realm**.
2. Complete the settings for the user-realm.
3. Under **Additional Authentication Server**, select the **Enable additional authentication server** option.
4. Select any already created authentication-server from the Authentication #2 dropdown.
5. Specify the username and password.

Username: Specified by user on the sign-in page/Predefined as <USER>

Note: Configure Predefined as <NTUSER> if Primary Authentication server is AD server.

Password: Specified by user in sign-in page options/Predefined as <PASSWORD>/Mask static password.

6. Click **Save Changes**.

Figure: Configuring Admin/User Realm to associate an additional authentication Server

The screenshot shows the Pulse Secure Admin console interface. The top navigation bar includes links for System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The 'Users' section is active, and the 'New User Realm' configuration page is displayed.

Name: Users
Description: Default authentication realm for users
☐ When editing, start on the Role Mapping page

Servers
 Specify the servers to use for authentication and authorization. To create or manage servers, see the [Servers](#) page.

Authentication: System Local
User Directory/Attribute: None
Accounting: None
Device Attributes: None

Additional Authentication Server
☒ Enable additional authentication server
☐ Enable adaptive authentication

You can specify an additional authentication server. The additional credentials can be specified by the user on the sign-in page (the labels for these inputs are specified by the sign-in page), or they can be pre-defined below, in which case the user will not be prompted for the credential.

Note: Adaptive authentication is supported by leveraging the behavioral analytics. Enable behavioral analytics on 'System->Behavioral Analytics->Configuration' for supporting this. Adaptive Authentication is not supported with 'Anonymous' type authentication server selected as authentication server above.

Authentication #2: AD_204
Username is: ☒ specified by user on sign-in page
☐ predefined as: <USER>
Password is: ☒ specified by user on sign-in page
☐ predefined as: <PASSWORD> ☐ Mask static password
☒ End session if authentication against this server fails

Configuring Role Mapping

Role-mapping rules are conditions a user must meet to map to user roles.

To specify role-mapping rules for an authentication realm:

1. Select **Administrators > Admin Realms, Users > User Realms**.
2. On the Authentication Realms page, select a realm and then click the Role Mapping tab.
3. Click New Rule to access the Role Mapping Rule page. This page provides an inline editor for defining the rule.

Figure 8: Role Mapping

4. In the Rule based on list, select one of the following:

- **Username**—The system username entered on the sign-in page. Select this option if you want to map users to roles based on their usernames. If this is a RADIUS realm, and you are using RADIUS proxy for outer authentication, you cannot configure a role-mapping rule with a username.
- **User attribute**—A user attribute from a RADIUS, LDAP, or SiteMinder server. Select this option if you want to map users to roles based on an attribute from the corresponding server. This type of rule is available only for realms that use a RADIUS server for the authentication server, or that use an LDAP or SiteMinder server for either the authentication server or the directory server. After choosing the User attribute option, click Update to display the Attribute list and the Attributes button. Click the Attributes button to display the server catalog.
- **Certificate or Certificate attribute**—Certificate or Certificate attribute is an attribute supported by the users' client-side certificate. Select this option to map users to roles based on certificate attributes. The Certificate option is available for all realms. The Certificate attribute option is available only for realms that use LDAP for the authentication or directory server. After choosing this option, click Update to display the Attribute text box.
- **Group membership**—Group membership is group information from an LDAP or native Active Directory server that you add to the server catalog Groups Tab. Select this option to map users to roles based on either LDAP or Active Directory group information. This type of rule is available only for realms that use an LDAP server for either the authentication server or directory server or that use an Active Directory server for authentication. (Note that you cannot specify an Active Directory server as an authorization server for a realm.)
- **Custom Expressions**—Custom Expressions is one or more custom expressions that you define in the server catalog. Select this option to map users to roles based on custom expressions. This type of rule is available for all realms. After you select this option, click Update to display the Expressions lists. Click the Expressions button to display the Expressions tab of the server catalog.

5. Under Rule, specify the condition to evaluate, which corresponds to the type of rule you select and consists of the following:



CAUTION: If you are creating a role mapping rule for a MAC address authentication realm, the attributes list cannot be edited. If there is an LDAP server assigned to this MAC authentication server and you want to use and edit the attributes assigned to that LDAP server, please specify the LDAP server as the Directory/Attribute server.

- Specifying one or more usernames, SiteMinder user attribute cookie names, RADIUS or LDAP user attributes, certificate attributes, LDAP groups, or custom expressions.

- Specifying to what the value must equate, which might include a list of usernames, user attribute values from a RADIUS, SiteMinder, or LDAP server, client-side certificate values (static or LDAP attribute values), LDAP groups, or custom expressions.

For example, you can choose a SiteMinder user attribute cookie named "department" from the Attribute list, choose is from the operator list, and then enter "sales" and "eng" in the text box.

Alternatively, you can enter a custom expression rule that references the SiteMinder user attribute cookie named department:

```
<userAttr.department = ("sales" and "eng")>
```

6. Under ...then assign these roles:

- Specify the roles to assign to the authenticated user by adding roles to the Selected Roles list.
- Select Stop processing rules when this rule matches if you want the system to stop evaluating role-mapping rules if the user meets the conditions specified for this rule.

7. Click Save Changes to create the rule on the Role Mapping tab. When you finish creating rules, be sure to order role-mapping rules in the order in which you want the system to evaluate them. This task is particularly important when you want to stop processing role-mapping rules when a match is identified.

User Role Evaluation

Administrator can configure the role mapping rules for determining the list of roles that need to be assigned to the users. In case of multiple role assignment, PPS merges the various role settings using permission merge. Administrators can also configure how different rules can be evaluated and merged using the options provided on role mapping rules page.



NOTE: If you assign a role to a RADIUS proxy realm, role restrictions cannot be enforced. Host Checker policies, source IP restrictions, and any other limits that have been assigned are bypassed. Use RADIUS proxy only if no restrictions have been applied. Additionally, outer proxy cannot be used if a role-mapping rule based on usernames is being used, because the system cannot see the username, and a session cannot be created.

A permissive merge is a merge of two or more roles that combines enabled features and settings according to the following guidelines:

- Any enabled access feature in one role takes precedence over the same feature set to disabled in another role. For example, if a user maps to two roles, one of which disables the Host Enforcer while the other role enables the Host Enforcer, the system enables the Host Enforcer for that session.
- In the case of user interface options, the system applies the settings that correspond to the user's first role.
- In the case of maximum session lengths, the system applies the greatest value from all the roles to the user's session.
- If more than one role enables the Roaming Session feature, then the system merges the netmasks to formulate a greater netmask for the session

The system performs the following security checks before creating a session for a role:

1. The system begins rule evaluation with the first rule on the Role Mapping tab of the authentication realm to which the user successfully signs in. During the evaluation, the system determines if the user meets the rule conditions. If so, then:
 - The system adds the corresponding roles to a list of eligible roles available to the user.
 - The system determines if the "stop on match" feature is configured. If so, then the engine proceeds.

2. The system evaluates the next rule on the authentication realm's Role Mapping tab according to the process in Step 1 and repeats this process for each subsequent rule. When the system evaluates all role-mapping rules, it compiles a comprehensive list of eligible roles.
3. The system evaluates the definition for each role in the eligibility list to determine whether the user complies with any role restrictions. The system then uses this information to compile a list of valid roles, whose requirements the user also meets.

If the list of valid roles contains only one role, then the system assigns the user to that role. Otherwise, the system continues the evaluation process.

4. The system evaluates the setting specified on the Role Mapping tab for users who are assigned to more than one role:
 - Merge settings for all assigned roles—If you select this option, the system performs a permissive merge of all the valid user roles to determine the overall (net) session role for a user session.
 - User must select from among assigned roles—If you select this option, the system presents a list of eligible roles to an authenticated user. The user must select a role from the list, and the system assigns the user to that role for the duration of the user session.
 - User must select the sets of merged roles assigned by each rule—If you select this option, the system presents a list of eligible rules to an authenticated user (that is, rules whose conditions the user has met). The user must select a rule from the list, and the system performs a permissive merge of all the roles that map to that rule.

If you use automatic (time-based) dynamic policy evaluation or if you perform a manual policy evaluation, the system repeats the role evaluation process described in this section.

Configuring Sign-in Policies

Sign-in policies define the URL's that any user needs to use for accessing the network. PPS provides support for sign-in URL's for administrators and end users. Administrators can login to PPS using the administrator sign-in URL and configure/monitor the server. The user's login using the user sign-in URL's for connecting to the network. The sign-in URL's are configured with authentication realm so that authentication of the users is performed during the sign-in process. Administrators can also use the custom sign-in pages on the sign-in URL's so that pages displayed for the users are customized.

This section covers the following topics:

- [Configuring Administrator Sign-In Policies](#)
- [Configuring User Sign-In Policies](#)
- [Associating Authentication Realms and Protocols with User Sign-in Policies](#)

Configuring Administrator Sign-In Policies

To configure administrator sign-in policy:

1. Select Authentication > Signing In > Sign-in Policies.
2. To create a new sign-in policy, click New URL. To edit an existing policy, click a URL in the Administrator URLs or the User URLs column.

Figure 9: Sign-in Policy

Pulse Secure Pulse Policy Secure

System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

New Sign-In Policy

User type: ☒ Users ☐ Administrators

Sign-in URL: Format: <host>/<path>/. Use * as wildcard in the beginning of the host name.

Description:

Sign-in page: To create or manage pages, see [Sign-In pages](#).

Authentication realm

Specify how to select an authentication realm when signing in.

☒ User types the realm name
The user must type the name of one of the available authentication realms.

☐ User picks from a list of authentication realms
The user must choose one of the following selected authentication realms when they sign in. If only one realm is selected, it is automatically used (the sign-in page will not display the list). To create or manage realms, see the [Administrator Authentication](#) page.

Available realms:

Selected realms:

Configure Signin Notifications

☐ Pre-Auth Sign-in Notification

☐ Post-Auth Sign-in Notification

3. To create an administrator sign-in policy, select the Administrators option button at the top of the page. (By default, the Users option button is selected.)
4. In the Sign-in URL field, enter the URL to associate with the policy. Use the format <host>/<path> where <host> is the hostname of PPS, and <path> is any string users must enter. For example: users1.yourcompany.com/ic. To specify multiple hosts, use the asterisk (*) wildcard character. For instance:

To specify that all administrator URLs must use the sign-in page, enter */admin.



NOTE: Use wildcard characters (*) only at the beginning of the hostname portion of the URL. The system does not recognize wildcards in the URL path.

5. (Optional) Enter a Description for the policy.
6. From the Sign-in Page list, select the page that you want to associate with the policy. You can select the default page, a variation of the standard sign-in page, or a custom page that you create using the customizable UI feature.
7. For administrator sign-in policies, under Authentication realm, specify which realm maps to the policy, and how users and administrators must choose from among realms. If you select:
 - User types the realm name—The system maps the sign-in policy to all authentication realms but does not provide a list of realms from which the administrator can choose. Instead, the administrator must manually enter the realm name into the sign-in page.
 - User picks from a list of authentication realms—The system maps the sign-in policy to only the authentication realms that you choose. The system presents this list of realms when the administrator signs in and allows a realm to be chosen from the list. (Note that the system does not provide a list of authentication realms if the URL is mapped only to one realm. Instead, only the realm you specify is displayed).
8. Click the Add button to add available realms to the Selected realms box.
9. Click Save Changes.

Configuring User Sign-In Policies

To create or configure user sign-in policies:

1. Select **Authentication > Signing In > Sign-in Policies**.
2. To create a new sign-in policy, click New URL. To edit an existing policy, click a URL in the Administrator URLs or User URLs column.

Figure 10: User Sign-in Policy

Pulse Secure Pulse Policy Secure

System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Signing In > Sign-in Policies > */certauth/

***/certauth/**

User type: ☒ Users ☐ Administrators

Sign-in URL: Format: <host>/<path>/. Use * as wildcard in the beginning of the host name.

Description:

Sign-in page: [To create or manage pages, see Sign-in pages.](#)

Authentication realm

Specify what realms will be available when signing in.

| | Available realms | Authentication protocol set | |
|--|--|---|------------------------------------|
| | <input type="text" value="Cert Auth"/> | <input type="text" value="- Not applicable -"/> | <input type="button" value="Add"/> |
| | Cert Auth | Cert Auth | |

If more than one realm appears above, Odyssey Access Client or the Policy Secure sign-in page will ask the user to choose. Other endpoints cannot choose a realm; the Policy Secure will assign the first suitable realm from the list. If no realms appear above, sign-in will fail.

☐ **User may specify the realm name as a Username suffix**
 When this option is selected, the Username suffix will be used to specify a realm.
☐ **Remove realm suffix before passing to authentication server**
 When this option is selected, the username suffix will be stripped from the Username prior to authenticating with an authentication server.
☒ **Fail if suffix does not match any of the realms**
 When this option is selected, the user should provide one of the realm as suffix. If not, the user will be denied sign-in.

Configure Guest Settings

☐ Use this sign-in policy for Guest and Guest admin to use specific pages.

Configure SignIn Notifications

☐ Pre-Auth Sign-in Notification
☐ Post-Auth Sign-in Notification

3. In the Sign-in URL field, enter the URL that you want to associate with the policy. Use the format `<host>/<path>/`, where `<host>` is the host name of PPS, and `<path>` is any string users must enter. For example: `users1.yourcompany.com/ic`. To specify multiple hosts, use the asterisk (*) wildcard character. For example, to specify that all end-user URLs must use the sign-in page, enter `*/`.
4. Under Authentication realm, specify the realms that must be mapped to the sign-in policy. Under Available realms, select realms from the menu. The system maps the sign-in policy only to the authentication realms that you add.
5. Under Authentication protocol set, select an authentication protocol set that you have configured previously. If endpoints will connect with a PPS agent, select the default 802.1X protocol set. The protocol set used with a realm must be compatible with the authentication server that is associated with the realm.
6. Click Add to add the new realm and authentication protocol pair.
7. Select the User may specify the realm name as a username suffix check box to allow non- PPS endpoints to access the system by entering their credentials (in the format `user@realm`).

8. Select the Remove realm suffix before passing to authentication server check box for users to enter their credentials with a suffix to send the username without the suffix. Most authentication servers are not compatible with a realm suffix or decorated username.
9. Click Save Changes.

Associating Authentication Realms and Protocols with User Sign-in Policies

Different types of endpoints can request authentication through PPS, including PPS agents, third-party 802.1X supplicants (including 802.1X IP phones), switches, and endpoints that request authentication with agentless access.

A PPS agent is software that can use the JUAC protocol. PPS agents include Pulse client, and the Java agent. By default, PPS can communicate with PPS agents, the Java agent, and endpoints with agentless access. To accommodate other types of endpoint clients, you might need to create authentication protocol sets within sign-in policies.

When you add a realm in a sign-in policy, you select an authentication protocol set to be used with that realm. There are two default authentication protocol sets. For PPS agents, use the default 802.1X authentication protocol set. For 802.1X IP phones, use the default 802.1X-Phones protocol set.

Third-party 802.1X supplicants cannot use the preconfigured 802.1X protocol set that is used by default with PPS agents. For example, some switches can request authentication using CHAP or EAP-MD5-Challenge. You must define a specific authentication protocol set for these requests.

To define an endpoint's authentication method, you add authentication realms to sign-in policies. You configure authentication protocol sets as required, based on authentication methods that are compatible with the authentication server that you are using. PPS maps the sign-in policy to the authentication realms that you choose. Users who sign in using the URL that you provide have access only to those realms that you specify.

For non- PPS agents, you must select the protocols that the client and the authentication server are compatible with. See the below table for details of what authentication protocols are compatible with different authentication servers.

Table3: RADIUS Sub-Protocols and Compatible Authentication Servers

| Protocols | Authentication Servers | | | | | |
|----------------------------|------------------------|-------|------|------------------|-----|----------|
| | Certificate | Local | LDAP | Active Directory | ACE | Mac Auth |
| EAP-GTC | - | - | - | - | Y | - |
| PAP | - | Y | Y | Y | Y | - |
| CHAP, EAP-MD5-Challenge | - | Y | Y | - | - | - |
| MS-CHAP | - | Y | Y | Y | - | - |
| MS-CHAP-V2, EAP-MS-CHAP-V2 | - | Y | Y | Y | - | - |
| EAP-TLS | Y | - | - | - | - | - |
| Mac-based auth | - | - | - | - | - | Y |
| EAP-JUAC | Y | Y | Y | Y | Y | - |



NOTE: For 802.1X, AD authentication server used as LDAP is not supported for the following protocols: MS-CHAP, MS-CHAP-V2, and EAP-MS-CHAP-V2.

The decision of what realms are available to the user within a sign-in policy is based on two factors. First, the order of realms in the list is considered. Realms at the top of the list are attempted. Second, the authentication protocol set that you choose must be compatible with the client or supplicant.

To determine a compatible realm, the system looks for a RADIUS subprotocol that is compatible with the client or supplicant's available protocols, and the system automatically selects compatible realms. If the endpoint is using a Pulse Policy Secure agent, the system presents a list of realms. Any realm with both outer and inner protocols that match the outer and inner protocols on the client is considered compatible.

Protocol compatibility does not guarantee authentication. For example, CHAP and EAP-MD-5 challenge sign-in succeeds only if the stored password is retrievable as clear text. In addition, if the client or supplicant is configured with a non-JUAC protocol (for example, the Windows Vista supplicant), the system searches for a realm without TNC Host Checker restrictions, browser restrictions, or certificate restrictions.



NOTE: If you are configuring a realm for a Windows client, with a Statement of Health Host Checker policy, you must use an authentication protocol set with the EAP-SOH protocol. When you select EAP-SOH in an authentication protocol set, EAP-SOH is always offered first, regardless of protocol ordering.

If an endpoint is using PPS agent software, the system presents the list of realms to the user or administrator when the user signs in and allows the user to choose a realm from the list. The system does not display a list of authentication realms if the URL is mapped only to one realm. Instead, it automatically uses the realm you specify.

For endpoints that use a non- PPS agent, you can select the User may specify the realm name as a username suffix check box. When the user provides a username with a suffix in the format user@realm, the suffix determines the realm assignment. If you do not select this option, the endpoint is assigned to the first realm in the list whose authentication server is a match with the endpoint's software. For example, if the endpoint's software is configured for tokens (EAP-Generic Token Card), and if the sign in policy permits EAP-GTC, the endpoint is assigned the first realm in the list whose authentication server supports tokens.

When an 802.1X IP phone connects through a realm with the 802.1X-Phone protocol set selected, the device is automatically directed to the proper realm for authentication based on the compatible protocol.

If you are using inner or outer RADIUS proxy with a selected realm, routing with respect to authentication protocols is different. PPS forwards all traffic to a proxy target, which rejects protocols it does not support. With an outer proxy realm, PPS ignores the authentication protocol set. For an inner proxy realm, the authentication protocol set directs PPS as it negotiates the outer protocol (EAP-PEAP or EAP-TTLS) but does not affect the inner protocol.

Managing Sign-In Policies

This topic describes how to configure and manage user sign-in policies. It includes the following information:

- [Enabling and Disabling Sign-in Policies](#)
- [Specifying the Order of Evaluation](#)

Enabling and Disabling Sign-in Policies

PPS provides an option to control the list of sign-in URL's that can be used by the users for logging into the network. The Administrator can control the list of sign-in URL's that are allowed for sign-in process using enable/disable functionality. Sign-in URLs that are disabled on Pulse Policy Secure cannot be used by the users for connecting to the network.

To enable and disable sign-in policies:

1. Select **Authentication > Signing In > Sign-in Policies**.

Figure 11: Sign-in Policy Enabling

Pulse Secure | System | **Authentication** | Administrators | Users | Endpoint Policy | Maintenance | Wizards

Signing In > Sign-in Policies

Sign-in Policies | Sign-in Pages | Sign-in Notifications | Authentication Protocol Sets

☒ Restrict access to administrators only
Only administrator URLs will be accessible. Note that Administrators can attempt to sign in even if all rules on this page are disabled.
Warning: Enabling this option will immediately terminate all user sessions.

New URL... | Delete... | Enable | Disable | ↑ | ↓ | Save Changes

| Administrator URLs | Sign-In Page | Authentication Realm(s) | Enabled |
|--|----------------------|-------------------------|---------|
| <input checked="" type="checkbox"/> */admin/ | Default Sign-In Page | Admin Users | ✓ |

| User URLs | Sign-In Page | Authentication Realm(s) | Enabled |
|---|----------------------|-------------------------|---------|
| <input checked="" type="checkbox"/> */guestadmin/ | Default Sign-In Page | Guest Admin (N/A) | ✓ |
| <input checked="" type="checkbox"/> */guest/ | Default Sign-In Page | Guest (Guest) | ✓ |
| <input checked="" type="checkbox"/> */certauth/ | Default Sign-In Page | Cert Auth (Cert Auth) | ✓ |
| <input checked="" type="checkbox"/> */ | Default Sign-In Page | Users (802.1X) | ✓ |

2. Select the check box for the policy that you want to change then click Enable or Disable for enabling or disabling an individual policy.
3. Select or clear the Restrict access to administrators only check box at the top of the page to enable or disable the policy or all user policies.
4. Click Save Changes.

Specifying the Order of Evaluation

The PPS evaluates sign-in policies in the same order that you list them on the Sign-in Policies page. When it finds a URL that matches exactly, it stops evaluating and presents the appropriate sign-in page to the administrator or user. For example, for 2 administrator sign-in policies with different URLs:

- The first policy uses the URL */admin and maps to the default administrator sign-in page.
- The second policy uses the URL yourcompany.com/admin and maps to a custom administrator sign-in page.

If you list the policies in this order on the Sign-in Policies page, the system never evaluates or uses the second policy because the first URL encompasses the second one. Even if an administrator signs in using the yourcompany.com/admin

URL, the system displays the default administrator sign-in page. If you list the second policy first, however, the system displays the custom administrator sign-in page to administrators who access the system using the `yourcompany.com/admin` URL.

Note that the system accepts only wildcard characters in the hostname section of the URL and matches URLs based on the exact path. For example, two administrator sign-in policies with two different URL paths:

- The first policy uses the URL `*/marketing` and maps to a custom sign-in page for the entire Marketing Department.
- The second policy uses the URL `*/marketing/joe` and maps to a custom sign-in page designed exclusively for Joe in the Marketing Department.

If you list the policies in this order on the Sign-in Policies page, the system displays Joe's custom sign-in page to him when he uses the `yourcompany.com/marketing/joe` URL to access the system. He does not see the Marketing sign-in page, even though it is listed and evaluated first, because the path portion of his URL does not exactly match the URL defined in the first policy.

To change the order in which administrator sign-in policies are evaluated:

1. Select **Authentication > Signing In > Sign-in Policies**.
2. Select a sign-in policy in the Administrator URLs or User URLs list.
3. Click the up or down arrow to change the selected policy's placement in the list.
4. Click Save Changes.

Figure 12: Evaluation

Sign-in Policies

Restrict access to administrators only
Only administrator URLs will be accessible. Note that Administrators can attempt to sign in even if all rules on this page are disabled.
Warning: Enabling this option will immediately terminate all user sessions.

New URL... Delete... Enable Disable ↑ ↓ Save Changes

| Administrator URLs | Sign-In Page | Authentication Realm(s) | Enabled |
|--------------------|----------------------|-------------------------|---------|
| */admin/ | Default Sign-In Page | Admin Users | ✓ |

| User URLs | Sign-In Page | Authentication Realm(s) | Enabled |
|---------------|----------------------|-------------------------|---------|
| */guestadmin/ | Default Sign-In Page | Guest Admin (N/A) | ✓ |

Configuring Sign-In Notifications

With sign-in notifications, you can create and configure detailed notification messages that appear for Pulse clients and for agentless access endpoints when the user attempts to sign in. For example, you can configure a notification message that explains terms of use, company-specific policies, a welcome page, an end user license agreement (EULA), or a message of the day.

For a browser-based (agentless) log in, the notification message appears in a separate page either before (pre-auth) or after (post-auth) user authentication during the sign-in process. For a Pulse client log in, the notification messages appear in a Pulse message box. The user is expected to read the content of the sign-in notification message and acknowledge by clicking a Proceed button. The user may indicate disagreement by clicking a Decline button, which ends the log in attempt.

You can configure a sign-in policy to use a sign-in notification either as pre-auth or post-auth (or both). In the case of post-auth configuration, you can either use a common message for all roles or use separate messages for each role.

You can create a multi-language sign-in notification package that relies on the language setting of the endpoint. You can customize the sign-in notification page appearance for browser-based log ins by modifying the related fields in a sign-in page in the Admin UI or by using a custom sign-in page.

Configuring and Implementing Sign-In Notifications

Sign-in notifications appear for Pulse client and for browser-based logins when the user attempts to sign in.

To configure and implement sign-in notifications:

1. Select Authentication > Signing In > Sign-in Notifications.
2. Click New Notification.

Figure 13: Sign-in Notifications

The screenshot shows the Pulse Secure Admin UI. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The 'Authentication' section is expanded, showing 'Signing In > Sign-In Notification > New Sign-In Notification'. The main content area is titled 'New Sign-In Notification' and contains the following fields:

- Name:** A text input field with the value 'New Sign-In Notification'. A tooltip indicates 'Label to reference the sign-in notification.'
- Type:** Radio buttons for 'Text' (selected) and 'Package'.
- Text:** A large text area containing the message 'You are about to sign in to the system. Do you want to proceed?'. A character count '64 character(s)' is displayed at the bottom right of the text area.

Below the text area, a note states: 'Text for the sign-in notification. NOTE: For Pulse desktop L3 VPN connections, the combined length of all the sign-in notification messages cannot exceed 3000 characters. If it does then the notifications will not be displayed to the user.' At the bottom of the form is a 'Save Changes' button.

3. Specify a Name for the notification. This name appears in the sign-in policies page, and in the UI Options page for a selected role.
4. Select Text or Package.

- If you select Text, type the desired sign-in notification message, or copy and paste the relevant text into the Text field.
- If you select Package, click the Browse button and navigate to a previously prepared .zip file. A package is typically used to provide different language versions of the notification message.
 - The zip file should include a default.txt file and one or more <language>.txt files (Example: en.txt).
 - Language-abbreviations should be strings that can appear in Accept-Language header of an HTTP request.
 - The character encoding supported is UTF-8.



NOTE: When you create a zip file, do not add the folder containing the files, but add the files directly.

5. Click Save Changes. To enable sign-in notifications:
6. Click Authentication > Signing In > Sign-in Policies.
7. Under Configure Sign-in Notifications, select the check box for Pre-Auth Sign-in Notification, Post-Auth Sign-in Notification, or both.
 - After Pre-Auth Sign-in Notification, select a previously configured sign-in notification from the drop-down menu.
 - After Post-Auth Sign-in Notification, select the option for Use a common Sign-in Notification for all roles or Use the Sign-in Notification associated to the assigned role.
 - If you select Use a common Sign-in Notification for all roles, select a previously configured sign-in notification from the drop-down menu.
- If you select Use the Sign-in Notification associated to the assigned role, the sign-in notification configured for the assigned role will be used.
- Prevent the Post-Auth sign-in notification from being displayed to users who have seen it before, by selecting the Skip if already shown check box. (This is only a hint to the system and might not be honored in all environments.)
8. Click Save Changes.
9. You can customize the appearance of the sign-in notification message by selecting Authentication > Signing In > Sign-in Pages and creating a sign-in page or using an existing page.
10. Under Sign-in Notification appearance, customize UI options for Pre-Auth Notifications and Post-Auth Notifications by changing the following items:
 - For Notification Title enter the text that appears at the top of the sign-in notification page.
 - In the Proceed Button box, enter the text for the button that the user clicks to proceed with the sign-in. This text applies to browser-based log ins only. A Pulse client log in always displays Proceed.
 - Optionally, clear the check box for Display "Decline" Button. If this box is not checked, the user does not have the option to decline.
 - In the Decline Button box, enter the text for the button that the user clicks to decline.
This text applies to browser-based log ins only. A Pulse client log in always displays Decline.
In the Message on Decline box, enter the text that you would like to appear when a user clicks the Decline button.
11. Click Save Changes.



NOTE: If you enabled Use the Sign-in Notification associated to the assigned role you must complete the implementation by selecting the sign-in notification on the Users > User Roles > *Role Name* > General > UI Options page or Administrators > Admin Roles > *Role Name* > General > UI Options page, as applicable.

If more than one role is available to a user, the sign-in notification associated with the first role assigned is displayed.

12. Add the sign-in page in which you have customized the sign-in notification appearance to the sign-in policy.

Configuring Sign-In Pages

A *sign-in page* defines the customized properties in the end-user's welcome page such as the welcome text, help text, logo, header, and footer. The system allows you to create two types of sign-in pages to present to users and administrators:

This section covers the following topics:

- [Configuring Standard Sign-In Pages](#)
- [Configuring Custom Sign-In Pages](#)

Configuring Standard Sign-In Pages

Standard sign-in pages are included with the default system. You can modify standard sign-in pages. You can modify the default sign-in page that the system displays at sign-in. You can also create new standard sign-in pages that contain custom text, logo, colors, and error message text.

To create or modify a standard sign-in page:

1. Select **Authentication > Signing In > Sign-in Pages**.
2. Click **New Page**. To modify an existing page, select the link for the page you want to modify.
3. Enter a name to identify the page.
4. In the Custom text section, revise the default text used for the various screen labels. When you add text to the Instructions field, you can format text and add links using the following HTML tags: `<i>`, ``, `
`, ``, and `<ahref>`. However, the system does not rewrite links on the sign-in page (because the user has not yet been authenticated), so point only to external sites. Links to sites behind a firewall will fail.


If you use unsupported HTML tags in your custom message, the system might display the end-user's home page incorrectly.

5. (Optional) In the Header appearance section, specify a custom logo image file for the header and a different header color.
6. (Optional) In the Custom error messages section, revise the default text that is displayed to users if they encounter certificate errors.

You can include `<<host>>`, `<<port>>`, `<<protocol>>`, and `<<request>>` variables and user attribute variables, such as `<<userAttr.cn>>` in the custom error messages. These variables must be in the format `<variable>` to distinguish them from HTML tags that have the format `<tag>`.

7. (Optional) To provide custom help or additional instructions for your users, select Show Help button, enter a label to display on the button, and specify an HTML file to upload. Note that the system does not display images and other content referenced in this HTML page.
8. Click Save Changes. The changes take effect immediately, but users with active sessions might need to refresh their Web browser. Click Restore Factory Defaults to reset the sign-in page, user home page, and admin console appearance.

Figure 14: Standard Sign-in Page

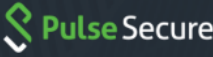
Pulse Policy Secure

System
Authentication
Administrators
Users
Endpoint Policy
Maintenance
Wizards

[Signing In](#) > [Sign-In Page](#) > [New Sign-In Page](#)

New Sign-In Page

Name: Label to reference the sign-in page.

Page Type: ☒ Users/Administrators

Custom text

Welcome message:

Portal name:

Submit button:

Instructions:

Please sign in to begin your secure session.

no-script-None. Javascript is disabled on your browser.</no-script>

This text appears on the right-hand side of the sign-in page. You can use
,
,
,
,
, and
 tags to format the text.

Username:

Password:

Realm: This prompt appears when the sign-in page supports more than one realm.


☒ Pulse Client displays customized username and password prompts

Supported Pulse Clients will display the username and password prompts defined above instead of the default prompts.

Sign Out message: Text appears in message box when user signs out.

Sign In link text: Text appears as link to sign in page when user signs out.

Header appearance

Current appearance: 

Logo image: Recommended size: Less than 40 pixels tall and 100px.

Background color:

Custom error messages

Missing certificate:

Missing certificate. Check that your certificate is valid and up-to-date, and try again.

This message appears when the user does not have a required client-side certificate.

Invalid certificate:

Invalid or expired certificate. Check that your certificate is valid and up-to-date, and try again.

This message appears when the user does not have a valid required client-side certificate.

Sign-In Notification appearance

Sign-in Notification will be displayed only if it is configured in the Sign-In Policy.

Pre Auth Notification:

Notification title:

Proceed button: User must click this button to continue the sign-in process.

☒ Display 'Decline' button

Decline button: User may click this button to abort the sign-in process.

Message on Decline:

You are not allowed to sign in to the system.

This message appears when the user clicks the 'Decline' button.

Post Auth Notification:

Notification title:

Proceed button: User must click this button to continue the sign-in process.

☒ Display 'Decline' button

Decline button: User may click this button to abort the sign-in process.

Message on Decline:

You are not allowed to sign in to the system.
Your sign-in has been canceled.

This message appears when the user clicks the 'Decline' button.

Show Help button

☒ Show Help button

If you want to provide users with more information regarding sign in requirements, you can display a help button that links to a custom HTML file.

Help button: Displayed only if Help button is enabled.

HTML file: Rule that images and other external content will not be displayed.

Configuring Custom Sign-In Pages

Customized sign-in pages are THTML pages that you produce using the Template Toolkit and upload in the form of an archived ZIP file. The customized sign-in pages enable you to use your own pages rather than modify the standard sign-in pages.

To upload Custom Sign-In Pages:

1. Select Authentication > Signing In > Sign-in Pages.
2. Click **Sample** to download the Sample Folder as ZIP and save it on local disk.

Figure 15: Custom Sign-in Pages

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Signing In > Sign-In Page > Custom Sign-In Pages

Custom Sign-In Pages

Custom sign-in pages allow you to provide customized templates for various pages that may appear during the sign-in process. Refer to the documentation for information about creating valid templates.

Sign-In Pages

Name:
Label to reference the custom sign-in pages.

Page Type: ☒ Access

☐ Use Custom Page for the Pulse Desktop Client Logon
The Pulse Desktop Client will open a web browser and use custom pages for authentication instead of standard login prompts.

☐ Prompt the secondary credentials on the second page
These labels appear when a realm using this sign-in page specifies a secondary authentication server that requires user input. These are only applicable to user sign-in pages.
 This option is not applicable when TOTP authentication server is selected as secondary auth-server for this realm, in which case token input from user is always taken from the second page.

Templates File: No file chosen
Zip file containing the custom templates and assets.

Current Template File:
☒ sample.zip Size 196808 bytes Uploaded on Tue Oct 4 11:44:53 2016

☐ Skip validation checks during upload

Sample Templates Files
 The following sample templates may be useful in producing your own customized sign-in page templates. Click to download the sample files, edit them to fit your needs, and then upload them.

- ☒ **Sample**
 This is a basic set of templates that works for most cases.
- ☒ **Softid**
 This is a set of templates for ACE Authentication.
- ☒ **Kiosk Example**
 This is an example which demonstrates how to protect against hardware keystroke loggers.

Notices:
 WARNING: Page PleaseWait is out of date. It is recommended you re-customize this page from the latest sample zip file

3. Copy the following files after unzipping the folder (locally saved in previous step):
 - a. UserAdmin-add-user.shtml
 - b. UserAdmin-add-bulk-users.shtml
 - c. UserAdmin-update-user.shtml
 - d. Logout.shtml
 - e. PleaseWait.shtml
4. Open the previously downloaded Sample Custom Sign-in folder and replace the files.
5. Select all the files and create *.ZIP file for uploading custom sign-in page.
6. Upload the new custom sign-in page and click **Save Changes**.

Initial Configuration

This part covers the following chapter:

- [Using the Initial Setup Wizard](#)

Using the Initial Setup Wizard

This chapter provides an overview of the initial setup wizard. It includes the following information:

- [Overview](#)
- [Configuring PPS using Initial Setup Wizard](#)
- [Verification and Troubleshooting](#)

Overview

The initial setup wizard allows you to quickly configure PPS to ensure that the PPS device is configured effectively and efficiently. You can open the initial setup wizard through Wizards > Initial Setup > Configure. As a best practice, it is recommended to configure Profiling as a first step so that all the network devices are discovered. You can then launch the wizard to configure the enforcement policies on the discovered devices.

Using the initial setup wizard, you can configure PPS for the following use cases:

- Network visibility using Pulse Secure Profiler functionality
- Layer 2 enforcement through 802.1X, MAC authentication, and SNMP for endpoints.
- Easy deployment for guest or BYOD access

Benefits

The initial setup wizard provides the following benefits:

- Provides quick onboarding of existing Pulse Connect Secure (PCS) users to PPS with a mechanism to import existing PCS policy configuration into PPS.
- Allows users to easily and quickly deploy PPS based for the desired use case (network visibility, enforcement, and guest access).

Prerequisites

You must keep the following information ready before configuring the PPS device:

- NTP server address and other details.
- The license SKU or license server details. The PPS appliance is added as a license client with necessary licenses to be leased.
- Fingerprint database, subnets to scan, and switch details for Profiling the network.
- Authentication servers (AD/LDAP) must have groups defined for different roles so that corresponding access can be configured for L2 enforcement use case.
- The list of switches along with IP address and other parameters such as VLAN information for different set of users.

- Administrator account details of PCS for fetching the authentication server and role details.

Limitations

The following are the limitations:

- Supports only layer 2 enforcement use cases.
- The initial setup wizard is supported only with the new UI.
- You can configure each use case only once using the wizard and cannot edit the configurations once it is completed.

Configuring PPS using Initial Setup Wizard

This section covers the configuration using initial setup wizard. The following procedure lists the configuration steps:

- [Basic Settings](#)
- [Configuring Profiling for Network Visibility](#)
- [Configuring Layer 2 Enforcement](#)
- [Configuring Guest Authentication](#)


You can launch the initial setup wizard using:

- Select **Wizards > Initial Wizard > Configure**
- Select **Wizards > Initial Wizard > Configuration Summary**

The configuration summary page shows the configured/not configured use cases and the corresponding details. It is recommended to configure the use cases using the configuration summary page.

The below figure shows the configuration summary page for a fresh installation.

Figure 16: Initial Setup Configuration Summary Page

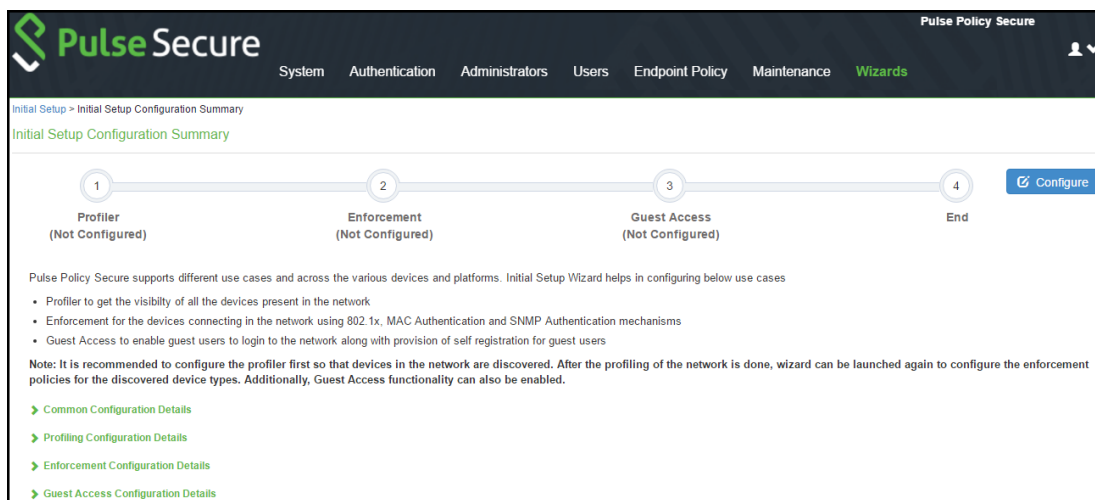

Basic Settings

This section covers the following topics:

- Configuring system date and time
- Configuring license

Configuring System Date and Time

The time synchronization between PPS and another component is very critical. You can easily configure the system date and time using the initial setup wizard. The system date and time can be configured manually or you can configure a network time protocol (NTP) server. It is recommended to use a public NTP server for time synchronization.

To set the system date and time:

1. Select **Wizards > Initial Setup > Configure**.
2. Select the deployment use case.
3. Select your time zone. Selecting the appropriate time zone enables the system to automatically adjust the time for Daylight Saving Time changes.
 - Use NTP Server- Enter the fully qualified domain name or IP address for the NTP server.
 - Set Time Manually- Enter the date (MM/DD/YY) and time. You can click **Get from Browser** to automatically populate the Date and Time.
4. Click **Set Date and Time**.

Figure 17: Initial Setup Configuration Page

The screenshot displays the 'Initial Setup' wizard interface. On the left is a sidebar with navigation links: Introduction, Use Cases, System Settings (highlighted in green), Switch Configuration, Enforcement, Pulse Connect Secure Configuration, Authentication Servers, Roles, and Summary. The main content area is titled 'Initial Setup' and contains the 'Date and Time' configuration section. This section includes a 'Select TimeZone' dropdown menu set to '(GMT-12:00) Eniwetok, Kwajalein'. Below this are two radio buttons: 'Use NTP Server' (selected) and 'Set Time Manually'. The 'Use NTP Server' option has a text input field labeled 'NTP server' and a 'Get from Browser' button. The 'Set Time Manually' option has a text input field and a 'Get from Browser' button. An example date and time '12/28/2016 10:51:39 AM' is shown. A 'Set Date & Time' button is located below the radio buttons. The 'Licenses' section is visible below, showing a 'License Keys' text area, a 'Configure License Server' link, and an 'Install License' button. At the bottom, there is a status bar showing 'localhost2 (500 users)' and '0 licenses', along with 'Cancel', '< Previous', and 'Next >' buttons.

Configuring License

The license can be applied in 2 ways:

- Manually by entering the license key
- License Server

To apply the license manually:

1. Enter the license keys obtained through license key generation.
2. Click **Install License**.

Figure 18: Configure license

Initial Setup

Set Time Manually: 2/14/2017 12:12:57 PM | Get from Browser

Set Date & Time

Licenses

License Keys

Configure License Server

Install License

Installed New License Keys

| | |
|---|-----------|
| localhost2 - (1000 users) Licensing Hardware ID: 0274M7RKSDCVJ0HDE | 1 license |
| Pulse Policy Secure License 1000 Concurrent Sessions - Perpetual Key: [redacted] | Permanent |

To configure through the license server:

1. Enter IP address or hostname of license server.
2. Enter a unique ID for the client. This ID is used to communicate and verify the client with the license server.
3. Select the network to communicate with the license server from the Preferred Network menu. The available options are internal (default), external, and management.
4. Select the **Verify SSL Certificate** check box if you want the client to verify the server's SSL certificate when establishing communication with it.

Figure 19: License Server

Configure License Server

Server IP/Hostname: 1.1.1.1

Lease Client ID: xxx

Password: ...

Preferred Network: internal

☐ Verify SSL Certificate

Install License

Installed New License Keys

| | |
|---|-----------|
| localhost2 - (1000 users) Licensing Hardware ID: 0274M7RKSDCVJ0HDE | 1 license |
| Pulse Policy Secure License 1000 Concurrent Sessions - Perpetual Key: [redacted] | Permanent |

Cancel | < Previous | Next >

Configuring Profiling for Network Visibility

Pulse Secure Profiler dynamically identifies and classifies endpoints across managed and unmanaged endpoint devices, so that access to network and resources can be controlled based on the type of the device. It also helps you to get visibility so that necessary security policies for corporate access, BYOD, and guest access can be enforced.

To enable profiling on your network:

1. Select **Enable Profiling to get visibility of devices in the network**.

Figure 20: Initial Setup Configuration Page- Profiling

2. Configure system date and time. See [Configuring System Date and Time](#).
3. Configure license. See [Configuring License](#).
4. You can add an SNMP device manually through Add New Switch configuration or automatically discover SNMP devices through Device Discovery.
5. To discover SNMP v2 devices:
 - Select the SNMP version as v2
 - Enter the IP address/range and community string.

Figure 21: Initial Setup Configuration Page- Discover Switch SNMPv2

| Name | IP Address | SNMP | Radius Client |
|--------|--------------|------|---------------|
| ruckus | 10.204.88.12 | v2 | |

6. To discover SNMP v3 devices:

- Enter the IP address/range
- Select the SNMP version as v3
- Select the desired Authentication protocol and Privacy protocol.
- Enter the Authentication password and Privacy password.
- Click the search icon.

Figure 22: Initial Setup Configuration Page- Discover Switch SNMPv3

7. To add a new switch:

- Enter the name and IP address of the switch
- Select the Make/Model of the switch
- Under SNMP configuration, select the SNMP version- v2/v3
 - For SNMP v2, enter the read community string.
 - For SNMPv3, enter the authentication password, privacy password and select the authentication protocol and privacy protocol.
- Click Save.

Figure 23: Initial Setup Configuration Page- Add Switch SNMPv2

8. Click **Next**.

9. Select **Browse** and upload the fingerprint database downloaded from the Pulse Secure portal.
10. Select the DHCP sniffing mode that is whether to run the DHCP sniffing on DHCP helper (Internal Port) or RSPAN (External Port).
11. Under WMI configuration, specify WMI profiler user name and password to fetch endpoint information from remote desktops running Microsoft Windows. The WMI profiler collects granular OS level information such as accurate OS version and patch level.
12. Add one or more subnets that can be included or excluded for fingerprinting devices using Nmap target scans.
Note: Nmap target scan is only performed on valid IP addresses in the subnet.
13. Enter the subnet details and Click **Add**.

Figure 24: Initial Setup Configuration Page – Fingerprint database

The screenshot shows the 'Initial Setup' configuration page for the fingerprint database. The sidebar on the left contains the following navigation items: Introduction, Use Cases, System Settings, Switch Configuration, Profiling (highlighted), Guest Access, Enforcement, Pulse Connect Secure Configuration, Authentication Servers, Roles, and Summary.

The main content area is titled 'Initial Setup' and contains the following sections:

- Profiling functionality details**: A section explaining that profiling is used to profile various devices on the network and is supported through DHCP finger printing, SNMP, and Nmap.
- Upload Fingerprint Database**: A button labeled 'Browse' next to the text 'fpdb-22.pkg'.
- DHCP Sniffing Mode**: A dropdown menu currently set to 'DHCP Helper (Internal port)'.
- WMI Configuration**: A section with fields for 'Username', 'Password', and 'Endpoint IP', along with a 'Test' button.
- Subnet and Collector Table**: A table with two columns: 'Subnet' and 'Collector'. The 'Subnet' column has a text input field with a placeholder '@Example: 192.168.1.0/24' and a table row with the value '10.204.0.0/16'. The 'Collector' column has checkboxes for 'Nmap' and 'WMI', and a table row with the value 'Nmap'. An 'Add' button is located to the right of the table.

At the bottom of the page, there are three buttons: 'Cancel', '< Previous', and 'Next >'.

Configuring Layer 2 Enforcement

The following enforcements are supported for the devices connecting to the network.

- 802.1X
- MAC Authentication
- SNMP

Before you begin:

As a best practice, it is recommended to configure Profiling as a first step so that all the network devices are discovered. You can then launch the wizard to configure the enforcement policies on the discovered devices.

To configure enforcement and authentication mechanism:

1. Select **Enable enforcement and authentication mechanism for the devices connecting to the network.**



NOTE: Profiling is enabled by default when you enable enforcement and authentication.

Figure 25: Initial Setup Layer2 Enforcement

Initial Setup

Introduction

Use Cases

System Settings

Switch Configuration

Enforcement

Pulse Connect Secure Configuration

Authentication Servers

Roles

Summary

Use cases and Features

(Note: It is recommended to configure the profiler first so that devices in the network are discovered. After the profiling of the network is done, wizard can be launched again to configure the enforcement policies for the discovered device types.)

☐ Enable profiling to get visibility of devices in the network

☒ Enable enforcement and authentication mechanisms for the devices connecting to the network

☒ Fetch configuration details from another Pulse Connect Secure server

☐ Enable guest access for providing access to guest users

Prerequisite

Below are the details required for configuring PPS through this wizard

- **License Details**
License SKU or License server details are required. In case of license server, this PPS box needs to be added as a license client with necessary licenses to be leased configured
- **Authentication Servers**
Authentication Servers(AD/LDAP) need to have groups defined for different roles so that corresponding access can be configured in this wizard
- **Switch Details**
List of switches that we want to be used for providing the access to the end users and different VLANs on the switch

Cancel **< Previous** **Next >**

2. Configure basic settings. See Basic Settings.
3. Configure the switch. Complete the configurations as described in table below.

Table 4: Configuring Switches

| Discover Switches | |
|-------------------|--|
| SNMP v2 | Enter the IP address/range and community string. |
| SNMP v3 | <ul style="list-style-type: none"> • Enter the IP address/range • Select the desired Authentication protocol and Privacy protocol. |

| | |
|------------------------------------|---|
| | <ul style="list-style-type: none"> Enter the Authentication password and Privacy password. Click the search icon. |
| Add New Switch | |
| Name | Enter a name to label the RADIUS client. You can assign any name to a RADIUS client entry, use the device's SSID or IPv4/IPv6 address to avoid confusion. |
| IP Address | Enter the IPv4/IPv6 address of the switch. |
| Make/Model | Select the make/model of the switch vendor. The make/model selection tells PPS which dictionary of RADIUS attributes to use when communicating with this client. |
| RADIUS Client Configuration | |
| IP Address Range | Enter the number of IP addresses in the IP address range for the switch/WLC, starting with the address you specified for IP Address. You can specify a range up to a maximum of 32,768 addresses. |
| Shared Secret | Enter the RADIUS shared secret. A RADIUS shared secret is a case-sensitive password used to validate communications between PPS and switch. |
| SNMP Configuration | |
| SNMP Version | <p>Select the SNMP version (v2/v3).</p> <ul style="list-style-type: none"> For SNMP v2, enter the read community string. For SNMPv3, enter the authentication password, privacy password and select the authentication protocol and privacy protocol. Select Use for enforcement to use the SNMP device for SNMP enforcement. |

Figure 26: Add Switch – SNMPv2

Initial Setup

Add New Switch

Name: xyz IP Address: 10.204.88.15 Make/Model: HP

Radius Client Configuration

IP Address Range: 1 Shared Secret:

SNMP Configuration

SNMP Version: v2 Write/Trap User Same? ☒ Use for Enforcement ☒

Read Community String: public

Save Cancel

| Name | IP Address | SNMP | Radius Client |
|------|--------------|------|---------------|
| xyz | 10.204.88.15 | v2 | |

Cancel < Previous Next >

Figure 27: Add Switch – SNMPv3

The screenshot shows the 'Initial Setup' window with a sidebar on the left containing the following menu items: Introduction, Use Cases, System Settings, Switch Configuration (highlighted), Profiling, Enforcement, Pulse Connect Secure Configuration, Authentication Servers, Roles, and Summary. The main content area is titled 'Initial Setup' and contains three sections:

- Add New Switch:** Includes fields for Name (xyz), IP Address (10.204.88.15), and Make/Model (HP).
- Radius Client Configuration:** Includes fields for IP Address Range (1) and Shared Secret.
- SNMP Configuration:** Includes a dropdown for SNMP Version (v3), checkboxes for 'Write/Trap User Same?' and 'Use for Enforcement' (both checked), a 'Read User Credentials' section with Username, Authentication Protocol (MD5), and Authentication Password fields, and a 'Privacy Protocol' section with a dropdown (None) and a Privacy Password field.

At the bottom of the window are buttons for 'Save', 'Cancel', '< Previous', and 'Next >'.

- Configure the enforcement for devices, which includes laptops, smart phones, VOIP phones, and unmanaged devices.



NOTE: If profiling is enabled the device platform types are automatically enabled.

Table 5: Enforcement

| Device Type | Platforms | Authentication Type | Additional Support |
|-------------------|---|--|--------------------|
| Laptops | <ul style="list-style-type: none"> Windows MAC Linux | <ul style="list-style-type: none"> 802.1X SNMP | Host Checker |
| Smart phones | <ul style="list-style-type: none"> Android iOS | <ul style="list-style-type: none"> 802.1X | NA |
| VOIP phones | NA | <ul style="list-style-type: none"> 802.1X MAC | NA |
| Unmanaged devices | NA | MAC | NA |

5. Enter the SSID for 802.1X. Use comma as a delimiter for entering multiple SSID's.

Figure 28: Initial Setup Layer2 Enforcement

The screenshot shows the 'Initial Setup' window for Layer2 Enforcement. On the left is a navigation menu with the following items: Introduction, Use Cases, System Settings, Switch Configuration, Profiling, Guest Access, Enforcement (highlighted in green), Pulse Connect Secure Configuration, Authentication Servers, Roles, and Summary. The main content area is titled 'What kind of enforcement do you want to support?' and contains several sections:

- Laptops**: Checkboxes for Windows, Macintosh, and Linux, all of which are checked.
- Enable compliance check**: A toggle switch set to 'ON'.
- Select Authentication types**: Checkboxes for 802.1x and SNMP, both checked.
- Smart Phones**: Checkboxes for Android and iOS, both checked. A note below states: 'Note: Only 802.1x authentication supported'.
- VOIP Phones**: Checkboxes for 802.1x and MAC, both checked. A label 'Select Authentication type' is present.
- Unmanaged Devices**: A checkbox for Printers is checked. A dropdown menu shows '- Other Devices -'. A note below states: 'Note: Only MAC authentication supported'.
- SSIDs for 802.1x**: A text input field containing 'xyz'. A note below states: 'Note: Multiple SSIDs should be comma separated'.

At the bottom of the window are three buttons: 'Cancel', '< Previous', and 'Next >'.

Importing Configurations from Pulse Connect Secure

The existing configurations in PCS can be imported to PPS for quickly configuring the PPS device.

The following configurations can be imported from PCS:

- Authentication servers
- Role names
- Host Checker compliance policies

To import the PCS device configurations to PPS device:

1. Select **Fetch configuration details from another Pulse Connect Secure server**.
2. Enter the PCS sign-in URL.
3. Enter the admin username.
4. Enter the password
5. Enter the realm information.
6. Click **Fetch**. The list of imported authentication servers, roles, and Host Checker compliance policies are displayed.


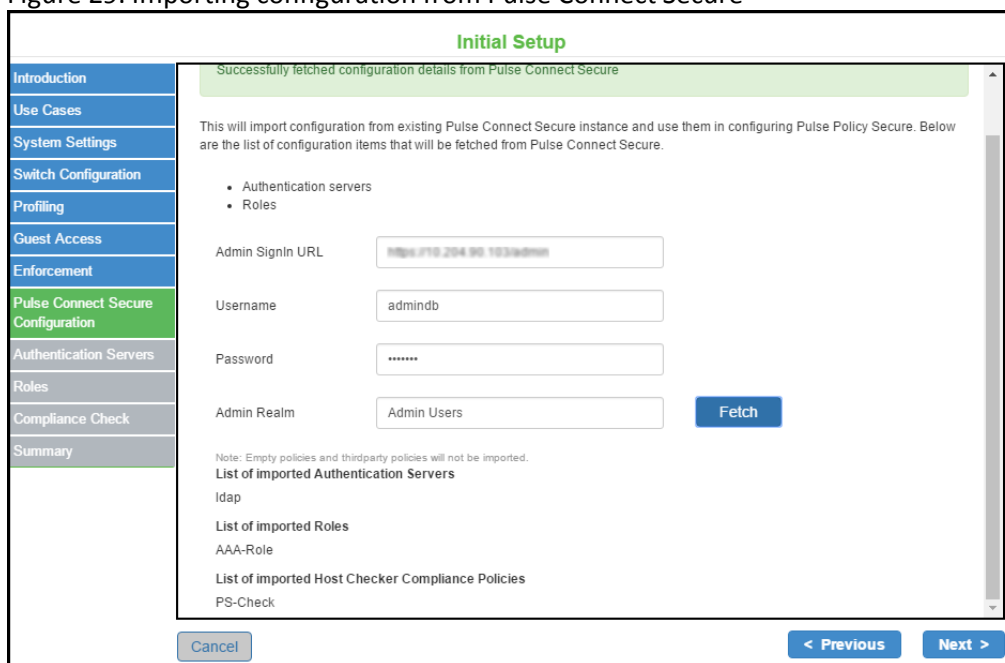
 **NOTE:** If you try to import the configuration multiple times. The configurations will be overwritten with the newer configuration.

Figure 29: Importing configuration from Pulse Connect Secure



Initial Setup

Successfully fetched configuration details from Pulse Connect Secure

This will import configuration from existing Pulse Connect Secure instance and use them in configuring Pulse Policy Secure. Below are the list of configuration items that will be fetched from Pulse Connect Secure.

- Authentication servers
- Roles

Admin SignIn URL:

Username:

Password:

Admin Realm: **Fetch**

Note: Empty policies and thirdparty policies will not be imported.

List of imported Authentication Servers

Idap

List of imported Roles

AAA-Role

List of imported Host Checker Compliance Policies

PS-Check

Cancel **< Previous** **Next >**

Authentication Server

Authentication server is used for authentication and verifying group membership. It validates the user credentials and then provides the required access. It also maps users to roles based on either Light Weight Directory Access protocol (LDAP) or Active Directory (AD) group information. The initial setup wizard supports AD and LDAP authentication servers for user authentication. LDAP is supported for device authentication based on MAC address.

To add the authentication server:

1. Select the **Server Type** (AD/LDAP).

Figure 30: Authentication Server

Initial Setup

What Authentication Servers do you have?

Authentication Servers are used for authenticating the end users logging onto the network. Select appropriate servers for authentication.

User Authentication:
This server will be used for authenticating end users

MAC Authentication:
This server will be used for authenticating devices using MAC Address
Note: Only LDAP servers can be used

List of available Servers

Add Server Type:

| AuthServer Name | AuthServer Type | Domain/HostName | |
|-----------------|------------------|--------------------|--|
| Idap | LDAP | 10.209.114.249:389 | |
| AD | ACTIVE_DIRECTORY | pcsqalab | |

Buttons: Cancel, < Previous, Next >

2. For Active Directory, enter the server name, user credentials, Kerberos realm, and domain. You can click **Test** to verify the configuration.

Figure 31: Authentication Server- AD

Initial Setup

What Authentication Servers do you have?

Authentication Servers are used for authenticating the end users logging onto the network. Select appropriate servers for authentication.

User Authentication:
This server will be used for authenticating end users

MAC Authentication:
This server will be used for authenticating devices using MAC Address
Note: Only LDAP servers can be used

List of available Servers

Add Server Type:

Active Directory

Active Directory Server Name: Username: Password:

Kerberos Realm: Domain:

| AuthServer Name | AuthServer Type | Domain/HostName |
|-----------------|-----------------|-----------------|
|-----------------|-----------------|-----------------|

Buttons: Cancel, < Previous, Next >

3. For LDAP, enter the server name, LDAP server type (Generic, AD, iPlanet, Novell eDirectory, Profiler), connection type, filter, admin DN, base DN, unique variable for filtering, group member attribute, and group base DN.

Figure 32: Authentication Server- LDAP

The screenshot shows the 'Initial Setup' page for configuring an LDAP authentication server. On the left is a navigation menu with the following items: Introduction, Use Cases, System Settings, Switch Configuration, Profiling, Guest Access, Enforcement, Pulse Connect Secure Configuration, Authentication Servers (highlighted in green), Roles, Compliance Check, and Summary. The main content area is titled 'Initial Setup' and contains the following fields:

- User Authentication:** A dropdown menu set to 'AD'. Below it, a note states: 'This server will be used for authenticating end users'.
- MAC Authentication:** A dropdown menu set to 'ldap'. Below it, a note states: 'This server will be used for authenticating devices using MAC Address' and 'Note: Only LDAP servers can be used'.
- List of available Servers:** A section with an 'Add Server Type' dropdown set to 'LDAP'.
- LDAP Server Configuration:**
 - Server Name:** 'ldap' (text input)
 - Host:** '10.204.90.216' (text input)
 - Server Type:** 'Active Directory' (dropdown menu)
 - Port:** '389' (text input)
 - Connection Type:** 'Unencrypted' (dropdown menu)
 - Filter:** 'macAddress=<USER>' (text input)
 - Admin DN:** 'cn=Administrator,cn=users,dc=ui' (text input)
 - Password:** '*****' (password input)
 - Base DN:** 'OU=MACAddresses,OU=MAC,dc=ui' (text input)
 - Group Filter:** '(&(objectClass=group)(cn=*))' (text input)
 - Group Member Attribute:** 'member' (text input)
 - Group BaseDN:** 'OU=MACGroups,OU=MAC,dc=ui' (text input)

At the bottom of the form are three buttons: 'Cancel', '< Previous', and 'Next >'.

4. Configure the required authentication server for user authentication and machine authentication.

Roles

A user role defines user session parameters (session settings and options) and personalization settings (user interface customization).



NOTE: You can reuse the roles imported from PCS and then configure the VLAN and group information.

To add a role name:

1. Enter the role name and VLAN information.
2. Select the **AD group** or **LDAP group**.
Note: If the AD or LDAP group information is not available you must add the group information manually.
3. Click Add (+) icon.
4. Enter the remediation role and the VLAN information.
5. Enter the role name and the VLAN information for unmanaged devices.

Figure 33: Authentication Server- LDAP

Initial Setup

What Roles do you have?

User Roles defines user session parameters(session settings and options) and personalisation settings(User Interface customization)


| Role Name | VLAN | AD Group | LDAP Group | |
|---|-----------------------------------|--|--|---|
| <input type="text" value="Enter Name"/> | <input type="text" value="VLAN"/> | <input type="text" value="- Choose User Group"/> | <input type="text" value="- Choose User Group"/> | <input type="button" value="+"/> |
| Role | 65 | domain users | cameras | <input type="button" value="edit"/> <input type="button" value="delete"/> |

Remediation Role

Unmanaged Devices Role


Compliance Check

PPS offers a variety of endpoint host checks to ensure compliance, including predefined checks for third-party endpoint security software including anti-virus, firewall, anti-malware/anti-spyware applications.

 **NOTE:** You can reuse the compliance policies from PCS.


To configure PPS for endpoint compliance:

1. Enter the rule name.
2. Select the platform type- Windows, Linux, MAC.
3. Select the rule type.

 **NOTE:** Antivirus, Firewall, and Process policies are supported for Windows and MAC platforms. Process policy is supported for Linux platform.

4. To enable remediation action, select **Enable Remediation Action**.
5. Click + **Add**.

Figure 34: Compliance Check

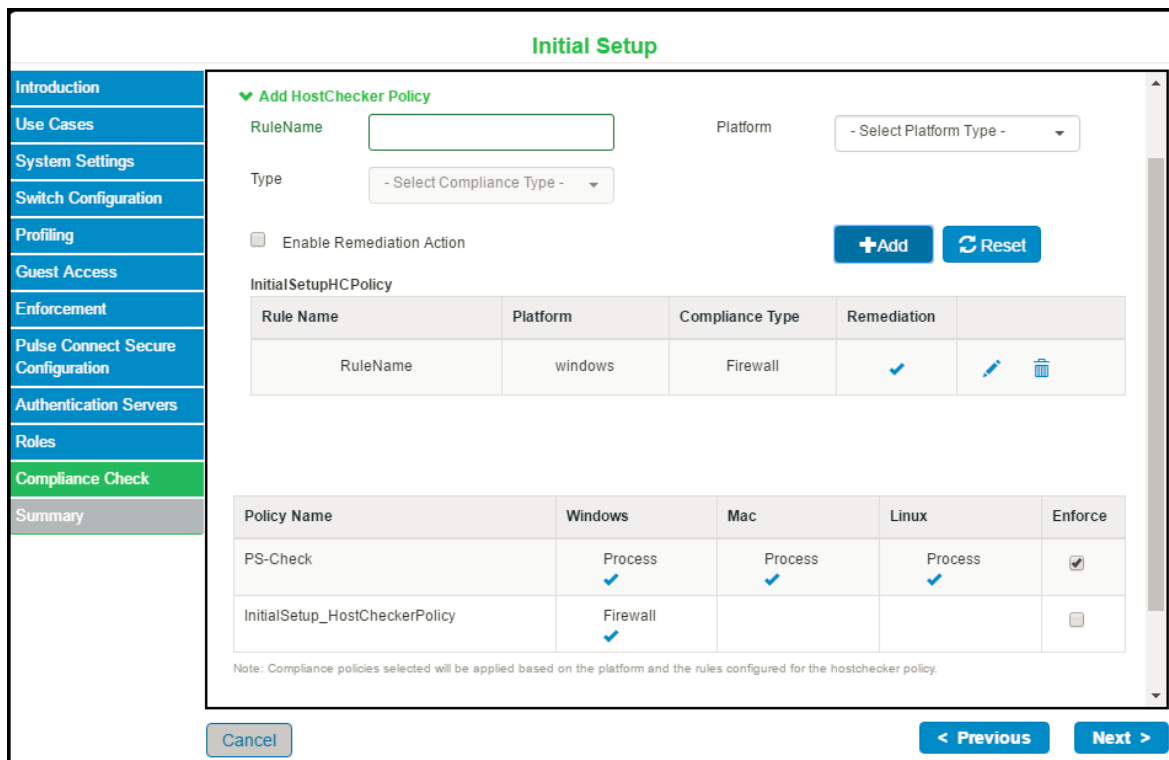

Initial Setup

Introduction
Use Cases
System Settings
Switch Configuration
Profiling
Guest Access
Enforcement
Pulse Connect Secure Configuration
Authentication Servers
Roles
Compliance Check
Summary

▼ Add HostChecker Policy

RuleName Platform

Type

☐ Enable Remediation Action +Add Reset

InitialSetupHCPolicy

| Rule Name | Platform | Compliance Type | Remediation | |
|-----------|----------|-----------------|-------------|--|
| RuleName | windows | Firewall | ✓ | |

| Policy Name | Windows | Mac | Linux | Enforce |
|--------------------------------|---------------|--------------|--------------|-------------------------------------|
| PS-Check | Process ✓ | Process ✓ | Process ✓ | <input checked="" type="checkbox"/> |
| InitialSetup_HostCheckerPolicy | Firewall ✓ | | | <input type="checkbox"/> |

Note: Compliance policies selected will be applied based on the platform and the rules configured for the hostchecker policy.

Cancel < Previous Next >

Configuring Guest Authentication

Guest access feature on PPS enables guest users to access the network through a self-registration process. The guest users self-register for network access from their device. Upon successful registration, the guest users are notified with the user credentials and other details through SMS or email.

To configure guest authentication:

1. Select **Wizards > Initial Setup > Configuration Summary**.
2. Select **Enable guest access for providing access to guest users**.

Figure 35: Initial Setup Guest Configuration

The screenshot shows the 'Initial Setup' wizard at the 'Configuration Summary' step. The left sidebar lists the steps: Introduction, Use Cases, System Settings, Switch Configuration, Guest Access, Compliance Check, and Summary. The 'Guest Access' step is currently selected. The main content area is titled 'Use cases and Features' and contains a note about configuring the profiler first. Below the note are four checkboxes: 'Enable profiling to get visibility of devices in the network', 'Enable enforcement and authentication mechanisms for the devices connecting to the network', 'Fetch configuration details from another Pulse Connect Secure server', and 'Enable guest access for providing access to guest users'. The last checkbox is checked. Below this is a 'Prerequisite' section with details for License, Switch, and Guest Authentication. At the bottom are 'Cancel', '< Previous', and 'Next >' buttons.

3. Enter the VLAN information for the guest user.

Figure 36: Initial Setup Guest Configuration

The screenshot shows the 'Initial Setup' wizard at the 'Configuration Summary' step. The left sidebar is the same as in Figure 35. The main content area is titled 'Do you want to configure Guest Access?' and contains a brief description of the feature. Below this are several configuration fields: 'Guest Users VLAN' (65), 'Create Guest Administrator Account' (checked), 'Enable Self Registration' (checked), 'Send Email to Guest Users' (checked), 'SMTP Server' (abc.xyz.net), 'Email Address' (qwr@xyz.net), 'Login' (qwerty), 'Password' (masked), 'Send SMS to Guest Users' (checked), 'Gateway' (Clickatell), 'Gateway URL' (api.clickatell.com), 'Login Name' (name), 'API Product ID' (12345), and 'Mobile No' (+91xxxxxxxxxx). At the bottom are 'Cancel', '< Previous', and 'Next >' buttons.

4. (Optional) Select **Create Guest Administrator Account** and enter the username and password.

5. (Optional) Select **Enable Self Registration**.
The SMTP and SMS configuration settings must be configured to enable guest users to create user accounts on their own.
6. (Optional) Select Send Email to Guest Users and then enter the IP address or host name of the SMTP server, email address, and log in credentials of the SMTP server.
7. (Optional) Select **Send SMS to Guest Users** and then select the SMS gateway type, gateway URL, SMS gateway log in credentials, API ID, and the mobile number of the guest user.
8. Configure the switch as described in table below.

Table 6: Add switch

| Add New Switch | |
|-----------------------------|---|
| Name | Enter a name to label the RADIUS client. You can assign any name to a RADIUS client entry, use the device's SSID or IPv4/IPv6 address to avoid confusion. |
| IP Address | Enter the IPv4/IPv6 address of the switch. |
| Make/Model | Select the make/model of the switch vendor. The make/model selection tells PPS which dictionary of RADIUS attributes to use when communicating with this client. |
| RADIUS Client Configuration | |
| IP Address Range | Enter the number of IP addresses in the IP address range for the switch/WLC, starting with the address you specified for IP Address. You can specify a range up to a maximum of 32,768 addresses. |
| Shared Secret | Enter the RADIUS shared secret. A RADIUS shared secret is a case-sensitive password used to validate communications between PPS and switch. |

Figure 37: Initial Setup Guest Configuration- Add switch

Introduction

Use Cases

System Settings

Switch Configuration

Guest Access

Compliance Check

Summary

Initial Setup

What switches do you have?

Switch can be used as an Intranet Enforcer with Pulse Policy Secure. With this solution, Pulse Policy Secure is the policy decision point, while the switch is the policy enforcement point.

▼ Add New Switch

Name

IP Address

Make/Model

10.204.88.12

10.204.88.12

Ruckus Wireless

▼ Radius Client Configuration

IP Address Range

Shared Secret

Ruckus Password

1

Validate Ruckus Server Certificate ☐

Save

Cancel

| Name | IP Address | SNMP | Radius Client |
|--------------|--------------|------|---------------|
| 10.204.88.12 | 10.204.88.12 | None | ✓ |

Cancel

< Previous

Next >

Verification and Troubleshooting

You can verify the configuration summary page for any errors during the initial setup configuration and perform the troubleshooting task based on the issue. The wizard captures the summary of the configurations before proceeding with enabling the corresponding use case on PPS. If needed you can modify the required configurations before completing the configuration.

Figure 38: Summary

Initial Setup

What is getting configured?

Usecases Selected: Profiling, Guest Access, Enforcement

Switch Settings: ProCurve Switch 2810-24G(HP)

Profiler Settings: Subnets:

Guest Access Settings: Guest VLAN: 65

Enforcement: Windows - Compliance: ON Authentication: 802.1x, SNMP
Mac - Compliance: ON Authentication: 802.1x, SNMP
Linux - Compliance: ON Authentication: 802.1x, SNMP
Android - Authentication: 802.1x
IOS - Authentication: 802.1x
VOIP - Authentication: 802.1x, MAC
Unmanaged Devices - Authentication: MAC

Authentication Servers: User Authentication Server: AD(ACTIVE DIRECTORY)
MAC Authentication Server: LDAP(LDAP)

Roles Configured: Role(65)
Remediation Role: Rem-Role(74)
Role For Unmanaged devices: Unmanaged-Roles(60)

Compliance Settings: InitialSetup_HostCheckerPolicy:

Cancel < Previous Finish >

The below figure shows the final configuration summary page. You can verify the common configuration, profiling, enforcement, guest access configuration details.

Figure 39: Configuration Summary

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance **Wizards**

Initial Setup > Initial Setup Configuration Summary

Initial Setup Configuration Summary

Profiler (Completed) Enforcement (Completed) Guest Access (Completed) End [Configure](#)

Pulse Policy Secure supports different use cases and across the various devices and platforms. Initial Setup Wizard helps in configuring below use cases

- Profiler to get the visibility of all the devices present in the network
- Enforcement for the devices connecting in the network using 802.1x, MAC Authentication and SNMP Authentication mechanisms
- Guest Access to enable guest users to login to the network along with provision of self registration for guest users

Note: It is recommended to configure the profiler first so that devices in the network are discovered. After the profiling of the network is done, wizard can be launched again to configure the enforcement policies for the discovered device types. Additionally, Guest Access functionality can also be enabled.

[Common Configuration Details](#)

[Profiling Configuration Details](#)

[Enforcement Configuration Details](#)

[Guest Access Configuration Details](#)

Layer 2 Enforcement

Layer 2 enforcement means controlling network access at the point where the user attaches to the network. In a wired network, this control is at the switch port; in a wireless network the control is at the wireless access point. The network access control is accomplished through 802.1X authentication protocol (implemented on the switch or wireless AP) in conjunction with RADIUS return attributes to control switch or AP operation such as VLAN assignment and filtering.

Using the 802.1X standard we can create a strong network perimeter defense through strong admission controls that do not allow users onto the network unless they are compliant with specified policy.

This part covers the following chapters:

- [Policy Enforcement using 802.1X](#)
- [Policy Enforcement using SNMP](#)
- [Policy Enforcement using MAC Authentication](#)
- [Policy Enforcement using 802.1X Native Supplicant](#)

Policy Enforcement using 802.1X

This chapter provides an overview of the 802.1X. It includes the following information:

- [Overview](#)
- [Benefits of 802.1X Authentication](#)
- [Deployments using 802.1X Authentication](#)

Overview

802.1X is an IEEE standard for port-based network access control. It provides an authentication mechanism for devices and users attempting to connect to wired and wireless LANs so that only authorized connections are allowed.

The basic components of 802.1X are:

- **Endpoints-** The endpoint is the device being authenticated. The supplicant is an agent running on the endpoint. For example, Pulse client, native supplicant, and non-Pulse Secure supplicant.
- **Authenticator/Switch-** The authenticator is a network device a managed switch or wireless access point that facilitates authentication by relaying credentials between the supplicant and authentication server.
- **Authentication Server–** PPS acts as an authentication server (typically a RADIUS server) and validates the credentials of the supplicant requesting access.

The 802.1X standard specifies the Extensible Authentication Protocol (EAP) as its encrypted message format for transmission between supplicant and authenticator.

Benefits of 802.1X Authentication

The following are the benefits of 802.1 authentication:

- Supports dynamic authentication policy using 802.1X, RADIUS, and RADIUS proxy.
- Supports RADIUS Change of Authorization (CoA) and RADIUS Disconnect, which allows devices to change the VLAN/ACL for the endpoint based on roles.
- Supports hybrid NAC deployment (802.1X for wireless network and SNMP for wired network).
- Supports backend third-party RADIUS servers through RADIUS proxy.
- Supports native client, pulse client, and third party supplicants.

Deployments using 802.1X Authentication

The 802.1X provides authenticated access to LAN, which applies to both wireless and wired networks. In a wireless network, the 802.1X authentication occurs after the client has associated to an access point using an 802.11 association method. The wired networks use the 802.1X standard without any 802.11 association by connecting to a port on an 802.1X enabled switch.

Using 802.1X, the user is authenticated to the network by means of user credentials, such as a password, certificate, or a token card. The keys used for data encryption are generated dynamically. The authentication is not performed by the switch, but rather by PPS as the RADIUS server. The 802.1X method uses EAP messages to perform authentication. The newer EAP protocols can dynamically generate the Wired Equivalent Privacy (WEP), Temporary Key Integrity Protocol (TKIP), or Advanced Encryption Standard (AES) keys that encrypt data between the client and the wireless access point. Dynamically created keys are more difficult to break than preconfigured keys because their lifetime is much shorter. The known cryptographic attacks against WEP can be prevented by reducing the length of time that an encryption key remains in use. The encryption keys generated using EAP protocols are generated on a per-user and per-session basis. The keys are not shared among users, as they must be with preconfigured keys or preshared passphrases.


This topic covers the following deployment scenarios:

- [Deployment of PPS with External Authentication Server](#)
- [Deployment of PPS as a RADIUS Server](#)
- [Deployment of PPS as a RADIUS Proxy](#)

Deployment of PPS with External Authentication Server

It is difficult or impossible to maintain a centralized database of users in environments with many distributed users. You can easily pair PPS with an organization's other identity databases, such as LDAP and Active Directory to leverage existing credentials. PPS RADIUS server can forward authentication requests from a network access device (NAD) to an external Authentication server.

Figure 40: PPS Deployment using 802.1X Authentication

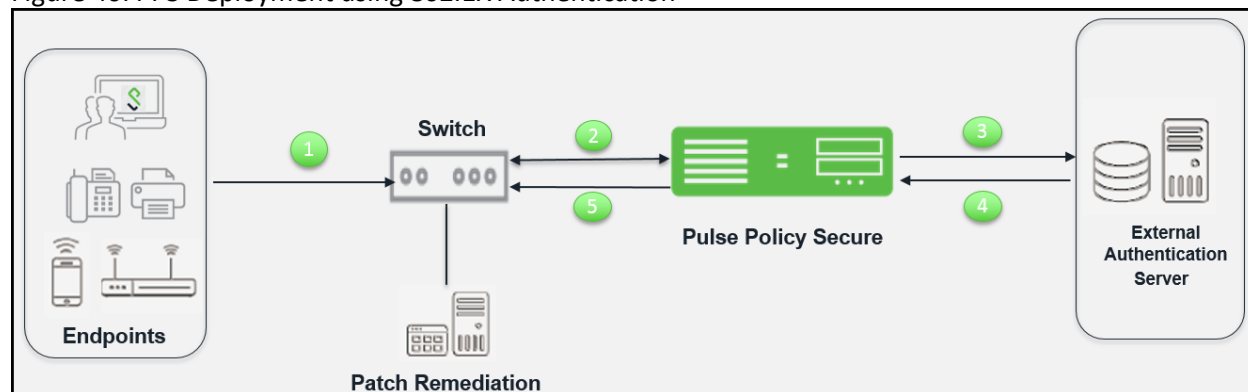

The authentication process is described below:

1. The endpoint connects to an 802.1X enabled switch/WLC. The endpoint exchange EAP messages using 802.1X, which contain information about user credentials and the health of the endpoint.
2. The switch receives the request and starts the RADIUS authentication with PPS.
3. PPS receives the request and then converts the request to the required format for the external authentication server.

4. If PPS successfully authenticates the user, it sends a message to the switch/WLC to allow the endpoint access to the network. The type of access granted depends on the user's identity and the health of the endpoint. For example, if the endpoint meets the requirements of all Host Checker policies, the user can have full network access. If the endpoint does not meet some security requirements, the user can be granted access to a remediation server. If the endpoint is using Pulse Client as its 802.1X supplicant, PPS and the endpoint exchange messages as necessary throughout a session (for example, to monitor the endpoint's security compliance). If the endpoint is using a native supplicant, Host Checker is not supported.
5. If the endpoint is using Pulse Client, and the endpoint meets the requirements of all Host Checker policies then PPS allows user to access the protected resources.

The user's identity and the endpoint health assessment are used to determine which VLAN to use for the switch port that the endpoint is connected to. Typically, if the endpoint does not meet minimum criteria for health assessment as defined by the administrator, the endpoint will be placed on a restricted VLAN which allows access to servers which can aid in remediating the endpoint.

You define VLAN policies for endpoints that access switches using 802.1X. After an authenticated endpoint, has been mapped to a set of roles, the VLAN policies are evaluated and the VLAN information is communicated to the switch through RADIUS attributes. RADIUS attributes vary by make and model of switch. You specify the make and model when configuring a RADIUS client on PPS.


In addition to authenticating endpoints with 802.1X PPS RADIUS server can be used to authenticate 802.1X IP phones, switches.

Deployment of PPS as a RADIUS Server

PPS provides the RADIUS server functionality for layer 2 enforcement. Using the PPS internal RADIUS server, you can provision 802.1X authentication for endpoints. Layer 2 authentication and enforcement is used to control network access policies at the edge of the network using an 802.1X enabled switch or access point.

A RADIUS license allows you to use the PPS series device as a RADIUS appliance. To apply your initial license or to upgrade your license, select System > Configuration > Licensing in the left navigation pane.

Figure 41: PPS Deployment as a RADIUS Server

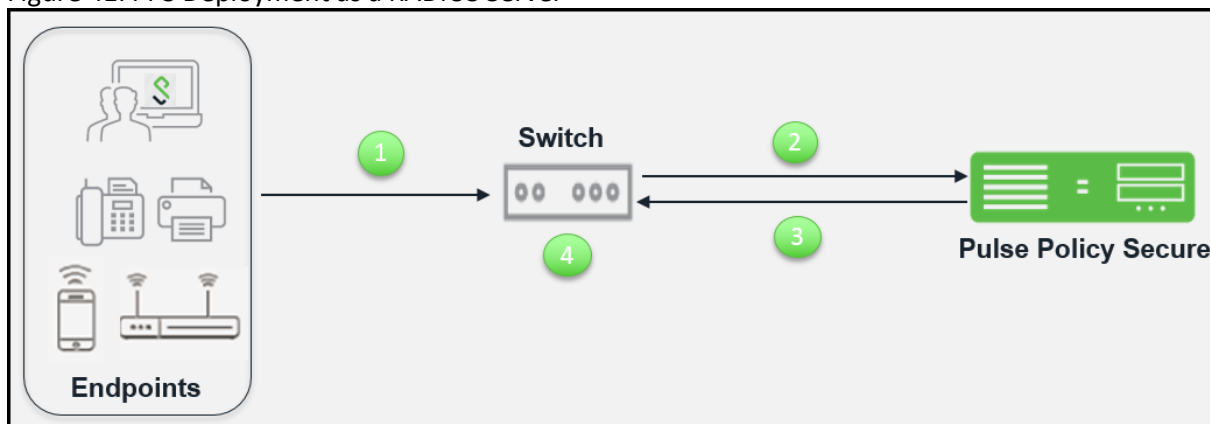

The authentication process is described below:

1. The endpoints connect to switch over 802.1X using EAP protocol.
2. The switch receives the request and starts the RADIUS authentication with PPS.
3. PPS integrated RADIUS server receives the request and performs the authentication and then returns the attributes for controlling user access.
4. The switch uses the returned attributes to control the user access privileges on the port or service set identifier (SSID).

The following RADIUS configuration options are available only with RADIUS license.

- Host Checker Custom: Statement of Health policy- When you apply both a RADIUS license and an MS-NAP license, you can configure an Endpoint Security policy by way of the Host Checker policy. If you have only a RADIUS license, the Endpoint Security menu is not available.
- RADIUS User Count- This feature allows you to create RADIUS users. To view the number of RADIUS users, select System > Status. The number of RADIUS users does not count against the concurrent user license if you have both a RADIUS license and a user license installed.

The following features are not available with RADIUS only license:


- IF-MAP Federation
- Infranet Enforcer
- Host Enforcer
- Endpoint Security
- Push Configuration
- SiteMinder and MDM Authentication servers
- Sign-in Notifications
- Sensors
- Agent and Agentless tabs do not appear on the Overview page.
- Enterprise onboarding

Deployment of PPS as a RADIUS Proxy

In environments with many distributed users, it can be difficult or impossible to maintain a centralized database of users. Using RADIUS proxy, PPS RADIUS server can forward authentication requests from a network access device (NAD) to an external RADIUS server.

You can configure PPS to proxy RADIUS inner or outer authentication to an external RADIUS server. Proxying inner or outer authentication gives you the flexibility to direct requests for authentication through whatever realm is most appropriate for each user.

Figure 42: PPS Deployment as a RADIUS Proxy

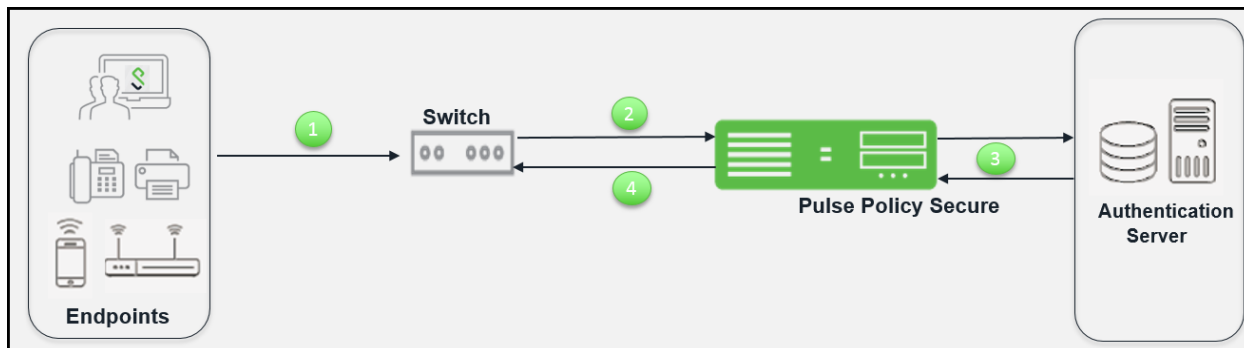

The authentication process when using an external authentication server is described below:

1. The endpoints connect to switch.
2. The switch receives the request and starts the RADIUS authentication with PPS.
3. PPS receives the request and then forms another RADIUS request and forwards it to the external RADIUS server.
4. If authentication succeeds the PPS assigns the user the appropriate roles, and then passes the associated RADIUS attributes back to the access device.

With RADIUS proxy enabled, PPS acts as a simple relay agent and does not participate in the accounting and authorization process. You must configure all attributes for authenticator configuration on the external RADIUS server.

You can specify the outer or inner proxy as follows:

- Outer proxy requires that the external RADIUS server presents a certificate to the supplicant. The result is a secure tunnel between the supplicant and the external server.
- Inner proxy uses the PPS certificate to establish the secured tunnel, but relays the supplicant authentication data to the external RADIUS server. The secured tunnel is established between the supplicant and PPS. The data passes between the PPS and the external RADIUS server in clear text.

Configuring 802.1X on PPS

This section covers the configuration for 802.1X authentication. It involves configuring the various elements necessary for performing 802.1X authentication between the endpoint and PPS.

The following procedure lists the configuration steps:

- [Configuring Authentication Protocol Set](#)
- [Creating and modifying the sign-in policy](#)
- [Configuring a Location Group](#)
- [Configuring the network access device as a RADIUS Client](#)
- [Configuring Role and Role Mapping](#)
- [Configuring RADIUS Attributes Policies](#)
- [Verifying the RADIUS Dictionary](#)
- [Verifying RADIUS Vendor List](#)
- [Additional Configurations](#)

Configuring Authentication Protocol Set

Authentication protocol is a method of defining how endpoints are authenticated through PPS. PPS supports a set of authentication protocols. You can configure sign-in policy with combination of authentication protocol set and associate them with realms to determine how endpoints connect and authenticate using 802.1X. The PPS supports a variety of EAP and non-EAP authentication methods to allow you to determine how endpoints authenticate. For example, you can use the default EAP methods with Pulse client, or you can use different methods to permit authentication with different endpoints, such as non-Pulse Secure 802.1X supplicants and IP phones.

For PPS agents (Pulse, the Java agent, and Host Checker agentless access), authentication is supported through EAP-TTLS and EAP-PEAP as the outer protocols and EAP-JUAC (a proprietary protocol) by default.

EAP-TTLS first authenticates the server and sets up an encrypted Transport Layer Security (TLS) tunnel for secure transport of authentication information. Within the TLS tunnel, a second authentication protocol is used to authenticate the user. EAP-TTLS is the “outer” authentication, while the second protocol is the “inner” authentication.

The following is a list of supported EAP types:

- EAP-PEAP uses server-side public key certificates to authenticate clients with server. The PEAP authentication creates an encrypted SSL / TLS tunnel between the client and the authentication server. The exchange of information is encrypted and stored in the tunnel ensuring the user credentials are kept secure.
- EAP-JUAC is a proprietary protocol that enables host check, firewall provisioning, and IP address restrictions.
- EAP-TTLS uses server-side certificates to set up authentication between clients and servers.
- EAP-SoH allows the endpoint to exchange state of health messages with PPS to assess endpoint qualification for passing Statement of Health rules in a Host Checker policy. It is used only with Windows native 802.1X supplicants.
- EAP-Generic Token Card (EAP-GTC) supports the use of authentication tokens.
- PAP supports the exchange of plaintext passwords.
- CHAP support includes MS-CHAP, MS-CHAPv2, EAP-Message Digest 5 (EAP-MD5), and EAP-MS-CHAPv2
- Password Authentication Protocol (PAP) with plain-text passwords.
- EAP Transport Layer Security (EAP-TLS) allows non-Pulse Secure 802.1X supplicants to authenticate through a certificate authentication server.

PPS supports these authentication protocols as non-tunneled authentication methods as well as inner authentication methods, depending on the policies that you configure. You can configure protocol sets with or without EAP, with the exception of MD5, EAP-GTC, EAP-TLS, and EAP-SOH, which are supported only for EAP. To use EAP-SOH, you must use EAP-PEAP as an outer authentication protocol.

If you use a protocol set with inner and outer authentication, both protocols must match the inner and outer protocol that is configured for the endpoint.

PPS uses two default preconfigured protocol sets.

- 802.1X protocol set that is used by default with PPS agents.
- 802.1X-phones protocol set that is used for authenticating 802.1X IP phones.

Third-party supplicants cannot use the preconfigured 802.1X protocol set. For example, some switches can request authentication using CHAP, or EAP-MD5-Challenge. For such devices, you must define an authentication protocol set.

The below table lists the available authentication protocol combinations and provides usage recommendations for various combinations.

Table7: Authentication Protocols

| Outer | Inner | Basis | Usage recommendation |
|-----------------------|-------------------|------------------|--|
| PAP [1] | n/a | Password | Local auth server, Active Directory, LDAP [2] Cisco switch authentication |
| CHAP [1] | n/a | Password | Captive portal or authentication of switch administrators for HP ProCurve switch |
| EAP-MD5-Challenge [1] | n/a | Password | Captive portal or authentication of switch administrators, some IP phones |
| MS-CHAP [1] | n/a | Password | - |
| MS-CHAP-V2 [1] | n/a | Password | - |
| EAP-MS-CHAP-V2 [1] | n/a | Password | - |
| EAP-GTC [1] | n/a | Token | - |
| EAP-TLS | n/a | User Certificate | 802.1X supplicant, some IP phones |
| EAP-PEAP | | | Non-Pulse Secure 802.1X supplicant |
| | EAP-MS-CHAP-V2 | Password | Local or Active Directory server |
| | EAP-GTC | Token | 802.1X supplicant |
| | EAP-TLS | User Certificate | - |
| | EAP-JUAC | Various | Pulse Client |
| | EAP-SOH | System Health | Windows supplicant with Statement of Health Host Checker policy |
| EAP-TTLS | | | Pulse Client, other supplicant |
| | PAP | | LDAP authentication server |
| | CHAP | | - |
| | EAP-MD5-Challenge | | - |
| | MS-CHAP | | - |
| | MS-CHAP-V2 | | - |
| | EAP-MS-CHAP-V2 | | Local or Active Directory server |
| | EAP-GTC | | 802.1X supplicant |
| | EAP-JUAC | | Pulse Client |

The following additional information is intended to help you understand the protocols that have been implemented for our 802.1x solution:

- Pulse always uses EAP-TTLS/EAP-JUAC.
- EAP-TTLS, EAP-PEAP, and EAP-TLS are based on TLS and therefore secure. We recommend protecting other protocols by putting them into an EAP-TTLS or EAP-PEAP tunnel, if the supplicant supports one of these tunnels.
- With LDAP, there are 3 protocol possibilities:
 - If the LDAP server is also an Active Directory server, configure the server on PPS as an Active Directory server, not as an LDAP server. On PPS, PEAP-MS-CHAP-V2 is enabled by default. You can also enable MS-CHAP and MS-CHAP-V2 if necessary.

- If passwords in the LDAP server are stored irreversibly hashed, CHAP family protocols will not work, only PAP and TTLS-PAP will work. On PPS TTLS-PAP is enabled by default. You can enable PAP if required, but this is the least secure protocol.
- Some LDAP servers allow you to store the passwords in clear text or reversibly encrypted. In this situation, all the CHAP family protocols will work.

During RADIUS authentication, if a user's password has expired then the user is prompted to change the password if the protocol is:

- EAP-MSChapV2
- PEAP with EAP-MSChapV2
- TTLS with EAP-MSChapV2
- TTLS with Non-EAP MSChapV2
- Plain Non-EAP MSChapV2
- EAP-JUAC

The following table summarizes additional usage guidelines.

- Password- The protocols that support password changing on PPS include JUAC, MS-CHAP-V2, EAP-MS-CHAP-V2, and EAP-GTC. If you use CHAP, PAP or MS-CHAP for a Layer 2 connection (for example, with an Active Directory Server), password changing is not supported through PPS.
- Expired passwords- You can direct users with expired passwords to a Web interface to access a default VLAN to allow users to log in with a clear text password and change their password.
- Password restrictions- Password restrictions (for example, password length) cannot be enforced if you use the CHAP family protocols for authentication.
- Default protocols for Pulse- The 802.1X protocol set is used by default for endpoints that connects with Pulse. If you disable the JUAC protocol (a proprietary protocol) on Pulse Client or on PPS, Pulse Client have only the features of a standard non-Pulse Secure supplicant.

To configure an authentication protocol set:

1. Select Authentication > Signing In > Authentication Protocols.



NOTE:

- The default 802.1X protocol set is configured with EAP-TTLS and EAP-PEAP as primary (outer) authentication protocols.
 - EAP-JUAC, EAP-MSCHAP- V2 are used as inner authentication for EAP-PEAP.
 - EAP-JUAC, PAP, MSCHAP- V2, EAP-MS-CHAP-V2, or EAP-Generic Token Card are used as inner authentication for EAP-TTLS.
2. To create a new protocol set, click New Authentication Protocol, or select the check box beside the existing 802.1X protocol set and click Duplicate.

Figure 43: Authentication Protocol Set Configuration Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Signing In > Authentication Protocols > New Authentication Protocol

New Authentication Protocol

Name: Label to reference this Authentication Protocol

Description:

Authentication Protocol

Specify authentication protocols in preferred order

Available protocols: CHAP, EAP-GenericTokenCard, EAP-MD5-Challenge, EAP-TLS, MS-CHAP

Selected protocols: EAP-TTLS, EAP-PEAP

PEAP

If EAP-PEAP is selected in authentication protocol and is not used for inner proxy, specify inner authentication protocols in preferred order

Available protocols: EAP-GenericTokenCard, EAP-SCH, EAP-TLS

Selected protocols: EAP-JUAC, EAP-MS-CHAP-V2

TTLS

If EAP-TTLS is selected in authentication protocol and is not used for inner proxy, specify inner authentication protocols in preferred order

Available protocols: CHAP, EAP-MD5-Challenge, MS-CHAP

Selected protocols: EAP-JUAC, PAP, MS-CHAP-V2, EAP-MS-CHAP-V2, EAP-GenericTokenCard

[Save Changes](#)

3. Enter a name, and optionally a description for the new authentication protocol set. You select the protocol set by name when you create a sign-in policy.
 4. Under Authentication Protocol, select authentication protocol(s) from the Available Protocol list. Click Add.
 5. For non-tunneled protocols, create an authentication protocol set, which includes CHAP, PAP or EAP-MD5 Challenge.
 6. If you select EAP-PEAP as the main authentication protocol, under PEAP select an inner authentication protocol from the Available Protocol list. Click Add.
 7. If you select EAP-TTLS as the main authentication protocol, under TTLS select an inner authentication protocol from the Available Protocol list. Click Add.
- Note: If you are using inner RADIUS proxy, do not select an inner protocol with EAP-PEAP or EAP-TTLS.
8. Click Save Changes to save your selections. When you configure a sign-in policy, you associate this authentication protocol set with an authentication realm.

Creating and modifying the sign-in policy

Sign-in policies define both the URLs that users and administrators use to access the network and to view the sign-in pages. PPS has two types of sign-in policies—one for users and one for administrators. When you configure sign-in policies, you associate realms, sign-in pages, and URLs that are provided for users when they first log in.

To modify the authentication protocol set used by a specific authentication realm:

1. Select **Authentication > Signing In > Sign-In Policies** and click **New URL**.

Figure 44: Sign-in Policy Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Signing In > Sign-In Policies > New Sign-In Policy

New Sign-In Policy

User type: ☒ Users ☐ Administrators

Sign-in URL: Format: -host[:path/] Use * as wildcard in the beginning of the host name.

Description:

Sign-in page: To create or manage pages, see [Sign-In pages](#).

Authentication realms

Specify what realms will be available when signing in.

| Available realms | Authentication protocol set | |
|--|---|------------------------------------|
| <input type="text" value="Cert Auth"/> | <input type="text" value="- Not applicable -"/> | <input type="button" value="Add"/> |

If more than one realm appears above, Odyssey Access Client or the Policy Secure sign-in page will ask the user to choose. Other endpoints cannot choose a realm; the Policy Secure will assign the first suitable realm from the list. If no realms appear above, sign-in will fail.

☐ **User may specify the realm name as a username suffix**
When this option is selected, the username suffix will be used to specify a realm.

☐ **Remove realm suffix before passing to authentication server**
When this option is selected, the username suffix will be stripped from the username prior to authenticating with an authentication server.

☒ **Fail if suffix does not match any of the realms**
When this option is selected, the user should provide one of the realms as suffix. If not, the user will be denied sign-in.

2. Under Authentication realm, add a new realm or modify an existing realm.
3. Select the desired authentication protocol set.
4. Click **Save Changes**.

Configuring a Location Group

Location groups let you organize or logically group network access devices by associating the devices with specific sign-in policies. Sign-in policies provide a way to define and direct independent access control policies with the network. For example, you can create location group policies to logically group the switch/WLC in each building at a corporate campus. You can also use location group policies to specify a special realm for MAC address authentication.

To configure a location group:

1. Create a sign-in policy to associate with the location group.
2. Select Endpoint Policy > Network Access > Location Group.

Figure 45: Location Group Configuration Page

The screenshot shows the 'New Location Group' configuration page in the Pulse Secure interface. The breadcrumb trail is 'Network Access > Location Group > New Location Group'. The page title is 'New Location Group'. Under the 'Location Group' section, there are four fields: 'Name' (required, with a hint 'Label to reference this Location Group'), 'Description', 'Sign-in Policy' (set to 'sguestadmin', with a hint 'To manage policies, see the Sign-In Policies'), and 'MAC Authentication Realm' (set to '(none)', with a hint 'To manage realms, see the MAC Address Realms'). A 'Save Changes' button is at the bottom left. A note at the bottom left states '* indicates required field'.

3. On the New Location Group page, enter a name to label this location group and optionally a Description.
4. For Sign-in Policy, select the sign-in policy associate with the location group.
5. Click Save Changes.



NOTE: Location groups allows you to block Layer 2 endpoints in specific locations from using particular authentication protocols, realms, and roles. For example, you can block endpoints in unsecure locations from accessing sensitive roles. However, RADIUS clients should not be placed in insecure locations. To ensure that RADIUS clients are not compromised and do not violate these policies, all the network RADIUS clients should be securely protected.

Configuring the network access device as a RADIUS Client

A RADIUS client policy specifies the information required for an 802.1X network access device to connect as a RADIUS client of the PPS.

When you select the device's make and model in a RADIUS client policy, you are selecting a dictionary file that contains the vendor-specific attributes (VSAs) for that device. Whenever PPS receives a RADIUS packet from that device, it consults the dictionary file for any nonstandard attributes that it encounters in the packet. If you do not know the make and model of a device, you can use the standard RADIUS attributes by choosing the Standard RADIUS setting in a RADIUS client policy.

In addition to the configuration on PPS, you must configure the NAD with information about PPS, including:

- IP address
- Shared secret specified in the RADIUS client policy for the device

To configure a RADIUS client:

1. Select Endpoint Policy > Network Access > RADIUS Client.
2. Click New RADIUS Client.

Figure 46: RADIUS Client Configuration Page

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

▼ RADIUS Client

✓ Cisco WLC 10.204.88.244 successfully updated.

* Name: Cisco WLC 10.204.88.244 Label to reference this RADIUS Client.

Description:

* IP Address: 10.204.88.244 IP Address of this RADIUS Client.

* IP Address Range: 1 Number of IP Addresses for this RADIUS Client

* Shared Secret: ***** RADIUS shared secret

Key Wrap ☒ Key Wrap (Support for RFC 6218)

* Key Wrap Format: ASCII Key Wrap Format

* Key Encryption Key(KEK): ***** Key Encryption Key(KEK), size should be 16 bytes

* Message Authentication Code Key(MACK): ***** Message Authentication Code key (MACK), size should be 16 bytes to 64 bytes


* Make/Model: Airespace To manage make/model, see the [RADIUS Vendor](#)

* Location Group: Default To manage groups, see the [Location Group](#)

▼ Dynamic Authorization Support

Support Disconnect Messages ☒ Disconnect Message Support

3. On the RADIUS Client page, enter a name to label the RADIUS client. You can assign any name to a RADIUS client entry, use the device's SSID or IPv4/IPv6 address to avoid confusion.
4. (Optional) Enter a purpose or description of the configuration so that other users are aware of it.
5. Enter the IPv4/IPv6 address of the switch.

 **Note:** If you specify the Switch Address as IPV6, PPS will allow Pulse Client to connect only using Client's IPV6 address in 802.1x Connection Type.
6. (Optional) For IP Address Range, enter the number of IP addresses in the IP address range for the switch/WLC, starting with the address you specified for IP Address. You can specify a range up to a maximum of 32,768 addresses.
7. For Shared Secret, enter the RADIUS shared secret. A RADIUS shared secret is a case-sensitive password used to validate communications between PPS and NAD. PPS supports shared secrets of up to 127 alphanumeric characters, including spaces and the following special characters:
~!@#\$%^&*()_+|=~'{}[]~<>?/.,

8. For Make/Model, select the make and model of the NAD. The make/model selection tells PPS which dictionary of RADIUS attributes to use when communicating with this client.
Note that **Ruckus Request Password** needs to be configured only for **SmartZone Guest Access**.
9. (Support for RFC 6218: Cisco/Airespace Switches). If you are configuring a new RADIUS authentication server and want to enable AES key wrap, which makes the shared secret between the controller and the RADIUS server more secure, follow these steps:
 - a. Enable the Key Wrap checkbox.
 - b. From the Key Wrap Format drop-down list, choose ASCII or HEX to specify the format of the AES key wrap keys: Key Encryption Key (KEK) and Message Authentication Code Key (MACK)
 - c. Enter the 16-byte KEK used for encrypting the key generated by the server
 - d. Enter the 16-64 bytes MACK used for authenticating the messages.

Note: AES key wrap is designed for Federal Information Processing Standards (FIPS) customers and requires a key-wrap compliant RADIUS authentication server.

10. For Location Group, select the location group to use with this NAD.
11. Under **Dynamic Authorization support**, Select the Support Disconnect Messages check box to send disconnect messages to supplicants if access is no longer authorized. If this check box is selected, a disconnect request is sent to the NAD any time a session is deleted. PPS can also send disconnect messages upon a role event that includes a VLAN change or a change in RADIUS attributes.
12. Select **Support CoA Messages** to enable CoA messages and disconnect messages support for the client. Ensure that Pulse Client is configured with EAP-JUAC in EAP-TTLS inner protocol as most preferred protocol.
RADIUS CoA feature provides a mechanism to change the attributes of an authentication, authorization, and accounting (AAA) session after it is authenticated. Using the existing session, RADIUS CoA allows devices to change the VLAN/ACL for the endpoint based on roles. CoA works on role mapping associated with every user. As the device state changes, the user is put in to various roles based on the Host Checker assessment or compliance check. During the dynamic assessment, CoA requests such as filter-id or any other return attributes that suites the role is sent to the NAD to provide the required access for the device. PPS receives CoA-NAK request if the NAD is not able to apply filter-id or any other return attributes.
13. (Optional) Enter a new Dynamic Authorization Port (Default port is 3799). The default port might vary depending on the manufacturer. NAD listens to UDP port to receive RADIUS CoA messages from PPS.
14. Click Save Changes.

Configuring Role and Role Mapping

PPS access management framework evaluates authentication requests to match endpoints to roles. You must configure user roles for the various types of endpoints authenticated.

To create a user role:

1. Select Users > User Roles.
2. Click New Role.
3. Complete the name and description configuration and then save the configuration.

Figure 47: User Role General Configuration

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Roles > dotx > General > Overview

Overview

General Agent Agentless

Overview Restrictions Session Options UI Options

Name: dotx

Description:

Save Changes

Options

If these settings are not specified by any roles assigned to the user, the settings specified in Default Options will be used.

☒ Session Options (E:di)

☒ UI Options (E:di)

☐ Enable Guest User Account Management Rights

Save Changes

* indicates required field

4. Click Agent and deselect agent options and then save the configuration.

Figure 48: User Role Agent Configuration

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Roles > Users > Agent > General

General Agent Agentless

General Copy Settings

Options

☐ Install Agent for this role

☐ Enable Host Enforcer

Note (Copyless Access Client only): By default, if you enable Host Enforcer on a role, all traffic is blocked for users mapped to this role. Make sure you create Host Enforcer policies on the "Resource Policies/Host Enforcer" page to allow particular traffic for this role. Host Enforcer policies that apply to this role: Access control

Session scripts

Windows: Session start script
This script is executed after the session has started.
Script Location:

Windows: Session end script
This script is executed after the session has ended.
Script Location:

Save Changes

5. Click Agentless and enable agentless access and then save the configuration.

Figure 49: User Role Agentless Configuration

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Roles > Users > Agentless

General Agent Agentless

Options

☒ Enable Agentless Access for this role

☐ Disable use of AJAX for heartbeats

☐ Hide the Agentless page after Captive Portal redirect (with this option, the browser splash page will not appear after Captive Portal authentication. As a result, heartbeats will not be sent and the session will timeout unless option Allow VPN Through Firewall is enabled.)

Save Changes

Role mapping rules define how endpoints are assigned to roles.

To configure the role mapping rules for User Realms:

1. Select **Users > User Realm**.
2. Click **New** to display the User Realm configuration page and create a user realm.
3. Click the **Role Mapping** tab to display the role mapping configuration page for the realm.
4. On the role mapping configuration page, click **New Rule** to display the role mapping rule configuration page.

Figure 50: Role Mapping

- a. (Optional) For Name, enter a name to label this role mapping rule.
 - b. Select the rule from the Rule based list and provide the appropriate details.
 - c. Select the appropriate role and click **Add**.
5. Click **Save Changes** to save the configuration.

Configuring RADIUS Attributes Policies

This section describes the configuration information for RADIUS return attributes policy that is applied on switch, request attribute policy, which can be used along with sign-in policies for realm selection, policy realm restrictions, and authentication/accounting reporting for RADIUS authentication events.

The following procedure lists the configuration information for RADIUS attributes:

- [Configuring RADIUS Return Attributes](#)
- [Configuring RADIUS Request Attribute Policies](#)
- [Configuring a RADIUS Request Policy Realm Restriction](#)
- [Configuring RADIUS Attribute Logging](#)
- [Verifying the RADIUS Request Attribute Policy Configuration](#)

Configuring RADIUS Return Attributes

RADIUS attributes policies sends the return list of attributes to an 802.1X switch. For example, you can specify which VLAN endpoints must be used to access the network. You can also configure other functions on a NAD's port based on the role assigned to the user who is currently using that port. For example, a Switch might let you use return list of attributes to configure Quality-of-Service (QoS) functions (Bandwidth or Priority) on the device's port based on the current user's role.

A return list is a set of attributes that PPS returns to the NAD after authentication. The return list usually provides additional parameters that the NAD needs to complete the connection. Return list attributes are authorization configuration parameters.

In the RADIUS attributes policy, you can select RADIUS attributes by name from a predefined list. For each attribute, you specify values using strings or numbers. By default, PPS sends a session timeout value on all RADIUS accepts that is equal to the timeout value of the configured session length. You can bypass the default timeout.

To configure a RADIUS attributes policy:

1. Select **Endpoint Policy > Network Access > RADIUS Attributes**.
2. Click **New Policy**.

Figure 51: RADIUS Attribute Policy Configuration Page

Full Access Policy

Name: Full Access Policy

Description:

Location Group:

Specify the Location Group for which this policy applies.

Available Location Groups: Default, Guest, Cert Auth, Guest Wired, HP Test Location

Selected Location Groups: Cisco Test Location

Selected Radius Clients:

Below list is populated dynamically based on the selected Location Groups

| Vendor (Manufacturer) | Client Details |
|-----------------------|----------------|
| Cisco Systems | Cisco 3850 |

Access Control Policy Settings:

Select below option to configure the access level for the device/user connecting to the network.

☐ Provide Full Access (Open Port)

☒ Control the Access

Access can be controlled using the VLAN ACLs and Radius Return Attribute settings below.

☒ Control using VLANs

Specify the PPS interface to which end points will connect while they are assigned to allow VLAN

☒ Automatic ☐ Internal ☐ External

☒ Control access using Access Control List (ACL) settings (Supported only for Cisco, Juniper, HP)

Specify the ACL mode for controlling the device access

☐ ACL Name

☒ ACL Rules

Specify the ACL rules that exist on the switch

Specify the ACL rules to be applied on the switch

| Protocol | Destination IP / Network | Destination Port | Action |
|----------|--------------------------|------------------|--------|
| ip | | | permit |
| tcp | 10.254.25.245 | 443 | permit |
| tcp | 10.254.25.245 | 443 | deny |

☒ Control access using Radius Return Attributes

These attributes are sent to switch for controlling the access

| Return Attribute | Radius Auth Server Attribute Value | Auth Server Catalog Attribute Value | Value |
|------------------|------------------------------------|-------------------------------------|-----------|
| Filter-Id | -none- | -none- | |
| Filter-Id | -none- | -none- | PERMITALL |

☒ Add Session-Timeout attribute

Specify the action that needs to be taken for the device upon expiration of session timeout on the switch

☒ Terminate the session ☐ Do not authenticate the session

Rules:

Select the rules to which this policy is applicable

☐ Any Rule ☒ Selected below ☐ Other than selected below

Available rules: Agentless_ML_role, Agentless_vem_role, Compliance Role, Eng, Guest

Selected rules: ENGSG


NOTE: Any changes to this page results in termination of existing LL connections and triggers reconnections.

Save Changes **Cancel**

3. On the New Policy page, enter a name for the policy.
4. (Optional) For Description, enter a description for the policy.
5. Under Location Group, select the location groups to which you want to apply this policy, and click Add. To apply the policy to all location groups, do not add any location groups and use the default setting (all) listed in the Selected Location Groups list. The selected Radius clients table is dynamically updated based on the selected Location Groups.
6. Under Access Control Policy Settings, select from the following options:

- a. Provide full Access (Open Port)—Check this option if you do not want to assign endpoints to a VLAN or return any RADIUS attributes. Selecting this check box disables all other RADIUS Attributes options.
- b. Control the Access—Select this option to control access using VLAN ID, ACLs and RADIUS return attributes.
 - i. Control using VLAN Id: Enter the VLAN ID (1-4094) used for assigning devices to corresponding VLAN on the switch.
 1. For Interface, specify PPS network interface that endpoints affected by this policy to use to connect to PPS:
 - a. Automatic (use configured VLANs)—Select this option to use VLAN tagging. You must also connect the internal interface to the trunk port on a VLAN-enabled Switch that sees all the VLAN traffic.
 - b. Internal— Select this option if the endpoints using this RADIUS attributes policy should use the IP address of the internal interface.
 - c. External—Select this option if the endpoints on the configured VLAN should use the IP address of the external interface.
 - ii. Control access using Access Control List (ACL) settings (Supported only for Cisco, Juniper, HP)
 1. Specify the ACL Name for controlling the device access or specify the ACL Rule to be applied on the Switch.
 2. Select the Protocol (IP/TCP/UDP/ICMP), Destination IP/Network Mask, Destination Port, Action (Permit/Deny) and Click **Add**.
 - iii. Control Access using Radius Return Attribute—Select this option to specify the return attributes you want sent to the Switch/WLC.
 - Select the return attribute to send from the attribute list. Enter the value for the selected attribute and then click Add.
 - You can specify multiple return attributes and values for this policy.
 - To rearrange the order in which you want to send the return attributes, select the check box next to the attribute name and then click the up or down arrow.
 - To delete an attribute, select the check box next to the attribute name then click Delete.
 - iv. Add Session-Timeout attribute—Select this option to specify the action (Terminate the session or reauthenticate the session) taken upon on the expiration of session timeout.
7. Under Roles, specify:
 - Any role—To apply the policy to all users.
 - Selected roles—To apply this policy only to users who are mapped to roles in the Selected roles list. You must add roles to this list from the Available roles list.
 - Roles other than those selected below—To apply this policy to all users except for those who map to the roles in the Selected roles list. You must add roles to this list from the Available roles list.
8. Click **Save Changes**.

The policy output example is shown below.

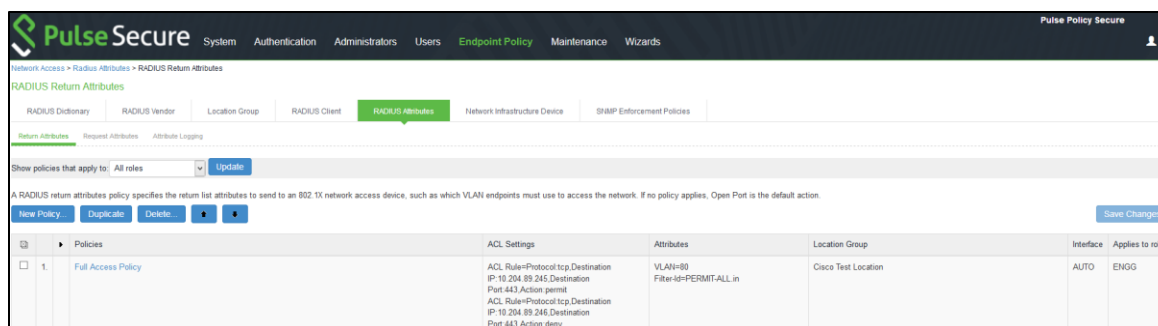

Example configuration for parsing ACL rule name (HP, Cisco, and Juniper)

| | |
|------------------------------------|---|
| PPS ACL rule configuration | tcp 10.xx.xx.x 443 Permit |
| HP 2920 expansion | HP-nas-filter-rule=permit in tcp from any to 10.xx.xx.x 443 |
| Cisco 3850 expansion | ip:inacl#100=permit tcp any host 10.xx.xx.xxx eq 443 |
| Juniper – EX 2200 expansion | Juniper-Switching-Filter='Match Destination-ip 10.xx.xx.x Ip-protocol 6 Destination-port 443 Action allow' |

Example configuration for parsing ACL name (HP, Cisco, and Juniper)

| Vendors | Cisco | HP | Juniper |
|----------------------------------|----------------------------|----------------------------|------------------|
| RADIUS VSA | filter-id | filter-id | filter-id |
| Example- RADIUS VSA value | <ACL-NAME>.in | <ACL-NAME>.in | ACL-Name |


Example: RADIUS Attribute Policies

You can configure RADIUS attributes in the PPS to send return list attributes to an 802.1X network access device. For example, you can specify which VLAN the endpoint must use to access the network. You can also configure other functions on the network devices port based on the role assignment. For example, a particular Switch might let you use return attributes to configure QoS functions (bandwidth, priority, or both) on the device port based on the user role. The example illustrates a RADIUS attribute policy to specify VLANs for endpoints, using the following steps:

- If you are using more than two VLANs, connect PPS internal interface to the trunk port on a VLAN-enabled switch that detects all the VLAN traffic.
- You can also configure a RADIUS attributes policy with the Automatic setting, which enables PPS to take advantage of VLAN tagging. When connected to a trunk port on a VLAN-enabled switch, PPS detects traffic from all VLANs.
- You can also configure routing on the network to enable endpoints to access PPS over the network. In this case, you must configure RADIUS attributes policies with the VLAN IDs you are using for endpoints, but you do not need to configure any VLAN ports on PPS.

The below figure illustrates an example of using a RADIUS attributes policy to specify VLANs for endpoints.

Figure 52: Using a RADIUS Attributes Policy to Specify VLANs for Endpoints

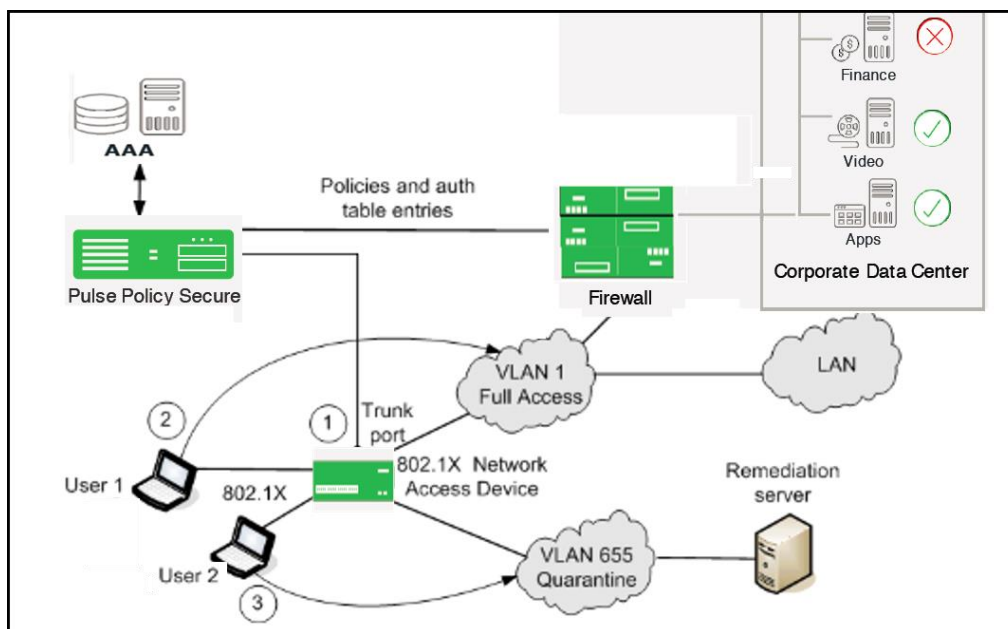

- If the user 1 is authenticated and the endpoint complies with Host Checker security policies, then the user is assigned a role on the Full Access VLAN that allows full network access and access to protected resources.
- If user 2 is authenticated but the endpoint does not comply with Host Checker security policies. The user is assigned a role on the Quarantine VLAN that only allows access to a remediation server.

Example: Configuring various RADIUS Return Attribute Policies

This section covers the following configurations:

- Configuring VLAN assignment using RADIUS return Attribute policy
- Configuring VLAN assignment along with other RADIUS return attribute policies
- Configuring filter-id using RADIUS return attribute policy
- Configuring VLAN assignment in a multi-vendor switch environment

Configuring VLAN Assignment using RADIUS return Attribute Policy

This configuration describes how to send VLAN assignment to the Switch/WLC by returning RADIUS attributes.

1. Select **Pulse Policy Secure > Network Access > RADIUS Return Attributes**
2. Under Access Control Policy Settings, select **Control the Access > Control using VLAN ID**.
3. Specify a **VLAN ID**.

Configuring VLAN Assignment along with other RADIUS return Attributes Policies

This configuration describes how to send VLAN assignment and other attributes to the Switch/WLC by returning RADIUS attributes.

1. Select **Pulse Policy Secure > Network Access > RADIUS Return Attributes**
2. Under Access Control Policy Settings, select **Control the Access > Control using VLAN ID**.
3. Specify a VLAN ID.
4. Select Control Access using Radius Return Attributes.
5. Select the attribute you want to return from the Attribute list.
6. For Value, specify an attribute value.

Configuring Filter-ID using RADIUS Return Attribute Policy

This configuration describes how to send Filter-ID to switch/WLC by using the Filter-ID return attribute.

1. Select **Endpoint Policy > Network Access > RADIUS Return Attributes**.
2. Under Access Control Policy Settings, select Control Access using Radius Return Attributes.
3. Select **Filter-ID** from the Attribute list.
4. For value, specify the policy name.
5. Configure the filter on the NAD.

Configuring VLAN Assignment in a multi-vendor Switch Environment

This configuration describes how to send VLAN assignment in a multi-vendor switch environment that includes switch/WLC from different vendors. For example, you might have one type of switch that supports RADIUS tunnel attributes only, a second type of switch that supports the Filter-ID return attribute only, and a third type of switch that supports both.

1. Select **Endpoint Policy > Network Access > Location Group** and create a location group policy for each type of NAD.
2. Create a location group policy for switches that support RADIUS tunnel attributes only.
3. Create a second location group policy for switches that support the Filter-ID return attribute only.
4. Create a third location group policy for switches that support both RADIUS tunnel attributes and the Filter-ID return attribute.
5. Select **Endpoint Policy > Network Access > RADIUS Client**. Then, follow these steps to create a RADIUS client policy for each type of NAD and associate each RADIUS client policy with the appropriate location group.
6. Create a RADIUS client policy and specify a make/model for Make/Model that supports the RADIUS tunnel attributes. Associate this policy with the location group policy for switches that support RADIUS tunnel attributes only.
7. Create a second RADIUS client policy and specify a make/model that supports the Filter-ID return attribute. Associate this policy with the location group policy for switches that support the Filter-ID return attribute only.
8. Create a third RADIUS client policy and specify a make/model that supports the both RADIUS tunnel attributes and the Filter-ID return attribute. Associate this policy with the location group policy for switches that support both RADIUS tunnel attributes and the Filter-ID return attribute.
9. Select **Endpoint Policy > Network Access > RADIUS Attributes** and then follow these steps:
 - Create a RADIUS Attributes policy that specifies only the VLAN option and a value for VLAN ID. Associate this policy with the location group policy for switches that support RADIUS tunnel attributes only.
 - Create a second RADIUS Attributes policy that specifies only the Filter-ID option from the Attribute list and a policy name for Value. Associate this policy with the location group policy for switches that support the Filter-ID return attribute only.
 - Create a third RADIUS Attributes policy that specifies both the VLAN option and a value for VLAN ID, and the Filter-ID option with a policy name for Value. Associate this policy with the location group policy for switches that support both RADIUS tunnel attributes and the Filter-ID return attribute.

Configuring RADIUS Request Attribute Policies

RADIUS request attribute policies allows you to enforce the authentication requests based on information in the RADIUS packet. RADIUS request attribute policies consist of rules. Each rule consists of one attribute and some number of values. The type of value depends on the type of rule chosen. For example, if you select a rule with the User-Name attribute, you enter a string.



NOTE:

- RADIUS request attribute policy names must be unique.
- Each request page includes guidance on what type of value is expected.

If you select a rule with the Login-IP-Host attribute, you enter an IP address and an optional netmask. The default netmask value is 255.255.255.255. The value of the attribute must fall within the specified IP address and netmask to pass the policy.

The RADIUS Access-Request attribute policy performs two tasks:

- Determines communication with the RADIUS client, indicating that the specified attributes must be sent in the Access-Request message.
- Parses the attribute-value pairs that are sent in the Access-Request message against the allow/deny rules you configure. The result of rules processing can be enforced in a realm restriction.

To configure a RADIUS Request attribute policy:

1. Select **Endpoint Policy > Network Access > RADIUS Attributes > Request Attributes** to display the configuration summary page.
2. Click **New** to display the policy configuration page.

Figure 53: RADIUS Request Attribute Policy Configuration Page

Network Access > RADIUS Request Attributes > RADIUS Request Attribute Policy

RADIUS Request Attribute Policy

Use this policy to restrict the users with these RADIUS Request Attributes

▼ **RADIUS Request Policy**

* Policy Name: Label to reference this RADIUS Request Attribute Policy

Description:

▼ **Rule Settings**

ARAP-Password To manage attributes, see the RADIUS Dictionary

| Request Attribute | Value | Allow/Deny |
|-------------------|-------|------------|
| | | |

3. Specify a policy name and description.
4. Under Rule Settings, select a RADIUS Access-Request attribute and click Add to display the rule configuration page.

Figure 54: RADIUS Request Attribute Policy Configuration Page

Network Access > RADIUS Request Attributes > RADIUS Request Attribute Policy

RADIUS Request Attribute Policy

Use this policy to restrict the users with these RADIUS Request Attributes

▼ RADIUS Request Policy

* Policy Name: Label to reference this RADIUS Request Attribute Policy.

Description:

▼ Rule Settings

ARAP-Password To manage attributes, see the RADIUS Dictionary

| Request Attribute | Value | Allow/Deny |
|-------------------|-------|------------|
| | | |

5. Complete the rule configuration as described below.

Table 8: RADIUS Request Attribute Policy – Rule Configuration Guidelines

| Settings | Guidelines |
|--------------|---|
| Add | <p>Specify values or a pattern for rule matching. The system parses wildcards and value expressions as follows:</p> <p>String—An asterisk (*) matches multiple characters and a question mark (?) matches a single character.</p> <p>Integer—An asterisk (*) matches any value. You can use a hyphen to specify a range of values, for example 1-99.</p> <p>Hexadecimal—An asterisk (*) matches any value.</p> <p>Click Add again to add more attribute values, as necessary. The result of adding multiple values is a comma-separated list.</p> |
| Allow / Deny | <p>Select Allow to permit access to matching sessions.</p> <p>Select Deny to deny access to matching sessions.</p> |

6. Save the rule configuration and return to the policy configuration page.

Figure 55: RADIUS Request Attribute Policy Configuration Page

Network Access > RADIUS Request Attributes > RADIUS Request Attribute Policy

RADIUS Request Attribute Policy

Use this policy to restrict the users with these RADIUS Request Attributes

▼ RADIUS Request Policy

* Policy Name: Label to reference this RADIUS Request Attribute Policy.

Description:

▼ Rule Settings

ARAP-Password To manage attributes, see the RADIUS Dictionary

| Request Attribute | Value | Allow/Deny |
|-------------------|-------|------------|
| NAS-Port | 30,34 | Allow |

Configuring a RADIUS Request Policy Realm Restriction

RADIUS request attribute policies can be assigned with a realm restriction. Any authentication request that comes from a realm with attribute policy requirements sends the RADIUS attributes specified in the policy, otherwise the authentication request is not granted. If multiple rules are configured in a policy, then all rules in the policy must pass otherwise the authentication fails.

If a user authentication fails based on the RADIUS request attribute policy, a user event log message is displayed. Debug logs allow the administrator to determine that a user met the policies, or indicate that the user failed a RADIUS return attribute policy.

To configure a RADIUS Request realm restriction:

1. Select **Endpoint Policy > Network Access > RADIUS Attributes > Request Attributes** to display the configuration summary page.
2. Click **New** to display the policy configuration page.
3. Complete the configuration as described in Table.
4. Click **Save**.

Figure 56: Realm Restriction Policy – RADIUS Request Policies Configuration Page

Table 9: Realm Restriction Policy – RADIUS Request Policies Configuration Guidelines

| Settings | Guidelines |
|--|---|
| Policy list | Use the Add and Remove buttons to create a policy list. The available policies are populated by the RADIUS request policies configured in the prior procedure. |
| Allow access to realm if any one of the selected policy is passed. | <p>This option determines what happens when multiple policies match.</p> <p>Select this option to allow access to the realm if any of the matching policies allow access (Ignoring any matching deny policies).</p> <p>Do not select this option if you want to deny access if one of the matching policies deny access (Ignoring any matching allow policies).</p> |

Configuring RADIUS Attribute Logging

You can configure PPS to enable or disable authentication reporting for RADIUS authentication events. Using this feature you can obtain a granular record of authentication attempts using configurable and detailed authentication reports.

You can selectively choose events to record based on both successful and unsuccessful authentication attempts. If you select an attribute to be recorded and the value is not present in the authentication request/response, an entry is made in the debug log and in the RADIUS log. You can also specify accounting log messages.

The byte limit for log entries is 2048. If a message exceeds the byte limit the last value is trimmed and an entry is made in the debug and RADIUS logs.

To configure RADIUS attribute logging:

1. Select **Endpoint Policy > Network Access > RADIUS Attributes > Attribute Logging**.

Figure 57: RADIUS Attribute Logging

2. Select **Authentication Success Log Message** and **Authentication Reject Log Message**.
3. Select the **Accounting Log Message** option to specify the accounting log messages.
4. Select **Available attributes** from the lists, and click **Add** to populate the **Selected Attributes** lists.
5. Click **Save Changes**.



NOTE:

- To include the RADIUS accounting messages in user access logs, select **System > Log/Monitoring > User Access > Settings** and enable **RADIUS Accounting Messages**.

- The order of RADIUS attributes in the user access log is based on the order you select the attributes from the RADIUS attributes logging page.

Verifying the RADIUS Request Attribute Policy Configuration

When a user authentication fails because it did not meet the requirements specified in the RADIUS request attribute policy, a user event log message is displayed that includes information about which policies the user met or failed.

To display the User Access log:

1. Select **System Log/Monitoring**.
2. Click the **User Access** tab.
3. Click the Log tab.

Verifying the RADIUS Dictionary

PPS supports many specific network access devices (NAD) by using its built-in standard RADIUS and vendor-specific, proprietary dictionary files. You can upload new dictionaries to add new RADIUS clients. PPS uses the dictionary files to store lists of RADIUS attributes, parse authentication requests, and generate responses.

To upload a new RADIUS dictionary:

1. Select Endpoint Policy > Network Access > RADIUS Dictionary to display the preconfigured dictionaries and their associated vendors.
2. Click New RADIUS dictionary.

Figure 58: RADIUS Dictionary

The screenshot shows the 'New RADIUS Dictionary' page in the Pulse Secure web interface. The breadcrumb trail is 'Network Access > RADIUS Dictionary > New RADIUS Dictionary'. The page title is 'New RADIUS Dictionary'. Below the title, there is a section for 'RADIUS Dictionary' with three form fields: 'Name' (required, with a label 'Label to reference the RADIUS Dictionary'), 'Description' (optional), and 'Dictionary' (with a 'Browse' button and 'No file chosen' text). At the bottom, there is a 'Save Changes' button and a note: 'Note: Save Changes will restart RADIUS service'.

3. Enter a Name and optionally a description for the new dictionary.
4. Click Browse to search for the dictionary file (.dct) on a local or connected drive, then click Save Changes. The uploaded dictionary is displayed on the main RADIUS Dictionary page, and in the Make/Model list on the RADIUS Client page.
5. Click Save Changes.



NOTE:

- You can only remove dictionaries that are not associated with a vendor.
- You can download any dictionary from the list, including preinstalled dictionaries. You can modify the downloaded dictionary and then upload it as a new make/model.


Verifying RADIUS Vendor List

RADIUS server contains a file with the list of manufacturers for the access devices, which communicate with the RADIUS server.

To verify the vendor and the associated dictionary on the RADIUS Vendor page:

1. Select **Network Access > RADIUS Vendor**.
2. Click **New RADIUS Vendor**, enter the name and then select the imported dictionary.

Figure 59: RADIUS vendor

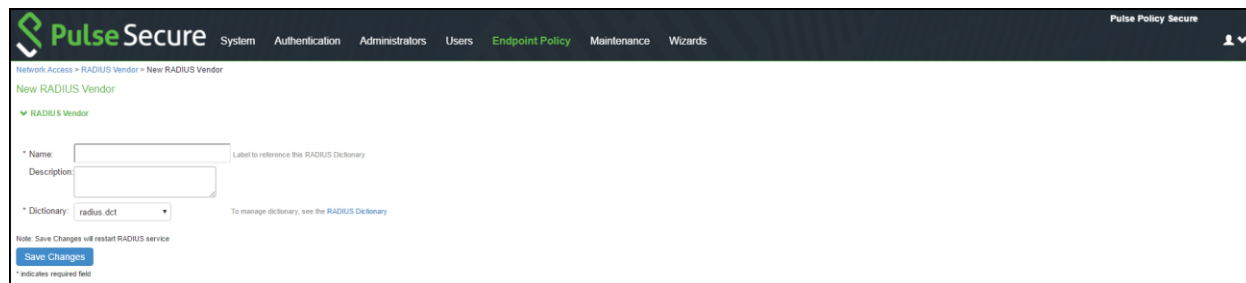

The screenshot shows the 'New RADIUS Vendor' page in the Pulse Secure interface. The breadcrumb trail is 'Network Access > RADIUS Vendor > New RADIUS Vendor'. The page title is 'New RADIUS Vendor'. Below the title, there is a section for 'RADIUS Vendor' with the following fields:

- * Name: [Text input field] Label to reference this RADIUS Dictionary.
- Description: [Text input field]
- * Dictionary: [Dropdown menu showing 'radius.dct'] To manage dictionary, see the [RADIUS Dictionary](#)

Below the fields, there is a note: 'Note: Save Changes will restart RADIUS service'. At the bottom left, there is a blue button labeled 'Save Changes'. At the bottom right, there is a small text: '* indicates required field'.

3. Click **Save Changes**.

Additional Configurations

Configuration Commands for Cisco Switch

The below example shows a sample configuration of 802.1X authentication on Cisco switch. Only sample commands are documented in this example. For more information, see Cisco documentation.

The configuration involves the following:

1. Configuring PPS server as a RADIUS server in configuration mode.
2. Configuring 802.1X on the switch port in configuration mode.

Configuring PPS server as a RADIUS server

The sample configuration below shows how to add PPS server as a RADIUS authentication and accounting server on Cisco switch.

You must execute the following commands in the CLI configuration mode.

--Execute this command to add PPS as a RADIUS server

```
radius server <RADIUS SERVER NAME>
```

***Note* PPS listens to both 1812/1813 and 1645/1646 ports. Default is 1645 and 1646.**

```
address ipv4 <RADIUS SERVER IP> auth-port 1645 acct-port 1646
```

```
key <SHARED-KEY>
```

--Execute these commands to create a RADIUS Server Group, and associate your PPS appliances to the group.

```
aaa group server radius <RADIUS-GROUP>
```

```
server name <RADIUS SERVER NAME>
```

***Note* Repeat for every PPS Appliance.**

--Execute these commands to turn on AAA

```
aaa new-model
```

```
aaa session-id common
```

```
aaa authentication dot1x default group <RADIUS-GROUP>
```

```
aaa authorization network default group <RADIUS-GROUP>
```

```
aaa authorization auth-proxy default group <RADIUS-GROUP>
```

```
aaa accounting send stop-record authentication failure
```

```
aaa accounting identity default start-stop broadcast group <RADIUS-GROUP>
```

```
aaa accounting update newinfo
```

-- Execute this command to configure RADIUS CoA

```
aaa server radius dynamic-author
```

```
client <RADIUS SERVER IP> server-key <SHARED-KEY>
```

```
auth-type all
```

```
ignore session-key
```

```
port 3799
```

***Note* Default is 1700**

Configuring 802.1x and MAC Authentication on the Switch Port

The below example shows a sample configuration of 802.1X and MAC Address authentication on Cisco switch interface. You must execute the following commands in CLI configuration mode.

```
interface GigabitEthernet1/0/24
```

```
switchport access vlan 60
```

```
switchport mode access
```

```

--Execute this command to trigger re-authentication from PPS
authentication periodic
authentication timer reauthenticate server
--Execute this command for configuring 802.1X
access-session port-control auto
dot1x pae authenticator
--Execute this command for configuring MAC BYPASS
mab

spanning-tree portfast
service-policy type control subscriber POLICY_Gi1/0/24
--POLICY_Gi1/0/24 is a policy map configuration. See the POLICY_MAP configuration for more details.
--Specify the order of execution
authentication order mab dot1x
authentication priority dot1x mab
--Execute this command for viewing the status of the session on Cisco OS version 15.x and above
Show access-session interface gi-X/Y/Z detail
--Execute this command for viewing the status of the session on Cisco OS version 12.x
Show authentication session interface gi-X/Y/Z detail

```

POLICY_MAP configuration

```

--Execute this command to define POLICY_MAP configuration
--Define class-map Policies
class-map type control subscriber match-all DOT1X
match method dot1x
!
class-map type control subscriber match-all DOT1X_FAILED
match method dot1x
match result-type method dot1x authoritative
!
class-map type control subscriber match-all DOT1X_MEDIUM_PRIO
match authorizing-method-priority gt 20
!
class-map type control subscriber match-all DOT1X_NO_RESP
match method dot1x
match result-type method dot1x agent-not-found
!
class-map type control subscriber match-all DOT1X_TIMEOUT
match method dot1x
match result-type method dot1x method-timeout
!
class-map type control subscriber match-all MAB
match method mab
!
class-map type control subscriber match-all MAB_FAILED
match method mab
match result-type method mab authoritative

--Define policy-map using class-map
sh run | beg POLICY_Gi1/0/24
policy-map type control subscriber POLICY_Gi1/0/24
event session-started match-all
  10 class always do-until-failure
  10 authenticate using mab priority 10
event authentication-failure match-first
  5 class DOT1X_FAILED do-until-failure
  10 terminate dot1x
  20 authentication-restart 60
  10 class MAB_FAILED do-until-failure
  10 terminate mab
  20 authenticate using dot1x priority 20
  20 class DOT1X_NO_RESP do-until-failure
  10 terminate dot1x

```

```

20 authentication-restart 60
40 class always do-until-failure
10 terminate mab
20 terminate dot1x
30 authentication-restart 60
event agent-found match-all
10 class DOT1X_MEDIUM_PRIO do-until-failure
10 authenticate using dot1x priority 20
event authentication-success match-all
10 class always do-until-failure
10 activate service-template DEFAULT_LINKSEC_POLICY_SHOULD_SECURE

```

Configuration Commands for Huawei Switch

The below example shows a sample configuration of 802.1X authentication on Huawei switch (S5720). Only sample commands are documented in this example. For more information, see Huawei documentation.

```

# Creation of VLAN
vlan batch 100 200

# Creation of dot1x profile
dot1x-access-profile name <dot1x-profile-name>
authentication trigger-condition dhcp

# Creation of authentication profile mapped to dot1x-access-profile
authentication-profile name <auth-profile-name>
dot1x-access-profile <dot1x-profile-name>
authentication mode multi-authen max-user 100
# For MAC auth (MAB), enable below 2 commands
mac-access-profile <Mac-profile-name>
authentication dot1x-mac-bypass

# Domain in which authentication happens
domain isp

# When Switch acts as CoA server, decoding of calling-station-id format has to be specified.
radius-server authorization calling-station-id decode-mac-format ascii hyphen-split common

# Create PPS as radius-server, which will be mapped in aaa profile. Enter the same shared key as configured in PPS.
radius-server template rd-server-pps
radius-server shared-key cipher %^%#~SZ#Wvmi~*}.Q`L"[s;q9ci)(u&U4'!>:1Ja]T(%^%#
radius-server authentication <Radius-Server-IP> <1812> weight 80
radius-server accounting <Radius-Server-IP> <1813> weight 80
calling-station-id mac-format hyphen-split mode2 uppercase

# Configure the switch to support dynamic authorisation
radius-server authorization 192.168.10.11 shared-key cipher %^%#qlj!'3LZN1TkF=JkGF:Gx:U$:!c]HES=$BG.*HwY%^%#

# Configure aaa profile
aaa
authentication-scheme <auth-scheme>
authentication-mode radius
authorization-scheme default
accounting-scheme <accounting>
accounting-mode radius
accounting realtime 15
domain isp
authentication-scheme <auth-scheme>
accounting-scheme <accounting>
radius-server <rad-server-pps>

# Create VLAN interfaces which will be used for enforcement
# Endpoint will get IP address in the VLAN to which it is assigned.

```

```
interface Vlanif100
ip address 192.168.10.10 255.255.255.0
dhcp select interface
```

```
interface Vlanif200
ip address 192.168.20.10 255.255.255.0
dhcp select interface
```

Access Interface having authentication-profile as dot1x

```
interface GigabitEthernet0/0/17
description "EP Interface"
port link-type hybrid
Port hybrid untagged vlan 100 200
authentication-profile <auth-profile-name>
```

Interface Connected to PPS server

```
interface GigabitEthernet0/0/19
description "connected to PPS"
port link-type access
port default vlan 100
```

Configuration Commands for Juniper EX Series Switch

The below example shows a sample configuration of 802.1X authentication on Juniper EX switch.

The configuration involves the following:

1. Configuring PPS server as a RADIUS server in edit mode.
2. Configuring 802.1x on the switch port in edit mode.

Configuring PPS server as a RADIUS server

The sample configuration below shows how to add PPS server as a RADIUS authentication and accounting server on Juniper EX switch. You must execute the following commands in edit mode.

```
set access radius-server <RADIUS SERVER IP> secret <SHARED-KEY>
set access radius-server <RADIUS SERVER IP> source-address 10.204.88.30
--Execute this command for configuring RADIUS CoA
set access radius-server <RADIUS SERVER IP> dynamic-request-port 3799
--Execute this command to add PPS as a RADIUS server
set access profile 802.1X-access-profile authentication-order radius
set access profile 802.1X-access-profile accounting order radius
set access profile 802.1X-access-profile radius authentication-server <RADIUS SERVER IP>
set access profile 802.1X-access-profile radius accounting-server <RADIUS SERVER IP>
```

Configuring 802.1x on the Switch Port

The below example shows a sample configuration of 802.1X / MAC address authentication on Juniper EX switch interface. You must execute the following commands in edit mode.

```
--Execute this command for 802.1X
set protocols dot1x authenticator authentication-profile-name 802.1X-access-profile
set protocols dot1x authenticator interface ge-0/0/0.0 supplicant multiple
--Execute this command for configuring MAC BYPASS
set protocols dot1x authenticator interface ge-0/0/0.0 mac-radius
--Execute this command for viewing the status of the session
Show dot1x interface ge-X/Y/Z detail
```

RADIUS Dictionary Files

This section contains dictionary translations for parsing requests and generating responses. All transactions are composed of Attribute/Value Pairs. The value of each attribute is specified as one of these valid data types shown in the below table.

Table10: Valid Data Types

| Data | Description |
|---------------|--|
| hexadecimal | Hexadecimal string |
| hex1, hex4 | 1- or 4-byte hexadecimal number |
| string | 0-254 octets (includes null terminator) |
| stringnz | 0-254 octets (without null terminator) |
| ipv6addr | 16 octets in network byte order (per RFC-3162) |
| ipv6prefix | 2-18 octets in network byte order (per RFC-3162) |
| ipv6interface | 8 octets in network byte order (per RFC-3162) |
| ipaddr | 4 octets in network byte order |
| ipaddr-pool | IP address selected from an IP address pool |
| ipxaddr-pool | IPX network number selected from an IPX address pool |
| integer | 32-bit value in big endian order (high byte first) |
| int1, int4 | 1- or 4-byte decimal number (integer is equivalent to int4) |
| time | 32-bit value in big endian order; seconds since 00:00:00 GMT, Jan. 1, 1970 |

All attribute names and value names in the supplied radius.dct dictionary are derived from the RADIUS specification by replacing all nonalphanumeric characters with dashes (-).

The following dictionary format provides a mechanism for including secondary dictionaries from the text of a primary dictionary. For example, only the attribute/value definitions that differ from the RADIUS specification need to be listed in a primary dictionary for a vendor specific implementation. Definitions for the attribute/values that are common to both are brought in by including the radius.dct dictionary anywhere within the vendor dictionary.

The following rules apply to the creation and use of dictionaries:

- All comments begin with a pound sign (#) in column 0 OR appear on an attribute or value line with <white space>#<white space> as the Mandatory delimiter between dictionary data and comment text. (This is a simple parser.)
- Include another dictionary file with an at sign (@). The (@) character must be in column 0.
- All attribute and attribute value names and numeric codes must be unique within a single dictionary. Conflicts between dictionaries are resolved according to the following rules:
 - Attributes and values have precedence over any that are parsed later, and parsing is depth first.
 - For example, to override a baseline attribute, create a file with that attribute in it, followed by an include of the baseline file. Because the baseline file is parsed later than the desired override, the baseline file is ignored.
 - When two secondary dictionary definitions of an attribute or value conflict, the earlier include takes precedence.
 - Other than include files, there are two meaningful line entry formats in a dictionary -one for attributes and one for attribute values.

- ATTRIBUTE_KEY ATTRIBUTE_NAME ATTRIBUTE_CODE DATA_TYPE FLAGS [COMMENT_DELIMITER COMMENT_TEXT]
- VALUE_KEY ATTRIBUTE_NAME VALUE_NAME VALUE_CODE [COMMENT_DELIMITER COMMENT_TEXT]
- The legend for the last column of an attribute entry should be:
 - 'c' indicates a SINGLE value attribute that is a candidate for inclusion in a user's checklist.
 - 'C' indicates a MULTI value attribute that is a candidate for inclusion in a user's checklist.
 - 'r' indicates a SINGLE value attribute that is a candidate for inclusion in a user's reply list.
 - 'R' indicates a MULTI valued attribute that is a candidate for inclusion in a user's reply list.
 - 'o','O' ordered attribute, some attributes (such as Reply-Message) might need to be presented in a particular order to make sense.



- The absence of {C,c,R,r} flags indicates an item that is neither a reply nor a check list item (such as State, Proxy-State).
- All FLAG characters on a given attribute line must be clustered together to parse properly. No white space is allowed between individual characters.

Policy Enforcement using SNMP

This chapter provides an overview of the SNMP enforcement. It includes the following information:

- [Overview](#)
- [Benefits of SNMP Enforcement](#)
- [Policy Enforcement Using Simple Network Management Protocol](#)
- [Configuring SNMP on PPS](#)
- [Appendix](#)

About SNMP Enforcement

Overview

PPS supports device visibility and policy enforcement on switches using SNMP as an alternative to 802.1X. Using SNMP enforcement, you can easily deploy and achieve comprehensive compliance and role based access.

Benefits of SNMP Enforcement

The following are the benefits of SNMP enforcement:

- Supports SNMP enforcement for MAC based authentication and role assignment.
- Supports network visibility using SNMP v1/v2/v3.
- The endpoints are discovered through SNMP traps (Linkup/Down, MAC notification, and Port security).
- Supports easy NAC deployment with SNMP enforcement based on compliance and role-based access.
- Supports Non-802.1X compliance endpoints.
- Supports SNMP discovery for L2/L3 switches.
- Supports Pulse session after SNMP MAC authentication.
- Supports hybrid deployment- 802.1X for wireless network and SNMP for wired network.

Policy Enforcement Using Simple Network Management Protocol


This section covers the following deployment scenarios:

- Policy Enforcement using SNMP for unmanaged devices
- Policy Enforcement using SNMP for managed devices

Policy Enforcement using SNMP for Unmanaged Devices

To deploy policy enforcement using SNMP for unmanaged devices, add the switch as an SNMP Agent and the PPS device as an SNMP server in the switch and then configure the SNMP Enforcement Policies in PPS.

Figure 60: Policy Enforcement using SNMP for unmanaged devices

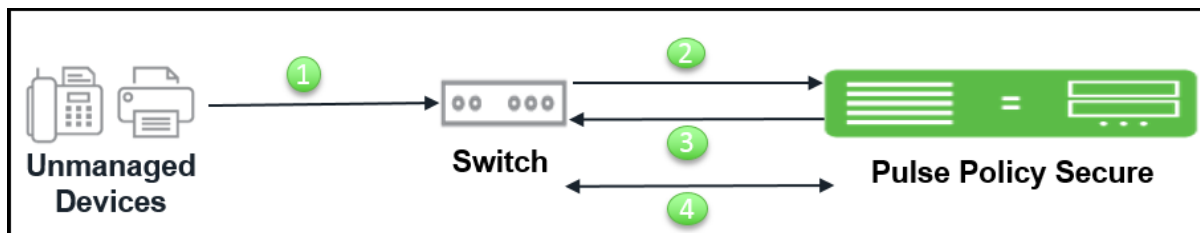

The workflow for the SNMP policy enforcement using **linkup/MAC address Notification traps** is described below:

1. Unmanaged corporate devices such as phones, printers, and cameras connect to SNMP switch. The SNMP switch is configured for linkup/MAC address Notification trap. The SNMP switch generates the SNMP trap. See the Appendix section for switch configuration.
2. PPS learns or receives the MAC address.
3. PPS performs the MAC authentication and sets the VLAN based on the role assigned using SNMP.
4. When the user disconnects the device from the switch by plugging out the cable, PPS receives an SNMP trap and it deletes the session from the PPS server and sets the switch port to the default VLAN.


The workflow for the SNMP policy enforcement using **port-security trap** is described below:

1. Unmanaged corporate devices such as phones, printers, and cameras connect to SNMP switch. The SNMP switch is configured for port-security trap. A dummy static MAC address is configured on the port. Since machine's MAC address does not match with the configured dummy mac address, it generates a security violation and a port security trap is sent to PPS. See the Appendix section for switch configuration.
2. PPS learns or receives the MAC address.
3. PPS performs the MAC authentication and the dummy MAC address configured on the interface is replaced with the endpoint MAC address thus authorizing the endpoint on the switch and sets the VLAN based on the role assigned.
4. When the user disconnects the device from the switch by plugging out the cable, the session is not deleted from the PPS. However, the session is deleted only after the session timeout.

Policy Enforcement using SNMP for Managed Devices

To deploy policy enforcement using SNMP for managed devices, add the switch as an SNMP Agent and the PPS device as an SNMP server in the switch and then configure the SNMP Enforcement Policies in PPS.

Figure 61: Policy enforcement using SNMP for managed devices

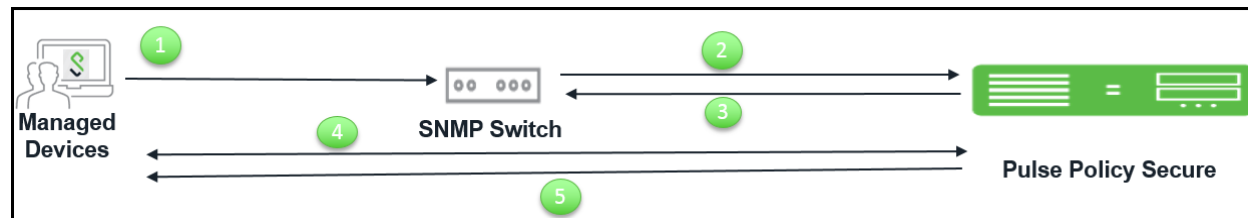

The workflow for the SNMP policy enforcement using **link-up/MAC address Notification traps** is described below:

1. Managed corporate client (Pulse Desktop client is installed) such as Windows/MAC OSX machine connects to SNMP switch port. The SNMP switch is configured for link-up/MAC address Notification trap. The SNMP switch generates the SNMP trap. See Appendix section for switch configuration.
2. PPS learns or receives the MAC address.
3. PPS performs the MAC authentication and sets the VLAN based on the role assigned using SNMP.
4. The user connects to PPS using Pulse Client. Host checker evaluates the compliance status of machine. If machine is compliant with Host Checker policy.
5. PPS sets the VLAN configured for compliant role using SNMP and if machine is non-compliant with Host Checker policy then PPS sets the VLAN configured for non-compliant role using SNMP.
6. When the user disconnects the Pulse client. PPS reevaluates the role and sets the VLAN based on the role assigned.
7. When the user disconnects the endpoint from the switch by plugging out the cable, session from the PPS server is deleted and the switch port is set to the default VLAN.

The workflow for the SNMP policy enforcement using **port-security trap** is described below:

1. Managed corporate client (Pulse Desktop client is installed) such as Windows/MAC OSX machine connects to SNMP switch port.

The SNMP switch need to be configured for port-security trap. A dummy static MAC address is configured on the port. Since the machine's MAC address does not match with the configured dummy mac address, it generates a security violation and a port security trap is sent to PPS.

2. PPS learns or receives the MAC address.
3. PPS performs the MAC authentication and the dummy MAC address configured on the interface is replaced with the endpoint MAC address thus authorizing the endpoint on the switch and sets the VLAN based on the role assigned.
4. When the user disconnects the device from the switch by plugging out cable, the session is not deleted from the PPS. However, the session is deleted only after the session timeout.
5. PPS sets the VLAN configured for compliant role using SNMP and if machine is non-compliant with Host Checker policy then PPS sets the VLAN configured for non-compliant role using SNMP.
6. When the user disconnects the Pulse client. PPS reevaluates the role and sets the VLAN based on the role assigned.
7. When the user disconnects the device from the switch by plugging out the cable, the session is not deleted from the PPS. However, the session is deleted only after the session timeout.

Configuring SNMP on PPS

This section covers the configuration for SNMP policy enforcement. SNMP based policy enforcement is applied to endpoints running Pulse Client, and to clientless endpoints where the MAC address is discovered through SNMP. For endpoints running Pulse Client, role assignment is based on compliance; for clientless endpoints, role assignment is based on MAC address.

The configuration procedure for SNMP policy enforcement is described below:

- [Configuring a MAC address Authentication Server](#)
- [Configuring a MAC address Authentication Realm and Role Mapping](#)
- [Configuring a Location Group](#)
- [Configuring SNMP Devices](#)
- [Verifying the status of SNMP Devices](#)
- [Configuring SNMP Enforcement Policy](#)

Configuring a MAC address Authentication Server

A MAC address authentication server defines how endpoints are authorized using the MAC address. You can choose to allow or deny a MAC address or use wildcards to allow or deny groups of MAC addresses.

To configure a MAC address authentication server:

1. Select **Authentication > Auth Server**.
2. Select **MAC Address Authentication** and click **New Server** to display the MAC Address Authentication Server configuration page as shown in Figure.

Figure 62: MAC Address Authentication Server

Auth Servers > MACAuthServer

MACAuthServer

Settings Users

Name: MACAuthServer Label to reference this authentication.

MAC Addresses

Maximum 500 addresses

Delete Add

| MAC Address | Action | Attributes |
|-------------------|--------|------------|
| | Allow | |
| 00:11:85:5b:8c:66 | Allow | |

Add

Optional LDAP Servers

Available LDAP Servers: (none) Add -> Remove

Selected LDAP Servers: (none) Add -> Remove

To manage servers, see the [Server](#) configuration page.

Server Catalog

Attributes...

The attributes catalog should be used for both attributes defined in the MAC Addresses Table and the optional LDAP Servers.

Save Changes Reset

* indicates required field

Example MAC Address:
00:11:85:5b:8c:66
00:ff:xx:xx:xx:xx
Example Attribute:
attribute1=value1;attribute2=value2;
(for attribute: alphanumeric or "_" or "-" characters only)
The Allow & Attributes action accepts the defined MAC Address
expression and looks it up in the optional LDAP Server(s)
below for authorization attributes.

3. On the MAC address authentication server configuration page:
 - a. For Name, enter a name to label this MAC address authentication server.
 - b. Under MAC Addresses, enter the MAC address(es) to whitelist.
 - c. Select an action to take when the MAC address matches:
 - i. Allow—Signal successful authentication.

- ii. Deny—Signal unsuccessful authentication.
 - iii. Allow and Attributes—Typically, a match terminates the search. If you select Allow and Attributes, the search is not terminated; instead, the system searches the LDAP servers for a match in order to retrieve the LDAP authorization attributes.
 - d. Specify a name-value pair to associate the MAC address with a particular group or organization.
 - e. Under Optional LDAP servers, Use the **Add** and **Remove** selector buttons to add LDAP servers to the list of selected servers. Use the up and down buttons to order the list. The order in which the LDAP servers are listed is important.
 - f. Under Server Catalog, Click the **Attributes** button to display the LDAP server catalog, which you can use to select or add attributes to be retrieved from the LDAP servers.
4. Click **Save Changes** to save the configuration.

Configuring a MAC address Authentication Realm and Role Mapping

A MAC address authentication realm uses a MAC address authentication server and role mapping rules to sort MAC address authentication requests into roles.

To configure a MAC address authentication realm:

1. Select **Endpoint Policy > MAC Address Realms**.
2. Click **New** to display the MAC Address Realm configuration page.

Figure 63: MAC Address Realm

The screenshot displays the 'MAC Address Realms > MAC_Realm > General' configuration page in Pulse Secure. The 'General' tab is active, showing fields for Name (MAC_Realm), Description, and a checkbox for 'When editing, start on the Role Mapping page'. Below this is the 'Servers' section with dropdowns for Authentication (Mac), User Directory/Attribute (Same as above), Accounting (None), and Device Attributes (tse), along with a Device Check Interval of 60 minutes. The 'Dynamic policy evaluation' section has a checkbox for 'Enable dynamic policy evaluation'. The 'Other Settings' section shows 'Authentication Policy' and 'Role Mapping' both set to 'No restrictions' and '1 Rule'. A 'Save Changes' button is at the bottom.

3. On the MAC address realm configuration page:
 - a. For Name, enter a name to label this MAC address realm.
 - b. (Optional) For description, enter a description.
 - c. For Authentication Server, select the MAC address authentication server configured earlier.
 - d. For User Directory/Attribute Server, select "Same as above".
 - e. For accounting, select the authentication server.
 - f. For device attribute, select the server for device authorization. For profiler, select the name of the local profiler.
 - g. Specify the device check interval in minutes.
 - h. Select the **Enable dynamic policy evaluation** to automatically or manually refresh the assigned roles of users by evaluating a realm's authentication policy, role-mappings, role restrictions, and resource policies.
4. Click **Save Changes** to save the configuration.

Role mapping rules define how endpoints are assigned to roles.

To configure the role mapping rules for your MAC Address Realm:

1. Click the **Role Mapping** tab to display the role mapping configuration page for the realm.
2. Click **New** to display the MAC Address Realm configuration page.
3. On the role mapping configuration page, click **New Rule** to display the role mapping rule configuration page.

Figure 64: MAC Address Realm - Role Mapping

MAC Address Realms > MAC > Role Mapping > Role Mapping Rule

Role Mapping Rule

Rule based on: Username

* Name:

▼ Rule: If username...

is If more than one username should match, enter one username per line. You can use * wildcards.

▼ then assign these roles

Available Roles: Guest, Guest Admin, remed, Users

Selected Roles: mac

☐ Stop processing rules when this rule matches

To manage roles, see the [Roles](#) configuration page.

- a. (Optional) For Name, enter a name to label this role mapping rule.
- b. Select the rule from the Rule based list and provide the appropriate details.
- c. Select the appropriate role and click **Add**.
4. Click **Save Changes** to save the configuration.

Configuring a Location Group

A location group enables association of a sign-in policy and MAC address realm for network access policy enforcement.

To configure a location group:

1. Select **Endpoint Policy > Network Access > Location Group**.
2. Click **New Location Group** to display the Location Group configuration page.

Figure 65: New Location Group

The screenshot shows the Pulse Secure web interface. The top navigation bar includes links for System, Authentication, Administrators, Users, Endpoint Policy (highlighted), Maintenance, and Wizards. The breadcrumb trail is 'Network Access > Location Group > New Location Group'. The page title is 'New Location Group'. Below this, there is a section for 'Location Group' configuration. It includes a 'Name' field with the value 'SNMP_LocationGroup_1' and a 'Description' field. The 'Sign-In Policy' is set to '*' and the 'MAC Authentication Realm' is set to 'MACRealm'. There are links for 'To manage policies, see the Sign-In Policies' and 'To manage realm, see the MAC Address Realms'. A 'Save Changes' button is at the bottom left. A note at the bottom left states '* indicates required field'.

3. On the location group configuration page:
 - a. Enter a name or label to describe the location group.
 - b. Enter a description.
 - c. Select the default sign-in policy as it is not applicable for SNMP enforcement. For example, default */ sign-in policy.
 - d. Select the MAC authentication realm which was configured earlier.
4. Click **Save Changes** to save the configuration.

Configuring SNMP Devices

You can add an SNMP device manually through SNMP device configuration or automatically discover SNMP devices through SNMP Device Discovery configuration.

The following procedure explains the types of SNMP configuration:

- Manual addition of SNMP devices
- Auto discovery of SNMP devices

Manual Addition of SNMP Devices

You can manually add SNMP devices from PPS. This section describes the SNMP device configuration for switches with different versions.

- Configuring devices with SNMP v1/v2c
- Configuring devices with SNMP v3

Configuring Devices with SNMP v1/v2c

To configure the device with SNMP v1/v2c:

1. Select **Endpoint Policy > Network Access > SNMP Device > Configuration** and click New SNMP Device.

Figure 66: SNMP Device Configuration - SNMP Version v1/v2c

2. Under SNMP Device, select **SNMP version v1/v2c** and define the SNMP device settings:
 - a. Enter a name to label this SNMP device.
 - b. For Description, enter a description. (Optional)
 - c. Enter the IP address of the SNMP device. You must enter a single IP address, not an IP address range or subnet.
 - d. Select the device vendor. SNMP enforcement check box will appear only for vendors who support SNMP enforcement.
 - e. Enable the SNMP Enforcement checkbox for using the device for SNMP enforcement.
For Profiler, you must disable SNMP enforcement; the **Location Group**, **Default VLAN**, **Write Community** and **Trap Community String** fields are not applicable for profiling. A device so added is not used for enforcement.
 - f. For Location Group, select the location group configured earlier. Only location groups which have MAC Address Realms associated will be available for selection.
 - g. For Default VLAN, enter the VLAN to be provisioned when the SNMP user session is deleted or no endpoint is connected.
3. Under SNMP Settings, enter the community string(s) for the Read, Write, and Trap communities.
4. To use different credentials for write and trap community strings, disable the "Use same credentials for write and trap operations" check box.
5. Click **Save Changes** to save the configuration.

Configuring Devices with SNMP v3

To configure the switch with SNMP v3:

1. Select **Endpoint Policy > Network Access > SNMP Device > Configuration**.

Figure 67: SNMP Device Configuration - Version v3

2. Under SNMP Device, select **SNMP version v3** and define the SNMP switch settings:
 - a. For Name, enter a name to label this SNMP device.
 - b. (Optional) For Description, enter a description.
 - c. For IP Address, enter the IP address of the SNMP device. This must be a single IP address, not an IP address range or subnet.
 - d. Select the device vendor. SNMP enforcement check box will appear only for vendors who support SNMP enforcement.
 - e. Enable the SNMP Enforcement checkbox for using the device for SNMP enforcement. For Profiler, you must disable SNMP enforcement; the **Location Group, Default VLAN, Write Community and Trap Community String** fields are not applicable for profiling. A device so added is not used for enforcement.
 - f. For Location Group, select the location group configured earlier. Only location groups which have MAC Address Realms associated will be available for selection.
 - g. For Default VLAN, enter the VLAN to be provisioned when the SNMP user session is deleted or no endpoint is connected.
3. Under SNMP Settings, enter the Read Username, select the Read Security Level and Auth Protocol, and enter the Auth Password.
4. To use different credentials for write and trap community strings, disable the “Use same credentials for write and trap operations” check box.
5. Click **Save Changes** to save the configuration.



Note: If you unplug a cable from an interface, the associated session would be deleted only if link down traps are enabled. If the port security traps are configured on the device, unplugging of the cable does not cause session deletion.

Auto Discovery of SNMP Devices

PPS provides an optional SNMP Device Discovery option. You can specify a range of IP addresses and other details needed for SNMP configuration to perform discovery of SNMP enabled devices.

PPS discovers all SNMP enabled L2 or L3 devices. SNMP enabled devices, which are not supported are listed as unsupported and cannot be added to the SNMP devices page.

To discover SNMP enabled devices:

1. Select **Endpoint Policy > Network Access > SNMP Device > Discovery**.

Figure 68: SNMP Enabled Device Discovery

Network Access > SNMP Device Discovery > SNMP Device Discovery

SNMP Device Discovery

RADIUS Dictionary | RADIUS Vendor | Location Group | RADIUS Client | RADIUS Attributes | **SNMP Device** | SNMP Enforcement Policies

Configuration | **Discovery**

Atleast one of v2 or v3 settings need to be configured for enabling SNMP Discovery.

*IP address/range: IP address or range of IP addresses in CIDR format.

▼ **SNMP V2 Settings**

* Community string:

▼ **SNMP V3 Settings**

*User name:

Authentication protocol: Authentication Password:

Privacy protocol: Privacy Password:

Discover

| | Name | IP Address | SNMP Version | Device Details | SNMP Enforcement | Location Group | Default Vlan |
|---|---|--------------|--------------|--|-------------------------------------|--|----------------------------------|
| 1 | <input type="text" value="10.204.88.16"/> | 10.204.88.16 | V2 | Vendor: CISCO Name: Profiler3750 Descr: Cisco IOS Software, C3750 Software (C3750-IPSERV) Location: Bangalore | <input checked="" type="checkbox"/> | <input type="text" value="InitialSetup_snmp"/> | <input type="text" value="123"/> |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

Add Device

2. On the SNMP device discovery configuration page:
 - a. For IP Address Range, enter a range of IP addresses in CIDR format (for example, 10.204.88.0/28) to discover SNMP devices.
 - b. To discover SNMP v1/v2c devices, enter the community string to use with SNMP v1/v2c device.
 - c. To discover SNMP v3 devices, enter the user name to use with SNMP v3 devices. Enter the Authentication protocol, Authentication password, Privacy protocol and Privacy password for SNMP v3 devices.
 - d. Click **Discover** to start the discovery process.

Once the devices are discovered, you must complete the following configuration for SNMP enforcement on each device:

1. Choose a location group from the dropdown list.
2. You can enable the SNMP enforcement for the supported switches (HP/Cisco).
3. Specify a default VLAN.
4. Select the devices to be added and click **Add Device**.
5. Click **Save Changes**.

The SNMP enforcement option is disabled for the Switches, which don't support SNMP enforcement.

Figure 69: SNMP Enabled Device Discovery

Network Access > SNMP Device Discovery > SNMP Device Discovery

SNMP Device Discovery

RADIUS Dictionary RADIUS Vendor Location Group RADIUS Client RADIUS Attributes **SNMP Device** SNMP Enforcement Policies

Configuration **Discovery**

At least one of v2 or v3 settings need to be configured for enabling SNMP Discovery.

*IP address/range: IP address or range of IP addresses in CIDR format.

▼ **SNMP V2 Settings**

* Community string:

▼ **SNMP V3 Settings**

*User name:

Authentication protocol: Authentication Password:

Privacy protocol: Privacy Password:

Discover

| | Name | IP Address | SNMP Version | Device Details | SNMP Enforcement | Location Group | Default Vlan |
|---|--|---------------|--------------|--|--------------------------|----------------|--------------|
| 1 | <input type="text" value="10.204.89.150"/> | 10.204.89.150 | V2 | Vendor: Aruba Networks Name: UacQaAruba3400 Descr: ArubaOS (MODEL: Aruba3400), Version 6.4.4.6 (546) Location: Bangalore Contact: Settings | <input type="checkbox"/> | N.A. | N.A. |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

Add Device

Note:

- Discovery of SNMP-enabled devices applies only to L2 and L3 devices which support Bridge MIB configuration.
- Enable the SNMP Enforcement checkbox for using the device for SNMP enforcement and then define the location group and the default VLAN. For Profiler, you must disable SNMP enforcement; the Location Group, Default VLAN fields are not applicable for profiling.

Verifying the status of SNMP Devices

You can view the SNMP device status from the SNMP Device page. You can view details such as device name, device location, device description, device contact information, SNMP version, IP Address, model, location group, and the current status of the added device.

To view the status of SNMP devices:

1. Select **Endpoint Policy > Network Access > SNMP Device Configuration**.
2. Click **SNMP Device**.

Figure 70: SNMP Device Status

The screenshot shows the Pulse Secure web interface. The top navigation bar includes links for System, Authentication, Administrators, Users, Endpoint Policy (highlighted), Maintenance, and Wizards. The breadcrumb trail is Network Access > SNMP Device Configuration. Below this, there are tabs for RADIUS Dictionary, RADIUS Vendor, Location Group, RADIUS Client, RADIUS Attributes, SNMP Device (highlighted), and SNMP Enforcement Policies. Under the SNMP Device tab, there are sub-tabs for Configuration and Discovery. A toolbar contains buttons for New SNMP Device..., Duplicate..., Delete..., Enable, and Disable. A dropdown menu shows 10 records per page, and a search bar is present. The main table lists SNMP devices with columns for Name, SNMP Version, IP Address, Device Details, Location Group, Default VLAN, and Status.

| | Name ▲ | SNMP Version | IP Address | Device Details | Location Group | Default VLAN | Status |
|---|--------|--------------|---------------|---|-------------------|--------------|--------|
| 1 | swmine | V2 | 10.204.89.148 | Vendor: CISCO Name: c3850w/c.uacfab.net2-VSA(21, integer) # # Descr: Cisco IOS Software [Denali], Catalyst L3 Switch ... Location: # #ATTRIBUTE 3GPP2-SDB-Output-Octets 3 Contact: (7, ipaddr) Cr # #ATTRIBUTE 3GPP2-Key-ID | initialSetup_snmp | 60 | ● |

Configuring SNMP Enforcement Policy

SNMP Enforcement Policy is used for dynamic VLAN assignment and modification, which is based on role assignment.



Note: You must ensure that the session roaming is enabled on the roles for SNMP enforcement.

To configure an SNMP Enforcement Policy:

1. Select **Endpoint Policy > SNMP Enforcement > SNMP Enforcement Policies**.
2. Click **New SNMP Policies** to display the New SNMP Policy configuration page.

Figure 71: SNMP Enforcement Policy Configuration

The screenshot shows the 'New SNMP Enforcement Policy' configuration page in the Pulse Secure interface. The page has a dark header with the Pulse Secure logo and navigation tabs: System, Authentication, Administrators, Users, Endpoint Policy (selected), Maintenance, and Wizards. Below the header, the breadcrumb trail is 'Network Access > SNMP Enforcement Policies > New SNMP Enforcement Policy'. The main content area is titled 'New SNMP Enforcement Policy' and contains several sections:

- SNMP Policy**: This section includes a 'Policy Name' field with the value 'full access', a 'Description' field, a 'VLAN' field with the value '74', and a 'Location Group' dropdown menu set to 'Default'. There is a small note 'Label to reference this SNMP Policy.' next to the Policy Name field and 'To manage groups, see the Location Group' next to the Location Group dropdown.
- Roles**: This section contains three radio buttons:
 - ☐ Policy applies to ALL roles
 - ☒ Policy applies to SELECTED roles
 - ☐ Policy applies to all roles OTHER THAN those selected below
 Below the radio buttons are two lists:
 - Available roles:** A list box containing 'Guest', 'Guest Admin', 'OnboardRole', and 'remed'.
 - Selected roles:** A list box containing 'Users'.
 - Between the two lists are two buttons: 'Add ->' and 'Remove'.

At the bottom of the form is a blue button labeled 'Save Changes'.

3. On the SNMP policy configuration page:
 - a. Enter a label for the SNMP enforcement policy.
 - b. Enter a description for the SNMP policy.
 - c. For VLAN, specify the VLAN to assign.
 - d. Choose a location group from the dropdown menu.
 - e. Under Roles, select Policy Applies to Selected Role; choose a role from the Available Roles and click Add to add it to the Selected Roles list.
4. Click **Save Changes** to save the configuration.

Appendix

Configuration Commands for Cisco

The following is a sample configuration for linkup/linkdown/MAC notification traps for SNMP v2c. In the below configuration snmp server is configured as PPS, which is receiving SNMP traps.

You must execute the following commands in configuration mode.

Execute the following command to globally enable linkup and linkdown traps.

```
snmp-server enable traps snmp linkdown linkup
snmp-server enable traps mac-notification
```

Execute the following command to configure PPS as an snmp-server host, which receives SNMP notifications.

```
snmp-server host <PPS IP Address> trap version 2c public snmp mac-notification
mac-address-table notification interval 0
mac-address-table notification
mac-address-table aging-time 3600
snmp-server community string ro
snmp-server community string rw
```

Cisco SNMP v3 configuration

The following commands show a sample configuration for configuring SNMP v3 on Cisco switch. In the below configuration snmp server is configured as PPS, which is receiving SNMP traps.

You must execute the following commands in configuration mode.

```
snmp-server view <Read-View Name> iso included
snmp-server view <Write-View Name> iso included
```

The below configuration applies when the SNMP v3 settings for Security Level is “Auth, Prev” on PPS.

```
snmp-server group <snmpv3 group name> v3 priv context vlan- match
snmp-server group <snmpv3 group name> v3 priv read <Read-View Name> write <Write-View Name>
snmp-server user <snmpv3 username> <snmpv3 group name> v3 auth sha/md5 <auth password> priv aes/des <128>
<password>
snmp-server enable traps snmp authentication linkdown linkup coldstart warmstart
snmp-server host <PPS IP Address> version 3 auth/priv <snmpv3 username> snmp
```

The below configuration applies when the SNMP v3 settings for Security Level is “Auth, NoPrev” on PPS.

```
snmp-server group <snmpv3 group name> v3 auth read <Read-View Name> write <Write-View Name>
snmp-server group <snmpv3 group name> v3 auth context vlan- match prefix
snmp-server user <snmpv3 username> <snmpv3 group name> v3 auth sha/md5 <auth password>
snmp-server host <PPS IP Address> version 3 auth <snmpv3 username>
```

The following sample shows the command, which are executed at interface level.

```
switchport mode access
switchport access vlan 4
snmp trap mac-notification added
```

Note:

- If the SNMP switch supports MAC Notification traps (MAC added notification trap), you must enable the traps in addition to the Link Up / Link Down traps.
- If Port Security traps are enabled, LinkUp/LinkDown or MAC Added Notification traps should not be enabled.
- PPS does not support MAC removed notifications trap. It tracks the session / MAC address associated with a particular interface and removes it once a link down trap is received.

Configuring Port Security Traps

The following sample shows the commands that is executed at global set up level for configuring port security traps.

```
snmp-server enable traps port-security
snmp-server enable traps port-security trap-rate 1
snmp-server host 192.168.1.5 version 2c public port-security
```

The following sample shows the commands, which are executed at interface level.

```
switchport access vlan <default vlan>
switchport port-security
switchport port-security maximum 2
switchport port-security maximum 1 vlan access
switchport port-security violation restrict
switchport port-security mac-address <dummy mac address>
```


Configuration Commands for HP

HP SNMPv2 Commands

The following is a sample configuration for MAC notification traps for SNMP v2c. In the below configuration snmp server is configured as PPS, which is receiving SNMP traps. Execute the following commands in configuration mode.

```
snmp-server community "public"  
snmp-server community "private" unrestricted  
snmp-server host 10.204.89.131 community "public" trap-level all
```

The following command shows an example for configuring linkup, linkdown, and MAC notification traps.

```
--Execute the following commands for enabling linkup and linkdown traps.  
snmp-server enable traps link-change 5  
--Execute the following command for enabling mac notification.  
snmp-server enable traps mac-notify
```

HP SNMPv3 Commands:

The following commands show a sample configuration for configuring SNMP v3 on switch. In the below configuration snmp server is configured as PPS, which is receiving SNMP traps.

Execute the following commands in configuration mode.

```
snmpv3 enable  
snmpv3 only  
snmpv3 restricted-access  
snmpv3 group managerpriv user sec-model ver3  
snmpv3 notify "procurve" tagvalue "procurve"  
snmpv3 targetaddress "procurve" params "procurve" 10.204.89.131 filter all taglist "procurve"  
snmpv3 params "procurve" user sec-model ver3 message-processing ver3 priv  
  
snmpv3 community index "20" name "public" sec-name tag "procurve"  
  
snmpv3 user  
no snmpv3 user initial
```

The following command shows an example configuration for configuring port security trap.

```
snmp-server enable traps port-security
```

Policy Enforcement using MAC Authentication

This chapter provides an overview of the MAC authentication and enforcement using MAC authentication. It includes the following information:

- [Overview](#)
- [Benefits](#)
- [Deployments using MAC authentication](#)
- [Configuring MAC Authentication on PPS](#)

Overview

Media Access Control (MAC) authentication is used to authenticate devices based on their physical MAC addresses. Using MAC authentication PPS accepts the device MAC address as user credentials, matches it with the local database or LDAP server and then assigns the port connecting the device to a predetermined VLAN. MAC addresses can be easily spoofed so we recommend you to create separate VLANs or filters specifically for devices using MAC authentication. For example, you can create separate a special VLAN or separate filters for each of the device type such as printers, VOIP phones, and so on. You can also use Pulse Secure profiler for device validation and MAC authentication. For more information, see Pulse Secure Profiler.

MAC based authentication is not as secure as agent access or agentless access authentication. MAC addresses are not generally guarded as secrets, so an attacker can spoof a MAC address and impersonate a device to gain network access. To reduce risk of an exploit, create a special VLAN for each device type.

Benefits of MAC authentication

The benefits of MAC authentication are:

- PPS supports MAC authentication using both a local database and with LDAP servers.
- Supports authentication for unmanageable devices, such as printers, VOIP phones, and so on.
- Supports device validation and MAC authentication using Pulse Secure Profiler.

Deployments using MAC Authentication

MAC address authentication is port-based security typically deployed at the edge of the network to enable secure access for devices, such as IP phones, printers, and network attached storage devices. The PPS MAC address authentication solution uses PPS 802.1x framework. When a device connects to a switch, the switch forwards the MAC address as the log in credential to PPS RADIUS server. Using MAC based authentication, the MAC address serves as both the username and the password. The RADIUS server consults the authentication server and sends back a RADIUS return attribute based on the authentication results.


This section covers the following deployment scenarios:

- [Deployment of PPS using Local MAC Authentication Server](#)
- [Deployment of PPS using Pulse Secure Profiler](#)

Deployment of PPS using Local MAC Authentication Server

PPS supports MAC address authentication using a local Mac Authentication server. You can configure the PPS server to act as the authentication and policy server for MAC address authentication and optionally a separate directory/attribute server. You cannot use a RADIUS server with outer proxy authentication for MAC address authentication.

Figure72: PPS Deployment using Local MAC Authentication Server

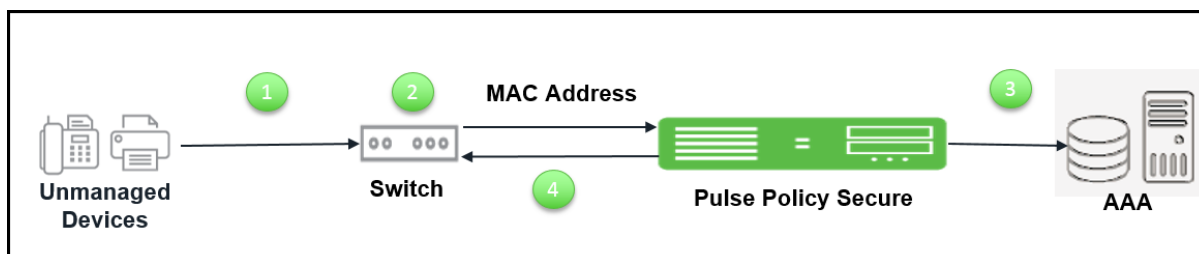


The authentication process is described below:

1. Unmanaged devices connect to network switch.
2. PPS accepts the device MAC address as username and password using MAC Authentication.
3. PPS matches the MAC address with the entries either in a local database or external database and then assigns a port connecting the device to a predetermined VLAN or filter id.
4. If the device MAC address is not found, then PPS places the device in a specified default VLAN.

Deployment of PPS using Pulse Secure Profiler

PPS supports the device validation using Pulse Secure profiler. Pulse Secure Profiler dynamically identifies and classifies endpoints across managed and unmanaged endpoint devices, so that access to network and resources can be controlled based on the type of the device.

Figure73: PPS Deployment using Pulse Secure Profiler

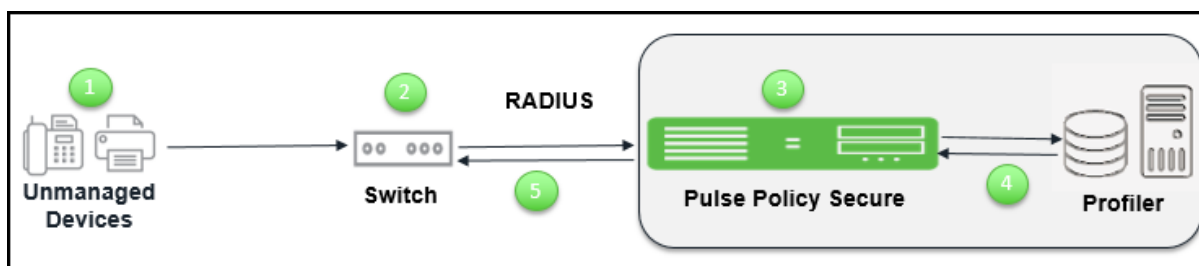

The authentication process is described below:

1. Pulse Secure profiler discovers and classifies the endpoints on the network.
2. Unmanaged devices connect to network and the switch sends MAC RADIUS query.
3. PPS verifies the MAC address in Pulse Secure Profiler database.
4. PPS then assigns role based on device attributes.
5. PPS assigns the switch port to appropriate VLAN or filter id.

For more information on Pulse Secure Profiler, see [Pulse Secure Deployment Guide](#).

Configuring MAC Authentication on PPS

To allow access for unmanageable devices, configure the necessary VLANs on your internal network to accommodate the different devices that you want to allow. On PPS, you assign devices to VLANs through the location groups that are added to RADIUS attributes policies.

This section covers the configuration for MAC authentication.

- [Configuring the MAC Address Authentication Server](#)
- [Configuring the MAC Address Authentication Realm and Role Mapping Rules](#)
- [Configuring User Roles for the MAC Address Authentication Realm](#)
- [Configuring a Location Group](#)
- [Configuring RADIUS Client](#)
- [Configuring RADIUS Attributes](#)

Configuring the MAC Address Authentication Server

To support MAC authentication, add a MAC authentication server to PPS. You can either configure the MAC addresses directly on PPS or you can associate the MAC authentication server with an LDAP server.

To configure the MAC address authentication server:

1. Select **Authentication > Auth.Servers**.
2. Select **MAC Address Authentication** and click **New Server** to display the configuration page MAC address authentication server configuration page.

Figure74: New MAC Address Authentication Server Configuration Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

MAC

Settings Users

Name: Label to reference this authentication.

MAC Addresses

Maximum 500 addresses.

Delete Add

| MAC Address | Action | Attributes |
|----------------------|--------|----------------------|
| <input type="text"/> | Allow | <input type="text"/> |
| ***** | Allow | attribute1=value1 |

Add

Example MAC Address:
00:11:85:8a:8c:88
00:80-1-1-1-1-1-1
Example Attribute:
attribute1=value1 attribute2=value2
(Be attribute: alphanumeric or "-" or "+" characters only)
The Allow & Attributes action accepts the defined MAC Address expression and looks it up in the optional LDAP Servers below for authorization attributes.

Optional LDAP Servers

Available LDAP Servers: Add > Remove

Selected LDAP Servers: Add > Remove

To manage servers, see the Server configuration page.

Server Catalog

The attributes catalog should be used for both attributes defined in the MAC Addresses Table and the optional LDAP Servers.

Save Changes Reset

3. Complete the configuration as described in the below table.
4. Click **Save Changes** to save the configuration.

Table11: MAC Address Authentication Server Settings

| Settings | Guidelines |
|-----------------------------------|---|
| Name | Specify a name to identify the configuration. Follow a convention that is helpful to you and others who might perform administration tasks. |
| MAC Addresses | |
| MAC Address | Enter a MAC address. The system supports various formats, including no-delimiter (003048436665), single dash (003048-436665), multidash (00-30-48-43-66-65), and multicolon (00:30:48:43:66:65). The system supports wildcards (00:30:*:*:*:*). In the user log, entries appear in the multicolon format. |
| Action | <p>Select an action to take when the MAC address matches:</p> <p>Allow—Signal successful authentication.</p> <p>Deny—Signal unsuccessful authentication.</p> <p>Allow and Attributes—Typically, a match terminates the search. If you select Allow and Attributes, the search is not terminated; instead, the system searches the LDAP servers for a match to retrieve the LDAP authorization attributes.</p> |
| Attributes | Specify a name-value pair to associate the MAC address with a particular group or organization. For example, dept=eng is a name-value pair that associates the MAC address with a department (engineering). When you create the MAC address realm, you can create a custom expression to assign the MAC address to a specific role. |
| Optional LDAP Servers | |
| Available / Selected LDAP Servers | <p>Use the Add and Remove selector buttons to add LDAP servers to the list of selected servers. Use the up and down buttons to order the list.</p> <p>The order in which the LDAP servers are listed is important. The system searches for MAC address matches in the following order:</p> <p>If the MAC address of the endpoint matches a manual entry, the system does not query servers in the LDAP server list. If no manual entries match, the system tries the first LDAP server. If the request times out or gets rejected, the system tries the second, then the third, and so on.</p> <p>NOTE: Each LDAP server that must be queried affects performance.</p> |
| Server Catalog | |
| Attributes | If you have selected LDAP servers in the configuration, save the configuration. After you have saved the configuration, the Attributes button is displayed. Click the Attributes button to display the LDAP server catalog, which you can use to select or add attributes to be retrieved from the LDAP servers. |

Configuring the MAC Address Authentication Realm and Role Mapping Rules

The MAC address authentication framework uses a special realm called the MAC Address Authentication Realm. You need not configure a sign-in policy while using MAC address authentication realm. The MAC Address authentication realm uses any username credential that matches one of the common variants of a MAC address format (colon-separated, dash-separated, and the like) and sends it to the MAC authentication realm based on its format.

To configure the MAC Address authentication realm and role mapping rules:

1. Select **Endpoint Policy > MAC Address Realm**.
2. Click New to create a new configuration.

Figure75: MAC Address Authentication Realm Settings

The screenshot shows the 'New Authentication Realm' configuration page in Pulse Secure. The page has a dark header with the Pulse Secure logo and navigation tabs: System, Authentication, Administrators, Users, Endpoint Policy (selected), Maintenance, and Wizards. The main content area is titled 'New Authentication Realm' and contains the following sections:

- Name:** A text input field.
- Description:** A text input field.
- When editing, start on the Role Mapping page:** A checkbox.
- Servers:** A section with a heading 'Specify the servers to use for authentication and authorization. To create or manage servers, see the Servers page.' It contains four dropdown menus:
 - Authentication:** Set to 'Mac'. A note to the right says 'Specify the server to use for authenticating users.'
 - User Directory/Attribute:** Set to 'Same as above'. A note to the right says 'Specify the server to use for authorization.'
 - Accounting:** Set to 'None'. A note to the right says 'Specify the server to use for Radius accounting.'
 - Device Attributes:** Set to 'None'. A note to the right says 'Specify the server to use for device authorization.'
- Dynamic policy evaluation:** A section with a heading 'Enable dynamic policy evaluation' and a checkbox.
- Save Changes:** A blue button at the bottom left.

3. Complete the configuration. The below table summarizes the key settings.

Table12: Key MAC Address Authentication Realm Settings

| Setting | Guideline |
|---------------------------|---|
| Name | Enter the name of the realm. |
| Description | Enter the description for identifying the realm. |
| Server | |
| Authentication server | Select the MAC Address authentication server configured. |
| User Directory/Attribute | Select the LDAP authentication server configured. |
| Accounting | Select the MAC Address authentication server configured. |
| Device attribute | Specify the server for device authorization. For profiler, select the name of the local profiler. |
| Dynamic Policy Evaluation | |
| Dynamic Policy Evaluation | Select this option to automatically or manually refresh the assigned roles of users by evaluating a realm's authentication policy, role-mappings, role restrictions, and resource policies. |

4. Save the configuration. Upon saving the new realm, the system displays the role mapping rules page. Under Role Mapping tab, click **New Rule**. Role Mapping Rule page appears.
5. Select **Device Attribute** under **Rule based on** tab and click **Update**. Enter the name for the rule.

6. Select the relevant Attribute under Attributes tab for Role Mapping and enter an appropriate value.
7. Select an appropriate role from Available Roles and Click **Add** to Selected Roles.
8. Click **Save Changes** to save the configuration settings.

Figure76: MAC Address Authentication Realm Role Mapping Settings

The screenshot shows the 'Role Mapping Rule' configuration page in the Pulse Secure interface. The breadcrumb trail is 'MAC Address Realm > MAC Realm > Role Mapping > Role Mapping Rule'. The page title is 'Role Mapping Rule'. Below the title, there is a 'Rule based on:' dropdown set to 'Username' with an 'Update' button. A 'Name' field is present. A section titled 'Rule if username...' contains a dropdown set to 'Is' and a text input field. A note states: 'If more than one username should match, enter one username per line. You can use * wildcards.' Below this, a section titled 'then assign these roles' shows 'Available Roles' (Guest, Guest Admin, OnboardRole, remed, Users) and 'Selected Roles' (none). There are 'Add ->' and 'Remove' buttons between the two lists. A checkbox 'Stop processing rules when this rule matches' is checked. At the bottom, there are 'Save Changes' and 'Save + New' buttons. A footer note says '*Indicates required field'.

Configuring User Roles for the MAC Address Authentication Realm

PPS access management framework evaluates authentication requests to match endpoints to roles. You must configure user roles for the various types of endpoints authenticated by the MAC address authentication framework.

To create a user role:

1. Select **Users > User Roles**.
2. Click New Role.
3. Complete the name and description configuration and then save the configuration.

Figure77: User Role General Configuration

The screenshot shows the 'New Role' configuration page in the Pulse Secure interface. The breadcrumb trail is 'User Roles > New Role'. The page title is 'New Role'. Below the title, there are 'Name' and 'Description' fields. A section titled 'Options' contains a note: 'Session and appearance options are specified in Default Options. Check the following if this role should override these defaults.' There are four checkboxes: 'Session Options' (checked), 'UI Options' (checked), 'Odyssey Settings for Access' (unchecked), and 'Odyssey Settings for Preconfigured Installer' (unchecked). At the bottom, there is a 'Save Changes' button.

4. Click Agent and deselect agent options and then save the configuration.

Figure78: User Role Agent Configuration

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'User Roles > Users > Agentless'. The 'Agentless' tab is selected. Under the 'Options' section, the 'Enable Agentless Access for this role' checkbox is checked. Below it, there are checkboxes for 'Disable use of AJAX for heartbeats' and 'Hide the Agentless page after Captive Portal redirect'. A 'Save Changes' button is at the bottom.

5. Click Agentless and enable agentless access and then save the configuration.

Figure79: User Role Agentless Configuration

This screenshot is similar to the previous one but shows the 'Agentless' tab selected. The 'Enable Agentless Access for this role' checkbox is checked. The same 'Save Changes' button is visible at the bottom.



NOTE: Do not configure role restrictions for roles used with a MAC address authentication realm.

Configuring a Location Group

Location groups let you organize or logically group network access devices by associating the devices with specific sign-in policies. Sign-in policies provide a way to define and direct independent access control policies with the network. For example, you can create location group policies to logically group the network access devices in each building at a corporate campus. You can also use location group policies to specify a special realm for MAC address authentication.

To configure a location group:

1. Create a sign-in policy to associate with the location group.
2. Select Endpoint Policy > Network Access > Location Group.

Figure80: Location Group Configuration Page

The screenshot shows the 'New Location Group' page in the Pulse Secure interface. The breadcrumb trail is 'Network Access > Location Group > New Location Group'. The 'Name' field contains 'MAC authentication'. The 'Sign-in Policy' dropdown is set to '*guestadmin'. The 'MAC Authentication Realm' dropdown is set to '(none)'. A 'Save Changes' button is at the bottom.

3. On the New Location Group page, enter a name to label this location group and optionally a Description.
4. For Sign-in Policy, select the sign-in policy associate with the location group.
5. For controlling an unmanageable device using MAC address authentication, select a MAC Authentication Realm that you created from the list.
6. Click **Save Changes**.

Configuring RADIUS Client

A RADIUS client policy specifies the information required for unmanaged devices to connect as a RADIUS client of the PPS. To configure a RADIUS client:

1. Select Endpoint Policy > Network Access > RADIUS Client.
2. Click New RADIUS Client.

Figure 81: RADIUS Client Configuration Page

The screenshot shows the 'New RADIUS Client' configuration page in the Pulse Secure interface. The breadcrumb trail is 'Network Access > RADIUS Client > New RADIUS Client'. The page title is 'New RADIUS Client'. The left sidebar shows 'RADIUS Client' under 'Network Access'. The main content area has the following fields and options:

- Name:** A text input field.
- Description:** A text input field.
- IP Address:** A text input field.
- IP Address Range:** A text input field with '1' entered.
- Shared Secret:** A text input field.
- Make/Model:** A dropdown menu with '- Standard Radius -' selected.
- Location Group:** A dropdown menu with 'Default' selected.
- Dynamic Authorization Support:**
 - Support Disconnect Messages:** A checkbox that is checked.
 - Support CoA Messages:** A checkbox that is checked.

On the right side, there are labels for each field: 'Label to reference this RADIUS Client', 'IP Address of this RADIUS Client', 'Number of IP Addresses for this RADIUS Client', 'RADIUS shared secret', and 'To manage make/model, see the RADIUS Vendor'. At the bottom left, there is a 'Save Changes' button and a note '* indicates required field'.

3. On the RADIUS Client page, enter a name to label the RADIUS client. You can assign any name to a RADIUS client entry, use the device's SSID or IPv4 address to avoid confusion.
4. Enter a purpose or description of the configuration so that other users are aware of it.
5. Enter the IP address of the NAD.
6. (Optional) For IP Address Range, enter the number of IP addresses in the IP address range for the switch/WLC, starting with the address you specified for IP Address. You can specify a range up to a maximum of 32,768 addresses.
7. For Shared Secret, enter the RADIUS shared secret. A RADIUS shared secret is a case-sensitive password used to validate communications between PPS and NAD. PPS supports shared secrets of up to 127 alphanumeric characters, including spaces and the following special characters:
~!@#\$%^&*()_+|=-'{}[]:"';<>?/.,
8. For Make/Model, select the make and model of the NAD. The make/model selection tells PPS which dictionary of RADIUS attributes to use when communicating with this client.
9. For Location Group, select the location group to use with this NAD.
10. Under **Dynamic Authorization support**, Select the Support Disconnect Messages check box to send disconnect messages to supplicants if access is no longer authorized. If this check box is selected, a disconnect request is sent to the NAD any time a session is deleted. PPS can also send disconnect messages upon a role event that includes a VLAN change or a change in RADIUS attributes.
11. Select **Support CoA Messages** to enable CoA messages and disconnect messages support for the client.
12. (Optional) Enter a new Dynamic Authorization Port (Default port is 3799). The default port might vary depending on the manufacturer. NAD listens to UDP port to receive RADIUS CoA messages from PPS.
13. Click Save Changes.

Note: MAC address authentication must be enabled on the switch port. See [Configuring 802.1x and MAC Authentication on the Switch Port](#) for switch configuration.

Configuring RADIUS Attributes

This configuration describes the configuration information for RADIUS return attributes policy that is applied on switch, request attribute policy, which can be used along with sign-in policies for realm selection, policy realm restrictions, and authentication/accounting reporting for RADIUS authentication events.

This configuration describes how to send VLAN assignment and other attributes to the switch/WLC by returning RADIUS attributes.

1. Select **Pulse Policy Secure > Network Access > RADIUS Attributes**, select VLAN.
2. Specify a VLAN ID.
3. Select Return Attribute.
4. Select the attribute you want to return from the Attribute list.
5. For Value, specify an attribute value.

For more information on RADIUS attribute policies, see [Configuring RADIUS Attributes Policies](#).

Policy Enforcement using 802.1X Native Supplicant

This chapter provides an overview of enforcement using native supplicant. It includes the following information:

- [Overview](#)
- [Benefits](#)
- [Deployments using 802.1X Authentication with Native Supplicant](#)
- [Configuring Agentless Host Checking with Native Supplicant](#)
- [Configuring 802.1X for Native Supplicant on PPS](#)
- [Configuring Native Supplicant for 802.1X Authentication](#)

Overview

PPS supports 801.X authentication using native supplicants. The Native supplicant is the default Operating System (OS) agent, which runs on the client machine. The mobile platforms and laptops have native supplicant support.

Benefits

- Supports simplified access to applications from personally owned devices, addressing the Bring Your Own Device (BYOD) users.
- Devices that do not have Pulse Secure client can authenticate with PPS and get the realm and roles applied.

Deployments using 802.1X Authentication with Native Supplicant


This section covers the following topics:

- [802.1X Authentication with Native Supplicant](#)
- [Agentless Host Checking with Native Supplicant](#)
- [Host Checking with Native Supplicant](#)

802.1X Authentication with Native Supplicant

Using PPS, you can provision 802.1X authentication for endpoints using native supplicant. The Layer 2 authentication and enforcement is used to control network access policies at the edge of the network using an 802.1X enabled switch or access point.

Figure 82: 802.1X Authentication with Native supplicant

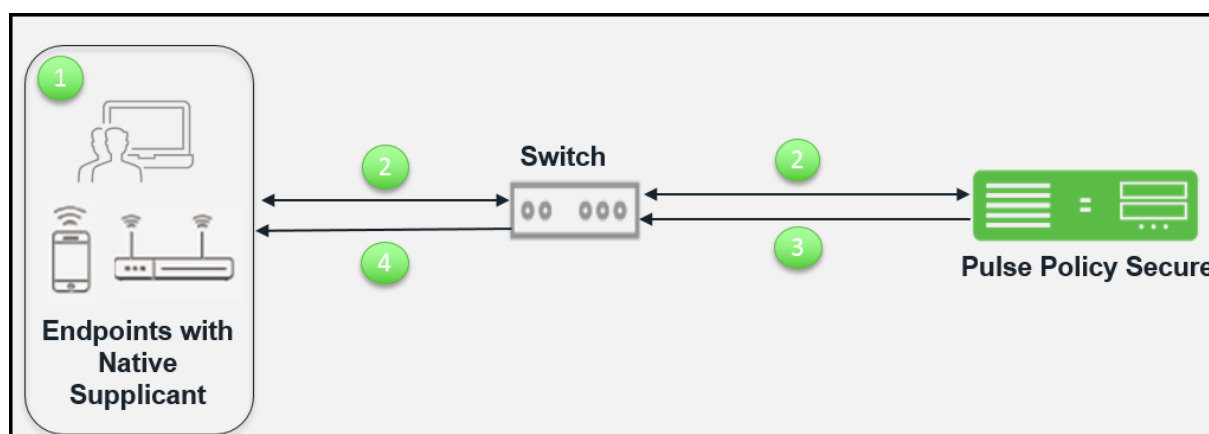

The workflow for 802.1X authentication with native supplicant is described below:


1. Configure the endpoints protocols from the Adapter settings as per the PPS configured protocols. Once the client adapter is online the authentication starts automatically.
2. Switch receives the request and starts RADIUS authentication with PPS. The user is prompted for user credentials.
3. PPS assigns the roles based on the credentials provided by the user. PPS communicates the enforcement rules to switch in form of RADIUS return attributes (For example, Change of VLAN) for the authenticated user.
4. Switch provides access and IP address to the endpoints based on the RADIUS return attributes.

Agentless Host Checking with Native Supplicant

As many users bring their own devices, additional intelligence must be applied to eliminate intrusions and protect sensitive information. The IT administrators need the ability to control where devices are allowed on the network, based on the device type, operating system, owner of the device and user log in credentials of the device. The network resource request must be handled appropriately and appropriate action must be taken for any violation, which includes limiting access to internet only.

The PPS solution provides endpoint compliance for BYOD devices for providing seamless access to protected resources with native supplicant. For example, enterprise users need to provide onsite access to employees and contractors. To provide network access, the BYOD devices from contractor must be compliant to host checker security policies. For such users, you can use 802.1X authentication using native supplicant and then endpoint compliance check is achieved using a web browser. A single session is created for both the connections and a single license is consumed.

Figure 83: Agentless Host Checking with Native Supplicant

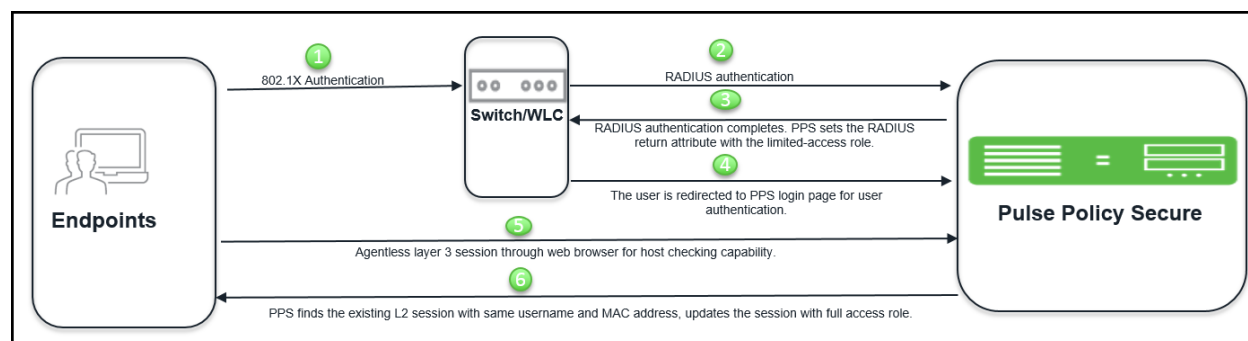

The workflow is described below:

1. The contractor user connects to network, performs layer 2 authentication using AD credentials. For 802.1X, AD username and password is used for authentication. For MAC authentication, endpoints MAC address or device attributes for profiler is used for authentication.
2. The endpoint host check is not performed and hence the user gets limited connectivity. The user must be compliant to host check security policy for full access.
3. PPS sets the RADIUS return attribute with limited access role. Limited access role is applied on the endpoint.
4. The user is redirected to a PPS log in page for user authentication.
5. The user opens the web browser and enters the AD username and password. The agentless Host Checker provides the compliance details to PPS.
6. PPS finds the existing session with the same username and MAC address and then updates the session with full access role.

The user gets the required full access to protected resources if the system is compliant to HC security policies.

Note:



- The user can choose to remember the username and password to avoid entering it multiple times for layer 2 and layer 3 connections.
- This feature is supported for Windows and MAC OSX.
- For configuration, see [Configuring Agentless Host Checking with Native Supplicant](#).

Host Checking with Native Supplicant

On Mac OSX and Windows endpoint using native supplicant, PPS Host checking can be enforced only for Layer 3 connection. Once the endpoint gets authenticated using native supplicant and gains network access, you can launch and install Pulse Secure client using web browser deployment or SCCM advertisement to establish a Layer 3 session. This evaluates the health status of the endpoints and thereby ensuring legitimate resource access behind PPS Enforcer.

There will be only one session for Layer 2 and Layer 3 connections on PPS which will consume single license.

For agentless host checking, native supplicant is used to perform 802.1x authentication. The compliance check is performed using browser based agentless L3 session. The L2 and agentless L3 session are bridged on PPS to provide compliance based layer 2 access control. For access control, RADIUS return attribute Filter-ID with Radius COA is used.



Note:

- The Host Checker functionality is not supported on the native Mozilla browser on MAC OSX. As a workaround disable the Captive Network Assistant feature, which is enabled by default or open the Pulse Secure client using a different web browser.
- Using Native Supplicant the Host Checker functionality is not supported. This is possible through [Configuring Agentless Host Checking with Native Supplicant](#).

Configuring Agentless Host Checking with Native Supplicant

The access control for this use case can be achieved through RADIUS CoA and a sample workflow is described below:

1. The native supplicant performs 802.1X authentication and PPS creates a session. The PPS assigns a limited access role since the host check is not performed.
2. The user configures the RADIUS URL-redirection attributes on the Cisco Switch. Using RADIUS URL-Redirection return attributes the Cisco switch redirects any initial HTTP/s traffic to PPS so that Layer 3 authentication is performed along with compliance check. Upon successful Host Check, a different set of radius attributes is pushed using Radius CoA to seamlessly access any resource.

You must configure the following return attributes (supported only on Cisco switches):

```
Cisco-AVPAIR=url-redirect-acl=REDIRECT_To_PPS
Cisco-AVPAIR=url-redirect=https://<PPS-SIGN-IN-URL>/
```

The below figure shows a sample PPS configuration for URL-redirection on Cisco switch.

Figure 84: RADIUS URL-Redirection on Cisco switch

The screenshot displays the 'Pulse Secure' web interface, specifically the 'Endpoint Policy' configuration page. Under the 'RADIUS Attributes' section, the 'Return Attribute' table is highlighted with a red box. The table has four columns: 'Return Attribute', 'Radius Auth Server Attribute Value', 'Auth Server Catalog Attribute Value', and 'Value'. A row is added with 'Filter-Id' in the first column, '-none-' in the second, '-none-' in the third, and 'url-redirect=https://10.204.1.100:443/ps/signin/' in the fourth. Below the table, the 'Roles' section shows 'Policy applies to ALL roles' selected. The 'Available roles' list includes 'Guest', 'Guest Admin', 'Users', 'r1', and 'r2'. The 'Selected roles' list is empty. At the bottom, there are 'Save Changes' and 'Save as Copy' buttons.

3. The user configures the RADIUS CoA attributes. The recommended radius return attribute to perform access control using RADIUS CoA is Filter-ID for wired devices and ACL-name for WLC.

You must configure the following return attributes on PPS:

```
Filter-Id=PERMIT-ALL.in
CiscoAVPAIR=subscriber:command=reauthenticate
Cisco-AVPAIR=subscriber:reauthenticate-type=last
```

The below figure shows a sample PPS configuration for RADIUS CoA.

Figure 85: RADIUS Return Attributes for CoA

The screenshot shows the Pulse Policy Secure web interface. The top navigation bar includes links for System, Authentication, Administrators, Users, Endpoint Policy (highlighted), Maintenance, and Wizards. The breadcrumb trail is Network Access > RADIUS Return Attributes Policies. The main heading is RADIUS Return Attributes Policies. Below this, there are tabs for RADIUS Dictionary, RADIUS Vendor, Location Group, RADIUS Client, RADIUS Attributes (selected), SNMP Device, and SNMP Enforcement Policies. Under the RADIUS Attributes tab, there are sub-tabs for Return Attributes (selected), Request Attributes, and Attribute Logging. A filter section shows 'Show policies that apply to: All roles' with an 'Update' button. A descriptive text states: 'A RADIUS return attributes policy specifies the return list attributes to send to an 802.1X network access device, such as which VLAN endpoints must use to access the network. If no policy applies, Open Port is the default action.' Below this are buttons for 'New Policy...', 'Duplicate', 'Delete...', and 'Save Changes'. The main table lists three policies:

| | Policies | Attributes | Location Group | Interface | Applies to role |
|----|----------------------------|--|-------------------------|-----------|-----------------|
| 1. | contractor-policy-wireless | ACL-Name=PERMIT-ALL Cisco-AVPAIR=subscriber:command=reauthenticate Cisco-AVPAIR=subscriber:reauthenticate-type=last | WIRELESS-LG | N/A | contractor |
| 2. | contractor-policy-wired | Filter-Id=PERMIT-ALL.in Cisco-AVPAIR=subscriber:command=reauthenticate Cisco-AVPAIR=subscriber:reauthenticate-type=last | WIRED_LG | N/A | contractor |
| 3. | remediation-policy | Cisco-AVPAIR=url-redirect-acl=REDIRECT-IQ Cisco-AVPAIR=url-redirect=https://10.204.89.171/test Session-Timeout=43400 Termination-Action=1 | WIRED_LG WIRELESS-LG | N/A | remediation |

- The agentless L3 authentication is done through web browser and host check is performed. If host check passes the user receives new role (for example, full-access), which provides full access to authorized resources.

Note:

- The L2 and L3 connections are merged and the merged session receives full-access role.
- The change of role triggers new RADIUS return attribute policy. The new policy triggers RADIUS CoA and applies new radius attribute, which provides full access to authorized resources.
- The RADIUS CoA configuration for various Cisco switch platforms is described below.

| Cisco Platform | IOS Version | RADIUS CoA Configuration |
|----------------|-------------|---|
| 3850 | 16.3 | Filter-Id=PERMIT-ALL.in Termination-Action=1 Session-Timeout=43400 |
| 2960X | 15.2 | Filter-Id=PERMIT-ALL.in Termination-Action=1 Session-Timeout=43400 |
| 2960 | 12.2 | Filter-Id=PERMIT-ALL.in CiscoAVPAIR=subscriber:command=reauthenticate Cisco-AVPAIR=subscriber:reauthenticate-type=last Termination-Action=1 Session-Timeout=43400 |

Configuring 802.1X for Native Supplicant on PPS

This section covers the procedure for configuring 802.1X authentication on PPS. It covers the PPS configuration that is used for native supplicant:

- [Configuring Authentication Protocol Set](#)
- [Creating and modifying the sign-in policy](#)
- [Configuring a Location Group](#)
- [Configuring Role and Role Mapping](#)
- [Configuring RADIUS Attributes Policies](#)

Note:

- Authentication Protocol Set configuration varies among different platforms. For example, MAC OSX supports EAP-TTLS/PAP, EAP-TTLS/MS-CHAP-V2 and PEAP/EAP-MS-CHAP-V2 authentication protocol set when PPS is configured with AD server for user authentication.
- EAP-TTLS/CHAP are supported with local authentication server and not supported on Active Directory.

Configuring Native Supplicant for 802.1X Authentication

This section covers the following topics:

- [Example: Configuring windows 7 native supplicant for 802.1X Authentication](#)
- [Example: Configuring MAC OSX native supplicant for 802.1X Authentication](#)

Example: Configuring Windows 7 Native Supplicant for PPS 802.1X Authentication

The 802.1X wired LAN Authentication gives you the possibility to connect your device using the cable network (wired). You can use the windows native supplicant for 802.1X authentication.

Requirements

- Your device must be equipped with a LAN interface and meet the standards for connecting to enterprise networks requiring 802.1X authentication.
- Local admin privileges are required on the endpoint.
- The OS security updates are installed and an Antivirus Software is present and up-to-date.
- It is recommended to disable all third-party connection management tools so that the native Windows tool is used.

Configuring the Windows Native Supplicant

To configure the native supplicant:


1. Select **Control Panel > System and Security > Administrative Tools** and access the Services tool.
2. In the services window locate the service named **Wired Autoconfig** and double click the service.

Figure 86: Service Tool

| | | | | |
|----------------------------|---------------|---------|-----------|----------------|
| WinHTTP Web Proxy Auto-... | WinHTTP i... | Running | Manual | Local Service |
| Wired AutoConfig | The Wired ... | Running | Automatic | Local Syste... |
| WLAN AutoConfig | The WLANs... | Running | Automatic | Local Syste... |

3. Select the Startup type **Automatic** and click **Start**.

Figure 87: Wired Autoconfig Properties

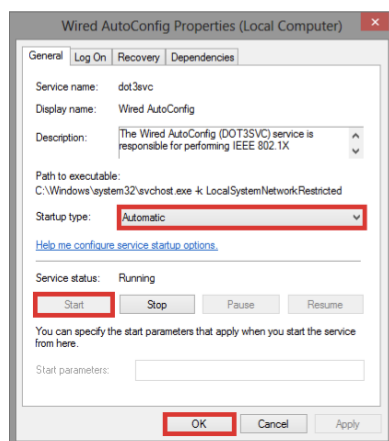


4. Click **Start > Control Panel > Network and Internet > Network and Sharing Center**.

5. Select **Change adapter settings** and then right click on the LAN adapter, **Ethernet** or **Local Area Connection** and select **Properties**.
6. Click the **Authentication** tab at the top of the window. Select **Enable IEEE 802.1X authentication** and **Fallback to unauthorized network access**. From the dropdown list about the network authentication, choose **Microsoft: Protected EAP (PEAP)**.
7. Click **Settings** to choose the authentication method and then click **OK** to proceed.


Note: If you choose **Remember my credentials for this connection each time I'm logged on** the user credentials are not prompted for every log in. Don't use this option if multiple people are using the device.

Figure 88: Ethernet Properties

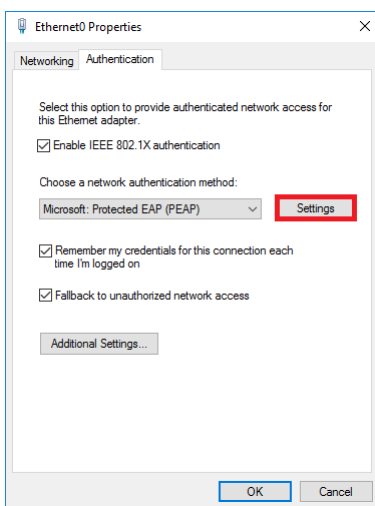


8. Uncheck **Verify the server's identity by validating the certificate** and select the **Enable Fast Reconnect** option. Click **Configure** to continue.

Figure 89: Protected EAP Properties

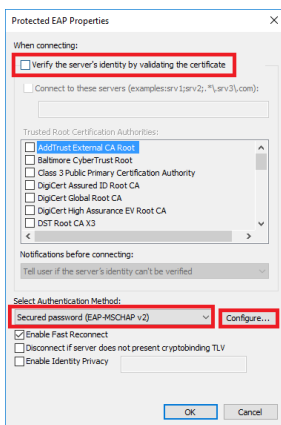


9. Uncheck **Automatically use my Windows logon name and password** and click **OK** to confirm.

Figure 90: EAP MSCHAPv2 Properties

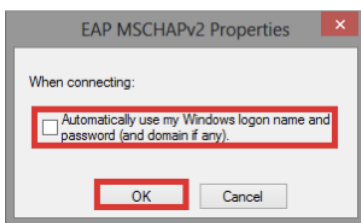

10. Click **Additional Settings**.


Figure 91: Ethernet Properties

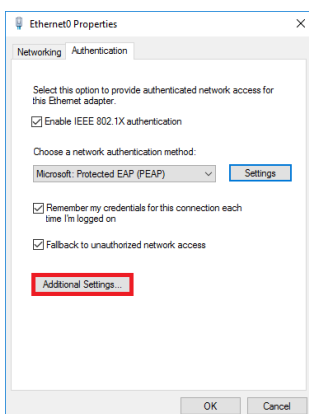

11. Select **Specify authentication mode** and choose **User authentication** from the list.


12. If you are using Cisco switch/WLC then you can use **Save credentials** to save the user credentials.

Figure 92: Advanced Settings

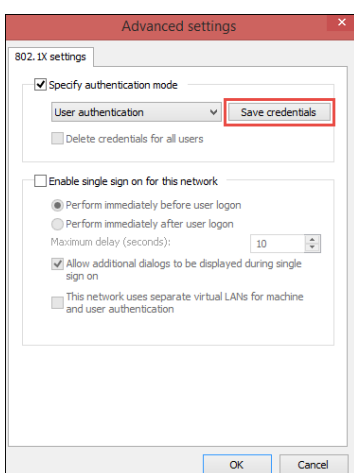

13. Click **Additional Settings** and choose **User authentication** and then Click **OK**.

Figure 93: Advanced Settings

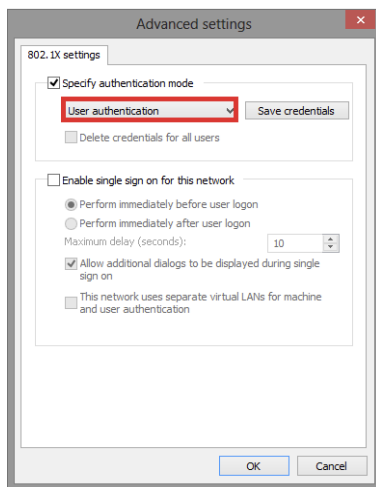

14. Plug the network cable and If already inserted, unplug it and attach it again.
15. A log in window pops to enter **Username** and **Password**.

Example: Configuring Mac OSX Native Supplicant for PPS 802.1X Authentication

This section details the procedure for configuring native Mac OSX supplicant for PPS 802.1X authentication.

Requirements:

- Apple Mac OSX endpoint
- iPhone Configuration utility

Configuring MAC OSX Native Supplicant

Authentication to a PPS 802.1X server in MAC OSX endpoints is achieved using Apple Configurator. This tool allows you to easily create, maintain, and install configuration profiles, track and install provisioning profiles, and capture device information including console logs.



Note: The latest MAC OSX endpoints can be configured using Apple Configurator 2 tool.

This section covers the following configuration:

- Configuring 802.1X profiles
 - Configuring TTLS-PAP authentication profile
 - Configuring TTLS/MS-CHAP-V2 authentication profile
 - Configuring PEAP authentication profile

Configuring 802.1x profile

You can create various profiles (TTLS/PAP, TTLS/MS-CHAP-V2, and PEAP/MS-CHAP-V2) required for PPS 802.1x authentication using Apple Configurator. The generated configuration profiles can be exported to a Mac OSX endpoint. To create profiles, install the profiles (by double clicking on the exported files) on their OSX endpoints and that will provision Layer 2 access when connected to 802.1x enabled switch port.

Configuring 802.1x profiles -TTLS/PAP, TTLS/MS-CHAP-V2, and PEAP/MS-CHAP-V2 applies only for General and Wi-Fi settings. If the authentication server is LDAP, use TTLS-PAP for LDAP servers. If the authentication server is Active Directory or local, use TTLS-MSChapV2 or PEAP-MSChapV2.

Configuring TTLS-PAP Authentication Profile

To configure TTLS-PAP profile, perform the following:

1. On the iPhone configuration utility (IPCU) navigate to **Configuration Profiles** tab.
2. On configuration Profiles page, select **General** and enter the required values.

Figure 94: TTLS: PAP General Configuration

The screenshot shows the 'General' configuration page for a profile named 'TTLS-PAP'. The left sidebar lists various configuration categories: General (Mandatory), Passcode (Not Configured), Restrictions (Not Configured), Wi-Fi (1 Payload Configured), VPN (Not Configured), Email (Not Configured), Exchange ActiveSync (Not Configured), LDAP (Not Configured), CalDAV (Not Configured), and CardDAV (Not Configured). The main content area is titled 'General' and contains the following fields:

- Name:** Display name of the profile (shown on the device). Value: TTLS-PAP.
- Identifier:** Unique identifier for the profile (e.g. com.company.profile). Value: net.pulsesecure.dot1x.
- Organization:** Name of the organization for the profile. Value: Pulse Secure.
- Description:** Brief explanation of the contents or purpose of the profile. Value: Profile description.
- Security:** Controls when the profile can be removed. Value: Always.

3. Select Wi-Fi and enter the required values.

Figure 95: TTLS: PAP Wi-Fi

The screenshot shows the 'Wi-Fi' configuration page for the 'TTLS-PAP' profile. The left sidebar is the same as in Figure 94. The main content area is titled 'Wi-Fi' and contains the following settings:

- Service Set Identifier (SSID):** Identification of the wireless network to connect to. Value: TTLS-PAP.
- Auto Join:** ☐ Automatically join the target network.
- Hidden Network:** ☐ Enable if target network is not open or broadcasting.
- Proxy Setup:** Configures proxies to be used with this network. Value: None.
- Security Type:** Wireless network encryption to use when connecting. Value: WPA / WPA2 Enterprise.
- Enterprise Settings:** Configuration of protocols, authentication, and trust. Sub-tabs: Protocols, Authentication, Trust.
- Accepted EAP Types:** Authentication protocols supported on target network.
 - ☐ TLS ☐ LEAP ☐ EAP-FAST
 - ☒ TTLS ☐ PEAP ☐ EAP-SIM
- EAP-FAST:** Configuration of Protected Access Credential (PAC).
 - ☐ Use PAC
 - ☐ Provision PAC
 - ☐ Provision PAC Anonymously
- Inner Authentication:** Authentication protocol (for use only with TTLS). Value: PAP.

Configuring TTLS/MS-CHAP-V2 Authentication Profile

To configure TTLS/MS-CHAP-V2, perform the following:

1. On the iPhone configuration utility (IPCU) navigate to **Configuration Profiles** tab.
2. On configuration Profiles page, select **General** and enter the required values.

Figure 96: TTLS: CHAP-v2 General

The screenshot shows the 'General' configuration page for a profile named 'TTLS-MSCHAPV2'. The left sidebar lists various configuration categories: General (Mandatory), Passcode (Not Configured), Restrictions (Not Configured), Wi-Fi (1 Payload Configured), VPN (Not Configured), Email (Not Configured), Exchange ActiveSync (Not Configured), LDAP (Not Configured), CalDAV (Not Configured), and CardDAV (Not Configured). The main content area is titled 'General' and contains the following fields:

- Name:** Display name of the profile (shown on the device). Value: TTLS-MSCHAPV2.
- Identifier:** Unique identifier for the profile (e.g. com.company.profile). Value: net.pulsesecure.dot1x.
- Organization:** Name of the organization for the profile. Value: [optional].
- Description:** Brief explanation of the contents or purpose of the profile. Value: Profile description.
- Security:** Controls when the profile can be removed. Value: Always.

3. Select **Wi-Fi** and enter the required values.

Figure 97: TTLS: CHAP-v2 Wi-Fi

The screenshot shows the 'Wi-Fi' configuration page for the same 'TTLS-MSCHAPV2' profile. The left sidebar is the same as in Figure 96. The main content area is titled 'Wi-Fi' and contains the following fields:

- Service Set Identifier (SSID):** Identification of the wireless network to connect to. Value: TTLS-MSCHAPV2.
- Auto Join:** Automatically join the target network. ☐ (unchecked).
- Hidden Network:** Enable if target network is not open or broadcasting. ☐ (unchecked).
- Proxy Setup:** Configures proxies to be used with this network. Value: None.
- Security Type:** Wireless network encryption to use when connecting. Value: WPA / WPA2 Enterprise.
- Enterprise Settings:** Configuration of protocols, authentication, and trust. Sub-tabs: Protocols, Authentication, Trust.
 - Accepted EAP Types:** Authentication protocols supported on target network.
 - ☐ TLS, ☐ LEAP, ☐ EAP-FAST, ☒ TTLS, ☐ PEAP, ☐ EAP-SIM.
 - EAP-FAST:** Configuration of Protected Access Credential (PAC).
 - ☐ Use PAC, ☐ Provision PAC, ☐ Provision PAC Anonymously.
 - Inner Authentication:** Authentication protocol (for use only with TTLS). Value: MSCHAPv2.

Configuring PEAP Authentication Profile

To configure PEAP, perform the following:

1. On the iPhone configuration utility (IPCU) navigate to **Configuration Profiles** tab.
2. On configuration Profiles page, select **General** and enter the required values.

Figure 98: PEAP: CHAP-v2 General

General

Name
Display name of the profile (shown on the device)
PEAP

Identifier
Unique identifier for the profile (e.g. com.company.profile)
net.pulsesecure.dot1x

Organization
Name of the organization for the profile
[optional]

Description
Brief explanation of the contents or purpose of the profile
Profile description.

Security
Controls when the profile can be removed
Always

3. Select **Wi-Fi** and enter the required values.

Figure 99: PEAP: CHAP-v2 Wi-Fi

Service Set Identifier (SSID)
Identification of the wireless network to connect to
PEAP

☐ **Auto Join**
Automatically join the target network

☐ **Hidden Network**
Enable if target network is not open or broadcasting

Proxy Setup
Configures proxies to be used with this network.
None

Security Type
Wireless network encryption to use when connecting
WPA / WPA2 Enterprise

Enterprise Settings
Configuration of protocols, authentication, and trust
Protocols Authentication Trust

Accepted EAP Types
Authentication protocols supported on target network
☐ TLS ☐ LEAP ☐ EAP-FAST
☐ TTLS ☒ PEAP ☐ EAP-SIM

EAP-FAST
Configuration of Protected Access Credential (PAC)
☐ Use PAC
☐ Provision PAC
☐ Provision PAC Anonymously

Layer 3 Enforcement

Layer 3 enforcement means using devices other than L2 switches or wireless access points for enforcement. This includes adding SRX, ScreenOS, Palo Alto, Fortigate, and Check Point firewall as enforcement points.

This part covers the following chapters:

- [Enforcement using Check Point Next-Generation Firewall](#)
- [Enforcement using Palo Alto Networks Firewall](#)
- [Identity Based Enforcement using FortiGate Products](#)
- [Enforcement using SRX Series Firewall](#)
- [Enforcement using Screen OS Firewall](#)
- [IPsec Policy enforcement using SRX and ScreenOS](#)
- [Enforcement using EX Series Ethernet Switches](#)
- [IF-MAP Federation](#)
- [Provisioning PCS sessions to PAN/Check Point Firewall](#)

Enforcement using Check Point Next-Generation Firewall

This chapter provides an overview of enforcement using Check Point Next-Generation Firewall. It includes the following information:

- [Overview](#)
- [Deployment of PPS using Check Point Next-Generation Firewall](#)
- [Configuring PPS with Check Point Next-Generation Firewall](#)
- [Configuring Check Point Next-Generation Firewall](#)
- [Troubleshooting](#)
- [Unsupported Features](#)

Overview

PPS delivers layer 3 network access control solution when deployed with Check Point Next-Generation Firewall (NGFW). PPS authenticates users, ensures that the endpoints meet security policies, and then dynamically updates the firewall enforcement point with the resulting user session information. Upon successful user authentication with PPS, the access to protected resources behind the firewall is based on the user identity, IP address, and user role information provided by PPS.


The PPS and Check Point firewall integration provides identity enabled layer 3 enforcement for BYOD, guests, and enterprise employees and protects corporate sensitive data from unauthenticated access and attacks.

Deployment of PPS using Check Point Next-Generation Firewall

This section describes the integration of PPS with Check Point Next-Generation Firewall. The Check Point Next-Generation Firewall controls the access to resources (for example, internet, CRM systems, Wikis and so on.) based on policy settings that defines the access. The Check Point Next-Generation Firewall allows integration with directory sources (For example, AD or LDAP) to get user and group information. The policies are then defined based on user role information.

PPS serves as the provider of identity information (For example, user-ID, IP address, and roles) for Check Point Next-Generation Firewall. The Check Point Next-Generation Firewall uses the identity information provided by the PPS for deciding the resource access.

Figure100: Integrating Check Point with PPS

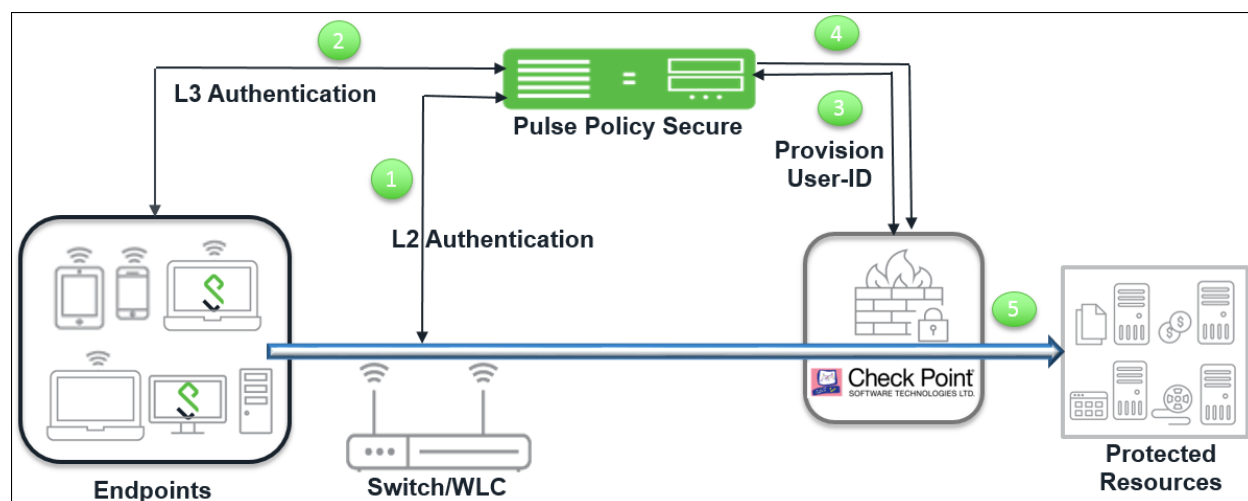

The authentication process is described below:


1. The endpoints connect to Switch/WLAN and performs the layer 2 authentication with PPS.
2. PPS performs the layer 3 authentication and performs compliance check on the endpoint and detects for any unauthorized behavior. PPS can also learn endpoint IP address using accounting and provision mapping.
3. PPS provisions the auth table entries (user-ID, IP address, and roles) on the Check Point Next-Generation Firewall.
4. The user role changes, which includes any unauthorized behavior are dynamically updated on the firewall. PPS provisions the auth table with changes in role information if any on Check Point Next-Generation Firewall. The access is based on roles.
5. The Check Point Next-Generation Firewall applies policies to allow or block user access to protected resources.

Deployment of PPS with Check Point Next-Generation Firewall for a Large Enterprise

For an enterprise with remote branch offices connected to the headquarters with VPN, deploy the Security Gateway at the remote branch offices. When you enable Identity Awareness on the branch office Security Gateway, users are authenticated before they reach internal resources. The identity data on the branch office Security Gateway is shared with other Security Gateways to avoid unnecessary authentication.

For more information see, [Identity Awareness](#) feature of Check Point.

Figure101: Check Point with PPS

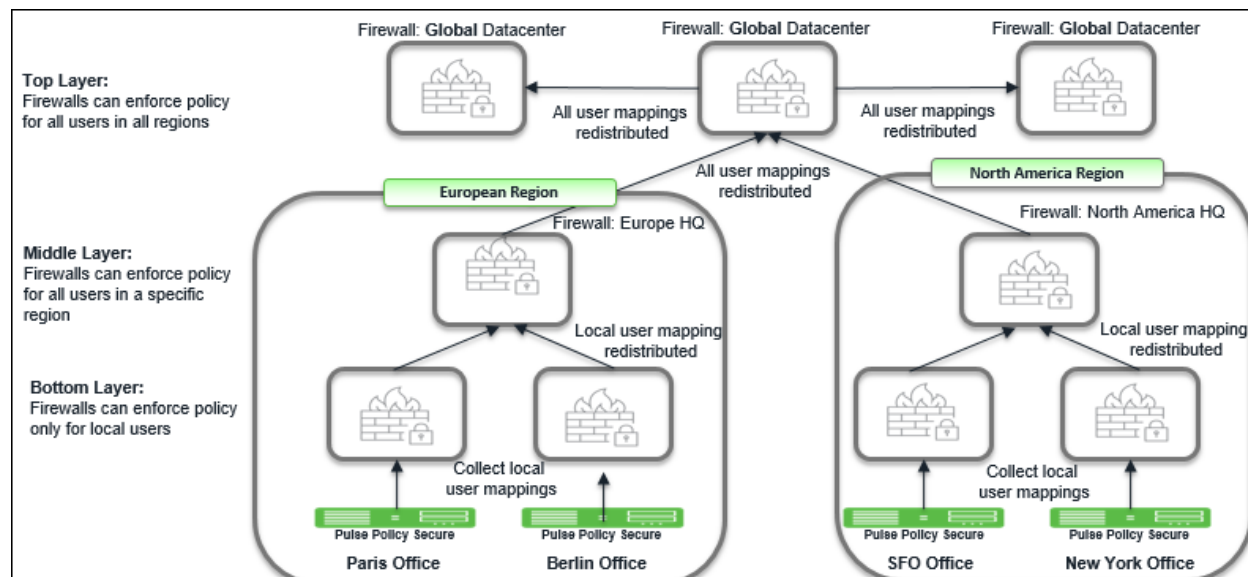

Configuring PPS with Check Point Next-Generation Firewall

This section covers the configuration of PPS for adding Check Point Next-Generation Firewall as an Infranet Enforcer.

The following are the configuration steps:

- [Configuring Check Point Infranet Enforcer in PPS](#)
- [Configuring Auth Table Mapping Policies](#)


Configuring Check Point Infranet Enforcer in PPS

The PPS configuration requires defining a new Check Point Infranet Enforcer instance on PPS and then fetching the pre-configured shared secret key from the firewall. The shared secret key is used to communicate between the Check Point firewall and PPS. The standard user authentication / authorization configurations such as Auth Table Mapping Policies should also be created and associated with the required roles.

To configure a Check Point Firewall Infranet Enforcer in PPS:

1. Select **Endpoint Policy > Infranet Enforcer**.

Figure 102: Infranet Enforcer

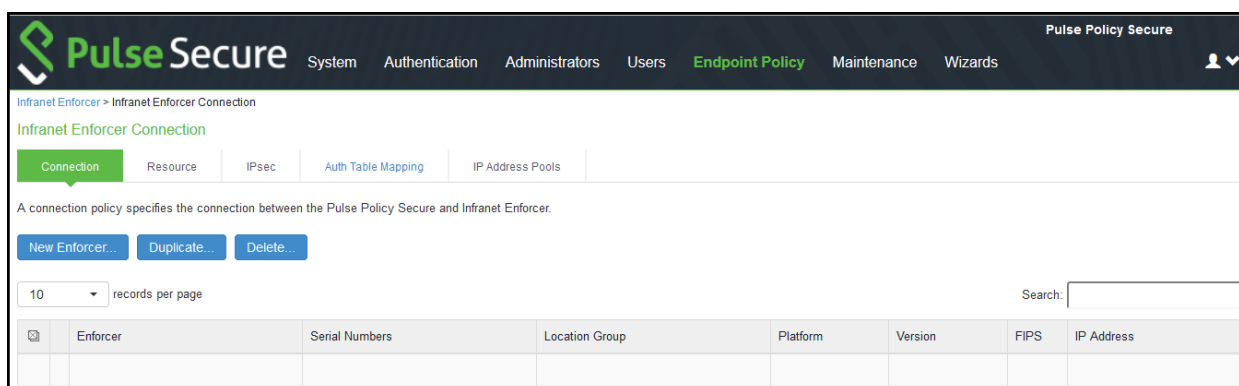

2. Click **New Infranet Enforcer** and select **Check Point Firewall** in the **Platform** drop down.
3. Enter the **Name** and **IP Address** of the Check Point Next-Generation Firewall and enter the shared secret between PPS and Check Point.

Note: PPS has the default server URL for Check Point R80.10.

Figure103: Check Point Firewall

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Infranet Enforcer > Connection > 10.204.100.100

Connection

▼ Infranet Enforcer

Platform: **Check Point** Platform of this Infranet Enforcer.

* Name: 10.204.100.100 Label to reference this Infranet Enforcer.

* IP Address: 10.204.100.100 IP Address of this Infranet Enforcer

By default the Server Uri will be "https://<ipAddress>/_IA_API/v1.0".
To modify Server Uri click on [edit](#)

* ServerUri: https://10.204.100.100/_IA_API/v1.0 ServerUri of this Infranet Enforcer

* Shared Secret: ***** Pre-Shared Secret:

Server Certificate Validation: ☐ Enable this option to verify the firewall's certificate

Save Changes

* indicates required field

For previous version of Check Point (R77.30), edit the server URL manually to `https://<IP_Address>/IA_MU_Agent/idasdk`

Figure104: Check Point Firewall

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Infranet Enforcer > Connection > 10.204.100.100

Connection

▼ Infranet Enforcer

Platform: **Check Point Firewall** Platform of this Infranet Enforcer.

* Name: 10.204.100.100 Label to reference this Infranet Enforcer.

* IP Address: 10.204.100.150 IP Address of this Infranet Enforcer

By default the Server Uri will be "https://<ipAddress>/_IA_API/v1.0".
To modify Server Uri click on [edit](#)

* ServerUri: https://10.204.100.150/_IA_MU_Agent/idasdk ServerUri of this Infranet Enforcer

* Shared Secret: ***** Pre-Shared Secret:

Server Certificate Validation: ☐ Enable this option to verify the firewall's certificate

Save Changes

* indicates required field

4. (Optional) Select **Server Certificate Validation** to verify the firewall certificate.
5. Click **Save Changes**.

Configuring Auth Table Mapping Policies

An auth table entry consists of the user's name, a set of roles, and the IP address of the user device. An auth table mapping policy specifies which enforcer device (Firewall) can be used for each user role. These policies prevent the PPS from creating unnecessary auth table entries on all connected enforcer devices.

PPS's default configuration includes only one default auth table mapping policy. When the default auth table mapping policy is enabled, PPS pushes one auth table entry for each authenticated user to the selected Check Point Next-Generation Firewall configured as Infranet Enforcers in PPS.

To configure an Auth Table Mapping Policy:

1. Select **Endpoint Policy > Infranet Enforcer > Auth Table Mapping** and click **New Policy**.

Figure 105: Check Point Firewall Configuration

The screenshot displays the Pulse Secure web interface for configuring a policy. The breadcrumb trail is: Infranet Enforcer > Infranet Enforcer Auth Table Mapping Policies > Default Policy. The page title is "Default Policy".

General

* Name: CP Policy Required: Label to reference this policy.
 Description:

▼ Infranet Enforcer

Specify the Infranet Enforcer(s) to which this policy applies.

Available Enforcers: (none)
 Selected Enforcers: CP_1

▼ Roles

☐ Policy applies to ALL roles
☒ Policy applies to SELECTED roles
☐ Policy applies to all roles OTHER THAN those selected below

Available roles: Guest, Guest Admin, Guest Sponsor, Guest Wired Restricted, Users
 Selected roles: Full_Access, Limited_Access

▼ Actions


☒ Always Provision Auth Table
☐ Provision Auth Table As Needed Only available for Juniper enforcers.
☐ Never Provision Auth Table

VSYS:

* Indicates required field

2. On the New Policy page:
 - 1.1. For Name, enter a name to label the auth table mapping policy.
 - 1.2. (Optional) For Description, enter a description.


- 1.3. In the Enforcer section, specify the Infranet Enforcer firewall(s) to which you want to apply the auth table mapping policy.
 - 1.4. In the Roles section, specify:
 - Policy applies to ALL roles—Select this option to apply the auth table mapping policy to all users.
 - Policy applies to SELECTED roles—Select this option to apply the auth table mapping policy only to users who are mapped to roles in the SELECTED roles list. You can add roles to this list from the available roles list.
 - Policy applies to all roles OTHER THAN those selected below—Select this option to apply the auth table mapping policy to all users except for those who map to the roles in the SELECTED roles list. You can add roles to this list from the available roles list.
 - 1.5. In the Action section, specify auth table mapping rules for the specified Infranet Enforcer.
 - Always Provision Auth Table—Select this option to automatically provision auth table entries for chosen roles on the specified Infranet Enforcer.
 - Provision Auth Table as Needed—Select this option to provision auth table entries only when a user with a chosen role attempts to access a resource behind the specified Infranet Enforcer. This option is greyed out for Check Point Firewall Enforcers since it is not supported.
 - Never Provision Auth Table—Select this option to prevent chosen roles from accessing resources behind the specified Infranet Enforcer.
2. You must delete the Default Policy if you configure any custom auth table mapping policies. PPS's default configuration includes this default auth table mapping policy that allows all source IP endpoints to use all Infranet Enforcers.
3. Click **Save Changes**.

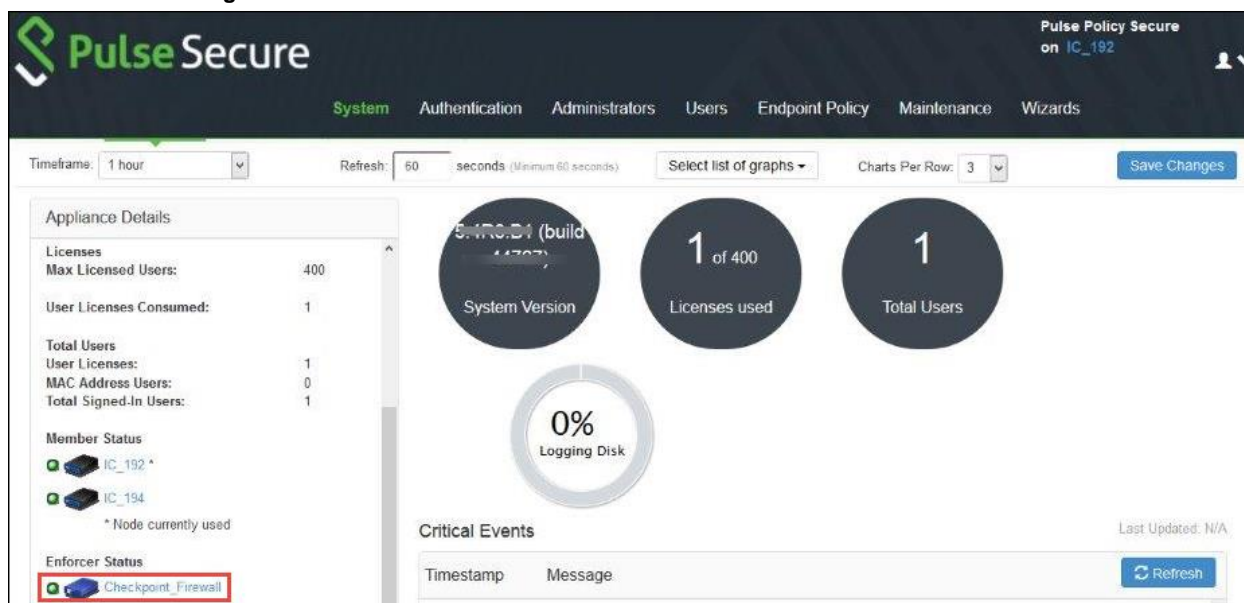

Configuring Check Point Next-Generation Firewall

Check Point firewall detects traffic from an endpoint that matches a configured security policy using the access roles. It determines the role(s) associated with that user, and allows or denies the traffic based on the actions configured in the security policy.

The network interfaces are configured on the Check Point Next-Generation firewall and the remaining configurations are done on the Check Point Smart Console.

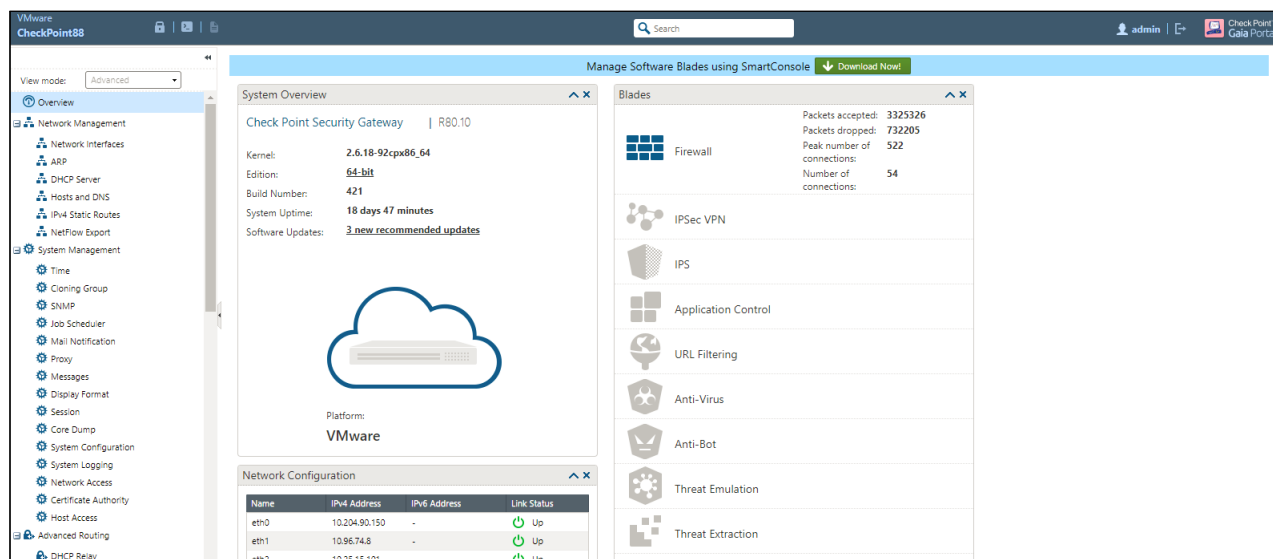


Configuring Identity Awareness in SmartConsole

The Identity Awareness lets you easily configure network access and auditing based on network location, identity of user, and identity of the device. When Identity Awareness identifies a source or destination, it shows the IP address of the user or computer with a name. For example, this lets you create firewall rules with any of these properties. You can define a firewall rule for specific users when they send traffic from specific computers or a firewall rule for a specific user regardless of which computer they send traffic from.

To enable Identity awareness:


1. Login to the Check Point SmartConsole.
2. From the **Security & Gateways** view, double-click the Security Gateway on which to enable identity awareness.

Figure106: SmartConsole

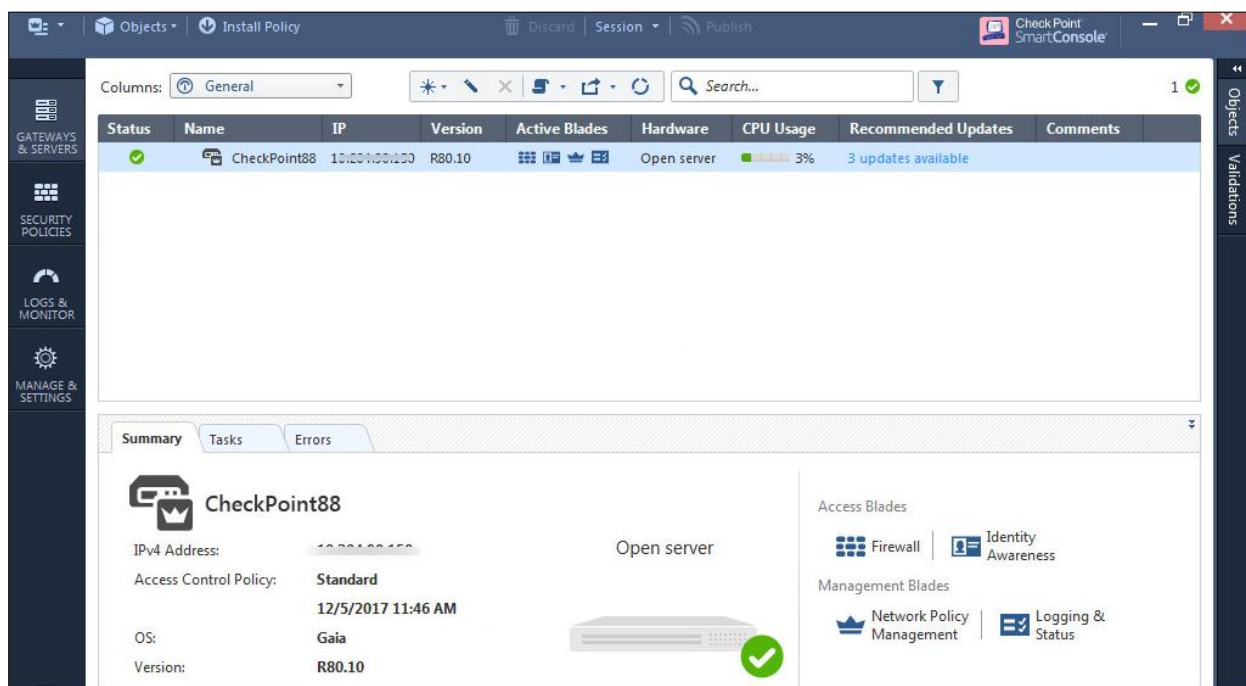


3. Create an object for PPS. Select **Objects > New Host** and enter the PPS IP address. Under Servers, enable **Web Server** and click **OK**.

Figure107: Host

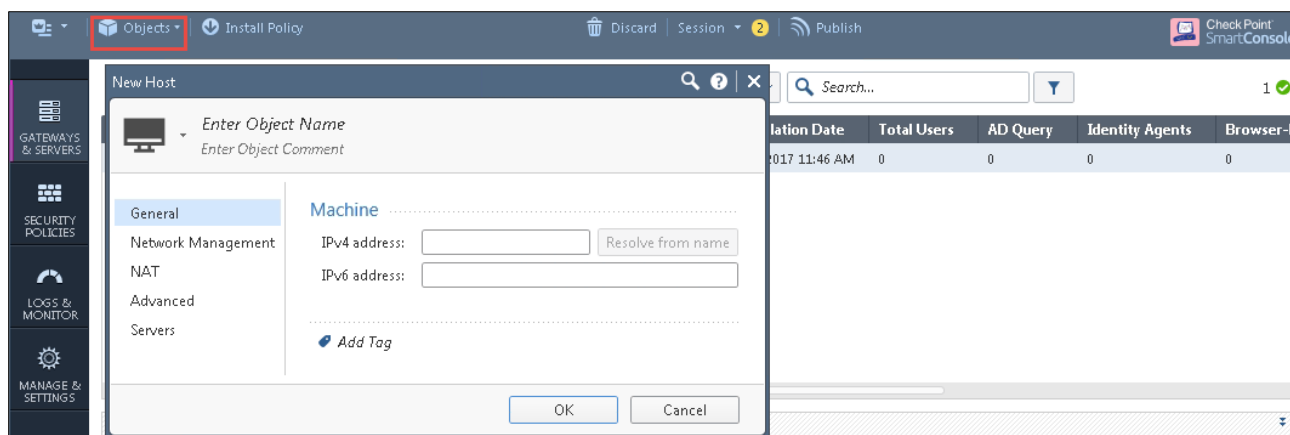

4. Select **Gateways & Servers > Identity Awareness** and enable the following options:
 - **Terminal Servers**- Note down the pre-shared secret key.
 - **Identity Web API**- Click **Settings** and add the PPS device as Authorised Clients.


Figure 108: Identity Awareness

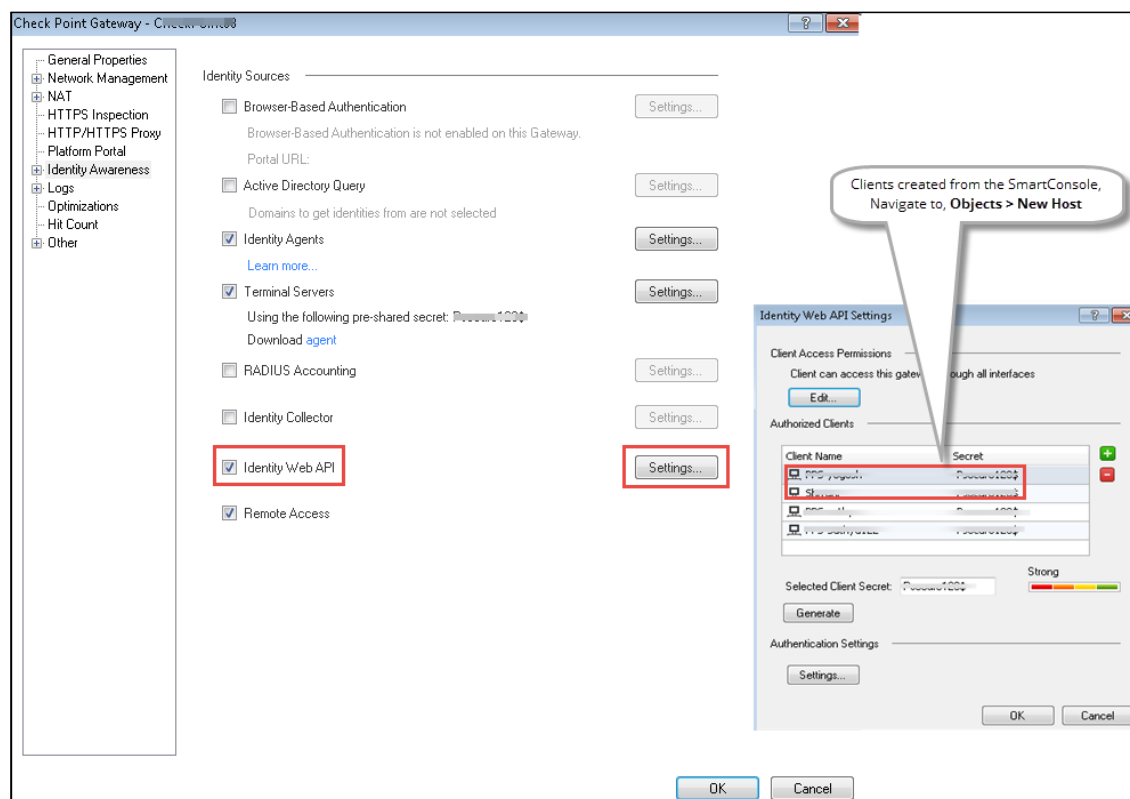

5. Click **Install Policy**.
6. From the Object Explorer create an object for Identity matching by creating user roles. Select **Objects > Object Explorer** and Click **New > Users > Access Role**


Note: The role names must match with the Role names created on PPS.

Figure 109: Creating Access Roles

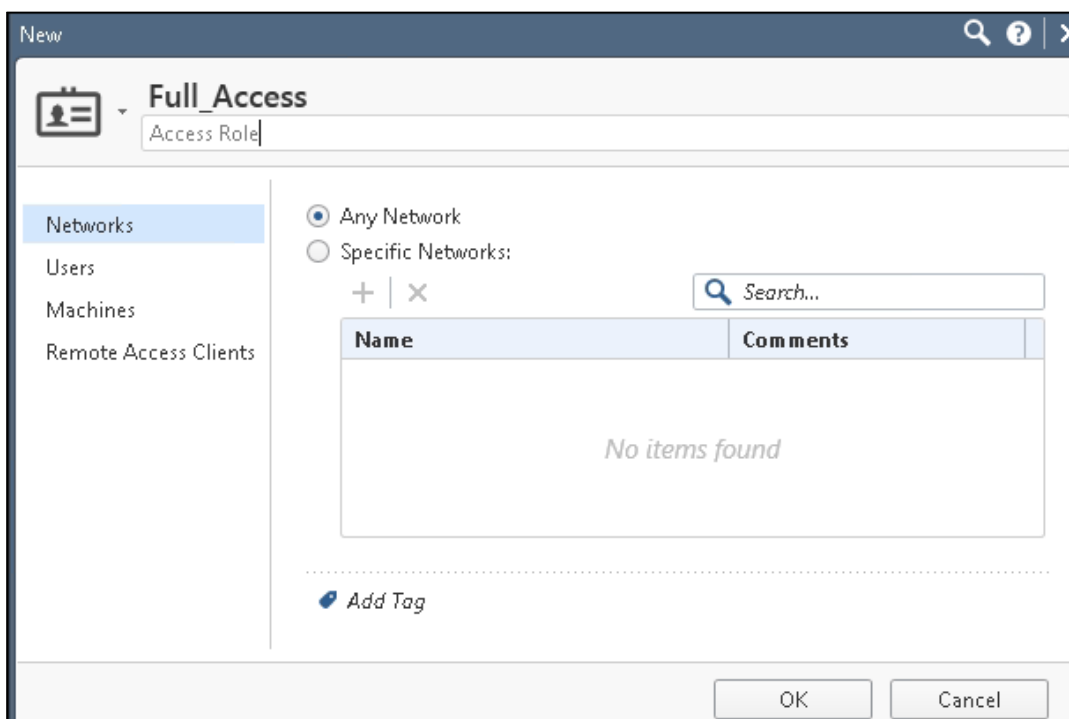

- From the SmartConsole, create a security policy by keeping the Access Role in Source column. Select **Security Policies > Access Control > Policy** and then configure the required policies. For example, Full_Access policy allows traffic from Client with Full_Access role, Limited_Access role policy denies traffic from Client with Limited_Access role, and default_allow policy which allows all traffic. The Full_Access role is on the top of the list since it should be considered first.

Figure 110: Security Policy based on Access Roles

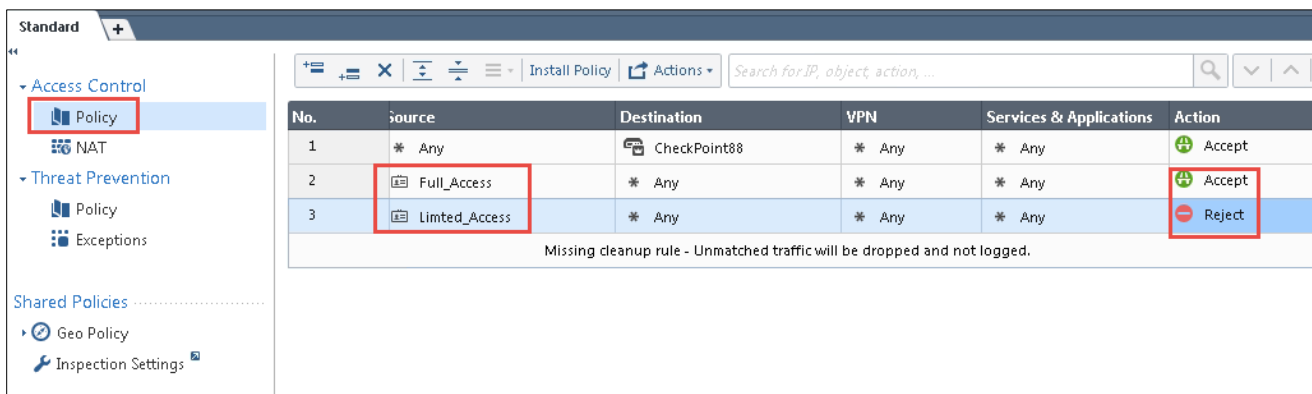

- Click **Install Policy**.

Troubleshooting

You can use the following CLI commands (Expert Mode) on the Check Point firewall for troubleshooting:

- *pdp monitor all* — Displays the table of user identities mapped to IP addresses.

Unsupported Features

The following features are not supported:

- IP Address Pools
- IPsec Enforcement
- IDP Sensors
- Virtual Systems (VSYS)
- Enforcement for endpoints behind Network Address Translation (NAT)
- Resource access policies. The administrator should configure all firewall policies on the firewall through smartboard

Enforcement using Palo Alto Networks Firewall

This chapter provides an overview of enforcement using Palo Alto firewall. It includes the following information:

- [Overview](#)
- [Deployment of PPS using PAN Firewall](#)
- [Configuring PPS with PAN Firewall](#)
- [Configuring Palo Alto Networks Firewall](#)
- [Troubleshooting](#)

Overview

PPS delivers layer 3 network access control solution when deployed with Palo Alto Networks next-generation firewalls. PPS authenticates users, ensures that the endpoints meet security policies, and then dynamically updates the firewall enforcement point with the resulting user session information. Upon successful user authentication with PPS, the access to protected resources behind the firewall is based on the user identity, IP address, and user role information provided by PPS.

The PPS and PAN integration provides identity enabled layer 3 enforcement for BYOD and guests as well as enterprise employees, with the end authentication and comprehensive compliance checks from PPS.

Deployment of PPS using PAN Firewall

This section describes the integration of PPS with Palo Alto Networks next-generation firewall. The PPS and PAN firewall integration allows users to enforce role based access to network resources and web applications and ensures endpoint compliance. The integrated solution provides policy enforcement for end to end protection of sensitive corporate data from unauthenticated access and attacks.

PPS combines user identity and device security state information with network location to create a unique, session specific access control policy for each user. The Palo Alto Networks firewall provides a feature called User Identification (User-ID) that creates policies and performs reporting based on users and groups rather than individual IP addresses. PPS uses the User-ID XML API to send the IP address to user and IP address to Group (Role) mapping information to the Palo Alto Networks firewall. PAN firewall enables the flexibility to apply different rules to the same server based on tags. A tag is a metadata element, which defines its role on the network, the operating system, or the different kinds of traffic it processes.

The Palo Alto Networks firewall compares the user information against the tag that is associated to a security rule. If the User Role name matches the tag, then traffic is either allowed or denied based on the configuration. When a user logs in, Pulse Policy Secure provisions their user ID, IP address of the endpoint, and role information to the Palo Alto Networks firewall; that enables firewall policies based on any of these attributes to be enforced.

Similarly, when a user logs out, the user ID, IP address of the endpoint, and role information is removed from the firewall. More importantly, when a user's role changes, the role change information is dynamically updated on the firewall, so that access based on the updated roles is automatically changed based on the policy matched by the new information.

With Palo Alto Networks firewall integration, all users' role changes, which includes compliance check failure or unauthorized behavior are dynamically updated on the firewall. The access is based on user roles and not merely on source IP addresses.

PPS is the policy decision point that determines which users and endpoints can access protected resources. Palo Alto Networks Next Gen firewalls serve as the policy enforcement points to provide the ultimate protection to ensure that network assets are secured.

Palo Alto Networks integration with Pulse Policy Secure leverages dynamic role information provisioned to the firewall upon user session establishment and for the duration of the session. Pulse Policy Secure also communicates user information to the Palo Alto Networks firewall when users log in or log out from their device.


This section covers the following deployment scenarios:

- [Deploying PPS with a PAN firewall for a Small Enterprise](#)
- [Deploying multiple PPS with PAN firewall](#)
- [Deploying PPS with PAN firewall for a Large Enterprise](#)

Deploying PPS with a PAN firewall for a Small Enterprise

PPS and PAN integration can be used for role based layer 3 access control. For small scale enterprise deployment, you can use a single PPS and PAN firewall as it involves less number of users. For example, employees, contractors, and guest users. A single PPS device provisioning to a PAN firewall can handle up to 30,000 user sessions. The following is a sample deployment with a PPS device along with a PAN firewall.

Figure111: Single PPS Deployment

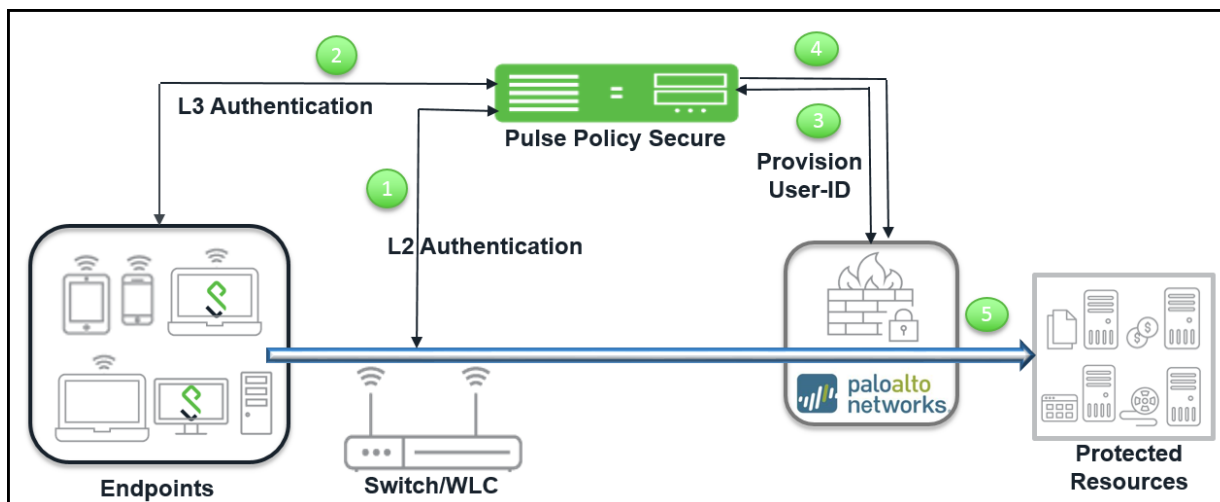


The authentication process is described below:

1. The endpoints connect to switch/WLAN and performs the layer 2 authentication with PPS.
2. PPS performs the layer 3 authentication and performs compliance check on the endpoint and detects for any unauthorized behavior.
3. PPS provisions the auth table entries on the PAN firewall.
4. PPS provisions the auth table with changes in role information if any on PAN firewall. The user role changes, which includes any unauthorized behavior are dynamically updated on the firewall. The access is based on roles, rather than only on source IP addresses.
5. The PAN firewall applies policies to allow or block user access to protected resources.

Deploying multiple PPS with PAN firewall

The deployment example describes an enterprise environment with multiple PPS servers where different users are authenticated using different PPS servers. For such deployments, multiple PPS servers can be configured to communicate with a single PAN firewall. The multiple PPS servers send user-ID entries to a single PAN firewall.

Figure112: Deploying multiple PPS with a PAN Firewall

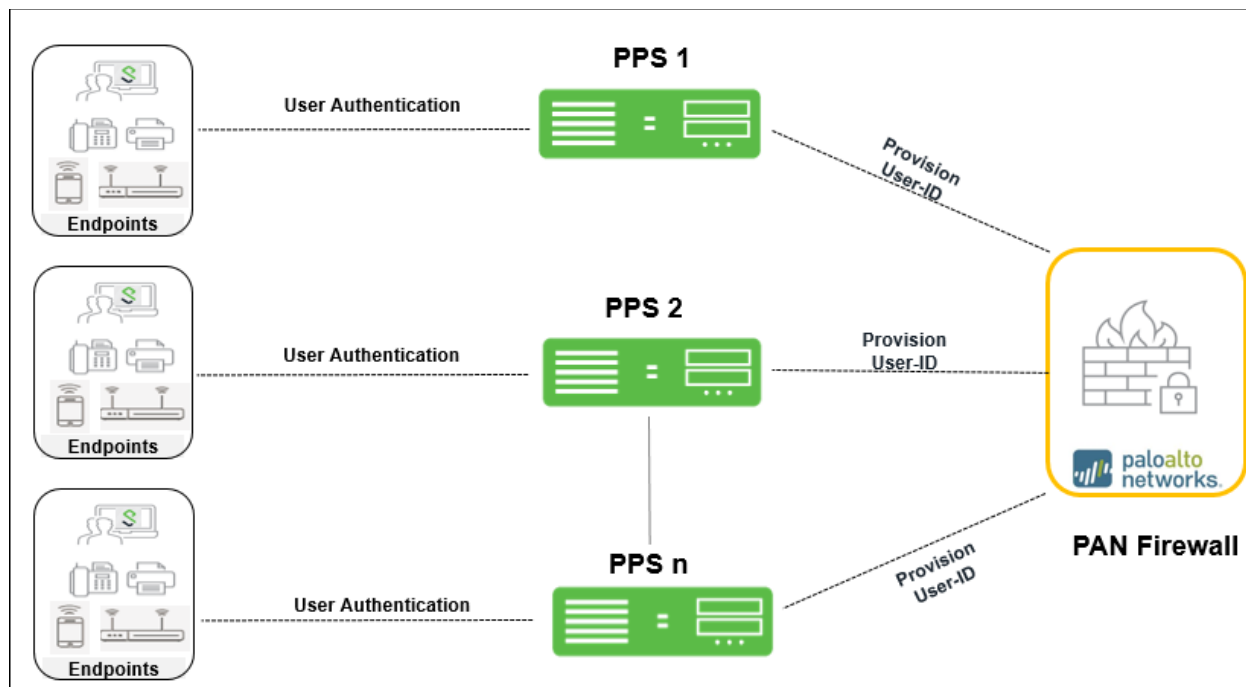


Deploying PPS with PAN firewall for a Large Enterprise

A large-scale enterprise network uses multiple firewalls to enforce policies. You can reduce the resources that the firewalls and information sources use in the querying process by configuring some firewalls to acquire mapping information. You can enable the firewall to enforce user based policies when users rely on local sources for authentication (for example, regional directory services) but need access to remote resources (for example, global data center applications).

The deployment example describes how a global datacenter resources is distributed across the branches and shared across the local offices. It also shows how you can organize the redistribution sequence in layers, where each layer has one or more firewalls. In this example, bottom-layer firewalls in local offices rely on PPS for authentication and then redistribute the mapping information to middle-layer firewalls in regional offices, which redistribute to one top-layer firewall in a global data center. The data center firewall redistributes the mapping information to other data center firewalls so that they can enforce global policies for all users.

Figure113: Large Scale Deployment

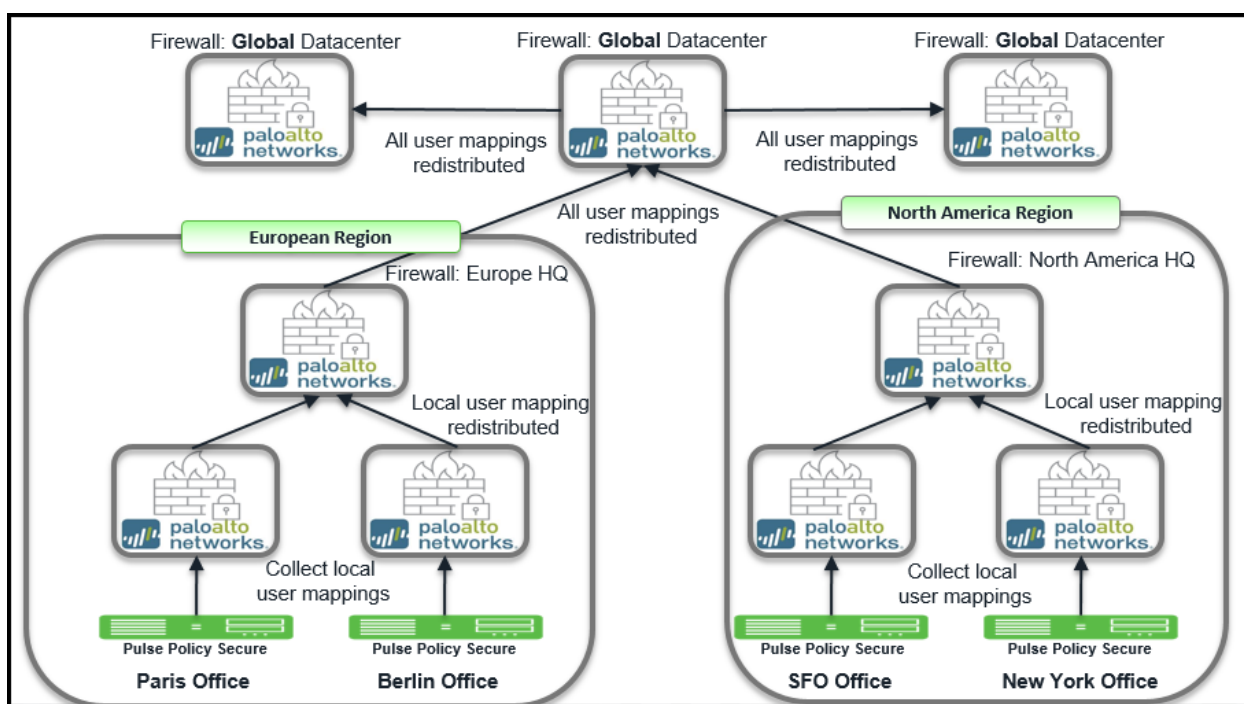


Specification for deploying PPS and PAN Appliances

The firewall provides access to resources based on the user role. You can use the IP role mapping on the PAN firewall for role based access. The maximum number of IP addresses that can be registered for each PAN device is different. The following table describes the specifics for different PAN firewall appliances and the recommended PPS appliance for your deployment.

Table 1: Recommendations for deploying PPS and PAN firewall

| PAN Appliance | Maximum number of dynamically registered IP addresses | IP Address Tag | Recommended PPS Appliance |
|---------------|---|----------------|---------------------------|
| PA 500 | 1,000 | 32 | PSA 5000 |
| PA3020 | 5,000 | 32 | PSA 5000 |
| PA 5020 | 20,000 | 32 | SM 360, PSA 7000 |
| PA 7000 | 44,000 | 32 | PSA 7000 |

| | |
|---|--|
|  | <p>Note:</p> <ul style="list-style-type: none"> The IP role mapping scale limit or the maximum number of dynamically registered IP addresses for a unique endpoint is based on the PAN appliance. The maximum number of IP address tags supported is also based on the PAN appliance. The IP Address tag is a metadata element or attribute-value pair that is registered on the firewall. For example, IP1 {tag1, tag2,.....tag32}, where the IP address and the associated tags are maintained as a list; each registered IP address can have up to 32 tags such as the operating system, the datacenter or the switch to which it belongs. |
|---|--|

Configuring PPS with PAN Firewall

This section covers the configuration of PPS for adding PAN firewall as an Infranet Enforcer.

The following are the configuration steps:

- [Configuring PAN Infranet Enforcer in PPS](#)
- [Configuring Auth Table Mapping Policies](#)


Configuring PAN Infranet Enforcer in PPS

The PPS configuration requires defining a new Palo Alto Networks Firewall Infranet Enforcer instance on PPS and then fetching the API key from the firewall. The API key is used to communicate between the Palo Alto Networks firewall and PPS. The standard user authentication / authorization configurations such as Auth Table Mapping Policies should also be created and associated with the required roles.

To configure a Palo Alto Networks Firewall Infranet Enforcer in PPS:


1. Select **Endpoint Policy > Infranet Enforcer**.

Figure 114: Infranet Enforcer

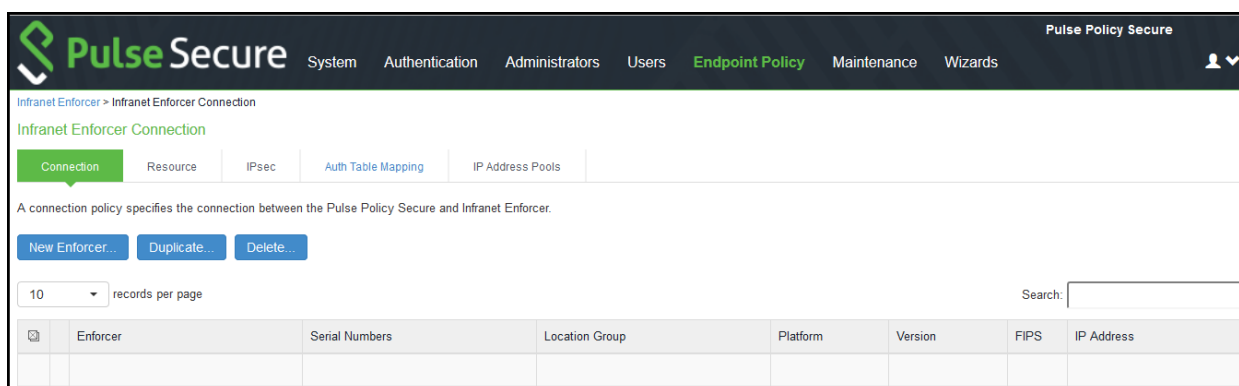


2. Click **New Infranet Enforcer** and select **Palo Alto Networks Firewall** in the **Platform** drop down.

Figure115: Palo Alto Networks Firewall

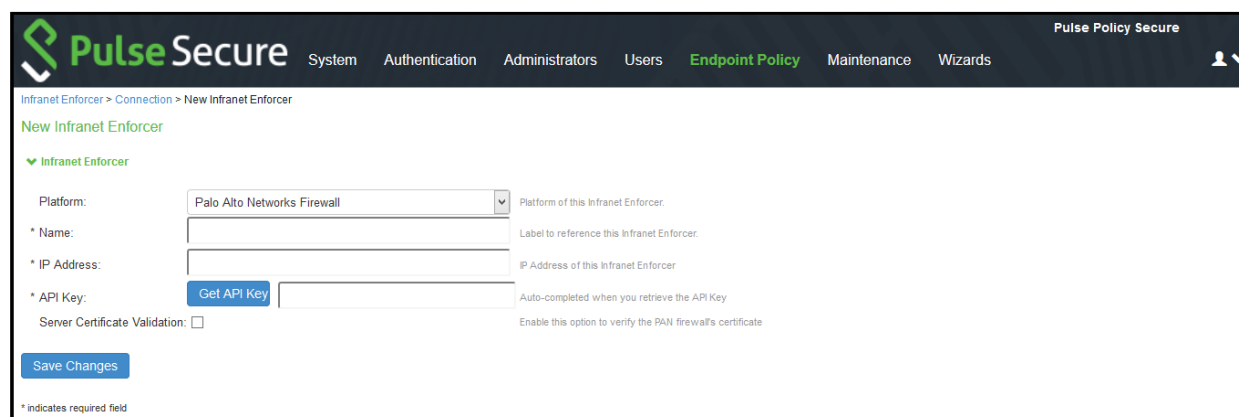

3. Enter the **Name** and **IP Address** of the Palo Alto Networks firewall and then click **Get API Key** which opens a new page:

Figure 116: API Key

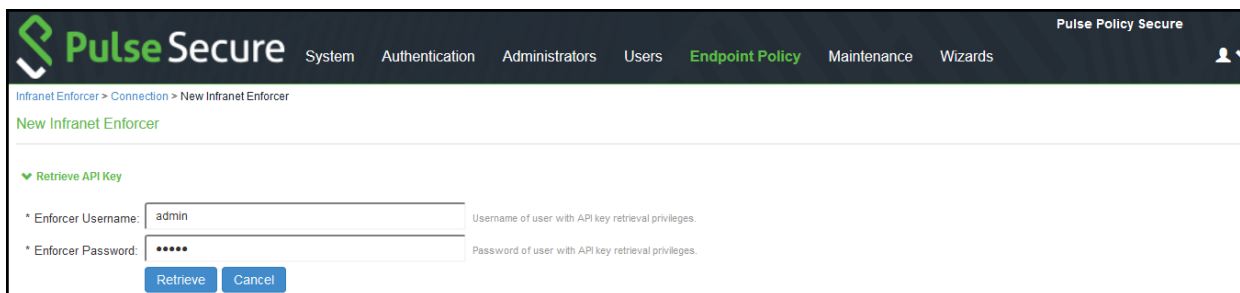

4. Enter the **Admin Username** and **Admin Password** of the Palo Alto Networks firewall and then Click **Retrieve**. This enables PPS to fetch the API key of the firewall. Once the API key is retrieved, the page automatically redirects back to the New Infranet Enforcer page as shown above and updates the API Key Field. See [Configuring PAN Device Certificates](#) for understanding the validation procedure.
5. Click **Save** Changes.

Configuring Auth Table Mapping Policies

An auth table entry consists of the user's name, a set of roles, and the IP address of the wired, wireless, or virtual adapter. An auth table mapping policy specifies which enforcer device can be used for each user role. These policies prevent the PPS from creating unnecessary auth table entries on all connected enforcer devices.

PPS's default configuration includes only one default auth table mapping policy. When the default auth table mapping policy is enabled, PPS pushes one auth table entry for each authenticated user to all Palo Alto Networks firewalls configured as Infranet Enforcers in PPS.

To configure an Auth Table Mapping Policy:

1. Select **Endpoint Policy > Infranet Enforcer > Auth Table Mapping** and click **New Policy**.

Figure 117: Palo Alto Networks Firewall Configuration

Pulse Secure

System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Infranet Enforcer > Infranet Enforcer Auth Table Mapping Policies > New Policy

New Policy

* Name: PAN_Auth_Table_Policy Required: Label to reference this policy.

Description: Auth table mapping policy for Palo Alto Networks Enforcers

▼ Infranet Enforcer

Specify the Infranet Enforcer(s) to which this policy applies.

Available Enforcers: PAN Selected Enforcers: (all)

Add -> Remove

▼ Roles

☒ Policy applies to ALL roles
☐ Policy applies to SELECTED roles
☐ Policy applies to all roles OTHER THAN those selected below

Available roles: Guest, Guest Admin, Users, remediation role Selected roles: (none)

Add -> Remove

▼ Actions

☒ Always Provision Auth Table
☐ Provision Auth Table As Needed Only available for Juniper enforcers.
☐ Never Provision Auth Table

VSYS:

Save Changes Save as Copy

* indicates required field

2. On the New Policy page:
 - 3.1. For Name, enter a name to label the auth table mapping policy.
 - 3.2. (Optional) For Description, enter a description.

- 3.3. In the Enforcer section, specify the Infranet Enforcer firewall(s) to which you want to apply the auth table mapping policy.
- 3.4. In the Roles section, specify:
 - Policy applies to ALL roles—Select this option to apply the auth table mapping policy to all users.
 - Policy applies to SELECTED roles—Select this option to apply the auth table mapping policy only to users who are mapped to roles in the SELECTED roles list. You can add roles to this list from the available roles list.
 - Policy applies to all roles OTHER THAN those selected below—Select this option to apply the auth table mapping policy to all users except for those who map to the roles in the SELECTED roles list. You can add roles to this list from the available roles list.
- 3.5. In the Action section, specify auth table mapping rules for the specified Infranet Enforcer.
 - Always Provision Auth Table—Select this option to automatically provision auth table entries for chosen roles on the specified Infranet Enforcer.
 - Provision Auth Table as Needed—Select this option to provision auth table entries only when a user with a chosen role attempts to access a resource behind the specified Infranet Enforcer. This option is greyed out for Palo Alto Networks Firewall Enforcers since it is not supported.
 - Never Provision Auth Table—Select this option to prevent chosen roles from accessing resources behind the specified Infranet Enforcer.
4. You must delete the Default Policy if you configure any custom auth table mapping policies. PPS's default configuration includes this default auth table mapping policy that allows all source IP endpoints to use all Infranet Enforcers.
5. Click **Save Changes**.

Configuring Palo Alto Networks Firewall

Palo Alto Networks firewall detects traffic from an endpoint that matches a configured security policy using the endpoint's auth table entry. It determines the role(s) associated with that user, and allows or denies the traffic based on the actions configured in the security policy.

The configuration on the Palo Alto Networks firewall includes:

- [Configuring User Identification on Security Zones](#)
- [Configuring Dynamic Address Groups](#)
- [Configuring Security Policies](#)
- [Configuring PAN Device Certificates](#)


Configuring User Identification on Security Zones

Policy rules on the firewall use security zones to identify the source and the destination of the traffic. The data traffic flows freely within a zone and not between different zones until you define a security policy rule that allows it. To enable User-ID enforcement, you must enable User Identification on both inbound and outbound zones traversed by the end-user traffic.

To enable User Identification:

1. Select **Palo Alto Networks > Network > Zones**.
2. For each zone that serves as an inbound or outbound zone for enforced traffic, click the zone name (For example, trust, untrust, and so on).
3. Select **Enable User Identification** and click **OK**.

Figure118: Enabling User Identification on a Zone

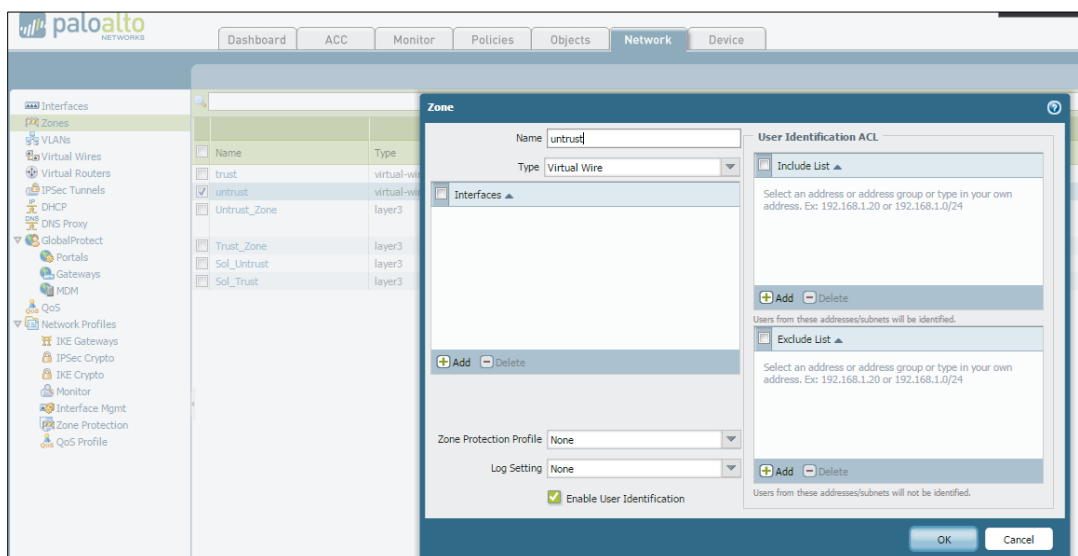

Note: Provisioning of Resource Access Policies from PPS to the Palo Alto Networks Firewall Enforcer is not supported. You must configure the required security policies on the firewall.


Configuring Dynamic Address Groups

Dynamic address groups allow you to create policy that automatically adapts to changes—adds, moves, or deletions of servers. It also enables the flexibility to apply different rules to the same server based on its role on the network or the different kinds of traffic it processes.

To configure a dynamic address group:

1. Select **Palo Alto Networks > Objects > Address Groups**.

Figure119: Address Groups

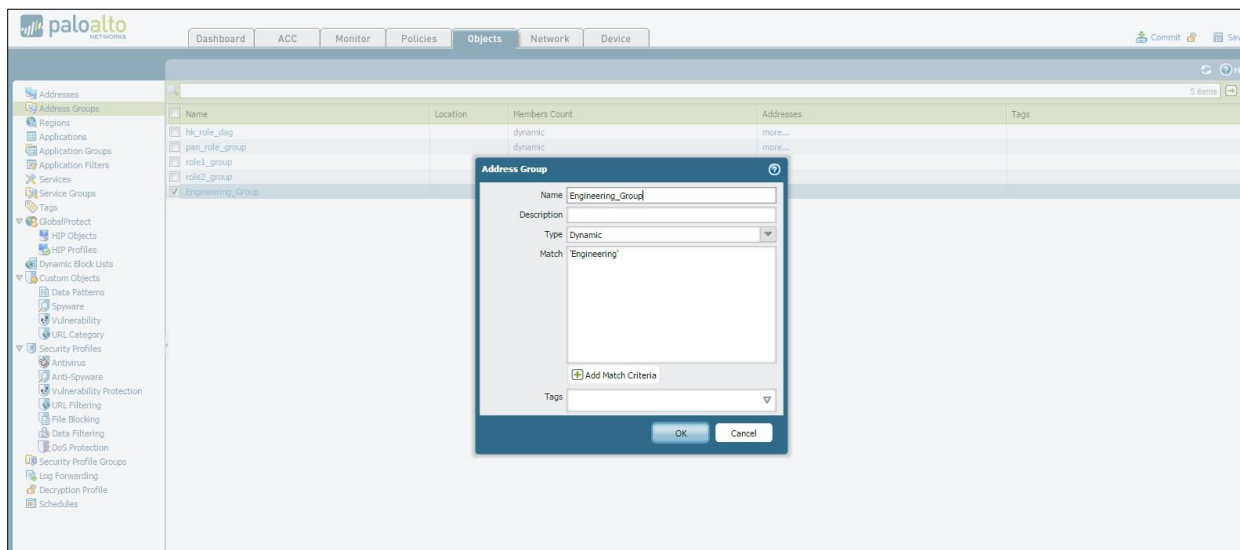

2. Click Add and enter a Name and a Description for the address group.
3. Select Type as **Dynamic**. Define the match criteria. You can select dynamic and static tags as the match criteria to populate the members of the group.
4. Enter the role name of the users. The role name in the Match section should match the roles that are configured in PPS.
5. Click **OK**.



Note: Dynamic discovery of users and their roles is not supported on the Palo Alto Networks firewall.


Configuring Security Policies

Security policies protect network assets from threats and disruptions and aid in optimally allocating network resources for enhancing productivity and efficiency in business processes. On the Palo Alto Networks firewall, security policies determine whether to block or allow a session based on traffic attributes such as the source and destination security zone, the source and destination IP address, the application, user, and the service.

To configure security policies associated with dynamic address groups:


1. Select **Palo Alto Networks > Policies > Security**.
2. Click Add to create a new security policy rule. In the Source Address tab, select the previously-configured address group, as shown in figure.

Figure 120: Security Policy Rule - Source Address Configuration

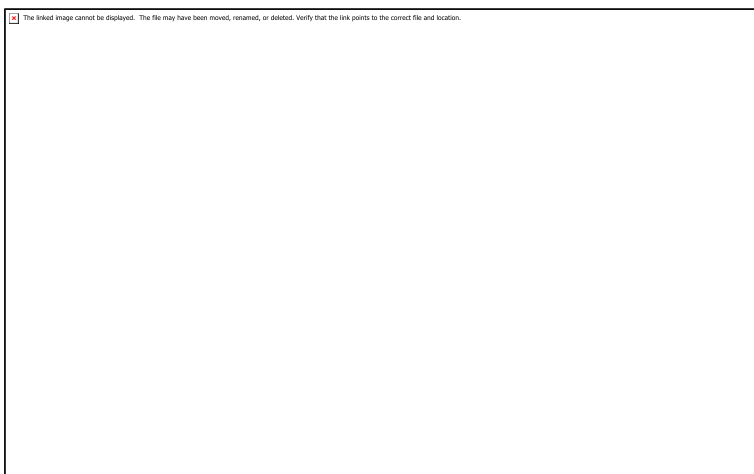

3. In the User tab, enable **known-user**.

Figure 121: Security Policy Rule - User Configuration

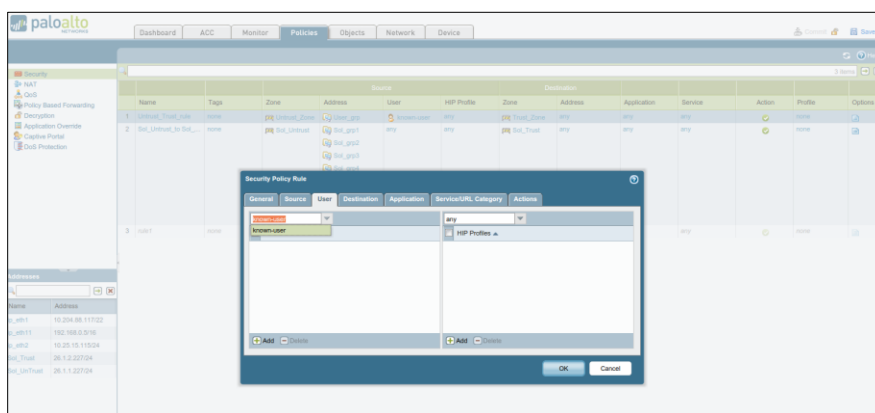

Note: When the **known-user** is enabled, the resource access is revoked immediately once the user disconnects from PPS.

4. Configure the other options to meet your security requirements. Traffic from the endpoint is allowed or blocked based on the action chosen under the Action tab.

- Click **Commit** to complete the configuration. The completed security configuration on the Palo Alto Networks firewall is shown below.

Figure 122: Completed Security Policy Rule

| | Name | Tags | Type | Zone | Source | | | Destination | | Application | Service |
|---|-------------------|------|-----------|---------|-------------|------------|-------------|-------------|---------|-------------|---------|
| | | | | | Address | User | HSP Profile | Zone | Address | | |
| 1 | Untrust_To_Trust | none | universal | untrust | Engineering | known-user | any | trust | any | any | any |
| 2 | reject_all | none | universal | any | any | any | any | any | any | any | any |
| 3 | intrazone-default | none | intrazone | any | any | any | any | (intrazone) | any | any | any |
| 4 | interzone-default | none | interzone | any | any | any | any | any | any | any | any |

Configuring PAN Device Certificates

PAN device certificate validation enhances the security between PPS and the PAN device. It allows PPS to verify whether the server certificate is from a trusted source. This topic describes how to configure the PPS for validating device certificates, creating certificates on PAN, and checking the validity of the certificate.

This section covers the following configuration:

- [Creating a Certificate Signing Request \(PAN 6.0 and later\)](#)
- [Exporting the CSR and Importing the Signed Request](#)
- [Importing the Certificate on PPS](#)
- [Adding PAN Device to PPS](#)

Creating a Certificate Signing Request (PAN 6.0 and later)

To create a Certificate Signing Request (CSR) for sending to public third-party Certificate Authority (like Verisign, Globalsign, Entrust, and so on). For more information, see <https://www.paloaltonetworks.com/documentation/60/pan-os/pan-os/certificate-management/obtain-certificates>

1. Select **Device > Certificate Management > Certificates > Device Certificates**.

Figure 123: Certificate Signing Request

The screenshot shows the 'Generate Certificate' dialog box. It has the following fields and sections:

- Certificate Name:** PANCertificate
- Common Name:** www.example.com (with a note: IP or FQDN to appear on the certificate)
- Signed By:** External Authority (CSR) (dropdown menu)
- ☐ Certificate Authority
- OCSP Responder:** (empty dropdown menu)
- Cryptographic Settings:**
 - Algorithm:** RSA
 - Number of Bits:** 2048
 - Digest:** sha256
 - Expiration (days):** 365
- Certificate Attributes:**

| Type | Value |
|---|-------|
| <input checked="" type="checkbox"/> Country | DE |
| <input type="checkbox"/> | |

+ Add - Delete

Buttons: Generate, Cancel

2. Enter a **Certificate Name** (save this name for later).
3. In the Common Name field, enter the IP address of the interface where you will configure the service that will use this certificate.
4. Select the **Certificate Authority (CA)** check box for self-signed root CA certificate. Exporting the CSR and Importing the Signed Certificate are not applicable for self-signed certificates.
Note: Uncheck the **Certificate Authority** check box if you are using enterprise CA, or trusted third-party CA certificates.
5. Complete the remaining details such as Country, Organization, and so on. Check with the Certificate Authority (CA) about their requirements for Certificate Attribute formatting and criteria.
6. Click **Generate**.



Note: Ensure that the SSL/TLS service profile is enabled while creating the server certificate.

Exporting the CSR and Importing the Signed Request

Once the CSR is created, you must export the CSR to a third-party CA for signature.

To export the CSR:

1. Click the check box next to the Certificate Name.
2. Click **Export** and save the file.
3. Send the exported CSR to a third-party Certificate Authority. The CA will respond with a signed certificate.

Once the CA responds with the signed certificate, you must import the signed certificate from the certificate authority.

To import the signed certificate:

1. Note the name, including capitalization, of the certificate to import. (This must match the CSR request from above.)
2. Click **Import**.
3. In the Import Certificate dialog, type the name of the pending certificate. It must match exactly.
4. Go to the signed certificate received from the Certificate Authority and click OK.
5. Do not click the **Import Private Key** check box.
6. Depending on the certificate authority used, it may be necessary to chain the intermediate certificate with the server certificate and import it before completing this step.
7. Click **OK**.

Importing the Certificate on PPS

You can use the Trusted Server CAs page to import the trusted root certificate.

To configure device certificate verification:

1. Select **System > Trusted Server CAs > Import Trusted Server CA**.
2. Click **Browse** and select the certificate file.
3. Click **Import Certificate**. The Trusted Server CA page appears.
4. Verify if the certificate is imported successfully and click **Done**.
5. Click **Configuration > Certificates > Trusted Server CAs** and verify that the certificate is from a trusted source.

Adding PAN Device to PPS

For complete information on configuration, See Configuring PAN Infranet Enforcer in PPS.




Note: If the server certificate is not valid the user will see the following error message. Error: Failed to Retrieve API Key. Peer Certificate cannot be authenticated with known CA certificates.

Troubleshooting


You can use the following CLI commands on the Palo Alto Networks firewall for troubleshooting:

- `show user ip-user-mapping all`— Displays the table of user identities mapped to IP addresses.
- `show object registered-address all` — Displays the table of addresses with user information associated.

For identity management using Palo Alto Networks firewall only minimum Admin role permissions are sufficient. Ensure that the XML API rights on the Palo Alto Networks UI is enabled as shown in the below screenshot.

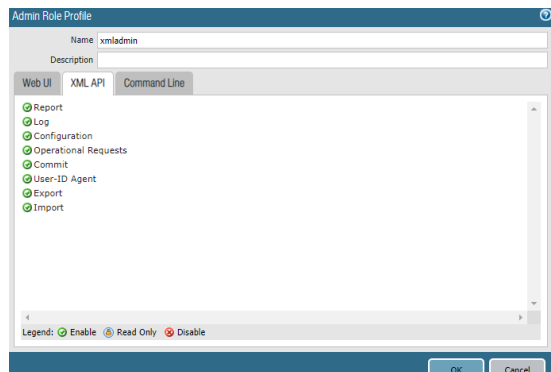

Admin can choose to disable other options from the Web UI tab of the Palo Alto Networks UI as per the security requirement.

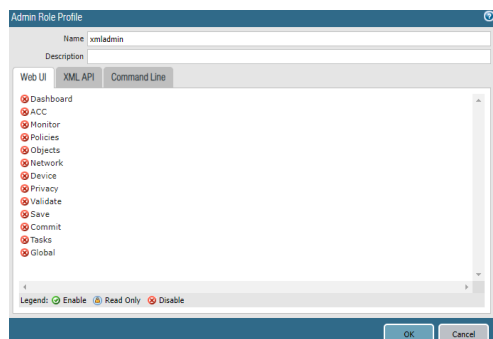

Unsupported Features

The following features are not supported:

- Captive portal
- IPsec Enforcement
- Virtual Systems (VSYs)
- Enforcement for endpoints behind Network Address Translation (NAT)
- Dynamic Auth Table Allocation

Related Documentation

- For federated access across multiple policy servers / firewall enforcers federated single sign-on for Pulse Connect Secure tunneled traffic, see [Provisioning PCS sessions to PAN/Check Point Firewall](#).
- For information on Alert based Admission Control, see [Alert Based Admission Control using PAN Next Generation Firewall](#)

Identity Based Enforcement using FortiGate Products

This chapter provides an overview of enforcement using Fortinet firewall. It includes the following information:

- [Overview](#)
- [Deployment of PPS using FortiAuthenticator and FortiGate Firewall](#)
- [Configuring PPS with FortiAuthenticator](#)
- [Configuring FortiAuthenticator](#)
- [Configuring FortiGate Firewall](#)
- [Reports and Logging](#)

Enforcement using Fortinet Firewall


Overview

PPS integration with the FortiGate firewall provides enhanced identity enabled enforcement with backend authentication and comprehensive compliance checks. This section describes the procedure to integrate PPS with FortiGate firewall using FortiAuthenticator, which acts as a syslog server. The FortiAuthenticator receives the syslog messages from PPS and then creates Fortinet Single Sign-on (FSSO) record which is then shared with FortiGate firewall. The firewall uses the FSSO information to either allow or block traffic based on the configured policy.

Deployment of PPS using FortiAuthenticator and FortiGate Firewall

This section describes the integration of PPS with FortiAuthenticator and FortiGate firewall. The PPS and Fortinet solution provides functionality for enforcing security policies on a per user and role basis.

Figure124: Deployment using FortiAuthenticator and FortiGate Firewall

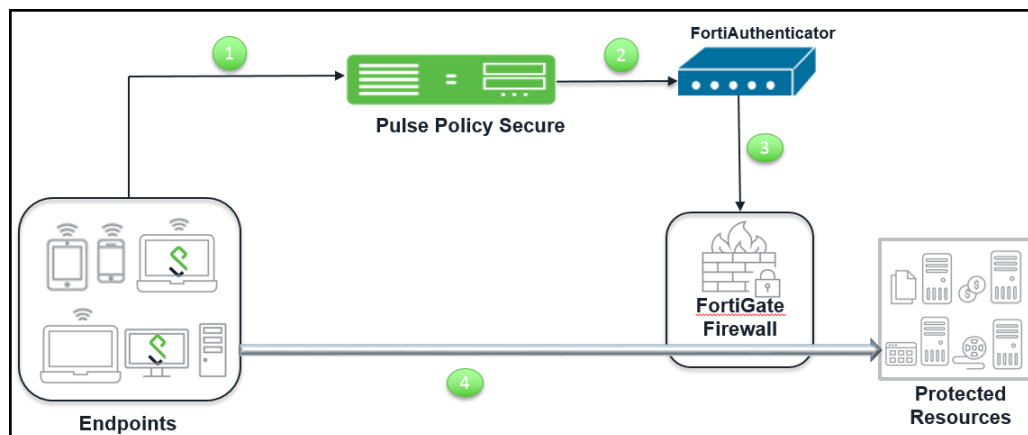

The authentication process is described below:

1. The user is authenticated on PPS after validating the host check policy to ensure that the endpoints meets the corporate policy.
2. The syslog sessions are exported to FortiAuthenticator.
3. Identity information is parsed from the syslog message and is used to create an IP address to username mapping file within FortiAuthenticator. This information is shared with FortiGate firewall in the form of a FSSO record.
4. The FortiGate firewall maps the user to a specific resource access policy and then provides the required access.

Configuring PPS with FortiAuthenticator

The PPS configuration requires defining the FortiAuthenticator as the syslog server on PPS. The Syslog sever uses the filter created in the User Access Log Filters for receiving and parsing the logs.

This section covers the following topics:

- [Creating Custom Filter for User Access Logs](#)
- [Editing the Custom Filter](#)
- [Configuring Syslog Server](#)

Creating Custom Filter for User Access Logs

To create a custom filter in PPS:

1. Select **System > Log/Monitoring > User Access > Filters**.
2. Click **New Filter**.
3. Enter the filter name.
4. Under Export Format, select **WELF**.
5. Click **Save** to save the filter.

Figure 125: Creating Filter

The screenshot displays the Pulse Secure web interface for creating a new log filter. The breadcrumb trail at the top indicates the path: Log/Monitoring > User Access > Filters > New Log filter. The 'User Access' tab is active. In the 'Filter' section, the 'Filter Name' field contains 'FSSO'. Below it is a checkbox labeled 'Make default for syslog and archiving filter selection'. The 'Export Format' section shows the 'Format' dropdown set to 'WELF'. A text area displays a WELF format string: `id=firewall time=%date% %time%' pri=%syslogcode% fw=%localip% vpn=%node% user=%user% realm=%realm%' roles=%role%' proto=%protocol% src=%sourceip% dst=%remoteip% dstname=%remotehost% type=vpn`. At the bottom of the form are 'Save' and 'Cancel' buttons.

Editing the Custom Filter

To edit the custom created filter:

1. From the Log Filters screen, click the filter name and edit the filter.
2. Under Export Format, select **Custom** format.
3. Edit the ID with the filter name. For example, id=FSSO.
4. Click **Save**.

Figure 126: Editing the Filter

![Screenshot of the Pulse Secure web interface showing the 'New Log filter' configuration page. The 'Filter Name' is 'FSSO'. The 'Export Format' is set to 'Custom'. The 'Format' field contains a log format string: 'id=FSSO time=\](\"%sourceip%)

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'Pulse Secure', 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'Log/Monitoring > User Access > Filters > New Log filter'. The 'New Log filter' page has tabs for 'Events', 'User Access', 'Admin Access', 'Sensors', 'Client Logs', 'SNMP', 'Statistics', and 'Advanced Settings'. The 'User Access' tab is active. Below the tabs, there are 'Log', 'Settings', and 'Filters' sub-tabs. The 'Filters' sub-tab is active. The 'Filter' section shows 'Filter Name: FSSO' and a checkbox for 'Make default for syslog and archiving filter selection'. The 'Query' section is expanded. The 'Export Format' section shows 'Format: Standard WELF W3C Custom'. The 'Custom' option is selected. A text area below the format options contains the log format string: 'id=FSSO time=\"%date% %time%\" pri=\"%syslogcode% %i=\"%localip% vpn=\"%node% user=\"%user% realm=\"%realm%\" roles=\"%role%\" proto=\"%protocol% src=\"%sourceip% dst=\"%remoteip% dstname=\"%remotehost% type=vpn'. The 'Save' and 'Cancel' buttons are at the bottom.

Configuring Syslog Server

You can configure PPS to send logs to FortiAuthenticator syslog server.

To configure the syslog server:

1. Select **System > Log/Monitoring > User Access > Settings** Policy and click **New Policy**.
2. Under **Select Events to Log**, retain the default settings.
3. Under **Syslog Servers**, create a new Syslog server with the following details:
 - a. Server name/IP- Enter the fully qualified domain name or the IP address for the syslog server (FortiAuthenticator).
 - b. Facility- Select **LOCAL0** as the facility level.
 - c. Type- Select **UDP** as the connection type.
 - d. Filter- Select the custom created filter format.
4. Click **Add** and then click **Save Changes**.



NOTE: You must add FortiAuthenticator as a syslog server in all the nodes in a clustering environment.

Figure 127: Configuring Syslog Server

Pulse Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Log/Monitoring > Events > Log settings

Log settings

Events User Access Admin Access Sensors Client Logs SNMP Statistics Advanced Settings

Log Settings Filters

Save Changes Reset

Maximum Log Size

Select Events to Log

Syslog Servers

Events are logged locally. You can also log them to one or more external Syslog servers.

Delete

| Server name/IP | Facility | Type | Client Certificate | Filter | |
|----------------|----------|------|--------------------|--------------|-----|
| 10.96.71.4 | LOCAL0 | UDP | Select Client Cert | FSSO: Custom | Add |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

Save Changes Reset

Configuring FortiAuthenticator

You must add PPS as a syslog source in FortiAuthenticator to parse the information.


Prerequisite:

- Ensure that the FortiAuthenticator instance is communicating on the network and is reachable from the PPS appliance's management interface.
- Select **System > Network > Interfaces**, select the port and enable the FortiGate FSSO, FortiClient FSSO and Syslog services on FortiAuthenticator interface, which communicates with PPS and FortiGate firewall.

To configure FortiAuthenticator:

1. Create a Local user group with the names which matches the name PPS will send as the 'Group=' value in your Syslog messages. Select **Authentication > User Management > User Groups** and click **Create New**. Create the groups with the following data:
 - a. Name- Enter the same names, which is received from PPS, For example, Users.
 - b. Type- Select **Local** as type.
 - c. Click OK.

Figure 128: Creating a user group

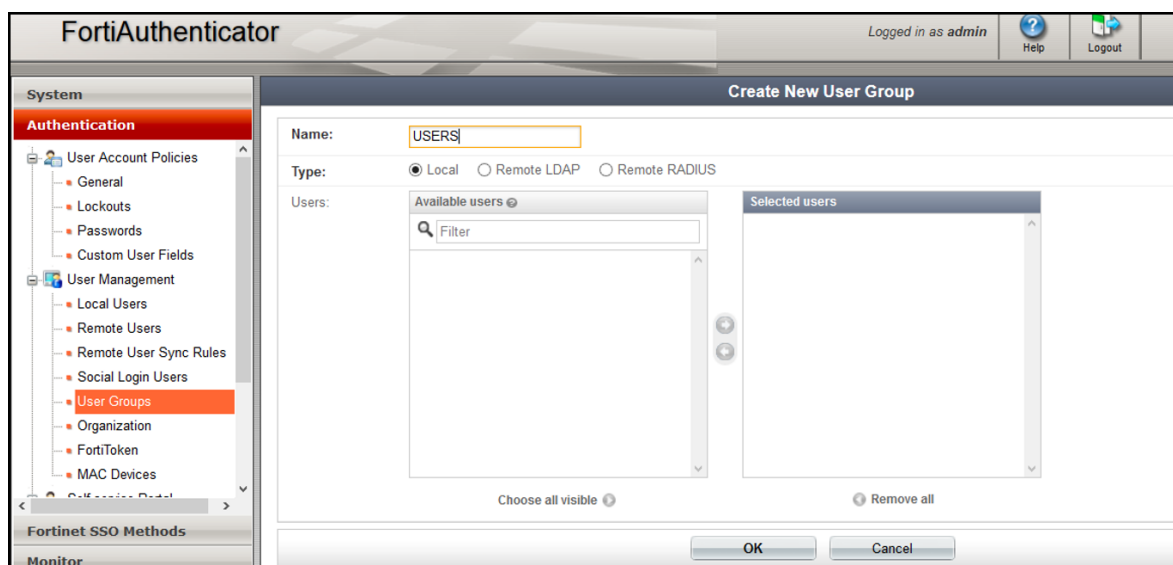

2. Create a syslog matching rule. Select **Fortinet SSO methods > SSO > Syslog Sources**. In the upper right corner, from the 'View' drop down choose matching rules and click Create New and give the following data:
 - Name: Enter the name for the syslog Rule.
 - Trigger: Enter the filter name created in PPS. For example, id=FSSO
 - Auth Type Indicators: Enter strings to differentiate between the types of user activities. For example, Logon: AUT24803
Update: AUT23524
Logoff: AUT22673
 - Username field: Define the semantics of the username field, where {{user}} indicates where the username is extracted from. For example: user= {{: username}}
 - Client IP field: Define the semantics of the client IP address. For example, src={{: client_ip}}
 - Group field: Define the semantics of the group. For example: roles=" {{: group}}"



NOTE: There is a trailing space after the User, IP, and Group fields. The parser treats the trailing space as an ending character after the variable portion of the field. The parsing fails if the trailing space is omitted.

- Group List Separator: SSO syslog feed can parse multiple groups if the names are separated by a plus (+) symbol or a comma (.). Use the Group list separator to specify the separator.
 - Test Rule: Enter a sample log message into the text box, then select **Test** to test that the desired fields are correctly extracted.
3. Click **OK** to add the new matching rule.

Figure 129: Create match rule



NOTE: For the Logon and Logoff indicators, the data specified will vary depending on the installation and depending on your syslog message contents. In this example, when a user logs in the message ID created is AUT24414 and is considered as a Logon event on FortiAuthenticator. When the role change happens as part of periodic host check updates, the message ID created by PPS is AUT23524. A sign-out event is considered a 'Logoff' event on FortiAuthenticator, and the identity is removed from the user group, thus, failing to match policy.

4. Create a Syslog source, Select **Fortinet SSO methods > SSO > Syslog Sources**. In the upper right corner, from the 'View' drop down choose Syslog Source and click **Create New** and provide the following data:
- Name- Enter a name for the source
 - IP address- Enter the IP address of PPS server
 - Matching rule- Select the requisite matching rule created above.
 - SSO user type- Select **External** as the user type.

Figure 130: Creating a Syslog Source

The screenshot shows the FortiAuthenticator web interface. The left sidebar is expanded to 'System' > 'Authentication' > 'Fortinet SSO Methods' > 'Syslog Sources'. The main panel is titled 'Create New Syslog Source'. The configuration fields are as follows:

- Name: Pulsesecure
- IP address: x.x.x.x
- Matching rule: Pulse
- SSO user type:
 - ☒ External
 - ☐ Local users
 - ☐ Remote users

Buttons for 'OK' and 'Cancel' are at the bottom right.

NOTE: You must add all the cluster node IP's (not cluster VIP's) in the FortiAuthenticator when using a PPS cluster setup.

Configuring FortiGate Firewall

The FortiGate firewall detects traffic from an endpoint that matches a configured security policy using the FortiAuthenticator FSSO record. It determines the role(s) associated with that user, and allows or denies the traffic based on the actions configured in the security policy.

To configure FortiGate firewall:

- (Applies to Release 6.0.*) Create the FortiAuthenticator as an FSSO agent in the FortiGate Firewall. Select **Fabric Connector > Create New**, under **SSO/Identity** select **Fortinet Single Sign-On Agent**.
 - Name: Enter a name for the entry
 - Primary FSSO Agent: Enter the IP address of the FortiAuthenticator appliance, and the password* used to communicate with it.
 - Click **Apply & Refresh** to test your configuration. If correct, the users /groups area will automatically populate

The screenshot shows the FortiGate 900D web interface. The left sidebar is expanded to 'Security Fabric' > 'Fabric Connectors'. The main panel is titled 'Edit Fabric Connector' > 'SSO/Identity'. The configuration is for a 'Fortinet Single Sign-On Agent'. The fields are as follows:

- Name: PPS agent
- Primary FSSO Agent: 10.96.71.2 - [password field]
- Collector Agent AD access mode: Standard (selected) / Advanced
- Users/Groups: 2 [View button]

Buttons for 'Apply & Refresh', 'OK', and 'Cancel' are at the bottom right.


- (Applies to Release 5.6.*) Create the FortiAuthenticator as an FSSO agent in the FortiGate Firewall. Select **User & Device > Single Sign-On** and click **Create New** and enter the following data.

- Type: Fortinet Single-Sign-On Agent
- Name: Enter a name for the entry
- Primary Agent IP/Name: Enter the IP address of the FortiAuthenticator appliance, and the password* used to communicate with it.

*This is the same as the secret key configured on FortiAuthenticator in the Fortinet SSO Methods > General section.


- Click **Apply & Refresh** to test your configuration. If correct, the users /groups area will automatically populate

Figure 131: Creating Single Sign on Server

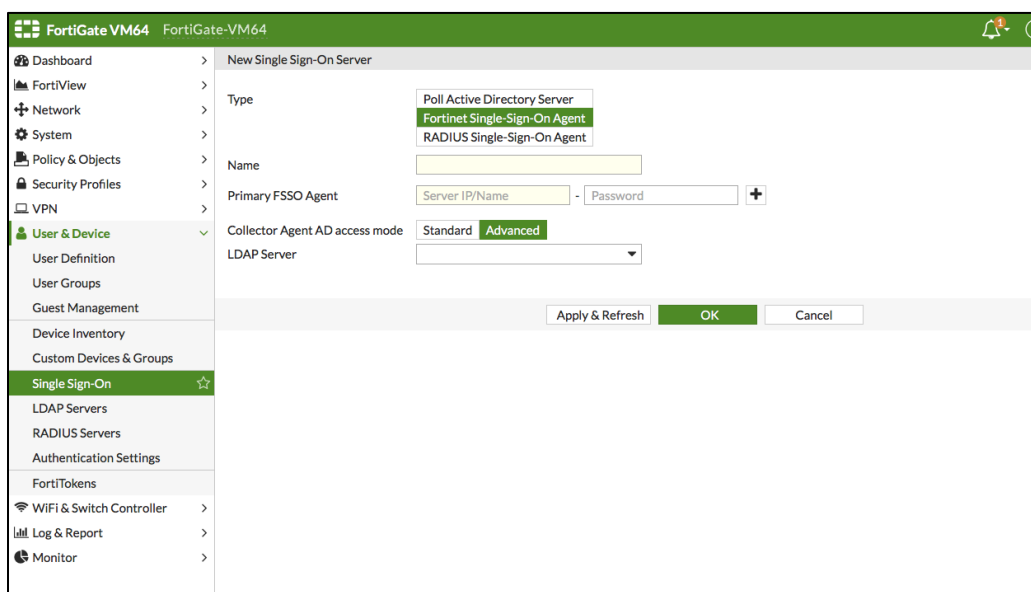

- Create matching User groups. Select **User & Device > User Groups**. Click **create New** and enter the following data:
 - Name- Enter the name of the group. This name will appear in the firewall policy.
 - Type- Select **Fortinet Single Sign-On** as type.
 - Select the matching User group created on FortiAuthenticator and Click **OK**.

Figure 132: Creating User Groups

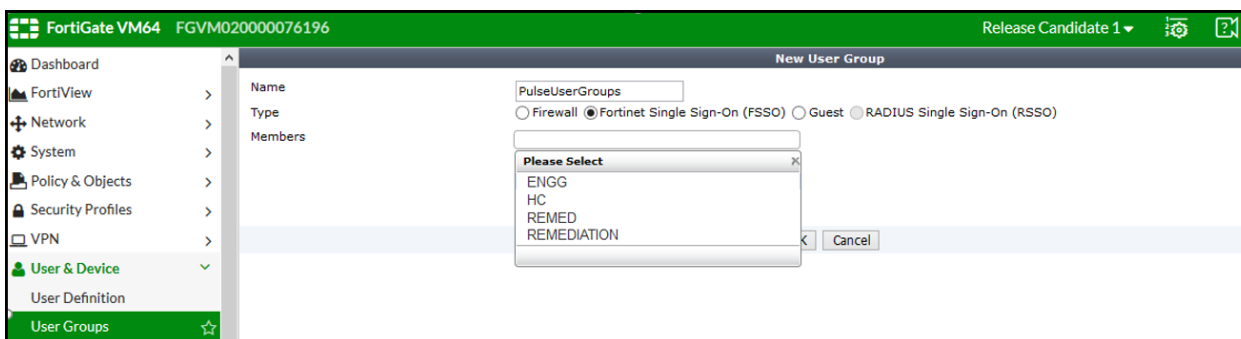

- Create a firewall policy to use the PPS enforcement groups just created. Select **Policy & Objects > IPv4 Policy**. Click **Create New** and create the policy based on the resource access restrictions to be enforced.

Figure 133: Creating Firewall policies

The screenshot shows the FortiGate VM64 configuration interface for a Firewall Policy. The left sidebar contains a navigation menu with the following items: Dashboard, FortiView, Network, System, Policy & Objects (selected), IPv4 Policy (highlighted), IPv4 DoS Policy, Addresses, Internet Service Database, Services, Schedules, Virtual IPs, IP Pools, Traffic Shapers, Traffic Shaping Policy, Security Profiles, VPN, User & Device, WiFi & Switch Controller, Log & Report, and Monitor.

The main configuration area is titled "Edit Policy" and contains the following fields and options:

- Name:** full_access
- Incoming Interface:** port1
- Outgoing Interface:** port2
- Source:** all, PulseUserGroup, All
- Destination Address:** all
- Schedule:** always
- Service:** ALL_ICMP, FTP, HTTP, HTTPS
- Action:** ☒ ACCEPT, ☐ DENY, ☐ LEARN
- Firewall / Network Options:**
 - NAT:** ☒
 - Fixed Port:** ☐
 - IP Pool Configuration:** ☒ Use Outgoing Interface Address, ☐ Use Dynamic IP Pool
- Security Profiles:**
 - AntiVirus:** ☐
 - Web Filter:** ☐


At the bottom right, there are "OK" and "Cancel" buttons.

Reports and Logging

You can verify if the syslog messages are reaching the FortiAuthenticator by doing a packet capture on the FortiAuthenticator Interface.

1. Select **System > Network > Packet Capture** and select the interface which is used to communicate with the PPS and click **Start capture** button. Once packet capture is done stop the capture and download the packets and view it using any tool like wireshark.
2. To view identity records from the FortiAuthenticator GUI, Select **Monitor > Sessions**. The list shows the records parsed through syslog.

Figure 134: Monitor SSO sessions

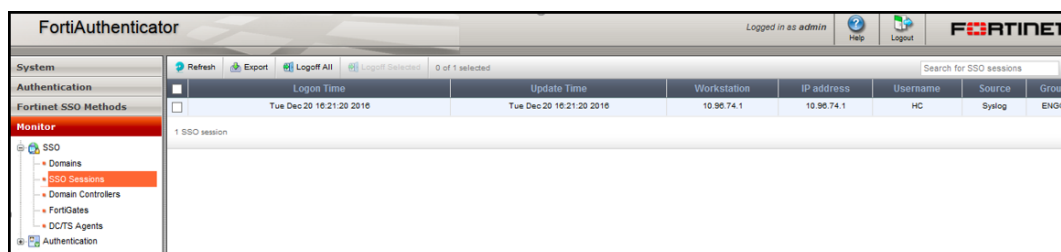

3. You can monitor the FSSO Sessions on FortiGate firewall from CLI or GUI:
Using the FortiGate CLI, type: `diag debug authd fssolist`.
The command displays identity records received from FortiAuthenticator.

Figure 135: Monitor the FSSO Sessions on FortiGate firewall from CLI

```


Welcome !
FGVM020000076196 # diag debug authd fssolist
----FSSO logons----
IP: 10.96.74.1 User: HC Groups: ENG Group: PulseU
serGroup
Total number of logons listed: 1, filtered: 0
----end of FSSO logons----

FGVM020000076196 # _

```

4. Select **Monitor > Firewall user Monitor**. The list shows all the identity records.

Figure 136: Monitor the FSSO Sessions on FortiGate firewall from GUI

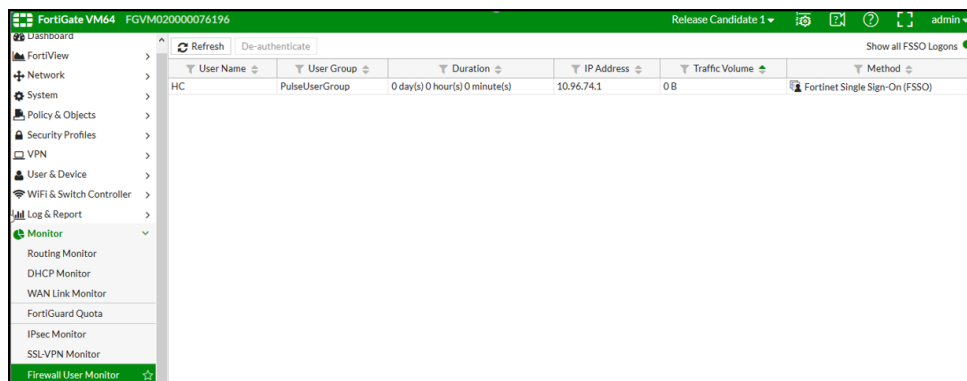

Enforcement using SRX Series Firewall

This chapter provides an overview of enforcement using SRX firewall. It includes the following information:

- [Overview](#)
- [Deployment of PPS using SRX Firewall](#)
- [Configuring PPS with SRX Firewall](#)
- [Configuring SRX Firewall](#)

Firewall Enforcement using Juniper SRX


Overview

PPS delivers a layer 3 network access control solution when deployed with Juniper SRX firewall. The PPS is the Layer 2 or Layer 3 policy decision point that determines which users and endpoints can access protected resources. You can use Juniper Networks SRX firewall to serve as the enforcement point to provide the protection to ensure that network assets are secured. PPS authenticates users, ensures that endpoints meet security policies, and serves resource access policy information to Juniper Networks SRX devices.

Deployment of PPS using SRX Firewall

This section describes the integration of PPS with SRX firewall. The PPS and SRX firewall solution provides functionality for enforcing application level security policies on a per user and role basis. It also delivers granular level access control so that it can be easily managed through PPS.

Figure137: Deployment using SRX Firewall

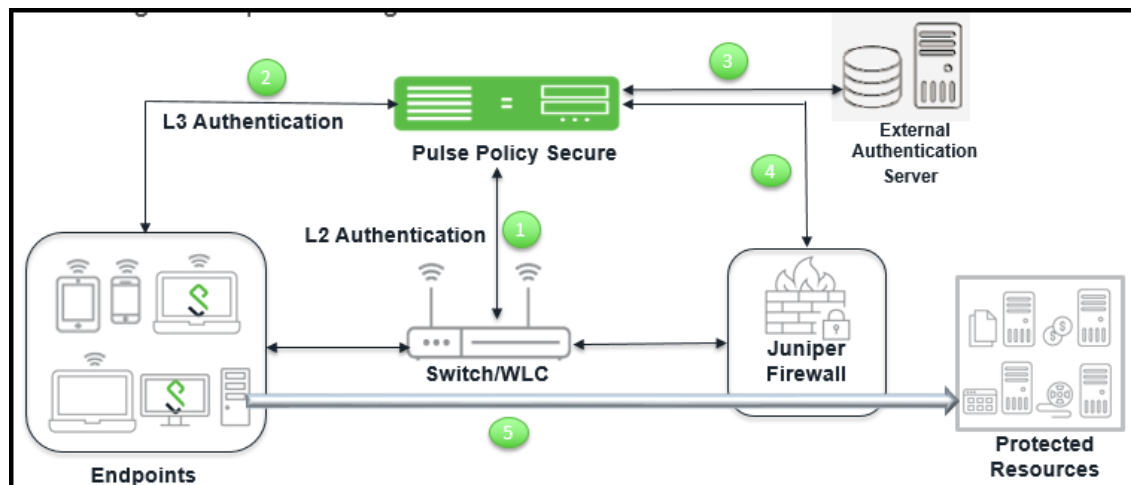

The authentication process is described below:

1. The endpoint connects to switch to perform the layer 2 authentication with PPS.
2. PPS communicates with authentication server and performs the layer 3 authentication along with host check to ensure that the endpoints meets the corporate policy.
3. The external authentication server such as AD/LDAP confirms the role and sends the entries to PPS.
4. PPS provisions the auth table on SRX firewall with changes in role information if any.
5. The SRX series firewall maps the user to a specific resource access policy and then provides the required access.

Configuring PPS with SRX Firewall

The PPS connects with the SRX device over an SSL connection. To enable the connection between the two devices, you must specify the password and serial number of the SRX firewall. The SRX firewall initiates the connection to PPS. PPS presents its SSL server certificate to the SRX device. Optionally, you can configure the SRX device to verify the certificate and to specify constraints with which PPS must comply.

The SRX device and PPS perform mutual authentication with the proprietary JUEP-MAUTH challenge-response authentication based on the password configured. For security reasons, the password is not included in the message sent to PPS. After the SSL handshake, all further communication between the PPS device and the SRX device occurs over the SSL connection. The SRX device acts as a client and the PPS device as server.

This section covers the following topics:


- [Configuring SRX Infranet Enforcer in PPS](#)
- [Configuring Auth Table Mapping Policies](#)
- [Configuring Resource Access Policy](#)

Configuring SRX Infranet Enforcer in PPS

To configure a SRX Firewall Infranet Enforcer in PPS:

1. Select **Endpoint Policy > Infranet Enforcer**.

Figure 138: Infranet Enforcer

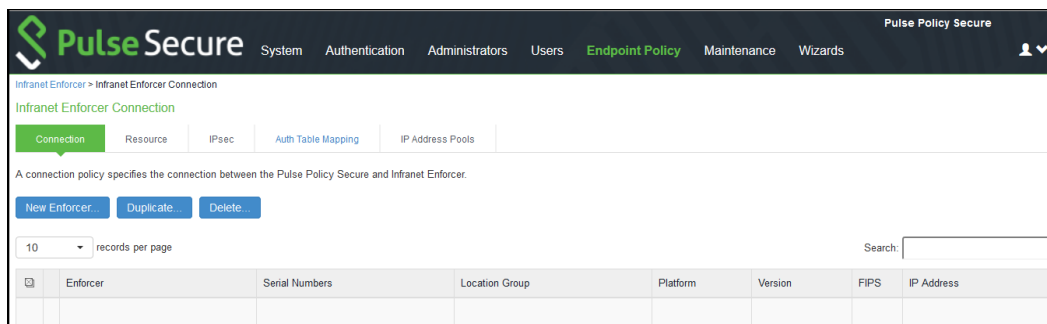

2. Click **New Infranet Enforcer** and select **Junos SRX Firewall** in the **Platform** drop down.

Figure139: SRX Firewall

3. Enter the name of the Infranet Enforcer in the Name box.
4. Enter the password for the SRX enforcer.
5. Enter the serial number of the Junos SRX Enforcer. You can view the serial number on the SRX device using the command: `user@host show chassis hardware`
6. Ensure that the server certificate for PPS is configured for the interface to which the SRX device is connecting.
7. Click Save Changes. You must create security policies on the SRX device for traffic enforcement.

Configuring Auth Table Mapping Policies

An auth table consists of username, a set of roles, and IP address of the wired adapter, wireless adapter, or virtual adapter of the user device. Using SRX series firewall you can dynamically create auth table entries when a user tries to access the protected resource. An auth table mapping policy specifies which enforcer device can be used for each user role. These policies prevent the PPS from creating unnecessary auth table entries on all connected enforcer devices.

PPS's default configuration includes only one default auth table mapping policy. When the default auth table mapping policy is enabled, PPS pushes one auth table entry for each authenticated user to all SRX firewalls configured as Infranet Enforcers in PPS.

To configure auth table mapping policies:

1. Select **Endpoint Policy > Infranet Enforcer > Auth Table Mapping**.
2. Select the default auth table mapping policy called Default Policy and click Delete.

On the New Policy page:

1. For Name, enter a name to label this auth table mapping policy.
2. (Optional) For Description, enter a description.
3. In the Enforcer section, specify the Infranet Enforcer device(s) to which you want to apply this auth table mapping policy.
4. In the Roles section, specify:
 - Policy applies to ALL roles—To apply this auth table mapping policy to all users.
 - Policy applies to SELECTED roles—To apply this auth table mapping policy only to users who are mapped to roles in the Selected roles list. Be sure to add roles to this list from the Available roles list.
 - Policy applies to all roles OTHER THAN those selected below—To apply this auth table mapping policy to all users except for those who map to the roles in the Selected roles list. Be sure to add roles to this list from the Available roles list.

5. In the Action section, specify auth table mapping rules for the specified Infranet Enforcer device:
 - Always Provision Auth Table—To automatically provision auth table entries for chosen roles on the specified Infranet Enforcer.
 - Provision Auth Table as Needed—To provision auth table entries only when a user with a chosen role attempts to access a resource behind the specified Infranet Enforcer.
 - Never Provision Auth Table—To prevent chosen roles from accessing resources behind the specified Infranet Enforcer.

Make sure you delete the Default Policy if you configure any of your own auth table mapping policies. PPS includes this default auth table mapping policy that allows all source IP endpoints to use all Infranet Enforcer devices.

6. If you created a vsys on a ScreenOS Enforcer, enter the name of the vsys in the vsys text box. To view the enforcers or vsys that are associated with each policy, select **Infranet Enforcer > Auth Table Mapping**.
7. Click Save Changes.

For more information on dynamic authentication table, see [Configuring Dynamic Auth Table Policies](#).

Configuring Resource Access Policy

A resource access policy specifies which users are allowed or denied access to a set of protected resources. You can specify which users you want to allow or deny by choosing the roles for each resource access policy.

To configure Infranet Enforcer resource access policies:

1. Select **Endpoint Policy > Infranet Enforcer > Resource Access** Policy and click **New Policy**.

Figure 140: Infranet Enforcer

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Infranet Enforcer > Infranet Enforcer Resource Access Policies > New Policy

New Policy

* Name: Required: Label to reference this policy.

Description:

Resources

* Resources: Specify the resources for which this policy applies, one per line.
Examples: tcp://*:1-1024
tcp://10.10.10.10:443
udp://10.10.10.0/24
icmp://10.10.10.10/255.255.255.255
10.10.10.0/24

Infranet Enforcer

Specify the Infranet Enforcer(s) to which this policy applies.
(Not applicable for Palo Alto Networks firewalls.)

Available Enforcers: (none)

Selected Enforcers: (all)

Roles

☒ Policy applies to ALL roles
☐ Policy applies to SELECTED roles
☐ Policy applies to all roles OTHER THAN those selected below

Available roles: Engg, Guest, Guest Admin, OnboardRole, Remediation, ...

Selected roles: (none)

Actions

☒ Allow access
☐ Deny access
☐ Reject access The Infranet Enforcer will reject access by sending an ICMP unreachable message for UDP traffic and by sending a TCP-RST for TCP traffic. 'Reject access' only works with ScreenOS version 6.3r11 and later. Previous versions will handle it as 'Deny access'.

Enforcer Options

Specify the Enforcer options that should be enabled. If enabled here, the option must also be specified on the Enforcer policy that controls UAC traffic in order to take effect.

☒ ALL Enforcer Options
☐ SELECTED Enforcer Options
☐ Enforcer Options OTHER THAN those selected below

Available options: Antispam, Logging, IDP, Web Filtering, Antivirus, ...

Selected options: (none)

VSYS:

NOTE: changes to this page will cause a slight interruption of service for Infranet Enforcer Resource Policies users.

On the New Policy page:

2. For Name, enter a name to label this Infranet Enforcer resource access policy.

3. (Optional) For Description, enter a description.

For Resources, specify the protocol, IP address, network mask, and port of each resource (or range of addresses) for which this Infranet Enforcer resource access policy applies, one per line. Do not insert any spaces in your entries, or the policy may not be applied correctly.

You cannot specify a host name in a resource access policy. You can specify only an IP address. You can use TCP, UDP, or ICMP.

1. Under Infranet Enforcer, specify the Infranet Enforcer to which this policy applies by using Add.
2. Specify one of the following in the Roles section:
 - Policy applies to ALL roles—To apply this Infranet Enforcer resource access policy to all users.
 - Policy applies to SELECTED roles—To apply this Infranet Enforcer resource access policy only to users who are mapped to roles in the Selected roles list. You must add roles to this list from the Available roles list.
 - Policy applies to all roles other than those selected below— To apply this Infranet Enforcer resource access policy to all users except those who map to the roles in the Selected roles list. You must add roles to this list from the Available roles list.
3. In the Action section, specify whether you want to use this Infranet Enforcer resource access policy to allow or deny access to the specified resources.

If you select deny, a text box is displayed that allows you to customize a deny message for users.

With ScreenOS Enforcer Release 6.3 r13 or later, you can also select Reject Access. The customized deny message is available with the reject action.

The reject action is designed for clients that hang for a long period while waiting for connection initiations that the firewall is blocking. With the deny action, the Enforcer drops traffic in accordance with the PPS policy, but does not send back reject information. The policy action of "reject" denies the traffic and sends a TCP RST to the traffic originator for TCP traffic, or ICMP unreachable for UDP traffic. In earlier versions of ScreenOS and on the Junos Enforcer, the selection of reject results in a deny action.

To record deny actions in the User Access Log, select the Infranet Enforcer Deny Messages check box on the Log/monitoring > User Access > Settings page. The log records the user, source IP, destination IP, protocol, and destination port.

1. For ScreenOS Enforcers, in the ScreenOS Options section, use the option buttons to select the policy options that you want to apply to selected roles. Use the Add and Remove buttons to specify antispam, logging, IDP, web filtering, antivirus, and deep inspection.
2. By default, all policy options are enabled. To enforce the policies, you must create corresponding policies on the ScreenOS Enforcer. If PPS is upgraded from a previous version, all ScreenOS options are enabled for the resource access policies that were available prior to the upgrade.
3. If you have created a vsys on a ScreenOS Enforcer, enter the name of the vsys in the VSYS text box, if applicable. The Infranet Enforcer > Resource Access Policy page displays the Enforcers and/or vsys that are associated with each policy.

Configuring SRX Firewall

PPS can utilize a SRX device as a policy enforcement point to work as a Layer 3 Enforcer. When the SRX is configured to work as an enforcer with PPS, the following takes place:

- PPS provisions resource access policies.
- SRX gets the user's role membership information from authentication table entries that are sent by PPS when the user authenticates with the PPS or when the user tries to access resources through SRX.
- SRX does a policy lookup in resource access policies, which is sent by PPS and accordingly takes allow/deny decisions.

For the SRX to perform a PPS policy lookup, the *uac-policy application* service needs to be turned on in the SRX firewall rule and the firewall rule's action should be set to permit. The SRX security policies have to be manually configured on SRX.

Configuring SRX as an Enforcer

The SRX enforcer works with the PPS device for Layer 3 connectivity. You can connect with source IP or IPsec. For the initial setup, you must specify the PPS device name, IP address, port number over which the Junos Enforcer and PPS device will connect, the interface, the password (the same password as entered on the PPS device), and, optionally, the CA profile and server certificate subject. Use the Junos CLI to add this information.

You can configure the SRX device in “test only” mode. In test only mode, the SRX device does not enforce PPS policies and allows all traffic to pass. However, all policy decisions are logged. This allows you to set up the devices before actual deployment and determine how the PPS solution works using different configuration options. For example, the PPS device and endpoints can reside on different physical interfaces of the Junos Enforcer or on the same interface.

PPS device policies are role based. Each policy specifies a destination (the resources that are being protected), a set of roles, and an action (allow or deny). To determine the roles for users, an auth table maps source IP addresses to roles. When an endpoint accesses the PPS device, the PPS device populates the Junos Enforcer with an auth table entry mapping the endpoint's IP address to the endpoint's set of roles. When evaluating a flow, the source IP address of the initial packet is used to look up the roles. Then the first policy that matches both the destination (resource) and the roles is used to determine whether to permit or deny the flow.

To use IPsec with the SRX device, you must enable IKE services for the gateway. If you have multiple IPsec tunnels with multiple gateways, the hostname for each gateway must be unique.



NOTE: SRX Series communication to PPS is not supported on an interface that is in a routing instance or VRF instance.

To configure the Junos Enforcer:

2. Set up the trusted interface. The trusted interface connects to the protected resource. The untrusted interface connects to PPS.
3. Ensure that the DHCP server is disabled or enabled as required for the deployment.
4. Create a PPS configuration on the Junos security device, and provide the network information required for connecting using the CLI. This information includes PPS host name, the IP address, and the interface to which the device will connect. The default port for communication with PPS is 11123, you cannot change the port. You must also specify a password, that matches the password configured on PPS.
5. For complete CLI instructions and syntax, see the Junos Software CLI Reference.
 - Specify PPS hostname:
user@host# set services unified-access-control infranet-controller hostname
 - Specify PPS IP address:
user@host# set services unified-access-control infranet-controller hostname address ip-address

- Specify the Junos interface to which PPS should connect:
user@host# set services unified-access-control infranet-controller hostname interface interface-name
 - Specify the password that the SRX Series or J Series device should use to initiate secure communications with PPS:
user@host# set services unified-access-control infranet-controller hostname password password
6. Set the appropriate timeout and interval values, and specify a timeout action. The timeout that you set specifies the elapsed time beyond which the Junos Enforcer attempts to reconnect with PPS if no communication is received. The interval specifies how often PPS sends a heartbeat to the Junos Enforcer.
 7. (Optional) Verify that the certificate of the CA that signed PPS's server certificate is loaded in the Junos Enforcer and that the path to the certificate is specified.



NOTE: Although certificate verification is optional, there are three different certificate options on the Junos Enforcer that will produce different results.

- If certificate-verification is set to required, it is required that the device verify any PPS server certificate. If any PPS ca-profile is not configured, the commit check fails.
 - If certificate-verification is set to warning (the default), and PPS ca-profile is not configured, the commit check displays a warning about the security risk with a similar warning in the syslog.
 - If certificate-verification is set to optional, there is no warning.
8. Verify routing from PPS to the untrusted interface.
 9. Ensure that both the Junos Enforcer and PPS are set to the correct time. If possible, use a Network Time Protocol (NTP) Server to set the date and time of both appliances.

When you finish configuring PPS instance, the Junos Enforcer can initiate the connection with PPS. The Junos Enforcer optionally validates PPS server certificate if so configured. The device sends the serial number to authenticate with PPS.

For the Junos Enforcer to establish communication, you must configure the Junos Enforcer on PPS.

Enforcement using Screen OS Firewall

This chapter provides an overview of enforcement using ScreenOS. It includes the following information:

- [Overview](#)
- [Deployment of PPS using ScreenOS Firewall](#)
- [Configuring PPS with ScreenOS Firewall](#)
- [Configuring ScreenOS Firewall](#)
- [Appendix](#)


Overview

PPS delivers a layer 3 network access control solution when deployed with Screen OS firewall device. The PPS is the policy decision point that determines which users and endpoints can access protected resources. You can use Screen OS firewalls to serve as the enforcement point to provide the ultimate protection to ensure that network assets are secured.

Deployment of PPS using ScreenOS Firewall

This section describes the integration of PPS with ScreenOS firewall. The PPS and Screen OS firewall solution provides functionality for enforcing security policies on a per user and role basis. It also delivers granular level access control so that it can be easily managed through PPS.

Figure141: Deployment using ScreenOS Firewall

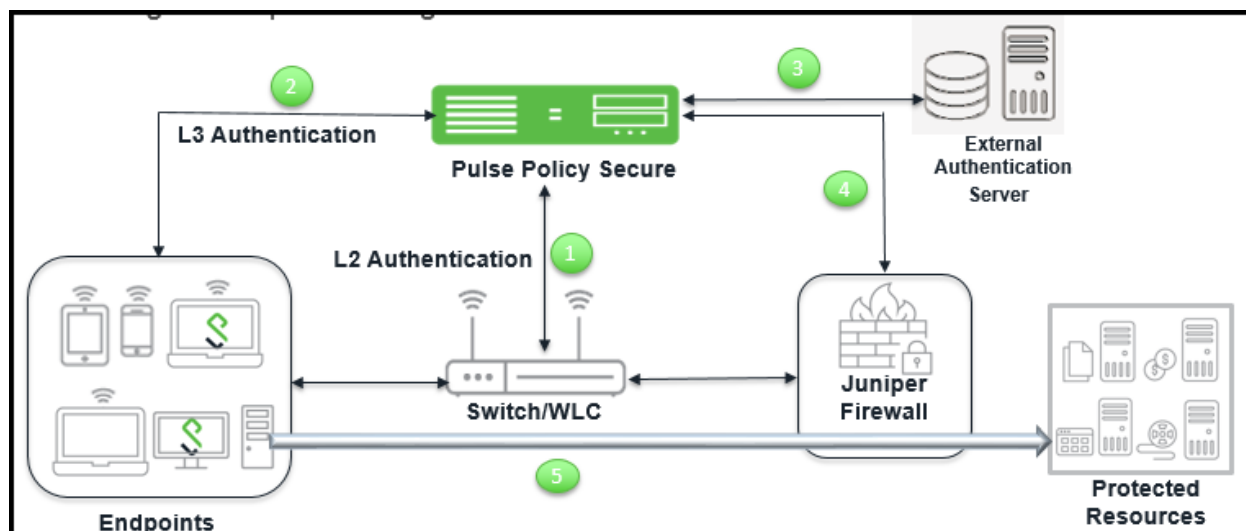

The authentication process is described below:

1. The endpoint connects to switch to perform the layer 2 authentication with PPS.
2. PPS communicates with authentication server and performs the layer 3 authentication along with host check to ensure that the endpoints meet the corporate policy.
3. The external authentication server such as AD/LDAP confirms the role and sends the entries to PPS.
4. PPS provisions the auth table on ScreenOS firewall with changes in role information if any.
5. The ScreenOS firewall maps the user to a specific resource access policy and then provides the required access.

Configuring PPS with ScreenOS Firewall

The ScreenOS Enforcer connects to PPS over an SSH connection that uses the NetScreen Address Change Notification (NACN) protocol. PPS uses the NACN password and serial number for a connection from the ScreenOS Enforcer. When the ScreenOS Enforcer first turns on, it sends an NACN message containing the NACN password and serial number to PPS. PPS uses the serial number to determine which ScreenOS Enforcer is attempting to connect, and PPS uses the NACN password to authenticate the ScreenOS Enforcer. PPS then begins communicating with the ScreenOS Enforcer using SSH.

This section covers the following topics:


- [Configuring ScreenOS Infranet Enforcer in PPS](#)
- [Configuring Auth Table Mapping Policies](#)
- [Configuring Resource Access Policy](#)

Configuring ScreenOS Infranet Enforcer in PPS

To configure a SRX Firewall Infranet Enforcer in PPS:

1. Select **Endpoint Policy > Infranet Enforcer**.

Figure 142: Infranet Enforcer

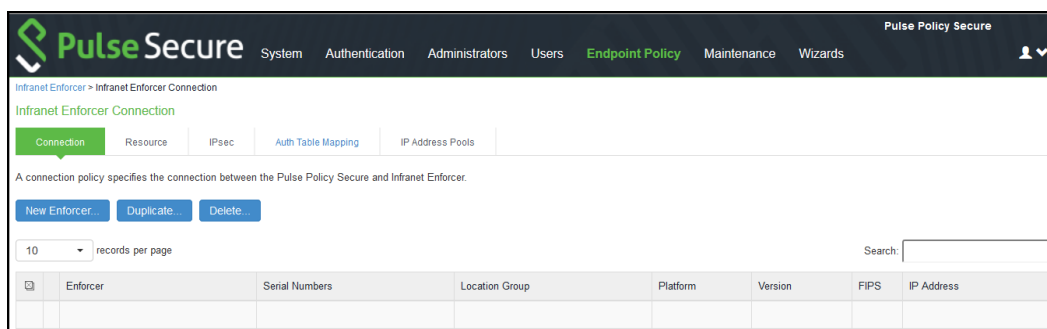

2. Click **New Infranet Enforcer** and select **ScreenOS Firewall** in the **Platform** drop down.

Figure143: ScreenOS Firewall

Pulse Secure

System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Infranet Enforcer > Connection > New Infranet Enforcer

New Infranet Enforcer

▼ Infranet Enforcer

Platform: Platform of this Infranet Enforcer.

* Name: Label to reference this Infranet Enforcer.

* NACN password: NetScreen Address Change Notification password.

* Admin username:

* Admin password:

* Serial number(s): One per line.

Location Group: To manage groups, see the [Location Group](#)

▼ Coordinated Threat Control

Note that not all enforcer versions and platforms have an IDP module.

☐ Use IDP Module as Sensor

[Save Changes](#)

* indicates required field

3. Enter an NACN password for this Infranet Enforcer in the NACN password box. You must enter this same NACN password when configuring the Infranet Enforcer.
4. In the appropriate boxes, enter the administrator name and password for signing into the Infranet Enforcer
5. Enter the name of the Infranet Enforcer in the Name box.
6. Enter the password for the ScreenOS enforcer.
7. Enter the serial number of the ScreenOS Enforcer. You can view the serial number on the ScreenOS device using the command: **get system**
8. Select **No 802.1X** from the Location Group list if you are not using an Infranet Enforcer as an 802.1X RADIUS client.
9. Ensure that the server certificate for PPS is configured for the interface to which the SRX device is connecting.
10. Click Save Changes.

When you finish configuring the Infranet Enforcer, the Infranet Enforcer attempts to connect to PPS. If the connection is successful, a green dot is displayed next to the Infranet Enforcer icon. Under Enforcer Status select **System > Status > Overview**. The Infranet Enforcer IP address is also displayed in Endpoint Policy > Infranet Enforcer > Connection.

Configuring Auth Table Mapping Policies

An auth table consists of username, a set of roles, and IP address of the wired adapter, wireless adapter, or virtual adapter of the user device. Using SRX series firewall you can dynamically create auth table entries when a user tries to access the protected resource. An auth table mapping policy specifies which enforcer device can be used for each user role. These policies prevent the PPS from creating unnecessary auth table entries on all connected enforcer devices.

For complete configuration information, see [Configuring Auth Table Mapping Policies](#).

Configuring Resource Access Policy

A resource access policy specifies which users are allowed or denied access to a set of protected resources. You can specify which users you want to allow or deny by choosing the roles for each firewall enforcer access policy.

For complete configuration procedure, see [Configuring Resource Access Policy](#).

Configuring ScreenOS Firewall

PPS can utilize a ScreenOS device as a policy enforcement point to work as a Layer 3 Enforcer. When the ScreenOS device is configured to work as an enforcer with PPS, the following takes place:

- PPS provisions resource access policies.
- Screen OS device gets the user's role membership information from authentication table entries that are sent by PPS when the user authenticates with the PPS or when the user tries to access resources through ScreenOS.
- ScreenOS device does a policy lookup in resource access policies, which is sent by PPS and accordingly takes allow/deny decisions.

This section covers the following topics:

- [Configuring ScreenOS as an Enforcer](#)
- [Configuring the ScreenOS in Route Mode](#)
- [Configuring the ScreenOS in Transparent Mode](#)
- [Verifying the PPS Configuration on ScreenOS Enforcer](#)

Configuring ScreenOS as an Enforcer

You can configure basic Infranet auth Enforcer policies that specify a source zone and a destination zone on the PPS Series device and then push the policies to the ScreenOS Enforcer to add additional policy details, or you can use the ScreenOS Enforcer to configure the policies with the CLI or Web UI. We recommend that you use the PPS Series device to set up the policies for source IP enforcement on the Infranet Enforcer.

Before setting a policy, you must create address book entries for the destination and source addresses unless you use address book entries that already exist, such as Any.

The following example, sets an Infranet auth policy and adds it to the top of the list of policies. The policy allows all traffic of any type from any host to another host. The policy allows traffic according to the Infranet Enforcer resource access policies that you configure on the PPS Series device.

```
set policy top from untrust to trust any permit Infranet-auth
```

The following example sets two address book entries and a policy between them for anyone in the 10.64.0.0/16 range can reach the 10.65.0.0/16 range.

```
set address Trust "10.64 Range" 10.64.0.0 255.255.0.0
set address Untrust "10.65 Range" 10.65.0.0 255.255.0.0
set policy from trust to untrust "10.64 Range" "10.65 Range" any permit Infranet-auth
```

You can use Route mode or Transparent mode to configure a Juniper Networks ScreenOS Enforcer. By default, the ScreenOS Enforcer operates in Route mode. For more information on ScreenOS, see the [ScreenOS Reference Guide](#).

This sections covers the following information:

1. Configuring the ScreenOS Enforcer in Route Mode
2. Configuring the ScreenOS Enforcer in Transparent Mode

Configuring the ScreenOS in Route Mode

The PPS can reside on trust/untrust interface side of the Infranet Enforcer. If PPS resides on the trust interface side, and users come in through the untrust interface, the administrator must configure a policy (untrust to trust) on the Infranet Enforcer that allows traffic to pass between PPS and Pulse Client. By default, Infranet Enforcer traffic from the untrust interface to the trust interface is denied.

The following procedure describes the setup with PPS on the untrust interface side (same side as users).

To configure an Infranet Enforcer in Route mode:

1. Set up the trust interface. The trust interface connects to the protected resource. The untrust interface connects to PPS. Set the following interface (ethernet1/1) settings:
 - Set routing
 - Enable management of the following services:
 - SSL
 - SSH
 - IP (options)
2. Ensure that the DHCP server is disabled or enabled, as appropriate for the deployment.
3. Import the certificate of the CA that signed PPS's server certificate into the Infranet Enforcer.
4. If you set up an NSRP cluster before you import the CA certificate into the Infranet Enforcer, the CA certificate is automatically synchronized to all Infranet Enforcers in the cluster. However, if you set up the NSRP cluster after you import the CA certificate, you must manually synchronize the certificate to the other Infranet Enforcers in the cluster by typing the following CLI command:

```
exec nsrp sync pki
```

You cannot load the self-signed SSL certificate into the Juniper security device.

The certificate of the CA that signed PPS's certificate must be imported on the Infranet Enforcer because the Infranet Enforcer must be able to trust PPS during an SSL session. When a user signs into a server by means of SSL, the server displays a dialog box in which the user can manually accept the certificate that is associated with that server. For the Infranet Enforcer to skip that manual step and automatically accept PPS's certificate, the Infranet Enforcer must have the certificate of the CA that signed PPS's certificate.

5. Create an instance of PPS on the Juniper security device.
6. Enable SSH.
7. Verify routing from PPS to the untrust interface.
8. Ensure that both the Infranet Enforcer and PPS have the correct time. If possible, use a Network Time Protocol (NTP) server to set the date and time of both appliances.

Creating a Route based interface with ScreenOS

When an interface is in route mode, the security device routes traffic between different zones without performing source NAT.

To create a PPS instance on ScreenOS, you must configure the following items:

- IP address or hostname of PPS
- Password to use when the Infranet Enforcer uses NACN to contact PPS
- Source interface

- CA index number (ca-idx)

You can set these items using the Web UI or the CLI.

In the following procedure, you first set interface management options and disable the DHCP server option. Then you enable SSHv2 and configure an PPS server named controller1. Next, you set the host IP address, which is the IP address of the server, to 10.64.12.1. The NACN password is 8!JsP37cK9a*_HiEwe. The NACN password must match the NACN password that you entered for PPS server. The source interface is the interface that the Infranet Enforcer uses to communicate with PPS, and the CA index number is 001.

For this example, the source interface is ethernet 1/1. For a descriptive list of CA index numbers by typing the following command at the ScreenOS CLI:

```
get ssl ca-list
```

To change SSH versions, delete SSH settings by typing the following CLI command:

```
delete ssh device all
```

When you use the Web UI, you do not need to fill in the Full Subject Name of PPS Cert field. If you do fill it in, be sure to enter the entire certificate subject. For example:

```
CN=ic1.sample.net,CN=14087306185,CN=06990218,OU=Software,O=Comp,S=CA, C=US
```

To create the instance using the Web UI:

1. Select Network > Interfaces > Edit > Services from the left navigation bar to set management options.
2. Select Network > DHCP > Edit to disable the DHCP server for both interfaces (Trust and Untrust).
3. Select and load the CA if you have not already done so.
4. Select Objects > Certificates.
5. Click Browse to find and select the certificate. Then click Load.
6. Select CA from the show list.
7. Click Server Settings and make sure Check Method is set correctly for the certificate you are using.
8. Click OK.
9. Create PPS instance.
10. Select Configuration > Infranet Auth > Controllers (List) > New.
11. Type controller1 in PPS instance box.
12. Type IP/domain name: 10.64.12.1 in the IP/Domain Name box.
13. For the NACN Parameters, select ethernet1/1 from the Source Interface list.
14. Type 8!JsP37cK9a*_HiEwe in the Password box.
15. Select the CA from the Selected CA list.
16. Enable SSH version 2.
17. Select Configuration > Admin > Management > Enable SSH (v2).

To create the instance using the CLI:

Type the following commands:

```
set interface ethernet1/1 manage ssl
set interface ethernet1/1 manage ssh
set interface ethernet1/1 manage ip
set interface ethernet2/1 manage ping
set interface ethernet2/1 dhcp server disable
set interface ethernet1/1 dhcp server disable
delete ssh device all
```

```
set ssh version v2
set ssh enable
set infranet controller name controller1 host-name 10.64.12.1
set infranet controller name controller1 password 8!JsP37cK9a*_HiEwe
set infranet controller name controller1 src-interface ethernet1/1
set infranet controller name controller1 ca-idx 001

save
```

Configuring the ScreenOS in Transparent Mode

The ScreenOS device is usually installed between a core router and an access distribution device in a transparent mode. The services are enabled at the zone level, and VLAN1 is used for management.

Transparent mode permits you to implement the following functionality:

- The device can act as a Layer 2 forwarding device, such as a bridge.
- You can control traffic flow between Layer 2 security zones by defining policies.

To configure a ScreenOS Enforcer in Transparent mode:

1. Set up Transparent mode using the predefined security zones, v1-trust and v1-untrust.
2. Assign interfaces to v1-trust and v1-untrust.
3. Configure the IP address for a source interface to establish connectivity with PPS. You can use V1-trust, V1-untrust, or V1-dmz.
4. Configure the broadcast mechanism to flooding (default) or ARP/traceroute. ARP/trace-route is more secure than broadcast.
5. Enable management of the following services for VLAN1:
 - SSL
 - SSH
 - Web (optional)
6. Set up the Juniper Networks security device zones. The protected resources can be in either zone (v1-trust or v1-untrust) as long as the protected resources are in a zone different from the endpoints.

PPS can also reside in either zone. If PPS resides in a zone different from the endpoints, configure a policy that allows traffic to the endpoints through the ScreenOS Enforcer.
7. Import the certificate of the CA that signed PPS's server certificate into the ScreenOS Enforcer.

Do not import PPS SSL certificate into the Juniper Networks security device.
8. Create an instance of PPS on the ScreenOS Enforcer.
9. Enable SSH.
10. Verify routing from PPS to the V1-untrust zone.

To use IPsec enforcement with a ScreenOS Enforcer in Transparent mode, you might need to configure a source interface policy on PPS.
11. Ensure that both the Infranet Enforcer and PPS have the correct time. If possible, use a Network Time Protocol (NTP) server to set the date and time of both appliances.

Creating a Transparent Mode instance on the ScreenOS

To create a PPS instance in transparent mode, use the CLI to perform the following actions:

- Assign all interfaces to Layer 2 zones.
- Assign an IP address to vlan1 and set the route command.
- Set interface management options.
- Configure a PPS instance named controller1.
- Set the host IP address, which is the IP address of PPS, to 10.64.12.1.
- Enter the NACN password. The NACN password is 8!JsP37cK9a*_HiEwe. The NACN password must match the NACN password that you entered for PPS.
- The source interface, vlan1, is the interface that the Infranet Enforcer uses to communicate with PPS. The CA index number is 001. For a descriptive list of CA index numbers type the following CLI command: `get ssl ca-list`

You can use the following sample configuration to create the instance using the CLI.



NOTE: For the firewall to operate in Transparent (Layer 2) mode, all interfaces must be in a Layer 2 zone, such as v1-trust or in the null zone. Interfaces cannot remain in a Layer 3 zone.

```
set interface eth1 zone v1-trust
set interface eth2 zone v1-untrust
set interface vlan1 ip 10.64.12.x
set interface vlan1 route
set interface vlan1 ip manageable
unset interface vlan1 manage ping
unset interface vlan1 manage telnet
unset interface vlan1 manage snmp
unset interface vlan1 manage web
set infranet controller name controller1 host-name 10.64.12.1
set infranet controller name controller1 password 8!JsP37cK9a*_HiEwe
set infranet controller name controller1 src-interface vlan1
set infranet controller name controller1 ca-idx 0001
```

Verifying the PPS Configuration on ScreenOS Enforcer

You can view the configuration of a PPS instance through the Web UI and the CLI. You can view the following information:

- Name of PPS instance
- IP address or domain name of PPS
- Port number (Default 11122)
- Timeout (60 seconds by default)
- Source interface

The Web UI also allows you to view the NACN password.

Web UI

To view configuration information on the Web UI select the following:

1. Configuration > Infranet Auth > Controllers from the left navigation bar.
2. Configuration > Infranet Auth > General Settings from the left navigation bar.

CLI

To view configuration information at the CLI, type the following command:

```
get infranet controller name controller1
```

Appendix

Configuring Dynamic Auth Table Policies

You can use the dynamic auth table allocation feature to push auth table entries to the Infranet Enforcer only when a user attempts to access a protected resource. This is more efficient than the Auth Table Mapping Policies option, which requires administrators to provision auth table entries for authenticated users whether they are accessing resources or not. Dynamic auth table allocation reduces auth table entries to only those that are needed, enabling you to deploy smaller firewalls with a larger user population.

When dynamic auth table allocation is used and a user attempts to access a protected resource, the Infranet Enforcer does not yet have an auth table entry for the user, so it sends a drop notification to PPS to prompt it to send an auth table entry. Unlike captive portal redirect, which only occurs when the user sends HTTP traffic, drop notifications are triggered by any type of traffic for which the destination is a protected resource.

After the user disconnects, the Infranet Enforcer automatically expires the auth table entry.



NOTE: On the SRX device, whenever traffic matches a security policy that includes an application-services uac-policy statement, then the firewall sends a drop notification to PPS if there is no auth table entry associated with that traffic. This applies in the captive portal use case, and for all policies that include the application-services uac-policy statement.

However, this behavior changes if user role firewall is configured. When a match source-identity statement is included in any policy within a zone pair (source zone + destination zone), user and role information must be retrieved before policy lookup can proceed. (If all policies in the zone pair are set to match source-identity any, or have no match source-identity state, user and role information is not required and the five standard match criteria are used for policy lookup.) Therefore, for any zone pair in which a security policy is configured that contains a match source-identity statement, the firewall sends a drop notification for all traffic matching that source and destination zone, whether or not the traffic matches the specific security policy containing the match source-identity statement. This can result in an unexpected number of drop notifications if a single zone contains a mix of protected and unprotected resources.

In most deployments, it is recommended that you use dynamic auth table allocation. The benefits of dynamic auth table allocation are based on many factors within the network deployment: the number of Infranet Enforcers, the anticipated number of sessions, and the persistence of user sessions.

The following requirements and limitations apply:

- Dynamic auth table allocation is supported for all deployments with Junos Enforcer and with ScreenOS Enforcers running ScreenOS 6.1 or later.
- Dynamic auth table allocation does not work with HTTP traffic if the captive portal feature is configured to redirect user traffic to an external web server other than PPS. PPS must be aware of a user log in/session before it can provision an auth table entry.
- If you configure dynamic auth table allocation on PPS, and the DNS server for the network is behind the Infranet Enforcer, endpoints might occasionally experience DNS time-out issues before resources are provisioned.
- Dynamic auth table allocation is required to use IF-MAP Federation.

One scenario in which static auth tables are more practical is a deployment that forces every endpoint to go through a single Infranet Enforcer for all access. In this case, static auth tables can reduce overall traffic between PPS servers and Infranet Enforcers.

For deployments that use static auth table mapping policies, we recommend not more than 100 connected Infranet Enforcers. For deployment scenarios with more than 100 Infranet Enforcers, we recommend a deployment strategy using dynamic auth table allocation. Testing has shown that with 5,000 active sessions, performance is impacted significantly

when dynamic auth table allocation is not configured and 100 connected firewalls are deployed. Performance metrics vary for each PPS release.

To enable dynamic auth table allocation:

1. Select **Infranet Enforcer > Auth Table Mapping** in the admin console. Either delete the Default Policy or specify an Enforcer for which you do not want to configure this feature.
2. Click **Save Changes**.

Binding an Interface to a Security Zone on a Junos Enforcer

Interfaces are the doorways through which traffic enters and exits an Enforcer. Many interfaces share the same security requirements. However, different interfaces can have different security requirements for inbound and outbound data packets. Interfaces with identical security requirements can be grouped together in a single *security zone*.

A security zone is a collection of network segments that require the regulation of inbound and outbound traffic through policies. Security zones are logical entities to which one or more interfaces are bound. Many types of Enforcers let you define multiple security zones based on network requirements.

You can configure multiple security zones by dividing the network into segments to which you can then apply various security options to satisfy the needs of each segment. At a minimum, you must define two security zones, basically to protect one area of the network from the other. On some security platforms, you can define many security zones, bringing finer granularity to the network security design without deploying multiple security appliances to do so.

From the perspective of security policies, traffic enters one security zone and exits through another security zone. This combination of a “from-zone” and a “to-zone” is defined as a *context*. Each context contains an ordered list of policies. On the Junos Enforcer, you must define at least two zones to protect one area of the network from another.

You might need to bind the physical interfaces on a Juniper security device to security zones or you might need to change a binding to accommodate your deployment.



NOTE: Slot numbering varies by platform, and interface numbering varies by module type. For numbering information, see the user guide that accompanied the device for slot and interface numbering information or visit www.pulsesecure.net/techpubs/ to obtain a copy of the user guide specific to your device.

Endpoints must reside in a different security zone from your protected resources. PPS can reside in any security zone. If you place PPS in a different security zone from the one that contains endpoints, you must set a policy allowing traffic from the endpoints to PPS.

Through the policies you define, you can permit traffic between zones to flow in one or both directions. The routes that you define specify the interfaces that traffic from one zone to another must use. Because you can bind multiple interfaces to a zone, the routes you chart are important for directing traffic to the interfaces of your choice.

To view the zones on a Junos Enforcer, type the following command in the CLI:

```
user@host#show security zones
```

To bind the physical interface on the Junos Enforcer:

1. Configure the interface and its IP address for the trust and untrust zones, enter the following statements in Edit mode:
user@host# set interfaces ge-0/0/1 unit 0 family inet address 192.168.0.1/24
2. To configure the trust zone and to assign the interface to it, enter the following statement in Edit mode:
user@host# set security zones security-zone trust interfaces *interface*
3. To configure the interface and its IP address for the untrust zone, enter the following statement in Edit mode:

```
user@host# set interfaces ge-0/0/1 unit 0 family inet address 10.0.0.20/24
```

4. To configure the untrust zone and to assign the interface to it, enter the following statement in Edit mode:

```
user@host# set security zones security-zone untrust interfaces interface
```



NOTE: To use IPsec with the Junos Enforcer, you must enable IKE services for the gateway. If you have multiple IPsec tunnels with multiple gateways, the hostname for each gateway must be unique.

Captive Portal

Captive portal enables an endpoint to be redirected to a specified URL when the user attempts to access a protected resource behind an Infranet Enforcer. The default redirection page is the authentication page of PPS.

The Captive Portal workflow is described below:

1. The user attempts to access a protected resource.
2. The generic source IP policy that matches the destination includes a redirect configuration.
3. The enforcer sends a redirect message to the endpoint browser that includes the URL of PPS.
4. The browser opens a session with PPS and the endpoint completes authentication.
5. PPS sends an authentication table information to Enforcer.
6. PPS redirects the browser back to the original resource.
7. The user tries to access the resource and the enforcer allows the user to access the protected resource.

Configuring Captive Portal

You can configure a captive portal directly on the Infranet enforcer using the CLI. You must create a *captive-portal* application service and then set the traffic that would like to redirect:

- **unauthenticated**—Select this option if your deployment uses source IP only or a combination of source IP and IPsec. The Infranet Enforcer redirects clear-text traffic from unauthenticated users to the currently connected PPS, or to an IP address or domain name that you specify in a redirect URL.
- **all**—Select this option if your deployment uses IPsec only. The Infranet Enforcer redirects all clear-text traffic to the currently connected PPS, or to an IP address or domain name that you specify in a redirect URL.

Note:

- The captive portal feature redirects HTTP traffic only. If the user attempts to access a protected resource using HTTPS or another protocol such as SMTP, the Infranet Enforcer does not redirect the user's traffic. When using HTTPS or another application, the user must manually sign into PPS first before attempting to access protected resources.
- If there is an HTTP proxy between the endpoint and the Infranet Enforcer, the Infranet Enforcer might not redirect the HTTP traffic.

Example: Junos SRX CLI

To use captive portal with the Junos Enforcer, Release 10.2 is required.

To enable captive portal, associate an instance of a captive portal with a security zone use the following command format:

```
user@host# set security policies from-zone zone-name to-zone zone-name policy policy-name
```

To create the captive portal use the following command format:

```
user@host# permit application-services uac-policy captive-portal captive-portal-name
```

You can redirect all traffic, or only unauthenticated traffic on the Junos Enforcer using the following command format:

```
# edit services unified-access-control captive-portal policy redirect-traffic (all | unauthenticated)
```

Example: ScreenOS CLI

To configure a redirect infranet auth policy for deployments that use either source IP only or a combination of source IP and IPsec type the following command:

```
set policy from source-zone to dest-zone src_addr dst_addr any permit infranet-auth redirect-unauthenticated
```

To configure a redirect infranet auth policy for deployments that use IPsec only type the following command:

```
set policy from source-zone to dest-zone src_addr dst_addr any permit infranet-auth redirect-all
```

Creating a Redirect Policy on the Junos Enforcer

In a Junos Enforcer security policy, specify the redirect URL in the following format:

```
user@host# set services unified-access-control captive-portal policy redirect-url url
```

By default, after you configure a captive portal policy, the Junos Enforcer redirects HTTP traffic to the currently connected PPS by using HTTPS. To perform the redirection, the Junos Enforcer uses the IP address or domain name that you specified when you configured PPS instance on the Junos Enforcer.

You specify the redirect URL in a Junos Enforcer security policy using the following hierarchy:

```
user@host# set services unified-access-control captive-portal cap-policy redirect-url "https://%ic-ip%/?target=%dest-url%&enforcer=%enforcer-id%&policy=%policy-id%"
```

These are the four available parameters for redirection.

- target
- enforcer
- policy
- dest-ip

Target, enforcer, and policy are required. Dest-ip is optional. For example:

```
redirect-url "https://acmegizmo.juniper.net/?target=%dest-url%&enforcer=%enforcer-id%&policy=%policy-id%"
```

If you do not specify the redirect URL, the Junos Enforcer uses the default configuration.



NOTE: To set a redirect URL for the Junos Enforcer, use escape characters instead of dot (.).

For configuration instructions and examples, see the *Junos OS Initial Configuration Guide for Security Devices*.

Creating a Redirect Policy on the ScreenOS Enforcer

From the ScreenOS CLI

1. To specify the redirect URL, enter: `set infranet controller name controller1 url "http://10.64.12.1/?target=%dest-url%"`
2. To specify the redirect URL without the `?target=%dest-url%` string, enter: `set infranet controller name controller1 url http://abc.company.com`

IPsec Policy enforcement using SRX and ScreenOS

This chapter provides an overview of IPsec enforcement using SRX and ScreenOS firewall. It includes the following information:

- [Overview](#)
- [Configuring IPsec Policy Enforcement](#)

About IPsec Enforcement

Overview

IP Security (IPsec) policy is a firewall policy, which supports IPsec access from endpoints running Pulse Client. It consists of a suite of related protocols for cryptographically securing communications at the IP Packet Layer. Odyssey Access Client and Pulse Desktop Client support IPsec using IKEv1 with XAuth. For the client to establish an IPsec tunnel, it must retrieve configuration information from the Junos Enforcer. This information is forwarded to the PPS device by the respective device.

This section details the policies that you configure in association with using IPsec on the Junos Enforcer.

- **IPsec Routing Policy**—This type of policy specifies which Junos Enforcer an endpoint must use to access a resource. This policy also specifies whether that resource requires an IPsec tunnel for endpoints to access it. Note that an IPsec tunnel does not automatically give the endpoint access. You configure IPsec routing policies on the PPS device.
- **IP Address Pools Policy**—This type of policy specifies a pool of virtual IP addresses that you want the PPS device to automatically assign to endpoints in NAT environments that use IPsec tunnels to the Junos Enforcer. You configure IP address pools policies on the PPS device.
- **Junos Enforcer Security Policy**—On the Junos Enforcer, security policies are used to define the source and destination address, the application, and the phase 2 policy. You configure security policies on the Junos Enforcer. You cannot configure security policies on the PPS device.

Configuring IPsec Policy Enforcement

The PPS device is the policy decision point that determines which users and endpoints can access protected resources. The Junos Enforcer is the enforcement point to provide the ultimate protection to ensure that your network assets are secured.

This section covers the following topics:

- [Configuring IPsec Routing Policies](#)
- [Configuring IP Address Pool Policy](#)
- [Example: Configuring Junos Enforcer IPsec Routing Policy](#)

Configuring IPsec Routing Policies

An IPsec routing policy specifies which Junos Enforcer device endpoints must use to access resources when using IPsec. The IPsec routing policy also specifies that endpoints must use an IPsec tunnel to the Junos Enforcer to access resources. For example, you might create an IPsec routing policy that uses IPsec for 0.0.0.0/0 (the entire network). In the same policy, you could specify the resources that are exceptions and do not use IPsec, such as 172.24.80.30 (the PPS device), 172.24.80.31 (the Junos Enforcer), and 172.24.144/21 (a wireless network).

Before you begin:

| Topic | Details |
|--|---|
| IP address exceptions | Do not use IPsec for PPS, the Infranet Enforcer, and networks where your endpoints are located. For example, if you create an IPsec routing policy that uses IPsec on an entire network range (such as 0.0.0.0/0) for your protected resources, be sure to specify exceptions in the same policy for the IP addresses assigned to PPS, Infranet Enforcer, and the endpoints. |
| UDP encapsulation and virtual adapters | For maximum inter-operability with other third-party IPsec clients, select both Always use UDP encapsulation and Always use a virtual adapter. When both options are selected, Network address translation (NAT) is simulated even if a NAT device is not present. We recommend that you select both options or neither option. For example, if an endpoint contains two network interfaces, such as a wired and a wireless interface, and a NAT device is not present between the endpoint and the Infranet Enforcer. If the endpoint does not access a protected resource by using the interface that is connected to the network where the Infranet Enforcer is installed, then the user cannot access the protected resource through either interface without a virtual adapter. Because PPS does not automatically install a virtual adapter unless a NAT device is detected, enable the Always use a virtual adapter option to simulate NAT and force the use of a virtual adapter for this use case. |

To configure an IPsec routing policy:

1. Select Pulse Policy Secure > Infranet Enforcer > IPsec Routing.
2. Click New Policy.

On the New Policy page:

1. For Name, enter a name to label this IPsec routing policy.
2. For Description, enter an optional description.
3. If you are using ScreenOS Release 6.1 or later, and you want to configure PPS to dynamically provision IPsec routing policies, select the Dynamic check box. The Resources and Exceptions text boxes and the Infranet Enforcer check boxes disappear.
4. Go to step 10 to continue configuring this policy for ScreenOS Release 6.1 or later.
5. For Resources, enter the IP address and netmask of each resource that requires endpoints to use IPsec, one per line, in the following format:

```
<ip address>[/netmask]
```

You cannot specify a host name in an IPsec routing policy. You must specify an IP address.

6. For Exceptions, use the following format, one per line, to specify the IP address and netmask of each resource that has traffic which you do not want to flow through the Infranet Enforcer:

<ip address>[/netmask]

Each exception must be a subset of what you specify for Resources.

7. For Destination Zone, enter the zone that is configured on the Infranet Enforcer where the protected resources specified in this IPsec routing policy are located. For example: trust
8. Select these options to configure IPsec interoperability and tunnel persistence:
 - Always use UDP encapsulation—Allows the client and the Infranet Enforcer to create an IPsec tunnel inside a third-party IPsec tunnel by using UDP encapsulation even if a NAT device is not present. For example, for interoperability with third-party IPsec clients running on the endpoint PPS uses port 4500 for UDP encapsulation in compliance with RFC 3948.
 - Always use a virtual adapter—Forces the use of a virtual adapter on the endpoint. If you select this option, you must also set up IP address pools even if a NAT device is not present.
 - Persistent Tunnel Mode—Allows you to determine whether or not a tunnel is established when a user first connects to PPS. If the check box is selected, an IPsec tunnel is established, and users can access protected resources behind the Infranet Enforcer. If the check box is not selected, the tunnel is not automatically set up: a tunnel will not be initiated until there is a request for traffic.
9. From the Enforcer list, choose the Infranet Enforcer to which endpoints connect to access the resources specified in this IPsec routing policy.
10. In the Roles section, specify:
 - Policy applies to ALL roles—To apply this IPsec routing policy to all users.
 - Policy applies to SELECTED roles—To apply this IPsec routing policy only to users who are mapped to roles in the Selected roles list. Be sure to add roles to this list from the Available roles list.
 - Policy applies to all roles OTHER THAN those selected below—To apply this IPsec routing policy to all users except for those who map to the roles in the Selected roles list. Be sure to add roles to this list from the Available roles list.
11. Click Save Changes.

Configuring IP Address Pool Policy

The PPS device supports the use of IPsec tunnels through NAT devices to allow users secure access to protected resources. In a NAT environment, a virtual IP address must be used for the IPsec tunnel's inner address.

You can configure a pool of virtual IP addresses that the PPS device can automatically assign to endpoints by creating IP address pool policies. An IP address pool is a contiguous range of IP addresses which you configure by specifying the starting address and the number of addresses in the pool. You can associate an IP address pool with one or more Junos Enforcers.

To configure an IP address pool policy:

1. Select Pulse Policy Secure > Infranet Enforcer > IP Address Pools.
2. Click New Policy.

On the New Policy page:

1. For Name, enter a name to label this IP address pool policy.
2. (Optional) For Description, enter a description.

For IP address pool, specify IP addresses or a range of IP addresses to assign to endpoints. The IP address range can be specified as shown in Table 13 lists the syntax for IP address pools, where the last component of the IP address is a range delimited by a hyphen (-). Note that no special characters are allowed.

Table 13: Syntax for IP Address Pools

| IP Address Range | Description |
|------------------|--|
| a.b.c.d | A single IP address |
| a.b.c.d-e.f.g.h | All IP addresses from the first address to the last address, inclusive |
| a.b.c.d-f.g.h | An abbreviated form that specifies the range a.b.c.d through a.f.g.h |
| a.b.c.d-g.h | An abbreviated form that specifies the range a.b.c.d through a.b.g.h |
| a.b.c.d-h | An abbreviated form that specifies the range a.b.c.d through a.b.c.h |
| a.b.c.d/mask | All addresses in a network |

For example, to allocate all addresses in the range 172.20.0.0 through 172.20.3.255, specify 172.20.0.0-3.255. To allocate all addresses in a class C network, specify 10.20.30.0/24.

Under Infranet Enforcer, select the Infranet Enforcer to which you want to apply this IP address pool policy and click Add. To apply the policy to all Infranet Enforcers, do not add any Infranet Enforcers, and leave the default setting (all) listed in the Selected Enforcers list.

1. In the Roles section, specify:
 - Policy applies to ALL roles—To apply this IP address pool policy to all users.
 - Policy applies to SELECTED roles—To apply this IP address pool policy only to users who are mapped to roles in the Selected roles list. Be sure to add roles to this list from the Available roles list.
 - Policy applies to all roles OTHER THAN those selected below—To apply this IP address pool policy to all users except for those who map to the roles in the Selected roles list. Be sure to add roles to this list from the Available roles list.
3. Click Save Changes.

If the IP addresses you specify in the IP address pool policies (that is, the virtual IP addresses) are not routable from the network where your protected resources are located, make sure you enable Source Network Address Translation (NAT-src) on the infranet auth tunnel policies that configure IPsec on the Infranet Enforcer.

To enable NAT-src using the Infranet Enforcer Web UI:

1. Click Policies.
2. Click Edit on the infranet auth tunnel policy.
3. Click Advanced.
4. Select Source Translation and click OK.

For information about enabling NAT-src on the infranet auth tunnel policy, see http://www.juniper.net/techpubs/en_US/release-independent/screenos/information-products/pathway-pages/screenos/product/index.html.

Example: Configuring Junos Enforcer IPsec Routing Policy

This topic describes how to configure Junos Enforcer IPsec routing policies. You use the Junos OS CLI to configure IPsec routing policies on the Junos Enforcer. Unlike the ScreenOS Enforcer, you cannot create policies on the PPS device and push the policies to the Junos Enforcer.

The source interface is specified in the IKE gateway configuration on the Junos Enforcer. In security policies you specify a VPN, and you specify the IKE gateway in the VPN. For more information, see Juniper's Junos OS Initial Configuration Guide for Security Devices.



NOTE:

- IPsec on the Junos Enforcer can handle up to 5,000 concurrent IKE gateways.
- Dynamic IPsec is not supported on the Junos Enforcer.

To configure IPsec on the Junos Enforcer, you must perform three primary tasks:

- Configure the PPS device as a RADIUS server for the Junos Enforcer RADIUS client to enable XAUTH. You must use the internal interface on the PPS device, the external interface does not support XAUTH.
- Configure IKE and IPsec parameters to specify security restrictions.
- Configure security policies to route traffic between the security gateway and the interface for endpoints.

The following example describes a sample configuration for setting up IPsec on the Junos Enforcer.

To use IPsec with the ScreenOS Enforcer, you can configure basic IPsec security policies on the PPS device and then push the policies to the firewall. On the Junos Enforcer, this functionality does not exist. For the Junos Enforcer, you use the CLI to configure settings on the Junos Enforcer that are negotiated with Pulse Desktop Client.

Before you begin, ensure that security zones and interfaces are set up, and that IPsec routing policies and optional IP address pool policies have been configured on the PPS device.

Junos Enforcer devices support up to four proposals for Phase 2 negotiations, allowing you to define the range of tunnel parameter restrictions that endpoints will accept.

For a complete description of IPsec on the Junos Enforcer see the Junos OS Initial Configuration Guide for Security Devices.

To configure IPsec on the Junos Enforcer:

1. Configure the PPS device as a RADIUS server for the Junos Enforcer RADIUS client.
In this example, you create an instance of the PPS device hostname dev1086 as the RADIUS server. The IP address is 192.168.100.5. You need to provide a shared secret, which is used to permit the PPS device to accept RADIUS packets from the device.

Enter the following commands:

```
user@host# set access profile dev1086 authentication-order radius
user@host# set access profile dev1086 radius-server 192.168.100.5 secret some-shared-secret
```

2. If you are configuring PPS devices in an active/active cluster, you must configure all IP addresses for individual PPS devices.

The shared secret must be the same, as in the following example:

```
user@host# set access profile dev1086 authentication-order radius
user@host# set access profile dev1086 radius-server 192.168.100.5 secret some-shared-secret
user@host# set access profile dev1086 radius-server 192.168.100.6 secret some-shared-secret
```

If you are configuring an active/passive cluster, configure the Pulse Policy Secure device's VIP as the RADIUS server IP address.

3. Configure IKE and IPsec security parameters. The IPsec with Junos Enforcer is supported only with aggressive mode and Encapsulation Security Payload (ESP).

You define the security proposals, including all of the IKE parameters that determine the strength of the IPsec tunnels.

- Set up a phase 1 IKE proposal named prop1. Enter the following series of commands.

```
user@host# set security ike proposal prop1 authentication-method pre-shared-keys
The client supports only the preshared key authentication method.

user@host# set security ike proposal prop1 dh-group group2
The client supports group1, group2, and group5.

user@host# set security ike proposal prop1 authentication-algorithm sha1
The client supports md5 and sha1.

user@host# set security ike proposal prop1 encryption-algorithm 3des-cbc
The client supports des-cbc, 3des-dbc, aes-128-cbc, aes-192-cbc, and aes-256-cbc
```

- Set up an IKE policy named pol1 with aggressive mode, the pre-shared key and the proposal configured above.

```
user@host# set security ike policy pol1 mode aggressive
The client supports only aggressive mode.

user@host# set security ike policy pol1 proposals prop1
user@host# set security ike policy pol1 pre-shared-key ascii-text some-preshared-key
```

Only ascii-text is supported. Do not use a hexadecimal pre-shared key.

- Configure an IKE gateway named gateway1 with 5000 connection-limits, host.company.com identity, group IKE ID, IKE policy pol1 configured above, and XAUTH dev1086 as configured above.

```
user@host# set security ike gateway gateway1 ike-policy pol1
user@host# set security ike gateway gateway1 dynamic hostname host.company.com
user@host# set security ike gateway gateway1 dynamic ike-user-type group-ike-id
user@host# set security ike gateway gateway1 dynamic connections-limit (maximum 5,000)
user@host# set security ike gateway gateway1 external-interface ge-0/0/2.0
user@host# set security ike gateway gateway1 xauth access-profile dev1086
```

- PPS and the client support only group-ike-id.
- Configure an IPsec phase 2 proposal named prop1 with ESP protocol, HMAC-SHA1-96 authentication algorithm, and 3DES-CBC encryption algorithm.

```
user@host# set security ipsec proposal prop1 protocol esp
The client supports only esp.

user@host# set security ipsec proposal prop1 authentication-algorithm hmac-sha1-96
The client supports hmac-md5-96, and hmac-sha1-96.

user@host# set security ipsec proposal prop1 encryption-algorithm 3des-cbc
The client supports des-cbc, 3des-cbc, aes-128-cbc, aes-192-cbc, aes-256-cbc, and no encryption-
algorithm.
```

- Configure an IPsec phase 2 policy name pol1 with proposal prop1 as configured above.

```
user@host# set security ipsec policy pol1 proposals prop1
In this section, you configure an IPsec VPN named vpn1 with IKE gateway gateway1 as configured in
the above example, and IPsec policy pol1 as configured above.

user@host# set security ipsec vpn vpn1 ike gateway gateway1
user@host# set security ipsec vpn vpn1 ike ipsec-policy pol1
user@host# set security ipsec vpn vpn1 establish-tunnels immediately
user@host# set security ike gateway gateway1 external-interface ge-0/0/0.0
```



NOTE: The external interface refers to the interface that faces the client.

```
user@host# set security ike gateway gateway1 xauth access-profile name
```

4. Create the security policy.

Enable the VPN vpn1 configured above and add Pulse Policy Security enforcement in a security policy named pol1, from the zone named untrust to the zone named trust.

```
user@host# set security policies from-zone untrust to-zone trust policy pol1 match source-address any
user@host# set security policies from-zone untrust to-zone trust policy pol1 match destination-address any
user@host# set security policies from-zone untrust to-zone trust policy pol1 match application any
user@host# set security policies from-zone untrust to-zone trust policy pol1 then permit tunnel ipsec-vpn vpn1
user@host# set security policies from-zone untrust to-zone trust policy pol1 then permit application-services uac-policy
```

Enforcement using EX Series Ethernet Switches

This chapter provides an overview of enforcement using Juniper EX switch. It includes the following information:

- [Overview](#)
- [Configuring EX switch with PPS](#)
- [Configuring EX switch as an Infranet Enforcer](#)

Enforcement using Juniper EX switch

Overview

You can use the EX Series switch as an Infranet Enforcer with PPS. With this solution, PPS is the policy decision point, while the switch is the policy enforcement point. In prior releases, Layer 3 firewalls were the only option for policy enforcement points. This scenario allows enforcement with 802.1X deployments.

To employ the switch as an Infranet Enforcer, you configure a connection between the EX Series switch and the PPS, establish communication, set up 802.1X, configure PPS parameters for admission to the network, and configure resource access policies.

Upon successful configuration, the following occurs:

- The EX Series switch sends a connection request to PPS.
- The EX Series switch shares its RADIUS configuration with PPS from the CLI configuration on the switch.
- PPS creates the RADIUS client for the EX Series switch using the information provided.
- When a user successfully authenticates, PPS provides an auth table entry to the connected EX Series switch. The auth table includes the MAC address of the user, the assigned roles and the port index.
- PPS must receive the attributes Calling Station ID and Network Access Server (NAS) Port from the switch to successfully make the connection.

Configuring EX switch with PPS

The EX Series switch serves as a policy enforcement point. PPS sends auth table entries and resource access policies when an endpoint successfully completes 802.1X authentication or MAC authentication (unmanaged devices). Access for any endpoint is governed by the resource access policies that you configure on PPS. Because resource access policies are employed, firewall filters are not required for the EX Series switch configuration.

This section covers the following topics:

- [Configuring EX switch as an Infranet Enforcer](#)
- [Configuring an Authentication Table](#)
- [Configuring Resource Access Policy](#)


Configuring EX switch as an Infranet Enforcer

The EX-series switches will permit or deny network access based on policies developed and distributed by PPS, including those policies based on user authentication status, endpoint posture compliance, user/device role and other policies. The EX-series switches provide standards-based 802.1X port-level access control.

To configure a Juniper EX switch as an Infranet Enforcer in PPS:

1. Select **Endpoint Policy > Infranet Enforcer**.

Figure 144: Infranet Enforcer

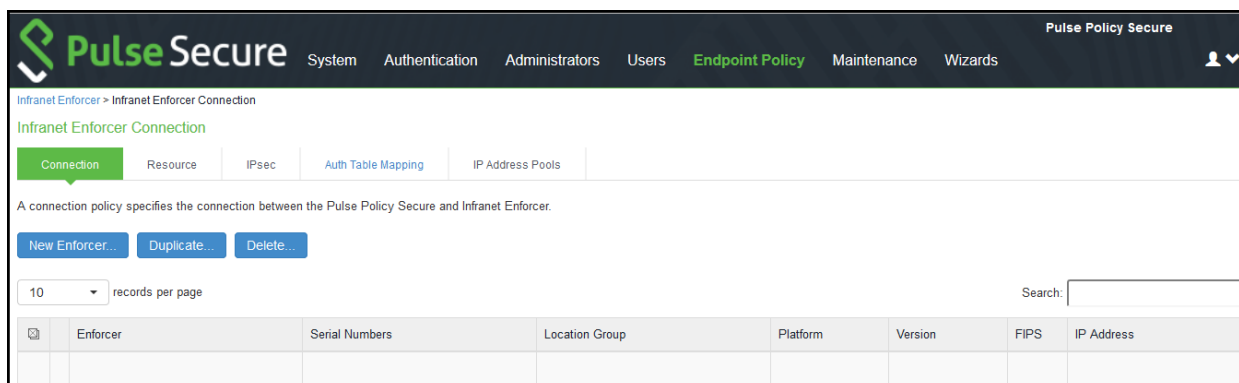

2. Click **New Infranet Enforcer** and select **Junos EX** in the **Platform** drop down.

Figure145: Juniper EX Enforcer

Pulse Secure

Pulse Policy Secure

System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Infranet Enforcer > Connection > New Infranet Enforcer

New Infranet Enforcer

▼ Infranet Enforcer

Platform: JUNOS EX Platform of this Infranet Enforcer.

* Name: Label to reference this Infranet Enforcer.

* Password: Connection password.

* Serial number(s): One per line.

* Location Group: - No 802.1X - To manage groups, see the [Location Group](#)

Save Changes

* indicates required field

3. Enter the name of the EX Series switch in the Name box.
4. Enter the password for the EX Series switch. This password is a shared secret that administrators of both the switch and PPS can use for connectivity between the two devices.
5. Enter the serial number of the EX Series switch.
6. Select the location group.
7. Click **Save Changes**.

On the EX Series switch, you use the CLI to configure the connection with PPS.

Configuring an Authentication Table

The EX Series switch receives and maintains auth tables for valid user sessions with PPS. An auth tables consist of a unique identification number, the MAC address of the endpoint that initiated the session, and a list of roles that the user has been assigned.

Auth tables are sent from PPS to the EX Series switch when a user is authenticated on the network.



NOTE: Always Provision and Never Provision Auth table mapping policies are supported for the EX Series switch.

For complete configuration information, see [Configuring Auth Table Mapping Policies](#).

Configuring Resource Access Policy

Using resource access policies with an EX Series switch you can configure authorization for protected resources. If you have configured the EX Series switch as an Infranet Enforcer, select the switch in the resource access policy.

A resource is a single entry in the resource field of the resource access policy. This could be a MAC address, or it could be a combination of IP address ranges, ports, and protocol. A filter term is the access/deny detail for a single resource. The

number of terms you can configure per firewall filter will vary, depending on which EX Series switch you are configuring. The below table shows the number of terms allowed per firewall filter for different EX Series switches.

Table 14: EX Series Switches and Filter Term Limitations

| EX Switch | Number of Terms Allowed |
|--------------------------|-------------------------|
| EX2200 switch | 512 |
| EX3200 and 4200 switches | 7,042 |
| EX4500 switch | 1,536 |
| EX8200 switch | 32,768 |
| EX3300 switch | 1,436 |
| EX6200 switch | 1,400 |

If you create resource access policies with the number of resources greater than the maximum number of filter terms allowed, the filter is not installed, and 802.1X authentication fails.

For complete information on configuring resource access policy, see [Configuring Resource Access Policy](#).

IF-MAP Federation

This chapter provides an overview of the IF-MAP. It includes the following information:

- [Overview](#)
- [IF-MAP Federation Use Cases](#)
- [IF-MAP Configuration](#)
- [Troubleshooting](#)
- [Appendix](#)

About IF-MAP

Overview

The federation allows users to connect to a PPS or PCS appliance and then access resources that are protected by the firewall connected to different PPS without re-authentication. For example, users in large campus sites and in branch offices connect to the corporate network from campus, branch, or private home offices and access the resources distributed across locations. The federation eliminates redundant log ins and host checks and provides seamless access to protected resources. The federation uses IF-MAP protocol to share information about user sessions between PCS and PPS over the distributed network.

For more information about IF-MAP, see http://www.trustedcomputinggroup.org/wp-content/uploads/TNC_IFMAP_v1_1_r5.pdf

IF-MAP Federation Use Cases

This section describes the various IF-MAP use cases. Using IF-MAP federation the users can seamlessly access with a single log in to corporate resources protected by the firewall. It provisions seamless access between the user sessions of PCS and PPS.

This section describes the following uses cases:

- [Access Control in the Federated Enterprise](#)
- [Session Migration across PCS and PPS using IF-MAP](#)

Access Control in the Federated Enterprise


In a federated enterprise, a user can log in to a PPS or PCS device for authentication or remote access and access the resource protected by the firewall connected to another PPS. The session information is shared across PPS or PCS device using IF-MAP protocol through IF-MAP server.

The federation requires dynamic auth table provisioning on the SRX firewall and allows access to the protected resource based on the resource access policies that are configured on PPS.

The access solution serves the following objectives:

- Ensures that the employees can access the corporate network and can access resources and data in both local and remote locations without having to specify their authentication credentials at each security policy enforcement point.
- Enhances security by enforcing role or policy based access control.

Figure146: Access Control in the federated enterprise using IF-MAP

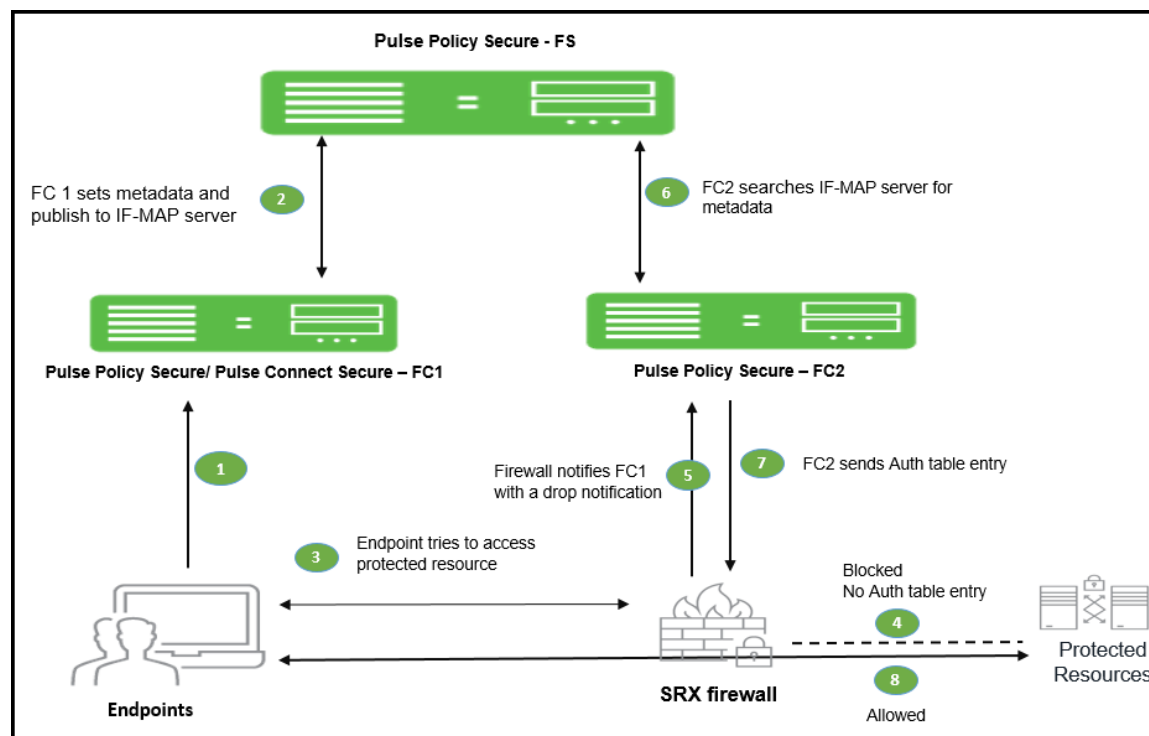

The session federation work flow is described below:

1. The user connects to network and authenticates with PPS/PCS (FC1).
2. Authentication information such as IP address, MAC address, username, and roles are published to the IF-MAP server.
3. The user tries to access protected resource from the branch office.
4. The firewall blocks the access.
5. The firewall requests PPS (FC2) for session details such as user roles. PPS device subscribes to session information and other endpoint data based on the originating IP address.
6. The federation server sends the search result based on the search request from PPS (FC2).
7. PPS (FC2) send roles and policy information to the firewall.
8. The firewall allows or denies traffic based on the resource access policies received from FC2.


Session Migration across PCS and PPS using IF-MAP

IF-MAP federation allows seamless access to the users connected through remote access and on premise network without re-authenticating. For example, a user can connect from home through PCS and then arrive at work and connect through PPS without logging in again. The session migration also enables users to access different resources within the network that are protected by Pulse Secure devices without repeatedly providing credentials.

When a session is migrated, realm role-mapping rules determine user access capabilities. You can import user attributes when a session is migrated, or you can configure a dedicated directory server to look up attributes for migrated user sessions. To ensure that session migration retains user sessions, configure a limited access remediation role that does not require a Host Checker policy. This role is necessary because the Host Checker timeout can be exceeded if an endpoint is in hibernation or asleep. With the new remediation role, the user's session is maintained. The session migration works only with same authentication group.

If additional Host Checker policies are configured on a role or realm to which a migrated session applies, the policies are performed before allowing the user to access the role or realm. Administrators of different Pulse servers should ensure that Host Checker policies are appropriately configured for endpoint compatibility.

Figure 147: Session Migration across PCS and PPS

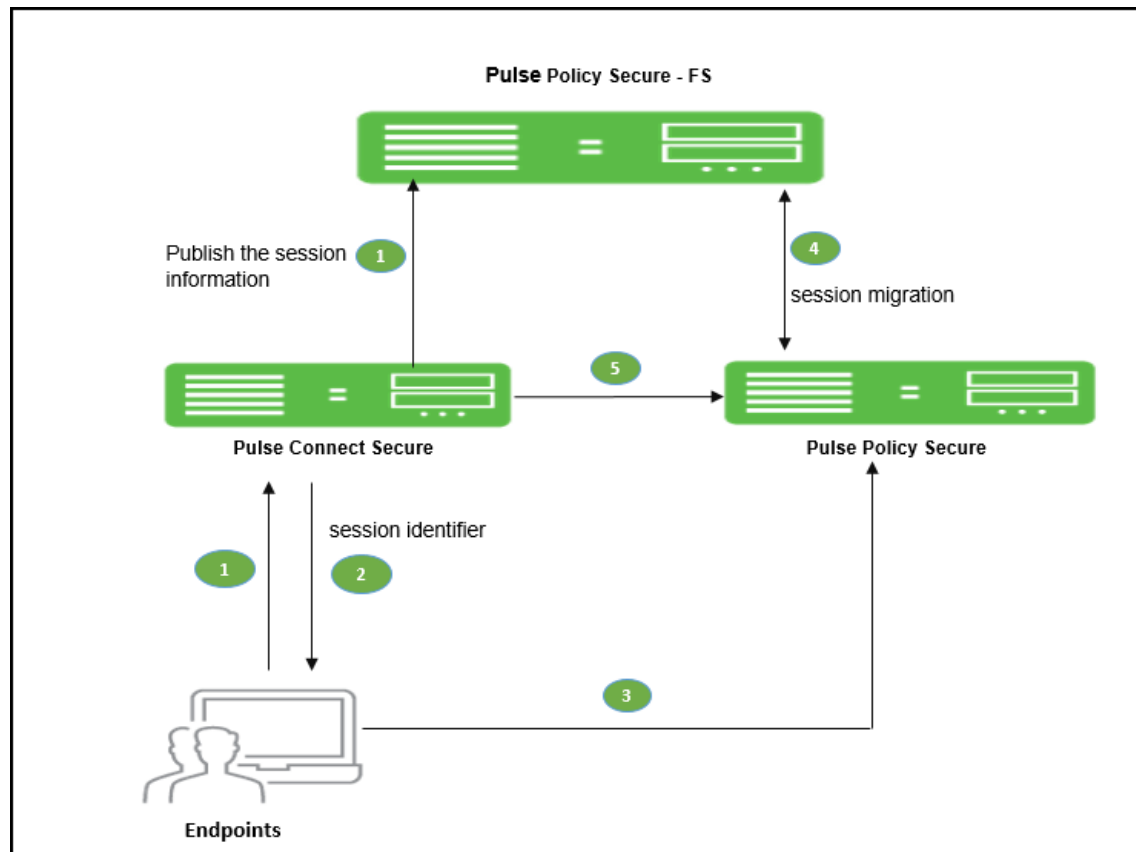

The session migration workflow is as follows:

1. User connects to PCS and the information is published to the federation server, which includes session identifier.
2. The session identifier information is also communicated to Pulse client.
3. When user connect to PPS in the same authentication group after arriving at office network using Pulse client. The Pulse client sends session identifier to PPS.

4. PPS appliance uses the session identifier to look up the session information in the IF-MAP server and request to migrate the session from PCS to PPS.
5. PPS create a local session for the endpoint.

To permit session migration for users with the Pulse client, perform the following tasks:

1. Configure location awareness rules within a client connection set to specify locations included in the scope of session migration for users. For example, configure location awareness rules for a corporate PPS server connection and a PCS server connection.
2. Configure an IF-MAP federated network, with the applicable Pulse servers as IF-MAP Federation clients of the same IF-MAP Federation server.
3. Ensure that user entries are configured on the authentication server for each gateway.
4. Ensure that user roles are configured for all users on each gateway.
5. Define a remediation role with no Host Checker policies to allow user sessions to be maintained when an endpoint is sleeping or hibernating.
6. Configure role-mapping rules that permit users to access resources on each gateway.
7. Enable and configure session migration from the User Realms page of the admin console.
8. Distribute the Pulse client to users.

IF-MAP Configuration

The IF-MAP configuration involves configuring the PPS device as an IF-MAP client or an IF-MAP server. You can configure the PCS device as an IF-MAP client for an IF-MAP server. A device configured as an IF-MAP server is automatically a client of itself. An IF-MAP server can function as a fully functional PPS device and any endpoint sessions with an IP address created on an IF-MAP server are automatically published to that IF-MAP server.

This section covers the following information:

- [Configuring IF-MAP Server](#)
- [Configuring IF-MAP Client](#)
- [Configuring IF MAP Policies](#)
-

Configuring IF-MAP Server

An IF-MAP server is a repository for IF-MAP clients, which is used for publishing information regarding an activity on the network. To deploy PPS as an IF-MAP server, you must configure PPS as an IF-MAP server and then add PPS/PCS as IF-MAP clients. A PPS device can be deployed as a dedicated IF-MAP server for better scale and performance. If you opt for this configuration it consumes most of the virtual memory available on appliance, which results in performance degradation of other PPS services.



NOTE: Currently we support only the Active/Passive cluster mode for IF-MAP server.

To configure IF-MAP server on the PPS:

1. Select System > IF-MAP Federation > Overview.

Figure 148: IF-MAP Federation Overview

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

IF-MAP > Overview

Overview

Overview This Server This Client

An IF-MAP federation simplifies the work of end users by letting network devices share information about user sessions. For example, if a user connects to the network using Connect Secure, they can automatically gain access (if authorized) to protected resources that are behind Infranet Enforcer firewalls, without having to log in again.

Warning: Please reduce total log file sizes to 500 MB, under [Log/Monitoring](#) and [Troubleshooting](#), to ensure enough space for the IF-MAP database.

Choose whether this Pulse Policy Secure runs an IF-MAP Server, an IF-MAP client, or no IF-MAP

☒ IF-MAP Server An IF-MAP Server is automatically an IF-MAP client of itself

☐ Enhance IF-MAP Server storage Note: If PPS is used as a dedicated IF-MAP server, this option should be selected for better scale

☐ IF-MAP Client

☐ No IF-MAP

Save Changes Cancel

2. Select **IF-MAP Server** option
(Optional) Select **Enhance IF-MAP server storage** for using the appliance as a dedicated federation server for high scalability.

3. Click Save Changes.

Adding IF-MAP Clients

The IF-MAP client must be added for subscribing the session information on an IF-MAP server. You configure an entry for each IF-MAP client on the IF-MAP server.

To add IF-MAP client:

1. Select System > IF-MAP Federation > This Server > Clients.
2. Click New IF-MAP Client.

Figure 149: IF-MAP Client

3. Under IF-MAP Client,
 - a. Enter name and optionally a description for client.
 - b. Enter one or more IP addresses of the client.



- If the client is connected to multiple data links on the same network or different network, then list all of its physical network interfaces.
 - If the client is a PPS cluster, then list the internal and external network interfaces of all nodes. You must enter all of the IP addresses for all of the interfaces because equipment failures may cause traffic between the IF-MAP client and the IF-MAP server to be re-routed through a different network interface. Listing all of the IP addresses maximizes the probability that IF-MAP Federation still works in the event of a failure.
4. Under Authentication, select the Client Authentication Method: Basic or Certificate.
 - a. If you select Basic, enter a Username and Password. The same information should be added to the IF-MAP server.
 - b. If you select **Certificate**, choose which Certificate Authority (CA) to use to verify the certificate for this client. Optionally, specify certificate attributes or restrictions to require values for certain client certificate attributes
 5. Click Save Changes.

Configuring IF-MAP Client

The IF-MAP client publishes the basic session information, which includes IP address, usernames, and roles. The IF-MAP server stores the information as metadata. Other IF-MAP clients in the network can poll the server for metadata information when the endpoint tries to access the protected resource. A PCS or PPS device can be deployed as an IF-MAP client. The PPS device connected to firewall is always added as an IF-MAP client. You must import the trusted root CA certificate of the federation sever device certificate issuing cert store in to IF-MAP client for secure connection. You can trust the certificate issued by CA of server's device certificate by importing the root certificate of the issuing authority.

To configure the IF-MAP client:

1. Select System > IF-MAP Federation > Overview.
2. Select IF-MAP Client.

Figure 150: IF-MAP Federation

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

IF-MAP > Overview

Overview This Client

An IF-MAP federation simplifies the work of end users by letting network devices share information about user sessions. For example, if a user connects to the network using Connect Secure, they can automatically gain access (if authorized) to protected resources that are behind Infranet Enforcer firewalls, without having to log in again.

Choose whether this Pulse Policy Secure runs an IF-MAP Server, an IF-MAP client, or no IF-MAP

☐ IF-MAP Server An IF-MAP Server is automatically an IF-MAP client of itself

☒ IF-MAP Client

☐ No IF-MAP

Server URL

* Server URL: Example: <https://ic/dana-ws/soapidsfmap>

Authentication

☒ Basic

* Username:

* Password:

☐ Certificate

Save Changes Cancel

3. Enter IF-MAP server IP address or complete IF-MAP server URL. For IF-MAP server in cluster mode use the virtual IP address (VIP).
4. Select the Client Authentication Method: Basic or Certificate.
 - a. Select Basic authentication, and enter the username and password. This is the same as the information that you entered on the IF-MAP server.
 - b. Select Certificate, select the Device Certificate to use.
 - i. Ensure that the certificate of the CA that signed the IF-MAP server certificate is added from the System > Configuration > Certificates > Trusted Server CA page.
 - ii. Ensure that the hostname in the IF-MAP URL on the client machine matches the hostname of the server certificate on the IF-MAP server and that the CA that signed the server certificate is configured as trusted server CA on the IF-MAP client.
5. Click Save Changes.



NOTE: The status light on the server's IF-MAP Federation > This Server > Clients page is green when the client and server are successfully connected.

Configuring IF MAP Policies

The IF-MAP policies allows you to perform the data synchronization operations between the IF-MAP server and IF-MAP clients. This section covers the following information:

- Session Export Policies
- Session Import Policies

Session Export Policies

The session export policy specifies how to transform Pulse Secure client session data into IF-MAP standard data. It allows IF-MAP clients to translate outgoing session information into IF-MAP data and incoming IF-MAP data into session information. These translations enable sessions to be shared between PCS and PPS even if the devices sharing sessions have different role configurations.

To configure a session export policy:

1. Select System > IF-MAP Federation > Session-Export Policies.
2. Click New to create a new policy.

Figure 151: IF-MAP Session Export Policies

The screenshot displays the Pulse Secure web interface for configuring a Session Export policy. The top navigation bar includes the Pulse Secure logo and a user profile icon. Below the navigation bar, the 'System' tab is selected, and the 'Session Export' policy type is chosen. The form includes fields for 'Policy Name' and 'Policy Description'. A section for 'Apply policy for these roles' features two lists: 'Available Roles' (containing Engg, Guest, Guest Admin, OnboardRole, remed, Remediation, and Users) and 'Selected Roles' (currently empty). Between these lists are 'Add ->' and 'Remove' buttons. The 'Policy Actions' section is expanded, showing the 'Set IF-MAP Capabilities' option selected. Below this, there are radio buttons for 'Copy matching roles', 'Copy ALL roles', and 'Set capabilities specified below'. A text box is provided for specifying capabilities. At the bottom, there is a checkbox for 'Stop processing policies when this policy matches.' and 'Save Changes' and 'Cancel' buttons.

3. Enter a policy name and, optionally, a description.

4. Select role and add if the policy needs to be applied to selected roles only, otherwise by default is to apply policy for all roles.
5. Under Policy Actions, select Set IF-MAP Capabilities and select the applicable option:
 - Copy Matching Roles—Copies all of the user roles that match the roles specified in the Roles section of this policy into the IF-MAP capabilities data.
 - Copy all Roles—Copies all of the roles from the user session to the IF-MAP capabilities data.
 - Set capabilities specified below—Enter capabilities, one per line.

To configure advanced options:

1. Select the View Advanced Actions link to display additional options.
2. Select Set IF-MAP Identity and configure identity settings:
 - Identity Type —Select an element used to specify identity. Options include aik-name, distinguished-name, dns-name, email-address, kerberos-principal, trusted-platform-model, username, sip-uri, tel-uri, and other. For example, for a regular employee named Bob Smith you can select username as the Identity Type and enter the Identity as username bsmith.
 - Identity—Identity is normally specified as <NAME>, which assigns the user's log in name. Any combination of literal text and context variables may be specified. If you select other for Identity Type, enter a unique Identity Type in the text box.
 - Administrative Domain—This optional information is applied to identity and MAC address data. One example for using this field is in a large network environment with several domains in which a username could be duplicated. By supplying the domain, you ensure that the correct user is identified.
 - Other—This field is provided for advanced use cases when none of the predefined options are applicable.
3. Select Set IF-MAP Roles and select the applicable option:
 - Copy Matching Roles—Copies all of the user roles that match the roles specified in the Roles section of this policy into the IF-MAP capabilities data.
 - Copy all Roles—Copies all of the roles from the user session to the IF-MAP capabilities data.
 - Set capabilities specified below—Enter capabilities, one per line.
4. Select Set IF-MAP Device Attributes. Device attributes represent a passed Host Checker policy on PPS or PCS. Select the applicable option:
 - Copy Host Checker policy names—The name of each Host Checker policy that passed for the session is copied to a device attribute.
 - Set Device Attributes—Enter device attributes, one per line.
6. Select Stop processing policies when this policy matches to specify that when this policy is matched, no more Session-Export policies should be applied.
7. Select Save Changes or continue to configure advanced actions.

Session Import Policies

The session import policies specify how the device derives a username and a set of roles based on IF-MAP data that it receives from the IF-MAP server. The import policies are similar to role mapping rules on a realm. You must be precise when you configure Import policies, otherwise roles cannot be assigned properly.

To configure session-import policies:

1. Select System > IF-MAP > Session-Import Policies.
2. Click New to create a new policy.

Figure 152: IF-MAP Session Import Policies

Pulse Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

IF-MAP > This Client > IF-MAP session import policies > Session-Import Policy

Session-Import Policy

Policy Type: Session Import

Policy Name:

Policy Description:

Conditions when Policy Applies

☐ Match IF-MAP Capabilities Makes this policy apply only when a federation-wide session has particular capabilities. IF-MAP capabilities are similar to Pulse Policy Secure roles

[View Advanced Conditions](#)

Assign these roles

☐ Use these roles

☒ Copy IF-MAP Capabilities

☒ All capabilities

☐ Specified capabilities

☐ All capabilities other than those specified below

[View Advanced Assignment Option](#)

☐ Stop processing policies when this policy matches.

[Save Changes](#) [Cancel](#)

3. Type a policy name and, optionally, a description.
4. Under Conditions when Policy Applies, select Match IF-MAP Capabilities.



NOTE: You can use the wildcard characters * and % to match IF-MAP capabilities.

5. Enter IF-MAP capabilities exactly as they appear in the corresponding session-export policy. For example, if you assigned the value “engineering” to an IF-MAP capability in the session-export policy, enter “engineering” here.
6. Under “Assign these roles,” select Use these roles and select the roles for which the policy applies.
7. Alternatively, select Copy IF-MAP Capabilities. If you select this check box, IF-MAP session capabilities on the IF-MAP server are converted to PPS roles with the same name. You can use this option if PPS roles and IF-MAP capabilities have the same name. This option is typically not required for PPS deployments.
8. Select Stop processing policies when this policy matches to specify that when this policy is matched, no more Session-Export policies should be applied.

9. Select Save Changes, or continue to configure Advanced Conditions.

You can configure advanced options that would further require that Identity, Role, or Device Attributes in the IF-MAP data for a session must match before applying the role matching. The advanced options are not required for most PPS IF-MAP deployments.

To configure advanced options:

10. Select the View Advanced Conditions link to additional options.

11. Select one or more of the following check boxes to specify which IF-MAP criteria to use for assigning roles:



NOTE: You can use the wildcard characters * and % to match IF-MAP capabilities.

- If you select Match IF-MAP Identity, complete the following settings:
 - Identity Type—Select an element used to specify identity. Options include aik-name, distinguished-name, dns-name, email-address, kerberos-principal, trusted-platform-model, username, sip-uri, tel-uri, and other. For example, for a regular employee named Bob Smith you can select username as the Identity Type and enter the Identity as username bsmith.
 - Identity—Identity is normally specified as <NAME>, which assigns the user's log in name. Any combination of literal text and context variables may be specified. If you select other for Identity Type, enter a unique Identity Type in the text box.
 - Administrative Domain—This optional information is applied to identity and MAC address data. One example for using this field is in a large network environment with several domains in which a username could be duplicated. By supplying the domain, you ensure that the correct user is identified.
 - Other—This field is provided for advanced use cases when none of the predefined options are applicable.
- Match IF-MAP Roles—Enter individual roles in the provided text box.
- Match IF-MAP Device Attributes—Enter individual device attributes in the provided text box.

12. Click Save Changes.

Active Federated Session Details

The federated session details of all the active users can be viewed on both the IF-MAP client and the IF-MAP server. This section covers the following information:

- [Imported Session Details](#)
- [Exported Session Details](#)
- [Federated Session Details](#)


Imported Session Details

The session details from PPS, which are provisioned to SRX firewall can be viewed on an IF-MAP client.

To view, remove, or remove all the current sessions on an IF-MAP client:

1. Select **System > IF-MAP Federation > This Client**.
2. Select **Imported Sessions**.

Figure 153: Imported Sessions

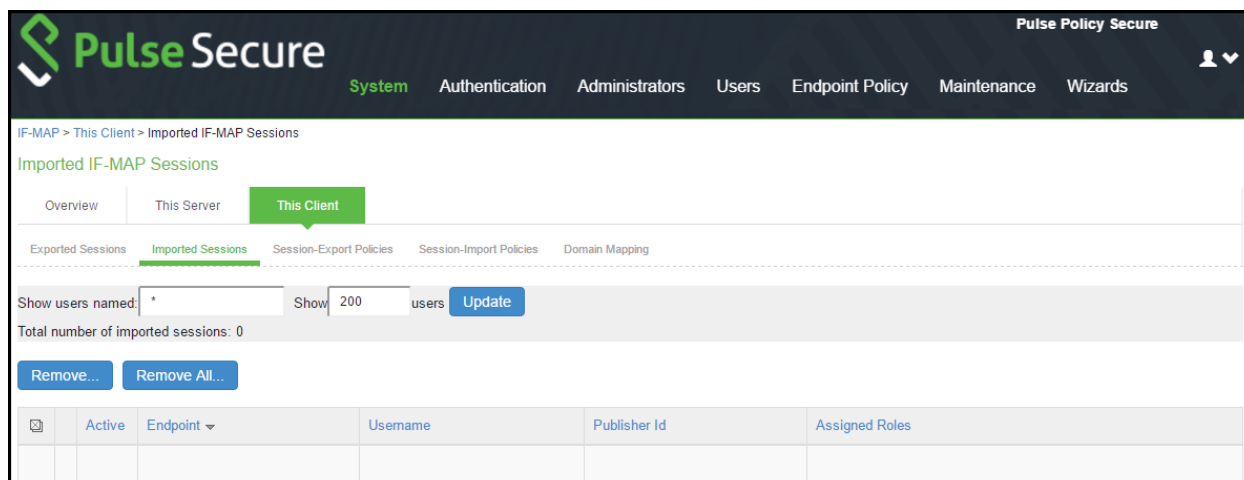

3. Select Remove or Remove All to remove the imported federated session(s) from the device and the associated authentication table entries.


Exported Session Details

On an IF-MAP client, you can view all sessions from other PPS appliances that are currently published to firewall.

To view the exported sessions:

1. Select **System > IF-MAP Federation > This Client**.
2. Select **Exported Sessions**.

Figure 154: Exported Sessions

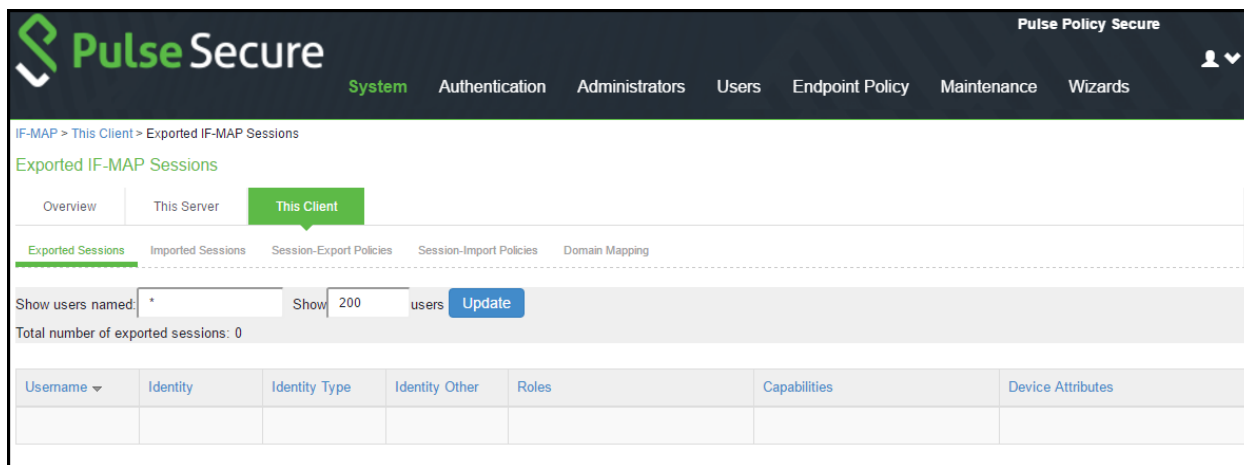


Federated Session Details

The federated sessions published to the server can be viewed on an IF-MAP server. The IF-MAP server purges sessions about 3.5 minutes after the client disconnects. The exceptions are if the server is currently involved in a purge or immediately after the server starts. It takes several minutes to scan the database before a purge can begin.

To view details about users and their sessions, and perform detailed searches:

1. Select **System > IF-MAP Federation > This Server > Federation-Wide Sessions**.

Figure 155: IF-MAP Fed Wise Sessions

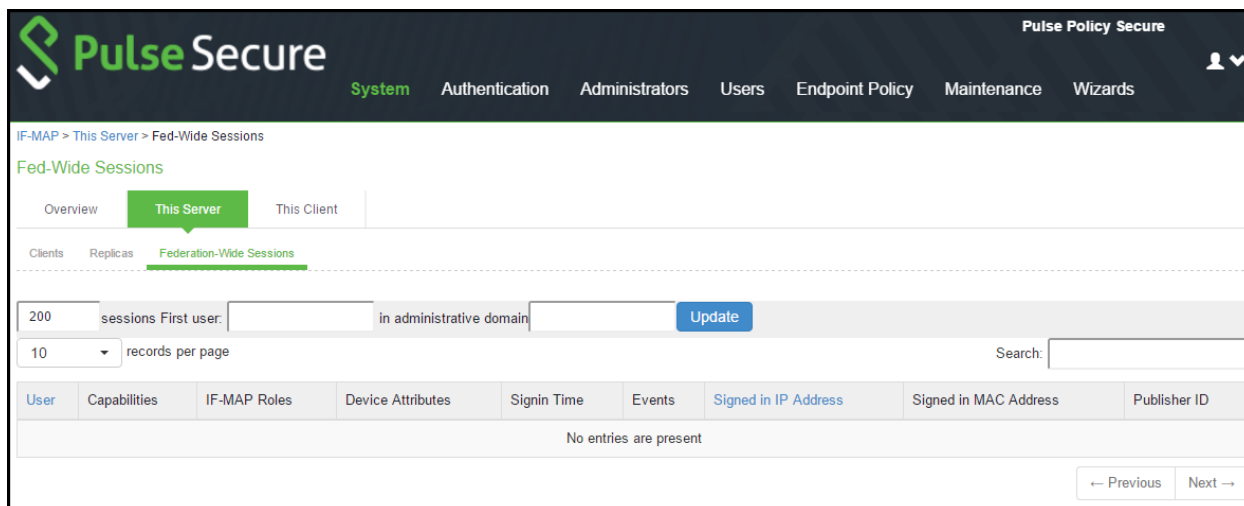

2. Enter users and administrative domain and click Update to search for specific session information.
3. Sort users on the page by selecting User or Signed in IP Address.

NOTE: The maximum number of session entries displayed in the Federation-Wide Sessions table or returned by the query to the table is 5,000 entries.

TIP: You can also view IF-MAP session-export details by selecting the IF-MAP check box at Troubleshooting > User Sessions > Policy Tracing in the admin console.

Troubleshooting

The following diagnostic tools on PPS can assist you in troubleshooting the federated network:

- IF-MAP Client User Messages—On the IF-MAP client, logs information that is published to and removed from the IF-MAP server. Enable IF-MAP Client User Messages by selecting Log/Monitoring > User Access > Settings on the PPS IF-MAP client.
- IF-MAP Server Trace—On the IF-MAP server, logs the XML for all IF-MAP requests and responses. Enable the IF-MAP Server Trace by selecting Log/Monitoring > Events > Settings on the IF-MAP server. IF-MAP Server Trace should only be enabled for troubleshooting purposes, because running this diagnostic incurs a large performance impact.
- Debuglog — Select **Troubleshooting > Monitoring > Debug Log**, use event code dsfederate for debugging logs.



NOTE:

- The admin logs help to debug the configuration issues. Ensure that the server root CA certificate is imported to avoid configuration issues.
- If the IF-MAP server loses the connectivity due to hard failures and reconnects back within 3 minutes, then the access to protected resources is not affected. If the connection is lost for more than 3 minutes the access to protected resource is suspended till the users tries to access the resource.

Appendix


Clustering in a Federated Deployment

You can deploy clustered PPS appliance as IF-MAP servers or IF-MAP clients. You can configure IF-MAP servers in an Active Passive cluster. IF-MAP clients must be configured with the cluster's virtual IP (VIP) and must communicate with only the active node.

The session changes in federation cluster networks are propagated rapidly. The clients can access resources without experiencing delays, and there is no single point of failure. If any single device fails, the passive node recovers in seconds. You can configure IF-MAP client in Active/Active or Active/Passive cluster.

You can also use clustered PPS appliances as server replicas. The below figure illustrates a complex network of clustered and standalone PPS appliance.

Figure 156: IF-MAP Server Clustering

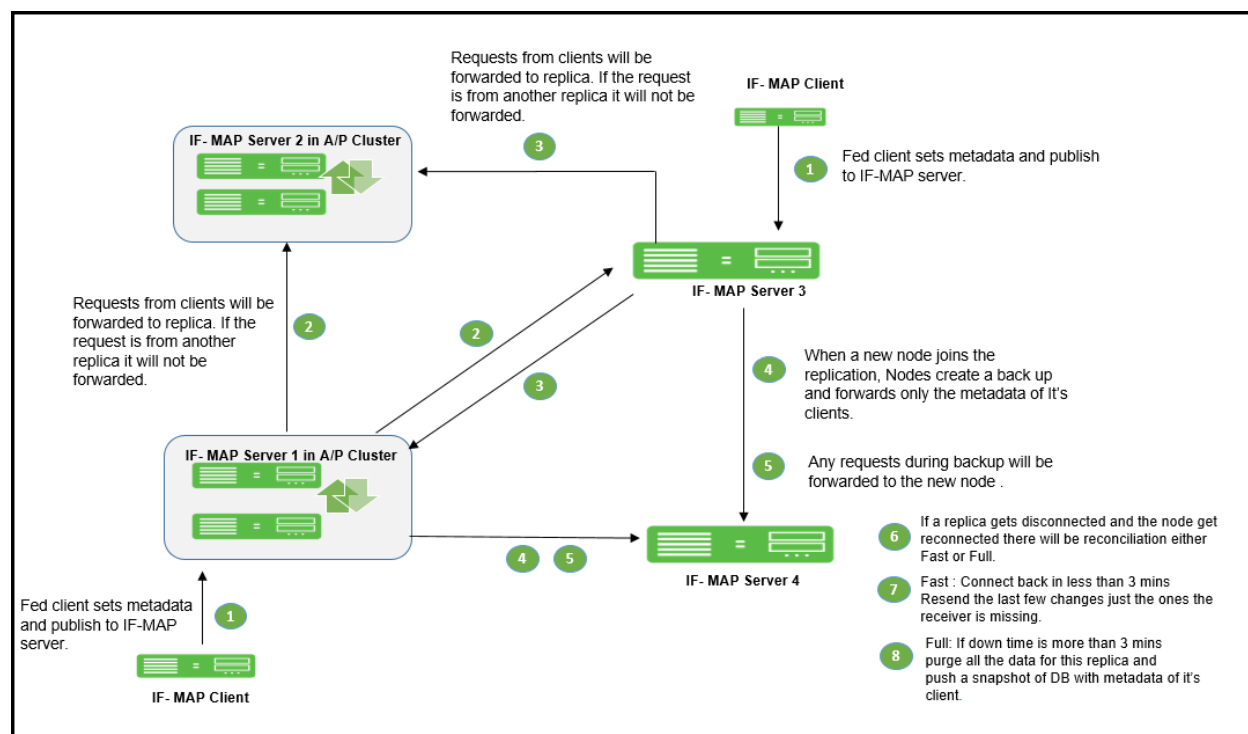


Replica IF-MAP Server

The IF-MAP server has the capability to replicate all of its IF-MAP data to other IF-MAP servers. For example, if you have a network in Boston and a network in London, you can run IF-MAP servers in both places and configure the IF-MAP servers in both locations to replicate data to one another. An endpoint that accesses PPS or PCS can access protected resources behind any of the PPS devices connected to local or replica IF-MAP server.

Each replica IF-MAP server communicates in a bidirectional way with all the connected IF-MAP server replicas. The data on each IF-MAP server is available on every server and enhances the system performance. A 3-way replica in mesh topology in which all the servers are connected to each other is supported.

The below figure depicts one possible deployment replica scenario.

Figure 157: IF-MAP Server Replica

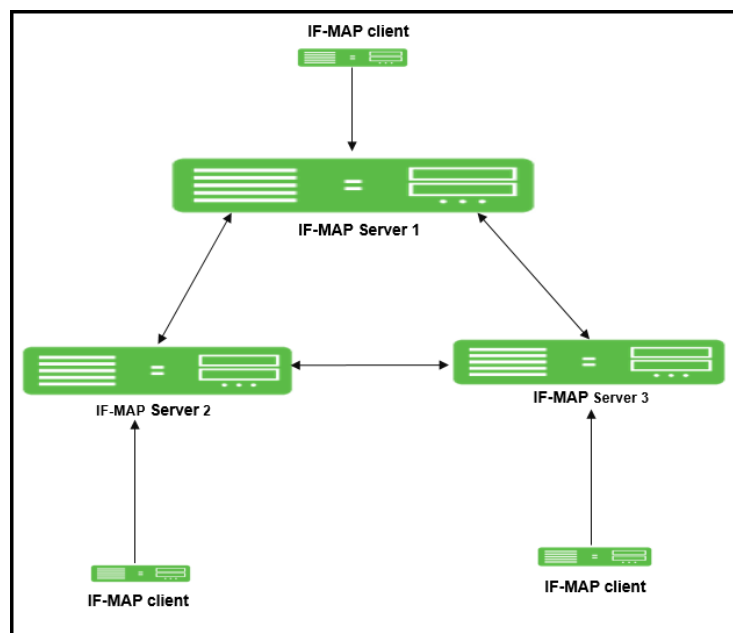

Bandwidth issues determine the effectiveness of the entire IF-MAP Federation's operation. A key to timeliness is that IF-MAP servers should generally be placed geographically close to IF-MAP clients to ensure the most efficient operation. Replicas in an IF-MAP federated network allow user session data to be shared over greater distance. For example, the user in Boston can connect with servers in London through the replicated IF-MAP server in London.

To configure IF-MAP server replicas to communicate:

1. Select System > IF-MAP Federation > This Server.
2. Click the Replicas tab and then select New IF-MAP replica to configure Replica settings.

Figure 158: IF-MAP Server Replica

Pulse Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

IF-MAP > This Server > Replicas > New IF-MAP Replicas

New IF-MAP Replicas

IF MAP replica

Name: Label to reference this IF-MAP replica

Description:

Hostname: Hostname for outbound connections to the replica. Must match the replica's device certificate

IP addresses: All possible source IP addresses for inbound connections from the replica

Authentication

☐ Basic

☐ Certificate

Save Changes

3. Type a Name for the replica IF-MAP server.
4. (Optional) Enter a Description for the replica or replica network.
5. For Hostname, enter the hostname that exactly matches the replica's device certificate. This is used when this IF-MAP server initiates a connection to the replica. Use the fully qualified domain name (FQDN) of the replica's internal or external interface should be used; for a cluster, use the FQDN of the internal or external VIP.
6. After IP addresses, provide one or more IP addresses from which the replica can initiate connections to this server. If the replica is standalone, for survivability list both the internal and external network interfaces. If the replica is a cluster, for survivability list the internal and external network interfaces of both cluster nodes.
7. Select the Authentication method: Basic or Certificate.
8. For Basic, enter a username and password.
9. For Certificate, select the CA that issued the IF-MAP replica's certificate. Enter restrictions, one per line. If any restrictions match, (for example CN=ic.example.com), the certificate is accepted.
10. Click Save Changes to create the connection for the replica.

Coordinated Threat Control in a Federated Environment


You can use Juniper Networks IDP Series Intrusion Detection and Prevention Appliance with Federation to detect attacks from within the network. Any endpoint that is on any connected PPS device or PCS can be monitored for suspicious activity. IF-MAP clients can work together to provide coordinated threat control across all attached enforcement points.

Endpoints that access PCS can be monitored by standalone IDP. Endpoints that access PPS device can be monitored by either standalone IDP, Integrated Security Gateway Intrusion Detection and Prevention ISG-IDP, or SRX Series Services Gateway IDP.

The IDP device reports attacks to the PPS or PCS to which it is connected. The PPS or PCS configured as an IF-MAP client reports the user's activity to the IF-MAP server using IF-MAP. The IF-MAP server notifies the authenticating PPS or PCS about the attack, and the authenticating device applies its IDP sensor policies. If new roles or restrictions are imposed on the endpoint based on policies configured on the device, the PPS or PCS publishes the new session information for the endpoint to the IF-MAP server.

When any other PPS or PCS polls the IF-MAP server, the newly published session information for the user determines the protected resources that the user can access. The below figure shows a deployment with IDP.

Figure 159: IF-MAP with IDP

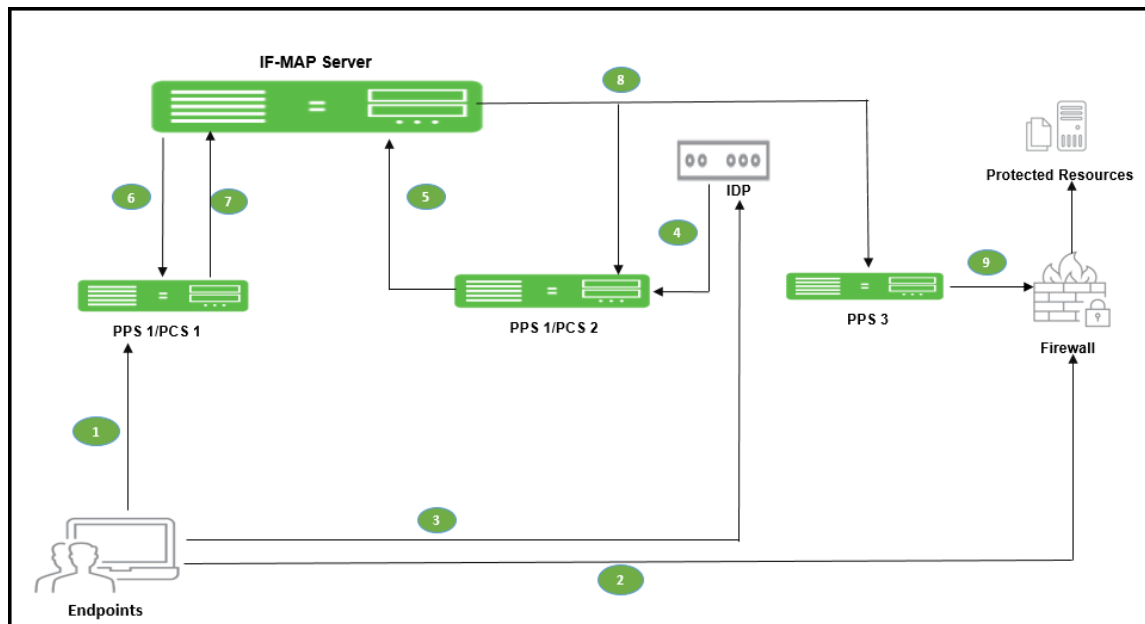

The following steps summarize the interaction with IDP in an IF-MAP federated network.

1. The endpoint successfully accesses PPS or PCS 1 and publishes session data to the IF-MAP server through Session-Export policies.
2. The endpoint attempts to access protected resources behind the SRX firewall, which is connected to PPS 3. PPS 3 uses IF-MAP to query the IF-MAP server for session information about the endpoint. After receiving session information, PPS 3 uses Session-Import policies to determine roles and then provisions an auth table entry on the SRX firewall. PPS 3 subscribes to updates about the endpoint's session data.
3. After the endpoint is successfully connected to resources behind the SRX firewall, IDP detects an attack originating from the endpoint.

4. IDP notifies PPS 2 of the attack. (If IDP is standalone IDP, PPS 2 could also be an PCS. If IDP is an SRX firewall with the ISG-IDP security module, PPS 2 cannot be a PCS, because the PCS does not communicate with the SRX firewall.)
5. PPS 2 updates the endpoint session data on the IF-MAP server with information about the attack.
6. The IF-MAP server notifies PPS or PCS 1 (the original authenticating device) about the attack. The authenticating PPS or PCS is responsible for consuming the attack.
7. The authenticating PPS or PCS applies its sensor policies to the endpoint and updates the endpoint's session according to actions specified in the sensor policies. For example, the endpoint must be assigned a more restrictive role. The PPS or PCS publishes the new session information to the IF-MAP server, and the new information replaces the old data.
8. The IF-MAP server notifies any PPS that subscribe to updates about the endpoint. This includes PPS 3, which is connected to the SRX firewall.
9. PPS 3 applies Session-Import policies to the new session data for the endpoint and pushes the resulting roles to the SRX firewall.
10. If the new set of roles denies access to the protected resources, access is denied.

Performance and Scalability

The IF-MAP server is supported on both hardware and virtual platforms.

The scalability of the IF-MAP server depends on:

- Type of platform- Hardware or VM image
- If the IF-MAP server is used as a dedicated IF-MAP server and the virtual memory available. You must configure PPS as dedicated only when you want it to be fully used as an IF-MAP server and not for other processes such as authentication.
- Number of roles and attributes
- For example, PSA 7000 has no impact of dedicated IF-MAP server setting option due to kernel memory limit of process. With single role for session, scale limit is up to 300K fed-wide sessions.
- PSA5000/SM360/PSA3000, the scale limit is 150K fed-wide session on dedicated IF-MAP appliance.
- For virtual platform (VM image), scalability is limited and based on the size of virtual memory.

The performance on IF-MAP server is described below:

- The IF-MAP server supports 24 export/import requests together per second.
- The time interval required to access the resource protected by the firewall after the user log in is 20 seconds.
- Latency and bandwidth between IF-MAP replicas affect the amount of time taken to replicate large amounts of data during heavy IF-MAP server utilization.
- The IF-MAP federation replica is supported over transatlantic link, however we might face issues due to WAN connection and latency between the devices.
- For clustering or replication, there is no impact on the scalability.

Provisioning PCS sessions to PAN/Check Point Firewall

This chapter provides an overview of provisioning PCS/PPS user sessions to PAN/Check Point firewall through IF-MAP server. It includes the following information:

- Overview
- Deployment of PPS/PCS using PAN/Check Point Next Generation Firewall
- IF-MAP Configuration

Overview


Pulse Policy Secure (PPS) integrates with Palo Alto Network's (PAN)/Check Point Next Generation Firewall to provision user's identity information (user name, roles and IP address) to PAN/Check Point firewall.

This section focuses on provisioning Pulse Connect Secure (PCS) /PPS user's identity information to PAN/Check Point firewall using IF-MAP server. Using this solution access control can be provided for PCS/PPS users for accessing resources protected by Firewall.

Deployment of PPS/PCS using PAN/Check Point Next Generation Firewall

In a federated enterprise, a user can log in to a PPS or PCS device (remote access) for authentication and access the resource protected by the PAN/Check Point Firewall. The session information is shared across PPS or PCS device using IF-MAP protocol through IF-MAP server.

The PAN/Check Point Firewall controls the PPS and PCS user's access to protected resources based on the policy settings. The IF-MAP server receives the session information of multiple PPS and PCS and provisions user identity information to Firewall. The federation requires provisioning of user's information on the PAN/Check Point Firewall and allows access to the protected resource based on the resource access policies that are configured on PPS.

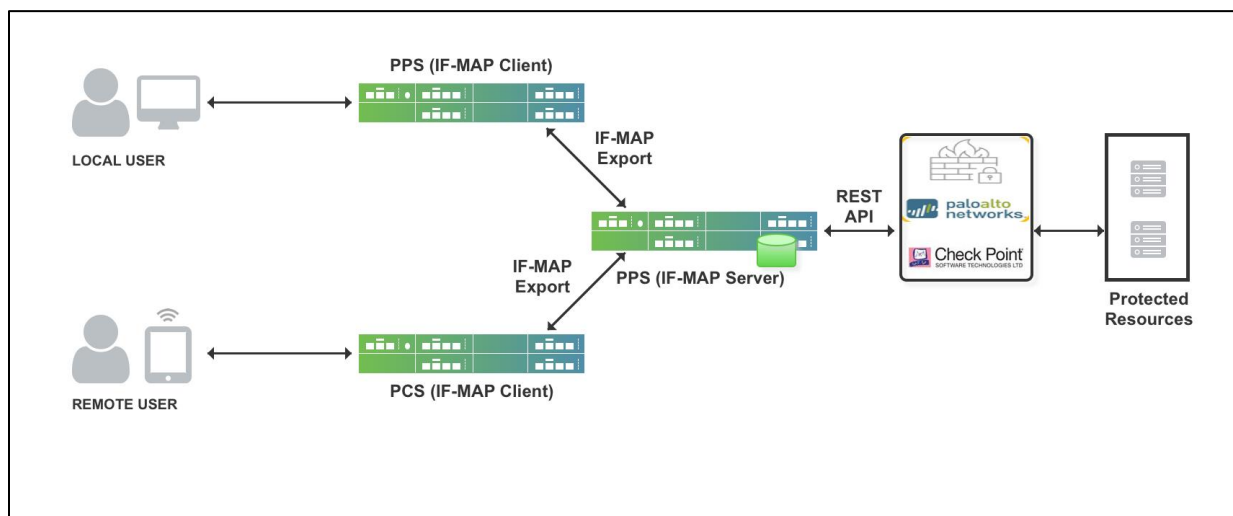

The authentication process is described below:

1. The remote user establishes VPN tunnel using Pulse Client and the role is granted to the user based on policy configured on PCS.
 - a. PCS session is exported to IF-MAP server.
 - b. IF-MAP server provisions user identity details to PAN/Check Point Firewall.
2. The remote user tries to access PAN firewall protected resource. PAN/Check Point Firewall allows access to protected resource if the user is authorized.
3. User's role changes while logged in (for example, when Host Check compliance change causes role(s) to change). In this case, user's new role(s) are sent to PAN/Check Point Firewall.
4. User logs out of PCS. In this case, all information associated with the user from that endpoint is removed from the Firewall. User is denied access to protected resources by Firewall.

Note: The same workflow applies to local users connecting through PPS.

IF-MAP Configuration

A high-level overview of the configuration steps needed to set up and run the integration:

- The Administrator configures IF-MAP clients (PPS, PCS) on IF-MAP server admin UI from System > IF-MAP Federation.
- Install the Device certificates and Trusted Server CA from System > Configuration > certificates on both IF-MAP Server and IF-MAP client.
- From IF-MAP Server admin UI, admin configures PAN Firewall device by entering the following:
 - Name for the PAN/Check Point Firewall.
 - IP address of the PAN/Check Point Firewall.
 - API Key for PAN/ Shared Secret for Check Point
- Administrator configures the Infranet Enforcer Auth Table Mapping Policies.

When the PPS or PCS session is exported to IF-MAP server, IF-MAP server provisions user identity details to configured PAN/Check Point Firewall based on the configured Auth Table Mapping Policies.

This section covers the following topics:

- [Step1: Configuring IF-MAP Server](#)
- [Step 2: Configuring IF-MAP Client](#)
- [Step 3: Viewing the Federated Session Details](#)

Step1: Configuring IF-MAP Server

To configure IF-MAP server on the PPS:

1. Select System > IF-MAP Federation > Overview.
2. Select IF-MAP Server.
3. Click Save Changes.

The screenshot shows the Pulse Secure web interface. The top navigation bar includes the Pulse Secure logo and the title "Pulse Policy Secure". Below the navigation bar, the breadcrumb trail is "IF-MAP > Overview". The "Overview" tab is selected. The page content explains that an IF-MAP federation simplifies user sessions by letting network devices share information. A warning message states: "Warning: Please reduce total log file sizes to 500 MB, under Log/Monitoring and Troubleshooting, to ensure enough space for the IF-MAP database." Below the warning, there is a section titled "Choose whether this Pulse Policy Secure runs an IF-MAP Server, an IF-MAP client, or no IF-MAP". The "IF-MAP Server" option is selected. A note indicates that an IF-MAP Server is automatically an IF-MAP client of itself and that the "Enhance IF-MAP Server storage" option should be selected for better scale. At the bottom, there are "Save Changes" and "Cancel" buttons.

4. Select IF-MAP > This Server > Clients > New Client and add PPS/PCS as IF-MAP client.

The screenshot shows the Pulse Secure web interface for configuring a new IF-MAP client. The breadcrumb trail is "IF-MAP > This Server > Clients > New IF-MAP Clients". The "New IF-MAP Clients" section is active. Under the "IF MAP client" heading, there are three input fields: "Name" (with a label "Label to reference this IF-MAP client"), "Description", and "IP addresses" (with a label "All possible source IP addresses for inbound connections from the client"). Below these fields, under the "Authentication" heading, there are two radio button options: "Basic" and "Certificate". At the bottom, there is a "Save Changes" button.

5. Install the Device certificates and Trusted Server CA from System > Configuration > certificates on both IF-MAP Server.

PulseSecure System Authentication Administrators Users Endpoint Policy Maintenance Wizards **Pulse Policy Secure on PPS-122**

Configuration > Certificates > Device Certificate

Device Certificate

Licensing Pulse One Security **Certificates** DMI Agent Sensors Client Types Guest Access

Device Certificates Trusted Client CAs Trusted Server CAs Client Auth Certificates Certificates Validity Check

Specify the Device Certificate(s). If you don't have a certificate yet, you can create a CSR and import the resulting signed certificate. If necessary, you can add custom [Intermediate CAs](#).

[Import Certificate & Key...](#) [Delete...](#)

10 records per page Search:

| | Certificate issued to | Issued by | Valid Dates | Used by |
|--------------------------|-----------------------|-------------|---|---------|
| <input type="checkbox"/> | psecure.net | psecure.net | Feb 2 14:29:33 2018 GMT to Jul 26 14:29:33 2023 GMT | |

6. If the client is added successfully the status turns to green colour.

PulseSecure System Authentication Administrators Users Endpoint Policy Maintenance Wizards **Pulse Policy Secure**

IF-MAP > This Server > Clients

Clients

Overview **This Server** This Client

Clients Replicas Federation-Wide Sessions

[New client...](#) [Duplicate...](#) [Enable](#) [Disable](#) [Delete...](#)

10 records per page Search:

| | Name | IP Addresses | Enabled | Status | Detail |
|--------------------------|------------|----------------|-------------------------------------|--------------------------------------|--------|
| <input type="checkbox"/> | PCS-90.250 | 10.001.001.001 | <input checked="" type="checkbox"/> | ● | |

Step 2: Configuring IF-MAP Client

To configure the IF-MAP client:

1. Select System > IF-MAP Federation > Overview.
2. Select IF-MAP Client.
3. Enter the IF-MAP server IP address or the complete server URL.

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

IF-MAP > Overview

Overview This Client

An IF-MAP federation simplifies the work of end users by letting network devices share information about user sessions. For example, if a user connects to the network using Connect Secure, they can automatically gain access (if authorized) to protected resources that are behind Infranet Enforcer firewalls, without having to log in again.

Choose whether this Pulse Policy Secure runs an IF-MAP Server, an IF-MAP client, or no IF-MAP

☐ IF-MAP Server An IF-MAP Server is automatically an IF-MAP client of itself

☒ IF-MAP Client

☐ No IF-MAP

▼ Server URL

* Server URL: Example: <https://ic/dana-ws/soapidsfmap>

▼ Authentication

☒ Basic

* Username:

* Password:

☐ Certificate

Save Changes Cancel

After completing the IF-MAP server and IF-client configurations, configure the IF-MAP Policies. For more information, see [Configuring Session Export Policies](#).

Note: This use case supports configuring only Session-Export policies.

Step 3: Viewing the Federated Session Details

To view the federated session details, select **System > IF-MAP > This Server > Federation-wide Sessions**.

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

IF-MAP > This Server > Fed-Wide Sessions

Fed-Wide Sessions

Overview This Server This Client

Clients Replicas Federation-Wide Sessions

200 sessions First user: in administrative domain Update

10 records per page Search:

| User | Capabilities | IF-MAP Roles | Device Attributes | Signin Time | Events | Signed in IP Address | Signed in MAC Address | Publisher ID |
|-------|--------------------|--------------|-------------------|---------------------|--------|----------------------|-----------------------|--------------------|
| user1 | LimitedAccess_Role | | | 2018-01-12 09:37:40 | | 10.200.112.5 | | 1CsxZsQ/PCS-90.250 |

← Previous 1 Next →

Deployments with Juniper IDP

- [About IDP Technology](#)
- [IDP Deployment Scenarios Overview](#)
- [Understanding PPS Deployments with IDP Devices](#)
- [Activating IDP for the ScreenOS or Junos Enforcer](#)
- [Managing Interoperation with IDP Devices](#)
- [Defining Automatic Response Sensor Event Policies](#)
- [Identifying and Managing Quarantined Users Manually](#)
- [Using Role-Based Policies to Monitor User Activity](#)

About IDP Technology

Securing intranet work application and resource traffic is vital to protecting the network. You can add levels of application security to detect internal threats coming from users who are authenticated through the system by integrating PPS with a Juniper Networks IDP Series sensor.

PPS supports standalone IDP and IDP through the Juniper Networks ISG Series Integrated Security Gateways Infranet Enforcer with the IDP Security Module (supported in ScreenOS Release 6.2 or greater).

The IDP sensor monitors the network on which the IDP system is installed. The sensor's primary task is to detect suspicious and anomalous network traffic based on specific rules defined in IDP rulebases.

The IDP device provides the following types of protection (some of which depend upon the specific configuration):

- Protects against attacks from user to application.
- Detects and blocks most network worms based on software vulnerabilities.
- Detects and blocks non-file-based Trojan Horses.
- Detects and blocks effects of spyware, adware, and key loggers.
- Detects and blocks many types of malware.
- Detects and blocks zero day attacks through the use of anomaly detection.



NOTE: An IDP Sensor can send logs to one PPS only. However, a PPS device can receive logs from more than one IDP Sensor.

Using the admin console, you can configure and manage interaction attributes between PPS and an IDP, including the following:

- (With standalone IDP) Global configuration parameters such as the IDP hostname or IP address, the TCP port over which the sensor communicates with PPS, and the one-time password PPS and IDP use to authenticate with one another.
- Various levels of attack severity warnings and the action that PPS takes.

The IDP sits within the network and monitors traffic from endpoints that are connected through PPS. You can position the IDP in-line, or you can configure the IDP in sniffer mode.

After PPS connects with the IDP sensor, PPS registers all of the IP addresses to be monitored for potential threats. With standalone IDP, you enter the IP addresses to monitor.

Any abnormal events detected by the IDP Sensor are reported to PPS, which you configure to take appropriate action based on the severity level of the reported events. The IDP Sensor performs reporting functions to allow you to determine what IP address within the network has launched the attacks in addition to any normal logging the IDP has been configured to undertake.

With a large number of connected users IDP can overwhelm PPS with more alert logs than it can process. In this situation, the number of logs sent by the IDP to PPS can be controlled by decreasing the severity level setting in the IDP connection settings.

With IDP deployments using the Infranet Enforcer and the IDP Security Module, the Infranet Enforcer can send messages to Pulse debug log.

IDP Deployment Scenarios Overview

Three possible deployment scenarios are shown in the following figures. The standalone IDP is located within the internal network. All network traffic originating from endpoints that are registered with the IDP is monitored. You can deploy IDP in sniffer mode, or inline mode. You can use transparent mode or route mode with an inline mode configuration. In the first deployment example, the IDP does not monitor IPsec traffic from the user to protected resources.

To monitor all IPsec traffic from users to protected resources, deploy the IDP behind the Infranet Enforcer, as shown in figure.

You can deploy up to ten IDP devices in a network with PPS. Performance is based on how rapidly sessions are created or changed, the number of events that IDP sends to PPS, and the efficiency of the network links that connect the devices. IDP devices must be connected over a high-speed LAN link.

In a clustering environment, only one member of an PPS cluster exchanges information with an IDP sensor. If the connected PPS fails or is shut down, another cluster member will assume the load.

Understanding PPS Deployments with IDP Devices

This topic provides an overview of deployments with IDP devices. It includes the following content:

- [About IDP Devices](#)
- [Coordinated Threat Control Overview](#)
- [Deployments with IDP Series Devices](#)
- [Deployments with IDP-Enabled Infranet Enforcers](#)
- [Monitoring IDP-Reported Events](#)

About IDP Devices

The IDP Sensor is a powerful tool to counteract users who initiate attacks. The IDP sensor monitors the network on which the IDP system is installed. The IDP sits within the network and monitors traffic from endpoints that are connected through PPS. You can position the IDP in-line, or you can configure the IDP in sniffer mode. The sensor's primary task is to detect suspicious and anomalous network traffic based on specific rules defined in IDP rulebases.

The IDP device provides the following types of protection (some of which depend upon the specific configuration):

- Protects against attacks from user to application.
- Detects and blocks most network worms based on software vulnerabilities.

- Detects and blocks non-file-based Trojan Horses.
- Detects and blocks effects of spyware, adware, and key loggers.
- Detects and blocks many types of malware.
- Detects and blocks zero day attacks through the use of anomaly detection.

Coordinated Threat Control Overview

In a coordinated threat control deployment, the IDP device reports abnormal events to PPS. The attack logs sent by the IDP device include the source and destination IP addresses and port numbers of the attacking host, and the resource against which the attack was launched, along with the attack identifier, severity of the attack, and the time at which the attack was launched.

PPS displays the attack information received from the IDP sensor on the Active Users page. Based on the attackers IP address and port number, PPS can uniquely identify the user's session.

When you learn that an attack has been launched by an active user, you can disable the user's account, end the user's session, or remediate to a different role. You can choose automatic or manual actions for attacks detected by the IDP sensor. For manual action, you look up the information available on the Active Users page and decide on an action. For automatic action, you configure the action in advance when you define IDP policies.

PPS displays an error message to the user whose account has been disabled indicating the reason.

Deployments with IDP Series Devices

You can deploy PPS with IDP Series devices in coordinated threat control deployments and user-role-based IDP policy deployments. User-role-based IDP policy deployments require IDP Series 5.0 or later. To display the version of an associated IDP device in PPS admin console, select System > Configuration > Sensors.



NOTE: An IDP Sensor can send logs to one PPS only. However, PPS can receive logs from more than one IDP Sensor.

Using the admin console, you can configure and manage interaction attributes between PPS and an IDP Series device, including the following:

- Global configuration parameters such as the IDP hostname or IP address, the TCP port over which the sensor communicates with PPS, and the one-time password PPS and IDP use to authenticate with one another.
- Various levels of attack severity warnings and the action that PPS takes
- IP addresses to monitor.

With a large number of connected users IDP can overwhelm PPS with more alert logs than it can process. In this situation, the number of logs sent by the IDP to PPS can be controlled by decreasing the severity level setting in the IDP connection settings.

Deployments with IDP-Enabled Infranet Enforcers

PPS also supports IDP through the Juniper Networks ISG Series Integrated Security Gateways Infranet Enforcer with the IDP Security Module (supported in ScreenOS Release 6.2 or later).

Unlike a standalone IDP which requires manual configuration on the IDP to allow communication with the PPS, the ScreenOS Enforcer or the Junos Enforcer use the existing communication channel with PPS.

If you are using integrated IDP with the ISG-1000 or ISG-2000, see http://www.juniper.net/techpubs/en_US/release-independent/screenos/information-products/pathway-pages/screenos/product/index.html. If you are using Junos IDP with Junos

OS Release 10.0, see *Junos OS Initial Configuration Guide for Security Devices*. ISG-IDP and CTC are configured the same on PPS.

When ISG-IDP or Junos IDP are activated, ScreenOS or Junos notifies PPS when an attack event is detected from any endpoint. To avoid overwhelming the SSH connection between PPS and the Infranet Enforcer, the number of attack notifications is limited to ten per second. If additional attacks are detected, the Infranet Enforcer holds an additional ten notifications in a queue.

ISG-IDP or Junos devices attached to any node in a cluster may send messages regarding sessions attached to any node in the cluster.

There is a Use IDP module as Sensor check box on the Infranet Enforcer admin console page. If you select the check box and there is no IDP module or if the Enforcer is not running a compatible version, PPS logs an appropriate message.

With IDP deployments using the Infranet Enforcer and the IDP Security Module, the Infranet Enforcer can send messages to Pulse debug log.

Monitoring IDP-Reported Events

After the IDP Sensor has been set up, you can specify the events you want the IDP to watch for and the actions that PPS takes once a particular event has been noted and reported.

In two locations on PPS, you can specify actions to be taken in response to users that perform attacks:

- Sensor Event policies page—Define the policy on this page to generate an automatic response to users who perform attacks.
- Users page—Manually identify and quarantine or disable users on the Active Users page, which lists users who have performed attacks.

Activating IDP for the ScreenOS or Junos Enforcer

To activate ISG-IDP or Junos IDP on PPS:

1. Select PPS > Infranet Enforcer.
2. Select the name of the Enforcer on which you want to activate IDP.
3. Select the Use IDP Module as Sensor check box. Additional options are presented.
4. Select For sessions provisioned for this Enforcer only to limit monitored sessions to this device. This is applicable in an IF-MAP Federation network.
5. Select 1 - INFO through 5 - Critical from the Severity menu. The severity filter allows you to specify the level of attacks that the Infranet Enforcer reports to PPS. For example, if you select 3, only level 3 attacks or higher are reported.

Managing Interoperation with IDP Devices

The Sensors tab allows you to specify the system settings PPS uses to establish a connection to an IDP device. Select System > Configuration > Sensors > Sensors. The main Sensor page displays the sensor, the network address, the state (enabled), the version, and the status of any configured sensors. The following sections describe tasks related to configuring and managing interaction between PPS and an IDP Sensor:

- [Configuring Communication with an IDP Device](#)
- [Enabling or Disabling IDP Sensors](#)
- [Reconnecting to an IDP Sensor](#)
- [Refreshing and Displaying the Connection Status](#)
- [Deleting an IDP Sensor Entry](#)

Configuring Communication with an IDP Device

To configure communication with an IDP device and a IDP log monitoring policy:




NOTE: To use the IDP sensor with PPS you must enable logging for the applicable policies.

1. Select System > Configuration > Sensors
2. Click New Sensor. The admin console displays the New Sensor page.
3. Under Sensor Properties, specify the following information:
 - Name—A name PPS uses to identify the new connection entry.
 - Hostname—The hostname or IP address of the IDP Sensor to which PPS connects in order to receive application and resource attack alert messages.
 - Port—The TCP port on the IDP Sensor to which PPS listens when receiving application and resource attack alert messages.
 - One-time password—The encrypted password PPS uses when conducting the initial Transport Layer Security (TLS) handshake with the IDP Sensor. You must enter the encrypted PPS OTP password as displayed on the IDP ACM configuration summary screen.



NOTE: The hostname, TCP port, and one-time password must already be configured on the IDP Sensor before this configuration can be successful.

4. Under Monitoring Options, specify IP addresses to monitor and the minimum alert severity level the IDP Sensor records and submits to PPS:
 - In the Addresses to Monitor field, specify individual IP addresses and address ranges, one entry per line. IDP reports attack information only for the IP addresses that you specify. For IDP to report all events to PPS, enter 0.0.0.0/0. For IDP to report only selected events, enter <default> to permit IDP to report events for events with source IPs that have an active user session on PPS, and /or enter one or more addresses or address ranges for any endpoint that you want the IDP sensor to report.
-  **NOTE:** With ISG-IDP or Junos IDP, you do not need to specify which IP addresses to monitor. The Infranet Enforcer monitors all IP address for which auth tables exist.
- Select one of the severity options available in the Severity filter drop down list. The severity level is a number on a scale from 1 to 5, where 1 is informational and 5 is critical. This option represents the severity of messages the IDP should send to PPS.
5. Click Save Changes.

Enabling or Disabling IDP Sensors

To enable or disable existing IDP Sensor entries on PPS:

1. Select System > Configuration > Sensors.
2. Select the check box for one or more IDP Sensor entries to enable or disable.
3. Click Enable or Disable to enable or disable the specified IDP Sensor entries, respectively.

Reconnecting to an IDP Sensor

When the connection to an IDP Sensor is down, you can use the admin console on PPS to re-establish the connection. You can also use the admin console to refresh the status of existing connections between PPS and the IDP Sensor.

To re-establish communication with an IDP Sensor, you must generate a new One-time Password.

To reconnect to an associated IDP Sensor:

1. Select the check box next to the IDP Sensor to which you want to reconnect.
2. Click Reconnect.

The admin console displays a message indicating that PPS is currently attempting to re-establish connection to the specified IDP Sensor. This page automatically refreshes each second during the reconnection process. Otherwise, the connection status page automatically refreshes once every 30 seconds.

Refreshing and Displaying the Connection Status

To refresh and display the connection status for the specified IDP Sensor:

1. Select the check box for one or more IDP Sensor entries to display current connection status
2. Click Refresh.

Deleting an IDP Sensor Entry

You can delete existing IDP Sensor entries that define a connection between PPS and an IDP Sensor.

To delete one or more existing IDP Sensor entries from PPS:

1. Select the check box for the IDP Sensor entry or entries to delete.

2. Click Delete, then confirm that you want to delete the sensor entry or entries.

Identifying and Managing Quarantined Users Manually

When PPS quarantines a user based on an attack, you can display and manage the states by locating the user link in the Active Users page.

- A small warning icon is displayed in front of the username.
- The linked username.
- An enabled Quarantined option button on the specific user's page. If the user is not quarantined, the option button is disabled.

To manage quarantined users:

1. Locate Identify quarantined users at System > Status > Active Users.
2. the quarantined user and click on the username link. The user page opens, showing a number of options.
3. Click Disabled to disallow a user from authenticating.
4. Click Quarantined to leave a user in a quarantined state. The Quarantined option is enabled only if the user is already quarantined.



NOTE: PPS assigns quarantined users to the quarantined role, regardless of their log in realm.

5. Click Save Changes.
6. To re-enable previously quarantined or disabled users, select Authentication > Auth. Servers > *Select Server* > Users and click the link for the given user.



NOTE: You can also disable users from this location.

7. Click Enabled to release the user from quarantine.
8. Click Save Changes.

All Sensor events are logged at System > Log/Monitoring > Sensors > Log.

Using Role-Based Policies to Monitor User Activity

If you are using IDP Release 5.0 or later or ScreenOS ISG-IDP Release 6.3 or later, you can add enhanced user management capabilities to your PPS IDP deployment. This feature is supported for endpoints using Pulse Client and users who connect with agentless access.

When a user session is established on PPS, PPS pushes session information including IP address, username and the roles to which the user is assigned to the IDP. The session information allows IDP to apply policies based on user roles, or on the username which is added to the IDP log.

Since role selection for a user can be based on the results of Host Checker policies, you can set policies that are based on Host Checker results. For example, if a user is assigned to a restrictive role based on the results of a Host Checker policy requiring a instant messaging software patch, you can restrict instant messenger traffic for that role.

PPS keeps the IDP device updated when a user's role changes or when a session is deleted. IDP's application policy enforcement reflects the most currently available information about a user.

If role-based policies are less restrictive than IP address based policies, some users could be inadvertently blocked during this period. Once session information is obtained about the endpoint IDP re-evaluates the endpoint and applies the less restrictive policies.

If role-based policies are more restrictive than IP address based policies, IDP cannot apply the more restrictive policies, and an endpoint could engage in potentially damaging behavior prior to session information being sent.

If you are using PPS and IDP in a network that employs IF-MAP client and server Federation, and IDP detects an attack that is attributed to a session, IDP informs PPS about the attack. Upon notification, PPS publishes the information to any attached IF-MAP servers. The IF-MAP server notifies PPS that originally published the session and PPS takes the appropriate action based on the applicable Sensor Event Policies.

Behavioral Analytics


- [Overview](#)
- [Configurations](#)
- [Dashboard and Reports](#)
- [Troubleshooting](#)

Overview

Enterprises deal with constant and ever-increasing magnitude of threat vectors, which includes Data Loss Prevention (DLP), malware and Domain Generation Algorithms (DGA) attacks. With changing business requirements and new types of threats, Administrators must understand how users and devices are accessing company's data and services to ensure that the access control policies are up to date. Even after successful authentication the user's activity should be monitored fully to ensure device compliance. Policy rules for protecting resources need to be configured and should be resistant to new attacks. Policy rules are configured manually, and the process is not scalable with new attacks. Hence, it is very important for Administrators to have insights into any anomalous behavior and act accordingly.

Behavioral Analytics feature analyzes user's action along with other context data to derive conclusions about any anomalous activities. It provides information/visibility based on real time user or device context thus helping in advanced attack detection and helps in proactive policy-based enforcement.

Figure: Behavioral Analytics

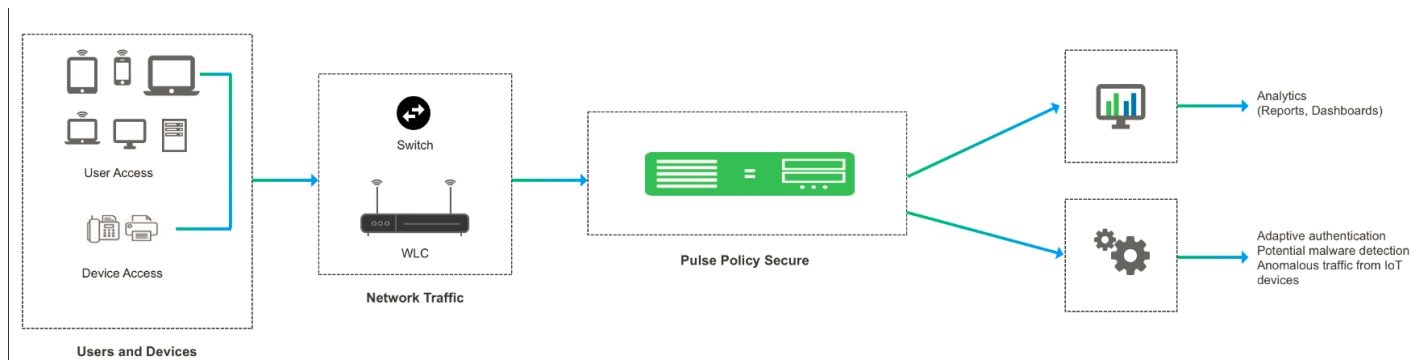

The Behavioral Analytics feature analyzes user or device behavior using the following methods:

- Adaptive Authentication- User/device is prompted for second level of authentication based on the threat profile determined for the corresponding user/device.

Below are some of the scenarios where second level of authentication is required:

- User authenticating from new device: This is detected by using the device MAC address.
- User authenticating from new location: Location details are obtained by using the subnet and location configurations.
- Anomalous Traffic from IoT devices: The unmanaged and IoT devices are profiled during the learning period configured in PPS. Any Anomalous traffic from these devices is detected as an anomaly based on the known profile of the device. PPS uses both Netflow and SPAN configuration on switches for detecting anomalous traffic from IoT devices.
- Potential Malware Detection: Malware on client devices have become more intelligent and in generating domain names by using dynamic generation algorithms. Hence, using rule-based policies might not detect these anomalies. PPS uses SPAN data collection method for monitoring DNS traffic and detects these potential malware on the endpoint.

Adaptive authentication user flow

1. Users connect to PPS.
2. PPS performs the primary authentication.
3. PPS checks for any anomalies.
4. PPS prompts for secondary authentication for the first login or if the user location changes.
5. User enters the credentials required for secondary authentication.
6. PPS performs the secondary authentication and allows/rejects access to the user/device.

Anomalous traffic from IoT devices user flow

1. Users/Device establishes a connection with PPS.
2. Switch and DNS Server forwards the network traffic of the device to PPS.
3. PPS analyzes the network traffic and takes the action based on the detected anomaly.

Potential malware detection user flow

1. Users/Device establishes a connection with PPS.
2. DNS server forwards all the domain resolutions to PPS.
3. PPS analyzes the DNS traffic and detects potential malware on the endpoint.

Licensing

- Adaptive Authentication feature is part of the PPS license.
- Anomalous Traffic detection from IoT devices and Potential Malware detection feature requires Behavioral Analytics license to be installed on PPS.

Benefits

- Monitors the traffic from user/devices and helps in determining the possible anomalous activities such as:
 - User is authenticating from a new device/new location.
 - Device traffic is different from previous instances.
 - Potential malware on the endpoint.
- Data collected as part of Behavioral Analytics is stored so that it can be used later for determining the anomalies.

Configurations

- [Pre-Requisites](#)
- [Summary of Configuration](#)
- [Configuring PPS for enabling Behavioral Analytics](#)

Pre-Requisites

PPS determines the network anomalies based on the NetFlow and Switch Port Analyzer (SPAN) configurations on the switch.

- Enable NetFlow (v5 or v9) and port mirroring/SPAN on switches. For sample configurations, see [Appendix](#).
- NetFlow traffic is currently qualified only with Cisco switches.

Summary of Configuration

1. Administrator enables the Behavioral Analytics feature and configures PPS based on the use case (Adaptive Authentication, anomaly traffic detection, potential malware detection). The Admin configures the list of switches in the network from where the network traffic can be received/forwarded to analytics engine on PPS.
2. Administrator configures the role mapping rules to consume these flags and control the access to the corresponding users and devices.
3. Administrator enables the secondary authentication for the users in case they are tagged with anomalies activities to ensure additional level of authentication for security purpose.
4. View the Dashboard and Reports for any detected anomalies.
5. From the Reports page, Administrator has options to clear the detected anomalies, export the available anomaly data to a CSV file.



Note:

- Behavioral Analytics configuration is synched across the nodes in the cluster (including config-only clusters). However, data collected and analyzed is synched across the nodes but not in case of config-only clusters.
- RSPAN is the recommended configuration for cluster deployments especially for the Active/Passive cluster for seamless VIP failover.
- Adaptive authentication is not supported for 802.1.x connections using native supplicant.

Configuring PPS for enabling Behavioral Analytics

The UEBA package is available by default for detecting the anomalies. If you plan to upgrade to the latest package, it can be downloaded from the [Pulse Secure Portal](#). Click **Upload and Activate** after uploading the package.

- [Configuring PPS for Adaptive Authentication](#)
- [Configuring PPS to detect Anomaly Traffic from IoT devices](#)
- [Configuring PPS to detect Potential Malware](#)

Configuring PPS for Adaptive Authentication

To enable adaptive authentication:

1. Select **System > Behavioral Analytics > Configuration**.
2. Under Configurations, select **Enable Behavioral Analytics**.
3. For enabling Adaptive Authentication, select **Enable data collection during authentication of devices and users**.
 - a. For location-based anomaly detection, select **Enable subnet based location anomaly detection**.
 - i. Enter the Subnet details. For example, 10.11.1.2/24.
 - ii. Enter the location name.
 - iii. Type the location to search and press **Enter**.
 - iv. Click **Add** to add the location.

| Subnet | Location Name | Location |
|---------------|---------------|--|
| | | Search for Location... |
| | BANGALORE | Bengaluru, Bangalore Urban, Karnataka, India |
| | MUMBAI | Mumbai, Mumbai City, Maharashtra, India |
| 173.24.0.0/16 | HYDERABAD | Hyderabad, Telangana, India |

Example subnet: 10.11.1.2/24 or fda9:1135:c4c7:5554::/64

4. Select **User > User Realms > General**.
5. Under Additional Authentication Server, **Enable Additional Authentication Server**.
 - a. Select **Enable Adaptive authentication**.
 - b. Under Authentication #2, select the desired secondary authentication server from the drop-down list.

Additional Authentication Server

☒ Enable additional authentication server

You can specify an additional authentication server. The additional credentials can be specified by the user on the sign-in page (the labels for these inputs are specified by the sign-in page).

☐ Enable adaptive authentication

Note: Adaptive authentication is supported by leveraging the behavioral analytics. Enable behavioral analytics on 'System->Behavioral Analytics->Configuration' for supporting this. Ad server above.

Authentication #2: AD_204

Username is: ☒ specified by user on sign-in page ☐ predefined as: <USER>

Password is: ☒ specified by user on sign-in page ☐ predefined as: <PASSWORD> ☐ Mask static password

☒ End session if authentication against this server fails

6. Click **Save Changes**.

Configuring PPS to detect Anomaly Traffic from IoT devices

As a pre-requisite Profiler should have been configured for detecting the anomaly traffic from IoT devices. For more information, see [Profiler Deployment Guide](#).

To determine anomaly traffic from IoT devices:

1. Select **System > Behavioral Analytics > Configuration**.
2. Under Configurations, select **Enable Behavioral Analytics**.
3. Select **Enable Network Traffic from switches**.
 - Configure the list of switches in the network from where the required data can be received/forwarded to analytics engine on PPS.
 - Add the switches manually by adding (Switch IP address/mac address) or add the existing switches under **Add Switch from list** table. Select **Dynamically add switches from RADIUS and SNMP clients** to automatically add switches from RADIUS and SNMP clients.
4. Select **Enable Data Collection through SPAN from switch** to enable SPAN configuration for determining unknown domain anomaly for unmanaged devices.
 - a. Select the network interface (External port/Internal port).
 - b. (Optional) Enter the IP address of the DNS server and click Add. DNS requests from these servers will not be considered for anomaly detection.
5. Enter the learning duration in days (7-30 days). Learning duration is learning period for unmanaged devices to build the device profile.

☒ Enable Network Traffic Monitoring from switches

Note: This is used for detection of Anomalous traffic from IoT devices

▼ Add switches manually

Add switches manually for monitoring netflow traffic.

Delete

↑

↓

Switch IP

Add

Example: 10.1.1.2 or 10.1.1.28/28 or fda6:f136:c4c7:5554::/64 or fda6:f136:c4c7:5554::

▼ Add switches from list

Add existing switches from the list which are configured as RADIUS or SNMP clients for monitoring netflow traffic.

| Switch | IP | Type | Select |
|--------|----------|--------|-------------------------------------|
| Cisco | 10.1.1.6 | Radius | <input checked="" type="checkbox"/> |

☒ Dynamically add switches from RADIUS and SNMP Clients

Note: Selecting this option will automatically add switches from RADIUS and SNMP clients for monitoring network traffic.

☒ Enable data collection through SPAN from switch

Note: This is used for Malware detection and Anomalous traffic from IoT devices

Select Network Interface :

External port

Note: The selected interface cannot be used for any other traffic.

DNS Servers

Add

☒ 10.10.74.14

Note: DNS requests from DNS servers will not be considered for domain anomaly detection. Example: 10.1.1.2

White listed domains

Add

Note: Whitelisted domains will not be considered as DGA attack domain. Ex: abc.com

Learning duration :

15

 days Number of days for which the system collects data for computing the baseline for an endpoint. The value should be between 7 to 30 days.

Save Changes

6. Click **Save Changes**.
7. Configure the role mapping rules for user realm and/or MAC authentication realm.
 - a. Create new role mapping rule, select **Anomaly attribute** under **Rule based on** and click **Update**.
 - b. Enter the rule name.

- c. Under Rule: If device has any of the following anomaly types:
 - i. **Any of the anomalies found**- Select this option to detect the device with any anomaly type.
 - ii. **Select from list of anomalies**- Select this option to configure the specific anomaly type from the available list. To detect anomaly traffic from IoT devices configure **Unknown server/Unknown domain** as anomaly from the list of **Available Anomaly Types**.
 - d. Select **Stop processing more rules** option to stop evaluating role mapping rules if the user meets the conditions specified for this rule. Ensure that the rule is at the top of the list.
 8. Configure the required roles and click **Save Changes**.


The screenshot shows the 'Role Mapping Rule' configuration page in the Pulse Secure web interface. The breadcrumb trail is 'User Realms > Users > Role Mapping > Role Mapping Rule'. The page title is 'Role Mapping Rule'. The 'Rule based on:' dropdown is set to 'Anomaly attribute' with an 'Update' button next to it. Below this is a text field for '* Name:'. A green expandable section titled 'Rule: If device has any of the following anomaly types...' is open. It contains two radio buttons: 'Any of the anomalies found' (unselected) and 'Select from the list of anomalies' (selected). Under 'Select from the list of anomalies', there are two lists: 'Available Anomaly Types' and 'Selected Anomaly Types'. 'Available Anomaly Types' contains 'DGA'. 'Selected Anomaly Types' contains 'Unknown server' and 'Unknown domain'. Between the lists are 'Add ->' and 'Remove' buttons. Below the anomaly lists is another green expandable section titled 'then assign these roles'. It contains two lists: 'Available Roles' and 'Selected Roles'. 'Available Roles' contains 'Guest', 'Guest Admin', 'Guest Sponsor', 'Guest Wired Restricted', and 'Remediation'. 'Selected Roles' contains '(none)'. Between the role lists are 'Add ->' and 'Remove' buttons. At the bottom of the rule configuration, there is a checkbox labeled 'Stop processing rules when this rule matches' which is checked. A note at the bottom says 'To manage roles, see the Roles configuration page.' At the very bottom are two buttons: 'Save Changes' and 'Save + New'.

Configuring PPS to detect Potential Malware

PPS relies on DNS traffic collected through SPAN to determine the potential malware on the endpoint.

To configure PPS for detecting potential malware:

1. Select **System > Behavioral Analytics > Configuration**.
2. Under Configurations, select **Enable Behavioral Analytics**.
3. Select **Enable Data Collection through SPAN from switch** to enable SPAN configuration for determining DGA based potential malware attacks. This anomaly detection mechanism is supported for both managed and unmanaged/IoT devices.
 - a. Select the network interface (External port/Internal port).
 - b. (Optional) Enter the IP address of the DNS server and click Add. DNS requests from these servers will not be considered for anomaly detection.
 - c. (Optional) Enter the white listed domains to exempt the domains from anomaly detection.

 **Enable data collection through SPAN from switch**

Note: This is used for Malware detection and Anomalous traffic from IoT devices

Select Network Interface: Note: The selected interface cannot be used for any other traffic.

| DNS Servers | |
|----------------------|------------------------------------|
| <input type="text"/> | <input type="button" value="Add"/> |
| <input type="text"/> | <input type="button" value="Add"/> |

Note: DNS requests from DNS servers will not be considered for domain anomaly detection. Example: 10.1.1.2

| White listed domains | |
|----------------------|------------------------------------|
| <input type="text"/> | <input type="button" value="Add"/> |
| <input type="text"/> | <input type="button" value="Add"/> |


Note: Whitelisted domains will not be considered as DGA attack domain. Ex: abc.com

Learning duration: days Number of days for which the system collects data for computing the baseline for an endpoint. The value should be between 7 to 30 days.

4. Configure the role mapping rules for user realm and/or MAC authentication realm.

- Create new role mapping rule, select **Anomaly attribute** under **Rule based on** and click **Update**.
- Enter the rule name.
- Under Rule: If device has any of the following anomaly types:
 - Any of the anomalies found**- Select this option to detect the device with any anomaly type.
 - Select from list of anomalies**- Select this option to configure the specific anomaly type from the available list. To detect potential malware from IoT devices configure **DGA** as anomaly from the list of **Available Anomaly Types**.
- Select **Stop processing more rules** option to stop evaluating role mapping rules if the user meets the conditions specified for this rule. Ensure that the rule is at the top of the list.

Note: The Administrator can also create Anomaly rules based on Custom Expressions.

 **PulseSecure** System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Realms > Users > Role Mapping > Role Mapping Rule

Role Mapping Rule

Rule based on:

* Name:

▼ Rule: If device has any of the following anomaly types...

☐ Any of the anomalies found

☒ Select from the list of anomalies

Available Anomaly Types:

Unknown domain
Unknown server

Selected Anomaly Types:

▼ then assign these roles

Available Roles:

Guest
Guest Admin
Guest Sponsor
Guest Wired Restricted
Remediation

Selected Roles:

☒ Stop processing rules when this rule matches

To manage roles, see the [Roles](#) configuration page.

5. Click **Save Changes**.

Dashboard and Reports

The Behavioral Analytics dashboard provides visibility to many anomalies in the network. It provides visibility of any known, active anomalies, devices with potential malware, IoT devices with anomalous traffic, anomalies location, trend and so on.

To view the Behavioral analytics dashboard:

1. Select **System > Status > Behavioral Analytics**.
2. Select the desired timeframe from available options.
3. Click **Save Changes**.

You can also view the drill down reports such as:

- Top 5 Users with Adaptive Authentication
- Top 5 Devices with Potential Malware
- Top 5 Devices with Anomalous Traffic

Figure: Behavioral Analytics Dashboard Page



To view the Behavioural Analytics reports, select **System > Reports > Behavioral Analytics**.

Figure: Behavioral Analytics Reports Page

PulseSecure

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure

Reports > Behavioral Analytics > Behavioral Analytics User Report

Reports

Behavioral Analytics User Report

User SummarySingle User ActivitiesDevice SummarySingle Device ActivitiesDevice DiscoveryApplication DiscoveryAuthenticationCompliance

Behavioral AnalyticsInfected Devices

UserNetwork

Clear All

Showing 1 to 3 of 3 entries10records per page

AllSearchActions

Last 24hrsLast WeekLast MonthCleared AnomaliesAdvanced Filters

| <input type="checkbox"/> | User Name | Anomalies Count | Recent Anomaly Detection Time | Recent IP Address | Recent MAC Address | Recent Location | Actions |
|--------------------------|-----------|-----------------|-------------------------------|-------------------|--------------------|-----------------|---------|
| <input type="checkbox"/> | ... | 3 | Fri, 02 Nov 2018 11:18:14 | | | MUMBAI | Clear |
| <input type="checkbox"/> | ... | 5 | Fri, 02 Nov 2018 11:16:16 | | | MUMBAI | Clear |
| <input type="checkbox"/> | ... | 2 | Fri, 02 Nov 2018 10:52:05 | | | MUMBAI | Clear |

FromFirstPrevious1NextLast

User Name: ...

Location History

Leaflet | © OpenStreetMap contributors

User History

2records per pageSearch:

| Location | Number of Logins | Last Login Time | MAC Address | IP Address |
|-----------|------------------|---------------------------|-------------------|------------|
| MUMBAI | 2 | Fri, 02 Nov 2018 11:23:09 | | |
| HYDERABAD | 1 | Fri, 02 Nov 2018 10:53:23 | 6C-8D-9D-0C-36-7E | |

© 2019 by Pulse Secure, LLC. All rights reserved

257

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Reports > Behavioral Analytics > Behavioral Analytics Network Report

Reports
Behavioral Analytics Network Report

User Summary Single User Activities Device Summary Single Device Activities Device Discovery Application Discovery Authentication Compliance

Behavioral Analytics Infected Devices

User **Network**

Clear All Showing 1 to 3 of 3 entries 10 records per page All Search Actions


| | MAC Address | Device Category | Anomalies Count | Recent Anomaly Detection Time | Recent IP Address | Recent Locations | Actions |
|-------------------|-------------|--------------------------|-----------------|-------------------------------|-------------------|------------------|---------|
| Last 24hrs | | | | | | | |
| Last Week | | | | | | | |
| Last Month | | Internet of Things (IoT) | 22 | Fri, 02 Nov 2018 11:36:21 | 1 | MUMBAI | Clear |
| Active Anomalies | | Projectors | 50 | Fri, 02 Nov 2018 11:34:58 | 1 | BANGALORE | Clear |
| Cleared Anomalies | | Windows | 7 | Fri, 02 Nov 2018 11:31:16 | 1 | HYDERABAD | Clear |

Advanced Filters First Previous 1 Next Last

From

Mac Address: 00-50-56-bf-3c-49

Location

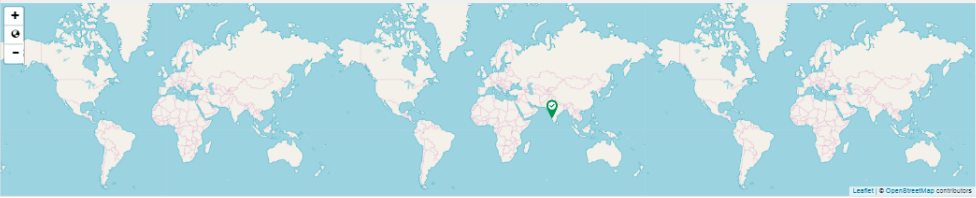

Device History

2 records per page Search: No data available in table

Destination Servers

No data available in table

Anomalies

2 records per page Search:

| Last Detected Time | Category | IP Address | Anomaly Type | Value | Count |
|---------------------------|--------------------------|------------|----------------|-----------------------------|-------|
| Fri, 02 Nov 2018 11:36:21 | Internet of Things (IoT) | | Unknown domain | dns.maffnsci.com | 2 |
| Fri, 02 Nov 2018 11:34:37 | Internet of Things (IoT) | | Unknown domain | safebrowsing.googleapis.com | 1 |

Previous 1 2 3 4 5 Next

Troubleshooting

The event and debug logs can be used for troubleshooting:

The Event logs are generated for the device related anomalies:

- Anomalous traffic from IoT devices
- Potential malware

You can use the User Access and Admin Logs in case of any issues. The user access logs are generated whenever there are any user related anomalies such as user logging from new location/device/new user. The Admin Logs are generated whenever there is a change with Behavioral Analytics options and if there are any changes with respect to application policies.

You can also use **Maintenance > Troubleshooting > Monitoring > Debug Log** for debugging issues. Enable debug log with events *ueba*.

Appendix

SPAN

Switched Port Analyzer (SPAN) allows you to send a copy of traffic passing through ports to another port on the switch. SPAN is important to mirror received or transmitted (or both) traffic on one or more source ports to a destination port for analysis.


SPAN is mirroring ports in the same switch, RSPAN (Remote SPAN) is mirroring ports in one switch to a port in different switch.

This example describes how to configure RSPAN on Cisco Catalyst switches (Cisco 2960).

RSPAN

A sample topology to monitor traffic on port Gi0/1 in Switch1 using a PPS Profiler connected to port Gi0/2 in Switch2 is shown below.

Create a VLAN that will be used as an RSPAN-VLAN on both switches. In this example vlan ID 999 is used as the RSPAN-VLAN. Allow the RSPAN-VLAN on the trunk port between Switch1 and Switch2.

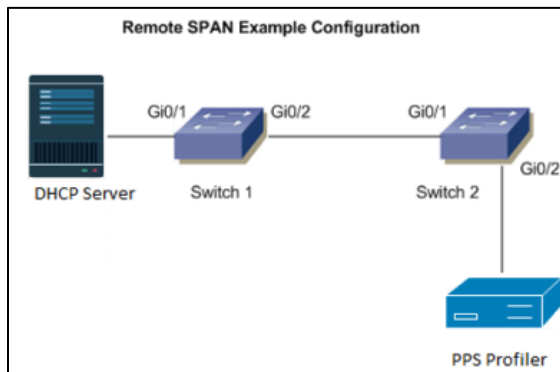

Switch1 (Source switch)

```
Switch1#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Switch1(config)#vlan 999
Switch1(config-vlan)#name RSPAN-Vlan
Switch1(config-vlan)#remote-span
Switch1(config-vlan)#exit
Switch1(config)#monitor session 1 source interface Gi0/1
Switch1(config)#monitor session 1 destination remote vlan 999
Switch1(config)#end
```

Allow VLAN ID 999 on the trunk port Gi0/2

```
Switch1#sh run int g0/2
Building configuration...
Current configuration : 175 bytes
!
interface GigabitEthernet0/2
description To-Switch2-port-Gi0/1
switchport trunk allowed vlan 74,999
switchport mode trunk
end
```

Switch2 (destination switch)

```
Switch2#conf t
Enter configuration commands, one per line. End with CNTL/Z.
Switch2(config)#vlan 999
Switch2(config-vlan)#name RSPAN-Vlan
Switch2(config-vlan)#remote-span
Switch2(config-vlan)#exit
Switch2(config)#monitor session 1 source remote vlan 999
Switch2(config)#end
```

Allow vlan id 999 on the trunk port Gi0/1

```
Switch2#sh run int g0/1
Building configuration...
Current configuration : 175 bytes
!
interface GigabitEthernet0/1
description To-Switch1-port-Gi0/2
switchport trunk allowed vlan 10,20,30,999,60
switchport mode trunk
end
```

Allow VLAN id 999 on trunk port Gi0/2.

```
Switch1#sh run int g0/2
Building configuration...
Current configuration : 175 bytes
!
interface GigabitEthernet0/2
description To-Switch2-port-Gi0/2
switchport trunk allowed vlan 60,999
switchport mode trunk
end
```

NetFlow

NetFlow is a network protocol developed by Cisco for collecting IP traffic information and monitoring network traffic. Using a NetFlow collector and analyzer, you can see where network traffic is coming from and going to and how much traffic is being generated.

NetFlow V5 or V9 has to be configured on Cisco switch.

Commands on Cisco Switch

```
ueba-switch(config)#flow exporter UEBA
ueba-switch(config-flow-exporter)# destination <PPS IP>
ueba-switch(config-flow-exporter)#transport udp 2055
ueba-switch(config-flow-exporter)#export-protocol netflow-v9 (or netflow-v5)
```



Note: Cisco 3850 Catalyst switches support only v9 whereas Cisco 2960 supports both v5 and v9

```
ueba-switch(config)#flow record UEBA
```

```
ueba-switch(config-flow-record)# match ipv4 protocol
ueba-switch(config-flow-record)#match ipv4 source address
ueba-switch(config-flow-record)#match ipv4 destination address
ueba-switch(config-flow-record)# match transport source-port
ueba-switch(config-flow-record)#match transport destination-port
ueba-switch(config-flow-record)#match interface input
ueba-switch(config-flow-record)#collect interface output
ueba-switch(config)#flow monitor UEBA
ueba-switch(config-flow-monitor)#exporter UEBA
ueba-switch(config-flow-monitor)#cache timeout active 60
ueba-switch(config-flow-monitor)#record UEBA
ueba-switch(config)#interface GigabitEthernet1/0/3  ---(interface to which client endpoint is connected)
ueba-switch(config-if)#ip flow monitor UEBA input
```

IoT Access

- [IoT Policy Provisioning](#)

IoT Policy Provisioning

This chapter provides an overview of IoT device enforcement using SRX/PAN firewall. It includes the following information:

- [Overview](#)
- [Deployments](#)
- [Configuring IoT Policy Provisioning](#)

Overview

As we increasingly connect devices to the Internet, new opportunities to exploit potential security vulnerabilities grow. Any unknown devices including IoT devices could serve as entry points for cyberattack by allowing malicious individuals to re-program a device or cause it to malfunction. The IoT devices are being added to corporate networks with or without the knowledge of IT administrator and they may communicate using the corporate IP network. These devices may have limited security controls leaving them open to be used as an attack vector. To improve security posture of IoT devices in corporate network, visibility and Role Based Access Control play a key role. Hence, it's extremely important to detect and classify what's there on the network.

PPS along with Profiler enables you to secure and manage access to IoT devices. It allows you to configure IoT Access Policy based on discovered or profiled device category. It also allows you to dynamically configure resource access policies for newly discovered devices and map user's role-based access to specific category and manufacturer or profile group of IoT devices.

Benefits


The IoT Policy Provisioning Page enables you to quickly configure IoT policy provisioning and provides the following benefits:

- Discover and profile IoT devices using Profiler. Profiler enables you to continuously monitor the network and discover new devices such as security cameras, sensors, Industrial IoT devices (IIoT), medical sensors, and so on.
- PPS provides IoT access control using the IoT Access Policies, which are created automatically based on profiled or newly discovered device information from Profiler.
- Reduce IoT/IIoT machine downtime by allowing authorised users to get a role-based access to specific IoT/IIoT device for troubleshooting/maintenance.
- Automatic access control for the newly discovered IoT devices.

Deployments

The below network diagram depicts how PPS, Profiler, and SRX/PAN Firewall can be deployed to protect access to IoT devices. For example, the manufacturing domain consists of different IoT devices to monitor and control the manufacturing process. The industrial IoT devices are separated and controlled behind the firewall. PPS enables you to define IoT Access Policy using the Profiler attributes (category and manufacturer or profile group) and provides secure and seamless access to IoT devices for authorized users.

Figure: IoT Device Deployment

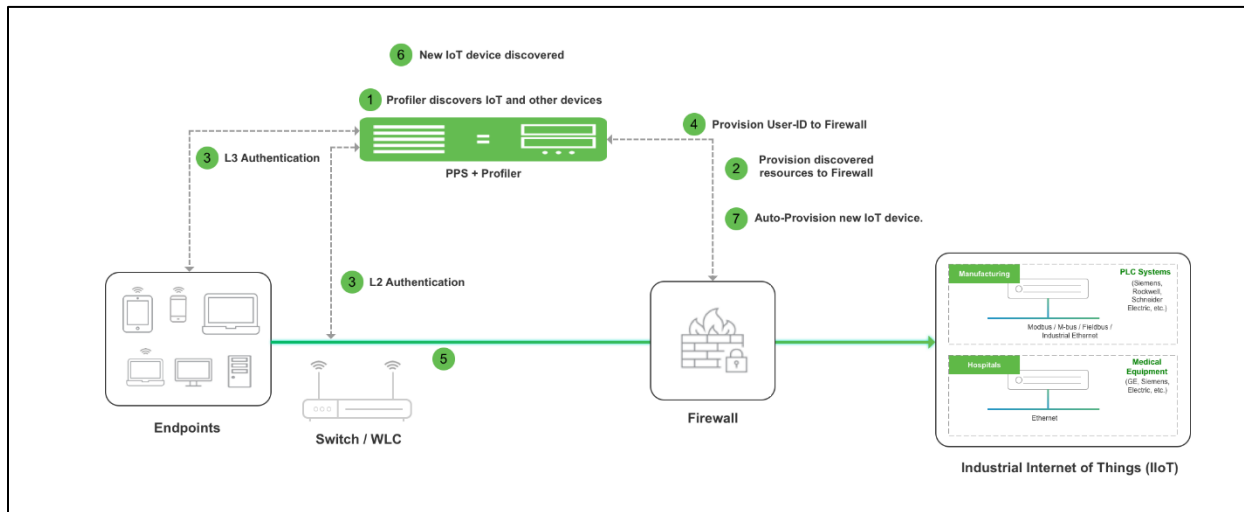

The workflow is described below:

1. A local Profiler configured on PPS discovers devices including IoT devices connected to corporate network.
2. PPS leverages the list of IoT devices discovered using Profiler and based on device category and manufacturer or profile group and it enforces or controls the access to IoT devices protected by the firewall.
3. User authenticates to PPS and endpoint compliance is evaluated. The user session is created on PPS and appropriate role is assigned based on the compliance check and user ID.
4. User Identity details (AuthTable) are provisioned to firewall.
5. User tries to access IoT devices protected by firewall. Authorised users (based on roles) are allowed to access IoT devices. Access to IoT devices by unauthorised users is blocked.
6. A new IoT device is added to the corporate network and same is discovered by Profiler.
7. IoT Access Policy for the newly discovered IoT device is automatically pushed to SRX/PAN firewall.



Note:

- Only Local Profiler is currently supported.
- The Administrator can group the discovered devices based on any Profiler attributes. For more information see, Configuring Profiler Groups.

Configuring IoT Policy Provisioning

This section covers the procedure for configuring IoT Policy Provisioning on PPS.

- [Basic Configurations](#)
- [Configuring IoT Access Policy](#)
- [Configuring Additional Device Category/Profile Groups](#)

Pre-Requisite

IoT Policy Provisioning requires Profiler feature. You must install the Profiler license on PPS to enable it.

Summary of Configuration

A high-level overview of the configuration steps needed to set up IoT Policy Provisioning is shown below.

Step 1: Configure Profiler

Step 2: Configure SRX/PAN Enforcer

Step 3: Configuring IoT Access Policy

Step 3.1: Viewing Devices in Enforcer Policy Report

Step 3.2: Configuring IoT Access Policy

Step 4: Configuring Additional Device Category/Profile Groups


Basic Configurations

The basic configuration page enables you to configure Profiler to discover IoT devices in the network, Enforcer to push the user identity information to PPS, and IoT Access Policy for IoT devices.

To launch the configuration page:

1. Select **Endpoint Policy > IoT Access > IoT Policy Provisioning**.
2. Click **Basic Configuration**.

Figure: Policy Provisioning- Basic Configurations

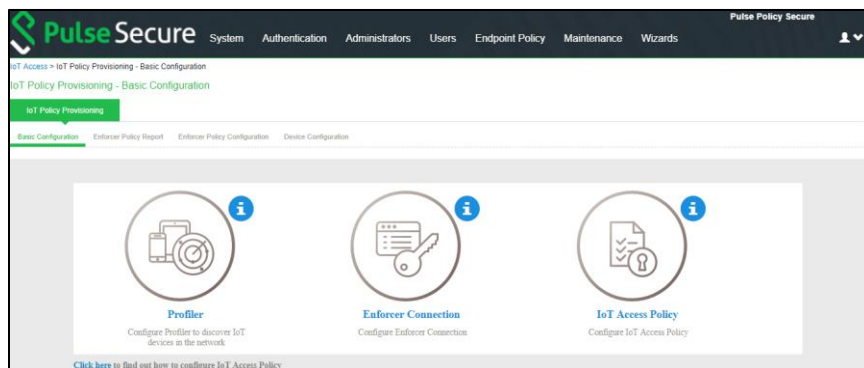



Note: If PPS is already configured with Profiler and Enforcer. The configurations will be reused.

3. Configure the Profiler used to discover the IoT devices in the network. Click **Profiler** and configure the local Profiler. See [Profiler Deployment Guide](#) for complete configuration.

The icons in the configuration page indicate the status of configuration.

- Green Tick mark refers that this section is configured correctly.
- If the configuration section is in grey color, it indicates that the section is not configured.
- Information icon refers that this section has to be configured.

Figure: Profiler Settings

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Auth Servers > Profiler > Settings

Settings Troubleshooting Browse Fingerprints

* Name: (Label to reference this server)

Fingerprint Database File

No file chosen [Browse](#) [Upload and Save](#)

Last uploaded version: 32 | Last imported on: Thu Jun 14 12:14:00 2018

General Settings

* Poll Interval: (Minutes. Specify the interval to check Switch for connected endpoints. Default=60 (minimum=5). To discover devices, configure one or more switches under [Network Infrastructure Device](#).)

* DHCP Sniffing mode: (Select an option based on your DHCP forward mode.)

Device Sponsoring

Select device categories that will trigger an email to the admin for approval. Create a role-mapping rule based on "status" attribute to assign the device to the respective role before and after approval. Note: Devices can be approved or unapproved from the [Device Discovery Report](#).

☐ BSD ☐ Datacenter appliance ☐ Gaming Consoles ☐ Home Audio/Video Equipment ☐ Internet of Things (IoT)

☐ Linux ☐ Macintosh ☐ Medical Device ☐ Monitoring Devices ☐ Network Boot Agents

☐ Other OS ☐ Physical Security ☐ Point of Sale devices ☐ Printers/Scanners ☐ Projectors

☐ Routers and APs ☐ Smartphones/PDAs/Tablets ☐ Storage Devices ☐ Switches ☐ Thin Clients

☐ Video Conferencing ☐ VoIP Phones/Adapters ☐ Windows

Approver's email address to send notifications. Multiple addresses can be separated by a semicolon(,).

SMTP server configuration is required for sending emails. Currently SMTP server is not enabled. [Click here to configure](#).

* URL for Device Discovery Report. If it is empty in the configuration screen as a link for quick access to the devices that need approval. Profiler hostname or IP address is needed to complete the URL.

(IANA-admin/reporting/report_device_discovery.cgi)

Endpoints to scan using NMAP/SSH

Once devices are discovered using DHCP, SNMP or other mechanisms, more granular profiling is done only for those devices using NMAP, SSH and SSH active scan. Use the following subnets configuration to either allow, or disallow, both scans. Maximum 100 subnets.

[Delete](#) [Add](#)

| Subnet | Include/Exclude | Collector | Example Subnet |
|---|--|---------------------|---|
| <input type="checkbox"/> Include <input checked="" type="radio"/> Exclude | <input checked="" type="checkbox"/> NMAP <input type="checkbox"/> WMI <input type="checkbox"/> SSH | Add | Valid CIDR Format: 192.168.1.0/24 10.255.0.0/16 IP or IP Range: 10.10.10.10 10.10.10.10-100 10.10.1.1-10.10.1.200 |

WMI Profiling

* Configure WMI credentials. ☐ Use Active Directory server credentials.

* User: (User or domain\user or user@domain.com for endpoints.)

* Password: [Test Credentials](#)

Endpoint IP or hostname on which credentials can be tested

SSH Profiling

Authentication Method:

* User: (RSA key owner)

* Private key: (RSA private key)

passphrase: (Passphrase used for generating key)

[Test Credentials](#)

Endpoint IP or hostname on which credentials can be tested

MDM Server

MDM server: (Specify an MDM server that the Profiler may connect to collect additional endpoint attributes)

[Save Changes](#) [Reset](#)

- Configure the SRX/PAN Enforcer. Click **Enforcer Connection** and add SRX/PAN as a New Enforcer.

Figure: SRX Enforcer

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Intranet Enforcer > Connection > SRX

SRX

Connection

Intranet Enforcer

Platform: JUNOS SRX Platform of this Intranet Enforcer.

* Name: SRX Label to reference this Intranet Enforcer.

* Password: ***** Connection password.

* Serial number(s): CF1314AK0016 One per line.

Location Group: - No 802.1X - To manage groups, see the [Location Group](#)

Coordinated Threat Control

Note that not all enforcer versions and platforms have an IDP module.

☐ Use IDP Module as Sensor

Save Changes

* indicates required field

Figure: PAN Enforcer

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Intranet Enforcer > Connection > pan

pan

Connection

Intranet Enforcer

Platform: Palo Alto Networks Firewall Platform of this Intranet Enforcer.

* Name: pan Label to reference this Intranet Enforcer.


* IP Address: 192.168.1.1 IP Address of this Intranet Enforcer

* API Key: [masked] Auto-completed when you retrieve the API Key

Server Certificate Validation: ☐ Enable this option to verify the firewall's certificate

Save Changes

Once the configuration is complete and successful, the Administrator can see the configuration status as shown below.

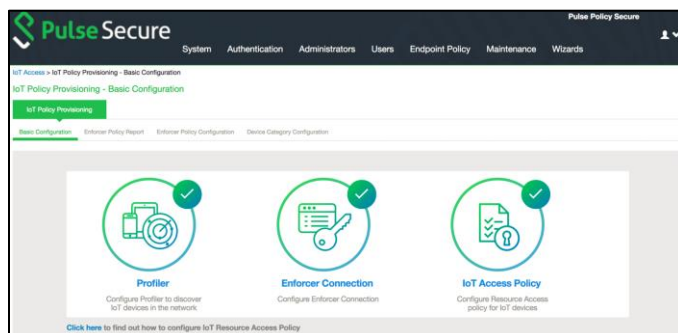

Configuring IoT Access Policy

- Viewing Devices in Enforcer Policy Report
- Configuring IoT Access Policy using Juniper SRX Firewall
- Configuring IoT Access Policy using Palo Alto Networks Firewall


Viewing Devices in Enforcer Policy Report

This page provides details of discovered and connected IoT device's and firewall policies applied for IoT devices. You can view details such as total number of IoT devices, number of IoT devices enforced, number of IoT devices not enforced, and IoT device manufacturers.

To view the enforcer policy report:

1. Select **Endpoint Policy > IoT Access > IoT Policy Provisioning**.
2. Click **Enforcer Policy Report**.

Figure: Enforcer Policy Report

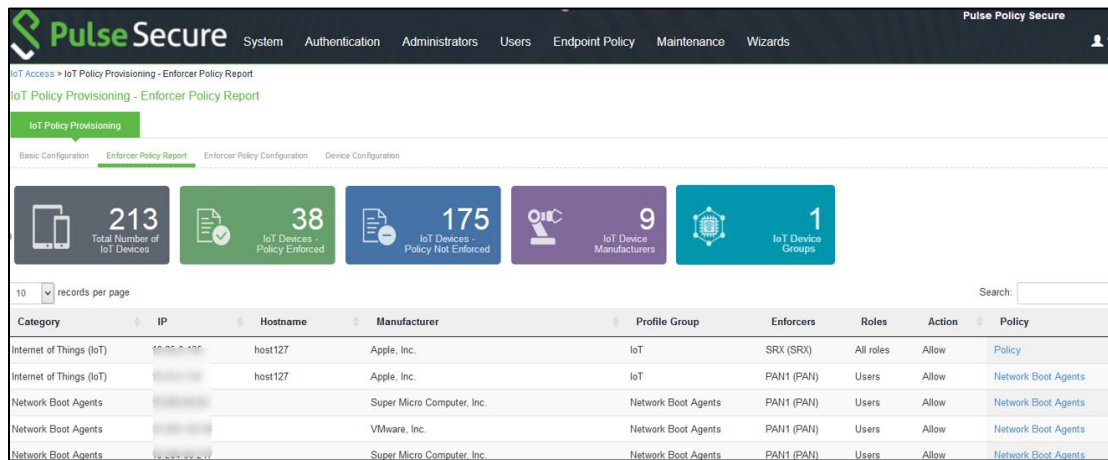


Configuring IoT Access Policy using Juniper SRX Firewall

The IoT access policy specifies which users are allowed or denied access to a set of protected resources. You can specify which users you want to allow or deny by choosing the roles for each IoT Access Policy. The IoT Access Policy page enables you to configure the policy based on device details using Profiler device attributes, such as device category and manufacturer or profile group.

When the network Administrator selects category and manufacturer or profile group information under device details the IP addresses of the corresponding discovered devices get automatically updated under Resources. Hence the Administrator can seamlessly create IoT Access Policy of profiled devices based on device category, device manufacturer attributes, or Profiler group. If the Administrator wants to have granular control over the IoT devices, further control can be achieved by providing specific port and protocol. The specified port and protocol configuration is applied to all the discovered devices of the selected category and manufacturers.

To configure IoT access policy:

1. Select **Endpoint Policy > IoT Access > IoT Policy Provisioning > Enforcer Policy Configuration**.
2. Click **New Policy**.
3. Enter the Policy name.
4. Enter a description.
5. Under Infranet Enforcer, select the Platform as **Junos SRX**.
6. Under **Device Details**, specify whether the policy should be applied based on device category and manufacturer or Profile group.
 - a. Category and manufacturer
 - i. Specify the category from the drop-down list. The values in the drop-down list is populated based on the Device category configuration (IoT Access > IoT Policy Provisioning - Device Configuration).
 - ii. Select the Device manufacturer from the Available Device Manufacturers.
 - iii. Specify the protocol (TCP/UDP/ICMP) and Port/Range to be applied to the discovered devices.
 - b. Profile Group
 - i. Configure the Profiler Group (IoT Access > IoT Policy Provisioning - Device Configuration). To configure Profiler Groups, [Configuring Profiler Groups](#).
 - ii. Select the Profile Group from the Available Profile Groups.
 - iii. Specify the protocol (TCP/UDP/ICMP) and Port/Range to be applied to the discovered devices.

 Note: Port ranges must be configured in dash-separated, comma-delimited, ascending, and non-overlapping order. Multiple port ranges must be separated by a comma. For example, the following examples show the delimiters that are used to enter port ranges: (80, 443, 1-1024, 1-100, 500-600).

The Port/Range entered will be applied to all the discovered devices. If you want to enter different port values, you can edit the port value under Resources table.

- c. Select **Auto-Update Newly Discovered Devices** to automatically add IoT Access Policy for the newly discovered devices from the selected category and manufacturer or Profile Group.

For example, If a policy is created for IoT device category with manufacturer or Profile Group with **Auto-Update**

Newly Discovered Devices enabled then for any new IoT device discovered with the selected manufacturer, a IoT Access Policy is automatically added to firewall. If port and protocol are specified in the "Device Details" panel, the policy for the newly discovered devices is applied for specified port and protocol.

7. Under Resources, the IoT devices will be auto populated using the Device details configuration described earlier. If the administrator wants to apply policies on different ports for different discovered devices, the port configuration can be edited. If the Admin selects multiple protocol (for example, TCP and UDP) then the device entries appear twice with protocol information in the Resources table. The Admin can choose whether to push the policies for the selected resource based on the IP address, Protocol, and Port information to enforcer by enabling/disabling the checkbox in the resources table.
8. Select the desired Roles for which the policy applies. For example, IoT Administrator.

9. Under Actions, select whether to allow access or deny access.
10. Click **Save Changes**.

Figure: Junos SRX Enforcer Policy Configuration

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

IoT Access > IoT Policy Provisioning > Enforcer Policy Configuration > iot-group

iot-group

General

* Name: iot-group
 Description:

Intranet Enforcer

Platform: ☒ JUNOS SRX ☐ Palo Alto Networks Firewall

Specify the Intranet Enforcer(s) to which this policy applies.
 (Applicable for only Juniper and Palo Alto Networks Firewalls.)

Available Enforcers: SRX_Cluster (SRX)
 Selected Enforcers: SRX650_89_109 (SRX)

Device Details

Specify the filter for getting resources.

☐ Category and Manufacturer
☒ Profile Group

Click here to configure Device Category or Profile Group.
 Select the profile group(s) for which this policy applies.

Available Profile Group(s):
 Selected Profile Group(s): iot-group1

Specify Protocol and PortRange which will be applied to the discovered devices.

Protocol: ☒ TCP ☐ UDP ☐ ICMP
 Port:
Examples: 80 or 80,433 or 1-1024 or 8080,1-1024,8082 or 1-1024,8080 or 1-100,500-600 etc.

☒ Auto-Update Newly Discovered Devices.

Resources

Resources will be auto-populated using the configuration specified in Device Details panel, port field is editable.
 Policy for the selected resources will be pushed to enforcer.

10 records per page Search:

| IP | Protocol | Port | |
|----------------|----------|----------------------|-------------------------------------|
| 10.204.88.72 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.204.88.98 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.209.114.225 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.209.114.226 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.209.114.227 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.204.88.160 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.204.88.69 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.204.88.158 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.209.114.228 | | <input type="text"/> | <input checked="" type="checkbox"/> |
| 10.209.114.193 | | <input type="text"/> | <input checked="" type="checkbox"/> |

Showing 1 to 10 of 24 entries

Roles

☐ Policy applies to ALL roles
☒ Policy applies to SELECTED roles
☐ Policy applies to all roles OTHER THAN those selected below

Available roles: Contractor_FullAccess_Role, Contractor_LimitedAccess_Role, FullAccess_Role, Guest, Guest Admin
 Selected roles: Blocked_Users_Role

Actions

☐ Allow access
☒ Deny access


Deny / Reject Message:
Shell message displayed to users when traffic is denied or rejected. "{SOURCEIP}", "{DESTIP}", "{DESTPORT}", and "{PROTOCOL}" in the message are replaced with the source IP address, destination IP address, destination port, and protocol of the denied traffic. "{USER}" in the message is replaced with the name of the user.

NOTE: changes to this page will cause a slight interruption of service for Intranet Enforcer Resource Policies users.

Save Changes **Save as Copy**

Once the policy is successfully added, it can be viewed as shown below.

| Pulse Secure | | | | | | | | | |
|--|-----------|--------------------------|-----------------------------|----------------|-------------|---------------------|--------------------|---|--------|
| System Authentication Administrators Users Endpoint Policy Maintenance Wizards | | | | | | | | | |
| New Policy Delete | | | | | | | | | |
| Showing 1 to 3 of 3 entries 10 records per page Search: | | | | | | | | | |
| | Policy | Category | Manufacturers | Profile Groups | Auto-Update | Enforcers | Roles | Resources | Action |
| <input type="checkbox"/> | iot-group | | | iot-group1 | ON | SRX650_89.109 (SRX) | Blocked_Users_Role | 10.204.88.72.* 10.204.88.98.* 10.209.114.225.* 10.209.114.226.* 10.209.114.227.* 10.204.88.69.* 10.204.88.158.* 10.209.114.228.* 10.209.114.193.* More... | Deny |
| <input type="checkbox"/> | iot-cat | Smartphones/PDAs/Tablets | HUAWEI TECHNOLOGIES CO.,LTD | | ON | SRX650_89.109 (SRX) | All roles | 10.209.123.81.* 10.204.90.58.* 10.209.122.142.* 10.204.90.73.* 10.209.123.109.* 10.209.123.88.* 10.204.90.23.* 10.209.123.33.* 10.204.90.35.* 10.209.123.31.* More... | Allow |

 Note: The Device Details panel is only available when IoT Access Policy is created using IoT Policy Provisioning > Enforcer Policy Configuration.

Configuring IoT Access Policy using Palo Alto Networks Firewall

The IoT access policy specifies which users are allowed or denied access to a set of protected resources. You can specify which users you want to allow or deny by choosing the roles for each IoT Access Policy. The IoT Access Policy page enables you to configure the policy based on device details using Profiler device attributes, such as device category and device manufacturer or Profile Group.

When the network Administrator selects category and manufacturer or Profile Group information under device details the IP addresses of the corresponding discovered devices get automatically updated under Resources. Hence the Administrator can seamlessly create IoT Access Policy of profiled devices based on device category, device manufacturer attributes, or Profiler group. If the Administrator wants to have granular control over the IoT devices, further control can be achieved by providing specific port and protocol. The specified port and protocol configuration is applied to all the discovered devices of the selected category and manufacturers.

To configure IoT access policy:

1. Select **Endpoint Policy > IoT Access > IoT Policy Provisioning > Enforcer Policy Configuration**.
2. Click **New Policy**.
3. Enter the Policy name.
4. Enter a description.
5. Under Infranet Enforcer, select the Platform as **Palo Alto Networks Firewall**.
6. Under Security Zones, specify the firewall security zones (source zone/destination zone) for the policy. Multiple zones can be specified with comma separated values. If zones are not specified, then it applies to all zones.
7. Under Service, select any to allow all TCP and UDP ports (default) or select the service to specify the TCP or UDP port or port range. The policy port and protocol configuration remains same for all the resources.
8. Under **Device Details**, specify whether the policy should be applied based on device category and manufacturer or Profile group.
 - a. Category and manufacturer
 - i. Specify the category from the drop-down list. The values in the drop-down list is populated based on the Device category configuration (IoT Access > IoT Policy Provisioning - Device Configuration).
 - ii. Select the Device manufacturer from the Available Device Manufacturers.
 - iii. Specify the protocol (TCP/UDP) and Port/Range to be applied to the discovered devices.
 - b. Profile Group
 - i. Configure the Profiler Group (IoT Access > IoT Policy Provisioning - Device Configuration). To configure Profiler Groups, see [Configuring Profiler Groups](#).
 - ii. Select the Profile Group from the Available Profile Groups.
 - iii. Specify the protocol (TCP/UDP) and Port/Range to be applied to the discovered devices.



Note: Port ranges must be configured in dash-separated, comma-delimited, ascending, and non-overlapping order. Multiple port ranges must be separated by a comma. For example, the following examples show the delimiters that are used to enter port ranges:(80, 443, 1-1024, 1-100, 500-600).

The Port/Range entered will be applied to all the discovered devices.

- c. Select **Auto-Update Newly Discovered Devices** to automatically add IoT Access Policy for the newly discovered devices from the selected category and manufacturer or Profile Group.

For example, If a policy is created for IoT device category with manufacturer or Profile Group with **Auto-Update Newly Discovered Devices** enabled then for any new IoT device discovered with the selected manufacturer, a IoT Access Policy is automatically added to firewall. If port and protocol are specified in the "Device Details" panel, the policy for the

newly discovered devices is applied for specified port and protocol.

9. Under **Resources**, the IoT devices will be auto populated using the Device details configuration described earlier. If the administrator wants to apply policies on different ports and protocols for different discovered devices, the port configuration can be edited. If the Admin selects multiple protocol (for example, TCP and UDP) then the device entries appear twice with protocol information in the Resources table. The Admin can choose whether to push the policies for the selected resource based on the IP address, Protocol, and Port information to enforcer by enabling/disabling the checkbox in the resources table.
10. Select the desired Roles for which the policy applies. For example, IoT Administrator.
11. Under **Actions**, select whether to allow access or deny access.
12. Click **Save Changes**.

Figure: Palo Alto Networks Firewall Enforcer Policy Configuration

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

IoT Access > IoT Policy Provisioning > Enforcer Policy Configuration > New Policy

New Policy

Name: Required: Label to reference this policy.

Description:

Inherent Enforcer

Platform: ☐ JUNOS SRX ☒ Palo Alto Networks Firewall

Specify the Inherent Enforcers to which this policy applies. (Applicable for only Juniper and Palo Alto Networks Firewalls.)

Available Enforcers:

Selected Enforcers:

Security Zones

Specify firewall security zones for this policy. If security zones are not specified, then it applies to all zones i.e. any. Multiple zones can be specified with comma separated. Example: trust,mgmt

Source Zone:

Destination Zone:

Device Details

Specify the filter for getting resources.

☐ Category and Manufacturer ☒ Profile Group

[Click here to configure Device Category or Profile Group](#)

Select the profile group(s) for which this policy applies.

Available Profile Group(s):

Selected Profile Group(s):

Service:

☒ Auto-Update Newly Discovered Devices.

Resources

Resources will be auto-populated using the configuration specified in Device Details panel, port field is editable. Policy for the selected resources will be pushed to enforcer.

10 records per page Search:

| IP | Protocol | Port | |
|----------------|----------|------|-------------------------------------|
| 10.204.88.72 | | | <input checked="" type="checkbox"/> |
| 10.204.88.98 | | | <input checked="" type="checkbox"/> |
| 10.209.114.225 | | | <input checked="" type="checkbox"/> |
| 10.209.114.226 | | | <input checked="" type="checkbox"/> |
| 10.209.114.227 | | | <input checked="" type="checkbox"/> |
| 10.204.88.160 | | | <input checked="" type="checkbox"/> |
| 10.204.88.69 | | | <input checked="" type="checkbox"/> |
| 10.204.88.158 | | | <input checked="" type="checkbox"/> |
| 10.209.114.228 | | | <input checked="" type="checkbox"/> |
| 10.209.114.193 | | | <input checked="" type="checkbox"/> |

Showing 1 to 10 of 24 entries

Roles

☐ Policy applies to ALL roles ☒ Policy applies to SELECTED roles ☐ Policy applies to all roles OTHER THAN those selected below

Available roles:

Selected roles:

Actions

☒ Allow access ☐ Deny access

NOTE: changes to this page will cause a night interruption of service for Inherent Enforcer Resource Policies users.

Once the policy is successfully added, it can be viewed as shown below.

Pulse Secure

System

Authentication

Administrators

Users

Endpoint Policy

Maintenance

Wizards

Pulse Policy Secure

IoT Access > IoT Policy Provisioning - Enforcer Policy Configuration

IoT Policy Provisioning - Enforcer Policy Configuration

IoT Policy Provisioning

Basic ConfigurationEnforcer Policy ReportEnforcer Policy ConfigurationDevice Configuration

Info: Successfully saved policy.IoT_Group

Show policies that apply to Enforcer: All Enforcers Update

New PolicyDelete

Showing 1 to 2 of 2 entries 10 records per page

Search:

| | Policy | Category | Manufacturers | Profile Groups | Auto-Update | Enforcers | Roles | Resources | Action |
|--------------------------|-----------|--------------------------|--------------------------------|----------------|-------------|-----------|-------|---|--------|
| <input type="checkbox"/> | IoT | Internet of Things (IoT) | AMERICAN POWER CONVERSION CORP | | ON | pan (PAN) | Users | tcp://10.25.15.11:443 tcp://10.25.15.12:443 tcp://10.25.15.13:443 tcp://10.25.15.14:443 tcp://10.25.15.15:443 tcp://10.25.15.16:443 tcp://10.25.15.177:443 tcp://10.25.15.24:443 tcp://10.204.48.2:443 | Allow |
| <input type="checkbox"/> | IoT_Group | | | IoT Group | ON | pan (PAN) | Users | tcp://10.204.48.241:443 tcp://10.204.49.21:443 tcp://10.204.49.243:443 tcp://10.204.48.217:443 tcp://10.204.49.122:443 tcp://10.204.49.187:443 tcp://10.204.49.59:443 tcp://10.204.49.30:443 tcp://10.204.49.28:443 tcp://10.204.49.39:443 | Allow |

More



Note:

Resource Access Policy and IoT Policy Provisioning with Palo Alto Network's Firewall works only with default Virtual System "vsys1" and default device name "localhost.localdomain" configuration.

Configuring Additional Device Category/Profile Groups

The Internet Of Things (IoT) device category is selected by default and hence it is visible by default on IoT policy enforcer report and Policy Configuration page. However, If the Administrator wants to use IoT Policy Provisioning feature for other Profiler supported categories such as Video Conferencing Devices, Printers/Scanners, Medical device, Storage device and so on additional categories can be configured on this page.

Under Profile Groups, Admin can select the groups that should be used with IoT Policy Provisioning feature. Only the selected Profile Groups are shown while creating IoT access policy using Profile Groups. If none of the Profile Groups are selected in Device Configuration tab then no groups are shown in IoT access policy. To create IoT access policy using Profile Groups, the same needs to be selected in the Device Configuration tab.

Figure: Device Category Configuration


The screenshot shows the 'IoT Policy Provisioning - Device Configuration' page in the Pulse Secure interface. The page has a dark header with the Pulse Secure logo and navigation tabs: System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. Below the header, a breadcrumb trail shows 'IoT Access > IoT Policy Provisioning - Device Configuration'. A green tab labeled 'IoT Policy Provisioning' is active. Below this, a sub-tab bar shows 'Basic Configuration', 'Enforcer Policy Report', 'Enforcer Policy Configuration', and 'Device Configuration' (which is highlighted in green). The main content area is titled 'Device Category' and contains the instruction 'Select device categories that will be used for IoT policy provisioning.' Below this, there are two sections: 'Device Category' and 'Profile Group'. The 'Device Category' section lists various categories with checkboxes: BSD, Macintosh, Point of Sale devices, Switches, Datacenter appliance, Medical Device, Printers/Scanners, Thin Clients, Gaming Consoles, Monitoring Devices, Projectors, Video Conferencing, Home Audio/Video Equipment, Network Boot Agents, Routers and APs, VoIP Phones/Adapters, Internet of Things (IoT) (checked), Other OS, Smartphones/PDAs/Tablets, Windows (checked), Linux, Physical Security, and Storage Devices. The 'Profile Group' section lists 'IoT' (checked), 'Network Boot Agents' (checked), 'Network Boot Agents-1', and 'Operating System'. At the bottom left, there is a link 'Click here to view or configure Profile Groups.' and a 'Save Changes' button.

Configuring Profiler Groups

Administrator can create different Profile Groups by using different Profiler attributes (for example, group all IoT devices with manufacturer Schneider Electric and Operating System Linux) and combine discovered devices in a group. If an Admin wants to provision IoT Access policy using attributes other than Category and Manufacturer, a Profile Group can be created to group discovered devices and then IoT Policy Provisioning feature can be used for the resources belonging to Profile Group.

To configure Profiler Groups:

1. Select the Profiler server under **Authentication > Auth. Servers**.
2. Select Profile Groups tab, select the **New Profile Group**.
3. Enter the Group Name and Rule. The rules can be written with device attributes and suggested operators can be chosen from the list.
4. As an optional step, emails also can be configured which results in notifications for any group related changes.

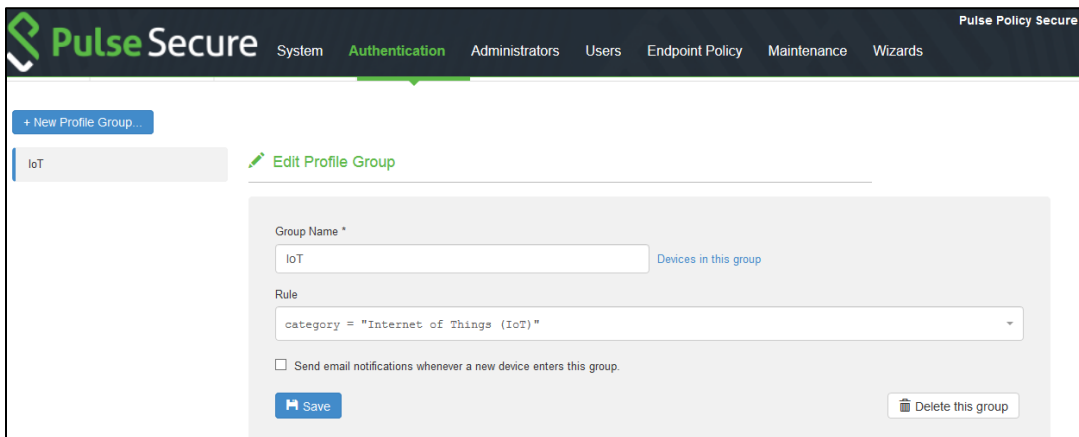

5. Click **Save Changes**.

Troubleshooting


The event and debug logs can be used for troubleshooting:

- The Event logs are generated whenever the policies are pushed to firewall.
- The Admin Logs are generated upon policy provisioning and auto updation of newly discovered devices.

You can also use **Maintenance > Troubleshooting > Monitoring > Debug Log** for debugging issues.

If the device is not discovered properly in the IoT Policy Provisioning > Enforcer Policy Report page check the Device Discovery Report page for the device category.


The PPS created policies on PAN firewall should not be modified by the PAN admin. The PPS created policies on Palo Alto Networks firewall are tagged as *Pulse Secure Managed*.

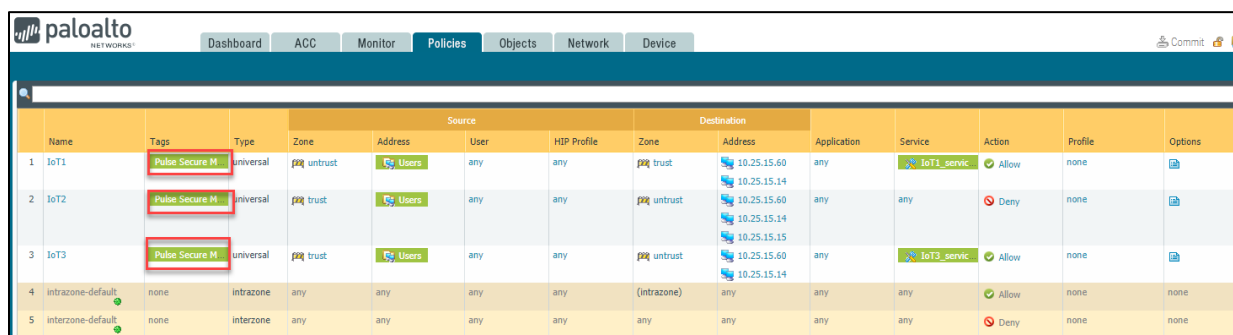

| Name | Tags | Type | Zone | Source | Destination | Application | Service | Action | Profile | Options |
|---------------------|----------------|-----------|-------|--------|-------------|-------------|-------------|--------|---------|---------|
| 1 IoT1 | Pulse Secure M | universal | trust | any | any | any | IoT1_servic | Allow | none | |
| 2 IoT2 | Pulse Secure M | universal | trust | any | any | any | any | Deny | none | |
| 3 IoT3 | Pulse Secure M | universal | trust | any | any | any | IoT3_servic | Allow | none | |
| 4 intrazone-default | none | intrazone | any | any | (intrazone) | any | any | Allow | none | none |
| 5 interzone-default | none | interzone | any | any | any | any | any | Deny | none | none |

Event Logs

To view the communication between PPS and Infranet Enforcer enable **Enforcer Command Trace** under Events > Settings.

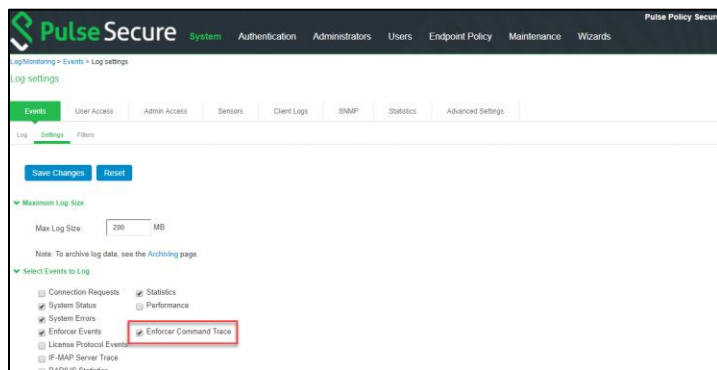

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Monitoring > Events > Log settings

Log settings

Events User Access Admin Access Sensors Client Logs SNMP Statistics Advanced Settings

Log Settings Filter

Save Changes Reset

Maximum Log Size

Max Log Size: 200 MB

Note: To archive log data, see the Archiving page.

Select Events to Log

☐ Connection Requests
 ☒ Statistics
 ☐ System Status
 ☐ Performance
 ☒ System Events
 ☐ Enforcer Events
 ☒ Enforcer Command Trace
 ☐ License Protocol Events
 ☐ IP-MAP Server Trace
 ☐ RADIUS Statistics

A sample event log is shown below.

Admission Control Using Network Security Devices

This part covers the following chapter:

- [Alert Based Admission Control using Fortinet Products](#)
- [Alert Based Admission Control using PAN Next Generation Firewall](#)
- [Alert Based Admission Control using Juniper SDSN](#)

Alert Based Admission Control using Fortinet Products

This chapter provides an overview of enforcement using Fortinet firewall. It includes the following information:

- [Overview](#)
- [Configuring PPS with Fortinet Products](#)
- [Configuring Fortinet Products](#)
 - [Configuring FortiGate Firewall](#)
 - [Configuring FortiGate Analyser](#)
- [Troubleshooting](#)

Overview

PPS integration with network security devices provide user access control based on the threats identified by the network security devices. The network security device provides intelligence driven detection of threats based on the intrusion prevention system. This helps in detecting the unknown threats and also reduces the false alarms. The network security device uses the syslog events or REST API mechanism to notify the other devices regarding the network threats. PPS also supports dynamically changing the access to the user based on the information received from the network security device.


The admission control user flow is as follows:

1. The user logs into the PPS and a corresponding session is created on PPS.
2. The user starts accessing the resources and tries to access a restricted website or application.
3. The network security device identifies it as threat and generates a corresponding syslog event and sent to PPS.
4. PPS receives the threat information and based on the policies configured it modifies the user access. For example, changing user access, terminating user access and so on.

Deployment of PPS using Fortigate Products

This section describes the integration of PPS with Network Security Devices (For example, FortiAnalyser and FortiGate firewall). PPS integrates with Fortinet's syslog notification mechanism to receive the threat alert information from Fortinet and takes an action based on the admin configured policies.

Figure160: Deployment using FortiAnalyser and FortiGate Firewall

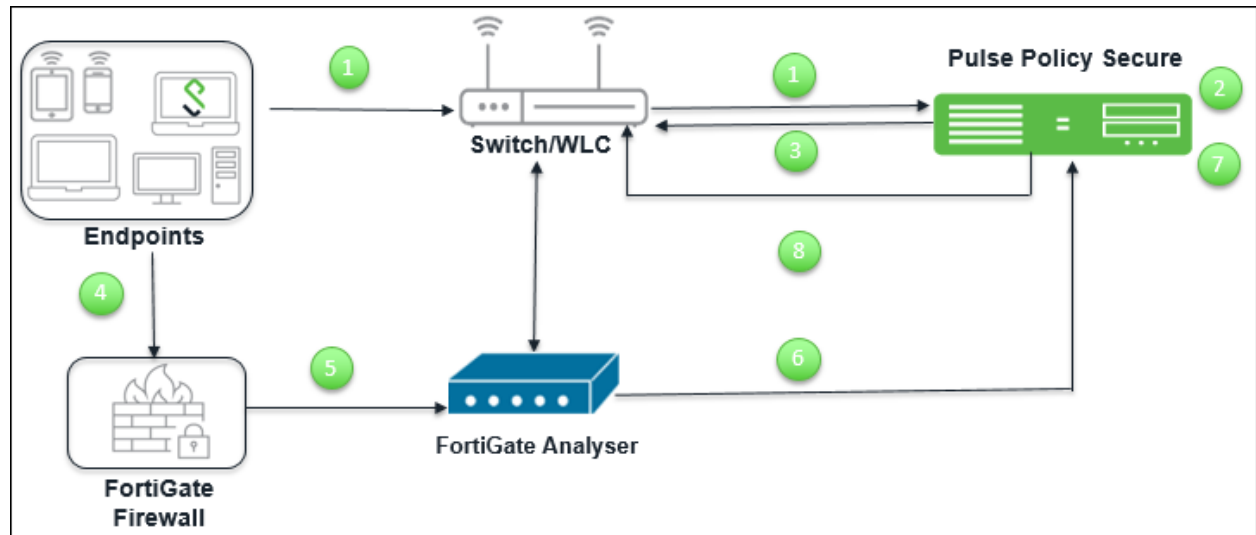

The authentication process is described below:

1. The user connects to PPS through Switch/WLC.
2. The user session is created on the PPS.
3. The user details are pushed to Switch for enforcing access to user.
4. The FortiGate firewall monitors the user traffic.
5. The FortiGate Analyser/Manager generates the syslog messages for the user.
6. The syslog message is sent to PPS if any suspicious traffic or activity is detected from the user.
7. PPS processes the received syslog message and based on the configured policies actions are taken.
8. New/Updated details are pushed to Switch for updating the enforcement of the user.

Note: The enforcement of the user is also updated on the Firewall.

Configuring PPS with Fortinet Products

The network security devices are configured with PPS for admission access control. A high-level overview of the configuration steps needed to set up and run the integration is described below:

- The Administrator configures the required syslog clients on PPS Admin UI.
The network security device acts as a syslog client on which syslog forwarding is enabled and PPS receives the forwarded syslog messages.
- The Administrator then configures a set of policies that define what actions are to be taken on user sessions, based on the data in the threat events.
- The user defined templates are used to map the data and the predefined variables. The predefined variables in the template are Rule Name, Source IP Address, Source User, and Severity.
- The templates for parsing the syslog messages from Fortinet Firewall/Analyser are available by default. The administrators can also add customised templates for integrating with other network security devices.

This section covers the following topics:

- [Admission Control Template](#)
- [Admission Control Policies](#)
- [Admission Control Client](#)

Admission Control Template


The admission control template parses the events based on the variables such as source IP, source user, rule name, and severity. The corresponding action such as terminating the session, disabling the user, changing the user role is taken based on the template configuration.

You can view the list of configured integration templates that provides the list of network security devices and the supported protocol type using Endpoint Policy > Admission Control > Templates.

To view and add the admission control templates:

1. Select **Endpoint Policy > Admission Control > Templates**.


Figure 161: Existing Template

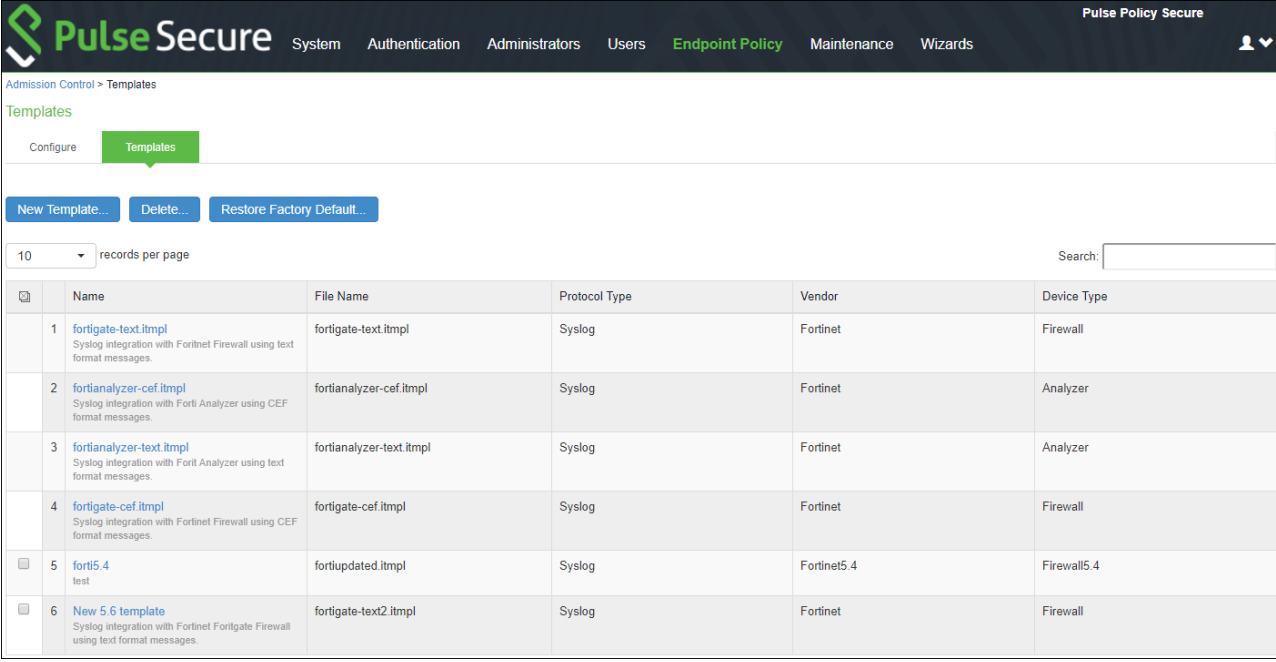

| | Name | File Name | Protocol Type | Vendor | Device Type |
|--------------------------|---|--------------------------|---------------|-------------|-------------|
| 1 | fortigate-text.itmpl Syslog integration with Fortinet Firewall using text format messages. | fortigate-text.itmpl | Syslog | Fortinet | Firewall |
| 2 | fortianalyzer-cef.itmpl Syslog integration with Forti Analyzer using CEF format messages. | fortianalyzer-cef.itmpl | Syslog | Fortinet | Analyzer |
| 3 | fortianalyzer-text.itmpl Syslog integration with Forti Analyzer using text format messages. | fortianalyzer-text.itmpl | Syslog | Fortinet | Analyzer |
| 4 | fortigate-cef.itmpl Syslog integration with Fortinet Firewall using CEF format messages. | fortigate-cef.itmpl | Syslog | Fortinet | Firewall |
| <input type="checkbox"/> | 5 forti5.4 test | fortiupdated.itmpl | Syslog | Fortinet5.4 | Firewall5.4 |
| <input type="checkbox"/> | 6 New 5.6 template Syslog integration with Fortinet Fortigate Firewall using text format messages. | fortigate-text2.itmpl | Syslog | Fortinet | Firewall |

2. Click **New Template**.

Figure 162: Adding New Configuration Template

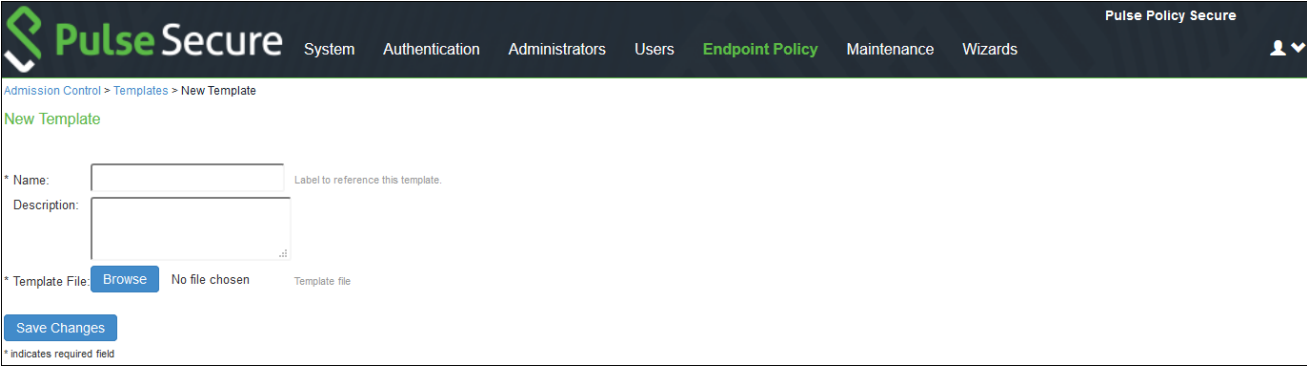

New Template

* Name: Label to reference this template.

Description:

* Template File: No file chosen Template file

* indicates required field

3. Enter the template name.

4. Enter the description.
5. Click **Browse** and select the template file.
6. Click **Save Changes**.


Admission Control Policies

The admission control policies define the list of actions to be performed on PPS for the user sessions. The actions are based on the specific threat event information received from the network security device.

To view and add the new integration policy:

1. Select **Endpoint Policy > Admission Control > Policies**.

Figure 163: Configuration Policies

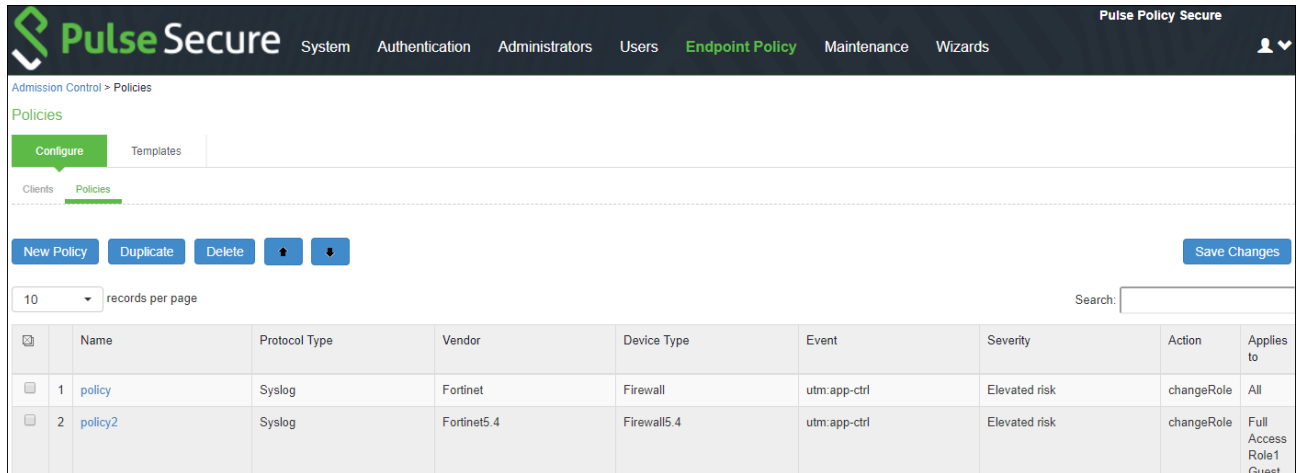

| | Name | Protocol Type | Vendor | Device Type | Event | Severity | Action | Applies to |
|---|---------|---------------|-------------|-------------|--------------|---------------|------------|-------------------------|
| 1 | policy | Syslog | Fortinet | Firewall | utm.app-ctrl | Elevated risk | changeRole | All |
| 2 | policy2 | Syslog | Fortinet5.4 | Firewall5.4 | utm.app-ctrl | Elevated risk | changeRole | Full Access Role1 Guest |

2. Click **New Policy**.
3. Enter the policy name.
4. Select the template used by the client. The following templates are available by default for Fortinet:
 - Fortinet-Firewall-Syslog-text
 - Fortinet-Analyzer-Syslog-CEF
 - Fortinet-Analyzer-Syslog-text
 - Fortinet-Firewall-Syslog-CEF
5. Under **Rule on Receiving**, select the event type and the severity level. The event types and the severity level are based on the selected template.
6. Under **Count these many times**, enter the number between 1-256.
7. Under **then perform this action**, select the desired action.
 - Ignore (log the event) —Received syslog event details are logged on the PPS and no specific action is taken.
 - Terminate user session— Terminates the user session on the PPS for the received messages.
 - Disable user account— Terminates the user session and disables the user on the PPS for the received messages.
 - Replace user role with this role— Changes the roles assigned to the user on PPS so that restriction/privileges for the user can be changed.
 - Specify whether to apply the role assignment permanently or only for the session.
8. Under **Roles**, specify:
 - Policy applies to ALL roles—To apply the policy to all users.
 - Policy applies to SELECTED roles—To apply this policy only to users who are mapped to roles in the Selected roles list. You must add roles to this list from the Available roles list.

- Policy applies to all roles OTHER THAN those selected below—To apply this policy to all users except for those who map to the roles in the Selected roles list. You must add roles to this list from the Available roles list.
9. Click **Save changes**.

Figure 164: Adding New Configuration Policy

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Admission Control > Policies > New Policy

New Policy

* Name: Label to reference this policy.

* Template: Fortinet-Firewall-Syslog-text Template used by the client

Selected Template Details

| Template name | Vendor | Device | Protocol | Format | Description |
|----------------------|----------|----------|----------|--------|---|
| fortigate-text.itmpl | Fortinet | Firewall | Syslog | text | Syslog integration with Fortinet Firewall using text format messages. |

▼ **Rule on receiving**

* Events: anomaly:anomaly Events supported

* Severity Level: Any Severity Levels supported

▼ **Count these many times**

* Count: 1 (1-256)

▼ **then perform this action**

☒ Ignore (just log the event)
☐ Terminate user session
☐ Disable user account
☐ Replace user's roles with this one Restricted_Role1
Restricted_Role2
Users
 Make this role assignment
☐ Permanent
☒ For this session only

▼ **Roles**

☒ Policy applies to ALL roles
☐ Policy applies to SELECTED roles
☐ Policy applies to all roles OTHER THAN those selected below

Available roles: Full Access Role1 Full Access Role2 Full Access Role3 Guest Guest Admin Add -> Remove

Selected roles: (none)

Save Changes

* indicates required field

Admission Control Client


The admission control clients are the network security devices on which the syslog forwarding is enabled. The messages are received by the syslog server module running on PPS.

For example, you can add Fortigate Firewall/Analyzer as a client on PPS to receive the required threat information through syslogs.

To add a client:

1. Select **Endpoint Policy > Admission Control > Clients**.

Figure 165: Admission Control Client

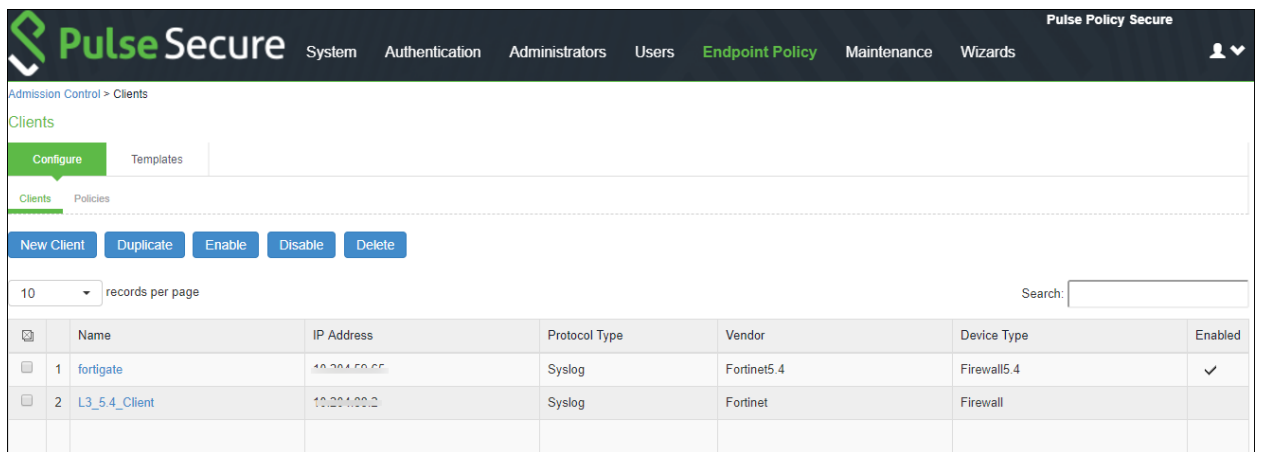

2. Click **New Client**.
3. Enter the name of the client that will be added in the PPS.
4. Enter the description.
5. Enter the IP address of the client.
6. Select the template used by the client.
 - Fortinet-Firewall-Syslog-text
 - Fortinet-Analyzer-Syslog-CEF
 - Fortinet-Analyzer-Syslog-text
 - Fortinet-Firewall-Syslog-CEF
7. Click **Save Changes**.

Figure 166: Adding Clients

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Admission Control > Clients > New Client

New Client

* Name: Label to reference this client.

Description:

* IP Address: IP Address of this client.

* Template: Fortinet-Firewall-Syslog-text Template used by the client

Selected Template Details

| Template name | Vendor | Device | Protocol | Format | Description |
|----------------------|----------|----------|----------|--------|---|
| fortigate-text.itmpl | Fortinet | Firewall | Syslog | text | Syslog integration with Fortinet Firewall using text format messages. |

[Save Changes](#)

* indicates required field


Configuring FortiGate Firewall

The PPS device must be added as a syslog server while configuring the Fortigate firewall for sending the logging information. You must add Fortigate firewall as syslog client on PPS.

To configure FortiGate firewall:


1. Select **Endpoint Policy > Admission Control > Clients**. Add the Fortigate Firewall as a Syslog Client on PPS.

Figure 167: Syslog Client

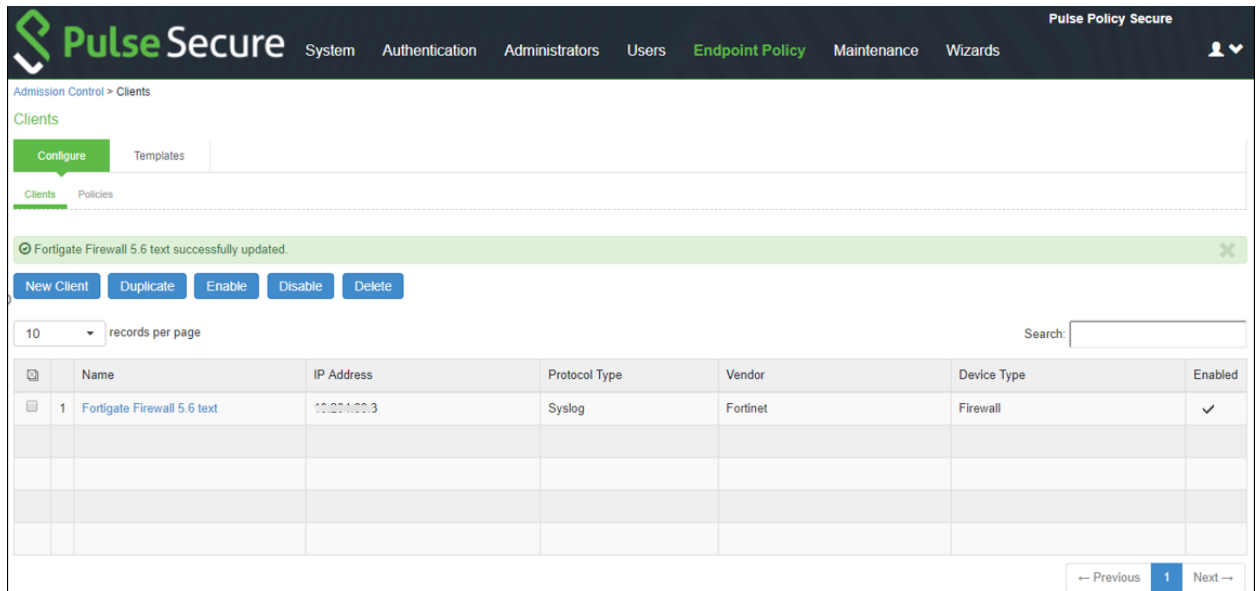

2. Under Log Settings, enable **Send Logs to Syslog**.
3. Enter the IP address of the PPS device and click **Apply** to add it as a syslog server.

Figure 168: Log Settings

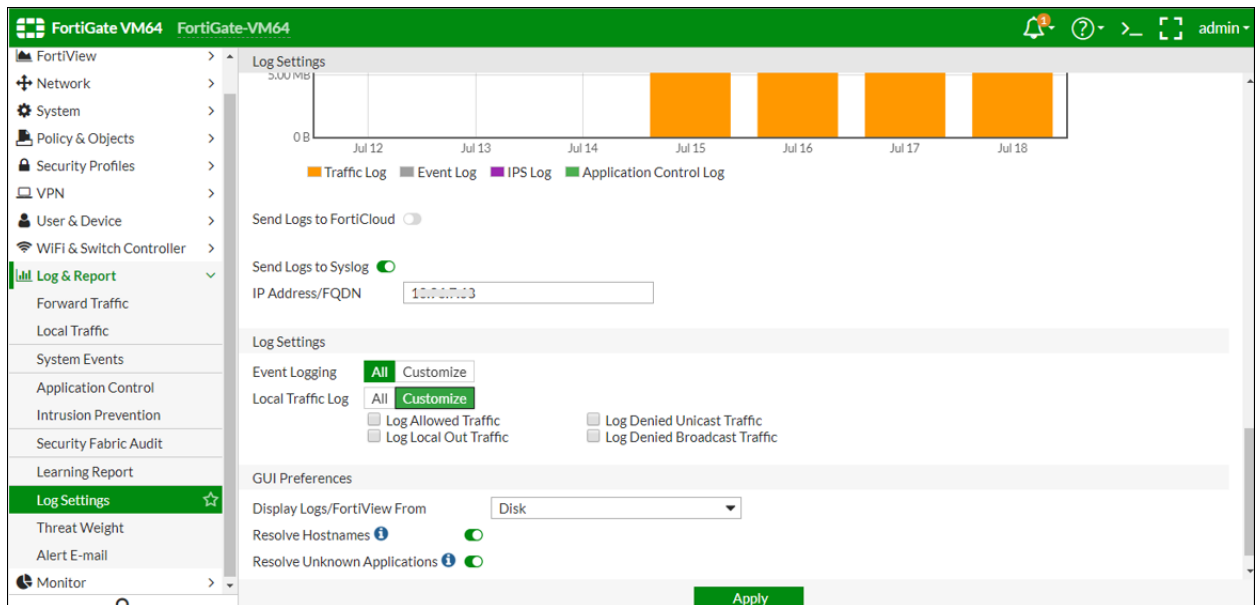

- The default syslog format is text. You must use the following command to change the format to CEF.

```
FortiGate-VM64 # config log syslogd setting
FortiGate-VM64 (setting) # show
config log syslogd setting
  set status enable
  set server "10.96.7.68"
  set format cef
end
```

- To access the firewall, you must configure Firewall management interface settings.

```
FGVM020000076196 # config system interface
FGVM020000076196 (interface) # edit port6
FGVM020000076196 (port6) # set ip 192.168.0.1 255.255.255.0

FGVM020000076196 (port6) # set allowaccess ping https http ssh fgfm
FGVM020000076196 (port6) # set type physical
FGVM020000076196 (port6) # set status up
FGVM020000076196 (port6) #
FGVM020000076196 (port6) #
FGVM020000076196 (port6) # show
config system interface
  edit "port6"
    set vdom "root"
    set ip 192.168.0.1 255.255.255.0
    set allowaccess ping https ssh http fgfm
    set type physical
    set snmp-index 6
  next
end
```


- Under **Interfaces**, configure the trust and untrust zones.

Figure 169: Configuring trust/untrust zones

| Status | Name | Members | IP/Netmask | Type | Access | Ref. |
|---------------|--------|---------|-----------------------------|--------------------|---------------------|------|
| Physical (10) | | | | | | |
| + | port1 | | 10.0.0.10/255.255.255.224.0 | Physical Interface | PING HTTPS SSH HTTP | 1 |
| + | port2 | | 10.20.1.0/250.255.255.252.0 | Physical Interface | PING HTTPS SSH | 3 |
| + | port3 | | 10.20.1.0/250.255.255.255.0 | Physical Interface | PING HTTPS SSH | 2 |
| - | port4 | | 0.0.0.0/0.0.0 | Physical Interface | | 0 |
| - | port5 | | 0.0.0.0/0.0.0 | Physical Interface | | 0 |
| - | port6 | | 10.20.1.0/250.255.255.255.0 | Physical Interface | PING HTTPS SSH | 0 |
| - | port7 | | 0.0.0.0/0.0.0 | Physical Interface | | 0 |
| - | port8 | | 0.0.0.0/0.0.0 | Physical Interface | | 0 |
| - | port9 | | 0.0.0.0/0.0.0 | Physical Interface | | 0 |
| - | port10 | | 0.0.0.0/0.0.0 | Physical Interface | | 0 |

- Under **Security Profiles > Application Control**, Create a security profile.

Figure 170: Creating Security Profile

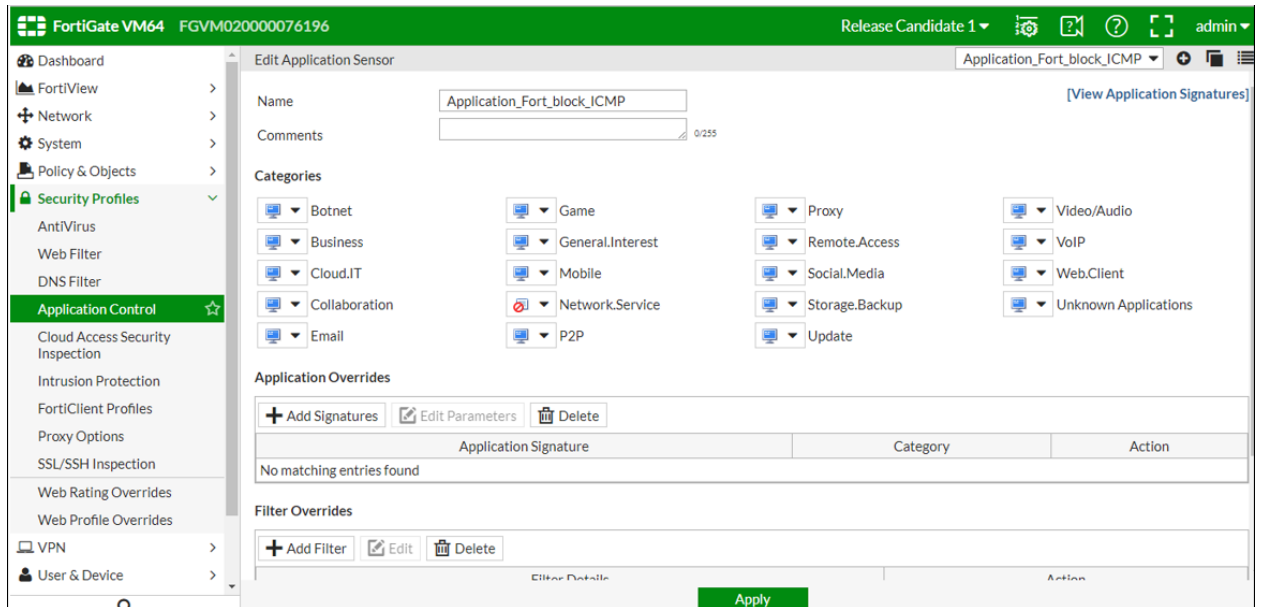

8. Under **Policy & Objects**, apply policies to desired port.
Figure 171: Policy

| FortiGate VM64 FGVM020000076196 | | | | | | | | | | |
|---|------------------------------------|--------|-------------|----------|---------|--------|----------|--------------------|-----|------|
| Release Candidate 1 | | | | | | | | | | |
| admin | | | | | | | | | | |
| Policy & Objects | | | | | | | | | | |
| IPv4 Policy | | | | | | | | | | |
| Create New Edit Delete Policy Lookup Search | | | | | | | | | | |
| Seq.# | Name | Source | Destination | Schedule | Service | Action | NAT | Security Profiles | Log | |
| port2 - port4 (1 - 1) | | | | | | | | | | |
| 1 | Fortinet_L2_Ingress_Traffic | all | all | always | ALL | ACCEPT | Disabled | IPS | All | 3.98 |
| port3 - port4 (2 - 2) | | | | | | | | | | |
| 2 | PAN_L3_Ingress_Traffic_Port3_Port4 | all | all | always | ALL | ACCEPT | Disabled | APP PREX IPS | All | |
| port4 - port2 (3 - 3) | | | | | | | | | | |
| 3 | Fortinet_L2_Egress_Traffic | all | all | always | ALL | ACCEPT | Disabled | APP PREX IPS | UTM | |
| port4 - port3 (4 - 4) | | | | | | | | | | |
| 4 | PAN_Egress_Traffic | all | all | always | ALL | ACCEPT | Disabled | APP PREX IPS | All | |

Configuring FortiGate Analyser

To configure FortiGate firewall:

1. Add the FortiAnalyzer as a Syslog Client on PPS.

Figure 172: FortiAnalyzer

The screenshot shows the Pulse Secure web interface. The breadcrumb trail is "Admission Control > Clients > Forti Analyzer 5.6 CEF". The page title is "Forti Analyzer 5.6 CEF".

Fields for configuration:

- Name:** Forti Analyzer 5.6 CEF (Label to reference this client.)
- Description:** (Empty text area)
- IP Address:** 10.204.63.254 (IP Address of this client.)
- Template:** Fortinet-Analyzer-Syslog-CEF (Template used by the client)

Selected Template Details

| Template name | Vendor | Device | Protocol | Format | Description |
|-------------------------|----------|----------|----------|--------|---|
| fortianalyzer-cef.ftmpl | Fortinet | Analyzer | Syslog | CEF | Syslog integration with Forti Analyzer using CEF format messages. |

Save Changes

* indicates required field

2. Configure the FortiAnalyzer management interface through CLI.

```
FAZVM64 # config system interface


(interface)# show
config system interface
  edit "port1"
    set ip 10.204.88.5 255.255.252.0
    set allowaccess ping https ssh telnet http
  next
  edit "port2"
    set ip 10.96.71.6 255.255.224.0
    set allowaccess ping https ssh snmp telnet http fgfm
  next
  edit "port3"
  next
  edit "port4"
  next
end

FAZVM64 # config system route

(route)# show
config system route
  edit 1
    set device "port1"
    set gateway 10.204.63.254
  next
  edit 2
    set device "port3"
    set gateway 10.96.64.1
  next
end
```

3. Enable **Send Logs to FortiAnalyzer/FortiManager** to forward the syslog message. Enter the IP address of the FortiAnalyzer.


Figure 173: Forwarding

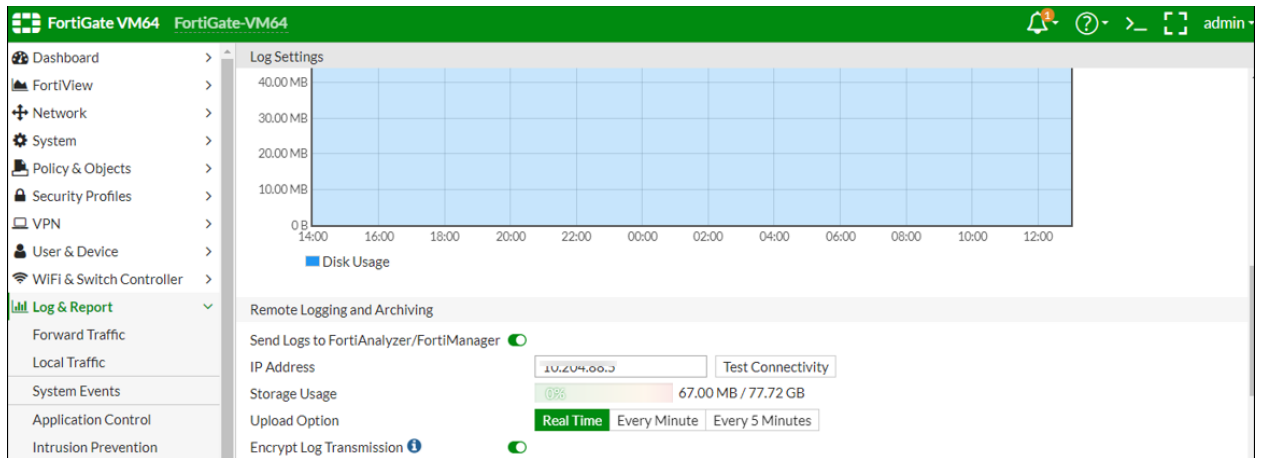

Note: On Fortigate Firewall, configure the security policy – network trust, untrust zone and apply the policy to desired ports.


4. Under **FortiAnalyzer > Device Manager**, Click **+ Add Device** to add Fortigate firewall.

Figure 174: Adding Device

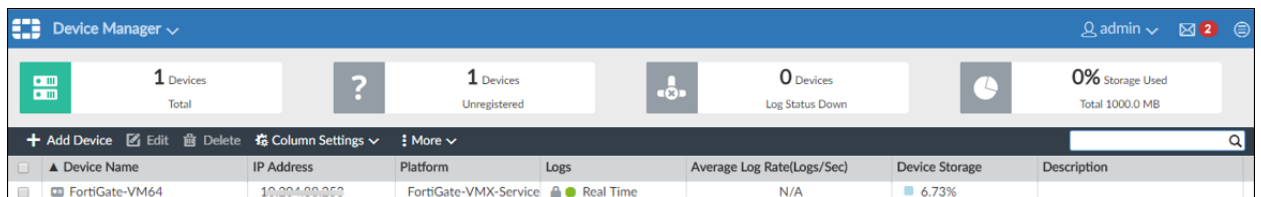

5. Under **System Settings > Log Forwarding**, enter the IP address of the PPS device for log forwarding.

Figure 175: Log Forwarding

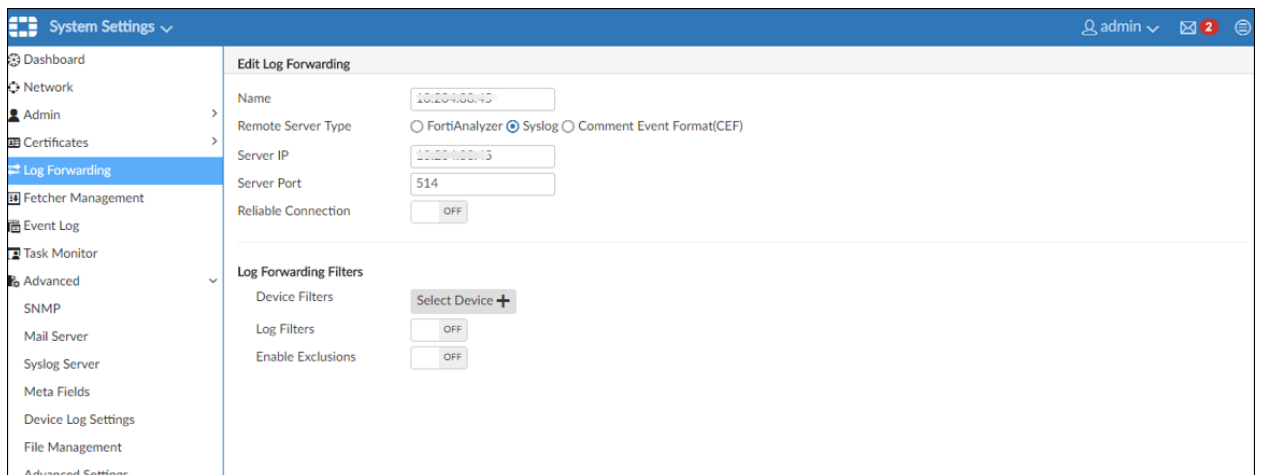

6. Under **System Settings > Advanced > Syslog Server**, enter the IP address of PPS device.

The screenshot displays the 'System Settings' window with the 'Syslog Server' option selected in the left-hand navigation menu. The main area is titled 'Edit Syslog Server Settings' and contains three input fields: 'Name' with the value 'AA_Cluster', 'IP address (or FQDN)' with the value '10.20.100.15', and 'Syslog Server Port' with the value '514'. At the bottom right of the dialog are 'OK' and 'Cancel' buttons. The top right corner of the window shows the user 'admin'.

| Field | Value |
|----------------------|--------------|
| Name | AA_Cluster |
| IP address (or FQDN) | 10.20.100.15 |
| Syslog Server Port | 514 |

Troubleshooting

When the network security device detects threats, the syslogs are forwarded to PPS.

To verify the event logs, select **System > Network > Status > Active Users**.

Figure 176: Event Logs

| Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards | | | Pulse Policy Secure |
|--|----------|--|---------------------|
| Info | STS20641 | 2017-07-17 22:00:44 - ic - [127.0.0.1] System() - Number of concurrent users logged in to the device: 1 | |
| Info | INT31545 | 2017-07-17 21:17:34 - ic - [127.0.0.1] System() - Syslog Message received from Client: 10.204.88.3 Message: Jul 17 21:29:22 FortiGate-VM64 CEF:0 Fortinet Fortigate v5.6.0 00014 traffic:local deny 3 FTNTFGTlogid=0001000014 cat=traffic:local FTNTFGTsubtype=local FTNTFGTlevel=notice FTNTFGTvd=root src=10.204.91.50 shost=DC1UACQA spl=137 deviceInboundInterface=port3 dst=10.204.91.255 dpt=137 deviceOutboundInterface=unknown-0 externalid=5110532 proto=17 act=deny FTNTFGTpolicyid=0 FTNTFGTpolicytype=local-in-policy FTNTFGTdstcountry=Reserved FTNTFGTsrccountry=Reserved FTNTFGTtrandisp=noop app=udp/137 FTNTFGTapp=netbios forward FTNTFGTduration=0 out=0 in=0 FTNTFGTsentpkt=0 FTNTFGTappcat=unscanned FTNTFGTdevtype=Windows PC FTNTFGTosname=Windows 8 / 2012 FTNTFGTmastersrcmac=00:50:56:b2:39:3a FTNTFGTsrcmac=00:50:56:b2:39:3a FTNTFGTsrcserver=0 | |
| Info | INT31545 | 2017-07-17 21:17:34 - ic - [127.0.0.1] System() - Syslog Message received from Client: 10.204.88.3 Message: Jul 17 21:29:22 FortiGate-VM64 CEF:0 Fortinet Fortigate v5.6.0 00014 traffic:local deny 3 FTNTFGTlogid=0001000014 cat=traffic:local FTNTFGTsubtype=local FTNTFGTlevel=notice FTNTFGTvd=root src=10.204.91.53 shost=2012-GRANDCHILD spl=137 deviceInboundInterface=port3 dpt=10.204.91.255 dpt=137 deviceOutboundInterface=unknown-0 externalid=5110530 proto=17 act=deny FTNTFGTpolicyid=0 FTNTFGTpolicytype=local-in-policy FTNTFGTdstcountry=Reserved FTNTFGTsrccountry=Reserved FTNTFGTtrandisp=noop app=udp/137 FTNTFGTapp=netbios forward FTNTFGTduration=0 out=0 in=0 FTNTFGTsentpkt=0 FTNTFGTappcat=unscanned FTNTFGTdevtype=Windows PC FTNTFGTosname=Windows 8 / 2012 FTNTFGTmastersrcmac=00:50:56:b2:39:3f FTNTFGTsrcmac=00:50:56:b2:39:3f FTNTFGTsrcserver=0 | |
| Info | INT31545 | 2017-07-17 21:17:34 - ic - [127.0.0.1] System() - Syslog Message received from Client: 10.204.88.3 Message: Jul 17 21:29:22 FortiGate-VM64 CEF:0 Fortinet Fortigate v5.6.0 00014 traffic:local deny 3 FTNTFGTlogid=0001000014 cat=traffic:local FTNTFGTsubtype=local FTNTFGTlevel=notice FTNTFGTvd=root src=10.204.91.53 shost=DC1UACQA spl=137 deviceInboundInterface=port3 dst=10.204.91.255 dpt=137 deviceOutboundInterface=unknown-0 externalid=5110527 proto=17 act=deny FTNTFGTpolicyid=0 FTNTFGTpolicytype=local-in-policy FTNTFGTdstcountry=Reserved FTNTFGTsrccountry=Reserved FTNTFGTtrandisp=noop app=udp/137 FTNTFGTapp=netbios forward FTNTFGTduration=0 out=0 in=0 FTNTFGTsentpkt=0 FTNTFGTappcat=unscanned FTNTFGTdevtype=Windows PC FTNTFGTosname=Windows 8 / 2012 FTNTFGTmastersrcmac=00:50:56:b2:39:3a FTNTFGTsrcmac=00:50:56:b2:39:3a FTNTFGTsrcserver=0 | |
| Info | INT31545 | 2017-07-17 21:17:34 - ic - [127.0.0.1] System() - Syslog Message received from Client: 10.204.88.3 Message: Jul 17 21:29:22 FortiGate-VM64 CEF:0 Fortinet Fortigate v5.6.0 00014 traffic:local deny 3 FTNTFGTlogid=0001000014 cat=traffic:local FTNTFGTsubtype=local FTNTFGTlevel=notice FTNTFGTvd=root src=10.204.91.53 shost=2012-GRANDCHILD spl=137 deviceInboundInterface=port3 dst=10.204.91.255 dpt=137 deviceOutboundInterface=unknown-0 externalid=5110525 proto=17 act=deny FTNTFGTpolicyid=0 FTNTFGTpolicytype=local-in-policy FTNTFGTdstcountry=Reserved FTNTFGTsrccountry=Reserved FTNTFGTtrandisp=noop app=udp/137 FTNTFGTapp=netbios forward FTNTFGTduration=0 out=0 in=0 FTNTFGTsentpkt=0 FTNTFGTappcat=unscanned FTNTFGTdevtype=Windows PC FTNTFGTosname=Windows 8 / 2012 FTNTFGTmastersrcmac=00:50:56:b2:39:3f FTNTFGTsrcmac=00:50:56:b2:39:3f FTNTFGTsrcserver=0 | |

Alert Based Admission Control using PAN Next Generation Firewall

This chapter provides an overview of enforcement using PAN Next Generation Firewall. It includes the following information:

- [Overview](#)
- [Deployment of PPS using PAN Next Generation Firewall](#)
- [Configuring PPS with PAN Next Generation Firewall](#)
- [Configuring PAN Next Generation Firewall](#)
- [Troubleshooting](#)

Overview

PPS integration with PAN next generation firewall provide user access control based on the threats identified by the network security devices. The network security device provides intelligence driven detection of threats based on the intrusion prevention system. This helps in detecting the unknown threats and also reduces the false alarms. The PAN Next Generation Firewall uses the syslog events to notify the other devices regarding the network threats. PPS also supports dynamically changing the access to the user based on the information received from the PAN Next Generation Firewall.


The admission control user flow is as follows:

1. The user logs into the PPS and a corresponding session is created on PPS.
2. The user starts accessing the resources and tries to access a restricted website or application.
3. The PAN Next Generation Firewall identifies it as threat and generates a corresponding syslog event and sent to PPS.
4. PPS receives the threat information and based on the policies configured it modifies the user access. For example, changing user access, terminating user access and so on.

Deployment of PPS using PAN Next Generation Firewall

This section describes the integration of PPS with PAN Next Generation Firewall. PPS integrates with PAN Next Generation Firewall syslog notification mechanism to receive the threat alert information from Palo Alto Networks and takes an action based on the admin configured policies.

Figure177: Deployment using PAN Next Generation Firewall

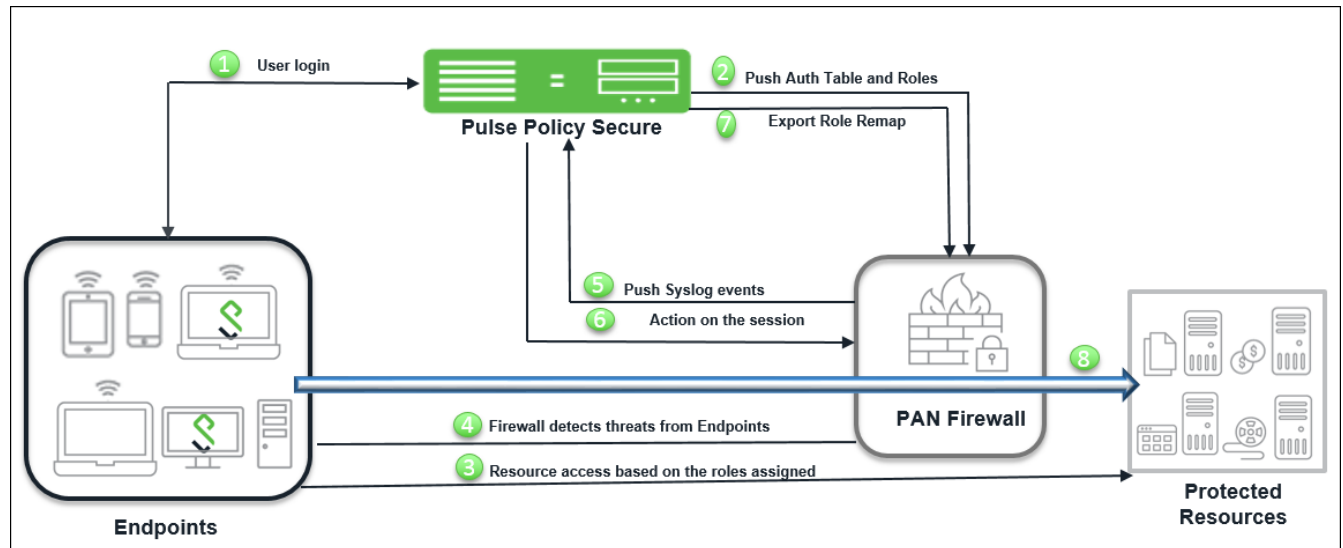

The authentication process is described below:

1. User is authenticated on PPS after validating the Host Checker policy
2. The user sessions are exported to PAN through enforcement configuration, which uses REST APIs for updating the session details.
3. The PAN Next Generation firewall obtains session information from REST APIs and creates an IP to username mapping. The firewall can use this information to either allow or block traffic based on the configured policy.
4. PAN Next Generation Firewall Monitors the end user flow and activity and detects attacks/malicious activity at the end user session
5. PAN Next Generation Firewall sends a syslog message to PPS if any suspicious traffic or activity is detected from end user.
6. PPS will process the received syslog message and based on the configured policies, actions will be taken for the end user session.
7. PPS will update PAN Next Generation firewall with updated session information.
8. The PAN Next Generation Firewall changes access to the user based on the updated session information obtained from PPS.



Note: The enforcement of the user is also updated on the firewall.

Configuring PPS with PAN Next Generation Firewall

The network security devices are configured with PPS for admission access control. A high-level overview of the configuration steps needed to set up and run the integration is described below:

- The Administrator configures the PAN syslog client on PPS Admin UI.
The network security device acts as a syslog client on which syslog forwarding is enabled and PPS receives the forwarded syslog messages.
- The Administrator then configures a set of policies that define what actions are to be taken on user sessions, based on the data in the threat events.
The actions on sessions supported are
 - Ignore - Logs and ignores the syslog message.
 - Terminate session - Removes the user session.
 - Disable - Removes the user session and disables the user.
 - Change role - Update the user session with limited role specified. The role change can also be marked as permanent or only for that session.
- The user templates are used to identify events supported by the security device. It also provides the pattern match for collecting values for predefined variables which are used for acting on a session. The predefined variable used are source IP, source user, event and severity.

This section covers the following topics:

- [Admission Control Template](#)
- [Admission Control Policies](#)
- [Admission Control Client](#)

Admission Control Template

The admission control template provides the list of possible events that can be received from the network security device along with regular expression to parse the message. The template also provides possible actions that can be taken for an event.

PPS is loaded with default templates for Fortigate, Fortianalyzer and PAN next generation firewall. Admin can create templates for other security devices and can upload to templates.

You can view the list of configured integration templates that provides the list of network security devices and the supported protocol type using Endpoint Policy > Admission Control > Templates.

To view the admission control templates:

Select **Endpoint Policy > Admission Control > Templates**.

Figure 178: Existing Template

| | Name | File Name | Protocol Type | Vendor | Device Type |
|---|--|--------------------------------|---------------|-------------------|-------------|
| 1 | paloalto-networks-fw-ietf Syslog integration with PaloAlto Networks Firewall using RFP format messages. | paloalto-networks-fw-ietf.json | Syslog | PaloAlto Networks | Firewall |
| 2 | fortigate-text Syslog integration with Fortinet Fortigate Firewall using text format messages. | fortigate-text.json | Syslog | Fortinet | Firewall |
| 3 | fortianalyzer-text Syslog integration with FortiAnalyzer using text format messages. | fortianalyzer-text.json | Syslog | Fortinet | Analyzer |
| 4 | fortianalyzer-cef Syslog integration with FortiAnalyzer using CEF format messages. | fortianalyzer-cef.json | Syslog | Fortinet | Analyzer |
| 5 | fortigate-cef Syslog integration with Fortinet Firewall using CEF format messages. | fortigate-cef.json | Syslog | Fortinet | Firewall |


Admission Control Policies

The admission control policies define the list of actions to be performed on PPS for the user sessions. The actions are based on the event and the severity information received from the network security device.

To view and add the new integration policy:

1. Select **Endpoint Policy > Admission Control > Policies**.


Figure 179: Configuration Policies

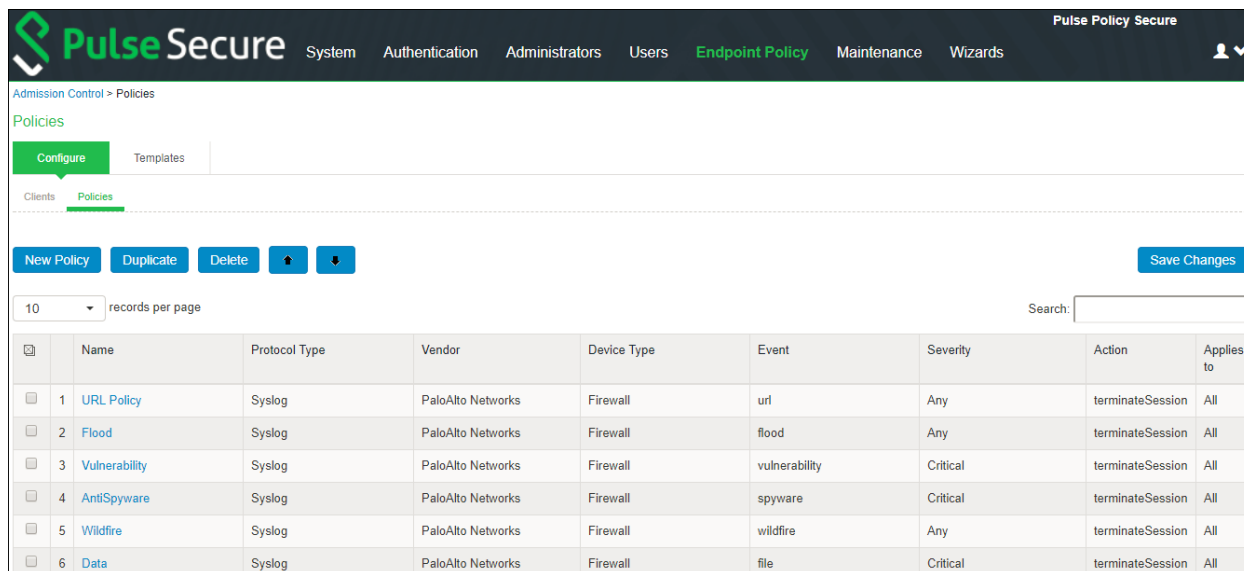

| | Name | Protocol Type | Vendor | Device Type | Event | Severity | Action | Applies to |
|---|---------------|---------------|-------------------|-------------|---------------|----------|------------------|------------|
| 1 | URL Policy | Syslog | PaloAlto Networks | Firewall | url | Any | terminateSession | All |
| 2 | Flood | Syslog | PaloAlto Networks | Firewall | flood | Any | terminateSession | All |
| 3 | Vulnerability | Syslog | PaloAlto Networks | Firewall | vulnerability | Critical | terminateSession | All |
| 4 | AntiSpyware | Syslog | PaloAlto Networks | Firewall | spyware | Critical | terminateSession | All |
| 5 | Wildfire | Syslog | PaloAlto Networks | Firewall | wildfire | Any | terminateSession | All |
| 6 | Data | Syslog | PaloAlto Networks | Firewall | file | Critical | terminateSession | All |

2. Click **New Policy**.
3. Enter the policy name.
4. Select **PaloAlto Networks-Firewall-Syslog-text** as a template.
5. Under **Rule on Receiving**, select the event type and the severity level. The event types and the severity level are based on the selected template.

Figure 180: Adding New Configuration Policy

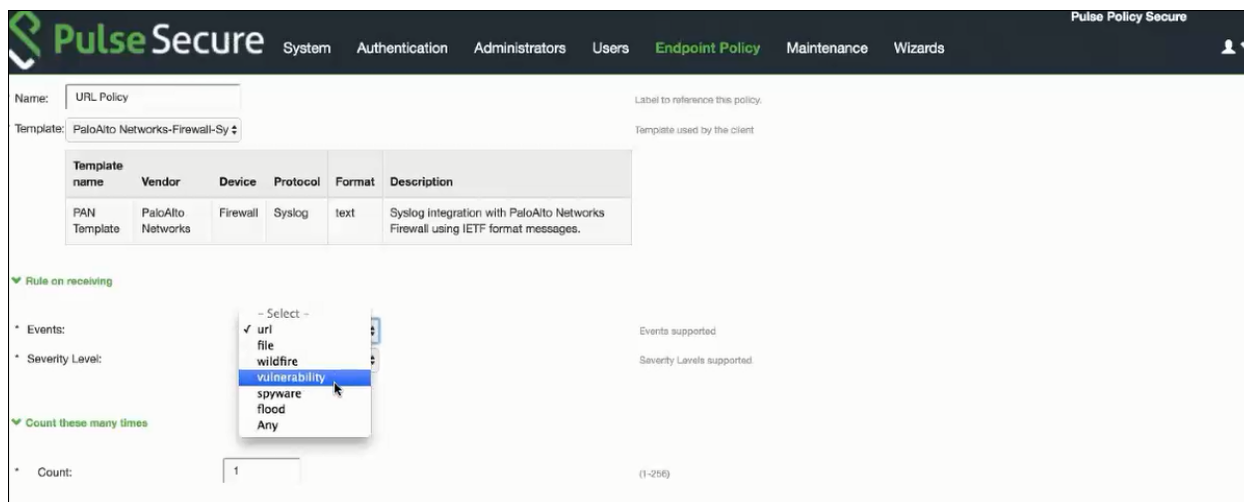

Name: URL Policy

Template: PaloAlto Networks-Firewall-Sy

| Template name | Vendor | Device | Protocol | Format | Description |
|---------------|-------------------|----------|----------|--------|--|
| PAN Template | PaloAlto Networks | Firewall | Syslog | text | Syslog integration with PaloAlto Networks Firewall using IETF format messages. |

Rule on receiving

Events: url file wildfire vulnerability spyware flood Any

Severity Level: Any

Count: 1

6. Under **Count these many times**, enter the number between 1-256.
7. Under **then perform this action**, select the desired action.
 - Ignore (log the event) —Received syslog event details are logged on the PPS and no specific action is taken.
 - Terminate user session— Terminates the user session on the PPS for the received messages.
 - Disable user account— Terminates the user session and disables the user on the PPS for the received messages.
 - Replace user role with this role— Changes the roles assigned to the user on PPS so that restriction/privileges for the user can be changed.
 - Specify whether to apply the role assignment permanently or only for the session.
8. Under **Roles**, specify:
 - Policy applies to ALL roles—To apply the policy to all users.
 - Policy applies to SELECTED roles—To apply this policy only to users who are mapped to roles in the Selected roles list. You must add roles to this list from the Available roles list.
 - Policy applies to all roles OTHER THAN those selected below—To apply this policy to all users except for those who map to the roles in the Selected roles list. You must add roles to this list from the Available roles list.
9. Click **Save changes**.

Admission Control Client

The admission control clients are the network security devices on which the syslog forwarding is enabled. The messages are received by the syslog server module running on PPS.

To add a client:


1. Select **Endpoint Policy > Admission Control > Clients**.
2. Click **New Client**.
3. Enter the name of the client that will be added in the PPS.
4. Enter the description.
5. Enter the IP address of the client.
6. Select the template used by the client.
 - PaloAlto Networks-Firewall-Syslog-text
7. Click **Save Changes**.

Configuring PAN Next Generation Firewall


The PPS device must be added as a syslog server while configuring the PAN Next Generation Firewall for sending the logging information. You must add PAN Next Generation Firewall as syslog client on PPS.

To configure PAN firewall:

1. Select **Device > Service Profiles > Syslog** and create a syslog server. Enter the IP address of PPS.

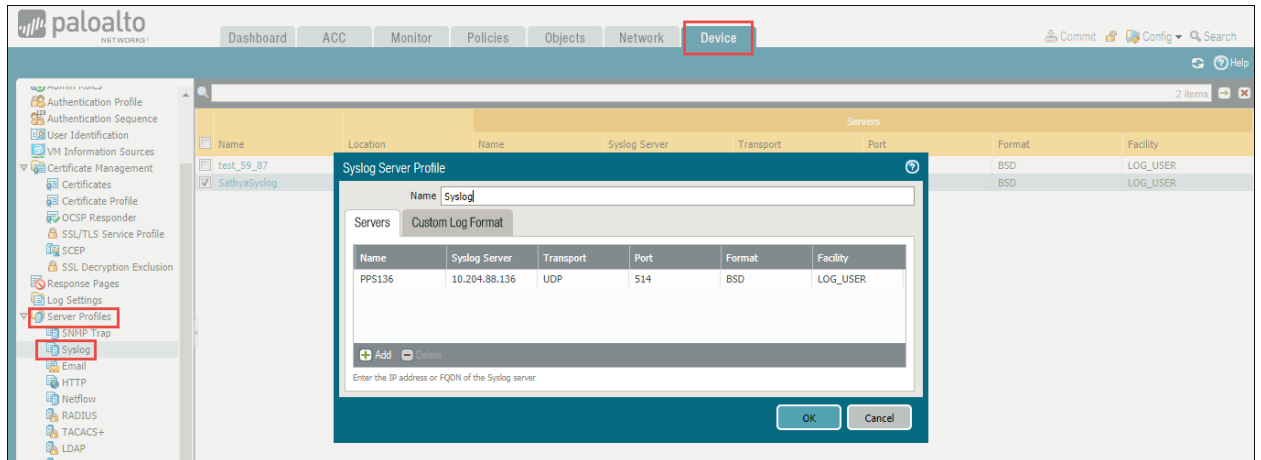

2. Create a log forwarding profile. Select **Objects > Log Forwarding**. Enable **PAN** to forward the syslog message.
- Figure 181: Log Forwarding

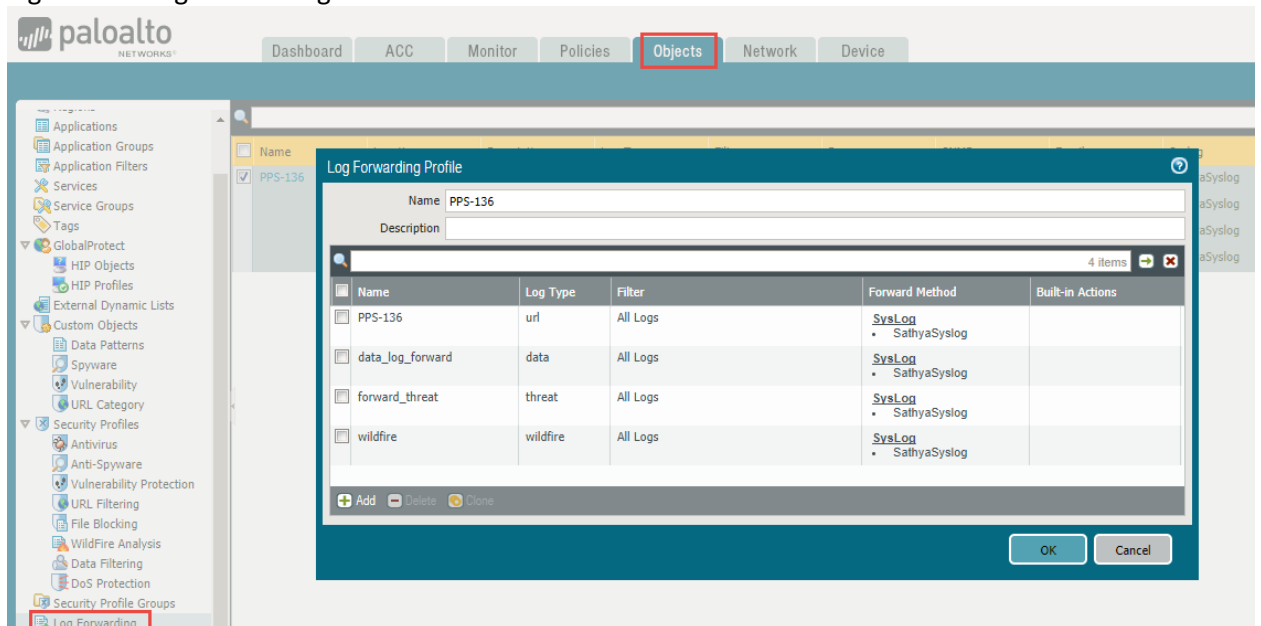


Note: On PAN Next Generation Firewall, configure the security policy – network trust, untrust zone and apply the policy to desired ports.

3. Select **Objects > Security Profiles** and create a security profile. The following security profiles are available:
 - URL Filtering
 - Anti Spyware
 - Vulnerability Protection


- File Blocking
- Wildfire Analysis
- DoS Protection

4. The following is an example of configuring a URL filtering policy.

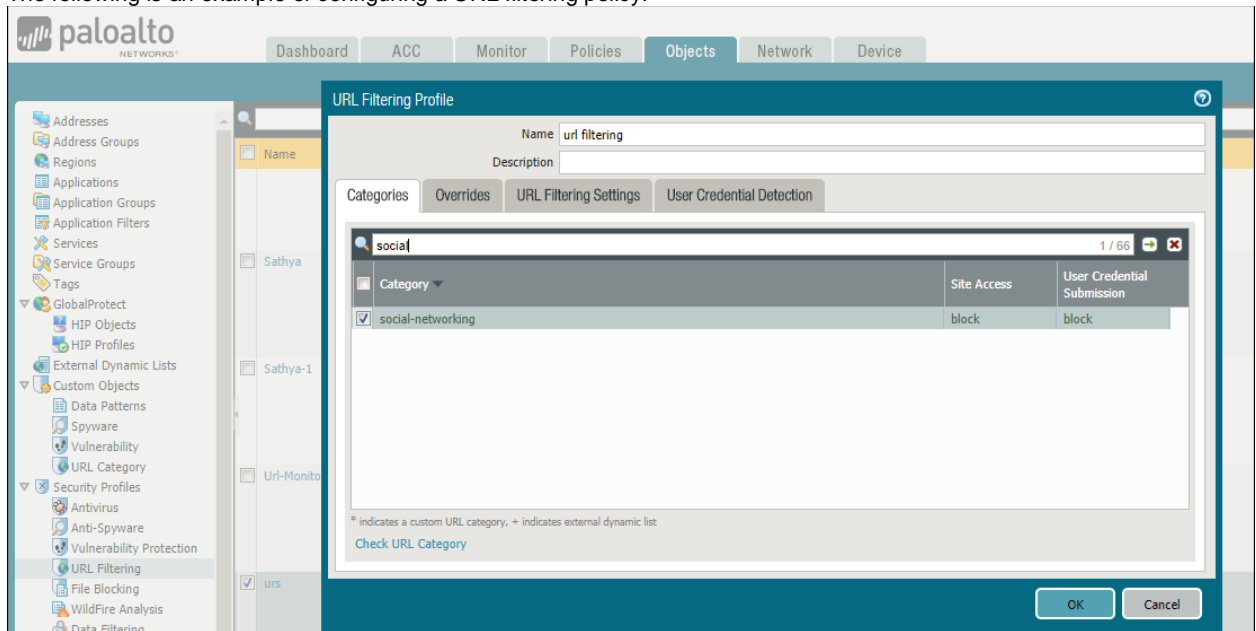

5. Select **Policies > Security**, click the policy add the created objects to Security Policy Rule.

Figure 182: Security Policy Rule

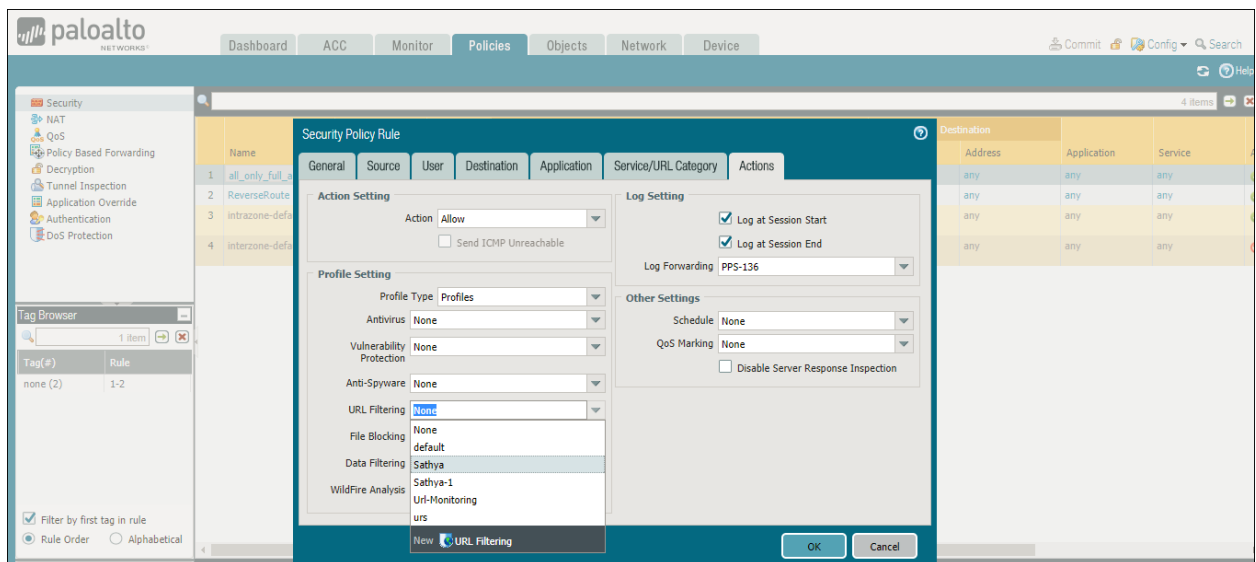


Troubleshooting

When the network security device detects threats, the syslogs are forwarded to PPS.

For example, to monitor the URL filtering logs on PAN Next Generation Firewall, select Monitor > URL Filtering and view the logs.


Figure 183: Event Logs

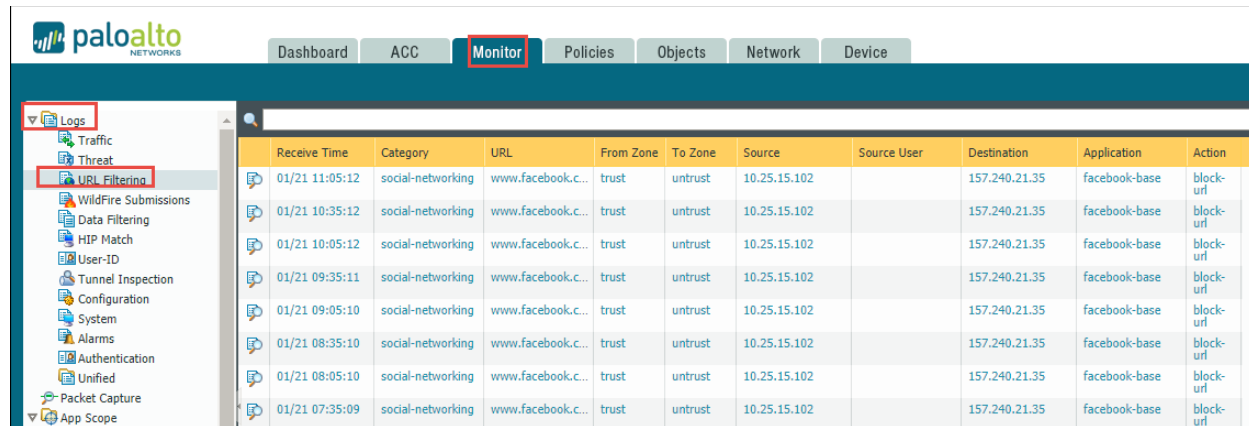

The screenshot shows the Palo Alto Networks management interface. The 'Monitor' tab is selected in the top navigation bar. On the left sidebar, 'Logs' is expanded, and 'URL Filtering' is selected. The main area displays a table of logs with the following columns: Receive Time, Category, URL, From Zone, To Zone, Source, Source User, Destination, Application, and Action. The table contains eight entries, all categorized as 'social-networking' and originating from '10.25.15.102'.

| Receive Time | Category | URL | From Zone | To Zone | Source | Source User | Destination | Application | Action |
|----------------|-------------------|-------------------|-----------|---------|--------------|-------------|---------------|---------------|-----------|
| 01/21 11:05:12 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |
| 01/21 10:35:12 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |
| 01/21 10:05:12 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |
| 01/21 09:35:11 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |
| 01/21 09:05:10 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |
| 01/21 08:35:10 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |
| 01/21 08:05:10 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |
| 01/21 07:35:09 | social-networking | www.facebook.c... | trust | untrust | 10.25.15.102 | | 157.240.21.35 | facebook-base | block-url |

To verify the event logs on PPS, select **System > Log/Monitoring > Events**.

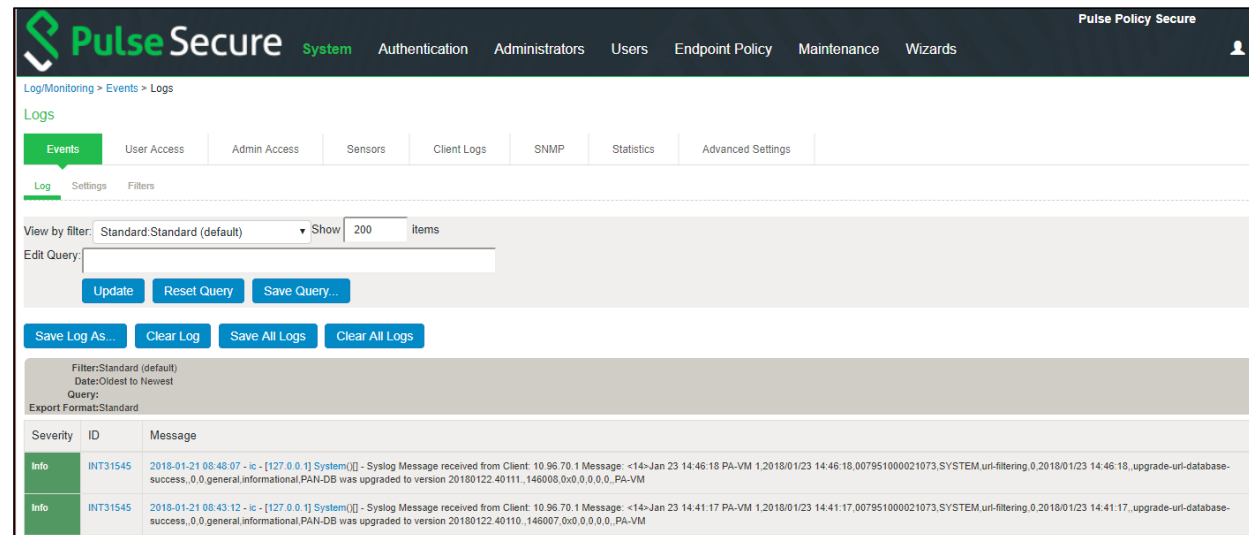

The screenshot shows the Pulse Secure management interface. The 'System' tab is selected in the top navigation bar. The breadcrumb trail is 'Log/Monitoring > Events > Logs'. The 'Events' sub-tab is selected. The interface shows a search bar with 'View by filter: Standard:Standard (default)' and 'Show 200 items'. Below the search bar are buttons for 'Update', 'Reset Query', and 'Save Query...'. Further down are buttons for 'Save Log As...', 'Clear Log', 'Save All Logs', and 'Clear All Logs'. The main area displays a table of events with the following columns: Severity, ID, and Message. The table contains two entries, both with a severity of 'Info' and ID 'INT31545'.

| Severity | ID | Message |
|----------|----------|--|
| Info | INT31545 | 2018-01-21 08:48:07 - [127.0.0.1] System[0] - Syslog Message received from Client: 10.96.70.1 Message: <14>Jan 23 14:46:18 PA-VM 1,2018/01/23 14:46:18,007951000021073,SYSTEM,uri-filtering,0,2018/01/23 14:46:18,_upgrade-uri-database-success,0,0,general,informational,PAN-DB was upgraded to version 20180122.40111, 146008,0x0,0,0,0,0, PA-VM |
| Info | INT31545 | 2018-01-21 08:43:12 - [127.0.0.1] System[0] - Syslog Message received from Client: 10.96.70.1 Message: <14>Jan 23 14:41:17 PA-VM 1,2018/01/23 14:41:17,007951000021073,SYSTEM,uri-filtering,0,2018/01/23 14:41:17,_upgrade-uri-database-success,0,0,general,informational,PAN-DB was upgraded to version 20180122.40110, 146007,0x0,0,0,0,0, PA-VM |

Alert Based Admission Control using Juniper SDSN

This chapter provides an overview of PPS enforcement using Juniper Networks Software-Defined Secure Network (SDSN). It includes the following information:

- Overview
- Deployment of PPS in Juniper SDSN
- Configuring PPS with Juniper SDSN
- Configuring Juniper SDSN
- Troubleshooting

Overview

The SDSN solution provides end-to-end network visibility, allowing enterprises to secure their entire network, both physical and virtual. Using threat detection and policy enforcement, PPS and SDSN solution automates and centrally manages security in a multi-vendor environment.

PPS integrates with Juniper SDSN solution through REST API mechanism and takes appropriate action based on the admission control policies. The PPS integration with SDSN solution detects and enforces threat prevention policies and provides a collaborative and comprehensive approach toward complete network security. It enables users to leverage existing, trusted threat feed sources to provide consistent, automated defense across diverse environments.

Benefits

As PPS has more visibility of the endpoint connected to the network. PPS integration with SDSN enhances the security by isolating or acting at the endpoint level based on threat alerts received from Juniper SDSN.




Note: PPS connector is supported by Junos Space from version 18.3 onwards.

Deployment of PPS in Juniper SDN Environment

This section describes the integration of PPS in Juniper SDN environment. PPS receives the threat alert information from Juniper SDN solution and takes an action at the endpoint based on the admission control policies.

Figure: Deployment of PPS in Juniper SDN Environment

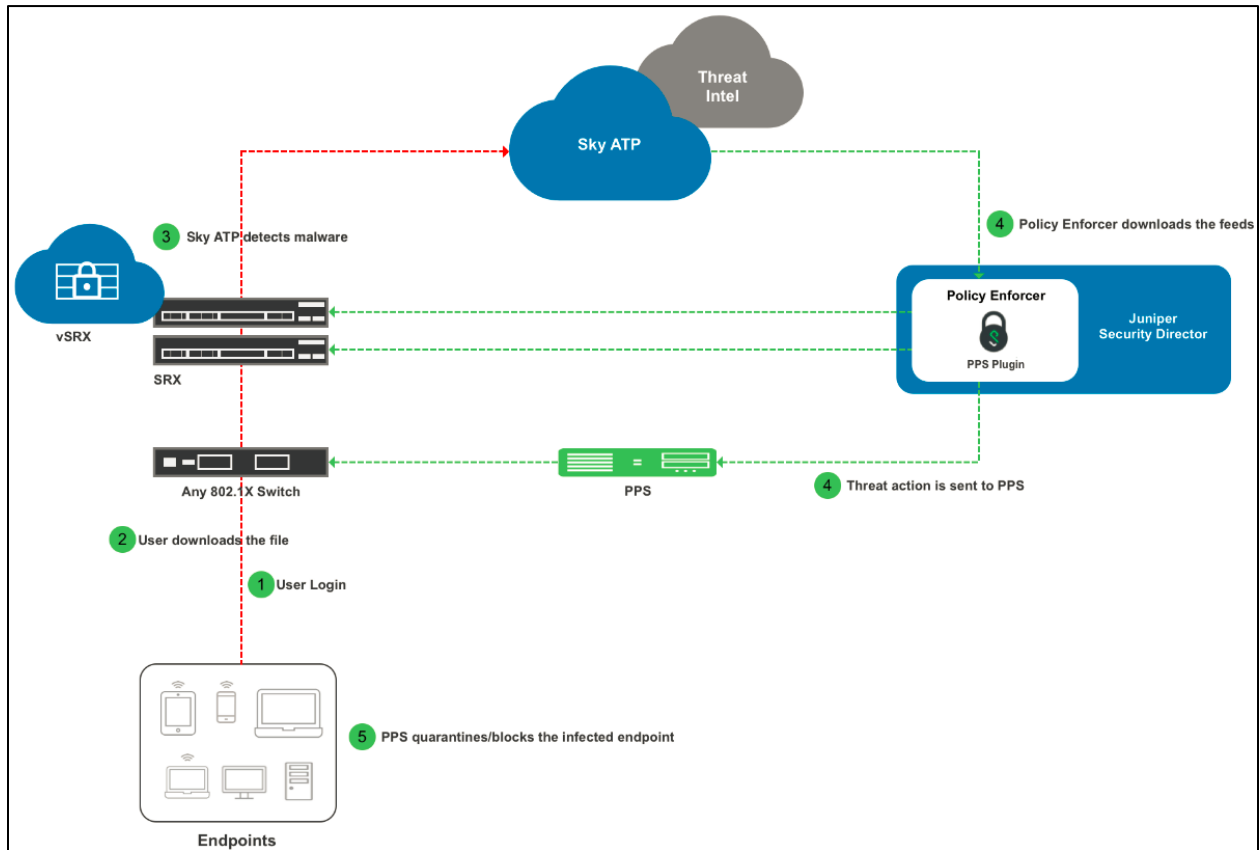

In this example, the endpoint is connected to a third-party switch. The switch has 802.1X authentication enabled. The switch authenticates 802.1X requests through a PPS server.

1. The endpoint authenticates to the network through 802.1X or through MAC-based authentication.
2. User downloads a file from the Internet. The perimeter firewall (SRX Series device) scans the file and, based on user-defined policies, sends the file to Sky ATP for analysis.
3. Sky ATP detects that the file contains malware, identifies the endpoint as an infected host, and notifies the SRX Series device and Policy Enforcer.
4. Policy Enforcer downloads the infected host feed and sends a threat action to PPS.
5. The PPS server quarantines/blocks the endpoint.
PPS keeps track of the infected host and won't allow an infected host to acquire full access until the endpoint gets disinfected. When the host is disinfected and cleared from Sky ATP or Juniper PE, PPS receives 'clear' event from Juniper PE (Connector), PPS also removes from its infected host list, and host will now be authenticated and gets assigned an appropriate role.



Note: The enforcement of the user is also updated on the firewall.

Configuring PPS with Juniper SDSN

The network security devices are configured with PPS for admission access control. A high-level overview of the configuration steps needed to set up and run the integration is described below:

- The Administrator configures the basic PPS configurations such as creating an authentication server, authentication realm, user roles, and role mapping rules.
- Configure Juniper Policy Enforcer as a client in PPS. PPS acts as a REST API Server for Juniper Policy Enforcer. The REST API access for the admin user needs to be enabled by accessing the serial console or alternatively from the PPS admin UI (Authentication > Auth Server > Administrators > Users > click "admin", enable Allow access to REST APIs).
- Configure PPS to block/quarantine the endpoint based on the threat prevention policy.
- Configure the Switches/WLC as RADIUS Client in PPS (Endpoint Policy > Network Access > Radius Clients > New Radius Client). Switch should be configured with PPS as a RADIUS server.
- Configure RADIUS return attribute policies to define the action upon receiving the event.



Note:

- Ensure that PPS has the endpoint IP Address for the enforcement to work correctly.
- As the endpoint IP Address is mandatory, deployments where the user is behind a NAT might not work well as PPS might have actual IP address whereas SDSN may send NAT'ed IP address.

This section covers the following topics:

- [Admission Control Template](#)
- [Admission Control Policies](#)
- [Admission Control Client](#)

Admission Control Template

The admission control template provides the list of possible events that can be received from the network security device along with regular expression to parse the message. The template also provides possible actions that can be taken for an event.

PPS is loaded with default templates for Juniper Policy Enforcer. Admin can create templates for other security devices and can upload to templates.

You can view the list of configured integration templates that provides the list of network security devices and the supported protocol type using Endpoint Policy > Admission Control > Templates.

To view the admission control templates:

Select **Endpoint Policy > Admission Control > Templates**.

Figure 184: Existing Template

| Templates | | | | | |
|--|---|----------------------------------|---------------|--------------------|---------------|
| Configure Templates | | | | | |
| New Template... Delete... Restore Factory Default... | | | | | |
| 10 records per page Search: | | | | | |
| | Name | File Name | Protocol Type | Vendor | Device Type |
| 1 | paloaltonetworksw-ietf-bsd.itmpl Syslog integration with Palo Alto Networks Firewall using IETF/BSD format messages. | paloaltonetworksw-ietf-bsd.itmpl | Syslog | Palo Alto Networks | Firewall |
| 2 | fortigate-text.itmpl Syslog integration with Fortinet Fortigate Firewall using text format messages. | fortigate-text.itmpl | Syslog | Fortinet | Firewall |
| 3 | fortianalyzer-text.itmpl Syslog integration with FortiAnalyzer using text format messages. | fortianalyzer-text.itmpl | Syslog | Fortinet | Analyzer |
| 4 | fortianalyzer-cef.itmpl Syslog integration with Forti Analyzer using CEF format messages. | fortianalyzer-cef.itmpl | Syslog | Fortinet | Analyzer |
| 5 | juniper-policy-engine-http.itmpl Integration with Juniper's Policy Engine which sends endpoint control commands to PPS | juniper-policy-engine-http.itmpl | HTTP | Juniper | Policy Engine |

Admission Control Policies

The admission control policies define the list of actions to be performed on PPS for the user sessions. The actions are based on the event and the severity information received from the network security device.

To view and add the new integration policy:

1. Select **Endpoint Policy > Admission Control > Policies**.
2. Click **New Policy**.
3. Enter the policy name.
4. Select **Juniper Networks Policy Enforcer** as a template.
5. Under **Rule on Receiving**, select the event type (block-endpoint, quarantine-endpoint, clear-blocked-endpoint, clear-quarantined-endpoint) and the severity level. The event types and the severity level are based on the selected template.

The actions on sessions supported are:

- **Block Endpoint:** Blocks the host MAC Address on the PPS permanently. If admin choose to clear this, it can be cleared either by using Juniper Security Director application or by using the PPS Admin UI.
 - **Quarantine Endpoint** (Change user roles): Changes the roles assigned to the user on PPS so that restriction/privileges for the user can be changed. The Administrator can choose to apply these roles permanently or temporarily. If it is permanent, host will be added to infected host list and will be tracked for subsequent login attempts. Whereas quarantining temporarily is specific to that particular user session (Not tracked in Infected host list and subsequent login attempts will succeed).
 - **Clear Blocked Endpoint** - Clears a previously blocked MAC Address.
 - **Clear Quarantined Endpoint** - Clears a previously quarantined MAC Address.
6. Under **then perform this action**, select the desired action.
 - Ignore (log the event) —Received syslog event details are logged on the PPS and no specific action is taken.
 - Terminate user session— Terminates the user session on the PPS for the received messages.
 - Disable user account— Terminates the user session and disables the user on the PPS for the received messages.
 - Replace user role with this role— Changes the roles assigned to the user on PPS so that restriction/privileges for the user can be changed.
 - Specify whether to apply the role assignment permanently or only for the session.
 7. Under **Roles**, specify:
 - Policy applies to ALL roles—To apply the policy to all users.
 - Policy applies to SELECTED roles—To apply this policy only to users who are mapped to roles in the Selected roles list. You must add roles to this list from the Available roles list.
 - Policy applies to all roles OTHER THAN those selected below—To apply this policy to all users except for those who map to the roles in the Selected roles list. You must add roles to this list from the Available roles list.
 8. Click **Save changes**.

Figure 185: Configuration Policies

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

New Policy

* Name:

Label to reference this policy.

* Template:

Template used by the client

| Template name | Vendor | Device | Protocol | Format | Description |
|------------------------------------|------------------|-----------------|----------|--------|---|
| juniper-policy-enforcer-http.itmpl | Juniper Networks | Policy Enforcer | HTTP | JSON | Integration with Juniper's Policy Enforcer which sends endpoint control commands to PPS |

- Select -

block-endpoint

quarantine-endpoint

clear-blocked-endpoint

clear-quarantined-endpoint

Any

▼ Rule 0

*Events:

Events supported

Once the policy is created. You can see the summary page as shown below. The following page shows the different policies created for different events with different user roles.

Policies

Configure

Templates

Clients

Policies

New Policy

Duplicate

Delete

↑

↓

Save Changes

10

records per page

Search:

| | Name | Protocol Type | Vendor | Device Type | Event | Severity | Action | Applies to |
|--------------------------|-----------------------|---------------|------------------|-----------------|----------------------------|----------|--------------------------|---|
| <input type="checkbox"/> | 1 Quarantine_Host | HTTP | Juniper Networks | Policy Enforcer | quarantine-endpoint | | quarantineEndpoint | Contractor_FullAccess_Role Engineering Sales Users |
| <input type="checkbox"/> | 2 Clear_Quarantine | HTTP | Juniper Networks | Policy Enforcer | clear-quarantined-endpoint | | clearQuarantinedEndpoint | All |
| <input type="checkbox"/> | 3 Block_Hosts | HTTP | Juniper Networks | Policy Enforcer | block-endpoint | | blockEndpoint | Contractor_FullAccess_Role Engineering Sales Users |
| <input type="checkbox"/> | 4 Clear_Blocked_Hosts | HTTP | Juniper Networks | Policy Enforcer | clear-blocked-endpoint | | clearBlockedEndpoint | All |

Admission Control Client

The admission control clients are the network security devices on which the syslog forwarding is enabled. The messages are received by the syslog server module running on PPS.

To add a client:

1. Select **Endpoint Policy > Admission Control > Clients**.
2. Click **New Client**.
3. Enter the name of the Juniper Policy Enforcer that will be added as a client in the PPS.
4. Enter the description.
5. Enter the IP address of the client.
6. Select the template used by the client.
 - Juniper-Policy Engine-HTTP
7. Click **Save Changes**.

The screenshot displays the 'New Client' configuration page within the Pulse Policy Secure administration interface. The breadcrumb trail at the top reads 'Admission Control > Configure > Clients > New Client'. The page title is 'New Client'. The configuration fields are as follows:

- Name:** Juniper SDSN (PE) (Label to reference this client.)
- Description:** (Empty text area)
- IP Address:** 10.204.89.3 (IP Address of this client.)
- Template:** Juniper Networks-Policy Enforcer-HTTP-JSON (Template used by the client)

Below the template selection, a table titled 'Selected Template Details' provides further information:

| Template name | Vendor | Device | Protocol | Format | Description |
|------------------------------------|------------------|-----------------|----------|--------|---|
| juniper-policy-enforcer-http.itmpl | Juniper Networks | Policy Enforcer | HTTP | JSON | Integration with Juniper's Policy Enforcer which sends endpoint control |

Configuring Juniper SDSN

- Configuring PPS with Juniper SD
- Configuring Juniper Policy Enforcer with SKY ATP

Configuring PPS with Juniper SD

The PPS connector must be added as a connector while configuring the Juniper SDSN for sending the event information. You must add Juniper Policy Enforcer as a client on PPS.

Pre-requisite

PPS Connector is supported beginning with Junos Space release version 18.3.

To configure Juniper SDSN using Junos Space Security Director:

1. Select **Policy Enforcer > Connectors** and create a connector.
 - a. Select the Collector type as **Pulse Policy Secure**
 - b. Enter the IP address of PPS.
 - c. Retain the default port number as 443.
 - d. Enter the username and password of PPS. Note that you must have enabled the REST API access on PPS (Authentication > Auth Server > Administrators > Users > click “admin”, enable Allow access to REST APIs).

The screenshot shows the 'Create Connector' wizard in the Junos Space Security Director interface. The left sidebar contains a navigation menu with options: My Profile, Users & Roles, Logging Manage..., Monitor Settings, Signature Datab..., Policy Enforcer (selected), Settings, Connectors, and NSM Migration. The main content area is titled 'Create Connector' and shows a progress bar with three steps: 1. General (active), 2. Network Details, and 3. Configuration. The 'General' step contains the following fields: 'ConnectorType' (dropdown menu set to 'Pulse Policy Secure'), 'Primary Identity Server' (text field), 'IP Address/URL' (text field), 'Port' (spin box set to 443), 'Username' (text field set to 'admin'), and 'Password' (password field with masked characters). At the bottom of the form are 'Cancel' and 'Next' buttons.

2. Enter the subnet details of the network.

Create Connector ⓘ

1 General 2 **Network Details** 3 Configuration

Network Details
Subnets

Click on the field to create subnets or click Upload file to import subnets from a file stored in your local system.

1 selected Upload file + ✕

| Subnet | Description |
|-------------------------------------|--------------------|
| <input type="checkbox"/> | Engineering Subnet |
| <input checked="" type="checkbox"/> | |

Cancel Back Next

Edit Connector ⓘ

1 General 2 Network Details 3 **Configuration**

Configuration

Configuration
Enter configuration values for the configuration keys.

| Configuration Key | Configuration Value |
|-----------------------|---------------------|
| Data is not available | |

Cancel Back Finish

3. Once the configuration is successful the following page is displayed.

✓ The connector instance for 'PPS' has been successfully updated


Connectors ⓘ

1 selected + ✕


| Name | Type | Status | Description | Identity Server IP | Port |
|---|---------------------|----------|-------------|--------------------|------|
| pps_8880 | Pulse Policy Secure | ✓ Active | | | 443 |
| PPS-AP-245 | Pulse Policy Secure | ✓ Active | | | 443 |
| <input checked="" type="checkbox"/> PPS | Pulse Policy Secure | ✓ Active | | | 443 |

3 items 🔄


4. Create an advanced threat prevention policy, such as blocking infected hosts and malware, monitoring and remediation of infected hosts and apply them on group of devices. Select **Configure > Guided Setup > Threat Prevention**.

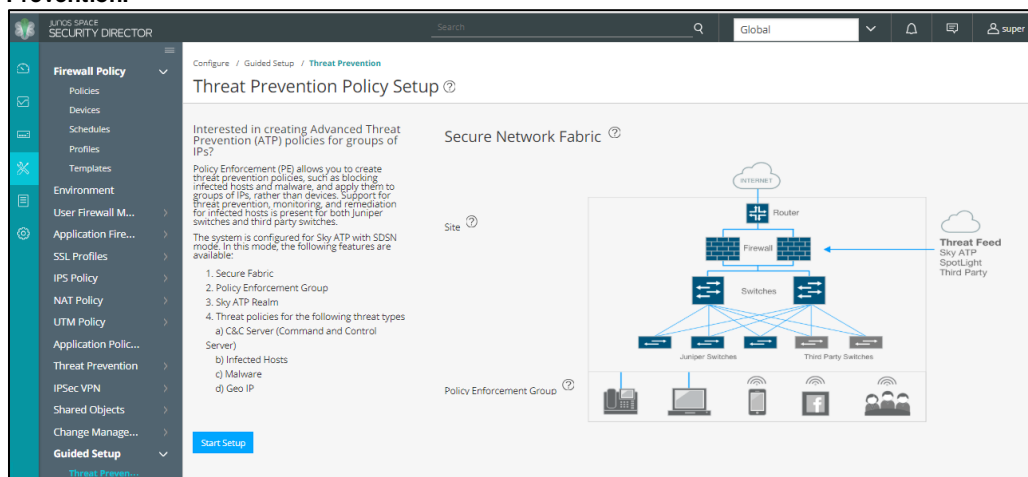


5. Add the SRX device and the PPS device as enforcement points. As a pre-requisite, you must have configured the SRX device and the PPS device as Enforcement points.

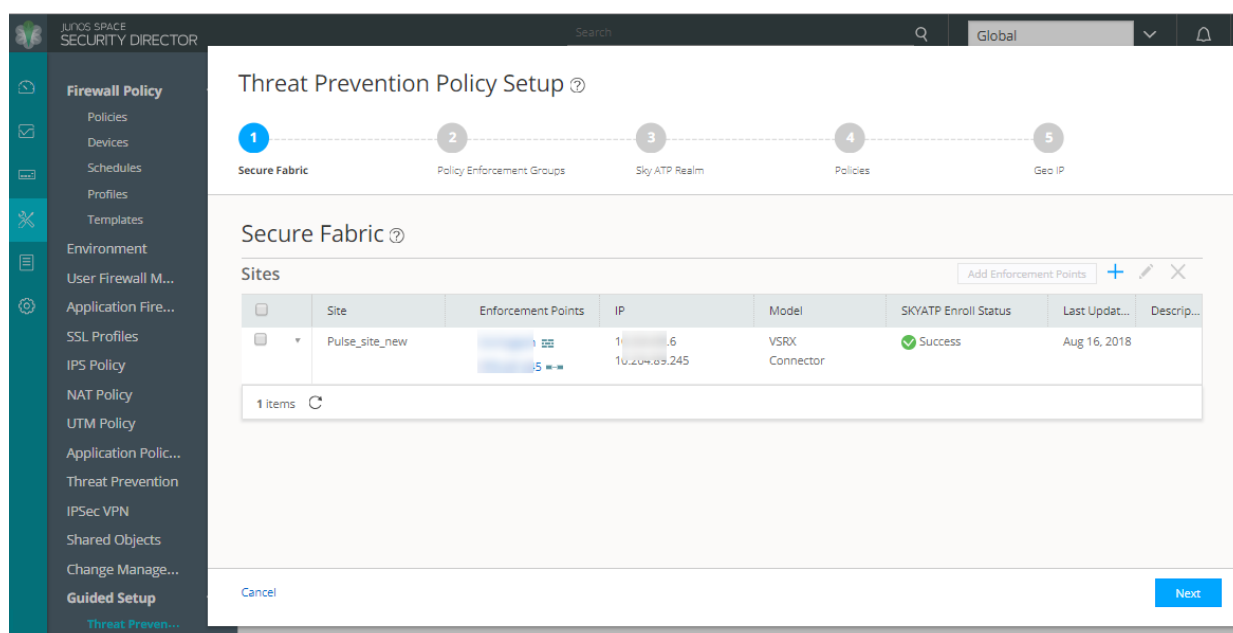

6. Create a policy enforcement group by adding endpoints (firewalls and switches) under one common group name and later applying a security policy to that group. Once configured, policy enforcement groups are located under **Configure > Shared Objects**.

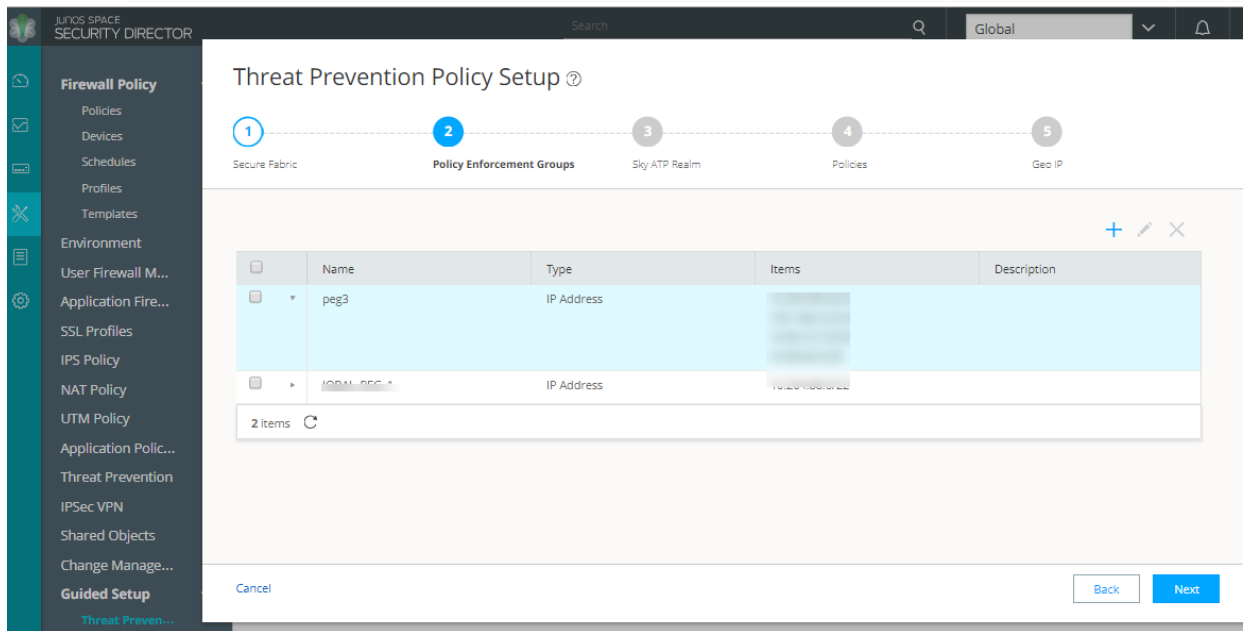


7. Add the Sky ATP realm. If you have not created a realm from within your Sky ATP account, you can create and register it here by clicking the + sign. Once you register a realm, you can enroll SRX Series devices into the realm.

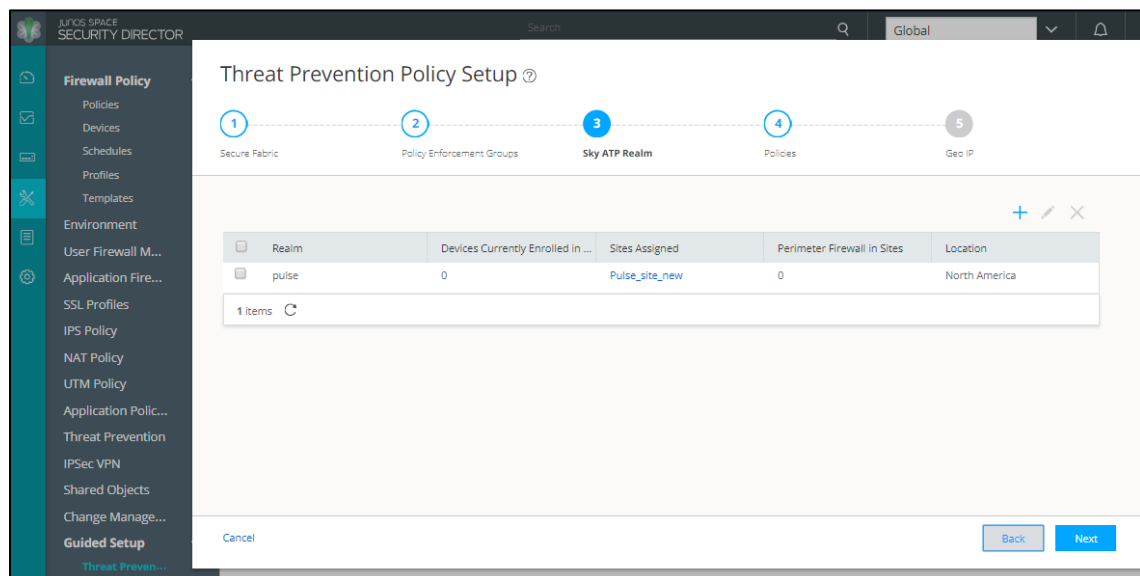


8. Assign the policies to groups. A threat prevention policy requires you to create a name for the policy, choose one or more profile types depending on the type of threat prevention this policy provides (C&C Server, Infected Host,

Malware), and select a log setting. Once configured, you apply policies to policy enforcement groups.

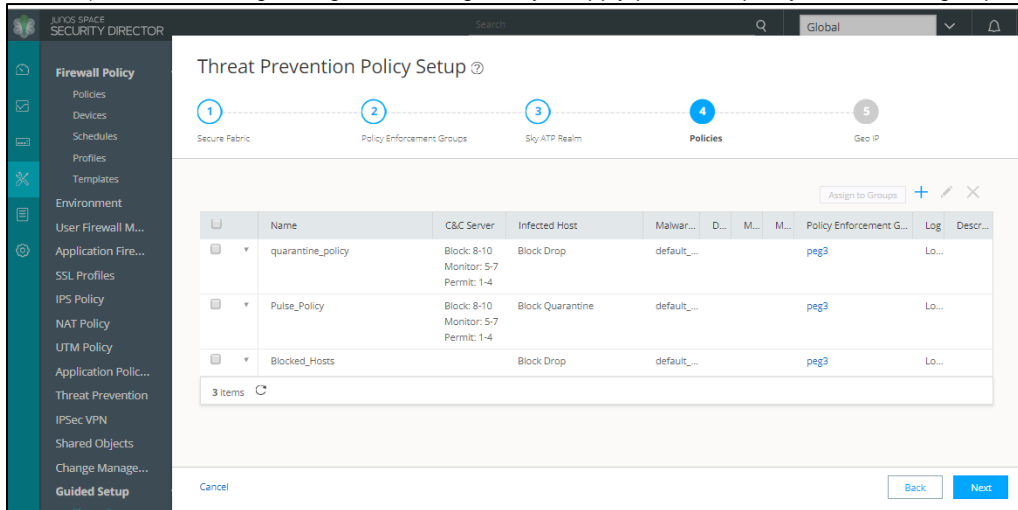


The following page is displayed after completing the Threat Prevention policy setup configuration.

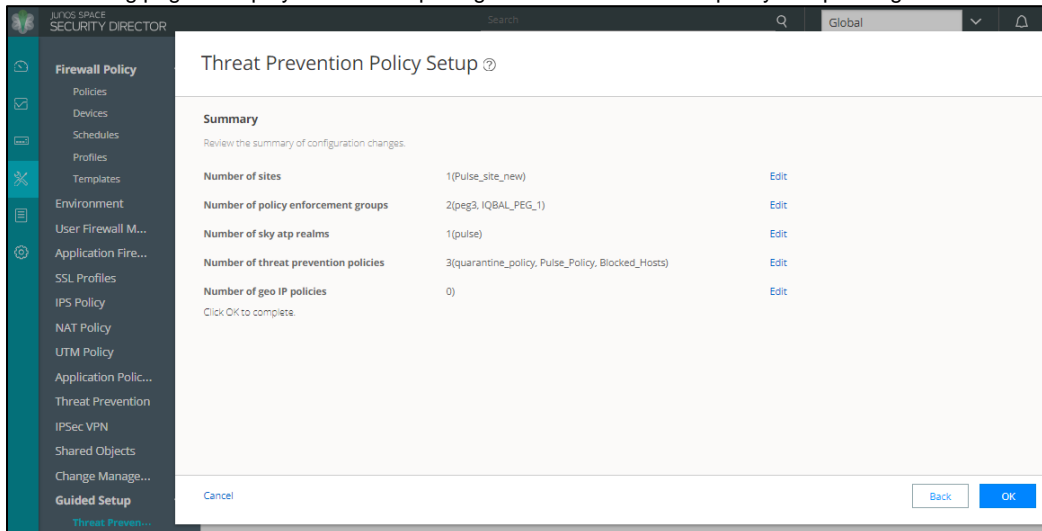

Configuring Juniper Policy Enforcer with SKY ATP

Enroll the SRX device and Juniper Policy Enforcer using SKY ATP.

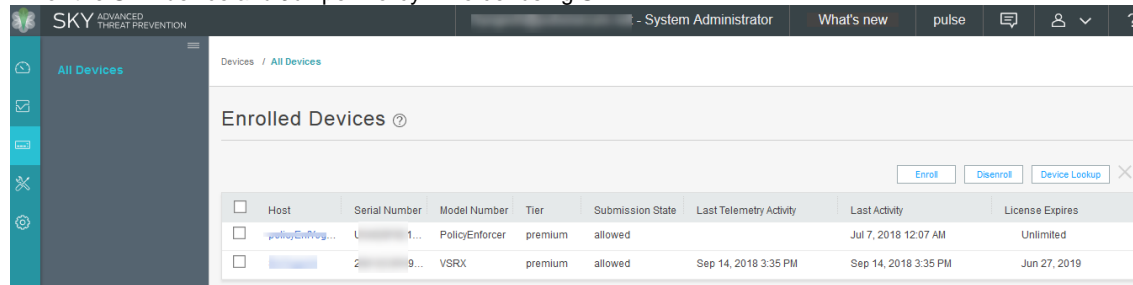


For more information on Juniper SDSN configuration, see [Juniper Documentation](#).

Troubleshooting


To verify the event logs on PPS, select **System > Log/Monitoring > Events**.

You can verify that the event logs are generated every time when an event is received from Juniper Policy Enforcer.

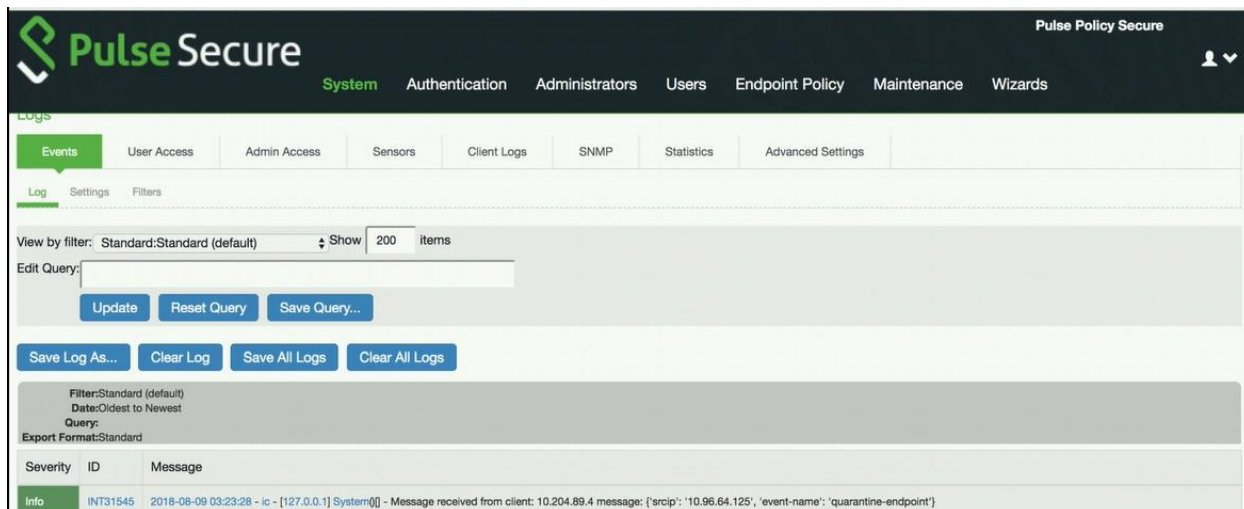


To verify the user access logs, select **System > Logs & Monitoring > User Access** to verify the user login related logs like realm, roles, username and IP address.


You can also verify whether the quarantined/blocked host is listed in the Infected Devices report, which lists the mac address, IP address, and the device status. To verify the reports, select **System > Reports > Infected Hosts**.

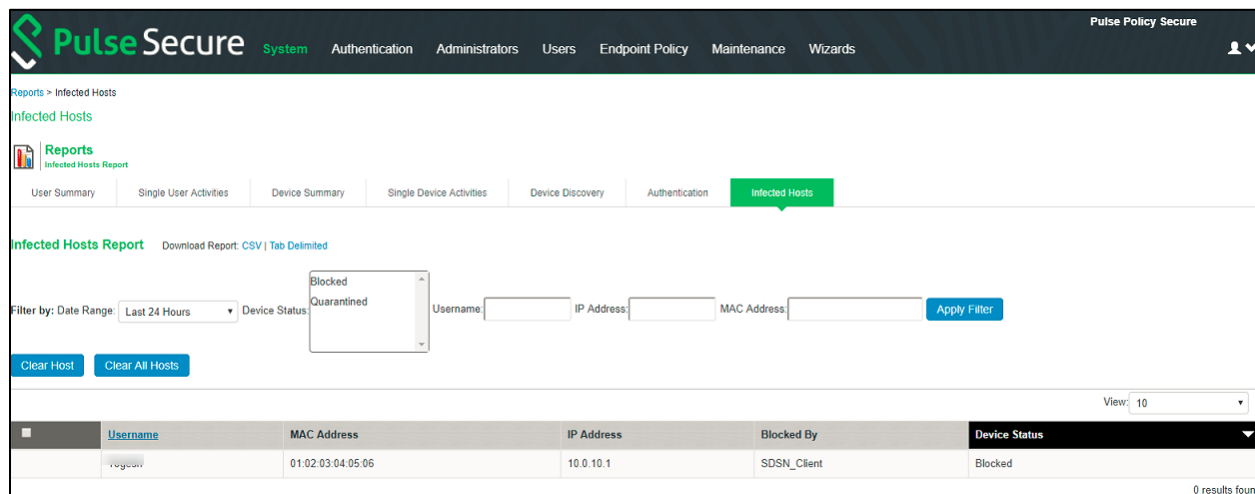


You can also enable debug logs to troubleshoot any issues. Select **Maintenance > Troubleshooting > Monitoring > Debug Log** to enable debug logs.

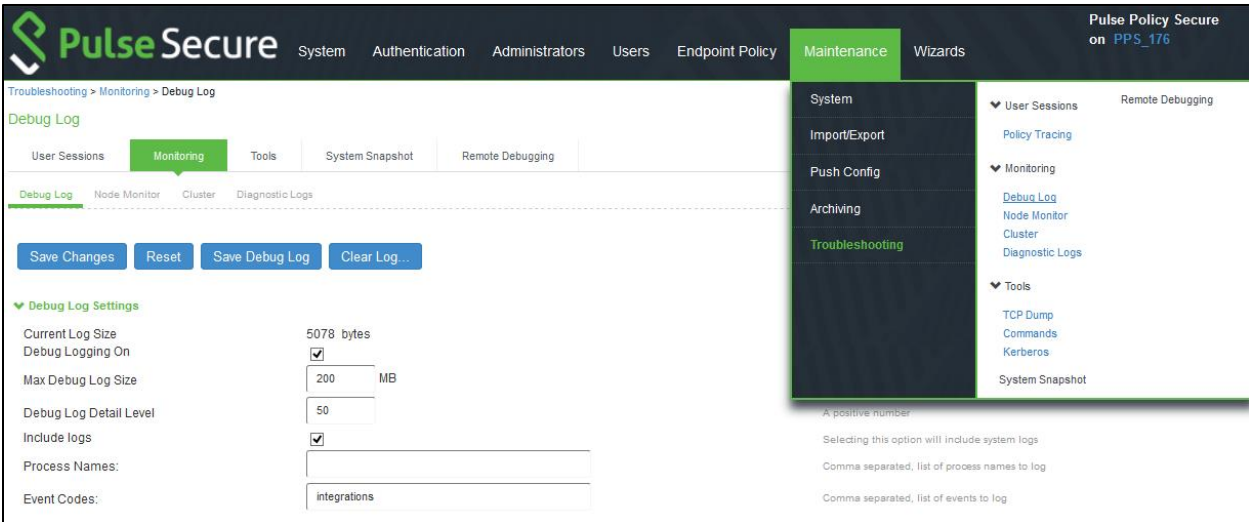

For any issues on the Policy Enforcer, you can download and verify the Policy Enforcer logs from Junos Space Security Director, Policy Enforcer > Settings page.

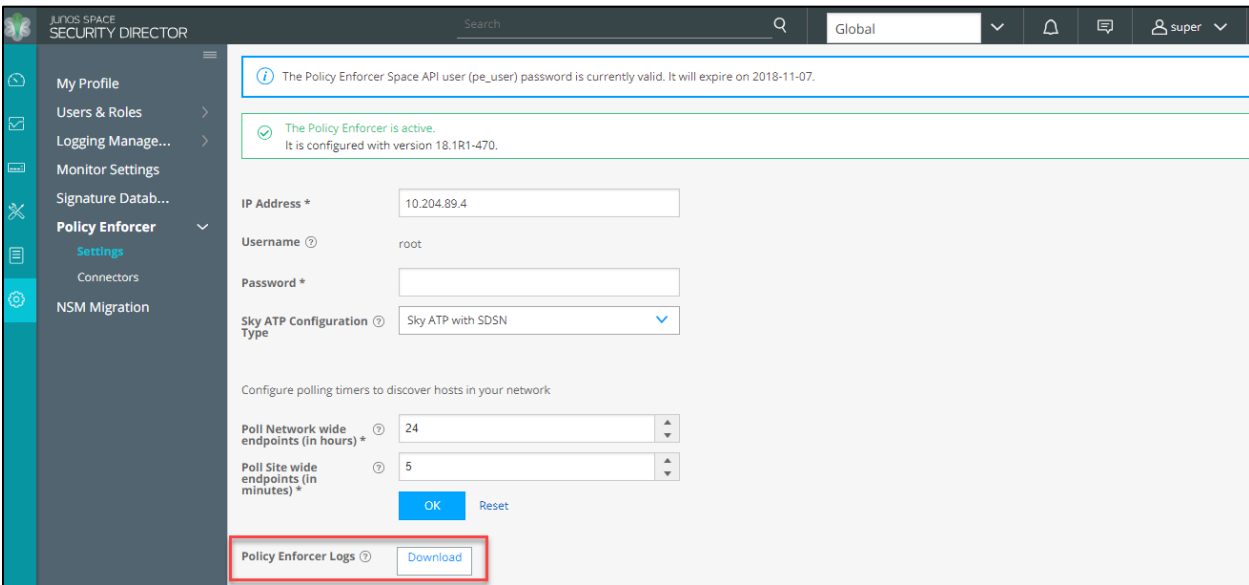

The Administrators can also verify the Hosts table from Sky ATP to check the status of the host. You can clear the host entry if the state of investigation is resolved-fixed.

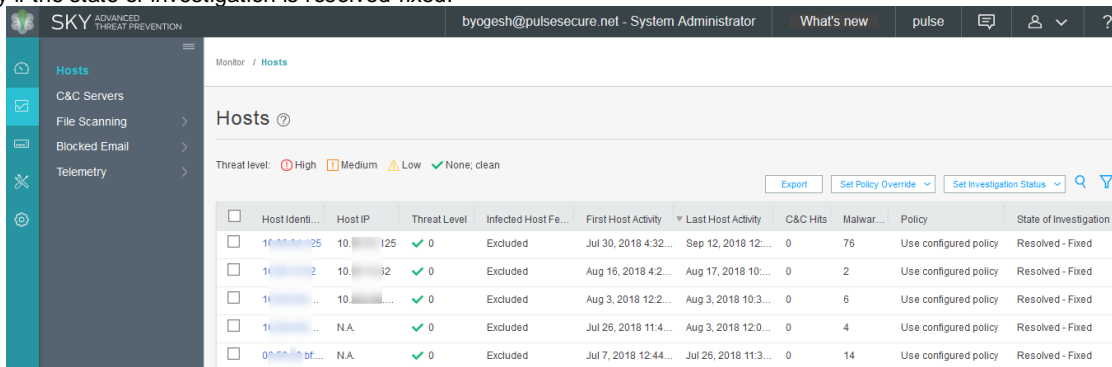

Endpoint Compliance

This part covers the following chapters:

- [Host Checker](#)

Host Checker

This chapter covers the following topics:

- [Host Checker Overview](#)
- [Policies](#)
- [Host Checker Installation Options](#)
- [Endpoint Security Assessment Plug-In \(ESAP\)](#)
- [Understanding Host Checker Policy Remediation](#)
- [Configuring Host Checker](#)
- [Configuring Antivirus Rule with Remediation Options](#)
- [Configuring Firewall Rule with Remediation Options](#)
- [Configuring Malware Rule](#)
- [Configuring AntiSpyware Rule](#)
- [Configuring Hard Disk Encryption Rule](#)
- [Configuring Common Vulnerability and Exposure \(CVE\) Check Rules](#)
- [Configuring Patch Management Rules](#)
- [Configuring OS Checks Rule](#)
- [Configuring Third-Party NHC Rule](#)
- [Configuring Ports Rule](#)
- [Configuring Process Rule](#)
- [Configuring File Rule](#)
- [Configuring Registry Settings Rule](#)
- [Configuring NetBIOS Rule](#)
- [Configuring MAC Address Rule](#)
- [Configuring Advanced Host Checking Rule](#)
- [Configuring Statement of Health Rule](#)
- [Configuring Machine Certificate Rule](#)
- [Configuring Third-Party Integrity Measurement Verifiers \(IMV\)](#)
- [Configuring a Remote IMV Server](#)
- [Configuring a Third-Party IMV Policy](#)
- [Host Checker Restrictions](#)
- [Configuring General Host Checker Remediation](#)
- [Store and Reuse Host Checker Policy Results](#)

Host Checker Overview

Host Checker is a software component that performs endpoint compliance checks on hosts that connect to the PPS. It supports two types of rules within a policy; predefined and custom. The pre-defined inspection capabilities consist of health

and security checks including antivirus versions, antispware, OS versions, hard disk encryption status and patch checks. The pre-defined rules are provided by OPSWAT and it uses the ESAP plug-in for pre-defined checks. For more information, see Endpoint Security Assessment Plug-In (ESAP).

Custom rules allows admin to define checks to collect system health using Integrity message collector (IMC) and evaluate using Integrity message verifier (IMV) of TNC framework. The custom rules are created by the admin to include inspection checks such as absence or presence of specific file, certificate checks, TCP ports, processes, registry key settings, NetBIOS name, MAC addresses or certificate of the client machine and third party inspection methods (custom DLLs).

Host Checker evaluation is done at 2 stages:

1. Initial check or evaluation of the user machine as the user browses to the sign-in page.
2. Enforcement of the policy during the user sign-in process, which happens at realm or role level.
 - **Realm-level policies/Pre-Authentication**— The realm level policy is also called as Pre-Authentication requirement as it occurs before the user is prompted for authentication.
 - **Role-level policies/Post-Authentication**—The role level policy is also called as Post-Authentication requirement as it occurs after the user is authenticated and during the role-mapping phase.

If the endpoint does not meet HC policy requirement, administrator can define a customized remediation page with specific instructions and links to resource to ensure that the end user's computer is compliant with the HC policy.

Host checking for layer 2 session is supported only for Pulse initiated 802.1x session. Note that it's not supported for session initiated by native supplicant. For layer 3 sessions host checking is supported for Pulse initiated and browser based sessions.

Trusted Network Connect

Host Checker is compliant with the Trusted Network Connect (TNC) model developed by Trusted Computing Group (TCG). TCG created an architecture and set of standards for verifying endpoint integrity and policy compliance during or after a network access request. For more information about TNC, see www.trustedcomputinggroup.org.

Policies

PPS Host checker component supports many different type of product policy evaluation on endpoint along with continues monitoring of system health. The below table lists the description of various policies and features, which can be defined as part of device compliance check.

Table 15: Supported Policies

| Policy | Description |
|--------------------------|---|
| Predefined | |
| Antivirus Policy | Policy to detect whether the Antivirus is installed and up-to-date with latest virus signatures. It also includes other options to check the last scan time, virus signature download, and remediation options. |
| Firewall Policy | Policy to detect the firewall installed on endpoint and the remediation option to turn on the firewall if it's turned off. |
| Anti-Spyware Policy | Policy to detect the installed spyware on endpoints. |
| Hard disk Encryption | Policy to detect and check the encryption status of the specified or all drives using installed encryption software. |
| Patch Management | Policy to check whether the required operating system patches are installed properly. |
| OS Checks | Policy to check the version of the windows operating systems and minimum service packs. |
| Custom | |
| 3rd Party NHC Check | Policy to specify the location of custom DLL files. |
| Ports policy | Policy to check if a particular port is either opened or closed to allow or reject the user authentication. |
| Process policy | Policy to control the software or processes that runs on the client machine. |
| File Policy | Policy to check if a particular file with specific version or checksum, or last modified file is present on endpoint to allow or reject the user authentication. |
| Registry Settings policy | Policy to check the registry and its value to allow or reject the user authentication, with a remediation option to set the registry value if not configured. |
| NetBIOS policy | Policy to check the NetBIOS name from list of NetBIOS names provided to control user access. |
| MAC Address policy | Policy to check if the endpoint MAC address is in the provided regex or white listing of mac addresses to control user access. |

| Policy | Description |
|------------------------------------|--|
| Machine Certificate Policy | Policy to check for the required machine certificate on the endpoint to control user access. This policy evaluates both public and private keys of the installed machine certificate on endpoint for users using Pulse Client. For agentless users, only public key is evaluated. |
| Advanced Host Checking | Policy to dynamically check the compliance status of the endpoints. It includes combining 2 policy types for obtaining the expected values of the check type. The expected values are fetched from registry location on the client machine for evaluating the policies. The advanced support for checking the expected values against another policy is supported on Ports, Process, File, Registry, NETBIOS, MAC Address, and Machine certificate. |
| Statement of Health | Policy to perform the health state validation to determine which roles or realms can be accessed by endpoints. It checks the system health indicators such as antivirus is enabled and up to date, antispysware is enabled and up to date, firewall is enabled and so on. |
| Host Checker General Settings | PPS provides following admin configuration options while performing host checking. |
| General Options | |
| Continuous Policy Evaluation | Option to configure periodic and continuous policy evaluation so that the endpoint is compliant with the Host Checker policy. |
| Virus Signature Version Monitoring | Option to monitor and verify the virus signatures, operating systems, and patches installed are up to date. |
| Pre-Authentication Host Checking | Pre-Authentication host checking are policies that are enforced at the realm level before authentication. |
| Post-Authentication Host Checking | Post-Authentication host checking are policies that are enforced when role assignment happens after authentication. |

Support Platform Matrix

A Host Checker policy contains one or more rules. Each rule can apply to different host checks and for different device types (Windows, Mac, Linux, Solaris, iOS, Android). The below table lists the Host Checker policies that are supported on Windows, Mac, Linux, and Solaris.

Table 16: Supported Policies for Desktop

| Policy | Windows | Mac | Linux | Solaris |
|-------------|---------|-----|-------|---------|
| Antivirus | Yes | Yes | No | No |
| Firewall | Yes | Yes | No | No |
| AntiSpyware | Yes | Yes | No | No |
| Malware | Yes | No | No | No |

| Policy | Windows | Mac | Linux | Solaris |
|---|---------|-----|-------|---------|
| Hard Disk Encryption | Yes | Yes | No | No |
| Patch Assessment | Yes | Yes | No | No |
| OS Checks | Yes | Yes | No | No |
| 3rd Party NHC Checks | Yes | No | No | No |
| Ports | Yes | Yes | Yes | Yes |
| Process | Yes | Yes | Yes | Yes |
| Files | Yes | Yes | Yes | Yes |
| Registry Setting | Yes | No | No | No |
| NetBIOS | Yes | Yes | No | No |
| MAC Address | Yes | Yes | No | No |
| Machine Certificates | Yes | No | No | No |
| Statement of Health | Yes | No | No | No |
| Advanced Host Checking | Yes | No | No | No |
| Common Vulnerability and Exposure (CVE) Check | Yes | No | No | No |

**Note:**

Agentless mode with Profiler is supported only with Windows platforms. The supported policies are Antivirus, Firewall, Antispyware, OS checks, Ports, Process, NetBIOS, and MAC Address. For more information, see [Profiler documentation](#).

Host Checker Installation Options

Host Checker is supported for agent and agentless clients. The installation options are listed below:

- Browser based Host Checking (Agentless) —You can use it for browser based log ins to check for host checking. This installation requires JAVA/PSAL to be configured on endpoint. Ensure that the endpoints have signed ActiveX components or signed Java applets enabled within their browsers.
- Pulse Client (Agent)—You can use Pulse client, which contains the Host Checker component for compliance check. To manually install the Host Checker, Select **Maintenance > System > Installers** and download the Pulse installer.

Using the downloaded executable file, you can:

- Distribute the file to client machines using software distribution tools. This option enables you to install an application or service on client machines.
- Post the executable in a secure repository so that users with the proper administrator right may download and install the appropriate version.

Auto-upgrading Host Checker

To automatically upgrade Host Checker:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Under Options, select Auto-upgrade Host Checker if you want the system to automatically download the Host Checker application to a client computer when the version of Host Checker on the system is newer than the version installed on the client.
3. Click Save Changes.

Endpoint Security Assessment Plug-In (ESAP)

The Endpoint Security Assessment Plug-in (ESAP) is a plug-in in PPS using which you can upload the latest SDK from Opswat independently.

Pulse Secure frequently adds enhancements, bug fixes, and support for new third-party applications to the plug-in. New plug-in releases are available independently and more frequently than new releases of the system software package. If necessary, you can upgrade the plug-in independently of a system upgrade.

You can upload up to four versions of the plug-in, but the system uses only one version at a time (called the active version). If necessary, you can rollback to a previously active version of the plug-in.

If the endpoints in your deployment connect to multiple servers simultaneously, all of those connected servers must use the same version of the ESAP plug-in.

Upgrading the ESAP

To upgrade the ESAP plug-in:

1. Download the Endpoint Security Assessment Plug-in from the following page:
<http://www.pulsesecure.net/support/downloads/?p=esap#sw>
 - To access the Customer Support Center, enter a username and password for a Pulse Secure Support Center account.
 - Click the ESAP Download Page link.
 - Navigate to the ESAP release you want.
 - Download the plug-in zip file to your computer.
2. Select **Authentication > Endpoint Security > Host Checker**.
3. On the Host Checker page, under Manage Endpoint Security Assessment Plug-In Versions:
 - If you want PPS to actively begin using the new component software immediately after you upload it, select the Set as active after upload option.
 - Click **Browse**, select the plug-in file to upload and click **OK**.
 - Click **Upload**. After the plug-in is installed, the date and time of the plug-in installation is displayed in the plug-in list.
 - If you did not select the Set as active after upload option, activate the plug-in to use by selecting the version in the plug-in, list and click Activate.



NOTE:

- You can rollback to an older plug-in version after you upgrade to a later version by selecting the older version as the active version.
- If you upgrade the system software to a newer version, or if you import a user configuration file, active plug-in version can change based on the supportability of ESAP version. If you want to use a different plug-in version after you upgrade or importing a user configuration file, you must manually activate that plug-in version.

Activating the Opswat SDK Version

Beginning with Release 5.3R5, PPS supports both v3 and v4 SDKs provided by OPSWAT. The default SDK version used is v4, but it can be reconfigured based on your requirement. The product/vendor names used by v3 and v4 SDK might differ. Due to the product/vendor names mismatch, there is a possibility that the rules become empty while creating Host Checker rule with v3 SDK activated and upon enabling v4 SDK. To avoid this, a migration page is added to help the administrators in migrating the policies from v3 to v4 SDK.

To use v3 or v4 SDK:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Enable the **Activate Older SDK in ESAP for Host Checker policy evaluation** check box for v3 SDK.
3. Disable the **Activate Older SDK in ESAP for Host Checker policy evaluation** check box for v4 SDK.

Figure 186: Activating Opswat SDK

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Name IMV Server

Manage Endpoint Security Assessment Plugin Versions

Currently Active ESAP version: 3.0.3
Default ESAP version: 3.0.3

10 records per page

| Version | Uploaded | Last Activated |
|---------|---------------------------------|---------------------------------|
| 3.0.3 | Mon 11 Dec 2017 02:02:07 AM EST | Mon 11 Dec 2017 02:02:14 AM EST |

☐ Activate Older Opswat SDK in ESAP for Host checker policy evaluation.

☐ Enable Active ESAP package on the client

Activate Delete

Package: Browse No file chosen

☐ Set as active after upload

Upload

*Indicates required field



NOTE: It is recommended to disable this option for using newer version of OPSWAT SDK, after all the Pulse Clients are upgraded to 5.2R5 or above and servers are upgraded to PPS 5.3R5 or above.

4. Click **Activate**. A confirm Activation page appears which lists the products and/or vendors, which are no longer supported in that particular ESAP SDK version. From the drop downlist, admin can select one or many new products /vendors instead of the existing product/vendor.

Figure 187: ESAP Activation

PulseSecure System Authentication Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure

Confirm Activation

The current configuration contains the following list of products and/or vendors that are no longer supported in ESAP version '3.0.1'. These items will be automatically deleted from the corresponding Host Checker rules upon ESAP activation.

10 records per page Search:

| Policy Name: | Platform: | Rule Name: | Rule Type: | Product/Vendor Name: | New Product/Vendor Name(s): |
|--------------|-----------|------------|------------------|---|-----------------------------|
| Hc_check | Mac | av | Specific Vendor | Kaspersky Labs | Kaspersky Lab |
| | | firewall | Specific Vendor | Apple Computer, Inc. | |
| | Windows | antivirus | Specific Vendor | Microsoft Corp. | |
| | | firewall | Specific Product | Microsoft Windows Firewall (10.x) | |
| | | hd | Specific Product | Symantec Encryption Desktop (10.x) | |
| | | | Specific Vendor | Symantec Corp. | |
| | | patch | Specific Product | System Center Configuration Manager (5.x) | |

Showing 1 to 7 of 7 entries

Previous 1 Next

NOTE: Only the products/vendors, which get changed are listed. If some rules have some products/vendors whose names are not changed, those products/vendors will be automatically migrated and will not be listed.

5. Enable **Backup 'User Configuration' and 'XML containing configured Host Checker, Realms and Roles details** check box to create a local backup of user configurations under Maintenance > Archiving > Local Backups.

Figure 188: Backup User Configuration

PulseSecure System Authentication Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure

evaluated as failed and may cause the host checker policy to fail. We strongly recommend that these empty HC rules be deleted manually after ESAP activation.

| Policy Name: | Platform: | Rule Name: | Rule Type: |
|--------------|-----------|------------|-------------------|
| Hc_check | Mac | av | Specific Vendors |
| | | firewall | Specific Vendors |
| | Windows | firewall | Specific Products |
| | | hd | Specific Products |
| | | | Specific Vendors |
| | | patch | Specific Products |

☒ Backup 'User Configuration' and 'XML containing configured Host Checker, Realms and Roles details'

Note: A backup of User Configuration and XML containing Host Checker policies, Realms and Roles details will be created under 'Maintenance->Archiving->Local Backups'. This may take several minutes (depends on configuration of the server)

Please click on Confirm if you want to continue activation of ESAP, otherwise click on Cancel.

Confirm Cancel

NOTE: Server maintains a maximum of 5 backups. To capture a new backup, older backup will be automatically deleted.

6. Click **Confirm**.

Changing the Active ESAP Package

Administrator can activate any of the already uploaded ESAP packages by selecting the corresponding radio button under “Manage Endpoint Security Assessment Plugin Versions” table and then clicking on “Activate” button.

To change the active ESAP packages:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Under Manage Endpoint Security Assessment Plugin Versions, select the required ESAP version.
3. Click **Activate**.

Figure 189: Changing Active ESAP package

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Manage Endpoint Security Assessment Plugin Versions

Currently Active ESAP version: 3.0.3
Default ESAP version: 3.0.3

10 records per page

| Version | Uploaded | Last Activated |
|--|-------------------------|-------------------------|
| 3.0.1 | Fri Oct 7 15:59:46 2016 | Fri Oct 7 15:59:54 2016 |
| <input checked="" type="radio"/> 3.0.3 | Thu Mar 1 11:06:25 2018 | Thu Mar 1 11:07:10 2018 |

☒ Activate Older Opwat SDK in ESAP for Host checker policy evaluation.
Note: ESAP contains two versions of Opwat SDKs for supporting policy evaluation. By default, older version of SDK will be used. It is recommended to disable this option for using newer version of Opwat SDK, after all the Pulse Clients are upgraded to 5.2RS or above and servers are upgraded to 6.2RS Pulse Connected Secure, CS-3RS Pulse Policy Secure or above.

☐ Enable Active ESAP package on the client
Note: Enabling this option ensures that the active ESAP package is used on all the client machines. If the client machine contains a newer ESAP package it will be replaced with the active ESAP version.

Activate **Delete**

Package **Browse** No file chosen

☐ Set as active after upload



Note: If the client machine has newer ESAP package and if it has to be replaced, then select “Enable the Active ESAP package”. See Enabling the Active ESAP Package to know about the procedure.

Enabling the Active ESAP Package

Administrator can enable “Enable Active ESAP package on the client” checkbox to ensure that client machine always uses the active ESAP package, even if the active ESAP package is older than the version installed on the client system. In case client machine has newer ESAP package installed, it will be replaced with the older Active ESAP version with this option enabled.

To enable the active ESAP package:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Under Manage Endpoint Security Assessment Plugin Versions, enable **Enable Active ESAP package on the client** checkbox.

Figure 190: Enabling Active ESAP package

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The 'Authentication' tab is selected. Below the navigation bar, there is a table with columns 'Name', 'IMV', and 'Server'. Below this table, there is a section titled 'Manage Endpoint Security Assessment Plugin Versions'. This section displays the 'Currently Active ESAP version: 3.2.6' and 'Default ESAP version: 3.2.3'. A table lists the installed ESAP versions with columns 'Version', 'Uploaded', and 'Last Activated'. The table shows two versions: 3.2.3 (uploaded Mon May 28 06:39:44 2018, last activated Mon May 28 06:39:51 2018) and 3.2.6 (uploaded Tue Jun 5 01:05:06 2018, last activated Thu Jun 7 06:44:21 2018). Below the table, there is a checkbox labeled 'Enable Active ESAP package on the client' which is checked and highlighted with a red box. Other options include 'Activate Older Opswat SDK in ESAP for Host checker policy evaluation' and 'Set as active after upload'. Buttons for 'Activate', 'Delete', 'Browse', and 'Upload' are also present.

| Version | Uploaded | Last Activated |
|---------|--------------------------|--------------------------|
| 3.2.3 | Mon May 28 06:39:44 2018 | Mon May 28 06:39:51 2018 |
| 3.2.6 | Tue Jun 5 01:05:06 2018 | Thu Jun 7 06:44:21 2018 |

☒ Enable Active ESAP package on the client

Note: Enabling this option ensures that the active ESAP package is used on all the client machines. If the client machine contains a newer ESAP package it will be replaced with the active ESAP version.

Buttons: Activate, Delete, Browse, Upload

3. Click **Activate**.

Updating Virus Signature Database

You can automatically import the current virus-signature version-monitoring from the Pulse Secure staging site at a specified interval, or you can download the files from Pulse Secure and use your own staging server. You can also configure a proxy server as a staging site between PPS and the Pulse Secure site. To use a proxy server, you enter the server network address, port, and authentication credentials, if applicable.

To access the Pulse Secure staging site for updates, you must enter the credentials for your Pulse Secure Support account.

For patch assessment remediation with Pulse Secure you can use OPSWAT (a third-party vendor) to automatically download patches from trusted sources to the endpoint.

To configure PPS to automatically import the current virus signature version-monitoring from the Pulse Secure staging site:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Select **Virus signature version monitoring**.
3. Select **Auto-update virus signatures list**.
4. For Download path, leave the existing URLs of the staging sites where the current lists are stored. The default URLs are the paths to the Pulse Secure staging site:
5. For Download interval, specify how often you want PPS to automatically import the current list(s).
6. For Username and Password, enter your **Pulse Secure Global Support Center (PSGSC)** credentials.
7. Click **Save Changes**.

To manually import the current virus signature version-monitoring lists:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Click **Virus signature version monitoring**.
3. Download the list(s) from the Pulse Secure staging site to a network server or local drive on your computer by entering the Pulse Secure URLs in a browser window:
4. https://download.pulsesecure.net/software/av/uac/epupdate_hist.xml
5. <https://download.pulsesecure.net/software/hc/patchdata/patchupdate.dat>
6. Under Manually import virus signatures list, click Browse, select the list, and then click OK.
7. Click **Save Changes**.



NOTE: If you use your own staging site for storing the current list(s), you must upload the trusted root certificate of the CA that signed the staging's server certificate to PPS.

To use a proxy server as the auto-update server:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Select **Virus signature version monitoring**.
3. Select **Auto-update virus signatures list**.
4. For Download path, leave the existing URLs of the staging sites where the current lists are stored. The default URLs are the paths to the Pulse Secure staging site:

https://download.pulsesecure.net/software/av/uac/epupdate_hist.xml

(for auto update virus signatures list)

<https://download.pulsesecure.net/software/hc/patchdata/patchupdate.dat>

(for auto update patch management)

1. For Download interval, specify how often you want PPS to automatically import the current lists.
2. For Username and Password, enter your Pulse Secure Global Support Center (PSGSC) credentials.
3. Select the **Use Proxy Server** check box.
4. For IP Address, enter the IP address of your proxy server.
5. For Port, enter the port that the **Pulse Secure Global Support Center** (PSGSC) will use to communicate with your proxy server.
6. If your proxy server is password protected, type the Username and Password of the proxy server.
7. Click **Save Changes**.

Understanding Host Checker Policy Remediation

This topic describes Host Checker policy remediation. It includes the following information:

- [Remediation Options](#)
- [Remediation User Experience](#)

Remediation Options

You can specify general remediation actions for Host Checker to take if an endpoint does not meet the requirements of a policy. For example, you can display a remediation page to the user that contains specific instructions and links to resources to help the user bring their endpoint into compliance with Host Checker policy requirements.

You can also include a message to users (called a reason string) that is returned by Host Checker or an IMV and that explains why the client machine does not meet the Host Checker policy requirements.

For example, the user might see a remediation page that contains custom instructions, a link to resources, and reason strings:

For each Host Checker policy, you can configure two types of remediation actions:

- **User-driven**—Using custom instructions and reason strings, you can inform the user about the failed policy and how to make his computer conform. The user must take action to successfully re-evaluate the failed policy unless you configure an IMV to automatically remediate his computer. For instance, you can create a custom page that is linked to a policy server or Web page and enables the user to bring his computer into compliance.
- **Automatic (system-driven)**—You can configure Host Checker to automatically remediate the user's computer. For example, when the initial policy fails, you can kill processes, delete files, or allow automatic remediation by an antivirus rule, a firewall rule, or a registry setting rule. Host Checker does not inform users when performing automatic actions. (You could, however, include information in your custom instructions about the automatic actions.)

Remediation User Experience

Users might see a remediation page in the following situations:

- Before the user signs in:
 - If you enable custom instructions or reason strings for a policy that fails, the system displays the remediation page. The user has two choices:
 - Take the appropriate actions to make the endpoint conform to the policy and then click Try Again on the remediation page. Host Checker checks the user's computer again for compliance with the policy.

- Leave the endpoint in its current state and click Continue to sign in. The user cannot access the realm, role, or resource that requires compliance with the failed policy.

If you do not configure the system with at least one realm that allows access without enforcing a Host Checker policy, the user must bring the endpoint into compliance before signing in.

- If you do not enable custom instructions or reason strings for a policy that fails, Host Checker does not display the remediation page. Instead, a message displays telling the user that no additional information has been provided and to contact the system administrator. The system does not assign the user a role that allows access to protected resources.
- After the user signs in:
 - Pulse—During a session, if a user's computer becomes noncompliant with the Host Checker policy, a message is displayed briefly in the system tray that informs the user of the noncompliance. The remediation page is displayed on the client.
 - Agentless—During a session, if a user's agentless computer becomes noncompliant with the Host Checker policy, the system displays the remediation page to inform the user of the noncompliance. On Windows agentless computers, Host Checker displays a bubble and tray icon if the endpoint becomes noncompliant. The user must click the bubble or tray icon to open a browser window that contains the remediation instructions. On Macintosh, Linux or Solaris agentless computers, Host Checker automatically opens a browser window that contains the remediation instructions as soon as the endpoint is noncompliant.

Configuring Host Checker Policy

To configure a Host Checker policy:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Under Policies, click New.
3. Enter a name in the Policy Name field then click Continue. (Users see this name on the Host Checker remediation page if you enable custom instructions for this policy.)
4. Create one or more rules to associate with the policy.
5. Configure additional system-level options on **Authentication > Endpoint Security > Host Checker** page.
6. Determine the level at which you want to enforce Host Checker policies:
 - To enforce Host Checker policies when the user initially signs in, implement the policy at the realm level select Users > User Realms > *Select Realm* > Authentication Policy > Host Checker.
 - To allow or deny users access to specific roles based on compliance with Host Checker policies, implement the policies at the role level by using the Users > User Roles > *Select Role* > General > Restrictions > Host Checker page of the admin console.
 - To map users to roles based on their compliance with Host Checker policies, select Users > User Realms > *Select Realm* > Role Mapping and use custom expressions.
7. To create client-side logs. Select **System > Log/Monitoring > Client Logs/Settings** and enable Host Checker and Pulse Desktop Client option.
8. If more than one valid session exists from the same system, and Host Checker is used in those sessions, all valid sessions are terminated if a user signs out from any of the sessions. To prevent this, turn off Host Checker for those sessions that do not need Host Checker.



Note: Enable **Agentless Mode with Profiler** for using Agentless Host Checker policy evaluation. As a pre-requisite the Admin must configure the Profiler server to collect the endpoint attributes. Note that the Agentless Mode with Profiler functionality is also supported on the MAC Authentication Realm. Refer the [Profiler documentation](#) for configuration and other details.

Configuring Antivirus Rule with Remediation Options

Use this rule type to configure antivirus rule along with remediation actions. You can also monitor policies to ensure that logged-in endpoints maintain compliance status, and remediate the endpoint to another role or realm depending on the current status.

To configure a predefined antivirus rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a policy or click on existing policy in the Policies section of the page.
3. Select the tab for Windows or Mac, depending on the platform for which this rule is intended.
4. Under Rule Settings, select **Predefined: Antivirus** and click **Add**.

Figure 191: Antivirus Rule with Remediation Options

Configuration > Host Checker Policy > Add Predefined Rule : Antivirus

Add Predefined Rule : Antivirus

Rule Type: Antivirus

*Rule Name:

▼ *Criteria

☐ Require any supported product.

☒ Require specific products/vendors

☐ Require any supported product from a specific vendor.

☐ Require specific products

▼ Optional

The following check is supported by [these Antivirus products](#). For any other products, this check will be ignored.

☐ Successful System Scan must have been performed in the last days.

The following check is supported by [these Antivirus products](#). For any other products, this check will be ignored. For this check to be effective, enable the 'Auto-update virus signatures list' option or manually import the virus signatures list on Endpoint Security page.

☐ Check for the Virus Definition files

☐ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

Powered by
OPSWAT

5. Enter the name of the antivirus rule.
6. To determine if your software vendor's product is supported for the System Scan check, click **these Antivirus products**. A new window opens with a list of the products that support the feature.
7. Select or clear the check box next to **Successful System Scan must have been performed in the last _ days**, and enter the number of days in the box. If you select this check box, a new option is displayed. If the remediation action to start an antivirus scan successfully begun, you can override the previous check.
8. Select or clear **Consider this rule as passed if 'Full System Scan' was started successfully as remediation** check box.
9. Select or clear the **Check for Virus Definition files** check box. If you select this check box, then choose either **Virus Definition files should not be older than n Updates** (the range for this value is 1 - 20) or **Virus Definition files should not be older than n Days** (the range for this value is 1 – 30).
10. Select one of the following options:
 - Require any supported product allows you to check for any product (rather than requiring you to select every product separately). This option button reveals a list of products in the remediation section to allow you to enable remediation options which are product specific.
 - **Require specific products/vendors** allows you to define compliance by allowing any product by a specific vendor or provides functionality that allows you to select individual products to define compliance.

After you select your vendors and products, remediation options appear on the page.

For each of the following remediation actions:

- Download latest virus definition files—Obtains the latest available file for the specified vendor from the vendor's website.
- Turn on Real Time Protection—Launches the virus-scanning mechanism for the specified vendor.
- Start Antivirus Scan—Performs a real-time virus scan for the specified vendor.

The check box is active if the action is supported for your product.

If your antivirus product is not supported, you can click the remediation column headers to determine what vendors and products are supported.

1. If your product is supported, select the check box for the remediation action that you want to apply.
2. Under Optional, select **Monitor this rule for change in result** to continuously monitor the policy compliance of endpoints. If this check box is selected, the compliance status of an endpoint that has successfully logged in changes, PPS initiates a new handshake to reevaluate realm or role assignments.
3. Click **Save Changes** to save the antivirus rule and enforce antivirus remediation.
4. (Optional) Add more rules to the policy, specify how Host Checker should evaluate multiple rules within the policy, and define remediation options.

Configuring Firewall Rule with Remediation Options

Use this rule type to create a Host Checker firewall rule that requires the endpoint to have a specific firewall installed and running before it connects to the network.

To configure a Host Checker predefined firewall rule:

1. Select Authentication > Endpoint Security > Host Checker.
2. Create a policy or click an existing policy in the Policies section of the page.
3. Select the tab for Windows or Mac, depending on the platform for which this rule is intended.
4. Under Rule Settings, select Predefined: Firewall and click Add.

Figure 192: Firewall Rule with Remediation Option

Configuration > Host Checker Policy > Add Predefined Rule : Firewall

Add Predefined Rule : Firewall

Rule Type: Firewall

*Rule Name:

▼ Criteria

- ☐ Require any supported product.
- ☒ Require specific products/vendors
 - ☐ Require any supported product from a specific vendor.
 - ☐ Require specific products

▼ Optional

- ☒ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

Powered by
OPSWAT

* indicates required field

5. Enter a name for the firewall rule.
6. Select one of the following options:
7. Require any supported product allows you to check for any product (rather than requiring you to select every product separately). This option button provides a list of products in the remediation section to allow you to enable remediation options which are product specific.

8.
 - **Require specific products/vendors** allows you to define compliance by allowing any product by a specific vendor or provides functionality that allows you to select individual products to define compliance.
9. After you select your vendors and products, remediation options appear on the page.
10. If your firewall is supported, select the Turn on Firewall check box.
11. Under Optional, select Monitor this rule for change in result to continuously monitor the policy compliance of endpoints. If this check box is selected, and a change in compliance status on an endpoint that has successfully logged in occurs, PPS initiates a new handshake to reevaluate realm or role assignments.
12. Click Save Changes to save the firewall rule and enforce firewall remediation.
13. (Optional) Add more rules to the policy, specify how Host Checker should evaluate multiple rules within the policy, and define remediation options.

Configuring Malware Rule

Use this rule type to check for installed malware on endpoints.

To configure a Host Checker Predefined malware rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new or click an existing policy in the Policies section of the page.
3. Select the tab for Windows.
4. Under Rule Settings, select Predefined: Malware and click Add.

Figure 193: Malware Rule

The screenshot shows the Pulse Secure web interface for configuring a Malware rule. The breadcrumb trail is "Configuration > Host Checker Policy > Add Predefined Rule: Malware". The navigation menu includes "System", "Authentication", "Administrators", "Users", "Endpoint Policy", "Maintenance", and "Wizards". The "Add Predefined Rule: Malware" page has a "Rule Type: Malware" and a "Rule Name" field. The "Criteria" section has a "Criteria" dropdown and a "Selected Types" list. The "Available Types" list includes "InfoExpress CyberGatekeeper Agent", "Sygate Enforcement API", and "Sygate Security Agent". There are "Add" and "Remove" buttons between the lists. The "Optional" section has a checkbox for "Monitor this rule for change in result". A note at the bottom states: "Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by Avast/Avira software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints." At the bottom are "Save Changes" and "Cancel" buttons. A small note at the bottom left says "Indicates required field".

5. From the Criteria, select the Malware Software to be installed on the endpoint.
6. Click Save Changes

Configuring AntiSpyware Rule

Use this rule type to check for installed antispyware on endpoints.

To configure a Host Checker Predefined Spyware rule:

1. Select Authentication > Endpoint Security > Host Checker.
2. Create a new or click an existing policy in the Policies section of the page.
3. Select the tab for Windows or Mac, depending on the platform for which this rule is intended.
4. Under Rule Settings, select Predefined: AntiSpyware and click Add.

Figure 194: AntiSpyware Rule

Configuration > Host Checker Policy > Add Predefined Rule : AntiSpyware

Add Predefined Rule : AntiSpyware

Rule Type: AntiSpyware

*Rule Name:

▼ Criteria

Note: Anti-Virus products that provide both anti-virus and anti-spyware functionality are also listed in the Anti-spyware products list

☐ Require any supported product.

☒ Require specific products/vendors

☐ Require any supported product from a specific vendor.

☐ Require specific products

▼ Optional

☐ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

Powered by
OPSWAT®

Save Changes Cancel

5. Enter a name for the firewall rule.
6. Select one of the following options:
 - Require any supported product allows you to check for any product (rather than requiring you to select every product separately). This option button provides a list of products in the remediation section to allow you to enable remediation options which are product specific.
 - **Require specific products/vendors** allows you to define compliance by allowing any product by a specific vendor or provides functionality that allows you to select individual products to define compliance.
7. Under Optional, select Monitor this rule for change in result to continuously monitor the policy compliance of endpoints. If this check box is selected, and a change in compliance status on an endpoint that has successfully logged in occurs, PPS initiates a new handshake to re-evaluate realm or role assignments.
8. Click Save Changes.
9. (Optional) Add more rules to the policy, specify how Host Checker should evaluate multiple rules within the policy, and define remediation options.


Configuring Hard Disk Encryption Rule

Use this rule type to check for installed Hard Disk Encryption software on endpoints and specify the drives which needs to be encrypted.

To configure a predefined hard disk encryption rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Select the tab for Windows or Mac, depending on the platform for which this rule is intended.
4. Under Rule Settings, select Predefined: HardDisk Encryption and click Add.

Figure 195: Hard Disk Encryption Rule

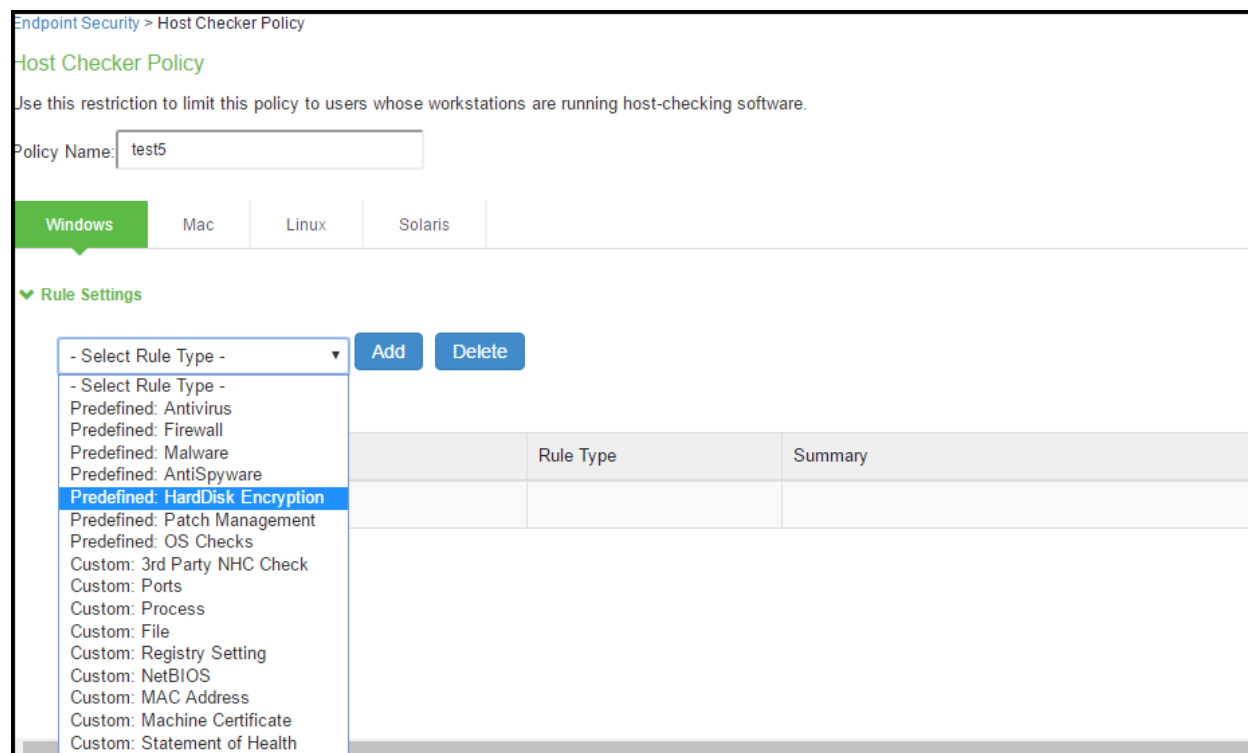

5. Under Rule Settings, select Predefined: HardDisk Encryption and then click Add.

Figure 196: HardDisk Encryption

Configuration > Host Checker Policy > Add Predefined Rule : HardDisk Encryption

Add Predefined Rule : HardDisk Encryption

Rule Type: HardDisk Encryption

*Rule Name:

▼ *Criteria

☐ Require any supported product.

☒ Require specific products/vendors

☐ Require any supported product from a specific vendor.

☐ Require specific products

Drive Configuration Details:

☒ All Drives

☐ Specific Drives

Powered by
OPSWAT

* Indicates required field

6. Enter a Rule Name for the HardDisk Encryption rule.
7. Select one of the following options:
 - Require any supported product allows you to check for any product (rather than requiring you to select every product separately). This option button provides a list of products in the remediation section to allow you to enable remediation options which are product specific.
 - **Require specific products/vendors** allows you to define compliance by allowing any product by a specific vendor or provides functionality that allows you to select individual products to define compliance.
8. Under Drive Configuration, select the required option.
 - All Drives--(Default) Select this option to check if all the drives on the client machine are encrypted.
 - Specific Drives-Select this option to check if only specific drives on the client machine are encrypted.
 - Drive Letters— Enter the drive name. For example, C, D, E.
 - Consider policy as passed if the drives are not detected— Select this option to consider policy as passed if the drives are not detected
9. Click Save Changes.

Configuring Common Vulnerability and Exposure (CVE) Check Rules

Host Checker is used for analyzing the health of the endpoint before providing access to the network. As endpoints are vulnerable to many types of new attacks such as Ransomware attack. It becomes extremely important to identify such endpoints, which are vulnerable to any attacks. The CVE lists some of these attacks along with the required software patches to prevent from such attacks. PPS provides the CVE check rule, which helps in identifying the endpoints which are vulnerable using the OPSWAT library. If the endpoint is vulnerable appropriate action is taken based on the rule configuration. For example, the user can be denied from accessing the network.



Note:

- CVE check rule is supported from ESAP 3.2.3 onwards.
- OPSWAT version 3 does not support CVE rules. These rules will always be evaluated as failed and may cause the host checker policy to fail. It is recommended to delete CVE rules if you are using OPSWAT V3 SDK for evaluation.

To configure a predefined CVE check rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Click the **Windows** tab.
4. Under Rule Settings, select **Predefined: CVE Checks** and click **Add**.

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Endpoint Security > Host Checker Policy

Host Checker Policy

Use this restriction to limit this policy to users whose workstations are running host-checking software.

Policy Name:

Windows Mac Linux Solaris

Rule Settings

- Select Rule Type - Add Delete

Predefined: Antivirus
Predefined: Firewall
Predefined: AntiSpyware
Predefined: HardDisk Encryption
Predefined: Patch Management
Predefined: OS Checks
Predefined: CVE Checks
Custom: 3rd Party NHC Check
Custom: Ports
Custom: Process
Custom: File
Custom: Registry Setting
Custom: NetBIOS
Custom: MAC Address
Custom: Machine Certificate
Custom: Advanced Host Checking
Custom: Statement of Health

Enable Custom Instructions
Kill Processes
Delete Files
Send reason strings

Dashboard Reporting

Consider for Dashboard/Reporting

Note: If this checkbox is not selected, policy details are not reported to dashboard. In other words, even if this policy fails, the endpoint compliance state is not affected in dashboard charts and reports.

1.

5. Enter a Rule Name for the CVE Check rule. For example, you can configure a check for Wannycry vulnerability.

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Host Checker Policy > Add Predefined Rule: CVE Checks

Add Predefined Rule: CVE Checks

Rule Type: CVE Checks

*Rule Name:

Criteria

Require all supported CVE checks.
Check for specific CVE checks

Powered by
OPSWAT

Save Changes Cancel

* indicates required field

6. From the Criteria, select if you require all the CVE checks from OPSWAT or choose the specific CVE checks from the available CVE checks list.

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Host Checker Policy > Edit Predefined Rule : CVE Checks

Edit Predefined Rule : CVE Checks

Rule Type: CVE Checks

*Rule Name: wannacry

▼ Criteria

☐ Require all supported CVE checks.

☒ Check for specific CVE checks

Available CVE checks:

CVE-2017-0199: Vulnerability that exploits GoldenEye/Peyta ransomware.

CVE-2017-8563: Vulnerability that exploits Windows evaluation of privilege.

Add ->

<- Remove

Selected CVE checks:

CVE-2017-0143: Vulnerability that exploits WannaCry ransomware.

CVE-2017-0144: Vulnerability that exploits WannaCry ransomware.

CVE-2017-0145: Vulnerability that exploits WannaCry ransomware.

CVE-2017-0146: Vulnerability that exploits WannaCry ransomware.

CVE-2017-0147: Vulnerability that exploits WannaCry ransomware.

CVE-2017-0148: Vulnerability that exploits WannaCry ransomware.

Powered by OPSWAT

Save Changes Cancel

7. Click Save Changes.

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Endpoint Security > Host Checker Policy

Host Checker Policy

Use this restriction to limit this policy to users whose workstations are running host-checking software.

Policy Name: HCNew

Windows Mac Linux Solaris

▼ Rule Settings

- Select Rule Type - Add Delete

10 records per page

Search:

| Name | Rule Type | Summary |
|----------|-------------------------|---|
| allCVE | CVE Checks (predefined) | ► All CVE Checks |
| wannacry | CVE Checks (predefined) | ▼ CVE Checks Selected CVE-2017-0143: Vulnerability that exploits WannaCry ransomware. CVE-2017-0144: Vulnerability that exploits WannaCry ransomware. CVE-2017-0145: Vulnerability that exploits WannaCry ransomware. CVE-2017-0146: Vulnerability that exploits WannaCry ransomware. CVE-2017-0147: Vulnerability that exploits WannaCry ransomware. CVE-2017-0148: Vulnerability that exploits WannaCry ransomware. |
| Peyta | CVE Checks (predefined) | ▼ CVE Checks Selected CVE-2017-0199: Vulnerability that exploits GoldenEye/Peyta ransomware. |

Configuring Patch Management Rules

You can configure Host Checker to check for installed Patch Management Software on endpoints.

Patch management software detects patch status based on the configured rules on corresponding patch management server. Detection of patches status on the client machine depends on the support provided by the 3rd party patch management solution that is used. Hence different patch management software on the same client can report the status differently. To avoid conflicts, administrator is allowed to configure only one patch management software product on policy configuration page.

It provides options to configure various Severity and Category options that administrator is interested in. These additional details are used during policy evaluation such that only the missing patches that belongs to configured "Severity" and "Category" are considered. Any other patches that does not belong to configured "Severity" and "Category" are not considered during policy evaluation.

The default "Severity" options selected in policy are Critical, Important. The default "Category" options selected in policy are Security Update, Critical Update, Regular Update, Driver Update.



Note:

- The remediation support for patch management rule is available only for Windows platform using SCCM client.
- Patch Management on Mac is not supported with OPSWAT SDK V3 and pre-9.0R1 Pulse clients.

To configure a predefined patch management rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Click the **Windows/Mac** tab.
4. Enter a Rule Name for the Patch Management rule.


The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'Endpoint Security > Host Checker Policy'. The page title is 'Host Checker Policy'. Below the title, there is a text box for 'Policy Name' containing 'HC_Patch'. There are tabs for 'Windows', 'Mac', 'Linux', and 'Solaris', with 'Mac' being the active tab. The 'Rule Settings' section is expanded, showing a dropdown menu with 'Predefined: Patch Management' selected. The 'Add' button is visible next to the dropdown. The 'Criteria' section is partially visible, showing a table with columns 'Rule Type' and 'Summary'. The 'Severity' and 'Category' details are also visible.

5. Under Rule Settings, select **Predefined: Patch Management** and click **Add**.
6. From the Criteria, select the **Patch Management Software** to be installed on the endpoint.
7. Select the Severity and Category details of the patches to be evaluated.




NOTE: For patch management products that do not provide "Severity" and "Category" details, administrator can choose the "Unknown" options so that all the reported missing patches are considered in policy evaluation.

8. (Windows Only) If you want to do remediation, Under the Remediation section, select **Enable Automatic Patch Deployment**.
9. Click **Save Changes**.



SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure

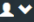

Configuration > Host Checker Policy > Add Predefined Rule : Patch Management

Add Predefined Rule : Patch Management

Rule Type: Patch Management

*Rule Name:

▼ *Criteria


Select Product Name:

Severity: ☒ Critical ☒ Important ☐ Moderate ☐ Low ☐ Unspecified/Unknown

Note: For some of the patch management software products, severity is not detected. In such cases, enable "Unspecified/Unknown" severity to detect the missing patches

Category: ☒ Security Update ☐ Rollup Update ☒ Critical Update ☒ Regular Update ☒ Driver Update ☐ Service Pack Update ☐ Unknown

Note: For some of the patch management software products, category is not detected. In such cases, enable "Unknown" category to detect the missing patches

Powered by


* indicates required field

Configuring OS Checks Rule

You can configure Host Checker to check for the Windows/MAC operating systems and minimum service pack versions that you specify. Any service pack whose version is greater than or equal to the version you specify satisfies the policy.



Note: OS Check rule is supported starting from MAC OS X El Capitan (10.11) and above.

To configure a rule for OS checks:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Click the **Windows/MAC** tab.
4. Enter a Rule Name for the OS checks rule.
5. Under Rule Settings, select **Predefined: OS checks** and click **Add**.

Figure 197: Configuring OS Checks Rule for Windows

Figure 198: Configuring OS Checks Rule for MAC

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure

Configuration > Host Checker Policy > Add Predefined Rule: OS Checks

Add Predefined Rule: OS Checks

Rule Type: OS Checks

*Rule Name:

▼ *Criteria

☐ Mac El-Capitan
Minimum Service Pack/Version:

☐ Mac High-Sierra
Minimum Service Pack/Version:

☐ Mac Sierra
Minimum Service Pack/Version:

Save Changes **Cancel**

* indicates required field

6. From the Criteria, select the Windows/MAC operating systems and minimum service pack/version to be there on the endpoint.
7. Click **Save Changes**.

Configuring Third-Party NHC Rule

Use this rule type to specify the location of a custom DLL. Host Checker calls the DLL to perform customized client-side checks.

To configure a rule for third-party NHC:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Under Rule Settings, select **Custom: 3rd Party NHC Check** and then click **Add**.

Figure 199: 3rd Party NHC Rule

Configuration > Host Checker Policy > Add Custom Rule : 3rd Party NHC Check

Add Custom Rule : 3rd Party NHC Check

Rule Type: 3rd Party NHC Check

*Rule Name:

▼ *Criteria

*Vendor Name:

*Path to NHC DLL:

▼ Optional

☐ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

* indicates required field

3. Enter a name for the NHC Check rule.
4. Under Criteria, enter the Vendor name and Path to NHC DLL.
5. Under Optional, select **Monitor this rule for change in result** to continuously monitor the policy compliance of endpoints. If this check box is selected, and a change in compliance status on an endpoint that has successfully logged in occurs, the PPS initiates a new handshake to re-evaluate realm or role assignments.
6. Click **Save Changes**.

Configuring Ports Rule

Use this rule type to control the network connections that a client can generate during a session. This rule type ensures that certain ports are open or closed on the client machine before the user can access the system.

To configure a custom port rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: ports** and then click **Add**.

Figure 200: Ports Rule

Configuration > Host Checker Policy > Add Custom Rule : Ports

Add Custom Rule : Ports

Rule Type: Ports

*Rule Name:

▼ *Criteria

*Port List: Enter port numbers separated by comma

☐ Required ☒ Deny

▼ Optional

☐ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

* indicates required field

4. Enter a name for the port rule.

5. Under Criteria, enter a comma delimited list (without spaces) of ports or port ranges, such as: 1234,11000-11999,1235. Select Required if you want these ports to be open on the client machine or Deny if you want them to be closed.
(Windows only) Under Optional, select Monitor this rule for change in result to continuously monitor the policy compliance of endpoints. If this check box is selected, and a change in compliance status on an endpoint that has successfully logged in occurs, the PPS initiates a new handshake to re-evaluate realm or role assignments.
6. Click **Save changes**.

Configuring Process Rule

Use this rule type to control the software that a client may run during a session. This rule type ensures that certain processes are running or not running on the client machine before the user can access protected resources.

To configure a custom process rule:

1. Select Authentication > Endpoint Security > Host Checker.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: Process** and then click **Add**.

Figure 201: Process Rule

Configuration > Host Checker Policy > Add Custom Rule : Process

Add Custom Rule : Process

Rule Type: Process

*Rule Name:

▼ *Criteria

*Process Name:

☐ Required ☒ Deny

▼ Optional

MD5 Checksums: One MD5 checksum per line.

☐ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

Save Changes **Cancel**

4. Enter a name for the process rule.
5. Under Criteria, enter the name of a process (executable file), such as: *good-app.exe*. You can use a wildcard character to specify the process name. For example: *good*.exe*. Select Required to require that this process is running or Deny to require that this process is not running.
6. (Windows only) Under Optional, enable the checks required from the following:
 - Specify the MD5 checksum value of each executable file to which you want the policy to apply. For example, an executable may have different MD5 checksum values on a desktop, laptop, or different operating systems. On a system with OpenSSL installed—Macintosh, Linux and Solaris systems have OpenSSL installed by default—you can determine the MD5 checksum by using this command: `openssl md5 <processFilePath>`.
 - Select or clear the check box next to Monitor this rule for change in result. With the checkbox enabled, it continuously monitors the policy compliance of endpoints. If this check box is selected, and a change in compliance status on an endpoint that has successfully logged in occurs, the PPS initiates a new handshake to re-evaluate realm or role assignments.
7. Click **Save Changes**.

Configuring File Rule

Use this rule type to ensure that certain files are present or not present on the client machine before the user can access. You may also use file checks to evaluate the age and content (through MD5 checksums) of required files and allow or deny access accordingly.

To configure a custom file rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: File** and then click **Add**.
4. Enter a name for the file rule.

Figure 202: File Rule

Configuration > Host Checker Policy > Add Custom Rule: File

Add Custom Rule: File

Rule Type: File

*Rule Name:

▼ *Criteria

*File Name: Example: c:\temp\bad-file.txt or <%windir%\>bad-file.txt

☐ Required ☒ Deny

▼ Optional

Minimum version:

File modified less than: days ago.

MD5 Checksums: One MD5 checksum per line.

☐ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

Save Changes Cancel

5. Under Criteria, enter the name of a file (any file type). For example, **c:\temp\bad-file.txt** or **/temp/bad-file.txt**. You can use a wildcard character to specify the file name. For example: *.txt. You can also use an environment variable to specify the directory path to the file. (You cannot use a wildcard character in the directory path.) Enclose the variable between the <% and %> characters. For example: **<%windir%\>bad-file.txt**.
6. Select Required to require that this file is present on the client machine or Deny to require that this file is not present.
7. (Windows only) Under Optional, enable the checks required from the following:
 - Specify the minimum version of the file (optional). For example, if you require notepad.exe to be present on the client, you can enter 5.0 in the field. Host Checker accepts version 5.0 and above, of notepad.exe.
 - Specify the maximum age (File modified less than n days) (in days) for a file (optional). If the file is older than the specified number of days, then the client does not meet the attribute check requirement.
 - Specify the MD5 checksum value of each file to which you want the policy to apply (optional). On Macintosh, Linux and Solaris, you can determine the MD5 checksum by using this command: **openssl md5 <filePath>**
 - Select Monitor this rule for change in result to continuously monitor the policy compliance of endpoints. If this check box is selected, and a change in compliance status on an endpoint that has successfully logged in occurs, the PPS initiates a new handshake to re-evaluate realm or role assignments.
8. Click Save Changes.

Configuring Registry Settings Rule

Use this rule type to control the corporate PC images, system configurations, and software settings that a client must have to access the PPS. This rule type ensures that certain registry keys are set on the client machine before the user can access the PPS. You may also use registry checks to evaluate the age of required files and to allow or deny access accordingly.

1. Select Authentication > Endpoint Security > Host Checker.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: Registry Setting** and then click **Add**.

Figure 203: Registry Settings Rule

Configuration > Host Checker Policy > Add Custom Rule: Registry Setting

Add Custom Rule: Registry Setting

Rule Type: Registry Setting

*Rule Name:

▼ *Criteria

Registry Root key: HKEY_LOCAL_MACHINE ▼

Registry Subkey:

Name:

Type: String ▼

Value:

☐ Check for 64-bit registry

Note: Check for 64 bit registry. This option is applicable only for 64-bit versions of Windows. By default, Host Checker checks only 32-bit registry.

☐ Minimum version

▼ Optional

☐ Monitor this rule for change in result

Note: Enabling this option will report change in compliance for this rule to the Pulse Policy Secure immediately. The client component requires additional computing cycles to report change in compliance immediately. We strongly recommend that this option be enabled for rules that are dynamic in nature, for example a rule for RTP check provided by AntiVirus software. For other rules the host checker update frequency should be used to get periodic health checks from endpoints.

▼ Remediation

☐ Set Registry value specified in criteria

4. Enter a name for the registry setting rule.
5. Under the criteria:
 - Select a root key from the drop-down list.
 - Enter the path to the application folder for the registry subkey.
 - Enter the name of the key's value that you want to require (optional). This name appears in the **Name** column of the Registry Editor.
 - Select the key value's type (**String**, **Binary**, or **DWORD**) from the drop-down list (optional). This type appears in the Type column of the Registry Editor.
 - Specify the required registry key value (optional). This information appears in the **Data** column of the Registry Editor.
 - If the key value represents an application version, select **Minimum version** to allow the specified version or newer
6. Under Optional, select **Monitor this rule for change in result to continuously monitor the policy compliance of endpoints**. If this check box is selected, and a change in compliance status on an endpoint that has successfully logged in occurs, the system initiates a new handshake to re-evaluate realm or role assignments.
7. Under Remediation, Select the check box for Set Registry value specified in criteria.
8. Click Save Changes.

Configuring NetBIOS Rule

Use this rule type to check the NetBIOS name of the client machine before the user can access PPS.

To configure a custom NetBIOS rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: File** and then click **Add**.
4. Enter a name for the NetBIOS rule.

Figure: NetBIOS Rule Windows

Figure: NetBIOS Rule for Mac

5. Under Criteria, enter a comma-delimited list (without spaces) of NetBIOS names. The name can be up to 15 characters in length. You can use wildcard characters in the name and it is not case-sensitive. For example, md*, m*xp and *xp all match MDXP. Select **Required** to require that this file is present on the client machine or **Deny** to require that this file is not present.



Note: For Mac OS, you can enter special characters “[!\"#\$%&'()*+,-./:;<=>?@\\[\]^_`{|}~]” and space is allowed between NetBIOS names.

6. Select **Required** to require that NETBIOS name of the client machine match one of the names you specify, or **Deny** to require that the name does not match any name.
7. Click **Save Changes**.

Configuring MAC Address Rule

Use this rule type to check the MAC addresses of the client machine before the user can access the PPS.

To configure a custom MAC Address Rule:

1. Select Authentication > Endpoint Security > Host Checker.
2. Create a new policy or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: MAC Address** and then click **Add**.
4. Enter a name for the MAC address rule.

Figure 204: MAC Address Rule

Configuration > Host Checker Policy > Add Custom Rule: MAC Address

Add Custom Rule: MAC Address

Rule Type: MAC Address

*Rule Name:

▼ *Criteria

*MAC Addresses:

Example
00:11:85:bb:8c:*
00:ff:****
One per line

☒ Required ☐ Deny

* Indicates required field

5. Under Criteria, enter a comma-delimited list (without spaces) of MAC addresses in the form XX:XX:XX:XX:XX:XX where the X's are hexadecimal numbers. For example: 00:0e:1b:04:40:29. You can use a * wildcard character to represent a two-character section of the address. For example, you can use a * to represent the "04", "40", and "29" sections of the previous example address: 00:0e:1b:*:*:*. But you cannot use a * to represent a single character. For example, the * in the following address is not allowed: 00:0e:1b:04:40:*9
6. Select **Required** to require that a MAC address of the client machine matches any of the addresses you specify, or **Deny** to require that all addresses do not match. A client machine will have at least one MAC address for each network connection, such as Ethernet, wireless, and VPN.
7. This rule's requirement is met if there is a match between any of the addresses you specify and any MAC address on the client machine.
8. Click **Save Changes**.

Configuring Machine Certificate Rule

Use this rule type to check that the client machine is permitted access by validating the machine certificate stored on the client machine.

To configure a machine certificate rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: Machine certificate** and then click **Add**.
4. Enter a name for the machine certificate rule.

Figure 205: Machine Certificate Rule

Configuration > Host Checker Policy > Add Custom Rule : Machine Certificate

Add Custom Rule : Machine Certificate

Rule Type: Machine Certificate

*Rule Name:

▼ *Criteria

Select Issuer Certificate: Any Certificate ▼

▼ Optional

You can optionally require specific values in the machine certificate:

| Certificate field (example "cn") | Expected value | |
|----------------------------------|----------------------|------------------------------------|
| <input type="text"/> | <input type="text"/> | <input type="button" value="Add"/> |
| <input type="text"/> | <input type="text"/> | |

* Indicates required field

5. Under Criteria, **Select Issuer Certificate** list, select the certificate that you want to retrieve from the user's machine and validate. Or, select **Any Certificate** to skip the issuer check and only validate the machine certificate based on the optional criteria that you specify below.
6. From the **Optional** fields (**Certificate field and Expected value**), specify any additional criteria that Host Checker should use when verifying the machine certificate.



Note: If more than one certificate is installed on the client machine that matches the specified criteria, The Host Checker client passes the first certificate it finds to PPS for validation.

7. Click **Save Changes**.

Configuring Advanced Host Checking Rule

Use this rule type to combine multiple policies for performing advanced host checking. The supported policy types are ports, process, file, registry setting, NETBIOS, MAC address and machine certificate. It allows Administrator to dynamically configure the expected values from registry locations on the endpoint for evaluating the policies.



NOTE: This feature is supported only on Windows platform.

To configure an advanced host checking rule:

1. Select Authentication > Endpoint Security > Host Checker.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. Under Rule Settings, select **Custom: Advanced Host Checking** and then click **Add**.
4. Enter a name for the rule.
5. Select the check to be performed from the Rule Type list.

Figure 206: Advanced HC Rule

Configuration > Host Checker Policy > Add Custom Rule: Advanced Host Checking

Add Custom Rule: Advanced Host Checking

Rule Type: Advanced Host Checking

*Rule Name:

▼ *Criteria

*Select Check Type: Select the check to be performed
☐ Required ☒ Deny

*Method to obtain value:

Registry Setting

Registry Root key:

Registry Subkey:

Name:

Type:
☐ Check for 64-bit registry

Note: Check for 64 bit registry. This option is applicable only for 64-bit versions of Windows. By default, Host Checker checks only 32-bit registry.

* Indicates required field

6. Under Criteria, **Select Rule Type** list.

- a. Select **Ports** to check whether a specific port number is opened or closed on the endpoint.
 - i. Enable **Required/Deny** to check if the specified port is open/closed.
 - ii. Select the registry root key- HKEY_LOCAL_MACHINE, HKEY_USERS, HKEY_CURRENT_USER, HKEY_CURRENT_CONFIG, or HKEY_CLASSES_ROOT.
 - iii. Enter the registry subkey.
 - iv. Enter the name of the registry.
 - v. Select the type of the registry- String, Binary, or DWORD.
 - vi. Select **Check for 64-bit registry** to check the 64 bit registry on Windows. The default is 32 bit registry.



2. **NOTE:** You can similarly add the check type for Process/File/NETBIOS/MAC Address. The port number/process name/file path/NETBIOS name/MAC address is obtained from the Registry setting.

Figure 207: Advanced Host Check- Ports

Configuration > Host Checker Policy > Add Custom Rule : Advanced Host Checking

Add Custom Rule : Advanced Host Checking

Rule Type: Advanced Host Checking

*Rule Name:

▼ *Criteria

*Select Check Type: Ports Select the check to be performed

☐ Required ☒ Deny

*Method to obtain Ports value

Registry Setting

Registry Root key: HKEY_LOCAL_MACHINE

Registry Subkey:

Name:

Type: String

☐ Check for 64-bit registry

Note: Check for 64 bit registry. This option is applicable only for 64-bit versions of Windows. By default, Host Checker checks only 32-bit registry.

Save Changes Cancel

3.
 - b. Select **Registry Setting** to verify the specific registry values on the endpoint. You can define only the registry location in the policy and define another registry location, which provides the expected registry value.
 - i. Select the registry root key- HKEY_LOCAL_MACHINE, HKEY_USERS, HKEY_CURRENT_USER, HKEY_CURRENT_CONFIG, or HKEY_CLASSES_ROOT.
 - ii. Enter the registry subkey.
 - iii. Enter the name.
 - iv. Select the type of the registry- String, Binary, or DWORD.
 - v. Configure another registry setting to fetch the expected registry value. Select the registry subkey, name, and type.

4.

Figure 208: Advanced Host Check- Registry Setting

5.

Configuration > Host Checker Policy > Add Custom Rule : Advanced Host Checking

Add Custom Rule : Advanced Host Checking

Rule Type: Advanced Host Checking

*Rule Name:

▼ *Criteria

*Select Check Type: Registry Setting Select the check to be performed

Registry Root key: HKEY_LOCAL_MACHINE

Registry Subkey:

Name:

Type: String

☐ Check for 64-bit registry

Note: Check for 64 bit registry. This option is applicable only for 64-bit versions of Windows. By default, Host Checker checks only 32-bit registry.

*Method to obtain Registry Setting value

Registry Setting

Registry Root key: HKEY_LOCAL_MACHINE

Registry Subkey:

Name:

Type: String

☐ Check for 64-bit registry

Note: Check for 64 bit registry. This option is applicable only for 64-bit versions of Windows. By default, Host Checker checks only 32-bit registry.

Save Changes Cancel

6.

- c. Select **Machine Certificate** to verify the required certificate is installed on the client machine certificate store.
 - i. Select the issuer certificate from the list.
 - ii. Specify any additional criteria that Host Checker must use while verifying the certificate.
 1. Enter the certificate field name. For example, cn.
 2. Select the registry key.
 3. Enter the registry subkey.
 4. Enter the registry name.
 5. Select the registry type.
 6. Click **Add**.

Figure 209: Advanced Host Check- Machine Certificate

Configuration > Host Checker Policy > Add Custom Rule : Advanced Host Checking

Add Custom Rule : Advanced Host Checking

Rule Type: Advanced Host Checking

*Rule Name:

▼ **Criteria**

*Select Check Type: Machine Certificate Select the check to be performed

*Select Issuer Certificate: Any Certificate

▼ **Optional**

You can optionally require specific values in the machine certificate:

| Certificate field (example "cn") | Registry Key | Registry SubKey | Registry Name | Registry Type | Registry 64bit | |
|----------------------------------|---------------------------------|----------------------|----------------------|---------------------|--------------------------|------------------|
| <input type="text"/> | HKEY_LOCAL_MACHINE | <input type="text"/> | <input type="text"/> | String | <input type="checkbox"/> | Add |

Edit Delete

Save Changes Cancel

- 7.
- 8.

7. Click **Save Changes**.

Configuring Statement of Health Rule

Use this rule type to evaluate endpoint's health status and make policy decisions for network access based on the result.

To configure a custom state of health rule:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Create a new policy, or click an existing policy in the Policies section of the page.
3. For a new policy, specify a name for the policy and then click Continue.
4. Under Rule Settings, select **Custom: Statement of Health** and then click **Add**.

Figure 210: Statement of Health Rule

Configuration > Host Checker Policy > Add Custom Rule : Statement of Health

Add Custom Rule : Statement of Health

Rule Type: Statement of Health

*Rule Name:

▼ *Criteria

Delete

| | Label | Parameter | |
|--|----------------------------------|-------------------|-----|
| | 1 | Antivirus Enabled | Add |
| | Is an antivirus product enabled? | | |

Save Changes Cancel

* Indicates required field

5. Enter a Name for the SOH rule.
6. Under Criteria, enter a Label for a SOH parameter. Select an SOH policy option from the Parameter menu then click Add for the following types:
 - Antivirus Enabled
 - Antivirus up to date
 - Antispyware enabled
 - Antispyware up to date
 - Firewall Enabled
 - Automatic Updating Enabled
7. Select additional options from the Parameter list to add additional SOH parameters.
8. (Optional) For each rule, select the Enable automatic remediation check box. If you select this option for a rule, the user receives a remediation message from the SoH agent, and appropriate remediation is performed, if possible. If the box is not selected, the user receives a remediation message, but no remediation action is performed.
9. Click Save Changes.

Using a Wildcard or Environment Variable in a Host Checker Rule

The following table lists the wildcards you can use to specify a file name in a File rule or a process name in a Process rule.

Table 17: Wildcard Characters for Specifying a File Name or Process Name

| Wildcard Character | Description | Example |
|--------------------|-------------------------------|-----------|
| * | Matches any character | *.txt |
| ? | Matches exactly one character | app-?.exe |

In a Custom File rule for Windows, you can use the following environment variables to specify the directory path to a file:

Table 18: Environment Variables for Specifying a Directory Path on Windows

| Environment variable | Example Windows Value |
|------------------------|---|
| <%APPDATA%> | C:\Documents and Settings\jdoe\Application Data |
| <%windir%> | C:\WINDOWS |
| <%ProgramFiles%> | C:\Program Files |
| <%CommonProgramFiles%> | C:\Program Files\Common Files |
| <%USERPROFILE%> | C:\Documents and Settings\jdoe |
| <%HOMEDRIVE%> | C: |
| <%Temp%> | C:\Documents and Settings \<username>\Local Settings\Temp |

The following table lists File rules for Macintosh, Linux and Solaris.

Table 19: Environment Variables for Specifying a Directory Path on Macintosh, Linux and Solaris

| Environment variable | Example Macintosh Value | Example Linux and Solaris Values |
|----------------------|--|-------------------------------------|
| <%Java.home%> | /System/Library/Frameworks/Java VM.framework/Versions/1.4.2/Home | /local/local/Java/j2sdk1.4.1_02/jre |
| <%Java.io.tmpdir%> | /tmp | /tmp |
| <%user.dir%> | /Users/admin | /home-shared/cknouse |
| <%user.home%> | /Users/admin | /home/cknouse |

Configuring Third-Party Integrity Measurement Verifiers (IMV)

The TNC standard enables the enforcement of security requirements for endpoints connecting to networks. You can configure Host Checker to monitor third-party TNC-compliant IMCs installed on client computers. To do so, you must:

1. Run the Third-party Integrity Measurement Verifier (IMV) Server installer on the system designated as the remote IMV server. Install the third-party IMVs and create the server certificates. You can download this installer from Maintenance > system > Installers.
2. Specify the remote IMV server so that PPS can communicate with it.
3. Implement the Host Checker policy. Once you configure the remote IMV server, PPS adds the policy type Custom: remote IMV.

Configuring a Remote IMV Server

The third-party IMVs are installed on the remote IMV server and not on PPS and then obtain a server certificate for the remote IMV server. Import the trusted root CA certificate of the CA that generated the server certificate to PPS. PPS then authenticates with the remote IMV server through the certificate. If you do not have a CA, install and use OpenSSL to generate a CA certificate.

To configure the remote IMV server:

1. Select **Maintenance > System > Installers** and download the third-party Measurement Verifier (IMV) server installer.
2. Run the installer on the system designated as the remote IMV server.
3. Install the third-party IMVs on the remote IMV server and the corresponding IMCs on the client systems.
4. Generate a server certificate from a certificate authority for the remote IMV server. The server's certificate Subject CN value must contain the actual host name or IP address of the remote IMV server.

The server certificate and the private key must be combined into a single PKCS#12 file and must be encrypted with a password. If you do not have a CA, you can use OpenSSL to create one, and then create a server certificate for the remote IMV server.

Configuring a Third-Party IMV Policy

To use Host Checker as a policy enforcement tool for managing endpoints, you must create global Host Checker policies at the system level and then implement the policies at the realm and role levels.



NOTE: The Custom: Remote IMV option does not appear until you add the Remote IMV New Server and New IMV on the main Host Checker page.

To configure a third-party IMV policy:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Under Policies, click **New**.
3. Enter a name in the Policy Name field and click Continue. (Users see this name on the Host Checker remediation page if you enable custom instructions for this policy.)
4. Under Rule Settings, select Custom: Remote IMV and click Add.
5. In the Add Custom Rule: Remote IMV page:
 - In the Rule Name field, enter an identifier for the rule.
 - Under Criteria, select the third-party IMV to associate with this rule.
 - Click Save Changes.
6. Specify how Host Checker must evaluate multiple rules within the policy.
7. (Recommended) Specify remediation options for users whose computers do not meet the requirements specified in the policy.
8. Click Save Changes.

9. Implement the policy at the realm or role level.

Configuring General Host Checker Remediation

To specify remediation actions for a Host Checker policy:

1. Select Authentication > Endpoint Security > Host Checker.
2. Create or enable Host Checker policies.
3. Specify the remediation actions for Host Checker to perform if a computer does not meet the requirements of the current policy:

- Enable Custom Instructions—Enter the instructions to display to the user on the Host Checker remediation page. You can use the following HTML tags to format text and to add links to resources such as policy servers or web sites: `<i>`, ``, `
`, ``, and `<a href>`. For example:

You do not have the latest signature files.

`Click here to download the latest signature files.`

- Kill Processes—On each line, enter the name of one or more processes to kill if the computer does not meet the policy requirements. You can include an optional MD5 checksum for the process. (You cannot use wildcards in the process name.) For example:

keylogger.exe

MD5: 6A7DFAF12C3183B56C44E89B12DBEF56

- Delete Files—Enter the names of files to delete if the user's computer does not meet the policy requirements. (You cannot use wildcards in the file name.) Enter one filename per line. For example:

c:\temp\bad-file.txt

/temp/bad-file.txt

- Send reason strings—Select this option to display a message to users (called a reason string) that is returned by Host Checker or IMV and that explains why the client machine does not meet the Host Checker policy requirements. This option applies to predefined rules, to custom rules, and to third-party IMVs that use extensions in the Pulse Secure TNC SDK. For example, an antivirus IMV might display the following reason string:

The AntiVirus Product Version is too low. The age of the Virus Definitions is not acceptable.

4. Click Save Changes.

Store and Reuse Host Checker Policy Results

The Host Checker configuration page enables you to store and reuse the host checker evaluation results. The admin can configure the time interval in days for not performing the host check on the endpoint. When the user connects for the first time the Host Checker runs and the results are saved in PPS. However, for the subsequent logins from the same endpoint, the host checking is not performed and the saved host check result is reused till the expiration of the admin defined time interval.

The first connection from the endpoint never reuses the cached results. The subsequent logins from the same endpoint uses the cached host checker results.

This feature saves the Host Check results for clients connecting from Windows and Mac desktop operating systems. This feature helps in providing faster connection or access to the network.

The Host Checker saved/cached results will be cleared in the following scenarios:

- Change in HC policy configuration such as addition, deletion and modifications.
- Change in Active ESAP version.
- Change in HC configuration such as periodic interval, disabling the caching feature and role configuration under caching feature.
- Server reboot


Limitations

- Periodic host checking, rule monitoring, and remediation are supported only for the first connection when the results are not cached.
- Change in Compliance status of the device is not detected if cached results are used for the connection.

To configure caching on Host Checker:

1. Select **Authentication > Endpoint Security > Host Checker**.
2. Under Options, Store host checking evaluation results enable **Store Host Checking evaluation results** and enter the number of days for not performing the Host Check. The default number of days for storing HC results is 7 days. The supported range is between 1- 30 days.
3. The Admin can also choose to cache results based on the roles assigned:
 - **Any role is assigned**- If you select this option, the HC results are cached irrespective of the role assigned.
 - **Any of the selected roles is assigned**- If you select this option, the HC results are cached only when the selected role is assigned.

Note: It is recommended to not enable caching for remediation roles because the subsequent logins will be in the remediation role as cached results are used.

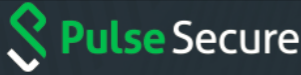Pulse Secure

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure

Host Checker

Host Checker

Options

Perform check every:10minutes

*Client-side process, login inactivity timeout:20minutes min=1

☒ Auto-upgrade Host Checker

Store host checking evaluation results

☒ Store Host Checking evaluation results for7days

Note: Enabling this option will allow the server to cache the host checking results. The cached results will be used for host checking evaluation for specified number of days, and rule monitoring and periodic host checking feature will not be applicable

☐ Cache results if any of the roles is assigned

☒ Cache results only if any of the selected roles are assigned

Available Roles:UsersGuest AdminGuestGuest SponsorGuest Wired Restricted

Add ->Remove

Selected Roles:

4. Click **Save Changes**.

MDM Interoperability with PPS

This chapter covers the following topics:


- [Overview](#)
- [Configuring PPS with MDM Servers](#)
- [Configuring PPS with Pulse Workspace](#)
- [Configuring PPS with Microsoft Intune](#)
- [Configuring the Microsoft Intune MDM](#)
- [Configuring the PWS MDM](#)
- [Configuring the AirWatch MDM](#)
- [Configuring the MobileIron MDM](#)
- [Troubleshooting](#)

Overview

Mobile Device Management (MDM) servers secure, monitor, manage, and support mobile devices deployed across mobile operators, service providers, and enterprises. MDM servers consist of a device authorization server that controls the use of some applications on a mobile device (for example, an e-mail application) in the deployed environment. The PPS queries the MDM servers for the necessary device attributes and evaluates them while assigning roles before giving access to the network.

For example, the MDM might detect that a device is out of compliance with PPS role mapping rules. At the next device check interval, PPS queries the MDM for updated attribute data. The compliance check is done periodically and if a formerly compliant device is now non-compliant, it assigns the device the non-compliant role and enforces the same on switch or firewall based on the PPS configuration.

Figure 211: MDM interoperability with PPS

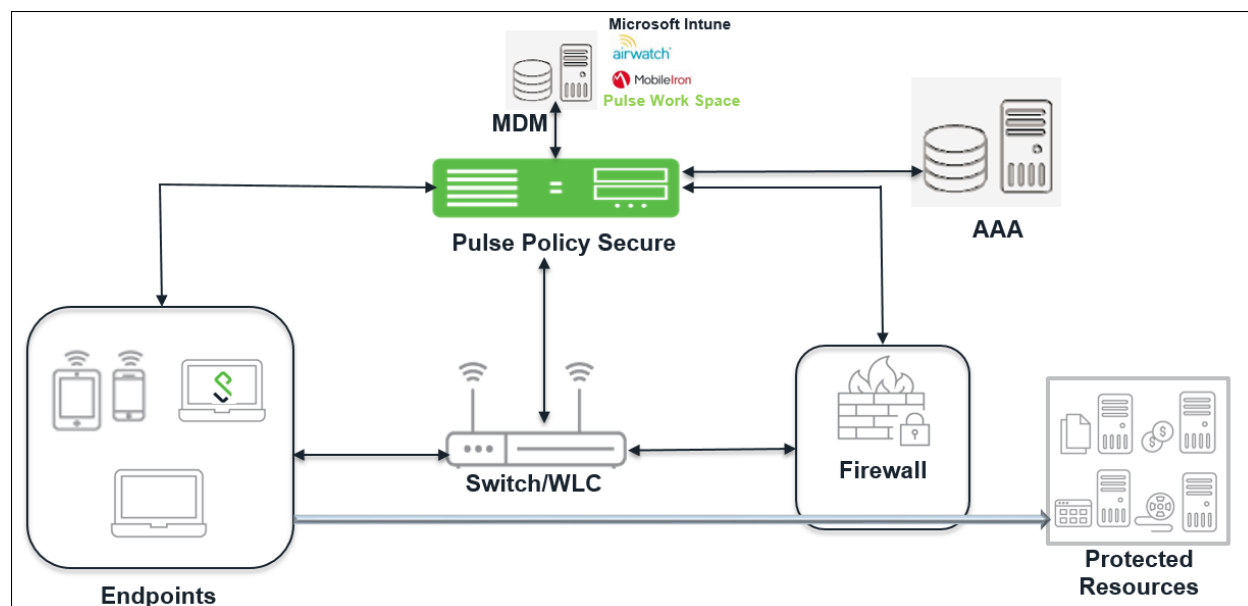

Supported MDM Servers

PPS supports the following MDM servers:

- Pulse Workspace (PWS)
- Airwatch
- Mobile Iron
- Microsoft Intune

PPS determines the device identifiers using the following methods:

- Device Certificate
- MAC Address



NOTE: The dynamic policy evaluation feature is not used in the device access management framework.

The device-attribute-based roles are specified for the following policies:

- 802.1x network access control RADIUS return attribute policies (Layer 2)
- Infranet Enforcer resource policies (Layer 3)

MDM Integration Work Flow

The MDM integration work flow is described below:

1. The user associates a device to SSID.
2. (Optional) If the device is not registered, the user goes through the device on-boarding process.
3. PPS queries the MDM server with device details through MAC address or device attributes.
4. The MDM server returns device attributes with which PPS uses one or more attributes to determine device access.
5. PPS allows or denies access based on the attributes.

MDM Dictionary Attributes

This section focuses on the following elements of the MDM configuration that are important to this solution:

- Device identifier—The primary key for device records. Your MDM configuration determines whether a universal unique identifier (UUID), unique device identifier (UDID), or serial number is used as the device identifier. For AirWatch, UDID is supported and recommended. For MobileIron, UUID is supported and recommended.
- Device attributes—A standard set of data maintained for each device. The device attributes for AirWatch, MobileIron, PWS, and Microsoft Intune are described below.

When the user installs the MDM application on the device and completes enrollment, the MDM pushes the device certificate to the device. After enrollment, the MDM maintains a database record that includes information about the enrollee—attributes related to device identity, user identity, and posture assessment against MDM policies.

Table20 describes these attributes. In this solution, these attributes are used in PPS role mapping that is the basis for network access and resource access policies. When you configure role-mapping rules, you specify the normalized attribute name.

Table20: AirWatch Device Attributes

| AirWatch Attribute | Normalized Name | Description | Data Type |
|------------------------|------------------------|--|-----------|
| BlockLevelEncryption | BlockLevelEncryption | True if block-level encryption is enabled; false otherwise. | Boolean |
| ComplianceStatus | complianceReason | Values: Compliant, Non-Compliant. | String |
| ComplianceStatus | isCompliant | True if the status is compliant with MDM policies; false otherwise. | Boolean |
| CompromisedStatus | CompromisedStatus | True if the status is compromised; false otherwise. | Boolean |
| CompromisedStatus | isCompromised | True if the device is compromised; false otherwise. | Boolean |
| DataProtectionEnabled | DataProtectionEnabled | True if data protection is enabled; false otherwise. | Boolean |
| DeviceFriendlyName | deviceName | The concatenated name used to identify the device/user combination. | String |
| EnrollmentStatus | isEnrolled | True if MDM value is Enrolled; false otherwise. | Boolean |
| FileLevelEncryption | FileLevelEncryption | True if file-level encryption is enabled; false otherwise. | Boolean |
| Id.Value | deviceId | Device identifier. | String |
| Imei | IMEI | IMEI number of the device. | String |
| IsPasscodeCompliant | IsPasscodeCompliant | True if the passcode is compliant with the MDM policy; false otherwise | Boolean |
| IsPasscodePresent | IsPasscodePresent | True if a passcode has been configured; false otherwise. | Boolean |
| LastComplianceCheckOn | LastComplianceCheckOn | The refresh date and timestamp of the last status reported. | Timestamp |
| LastCompromisedCheckOn | LastCompromisedCheckOn | The refresh date and timestamp of the last status reported. | Timestamp |
| LastSeen | lastSeen | Date and time the device last made successful contact with the MDM. | Timestamp |
| LocationGroupName | LocationGroupName | MDM location group configuration value. | String |
| MacAddress | macAdress | The Wi-Fi MAC address. | String |
| Model | model | Model is automatically reported by the device during registration. | String |
| OperatingSystem | osVersion | OS version. | String |
| Ownership | ownership | Values: C, E, or S (Corporate, Employee, or Shared). | String |
| PhoneNumber | phoneNumber | Phone number entered during registration. | String |
| Platform | platform | Platform specified during registration. | String |
| SerialNumber | serialNumber | Serial number. | String |
| Udid | UDID | Unique device identifier. | String |
| UserEmailAddress | userEmail | E-mail address of device user. | String |
| UserName | userName | Name of device user. | String |
| Uuid | UUID | Universal unique identifier. | String |

Table21: MobileIron Device Attributes

| MobileIron Attribute | Normalized Name | Description | Data Type |
|----------------------|------------------|---|-----------|
| @id | deviceId | Device identifier. | String |
| blockedReason | blockedReason | Reason MDM has blocked the device. Can be a multivalued string. Values are: <ul style="list-style-type: none"> AllowedAppControlPolicyOutOfCompliance AppControlPolicyOutOfCompliance DataProtectionNotEnabled DeviceAdminDeactivated DeviceComplianceStatusUnknown DeviceCompliant DeviceCompromised DeviceExceedsPerMailboxLimit DeviceManuallyBlocked DeviceNotRegistered DisallowedAppControlPolicyOutOfCompliance ExchangeReported HardwareVersionNotAllowed OsVersionLessThanSupportedOsVersion PolicyOutOfDate RequiredAppControlPolicyOutOfCompliance | String |
| compliance | complianceReason | MDM policy compliance status. Can be a multivalued string. Values are: <ul style="list-style-type: none"> AllowedAppControlPolicyOutOfCompliance AppControlPolicyOutOfCompliance DataProtectionNotEnabled DeviceAdminDeactivated DeviceComplianceStatusUnknown DeviceCompliant DeviceCompromised DeviceExceedsPerMailboxLimit DeviceManuallyBlocked DeviceNotRegistered DisallowedAppControlPolicyOutOfCompliance ExchangeReported HardwareVersionNotAllowed OsVersionLessThanSupportedOsVersion PolicyOutOfDate RequiredAppControlPolicyOutOfCompliance | String |
| compliance | isCompliant | True if the device is in compliance with its MDM security policies; false otherwise. | Boolean |
| compliance | isCompromised | True if the device is compromised; false otherwise. | Boolean |
| countryName | countryName | Country name corresponding with the country code of the device. | String |
| currentPhoneNumber | phoneNumber | Phone number entered during registration. | String |

| MobileIron Attribute | Normalized Name | Description | Data Type |
|---------------------------------------|-------------------|--|-----------|
| emailAddress | userEmail | E-mail address of device user. | String |
| employeeOwned | Ownership | Values: Employee or Corporate. | String |
| homeOperator | homeOperator | The service operator for the device when it is not roaming. | String |
| iPhone IMEI (iOS), imei (Android) | Imei | IMEI number of the device. | String |
| iPhone UDID | UDID | Unique device identifier. | String |
| isBlocked | isBlocked | True if the device is blocked from accessing the ActiveSync server; false otherwise. | Boolean |
| isQuarantined | isQuarantined | True if the device is quarantined by the MDM; false otherwise. | Boolean |
| lastConnectAt | lastSeen | Date and time the device last made successful contact with the MDM. | Timestamp |
| manufacturer | manufacturer | Manufacturer is automatically reported by the device during registration. | String |
| mdmManaged | mdmManaged | True if the MDM profile is enabled on the device; false otherwise. This field applies only to iOS devices. For other devices, the value is always false. | Boolean |
| ModelName, model, device_model | Model | Model is automatically reported by the device during registration. | String |
| name | deviceName | The concatenated name used to identify the device/user combination. | String |
| operator | Operator | Service provider. The value PDA indicates no operator is associated with the device. | String |
| OSVersion (iOS), os_version (Android) | osVersion | OS version. | String |
| platform | Platform | Platform specified during registration. | String |
| principal | userId | User ID. | String |
| quarantinedReason | quarantinedReason | MDM policy compliance status. Can be a multivalued string. Values are: <ul style="list-style-type: none"> AllowedAppControlPolicyOutOfCompliance AppControlPolicyOutOfCompliance DataProtectionNotEnabled DeviceAdminDeactivated DeviceComplianceStatusUnknown DeviceCompliant DeviceCompromised DeviceExceedsPerMailboxLimit DeviceManuallyBlocked DeviceNotRegistered DisallowedAppControlPolicyOutOfCompliance ExchangeReported HardwareVersionNotAllowed OsVersionLessThanSupportedOsVersion PolicyOutOfDate RequiredAppControlPolicyOutOfCompliance | |
| SerialNumber | serialNumber | Serial number. | String |

| MobileIron Attribute | Normalized Name | Description | Data Type |
|--|-----------------|---|-----------|
| statusCode | isEnrolled | True if the device has completed enrollment or registration; false otherwise. | Boolean |
| uuid | UUID | Universal unique device identifier. | String |
| userDisplayName | userName | Name of device user. | String |
| wifi_mac (iOS), wifi_mac_addr (Android) | macAddress | The Wi-Fi MAC address. | String |

Table22: Microsoft Intune Device Attributes

| Intune Attribute | Normalized Name | Description | Data Type |
|--------------------|-----------------|---|---|
| complianceState | isCompliant | True or false (string) based on whether device is compliant or non-compliant. | Boolean |
| isManaged | isEnrolled | True or false (indicating whether the client is managed by Intune or not). | Boolean |
| macAddress | macAddress | MAC address of the device. | String |
| serialNumber | serialNumber | Serial number of the device. Applies to iOS Devices only. | String |
| imei | IMEI | The device unique identifier. IMEI (15 decimal digits: 14 digits plus a check digit) or IMEISV (16 digits) includes information on the origin, model, and serial number of the device. | String |
| udid | UDID | The device unique identifier. Unique Device Identifier (UDID), which is a sequence of 40 letters and numbers that is specific to iOS devices. | String |
| meid | MEID | MEID is 56 bits long (14 hex digits). It consists of three fields, including an 8-bit regional code (RR), a 24-bit manufacturer code, and a 24-bit manufacturer-assigned serial number. | String |
| osVersion | osVersion | OS Version of the device. | String |
| model | Model | Model of the device. | String |
| manufacturer | manufacturer | Device Manufacturer. | String |
| azureDeviceId | deviceId | The device Id of the device after it has work place joined with Azure Active Directory. | String |
| lastContactTimeUtc | lastSeen | The date time when the device last checked in with the Intune management service endpoint. | String The format is MM/DD/YYYY HH:MM:SS |

Refer to third-party documentation for complete information and configuration details.

Configuring PPS with MDM Servers

This section describes the basic steps for configuring the device access management framework:

- [Configuring an Authentication Protocol Set](#)
- [Configuring the MDM Authentication Server](#)
- [Configuring the Certificate Server](#)
- [Adding the MDM Certificate to the Trusted Client CA Configuration](#)
- [Configuring User Roles](#)
- [Configuring a Realm and Role Mapping Rules](#)
- [Configuring a Sign-In Policy](#)

Configuring an Authentication Protocol Set

The authentication protocol set associated with the sign-in page must include the EAP method selected in the MDM Wi-Fi profile. The predefined authentication protocol set named 802.1x can be used as-is because it includes all the EAP methods currently configurable on MDMs.

To configure the authentication protocol set:

1. Select **Signing In > Authentication Protocols** to display the configuration page.
2. Click **New Authentication Protocol** or select the predefined 802.1x set. If anything other than MAC address is used as a device identifier then you must use cert auth and the protocol set has to be used for cert auth.
3. Click **Save**.

Configuring the MDM Authentication Server

The MDM authentication server configuration is used by PPS to communicate with the MDM. In the device access management framework, the MDM server is used as the device authorization server.

To configure the authentication server:

1. Select **Authentication > Auth Servers** to navigate to the authentication server configuration pages.
2. Select **MDM Server** and click **New Server** to display the configuration page.
3. Complete the configuration as described in [Table 23](#).
4. Save the configuration.

Figure212: Authentication Server Configuration Page

PulseSecure

SystemAuthenticationAdministratorsUsersMaintenanceWizards

Auth Servers > AirWatchMDM

AirWatchMDM

Settings

*Name:

AirWatchMDM

Label to reference this server:

Type: Air Watch

Server

* Server Url:

https://apidev-as.Awmdm.com

Viewer Url:

https://apidev.awmdm.com/AirWatch/Devices/DeviceDetails/<deviceAttr.deviceId>

Link in

* Request Timeout:

15

second

Administrator

* Username:

admin

* Password:

* Tenant Code:

140vcnmcn

Test Connection

Device Identifier

Please check the options on the Users > Authentication > [Realm] > Authentication Policy > Certificate page. For example, enable "Allow all users and remember cer request certificate from the client."

ID Template:

<certDN.CN>

Template for constructing device identifier from certifi

The template can contain textual characters as well as variables for substitution. Variables should be enclosed in angle brackets like this <variable>. T custom expressions and policy conditions. All of the certificate variables are available.

Examples:

<certDN.CN>

First CN from the subject DN

<certAttr.serialNumber>

Certificate serial number

<certAttr.altName.xxx>

Where xxx can be:

Email

The Email alternate name

UPN

The Principal Name alternate name

...

etc

<certDNText>

The complete subject DN

cert-<certDN.CN>

The text "cert-" followed by the first CN from the subject DN

ID Type:

☐ UUID

Universal Unique Identifier

☒ Serial Number

☒ UDID

Unique Device Identifier

Save Changes

Reset

Table23: Authentication Server Configuration Guidelines

| Settings | Guidelines |
|------------|--|
| Name | Specify a name for the configuration. |
| Type | Select the MDM server. |
| Server | |
| Server Url | <div>Specify the URL for your AirWatch server. This is the URL AirWatch has instructed you to use to access its RESTful Web API (also called a RESTful Web service). The URL for the AirWatch MDM server used in this example has the following form:</div> <div>https://apidev-as.Awmdm.com</div> <div>https://m.mobileiron.net/pulsesecuretest</div> <div>NOTE: You must configure your firewalls to allow communication between these two nodes over port 443.</div> |

| Settings | Guidelines |
|-------------------|--|
| Viewer Url | <p>Specify the URL for the AirWatch report viewer. This URL is used for links from the Active Users page to the AirWatch report viewer. The URL for the AirWatch MDM viewer for this example has the following form:</p> <p><a href="https://apidev.awmdm.com/AirWatch/Devices/DeviceDetails/<deviceAttr.deviceId>">https://apidev.awmdm.com/AirWatch/Devices/DeviceDetails/<deviceAttr.deviceId></p> <p>https://m.mobileiron.net/pulsesecuretest/admin/admin.html#smartphones:all</p> |
| Request Timeout | <p>Specify a timeout period (0-60 seconds) for queries to the MDM server. The default is 15 seconds. Calibrate this value based on your observations on how long a query to the MDM server takes over your network. If your network experiences latency when querying the MDM cloud service, increase the timeout to account for the latency. The system queries the MDM when a user attempts to sign in. If a timeout occurs, role mapping proceeds without attributes.</p> |
| Administrator | |
| Username | Specify the username for an account that has privileges to access the MDM RESTful Web API. |
| Password | Specify the corresponding password. |
| Tenant Code | Copy and paste the AirWatch API tenant code. |
| Device Identifier | |
| Device identity | <p>Select an option on whether to require that the MDM certificate is presented by the endpoint when signing in:</p> <ul style="list-style-type: none"> Require—Require that the device certificate pushed to client devices during enrollment be used at sign-in. If this option is selected, and the client device does not have a certificate, authorization fails. Use this option when you require endpoints to adhere to your certificate security requirements. Use Certificate if present—Use the certificate to derive the device ID if the certificate is presented at sign-in, but do not reject authentication if the certificate is not present. You can use this option in conjunction with a role mapping rule and a remediation VLAN to identify devices that have not perfected MDM enrollment. Always Use MAC address—In some cases, the MDM certificate might be configured without a device identifier. When the endpoint uses an 802.1x framework to authenticate, PPS can obtain the MAC address from the RADIUS return attribute callingStationID. The system can then use the MAC address as the device identifier. |
| ID Template | <p>Construct a template to derive the device identifier from the certificate attributes. The template can contain textual characters as well as variables for substitution. The variables are the same as those used in role mapping custom expressions and policy conditions. Enclose variables in angle brackets like this <variable>.</p> <p>For example, suppose the certificate DN is: CN=<EnrollmentUser>, serialNumber=<DeviceUid>, o=Company. With this configuration, the certificate could identify both the user and the device. In this example, the device ID template is <certDN.serialNumber>.</p> |
| ID Type | <p>Select the device identifier type that matches the selection in the MDM certificate configuration:</p> <ul style="list-style-type: none"> UUID—The device universal unique identifier. This is the key device identifier supported by MobileIron MDM. Serial Number—The device serial number. UDID—The device unique device identifier. This is supported by the AirWatch MDM. |

Configuring the Certificate Server

The certificate server configuration enables device users to authenticate using the certificate pushed to the device by the MDM. The certificates are used for user authentication, and the users do not have to enter user credentials.

To configure authentication with the certificate server:

1. Select Authentication > Auth. Servers.
2. Select Certificate Server and click New Server to display the configuration page.
3. Complete the configuration as described in table below.
4. Save the configuration.

Figure213: Certificate Server Configuration Page

Pulse Secure System Authentication

Auth Servers > New Certificate Server

New Certificate Server

*Name: Label to r

User Name Template: Template

The template can contain textual characters as well as variables for custom expressions and policy conditions. All of the certificate variables are listed below.

Examples:

| | |
|-------------------------|--|
| <certDN.CN> | First CN from the subject DN |
| <certAttr.serialNumber> | Certificate serial number |
| <certAttr.altName.xxx> | Where xxx can be: |
| | Email The Email alternate name |
| | UPN The Principal Name alternate name |
| | ... etc |
| <certDNText> | The complete subject DN |
| cert-<certDN.CN> | The text "cert-" followed by the first CN from the sub |

♥ User Record Synchronization

☐ Enable User Record Synchronization

Logical Auth Server Name:

* indicates required field

Table24: Certificate Server Settings

| Settings | Guidelines |
|--------------------|--|
| Name | Specify a name to identify the server within the system. |
| User Name Template | <p>Specify a username template. Specify how the system should construct a username. You may use any combination of certificate variables contained in angle brackets and plain text. The username template you configure must be consistent with the MDM certificate template configuration. Your goal is to identify the values specified in the MDM certificate that are to be used as the username in PPS system. This value populates the <USER> and <USERNAME> session variables for use throughout the rest of the system configuration.</p> <p>For example, suppose the certificate DN is: CN=<EnrollmentUser>, serialNumber=<DeviceUid>, o=Company. With this configuration, the certificate could identify both the user and the device. In this example, the username template is <certDN.CN>.</p> |


Adding the MDM Certificate to the Trusted Client CA Configuration

The system uses the uploaded certificate to verify that the browser-submitted certificate is valid. You must upload the MDM certificate that signed the client certificate that was pushed to the mobile devices. Typically, you obtain this certificate from the MDM when your company establishes its account with them.

To import a trusted client CA certificate:

1. Select **System > Configuration > Certificates > Trusted Client CAs**.

Figure214: Trusted Client CA Management Page

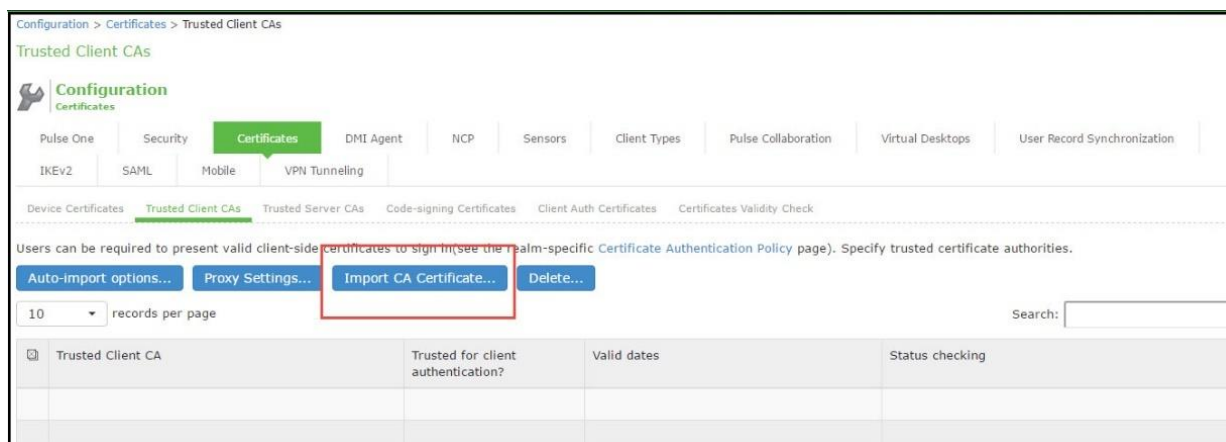

2. Click Import Trusted Client CA Certificate.

Figure215: Import Trusted Client CA Page



3. Browse to the certificate file, select it, and click Import Certificate to complete the import operation.
4. Click the link for the Trusted Client CA to display its details.

Configuring User Roles

User roles are classifiers for network access control policies. You create a set of roles to use in your classification scheme: device status is MDM enrollment complete or incomplete; device status is MDM-policy compliant or noncompliant; device is employee owned or company owned; device platform is iOS, Android, or neither; and so forth.

The user role configuration also includes options to customize user interface features that are appropriate for a particular role. For MDM deployments, you can use the Personalized Greeting UI option to send a notification message to the device when the role has been applied.

To configure user roles:

1. Select Users > User Role to navigate to the role configuration page.
2. Click New Role to display the configuration page.
3. Complete the configuration for general options as described in below table.
4. Save the configuration.
5. Click UI options to display the configuration page.
6. Complete the configuration for UI options as described in below table.
7. Save the configuration.
8. Click Session Options to display the configuration page.
9. Complete the configuration for session options as described in below table.
10. Save the configuration.
11. Click Agentless to display the configuration page.
12. Complete the configuration for agentless options as described in below table.
13. Save the configuration.

Figure216: User Role Configuration Page – General Settings

Pulse Secure System Authentication Administrators **Users** Maintenance Wizards

User Roles > New Role

New Role

Name:

Description:

▼ Options

Session and appearance options are specified in [Default Options](#). Check the following if this role should override these defaults.

☐ VLAN/Source IP

☒ Session Options

☒ UI Options

☐ Pulse Secure client Dynamically deliver Pulse Secure client to Windows and MAC OSX users

▼ Access Features

Check the features to enable for this user role, and specify any role-based options. Note that features disabled here may be granted by other roles assigned to the user.

☐ Web

☐ Files, Windows

☐ Files, UNIX/NFS

☐ Telnet/SSH

☐ Email Client

☐ Secure Application Manager

☐ Windows version Note: On Windows Mobile, Pulse Secure client is delivered via WSAM

☐ Java version

☐ Terminal Services

☐ Virtual Desktops

☐ HTML5 Access

☐ Meetings

☐ VPN Tunneling (includes IKEv2)

▼ Enterprise Device Onboarding

Check the Enterprise Device Onboard profiles to enable for this user role, and specify any role-based options. Note that features disabled here may be granted by other roles assigned to the user.

☐ Secure Mail

☐ Enterprise Onboarding (VPN, Wifi and Certificate Profiles)

[Save Changes](#)

Figure217: User Role Configuration Page – UI Options


Pulse Connect Secure

System
Authentication
Administrators
Users
Maintenance
Wizards

User Roles > Compromised > General > UI Options

UI Options

General

Web

Files

SAM

Telnet/SSH

Terminal Services

Virtual Desktops

HTML5 Access

Meetings

VPN Tunneling

Enterprise Onboarding

Overview

Restrictions

VLAN/Source IP

Session Options


UI Options

Save Changes

Restore Factory Defaults

Header

Current appearance:



Logo image:


Browse

No file chosen

Recommended size:
Less than 40 pixels tall and 10KB.

Background color:

#E3E3E3



Select from palette or type hexadecimal RGB


Sub headers

Current appearance:

Label

Background color:


#336699



Select from palette or type hexadecimal RGB

Text color:

#FFFFFF



Select from palette or type hexadecimal RGB

Start page

The start page determines where a user starts after signing in.

Bookmarks page

Welcome message:

Welcome to the

Portal Name:

Pulse Connect Secure

Meetings page

Custom page

Start page URL:

Example: http://www.domain.com/

☐ Also allow access to directories below this url

Bookmarks Panel Arrangement

Determine the location and order of panels on the user's bookmarks page. Note that all panels may not be displayed.

Move Up

Move Down

Left Column

Welcome

Web Bookmarks

Files

Terminal Sessions

Client Application S

Virtual Desktops

Move >

Move <

Right Column

HTML5 Access Sess

Move Up

Move Down

Help Page

☐ Disable help link

☒ Standard help page

☐ Custom help page

Help page URL:

Example: http://www.domain.com/help

☐ Also allow access to directories below this url

Window size:

width

400

height

300

User Toolbar

Determine the tools that are available to users at the top of the secure gateway pages on the IVE.

☒ Home

☒ Preferences

☐ Session Counter

☐ Client Application Sessions

If this is not displayed on the toolbar, it will be displayed as a panel on the user's home page.

Browsing toolbar

Determine the tools that are available to users when browsing pages not located on the IVE, such as external web sites.

☒ Show the browsing toolbar

Toolbar type:

☒ Standard
☐ Framed

Toolbar logo:

Browse

No file chosen

Recommended size:
Less than 24 pixels tall and 6KB

Toolbar logo (mobile):

Browse

No file chosen

Recommended size:
Less than 12 pixels tall and 3KB

Logo links to:

☐ Bookmarks page

☒ "Start Page" settings

☐ Custom URL:

☐ Also allow access to directories below this url

☐ Enable "Home" link

☒ Enable "Add Bookmark" link

☒ Enable "Bookmark Favorites" link

☐ Display Session Counter


☒ Enable "Help" link

☐ Use Iframe in Toolbar

© 2019 by Pulse Secure, LLC. All rights reserved

373

Figure218: User Role Configuration Page – Session Options

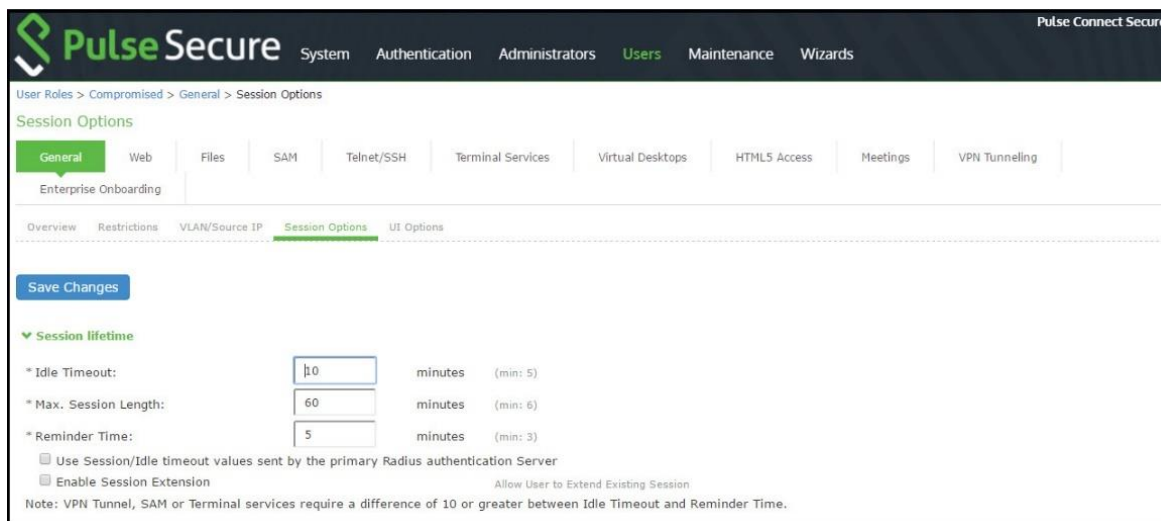

Pulse Secure System Authentication Administrators **Users** Maintenance Wizards

User Roles > Compromised > General > Session Options

Session Options

General Web Files SAM Telnet/SSH Terminal Services Virtual Desktops HTML5 Access Meetings VPN Tunneling

Enterprise Onboarding

Overview Restrictions VLAN/Source IP **Session Options** UI Options

Save Changes

Session lifetime

* Idle Timeout: minutes (min: 5)

* Max. Session Length: minutes (min: 6)

* Reminder Time: minutes (min: 3)

☐ Use Session/Idle timeout values sent by the primary Radius authentication Server

☐ Enable Session Extension Allow User to Extend Existing Session

Note: VPN Tunnel, SAM or Terminal services require a difference of 10 or greater between Idle Timeout and Reminder Time.

Table25: User Role Configuration Guidelines

| Settings | Guidelines |
|----------------------------|---|
| Overview tab | |
| Name | Specify a name for the configuration. |
| Description | Describe the purpose of the role so that other administrators are aware of it. |
| Options | Select UI Options so that you can customize a message to be sent to the device when the role is applied. |
| UI Options tab | |
| Personalized greeting | <p>Select the Show notification message option and enter a message to be sent to the device (through the MDM API) after sign-in and this role has been applied, or after role reevaluation if it results in a role change to this role.</p> <p>In this example, we are using the system to enforce MDM enrollment by flagging compromised devices. The message, therefore, is:</p> <p>Your device is compromised. Network access may be limited.</p> <p>The message is forwarded to the device using the MDM server Push Notification feature.</p> <p>The content of your notification message can vary depending on whether the switch or access point supports change of authorization (CoA). If the CoA is supported, reauthentication is automatic, so your message might simply state that "your level of access has changed." If CoA is not supported, reauthentication needs to be done manually by the user in which case the message might state that "your level of access has changed, please reconnect."</p> <p>NOTE: When multiple roles are assigned, UI options are not merged. The UI options for the first role that matches are applied.</p> |
| Session Options | |
| Allow VPN Through Firewall | Enable this option to allow Infranet Enforcer traffic to act as a heartbeat and keep the session alive. This option is useful for iOS devices. |
| Agentless | |

| Settings | Guidelines |
|-------------------------|---|
| Enable agentless access | Select this option for roles that you provision to access the network from BYOD devices. The solution that integrates with MDMs depends on the native supplicant, not a Pulse Secure agent. |

Configuring a Realm and Role Mapping Rules

The user realm configuration associates the authentication server data and MDM server data with user roles.

To configure the realm and role mapping rules:

1. Select Users > User Realms > New User Realm to display the configuration page.
2. Upon saving the new realm, the system displays the role mapping rules page.
3. Click New Rule to display the configuration page.
4. Complete the configuration as described in table.
5. Click the Authentication Policy tab and then click the Certificate subtab to display the certificate restriction configuration page.

Table26: Realm Configuration Guidelines

| Settings | Guidelines |
|--------------------------|---|
| Name | Specify a name for the realm. If you enable sign-in using a realm suffix in the sign-in policy configuration, the realm name must match the username realm suffix configured in the MDN Wi-Fi profile. |
| Description | Describe the purpose of the realm so that other administrators are aware of it. |
| Servers | |
| Authentication | Select the user authentication server for this realm's users. This example uses the certificate server configured in the earlier step. When you use a certificate server, users are not prompted for their credentials. You can also select the authentication server used for employees. In that case, users are prompted by the sign-in page to provide their username and password. |
| User Directory/Attribute | This option is not used. |
| Accounting | This option is not used. |
| Device Attributes | Select the MDM server configured for device authorization. |
| Device Check Interval | Select this feature to leverage the MDM posture assessment checks and enforce compliance. For example, the MDM might detect that a device is out of compliance with its security policies, such as a password policy. At the next device check interval, PPS queries the MDM for updated attribute data. In this example, it learns that a formerly compliant device is now noncompliant. It assigns the device the noncompliant role and sends the 802.1x authenticator the corresponding RADIUS attribute to place it in a remediation VLAN. Specify the interval at which to query the MDM for updated attribute data. Specify 0 to disable periodic queries. The minimum is 10 minutes and the maximum is 10080 minutes (7 days). Specify an interval that is appropriate for the MDM. Some MDMs, for example, update records every 4 hours, so a 10-minute interval would not be productive. |

| Settings | Guidelines |
|---------------------------|--------------------------|
| Dynamic Policy Evaluation | |
| Dynamic Policy Evaluation | This option is not used. |

Figure219: Role Mapping Configuration Page

Pulse Secure System Authentication Administrators **Users** Maintenance

User Realms > All Roles Realm - NC Client > Role Mapping > Role Mapping Rule

Role Mapping Rule

* Name:

▼ Rule:if username...

is If more than one username should match, enter one username per line. You can use * wildcards.

▼ then assign these roles

Available Roles: AAA QA Role, Client QA Role, Core QA Role, Default QA VLAN Role, JSAM Role

Add -> Remove

Selected Roles: Terminal Services Role, Web Role, STA Role, WSAM Role, HTML5 Role

☐ Stop processing rules when this rule matches

To manage roles, see the Roles configuration page.

Save Changes Save as Copy

Table27: Role Mapping Configuration Guidelines

| Settings | Guidelines |
|-----------------|--|
| Rule based on | Select Device Attribute and click Update to update the configuration page so that it displays settings for role mapping using device attributes. |
| Name | Specify a name for the configuration. |
| Rule | Select a device attribute and a logical operator (is or is not), and type a matching value or value pattern. In this example, select isCompromised and the logical operator is, and enter the value 1 (true). This means that devices with a compromised status match the rule. |
| Role assignment | Select the roles to apply if the data matches the rule. |

The below table describes the AirWatch record attributes that can be used in role mapping rules.

Table28: AirWatch Device Attributes

| Role Mapping Attribute Name | AirWatch Attribute Name | Description | Data Type |
|-----------------------------|-------------------------|--|-----------|
| BlockLevelEncryption | BlockLevelEncryption | True if block-level encryption is enabled; false otherwise. | Boolean |
| complianceReason | ComplianceStatus | Values: Compliant, Non-Compliant. | String |
| CompromisedStatus | CompromisedStatus | True if the status is compromised; false otherwise. | Boolean |
| DataProtectionEnabled | DataProtectionEnabled | True if data protection is enabled; false otherwise. | Boolean |
| deviceId | Id.Value | Device identifier. | String |
| deviceName | DeviceFriendlyName | The concatenated name used to identify the device/user combination. | String |
| FileLevelEncryption | FileLevelEncryption | True if file-level encryption is enabled; false otherwise. | Boolean |
| IMEI | Imei | IMEI number of the device. | String |
| isCompliant | ComplianceStatus | Values: Compliant. | String |
| isCompromised | CompromisedStatus | True if the device is compromised; false otherwise. | Boolean |
| isEnrolled | EnrollmentStatus | True if MDM value is Enrolled; false otherwise. | Boolean |
| IsPasscodeCompliant | IsPasscodeCompliant | True if the passcode is compliant with the MDM policy; false otherwise | Boolean |
| IsPasscodePresent | IsPasscodePresent | True if a passcode has been configured; false otherwise. | Boolean |
| LastComplianceCheckOn | LastComplianceCheckOn | The refresh date and timestamp of the last status reported. | Timestamp |
| LastCompromisedCheckOn | LastCompromisedCheckOn | The refresh date and timestamp of the last status reported. | Timestamp |
| lastSeen | LastSeen | Date and time the device last made successful contact with the MDM. | Timestamp |
| LocationGroupName | LocationGroupName | MDM location group configuration value. | String |
| macAddress | MacAddress | The Wi-Fi MAC address. | String |
| model | Model | Model is automatically reported by the device during registration. | String |
| osVersion | OperatingSystem | OS version. | String |
| ownership | Ownership | Values: C, E, or S (Corporate, Employee, or Shared). | String |
| phoneNumber | PhoneNumber | Phone number entered during registration. | String |
| platform | Platform | Platform specified during registration. | String |
| serialNumber | SerialNumber | Serial number. | String |
| UDID | Udid | Unique device identifier. | String |
| userEmail | UserEmailAddress | E-mail address of device user. | String |
| userName | UserName | Name of device user. | String |
| UUID | Uuid | Universal unique identifier. | String |

The below table describes the MobileIron record attributes that can be used in role mapping rules.

Table29: MobileIron Device Attributes

| Role Mapping Attribute Name | MobileIron Attribute Name | Description | Data Type |
|-----------------------------|---------------------------|---|-----------|
| blockedReason | blockedReason | Reason MDM has blocked the device. Can be a multivalued string. Values are: <ul style="list-style-type: none"> AllowedAppControlPolicyOutOfCompliance AppControlPolicyOutOfCompliance DataProtectionNotEnabled DeviceAdminDeactivated DeviceComplianceStatusUnknown DeviceCompliant DeviceCompromised DeviceExceedsPerMailboxLimit DeviceManuallyBlocked DeviceNotRegistered DisallowedAppControlPolicyOutOfCompliance ExchangeReported HardwareVersionNotAllowed OsVersionLessThanSupportedOsVersion PolicyOutOfDate RequiredAppControlPolicyOutOfCompliance | String |
| complianceReason | compliance | MDM policy compliance status. Can be a multivalued string. Values are: <ul style="list-style-type: none"> AllowedAppControlPolicyOutOfCompliance AppControlPolicyOutOfCompliance DataProtectionNotEnabled DeviceAdminDeactivated DeviceComplianceStatusUnknown DeviceCompliant DeviceCompromised DeviceExceedsPerMailboxLimit DeviceManuallyBlocked DeviceNotRegistered DisallowedAppControlPolicyOutOfCompliance ExchangeReported HardwareVersionNotAllowed OsVersionLessThanSupportedOsVersion PolicyOutOfDate RequiredAppControlPolicyOutOfCompliance | String |
| countryName | countryName | Country name corresponding with the country code of the device. | String |
| deviceId | @id | Device identifier. | String |
| deviceName | name | The concatenated name used to identify the device/user combination. | String |
| homeOperator | homeOperator | The service operator for the device when it is not roaming. | String |

| Role Mapping Attribute Name | MobileIron Attribute Name | Description | Data Type |
|-----------------------------|---|--|-----------|
| imei | iPhone IMEI (iOS), imei (Android) | IMEI number of the device. | String |
| isBlocked | isBlocked | True if the device is blocked from accessing the ActiveSync server; false otherwise. | Boolean |
| isCompliant | compliance | True if the device is in compliance with its MDM security policies; false otherwise. | Boolean |
| isCompromised | compliance | True if the device is compromised; false otherwise. | Boolean |
| isEnrolled | statusCode | True if the device has completed enrollment or registration; false otherwise. | Boolean |
| isQuarantined | isQuarantined | True if the device is quarantined by the MDN; false otherwise. | Boolean |
| lastSeen | lastConnectAt | Date and time the device last made successful contact with the MDM. | Timestamp |
| manufacturer | manufacturer | Manufacturer is automatically reported by the device during registration. | String |
| macAddress | wifi_mac (iOS), wifi_mac_addr (Android) | The Wi-Fi MAC address. | String |
| mdmManaged | mdmManaged | True if the MDM profile is enabled on the device; false otherwise. This field applies only to iOS devices. For other devices, the value is always false. | Boolean |
| model | ModelName, model, device_model | Model is automatically reported by the device during registration. | String |
| operator | operator | Service provider. The value PDA indicates no operator is associated with the device. | String |
| osVersion | OSVersion (iOS), os_version (Android) | OS version. | String |
| ownership | employeeOwned | Values: Employee or Corporate. | String |
| phoneNumber | currentPhoneNumber | Phone number entered during registration. | String |
| platform | platform | Platform specified during registration. | String |

| Role Mapping Attribute Name | MobileIron Attribute Name | Description | Data Type |
|-----------------------------|---------------------------|--|-----------|
| quarantinedReason | quarantinedReason | MDM policy compliance status. Can be a multivalued string. Values are: <ul style="list-style-type: none"> AllowedAppControlPolicyOutOfCompliance AppControlPolicyOutOfCompliance DataProtectionNotEnabled DeviceAdminDeactivated DeviceComplianceStatusUnknown DeviceCompliant DeviceCompromised DeviceExceedsPerMailboxLimit DeviceManuallyBlocked DeviceNotRegistered DisallowedAppControlPolicyOutOfCompliance ExchangeReported HardwareVersionNotAllowed OsVersionLessThanSupportedOsVersion PolicyOutOfDate RequiredAppControlPolicyOutOfCompliance | |
| serialNumber | SerialNumber | Serial number. | String |
| UDID | iPhone UDID | Unique device identifier. | String |
| userEmail | emailAddress | E-mail address of device user. | String |
| userId | principal | User ID. | String |
| userName | userDisplayName | Name of device user. | String |
| UUID | uuid | Universal unique device identifier. | String |

Table30: PWS Device Attributes

| Role Mapping Attribute Name | PWS Attribute Name | Description | Data Type |
|-----------------------------|--------------------|---|------------|
| osVersion | os_version | OS version | String |
| UUID | uuid | Unique device identifier | String |
| IMEI | imei | IMEI number of the device. | String |
| macAddress | wifi_mac | The Wi-Fi MAC address. | String |
| serialNumber | serial_number | Serial number of the device. | String |
| lastSeen | last_seen | Date and time the device last made successful contact with the MDM. | Time Stamp |

| Role Mapping Attribute Name | PWS Attribute Name | Description | Data Type |
|--|--------------------|--|-----------|
| isCompliant isCompromised complianceReason | is_compliant | True if the device is in compliance with its MDM security policies; false otherwise. | Boolean |
| isEnrolled | state | True or false (indicating whether the client is managed by PWS or not). | Boolean |
| UDID | ios_udid | The device unique identifier. Unique Device Identifier (UDID), which is a sequence of 40 letters and numbers that is specific to iOS devices. | String |
| model | model | Model of the device. | String |
| phonenumber | PhoneNumber | Phone number entered during registration. | String |
| userName | username | Name of device user. | String |
| carrier | carrier | User ID. | String |
| manufacturer | manufacturer | Device manufacturer name. | String |
| deviceName | devicename | Name of the device. | String |

Table31: Microsoft Intune Device Attributes

| Role Mapping Attribute Name | Microsoft Intune Attribute Name | Description | Data Type |
|-----------------------------|---------------------------------|--|-----------|
| deviceid | azureDeviceId | The device Id of the device after it has work place joined with Azure Active Directory. | String |
| IMEI | imei | The device unique identifier. IMEI (15 decimal digits: 14 digits plus a check digit) or IMEISV (16 digits) includes information on the origin, model, and serial number of the device. | String |
| isCompliant | complianceState | True or false (string) based on whether device is compliant or non-compliant. | Boolean |
| isEnrolled | isManaged | True or false (indicating whether the client is managed by Intune or not). | Boolean |

| Role Mapping Attribute Name | Microsoft Intune Attribute Name | Description | Data Type |
|-----------------------------|---------------------------------|---|---|
| lastSeen | lastContactTimeutc | The date time when the device last checked in with the Intune management service endpoint. | String The format is MM/DD/YYYY HH:MM:SS |
| macAddress | macAddress | MAC address of the device. | String |
| manufacturer | manufacturer | Device Manufacturer. | String |
| meid | meid | MEID is 56 bits long (14 hex digits). It consists of three fields, including an 8-bit regional code (RR), a 24-bit manufacturer code, and a 24-bit manufacturer-assigned serial number. | String |
| model | model | Model of the device. | String |
| osVersion | osVersion | OS Version of the device. | String |
| serialNumber | serialNumber | Serial number of the device. Applies to iOS Devices only. | String |
| UDID | udid | The device unique identifier. Unique Device Identifier (UDID), which is a sequence of 40 letters and numbers that is specific to iOS devices. | String |
| UUID | uuid | Universal unique device identifier. | String |

Figure220: Realm Configuration Page – Certificate Restrictions

PulseSecure System Authentication Administrators **Users** Maintenance Wizards

User Realms > All Roles Realm - NC Client > Authentication Policy > Certificate

Certificate

General **Authentication Policy** Role Mapping

Source IP Browser **Certificate** Password Host Checker Limits

☒ Allow all users (no client-side certificate required)
☐ Allow all users and remember certificate information while user is signed in.
☐ Only allow users with a client-side certificate signed by Trusted Client CAs to sign in. To change the certification authority, see the [Trusted Client CA](#) page.

You can optionally require specific values in the client certificate:

10 records per page

| Certificate field (example "cn") | Expected value |
|----------------------------------|----------------------|
| <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> |

[Save Changes](#)

Table32: Realm Configuration Certificate Restriction Guidelines

| Settings | Guidelines |
|---|---|
| Allow all users | Do not select this option. If you select this option, the system does not request a client certificate during the TLS handshake. |
| Allow all users and remember certificate | If you select this option, the system requests a client certificate during the TLS handshake. It does allow endpoints to authenticate without a client certificate. For those with a client certificate, the certificate attributes are placed in the session context. |
| Only allow users with a client-side certificate | If you select this option, the system requests a client certificate during the TLS handshake. It does not allow endpoints to authenticate without a valid client certificate. If the realm is configured with a certificate server, like this example, this option is the only option that can be selected. |

Configuring a Sign-In Policy

A sign-in policy associates devices with a realm.

To configure a sign-in policy:

1. Select Authentication > Signing In > Sign-In Policies to navigate to the sign-in policies configuration page.
2. Click New URL to display the configuration page.
3. Complete the configuration as described below.
4. Save the configuration.

Table33: Sign-In Policy Configuration Guidelines

| Settings | Guidelines |
|---------------------------------|--|
| User type | Select Users. |
| Sign-in URL | Enter a URL. |
| Description | Describe the purpose of the sign-in policy so that other administrators are aware of it. |
| Sign-In Page | Select a sign-in page. |
| Authentication Realm | |
| Realm | Select the realm you configured in the earlier step. |
| Authentication Protocol Set | Select the protocol you configured in the earlier step. |
| Realm name as a username suffix | <p>Select this option if the username sent during sign-in includes a realm suffix.</p> <p>To use this option, the realm name must match the username realm suffix configured in the MDN Wi-Fi profile.</p> <p>This configuration enables you to dedicate the realm to the MDM traffic. Non-MDM traffic passing through the same switch then belongs to a different realm.</p> <p>NOTE: In some cases, you can use authentication protocol sets to segregate traffic into a particular realm. For example, assuming only mobile endpoints use TLS and other endpoints do not, an authentication protocol set containing only TLS can be created and associated with a particular realm through a sign-in policy.</p> |
| Remove realm suffix | Remove the realm suffix within system processes, such as rule processing and logs. |

Configuring PPS with Pulse Workspace

Pulse Workspace is the Pulse Secure MDM server which provides the device compliance status for the mobile devices. PPS retrieves the device attributes from PWS and uses it for compliance assessments and role assignment.

To configure PWS MDM:

1. Select **System > Configuration > Pulse One > Settings** to register PPS with Pulse One.
 - Enter the PWS registration URL and registration code details and register PPS to PWS.
 - Click Save Changes.

The registration status and the notification channel status turns green if the connection is successful.

Figure221: PWS MDM Configuration

The screenshot shows the Pulse Secure web interface. The top navigation bar includes the Pulse Secure logo and tabs for System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail indicates the current location: Configuration > Pulse One > Settings. The Settings page has a tabbed interface with tabs for Licensing, Pulse One (selected), Security, Certificates, DMI Agent, Sensors, Client Types, and Guest Access. The Pulse One tab contains the following settings:

- *Registration Host:** api.pulseone.net (The Host to which the appliance connects to for starting registration flow)
- *Registration Code:** ***** (The registration code provided by Pulse One)
- *Credential Renegotiation Interval:** 6 days (1 - 7 days. The time after which credentials are renegotiated)
- Preferred network interface:** Internal Port (If the selected network interface is disabled, defaults to 'Internal Port')
- Credentials Exchange time:** Credentials Not Exchanged (The last successful credential exchange time.)

Below these settings are two expandable sections:

- Registration Result Details:** On successful registration the following information is received from Pulse One
 - Hashing Algorithm:** hs256 (Hashing algorithm used for HAWK authentication.)
 - Client Device Id:** Unique id of the appliance on Pulse One
 - Notification URL:** The URL for establishing notification channel
- Status Information:**
 - Registration Status:** (Green circle icon)
 - Notification Channel Status:** (Green circle icon)

At the bottom, there is an **Actions** section with three buttons: Save Changes, Clear Configuration, and Renegotiate Credential.

2. Select **Authentication > Auth. Servers > New MDM Server**. Enter the name, select Pulse Workspace as MDM and click **Save changes**.

Figure222: PWS MDM Server

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Auth Servers > New MDM Server

New MDM Server

*Name: Label to reference this server.

Type: ☐ Air Watch ☐ Mobile Iron ☒ Pulse Workspace

Pulse Policy Secure has to be registered with Pulse One for using Pulse Workspace as a MDM auth server. [Click here](#) to register with Pulse One.

Note: Pulse Policy Secure uses Certificate's fingerprint to query attributes from Pulse Workspace MDM auth server.

* indicates required field

3. Select **Users > User Realms** and select the Device Attribute server for PWS.
4. Select Role Mapping tab of the user realm to create role mapping rules. Configure the role mapping rules based on the PWS supported device attributes.

Figure223: Role Mapping PWS MDM Server

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Realms > test > Role Mapping > Role Mapping Rule

Role Mapping Rule

Rule based on:

* Name:

▼ Rule: If device has any of the following attribute values...

Attribute:

is

If more than one value for this attribute should match, enter one per line. You can use * wildcards.

▼ then assign these roles

Available Roles: Desktop, ENGG, Guest, Guest Admin, REMEDIATION

Roles:

☐ Stop processing rules

To manage roles, see the [Roles](#) configuration page.

Configuring PPS with Microsoft Intune

Microsoft Intune is an MDM server which provides the device compliance status for the mobile devices. PPS retrieves the device attributes from Microsoft Intune and uses it for compliance assessments and role assignment. This feature integrates Microsoft Intune and PPS for providing compliance check and onboarding of devices.

To configure Microsoft Intune MDM server:

1. Select **Authentication > Auth. Servers > New MDM Server**.
2. Enter the server name, select **Microsoft Intune** as MDM.
 - Enter the Azure AD Tenant ID.
 - Enter the Web application ID or Client ID that is registered in Azure AD.
 - Enter the Client Secret key registered in the Azure AD.
 - Enter the Timeout duration in seconds. Default is 15 seconds.

To obtain Tenant ID, Client ID, Client Secret Key, see [Viewing Client ID, Tenant ID, and Client Secret](#).

3. Click **Save changes**.

Figure224: Intune MDM Server

The screenshot shows the 'New MDM Server' configuration page in the Pulse Secure interface. The page has a dark header with the Pulse Secure logo and navigation tabs: System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail is 'Auth Servers > New MDM Server'. The form includes a 'Name' field with a placeholder 'Label to reference this server.', a 'Type' section with radio buttons for Pulse Workspace, Air Watch, Mobile Iron, and Microsoft Intune (selected), and a 'Server' section with fields for Tenant ID, Client ID, Client Secret, and Request Timeout (15 seconds). A 'Test Intune Connection' button is below the Request Timeout field. A note at the bottom states: 'Note: Pulse Policy Secure uses endpoint's MAC address to query attributes from Microsoft Intune MDM auth server.' At the bottom are 'Save Changes' and 'Reset' buttons. A footnote indicates '* indicates required field'.

4. Select **Users > User Realms** and select the Device Attribute server for Microsoft Intune.

Figure225: Realm

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Realms > Users > General

General Authentication Policy Role Mapping

* Name: Users Label to reference this realm

Description: Default authentication realm for users

☐ When editing, start on the Role Mapping page

Servers

Specify the servers to use for authentication and authorization. To create or manage servers, see the [Servers](#) page.

Authentication: System Local Specify the server to use for authenticating users.

User Directory/Attribute: None Specify the server to use for authorization.

Accounting: None Specify the server to use for Radius accounting.

Device Attributes: **IntuneSrv** Specify the server to use for device authorization.

Device Check Interval: 60 minutes Specify the interval to check device attributes server. disable=0, min=10, max=10080 minutes

5. Select **Role Mapping** tab of the user realm to create role mapping rules. Configure the role mapping rules based on the Microsoft Intune supported device attributes.

Figure226: Role Mapping Intune MDM Server

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Realms > Users > Role Mapping > Role Mapping Rule

Role Mapping Rule

Rule based on: Device attribute Update

* Name:

Rule: If device has any of the following attribute values...

Attribute: (Select an attribute) Attributes...

is (Select an attribute)

isCompliant

If more than one value for this attribute should match, enter one per line. You can use * wildcards.

then assign these roles

Available Roles:

- Guest
- Guest Admin
- Guest Sponsor
- Guest Wired Restricted
- Kajal-HC-Test-Role

Roles:

☐ Stop processing rules


Configuring the Microsoft Intune MDM

Microsoft Intune acts as the Mobile Device Management (MDM) Server for PPS solution. PPS users have to register their mobile devices with Microsoft Intune. As part of registration, the relevant Profiles get automatically provisioned to mobile device.

To configure the Microsoft Intune MDM:


5. Enroll the devices with the MDM server.
6. Create an enterprise WiFi profile.
7. Configure PPS with a role and realm for the user. Microsoft Intune provides the user with a link to provision the created policy and then pushes the profile information. PPS does the role assignment and either allows or denies based on the device assessment. For more information, see [Configuring PPS](#).
8. Create Azure Active Directory (AAD) web application.
9. Go to portal.azure.com, click on the Azure Active Directory on the left of the screen, click on to App registrations and click on New application registration.

Figure227: Creating New Application

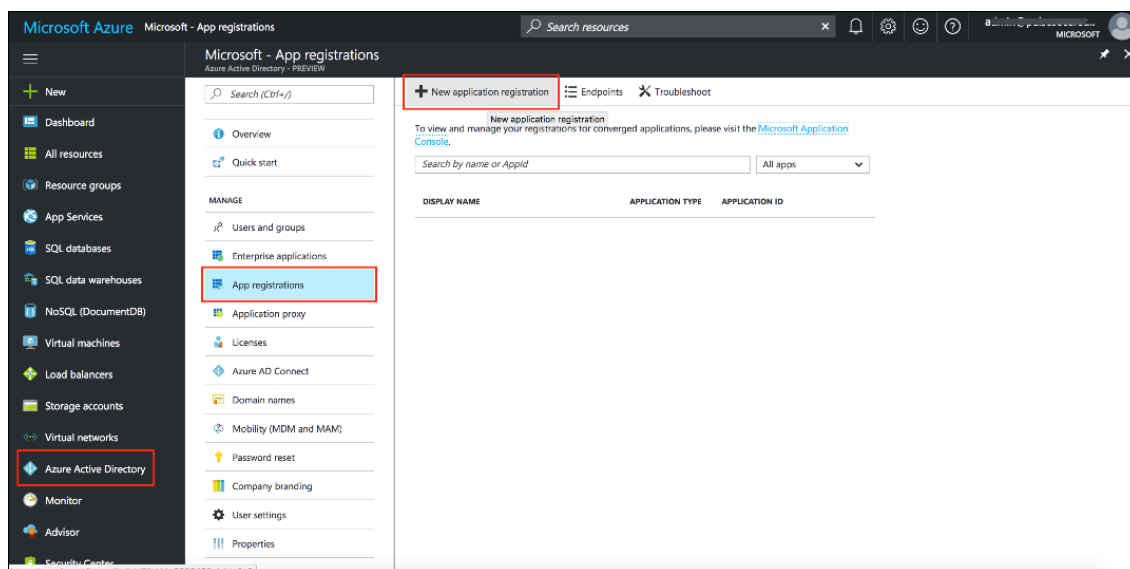


10. Enter the application name, select Web app/API as application type, and enter the IP address/FQDN for sign-on-URL and Click **Create**.

Figure228: Setting up the New Application

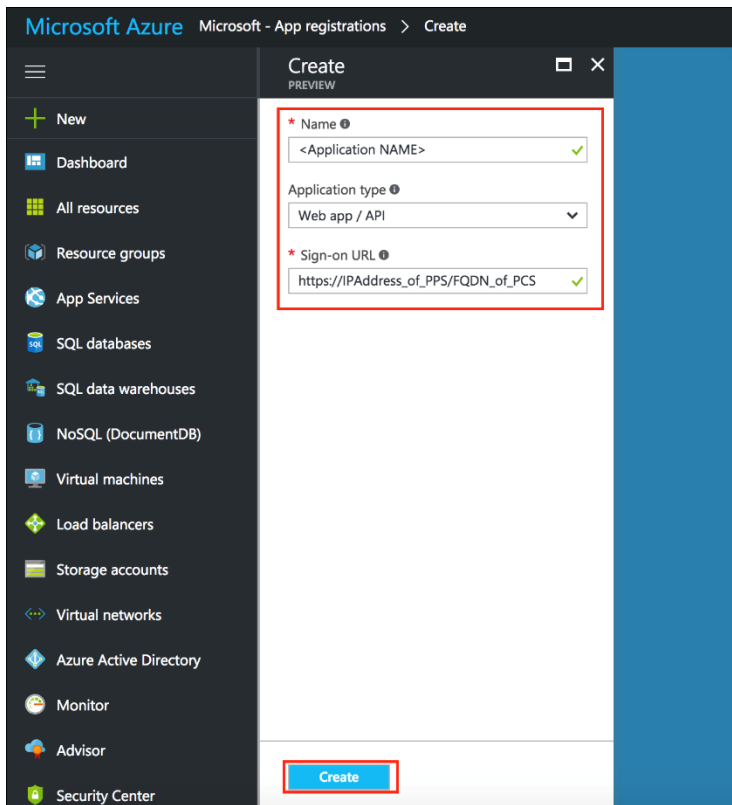


11. The Application Registration page appears if the registration is successful.

Figure229: Application Created

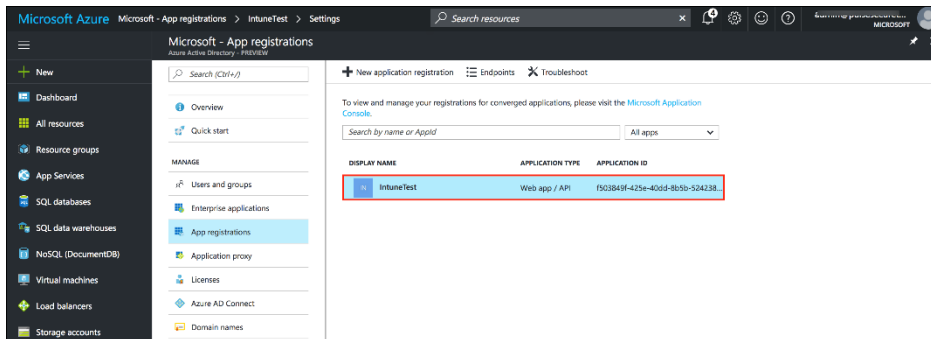


12. Click the application and select the required permissions and click **Add**.

Figure230: Adding Permissions

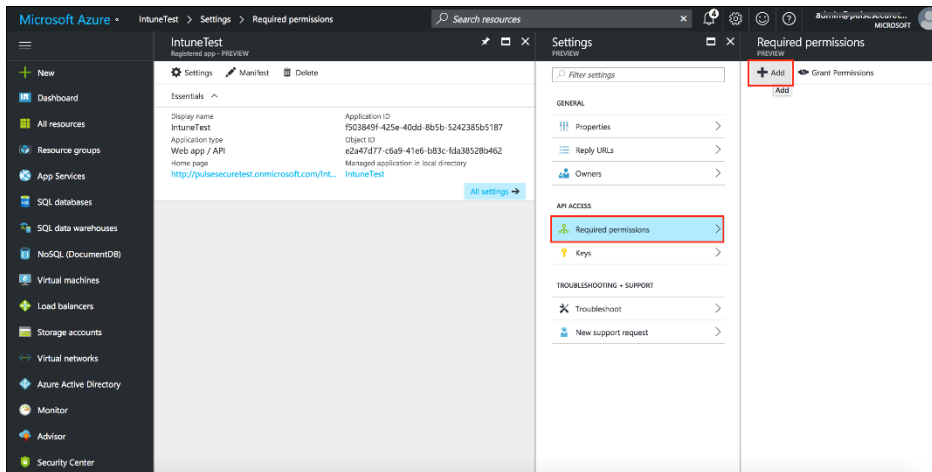


13. Click **Grant Permission**.
14. Select Microsoft Intune API.

Figure231: Setting Intune Permissions

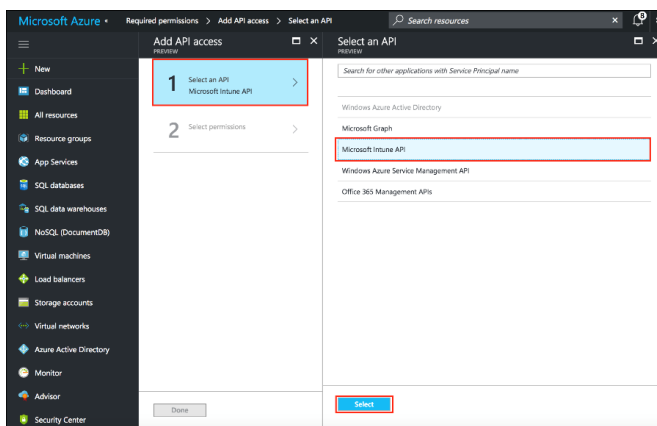

15. Under Application Permissions, select **Get device and compliance information from Microsoft Intune**.

Figure232: Setting Intune Permissions

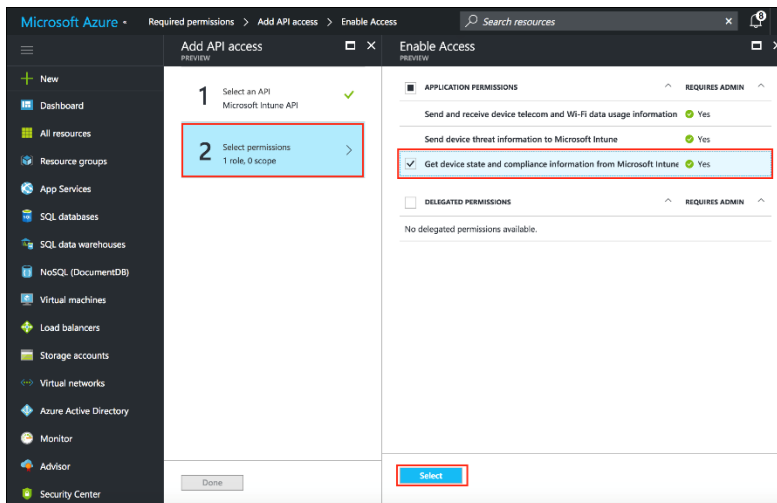

16. (Optional) You must add the following delegated permissions for Microsoft Graph API.

- Sign in and read user profile
- Sign Users in
- View users' email address
- View users' basic profile

17. (Optional) Add the following delegated permissions for Azure Active Directory.

- Sign in and read user profile
- Read all users' basic profiles
- Access the directory as the signed-in user.


Figure233: Permissions

| Required permissions | | |
|--------------------------------|--------------------|-------------------|
| PREVIEW | | |
| + Add | | |
| API | APPLICATION PER... | DELEGATED PERM... |
| Windows Azure Active Directory | 0 | 3 |
| Microsoft Intune API | 1 | 0 |
| Microsoft Graph | 0 | 4 |

Viewing Client ID, Tenant ID, and Client Secret


The Client ID/Application ID is created automatically once the AAD web application/API is created. You can view the client ID/application ID from the application properties page.


Figure234: Client ID/Application ID

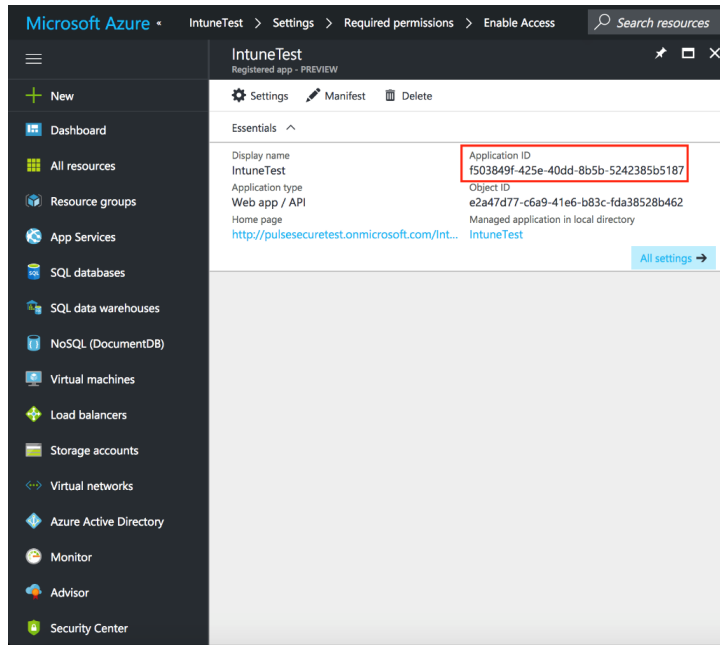


Every organization in Microsoft cloud is called tenant and it is organization specific. Each Tenant will be having a unique Tenant ID. Select the web application/API and click Endpoints tab and then you can copy the tenant ID.

Figure235: Client ID/Application ID

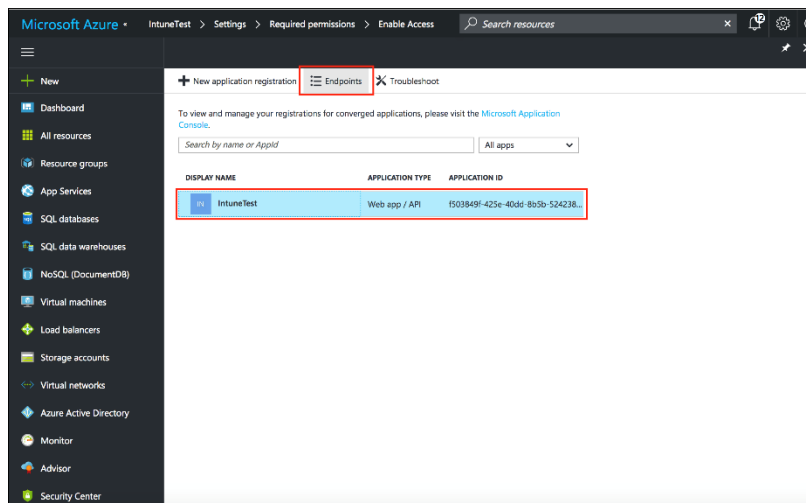

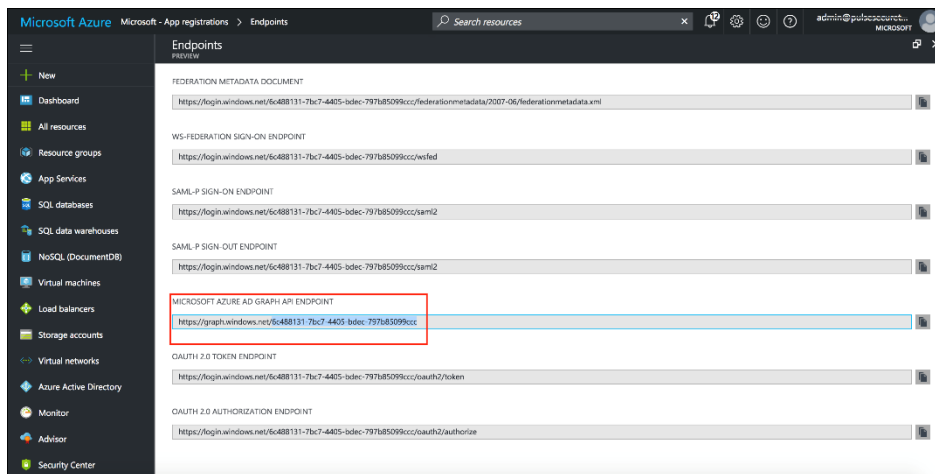

To create the secret key, click the Web Application/API and then click Keys.

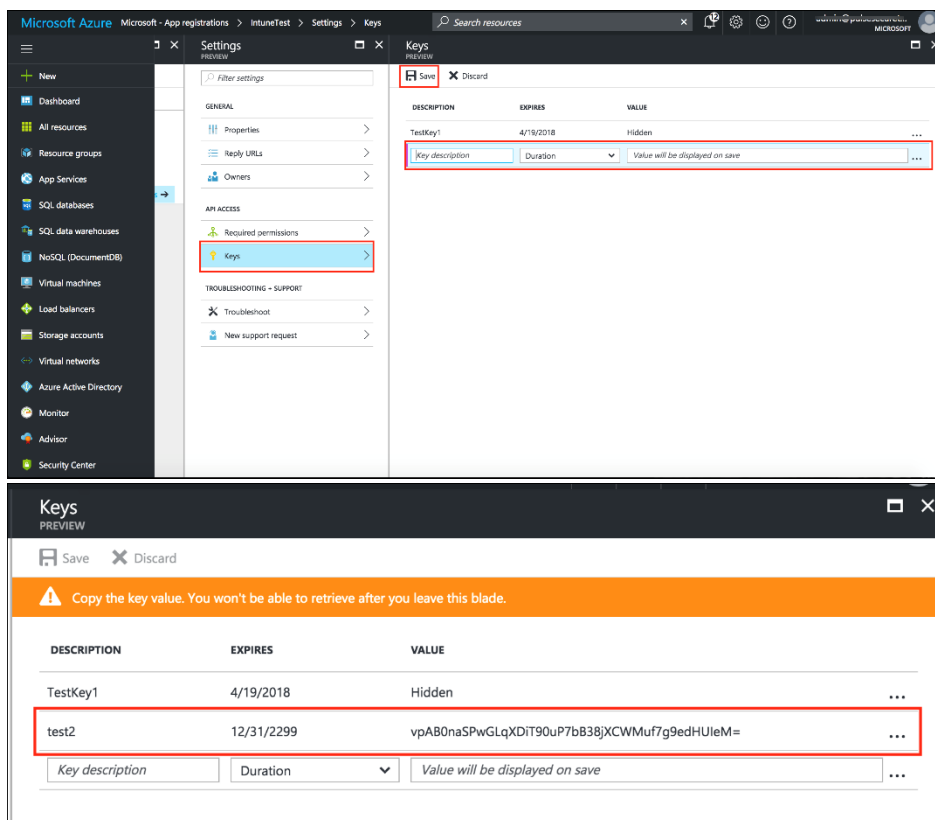

Configuring the PWS MDM

Pulse Workspace acts as the Mobile Device Management (MDM) Server for PPS solution. PPS users have to register their mobile devices with Pulse Workspace. As part of registration, the relevant Profiles get automatically provisioned to mobile device.

To configure the PWS MDM:

1. Enroll the devices in the MDM.
2. Create an enterprise WiFi profile. For more information, see [Enterprise WiFi configuration](#).
3. Configure PPS with a role and realm for the user using the Certificate authentication server. PWS provides the user with a link to provision the created policy and then pushes the profile information. PPS does the role assignment and either allows or denies based on the device assessment. For more information, see [Configuring PPS](#).

Configuring the AirWatch MDM

To configure the AirWatch MDM:

1. Enroll devices in the MDM using the methods supported by the MDM.
2. Create a profile with the following MDM management options:
 - Certificate template- Create a configuration that specifies the field and type of identifier for client device certificates.
 The MDM configuration templates provide flexibility in how the device identifier can be placed in the device certificate's subject or alternative subject. We recommend you include the user ID in the certificate, so the certificate can identify both the user and the device. For example:
 - CN=<EnrollmentUser>, serialNumber=<DeviceUid>, o=Company
 - Credential profile- Create a configuration that specifies the certificate authority and certificate template configuration.
 - Wi-Fi profile- Create a configuration that specifies the SSID, security options, and the credential configuration.
3. Save and deploy the profile to devices registered with your organization.
4. Enable API access and generate the AirWatch API key (tenant code).

The tenant code is part of the REST API configuration. The tenant code must be included in PPS MDM server configuration.

Figure236: AirWatch Certificate Template Configuration

Certificate Template - Add / Edit

Name*

Description

Certificate Authority*

Issuing Template

Subject Name*

Private Key Length*

Private Key Type* Signing ☒ Encryption ☒

San Type

Automatic Certificate Renewal ☒

Auto Renewal Period (days)*

Enable Certificate Revocation ☒

Publish Private Key ☐

Figure237: AirWatch Credential Configuration

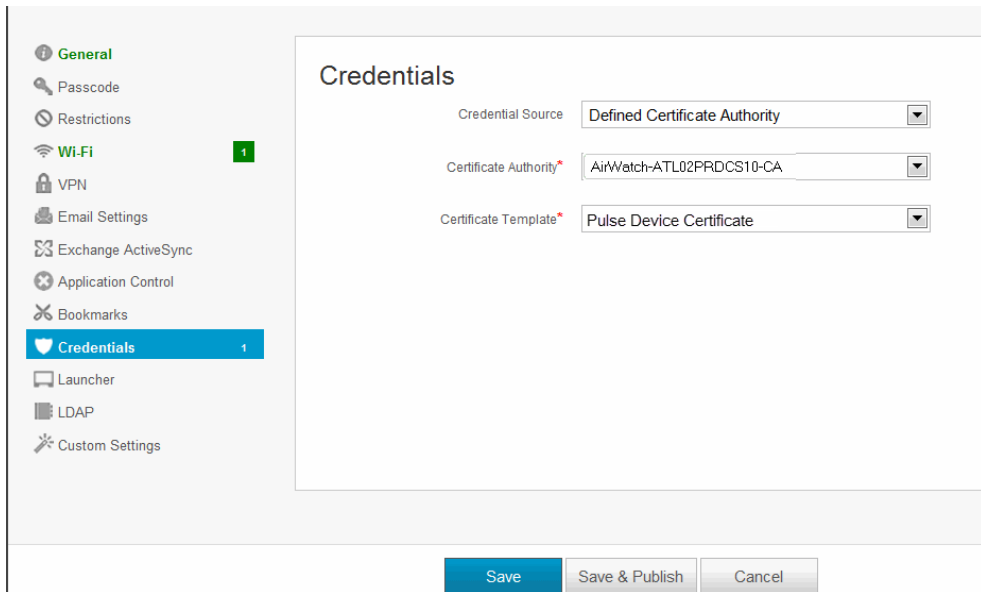


Figure238: AirWatch Wi-Fi Configuration

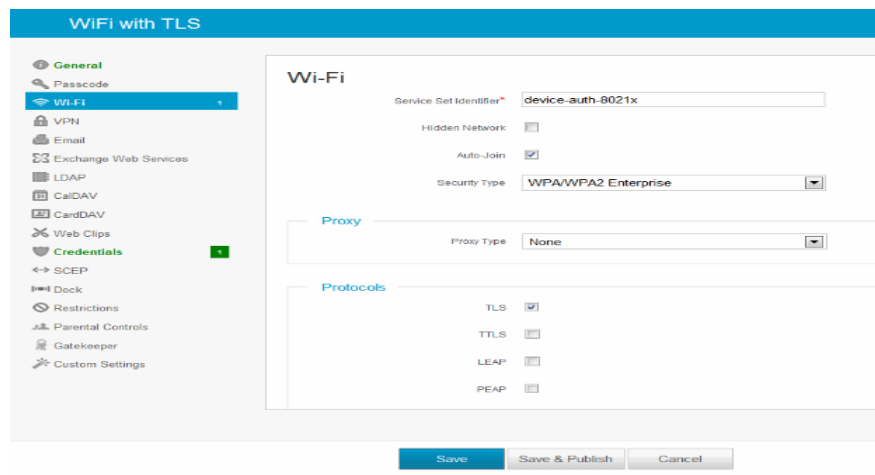


Figure239: Deploying a Profile to Your Organization's Managed Devices

WiFi with TLS

General

Name* WiFi with TLS

Description

Deployment Managed

Assignment Type Auto

Minimum Operating System Any

Model Any

Ownership Any

Allow Removal Always

Managed By Pulse

Assigned Organization Groups* Pulse

Start typing to add a new group

Save Save & Publish Cancel

Figure240: AirWatch API Tenant Code Configuration

Location Group: JUNIPER SYSTEMS INC

System / Advanced / API / REST

General Authentication Network Advanced

Current Setting: ☐ Inherit ☒ Override

Enabling API access would automatically generate the API key for the Location Group. Re-enabling the API access after disabling would generate a new API key.

Enable API Access ☒

API Key: 4F00CLM.AA.A18A.9T0R.0ZB

Save

Child Permission: ☐ Inherit only ☐ Override only ☒ Inherit or Override

Save

Configuring the MobileIron MDM

To configure the MobileIron MDM:

1. Enroll devices in the MDM using the methods supported by the MDM.
2. Create a Simple Certificate Enrollment Protocol (SCEP) configuration that specifies the field and type of identifier for client device certificates.

The MDM configuration templates provide flexibility in how the device identifier can be placed in the device certificate's subject or alternative subject. We recommend you include the user ID in the certificate, so the certificate can identify both the user and the device. For example:

```
CN=<DEVICE_UUID>, uid=<USER_ID>, o=Company
```

3. Create a Wi-Fi configuration that specifies the SSID and security options. During the enrollment process, this profile is provisioned to the device. Select the SCEP configuration completed in Step 2.
4. Select the Wi-Fi Profile configuration and apply it to a group label you have provisioned to manage this group of devices.



NOTE: Wi-Fi connect fails if it is configured to use a device certificate that is signed by an intermediate CA and selects this in Wi-Fi profile trusted CA. Root CA has to be selected to properly work.

5. Apply the group label to the devices when you add them to the MDM. If they have already been added to the MDM, use the edit configuration utilities in the device inventory page to apply the group label.

Figure241: MobileIron Wi-Fi Configuration

New Wifi Setting

Name: Pulse Secure Access

Network Name (SSID): device-auth-802d

Description:

Hidden Network: ☐

Authentication: WPA2 Enterprise

Data Encryption: AES

User Name: \$USERID\$

Password: \$PASSWORD\$

Apply to Certificates:

| Available | Selected |
|--|----------|
| System - iOS Enrollment CA Certificate | |
| sumitclientauth | |
| System - iOS MDM CA Certificate | |
| new | |

Trusted Certificate Names: (Note: Enter comma (,) separated certificate names for multiple authentication servers.)

Allow Trust Exceptions: ☐

Use Per-connection Password: ☐

EAP Type: ☐ EAP-FAST ☐ EAP-SIM ☐ LEAP ☐ PEAP ☒ TLS ☐ TTLS

Identity Certificate: Pulse Device Certificate

Save Cancel

Figure242: Applying the Wi-Fi Configuration to a Label

MobileIron ADMIN PORTAL

USERS & DEVICES APPS **POLICIES & CONFIGS** SETTINGS

Dashboard Configurations Policies Default Policies Activ

Delete More Actions Add New Labels: All-Smartphones sdalaney

| Name | Setting Type | Bundle/Package ID | Descr... | # Phones | Labels |
|--|--------------|-------------------|----------|----------|-------------------|
| Pulse | WiFi | | | 0 | Juniper Test |
| Pulse - sdalaney | WiFi | | | 0 | |
| Pulse Access | WiFi | | | 0 | |
| <input checked="" type="checkbox"/> Pulse Network Access | WiFi | | | 0 | |
| device-auth-8021x-sslic97 | WiFi | | | 0 | Juniper - sslic97 |

Figure243: Adding a Device to the MDM

MobileIron ADMIN PORTAL

USERS & DEVICES APPS POLICIES & CONFIGS SETTINGS LOGS & EVENTS

Dashboard Devices ActiveSync Associations Labels Users Retired Devices

Actions + Add Labels: All-Smartphones Search by User or Device Advanced Search Pending Device Report

| User | Phone | OS | Country | Status | Registered on Date | Last Check-In | E/C | Oper |
|-----------|-------------------------|-------------|---------------|--------|--------------------|---------------|-----|------|
| Pulse | Galaxy Nexus by sams... | Android 4.2 | | Active | 2013-07-12 | 33 d 2 h | C | |
| Pulse TME | +14084315645 iPhone 4 | iOS 6.1 | United States | Active | 2013-07-10 | 20 d 2 h | C | AT& |
| Pulse TME | PDA 6 iPad, 3rd gen | iOS 6.1 | United States | Active | 2013-07-15 | 55 m 39 s | C | AT& |

Troubleshooting

During initial configuration, enable event logs for MDM API calls. You can use these logs to verify proper configuration. After you have verified proper configuration, you can disable logging for these events. Then, enable only for troubleshooting.

To enable logging for MDM API calls:

1. Select System Log/Monitoring.
2. Click the Events tab.
3. Click the Settings tab to display the configuration page.

After you have completed the MDM server configuration, you can view system event logs to verify that the polling is occurring.

To display the Events log:

1. Select System Log/Monitoring.
2. Click the Events tab.
3. Click the Log tab.

Next, to verify user access, you can attempt to connect to a wireless access point with your smart phone, and then view the user access logs.

To display the User Access log:

1. Select System Log/Monitoring.
2. Click the User Access tab.
3. Click the Log tab.

After you have verified proper configuration, you are not likely to need to tune the authentication server configuration, the 802.1x framework, or the enforcement points. However, based on user experience, MDM capabilities, and security threats, there are a few configuration elements you might want to tune from time to time.

The below table describes these configuration elements.

Table34: Tuning the Configuration

| Configuration Element | Tuning |
|-----------------------|---|
| Remediation | <p>In a network access control solution, noncompliant endpoints are typically placed in a remediation VLAN that serves a Web page. The Web page explains the steps users can take to make their endpoints compliant so that they can access the network.</p> <p>Your reasons for denying access might change from time to time. For example, your initial policy might be based on compliance with an MDM policy, and you can give steps on how to bring a device into compliance. You want to set an expectation on how long it takes for the MDM to reassess compliance. You might want to factor in PPS device check interval to estimate how long until the device can access the network.</p> <p>When there are new threats that exploit vulnerabilities in specific mobile platforms, you might create rules on the fly that deny access from specific platforms. If events like this occur, you might want to update your remediation message so that users can understand why access is denied.</p> |

| Configuration Element | Tuning |
|--|--|
| Realm – Device Check Interval | You might want to tune this setting as you learn how frequently the MDM updates device records, or if the standard practice of the MDM changes. If the MDM records are updated every four hours, it does not make sense to poll every 10 minutes. If the MDM records are updated in real time, it might make sense to poll every 10 minutes. |
| Roles and role mapping rules | <p>As you learn about mobile security threats and vulnerabilities, you might make changes to roles and role mapping rules or create new classifications. In general, you list restrictive rules first and set the stop flag. For example, if a device is noncompliant and maps to a noncompliant role, you would list it near the top of the rules for the realm and set the stop flag.</p> <p>Classification based on device type or platform can be more complicated. When you initially role out your BYOD solution, you might want to use roles to merely classify the devices, and so the rule classifying it would not need to be near the top of the list and would not need to have a stop flag. In response to a threat, however, you might want to use the role and role mapping configuration to deny access from a specific device platform. If events like this occur, you can edit your rules to map the vulnerable platform to an appropriate role and set the stop flag so that permissive roles are not assigned.</p> |
| RADIUS return attribute policy | Likewise, in response to threats and vulnerabilities, you can edit your rules to place formerly trusted device types into a remediation or guest VLAN instead of an employee VLAN; and then allow access again when you are no longer concerned with the threat. |
| Infranet Enforcer resource access policy | Likewise, in response to threats and vulnerabilities, you can edit your rules to deny access from formerly trusted device types; and then allow access again when you are no longer concerned with the threat. |

Using the Debug Logs

The Pulse Secure Global Support Center (PSGSC) might direct you to create a debug log to assist them in helping you debug an issue with the system. The debug log is used only by PSGSC.

To use debug logging:

1. Select Troubleshooting > Monitoring > Debug Log to display the configuration page. Complete the configuration as described in table below.
2. Click Save Changes. When you save changes with Debug Logging On selected, the system begins generating debug log entries.
3. Initiate the action you want to debug, such as a user sign in. You can reset the debug log file to restart debug logging if it takes you too long to initiate the action.
4. Click Save Debug Log to save the debug log to a file that you can send to PSGSC. You can clear the log after you have saved it to a file.
5. Clear the Debug Logging On check box and click Save Changes to turn off debug logging.

Table35: Debug Log Configuration Guidelines

| Settings | Guidelines |
|------------------|--|
| Current Log Size | Displays the size of the current log file. If it is large, use the controls to save, reset, or clear the log file. |

| Settings | Guidelines |
|------------------------|--|
| Debug Logging On | Select to turn on debug logging. |
| Debug Log Size | Specify a maximum debug logfile size. The default is 2 MB. The maximum is 250 MB. |
| Debug Log Detail Level | Specify the debug log detail level. Obtain this from PSGSC. |
| Include logs | Select this option to include system logs in the debug log file. Recommended. |
| Process Names | Specify the process name. Obtain this from PSGSC. |
| Event Codes | Specify the event code. Obtain this from PSGSC. For MDM integration issues, PSGSC typically likes to collect debugging information for codes MDM, Auth, agentman, and Realm. The text is not case sensitive. |

AAA Servers

- [AAA Server Overview](#)
- [Using the Local Authentication Server](#)
- [Using Active Directory](#)
- [Using Kerberos SSO](#)
- [Understanding Multidomain User Authentication](#)
- [Understanding Active Directory and Windows NT Group Information Support](#)
- [Importing and Exporting an Active Directory Mode Configuration](#)
- [Using the Anonymous Server](#)
- [Using the Certificate Server](#)
- [Using an LDAP Server](#)
- [Using the LDAP Password Management Feature](#)
- [Using the MAC Address Authentication Server](#)
- [Using an NIS Server](#)
- [Using a RADIUS Server](#)
- [Using an ACE Server](#)
- [Using a SiteMinder Server](#)
- [Troubleshooting the SiteMinder Server Configuration](#)
- [Using an SQL Auth Server](#)
- [Troubleshooting Oracle Error Codes](#)

AAA Server Overview

This topic includes the following information:

- [Overview](#)
- [Authentication Protocols Used by AAA Servers](#)
- [AAA Server Configuration Task Summary](#)

Overview

AAA stands for authentication, authorization, and accounting. A AAA server is a database that stores user credentials—username and password—and, in some cases, group information or other user attributes. The authentication results and group or user attribute information are used Pulse Secure access management framework policy decisions.

In the Pulse Secure access management framework, the sign-in page, realm, and AAA server configurations are associated. They determine user access and user role. A user submits credentials through a sign-in page, which specifies a realm, which is associated with a AAA server. If the access request meets the realm's authentication policy, the system forwards the user's credentials to the associated authentication server. The authentication server's job is to verify the user's identity. After verifying the user, the authentication server sends approval. If the realm also uses the server as a directory/attribute server, the AAA server sends the user's group information or other user attribute information. The access

management framework then evaluates the realm's role-mapping rules to determine the user roles that apply to the session.

The Pulse Secure access management framework supports the following types of AAA servers:

- Local—You can create special purpose local databases to manually create user accounts, manage guest user access, permit anonymous access, or manage access based on digital certificates or MAC addresses.
- External (standards-based)—You can integrate standards-based LDAP and RADIUS servers with the access management framework. In addition to using the backend server for authentication, you can use LDAP group and RADIUS attribute information in role-mapping rules.
- External (other)—You can integrate compatible versions of popular third-party AAA servers with the access management framework. In addition to using the backend server for authentication, you can use Active Directory group information and SiteMinder attributes in role-mapping rules. In addition, you can use MDM device attributes in role mapping rules.

Table36 is a reference of the AAA servers supported in PPS deployments.

Table36: Supported AAA Servers

| | PPS |
|----------------------------|--|
| Local | "Local Authentication Server", "Anonymous Server", "Certificate Server", "MAC Address Authentication Server" *Special features to manage guest users. |
| External (standards-based) | "LDAP Server", "RADIUS Server" |
| External (other) | "Active Directory", "MDM Server", "NIS Server", "RSA ACE Server", "SiteMinder Server", "SQL Auth Server" |

Authentication Protocols Used by AAA Servers

Policy Secure supports multiple authentication protocols. The following authentication servers require the protocols listed:

- Local authentication servers—If the passwords are stored as hashed values, the protocols available are PAP and MS-CHAP v1 with or without EAP. If the passwords are stored as clear text, CHAP and MD5-Challenge are also available.
- Active directory—The protocols available for inner authentication are PAP, MSCHAP and MS-CHAP v2, with or without EAP.
- LDAP—CHAP, EAP-MD5-Challenge, MS-CHAP v1, and MS-CHAP v2 protocols can be used with an LDAP authentication server only if the administration password is in clear text. By default, challenge response protocols are disabled for LDAP servers. Use these protocols only with noninteractive devices (for example, phones), as password management is not possible if these protocols are used for authentication.
- Anonymous authentication server—The anonymous authentication server is not supported with the open protocols.

AAA Traffic Management

From 9.0R3 release, the PPS Virtual appliances and the Pulse Secure Appliances allow the administrator to choose the communicating interface or the network for each authentication server.

This feature allows the AAA traffic across the following interfaces:

- Physical Internal
- Physical External

- Physical Management
- Virtual ports for Physical Interfaces
- VLAN ports
- Virtual Ports on VLAN Interfaces


This feature allows to connect to remote supported authentication servers through any interfaces based on the network Topology.

The following Authentication server types are supported:


- LDAP
- Active Directory
- RADIUS
- ACE
- NIS
- System Local
- Anonymous
- CRL and OCSP traffic

Configuring AAA Traffic Management Across Interfaces


1. Select **Authentication > Auth Servers** and configure service provider AAA configurations as needed.

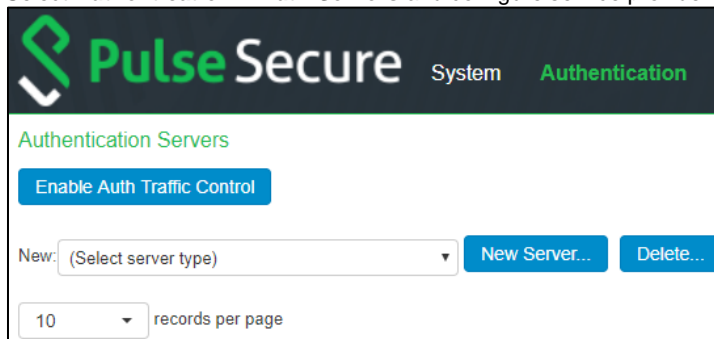

2. Click **Enable Auth Traffic Control**. A new window appears.

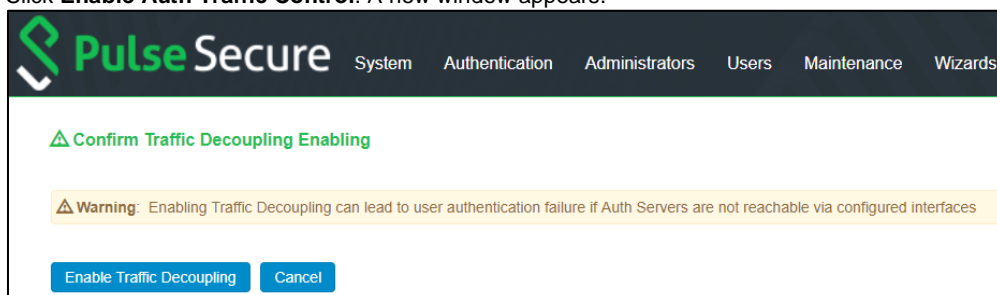

- Click **Enable Traffic Decoupling** to confirm. The page navigates to the Auth server page that displays the options to configure the AAA traffic interfaces.

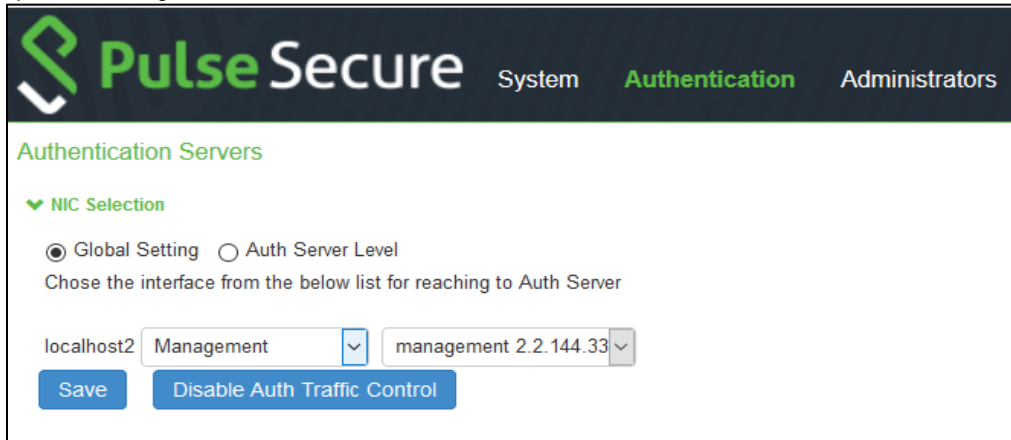

PulseSecure System **Authentication** Administrators

Authentication Servers

▼ NIC Selection


☒ Global Setting ☐ Auth Server Level

Chose the interface from the below list for reaching to Auth Server

localhost2 Management management 2.2.144.33

Save Disable Auth Traffic Control

- Select **Global setting** to use same interface across all supported authentication servers or select **Auth Server Level** to select the interface for a specific authentication server for the AAA traffic.

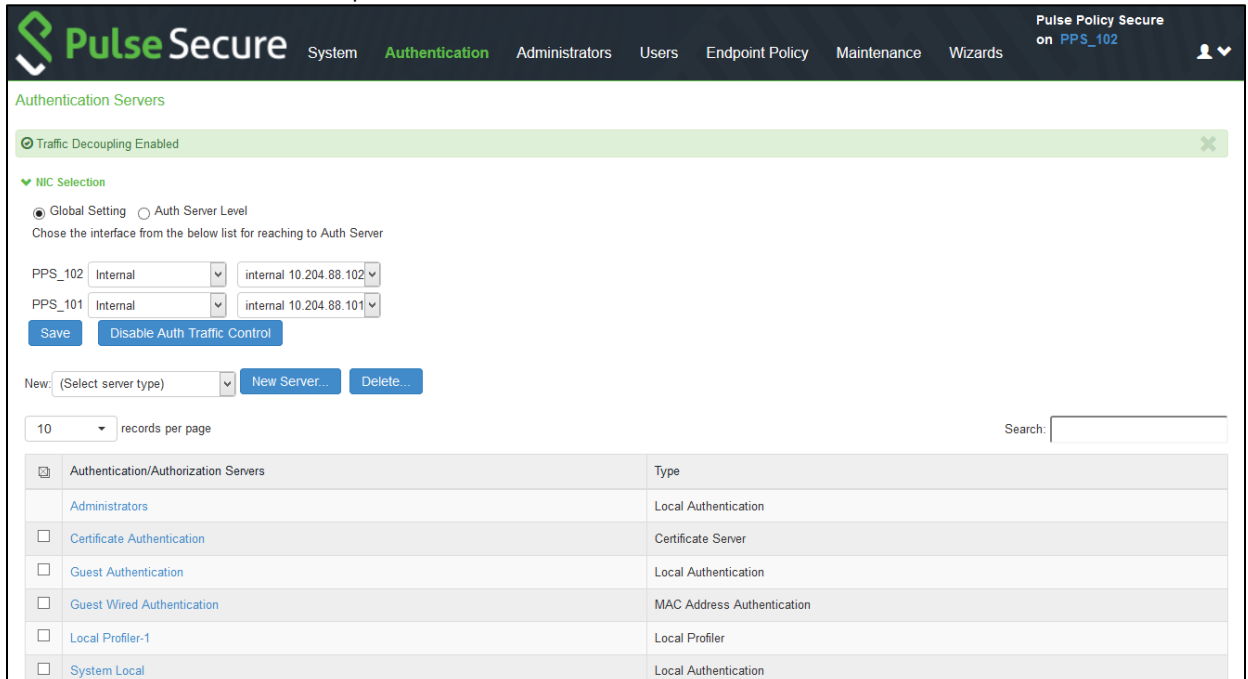

PulseSecure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure on PPS_102

Authentication Servers

⊕ Traffic Decoupling Enabled

▼ NIC Selection

☒ Global Setting ☐ Auth Server Level

Chose the interface from the below list for reaching to Auth Server

PPS_102 Internal internal 10.204.88.102

PPS_101 Internal internal 10.204.88.101

Save Disable Auth Traffic Control

New: (Select server type) New Server... Delete...

10 records per page Search:

| Authentication/Authorization Servers | Type |
|---|----------------------------|
| Administrators | Local Authentication |
| <input type="checkbox"/> Certificate Authentication | Certificate Server |
| <input type="checkbox"/> Guest Authentication | Local Authentication |
| <input type="checkbox"/> Guest Wired Authentication | MAC Address Authentication |
| <input type="checkbox"/> Local Profiler-1 | Local Profiler |
| <input type="checkbox"/> System Local | Local Authentication |

- Select the required interface and port from the list.
For Clusters, select applicable interfaces and associated ports.
- Click **Save**.

AAA Server Configuration Task Summary

To integrate an authentication server:

- Configure the authentication server. Select Authentication > Auth. Servers page and complete the authentication server configuration.

2. Create an authentication realm. Select Users > User Realms or Administrators > Admin Realms and select the authentication server when you complete the authentication realm configuration.

Using the Local Authentication Server

This topic describes the local authentication server. It includes the following information:

- [Local Authentication Server Overview](#)
- [Configuring the Local Authentication Server](#)
- [Creating User Accounts](#)
- [Managing User Accounts](#)
- [Creating Administrator User Accounts](#)

Local Authentication Server Overview

The local authentication server is an authentication database that is built in to PPS. Therefore, it is considered a “local” server in contrast to a third-party enterprise AAA server that is connected over the network.

Typically, you create local user accounts for temporary users who do not have accounts on your enterprise AAA servers. Temporary users include lab users or guests, but you might find the local authentication server useful to create temporary accounts for users who are normally verified by an enterprise AAA server that you plan to disable.

You also use the local authentication server to create accounts for administrator users, such as system administrators and guest user access managers (GUAM).



NOTE: Although it is common practice to use the local authentication server for administrator accounts, it does not preclude you from using any of the supported third-party enterprise AAA servers in your administrator access management framework.

The following authentication protocol sets can be used with the local authentication server:

- By default, the system uses hashing to store passwords. When using the default, the protocols available are PAP and MS-CHAP v1 with or without EAP.
- You can enable an option to store passwords as clear text. If you enable this option, CHAP and MD5-Challenge are also available.

Configuring the Local Authentication Server

You can create multiple local authentication server instances. When you define a new local authentication server, you must give the server a unique name and configure options for passwords and guest users.

To create a local authentication server:

1. Select Authentication > Auth. Servers.
2. Select Local Authentication and click New Server to display the configuration page.

The Local Authentication Server configuration page.

3. Complete the configuration as described below.
4. Save the configuration.

Figure244: Local Authentication Server Configuration Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure

Auth Servers > System Local

System Local

Settings Users Admin Users

*Name: System Local Label to reference this server

▼ Password Options

Minimum length: 6 characters

Maximum length: 20 characters

☐ Password must have at least 1 digits

☐ Password must have at least 1 letters

☐ Password must have mix of UPPERCASE and lowercase letters

☒ Password must be different from username

☒ New passwords must be different from previous password

☐ Password stored as clear text This option can only be set during create

Note: If password stored as clear text, more authentication protocols, i.e. CHAP, EAP-MD5, are supported

▼ Password Management

☒ Allow users to change their passwords

☐ Force password change after _____ days

☐ Prompt users to change their password _____ days before current password expires

Note: Use options on the Administrators/Users > Authentication > [Realm] > Authentication Policy > Password page to specify which realms should inherit the server's password management capabilities

▼ Guest Access

Guest User Account Managers

☐ Enable Guest User Account Managers to administer Guest Accounts [Configure system GUAM settings](#)

Instructions displayed for guest users creation and updation. You can use
,
, <hr>, <hr>, <hr>, and <hr> tags to format the text.

Instructions for Guest User Account Manager:

☐ Maximum Account Validity Period: 24 Set the Guest Account length limit (end time minus start time) in hours. This is valid for guests created by Guest Admin. Does not impact existing user expirations.

Guest Self-Registration

Send guest user credentials via: ☐ SMS [Configure SMS/Email settings](#)

☐ Email [Configure SMS/Email settings](#)

☐ Show credentials on screen after guest completes registration

☐ Maximum Account Validity Period for Self Registered Guests: 0 Set the Guest Account length limit in hours. This is valid for self registered guests. Does not impact existing user expirations.

Note: To enable Guest Self-Registration navigate to Signing In > Sign-in Policies > User URLs > [url] > Configure Guest Settings

Common configuration for Guest User Account Managers and Guest Self-Registration

Guest User Name Prefix: (prefix applied to auto-generated user names)

Guest User Info Fields: Enter additional fields for guest user information, one field per line. For example:

Title

Company name

Sponsor

[Save Changes](#) [Reset](#)

* indicates required field

Table37: Local Authentication Server Settings

| Settings | Guidelines |
|----------------------------------|---|
| Name | Specify a name that is useful to you. |
| Password Options | |
| Minimum length | Specify a number of characters. The valid range is 0-99. 6 is the default. |
| Maximum length | Specify a number of characters. The valid range is 0-99. 8 is the default. The maximum length cannot be less than the minimum length. |
| Minimum digits | Specify the number of digits required in a password. Do not require more digits than the value of the maximum length option. |
| Minimum letters | Specify the number of letters required in a password. Do not require more letters than the value of the maximum length option. If you enable the previous option, the combined total of the two options cannot exceed that of the value specified in the maximum length option. |
| Uppercase and lowercase required | Select this option if you want all passwords to contain a mixture of uppercase and lowercase letters. NOTE: Require passwords to contain at least two letters if you also require a mix of uppercase and lowercase letters. |
| Different from username | Select this option if the password cannot equal the username. |

| Settings | Guidelines |
|---|---|
| Different from previous password | Select this option if a new password cannot equal the previous password. |
| Stored as clear text | Select this option if you are using open authentication protocol sets. CHAP and EAP-MD5-Challenge work with local authentication servers only if you select this option. NOTE: Be aware of the security implications of storing passwords as clear text. |
| Password Management | |
| Allow users to change passwords | Select this option if you want users to be able to change their passwords. NOTE: In addition to selecting local authentication password management options, you must select the Enable Password Management option for the associated realm authentication policy. |
| Force password change | Select this option to specify the number of days after which a password expires. The default is 64 days. |
| Prompt users to change password | Select this option to specify when to prompt the user to change passwords. |
| Guest Access Configurations | |
| Enable Guest User Account Managers | Select this option to allow guest user account managers to create guest user accounts on the local authentication server. In some businesses, you might want to delegate responsibility for temporary or guest users to a guest user access manager (GUAM) who can use the local authentication server to provision accounts for guests. |
| Guest User Name Prefix | Specify the prefix to be used in auto generated guest usernames. We recommend you retain the default guest_ so that you can rely on the naming convention in your role mapping rules. |
| Guest User Info Fields | (Optional) Add line items to represent fields that you want to appear on the configuration page for creating guest user accounts. For example, you can create fields for Company Name, Host Person, Meal Preference, and so on. |
| Instructions for Guest User Account Manager | (Optional) Add instructions to the GUAM that appear on the GUAM sign-in page. You can use the following HTML tags to format the text: , , , <noscript>, and <a href>. |
| Maximum Account Validity Period | Specify the number of hours the account is valid. The default is 12 hours. |

Creating User Accounts

You use the Users page to create local authentication server user accounts. A user account includes a username and password to be used for authentication, as well as other information used for records and account management.

To create a local user account:

1. Select Authentication > Auth. Servers.
2. Select the local authentication server to which you want to add a user account.
3. Click the Users tab.
4. Click New to display the configuration page.
5. Complete the configuration as described below.
6. Save the configuration.

Figure245: User Account Configuration Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Servers > System Local > New Local User

New Local User

Username:

Full Name:

Authenticate using System Local

Password:

Confirm Password:

Start Time:

End Time:

Time Zone:

☐ One-time use (disable account after the next successful sign-in)

☒ Enabled

☐ Require user to change password at next sign in

Note: You must also configure password management on the **Authentication server Settings** with 'Allow users to change their passwords' option enabled. Use options on the **Administrators/Users > Authentication > [Realm] > Authentication Policy > Password** page to specify which realms should inherit the server's password management capabilities.

Save Changes

Table38: User Account Configuration Settings

| Settings | Guidelines |
|---------------------------------|--|
| Username | Do not include “~” in a username. NOTE: You cannot change a username after you create the account. |
| Full Name | Specify the user's full name. |
| Password | Specify a password. Make sure that the password you enter conforms to the password options specified on the local authentication server configuration page. |
| Confirm password | Confirm the password. |
| Start Time | (Optional) Specify a start and end time for the account. |
| End Time | The system process that deletes expired user accounts runs every 10 minutes. There might be a delay of some minutes before the account is purged. Even if the system time or date is moved ahead past the expiration time, the account could still be valid until the purge process runs. One-time user accounts are not deleted by the purge process; they are deleted immediately after the user exits. |
| Company Name | (Optional) Specify the company with which the user is associated. |
| Host or Sponsor | (Optional) Specify the host or sponsor—for example, the person at your company who requested that you create the account. |
| One-time use | Select this option to limit the user to one log in. After one successful log in, the user's log in state is set to disabled, and the user receives an error message when attempting subsequent sign-ins. However, you can manually reset this option to allow the same user to log in again. If you do not select this option, the user account is subject to the specified start and end time for the account. |
| Enabled | Select this check box if it is not already selected. If the one-time use option has been implemented, this option is listed as Disabled after the user has logged in successfully. If a permanent or one-time user is logged in and you disable this option, the user is immediately logged out of the system and receives an error message. |
| Require user to change password | Select this option to force users to change their passwords at the next log in. NOTE: If you force the user to change passwords, you must also enable the local authentication password management options. |

Managing User Accounts

You use the Users page to list, modify, and delete local authentication server user accounts.

To manage a user account:

1. Select Authentication > Auth. Servers.
2. Click the link for the authentication server you want to manage.
3. Click the Users tab to display the user accounts table.

The user accounts table includes entries for the accounts that have been created. The Last Sign-in Statistic column shows the last successful sign-in date and time for each user, the user's IP address, and the agent or browser type and version.

4. Use the controls to search for users and manage user accounts:

- To search for a specific user, enter a username in the Show users named box and click Update.



TIP: You can use an asterisk (*) as a wildcard, where * represents any number of zero or more characters. For example, to search for all usernames that contain the letters jo, enter *jo*. The search is case-sensitive. To display the entire list of accounts again, type * or delete the field's contents and click Update.

- To limit the number of users displayed on the page, enter a number in the Show *N* users box and click Update.
- To edit the user account configuration, click the link in the Username column to display the Update Local User Account page.
- To terminate the user session and delete the account, select the box next to the user account record and click Delete.

Figure246: User Accounts Table

| | Username | Name | User type | Last Sign-in Statistic | | |
|--------------------------|-----------|------------------|-----------|------------------------|----------------|---|
| | | | | Date & Time | IP Address | Agent |
| <input type="checkbox"/> | hc | Unspecified Name | Normal | 2016/08/29 16:54:27 | 10.209.122.134 | Mozilla/5.0 (Windows NT 6.3; WOW64) AppleWebKit/537.36 (KHTML, like Gecko) Chrome/52.0.2743.116 Safari/537.36 |
| <input type="checkbox"/> | priya | Unspecified Name | Normal | 2016/07/22 14:47:49 | | |
| <input type="checkbox"/> | sathya | Unspecified Name | Normal | 2016/07/28 16:56:56 | 10.209.122.94 | |
| <input type="checkbox"/> | shreya | Unspecified Name | Normal | 2016/07/19 12:37:33 | 10.209.122.239 | Mozilla/5.0 (Windows NT 10.0; Win64; x64) AppleWebKit/537.36 (KHTML, like Gecko) Chrome/51.0.2704.103 Safari/537.36 |
| <input type="checkbox"/> | sowendra | Unspecified Name | Normal | 2016/08/11 11:27:38 | | |
| <input type="checkbox"/> | test | Unspecified Name | Normal | 2016/08/31 18:02:51 | 10.204.90.240 | Pulse-Secure/8.2.5.869 (Windows 7) Pulse/5.2.5.869 |
| <input type="checkbox"/> | uacqa | Unspecified Name | Normal | 2016/08/10 22:41:20 | | |
| <input type="checkbox"/> | yashu | Unspecified Name | Normal | 2016/08/05 13:03:49 | | |
| <input type="checkbox"/> | yashuuser | Unspecified Name | Normal | 2016/07/28 14:46:41 | | |

The below figure shows the user account configuration page. You can use this page to modify the account settings, or to disable or quarantine the account.

Figure247: Update User Account Configuration Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Auth Servers > System Local > Update Local User

Update Local User

Full Name:

Authenticate using System Local

Password:

Confirm Password:

Start Time:

End Time:

Time Zone:

☐ One time use (ifable account after the next successful sign-in)
☒ Enabled
☐ Disabled
☐ Quarantined

☐ Require user to change password at next sign in

[Save Changes](#)

Note: You must also configure password management on the Authentication server Settings with 'Allow users to change their passwords' option enabled. Use options on the Administrators/Users > Authentication > (Profile) > Authentication Policy > Password page to specify which realms should affect the server's password management capabilities.

Creating Administrator User Accounts

You use the Admin Users page to create accounts for local authentication server administrators. An administrator user can create, modify, and delete user accounts.

The admin users you create on the Admin Users page can view and manage all users that have been added to the local authentication server. In contrast, admin users you create by assigning the GUAM role capability can view and manage only the user accounts they created.

To create an administrator user account:

1. Select **Authentication > Auth. Servers**.
2. Click the link for the Guest Authentication Server you want to manage.
3. Click the Admin Users tab to display the configuration page.
4. Specify a username, select an authentication realm, and click Add to create the administrator user.
5. Save the configuration.

Figure248: Admin Users Configuration Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Auth Servers > System Local

System Local

Settings Users **Admin Users**

A "User Admin" has some administrator capabilities on the device, including adding new users, changing passwords, and deleting existing users. You can delegate these abilities to User Admins per authentication server.

To create User Admins for server **System Local**, enter the user's username and the authentication realm used to authenticate the user. When this user signs in to the device, a "User Admin" link appears as a System menu. The user admin can click this link to manage users for the assigned authentication server.

Note: Please double-check to make sure the username is spelled correctly before adding the User Admin to the list.

An alternate option is to create a role for the "User Admin" which has the "Enable Guest User Account Management Rights" enabled. If using this role method, do not add a User Admin on this page. The advantage of the role option is that it will limit the "User Admin" to view only those accounts that they created.

Add User Admin

Username:

Authentication Realm:

[Add >](#) [Remove](#)

User Admins

Using Active Directory

This topic describes integration with the Microsoft® Windows® platform Active Directory™ service. It includes the following information:

- [Microsoft Windows Platform Active Directory Service Overview](#)
- [Configuring Authentication and Authorization with Active Directory Service \(Standard Mode\)](#)
- [Configuring Authentication and Authorization with Active Directory Service \(Legacy Mode\)](#)

- [Displaying the User Accounts Table](#)

Microsoft Windows Platform Active Directory Service Overview

This section describes support for using PPS with the Active Directory AAA service. It includes the following sections:

- [Understanding Active Directory](#)
- [Active Directory Feature Support](#)
- [Interoperability Requirements and Limitations](#)
- [Understanding the Active Directory Standard Configuration and Active Directory Legacy Mode Configuration](#)

Understanding Active Directory

Active Directory is a directory service used in Windows domain networks. It is included in most Windows server operating systems. Enterprise servers that run Active Directory are called domain controllers. An Active Directory domain controller authenticates and authorizes users and computers in a Windows domain network.

When you use Active Directory as the authentication and authorization service for your Pulse Secure access management framework, users can sign in to PPS using the same username and password they use to access their Windows desktops. You can also use Active Directory group information in role mapping rules.

Active Directory Feature Support

Pulse Secure access management framework supports the following Active Directory features:

- Honors trust relationships in Active Directory and Windows NT environments.
- Supports Domain Local Groups, Domain Global Groups, and Universal Groups defined in the Active Directory forest.
- Supports use of Kerberos, NTLMv2, and NTLMv1 authentication protocols.
- Supports [user principal name \(UPN\)](#) format for usernames. This support is available for Web log in, PPS at Layer 3, and EAP-MS-CHAP v2.

Interoperability Requirements and Limitations

The following limitations apply to interoperability with Active Directory:

- The Pulse Secure access management framework uses Active Directory security groups, not distribution groups. Security groups allow you to use one type of group for not only assigning rights and permissions, but also as a distribution list for e-mail.
- Each Active Directory configuration you create for the Pulse Secure access management framework should use a different and unique machine account name.
- If the current Active Directory domain controller is not reachable, the user or machine authentication requests fail for a few seconds (less than 2 minutes) before attempting to authenticate users with another domain controller in the Active Directory domain.
- We do not support interoperation with Active Directory implementations that use the equal sign operator (=) in a group name, such as: "\=THIRD FLOOR GROUP". The Pulse Secure access management framework authentication process involves search operations that use the equal sign operator (=) when parsing server catalogs to retrieve group names, usernames and domain names, as well as user_SID and domain_SID values. You might encounter unexpected behavior that can affect normal processing of authentication services if a group name configured on your Active Directory server includes an equal sign operator (=).
- Active Directory versions Windows 2008, Windows 2018 R2 and later use a dynamic port range. The default start port is 49152 and the default end port is 65535. Therefore, if there is a firewall between the Pulse Secure service and the Active Directory Service, you must increase the remote procedure call (RPC) port range on the firewall. See [.Microsoft Knowledge Base article 929851](#).
- The Pulse Secure password management feature, which enables users to change their Active Directory passwords through the Pulse Secure service Web server, is not supported for users of trusted domains that do not trust the domain specified in the Pulse Secure Active Directory configuration.
- UPN format for user log in is not supported for MS-CHAP v2.

Understanding the Active Directory Standard Configuration and Active Directory Legacy Mode Configuration

PPS supports interoperability with Active Directory using two configurations:

- Active Directory standard configuration. Recommended. Supports interoperability with any version of Active Directory, and is the required configuration mode to support authentication using MS-CHAP v2 with Windows 2008 R2 Active Directory Service. Machine authentication, for example, uses MS-CHAP v2.
- Active Directory Legacy Mode configuration. Supports interoperability with Active Directory versions Microsoft 2003 or earlier. You might choose to use the Active Directory Legacy Mode configuration as your primary configuration if you require role-mapping rules to use “domain local groups” of trusted child domains. The Active Directory standard configuration does not support “domain local groups” for authorization. You can also use an LDAP server as the directory server if you want to use domain local groups in role mapping.

We recommend configuring and using Active Directory standard configuration as your primary configuration and Active Directory Legacy Mode as a fallback configuration. If you are experiencing issues with the standard Active Directory configuration, you can use the Switch to Active Directory Legacy Mode at the bottom of the Active Directory authentication server configuration page to activate the Active Directory Legacy Mode configuration. The fallback configuration saves you from having to reconfigure your authentication server, server catalog, and role mapping rules.

Configuring Authentication and Authorization with Active Directory Service (Standard Mode)

To configure integration with Active Directory Service (standard mode):

1. Select Authentication > Auth. Servers
2. Select Active Directory / Windows NT and click New Server to display the configuration page.
3. Select Active Directory mode and complete the configuration as described in Table39.
4. Save the configuration.

Figure249: Active Directory/Windows NT Server Configuration Page

Pulse Secure Pulse Policy Secure on PPS-122

System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Auth Servers > IPv6-AD-Auth-Srv

IPv6-AD-Auth-Srv

Settings Users Troubleshooting

Base Configuration

- Name: IPv6-AD-Auth-Srv (Label to reference this server)
- Domain: ADEXAMPLE (NetBIOS name of the domain)
- Kerberos Realm: ADEXAMPLE.COM (Specifies the Kerberos realm of the Active Directory domain. It is usually set to the DNS name of the Active Directory domain. Example "xyz.net", "abc.com")

Domain Join Configuration

Username: Administrator (Active Directory administrator credentials are required in order for the Pulse Policy Secure to join the domain or whenever certain fields of the authentication server are changed.)

Password: [REDACTED]

☒ Save credentials (If this setting is not enabled, the credentials entered will be destroyed after successfully joining the domain.)

Container Name: Computers (Container path in Active Directory to create the machine account in. Changing this field will trigger domain rejoin. In the case of nested containers use '/' as the container separator. Ex: "OU/10U2")

10 records per page Search: [REDACTED]

Configure Computer Names for cluster members

| Member Name | Computer Name | Domain Join Status | Domain Join Reset |
|-------------|----------------|--------------------|-------------------|
| PPS-122 | 0271MFE04P0P9 | GREEN | Reset Join |
| PPS-175 | 0271MFF0V891G1 | GREEN | Reset Join |

Update Join Status

Click 'Update Join' to get the latest join status of node(s). If any node's domain join status is other than GREEN (persistently) then click 'Reset Join' button of that node to reinitiate domain join process. NOTE: 'Reset Join' action requires Active Directory administrator credentials. WARNING: Transient network issues may also cause join status to go RED. Before reinitiating the join process ensure that it is not caused by network issues. If domain join status is shown RED due to network issues then it has high chances of coming back to GREEN after network recovers.

Additional Options

Authentication protocol
Specify the protocol to use during authentication.

- ☒ Kerberos (Most secure; required for Kerberos Single Sign-On (SSO) and SPNEGO)
- ☒ Enable NTLM protocol (Required for password management. Authentication attempts Kerberos first, then the following protocol.)
 - ☒ NTLMv2 (moderately secure; required for machine authentication and MSCHAP-V2 based 802.1x authentication protocols)
 - ☐ NTLMv1 (less secure; may be required for legacy servers, MSCHAP-based servers, MSCHAP based 802.1x authentication protocols)

Trusted domain lookup
Enable this option to fetch user group information from the trusted domains. User login time may increase as the number of trusted domains and network latency to those domain controllers increase. Even if disabled, pass-through authentication via primary domain is still permitted. To restrict login to primary domain only, configure role mapping rules based on domain group membership.

☐ Contact trusted domains

Domain Connections
Specify the maximum number of simultaneous connections that can be opened to the domain controller of a domain. Multiple connections may give better performance and scalability, but higher values could also degrade the performance. Choose the optimal value based on the number of trusted domains available. Refer to the Admin Guide for details.

Maximum simultaneous connections per domain: 5 (1-10)

SPNEGO Single Sign On
The keytab's SPN must be added to the AD Server and should match the FQDN used to access this device.

☐ Enable SPNEGO

Machine account password change
Changes Pulse Policy Secure's domain machine account password.

☐ Enable periodic password change of machine account

Active Directory Selection

Switch to Active Directory Legacy mode

Save Changes Reset

Table39: Active Directory Mode Settings

| Settings | Guidelines |
|---------------------------|--|
| Mode | <p>Select one of the following modes:</p> <p>Active Directory—For recent versions of Windows Server.</p> <p>Active Directory Legacy Mode—For Windows Server 2003 and earlier.</p> <p>This table describes Active Directory mode.</p> |
| Base Configuration | |
| Name | Specify a name to identify the server within the system. |
| Domain | <p>Specify the NetBIOS domain name for the Active Directory domain.</p> <p>The system uses DNS to discover domain controllers in the Active Directory forest. It sends authentication requests to the domain controller at the closest site. Ensure that your DNS servers are configured to resolve the Active Directory domain controller fully qualified domain name (FQDN) and service (SRV) records.</p> <p>Do not create an Active Directory and an Active Directory Legacy Mode configuration with the same domain and computer name. They must have different computer names.</p> |
| Kerberos Realm | Specify the FQDN of the Active Directory domain. For example, if “pulsesecure” is the domain name (NetBIOS name), then pulsesecure.net is the Kerberos realm name. |
| Domain Join Configuration | |
| Username | <p>Specify a username that has permission to join computers to the Active Directory domain.</p> <p>Use the “Delegate Control” workflow in Active Directory to assign the following user account permissions to the username or to a group to which the user belongs:</p> <ul style="list-style-type: none"> Write Write All Properties Change Password Reset Password Validate Write to DNS hostname Read and write DNS host attributes Delete Computer Objects Create Computer Objects |
| Password | Specify the password for the special user. |
| Save Credentials | <p>If this setting is not enabled, the credentials entered will be destroyed after successfully joining the domain.</p> <p>This option is useful when managing clusters. For example, you might want to save the credentials for a cluster node you have yet to add. If you do not enable this option, you must manually enter the credentials when you add the new cluster node.</p> |
| Container Name | <p>Specify the container path in Active Directory in which to create the machine account. Changing this field triggers a domain rejoin action.</p> <p>The default is Computers, which is a standard container created during installation of the AD server. The AD Computers container is the default location for new computer accounts created in the domain.</p> <p>If desired, you may specify a different container or OU. To specify nested containers, use a forward slash (/) as the container separator. For example: outer OU/inner OU.</p> <p>NOTE: Do not use backslashes in the path. Using backslashes causes an Invalid DN Syntax error.</p> |

| Settings | Guidelines |
|------------------------------------|---|
| Computer Name | Specify the machine account name. The default computer name is derived from the license hardware in the following format: 0161MT2L00K2C0. We recommend the Computer Name string contain no more than 14 characters to avoid potential issues with the AD/NT server. Do not include the '\$' character. |
| Update Join Status / Reset Join | <p>The following colors are used to indicate status:</p> <p>Gray. The Domain Join action has not been attempted. This is the default status that appears when you are using the page to create a new Active Directory configuration.</p> <p>Yellow. Attempting to join the Active Directory domain. This is the default status that appears after saving configuration settings or when any domain join settings are changed in an existing configuration.</p> <p>Green. The attempt was successful. This status indicates that this server can now be used to authenticate users.</p> <p>Red. The attempt to join the Active Directory domain was not successful.</p> <p>Click Update Join to get the latest join status of nodes. If the status appears persistently red, click Reset Join to reinitiate the domain join process. The Reset Join action requires Active Directory administrator credentials.</p> <p>NOTE:</p> <p>For cluster nodes, you might need to click Update Join multiple times to obtain the latest join status of nodes.</p> <p>Transient network issues might also cause the join status indicator to appear red. Before reinitiating the join process, ensure that it is not caused by network issues. Make sure your DNS servers can resolve queries to the Active Directory domain controller and that the Active Directory credentials are valid and have the appropriate permissions.</p> |
| Additional Options | |
| Authentication Protocol | <p>The system attempts authentication using the protocols you have enabled in the order shown on the configuration page. For example, if you have selected the check boxes for Kerberos and NTLMv2, the system sends the credentials to Kerberos. If Kerberos succeeds, the system does not send the credentials to NTLMv2. If Kerberos is not supported or fails, the system uses NTLMv2 as the next protocol in order.</p> <p>Kerberos. Select this option to enable the Kerberos authentication protocol. Kerberos is the most secure method and is required for Kerberos single sign-on authentication. Kerberos must be enabled if you plan to use Pulse Secure single sign-on or browser-based agentless single sign-on (SPNEGO).</p> <p>Enable NTLM protocol. Select this option to enable NTLM if you plan to use any of the following features:</p> <p>Machine authentication using Pulse Secure client, or Windows native 802.1x supplicants.</p> <p>MS-CHAP-based authentication protocols for any 802.1x supplicants.</p> <p>User password management.</p> <p>Role mapping rules based on group membership.</p> <p>If you enable NTLM, select one of the following versions:</p> <p>NTLMv2. This protocol is moderately secure. It is required for machine authentication and MS-CHAP v2 based 802.1x authentication protocols.</p> <p>NTLMv1. This protocol is comparatively less secure. It might be required for compatibility with existing legacy servers, MS-CHAP based servers, and MS-CHAP based 802.1x authentication protocols.</p> |

| Settings | Guidelines |
|---------------------------------|---|
| Trusts | <p>Contact trusted domains. Select this option to contact domain controllers of trusted domains directly without proxying authentication requests and group membership checks through the domain controller.</p> <p>If this option is not selected:</p> <p>Network contact with trusted domains is not permitted, but pass-through authentication using the primary domain is still permitted.</p> <p>Trusted domain user's group lookup for Kerberos SSO and SPNEGO authentication does not work even though user authentication succeeds.</p> <p>Trusted domain user's password-based authentication does not work.</p> <p>Only groups from the domain in which this system is a member are available for use in role mapping when a group search is performed in the server catalog window.</p> <p>NOTE: If you want to restrict trusted domain users and computers (machine authentication) from logging in when this option is not selected, you can define a custom expression based on the <code>ntdomain</code> variable and use it in role mapping rules. For example, if PPS belongs to the domain named Corporate, you can define a custom expression as <code>ntdomain=Corporate</code> and use the custom expression in the role mapping rule of the realm.</p> |
| SPNEGO Single Sign On | <p>Enable SPNEGO. Select this option to support SPNEGO SSO.</p> <p>Keytab Upload. Select this option to use the controls to upload the SPNEGO keytab. The keytab must be generated on the Active Directory Service for the SPN. It must match the FQDN used to access this device.</p> |
| Machine account password change | <p>Enable periodic password change of machine account. Select this option to change the domain machine account password for this configuration.</p> <p>Change machine password frequency. Specify a frequency in days. For example, every 30 days.</p> |
| Logical Auth Server Name | Specify a logical authentication server name. |
| Save Changes? | |

After you have saved your configuration, the "Mode" section is removed from the top of the configuration page and the "Active Directory Selection" section is included at the bottom of the page. Click the Switch to Active Directory Legacy Mode button to display the Active Directory Legacy Mode configuration page. The settings that are applicable to both configurations are populated in the Active Directory Legacy Mode configuration page. You must complete the remaining settings.

**NOTE:**

You can troubleshoot the configurations using the Troubleshooting Tab for the respective server. You will be able to view this option on configuring the respective server. Using the troubleshooting option, you can validate:

- Domain Joint Status
- Authentication success status
- DNS Look-up for the respective servers
- Authentication Statistics

Configuring Authentication and Authorization with Active Directory Service (Legacy Mode)

To create an Active Directory Legacy Mode configuration:

1. Select Authentication > Auth. Servers.
2. Select Active Directory / Windows NT and click New Server to display the configuration page.
3. Select Active Directory Legacy Mode to display the Active Directory Legacy Mode configuration page.
4. Complete the configuration as described in Table40.
5. Save the configuration.

Figure250: Active Directory Legacy Mode Configuration Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure

Auth Servers > New Active Directory / Windows NT

New Active Directory / Windows NT

Mode

☒ Active Directory ☒ Active Directory Legacy Mode

Legacy mode is selected. This mode will be deprecated in an upcoming release and it is recommended to use the standard 'Active Directory' mode. For details refer KB46251.

Server

* Name: Label to reference this server

* Primary Domain Controller: Name or IP address

Backup Domain Controller: Name or IP address

* Domain: NetBIOS name of the domain

☒ Allow domain to be specified as part of username
☐ Allow trusted domains
☐ Domain Controller is a Windows 2008 server

Administrator

Admin Username: Admin credentials are required

Admin Password:

Additional Options

Authentication protocol
 Specify the protocol to use during authentication.

☒ Kerberos (most secure, required for Kerberos Single Sign On)
☒ NTLMv2 (moderately secure, required for machine authentication and MSCHAP-V2 based 802.1x authentication protocols)
☒ NTLMv1 (less secure, may be required for legacy servers, MSCHAP-based servers, MSCHAP based 802.1x authentication protocols)

Kerberos Realm Name
 Specify the method to use to get Kerberos Realm Name for AD servers.

☒ Use LDAP to get Kerberos realm name
☐ Specify Kerberos realm name:

SPNEGO Single Sign On
 The client's SPN must be added to the AD Server and should match the FQDN used to access this device.

☐ Enable SPNEGO

Group Search With LDAP
 You can customize the Group Lookup settings.

View Advanced Options
 You can customize the ADINT settings here.

[Save Changes](#) [Reset](#)

* indicates required field

The below table describes the Active Directory Legacy Mode configuration.

Table40: Active Directory Legacy Mode Settings

| Settings | Guidelines |
|---------------------------|---|
| Mode | <p>Select one of the following modes:</p> <p>Active Directory—For recent versions of Windows Server.</p> <p>Active Directory Legacy Mode—For Windows Server 2003 and earlier.</p> <p>This table describes Active Directory Legacy Mode.</p> |
| Server | |
| Name | Specify a name to identify the server within the system. |
| Primary Domain Controller | Specify the name or IP address for the primary domain controller or Active Directory server. |
| Backup Domain Controller | (Optional) Specify the IP address of your backup domain controller or Active Directory server. |

| Settings | Guidelines |
|--|---|
| Domain | <p>Specify the NetBios domain name for the organization. The NetBios name can be found within Active Directory, under Users and Computers. Right-click the domain name, and select Properties.</p> <p>The system uses DNS to discover domain controllers in the Active Directory forest. It sends authentication requests to the domain controller at the closest site. Ensure that your DNS servers are configured to resolve Active Directory domain controller FQDNs and SRV records.</p> <p>Do not create an Active Directory and an Active Directory Legacy Mode configuration with the same domain and computer name. They must have different computer names.</p> <p>You may, however, create two Active Directory Legacy Mode configurations with the same domain and the same computer name.</p> |
| Allow domain to be specified as part of username | Select this option to allow users to sign in by entering a domain name in the Username box in the format: <i>domain\username</i> . |
| Allow trusted domains | Select this option to get group information from all trusted domains within a forest. |
| Domain Controller is a Windows 2008 server | Select this option if the domain controller is a Windows 2008 server. The Windows 2008 server has several enhancements to the Active Directory Server, which is now called Active Directory Domain Services. |
| Administrator | |
| Admin Username | Specify an administrator username for the AD or NT server. Make sure the administrator you specify is a domain administrator in the same domain as the AD or NT server. Do not include a domain name with the server administrator username in the Admin Username box. |
| Admin Password | Specify the corresponding password. |
| Additional Options | |
| Authentication Protocol | <p>The system attempts authentication using the protocols you have enabled in the order shown on the configuration page. For example, if you have selected the check boxes for Kerberos and NTLMv2, the system sends the credentials to Kerberos. If Kerberos succeeds, the system does not send the credentials to NTLMv2. If Kerberos is not supported or fails, the system uses NTLMv2 as the next protocol in order.</p> <p>Kerberos. This protocol is the most secure method and is required for Kerberos single sign-on authentication. Kerberos must be enabled if you plan to use Pulse Secure client single sign-on or browser-based agentless single sign-on (SPNEGO).</p> <p>NTLMv2. This protocol is moderately secure. It is required for machine authentication and MS-CHAP v2 based 802.1x authentication protocols.</p> <p>NTLMv1. This protocol is comparatively less secure. It might be required for compatibility with existing legacy servers, MS-CHAP based servers, and MS-CHAP based 802.1x authentication protocols.</p> |
| Kerberos Realm Name | <p>Select one of the following options to specify the Kerberos realm name:</p> <p>Use LDAP to get Kerberos realm name. Select this option to retrieve the Kerberos realm name from the Active Directory server using the specified administrator credentials.</p> <p>Specify Kerberos realm name. Select this option to specify the realm name in the corresponding text box. Specify the FQDN of the Active Directory domain. For example, if "pulsesecure" is the domain name (NetBIOS name), then pulsesecure.net is the Kerberos realm name.</p> |
| SPNEGO Single Sign On | <p>This option is available only on PPS.</p> <p>Enable SPNEGO. Select this option to support SPNEGO SSO.</p> <p>Keytab Upload. Use the controls to upload the SPNEGO keytab. The keytab must be generated on the Active Directory Service for the SPN. It must match the FQDN used to access this device.</p> |

| Settings | Guidelines |
|---|---|
| Group Search With LDAP | <p>Enable Group Search With LDAP. Select this option to use LDAP to retrieve group membership information. If you enable group search with LDAP, specify one of the following LDAP protocols:</p> <p>LDAP. Select this option to use unsecure LDAP.</p> <p>LDAPS. Select this option to use secure LDAP (LDAP communication using an SSL tunnel). You enable LDAPS by installing a properly formatted certificate. If you select LDAPS, optionally select Validate Server Certificate to validate this certificate.</p> <p>NOTE: Active directory group lookup using LDAP fails if a user from a different domain tree attempts to log in. Native Active Directory group lookup works correctly.</p> <p>Active directory group lookup using LDAP fails if the same username is present in both the parent and child domain and if only the child domain user is part of a group. Native Active Directory group lookup works correctly.</p> <p>Admin DN. Specify the administrator Distinguished Name. You can click the Test Configuration button at the bottom of the page to automatically populate this field.</p> <p>Base Search DN. Specify the point to start searching for the user. For example, dc=pulsesecure,dc=com. You can click the Test Configuration button at the bottom of the page to automatically populate this field.</p> <p>Nested Group Level. Specify how many levels within a group to search for the user. Higher numbers create longer queries or search time.</p> |
| Advanced Options | |
| User may belong to Domain Local Groups across trust boundaries | Specify if the trusted domains' Domain Local Groups must be searched to determine users' group memberships. This might impact performance. |
| Container Name | <p>Specify the Container path in Active Directory in which to create the machine account. Changing this field triggers a domain rejoin action.</p> <p>The default is Computers, which is a standard container created during installation of the AD server. The AD Computers container is the default location for new computer accounts created in the domain.</p> <p>If desired, you may specify a different container or OU. To specify nested containers, use a forward slash (/) as the container separator. For example: outer OU/inner OU.</p> <p>NOTE: Do not use backslashes in the path. Using backslashes causes an Invalid DN Syntax error.</p> |
| Computer Name | <p>The computer name is pre-filled with an entry in the format of vcNNNNHHHHHHHH, where the NNNN is the ID and the HHHHHHHH is a hex representation of the IP address of the Pulse Secure device. You can change this to a unique name, either the one provided by default or one of your own choosing to more easily identify your systems in the Active Directory. The first six characters of the name will be 'vc0000' if there is no ID to display. For example, the name could be something like vc0000a1018dF2'.</p> <p>In a clustered environment with the same AD authentication server, this name is also unique among all cluster nodes, and this configuration section displays all of the identifiers for all attached cluster nodes.</p> |
| Logical Auth Server Name | Specify a logical authentication server name. |
| Save Changes? | |
| <p>After you have saved your configuration, the "Mode" section is removed from the top of the configuration page and the "Active Directory Selection" section is included at the bottom of the page. Click the Switch to Active Directory mode button to display the Active Directory standard mode configuration page. The settings that are applicable to both configurations are populated in the Active Directory standard mode configuration page. You must complete the remaining settings.</p> | |

Using Kerberos SSO

This topic includes the following information:

- [Kerberos SSO Support Overview](#)
- [Requirements and Limitations](#)
- [Enabling Kerberos SSO](#)

Kerberos SSO Support Overview

Kerberos single sign-on (SSO) is a method of access control that allows a user to log in once to the client desktop without being prompted again for credentials.

The Kerberos SSO feature uses Kerberos authentication to automatically sign in users with the same credentials they used to access their Windows desktops. After you configure Kerberos SSO, the sign-in dialog box does not appear to users.

Requirements and Limitations

The following requirements and limitations apply to the Kerberos SSO implementation:

- The SSO feature requires a Windows NT Primary Domain Controller (PDC) or Active Directory for user authentication.
- The Kerberos SSO feature is not supported on Windows NT Server 4.0 or earlier.
- The clocks on PPS and the Windows Active Directory authentication server must be synchronized to within 2 minutes of each other.
- The Active Directory controller must be deployed in front of PPS.
- The Windows endpoint computers must be joined to the same domain that PPS uses for authentication. Alternatively, make sure the Windows endpoint computers are joined to a domain that has a trust relationship with the domain that PPS uses for authentication.
- Users must sign into their endpoint computers in the domain of the Windows Active Directory authentication server or in a trusted domain.
- The realm Enable SSO option is visible only if the Windows Active Directory authentication server is used for authenticating users of the selected realm.

Enabling Kerberos SSO

To enable Kerberos SSO:

1. Select Authentication > Auth. Servers.
2. Select New Active Directory / Windows NT and click New.
3. Complete the configuration. Enable the Kerberos authentication protocol option.
4. Configure the realm:
 - Select Administrators > Admin Realms or Users > User Realms . Specify the realm that must use the Active Directory server to authenticate and authorize administrators and users.
 - Select Administrators > Admin Realms > Select Realm > Authentication Policy > SSO to ensure that the Enable SSO option is enabled (the default).

Understanding Multidomain User Authentication

This topic provides an overview of multi domain user authentication with Active Directory and Windows NT. It includes the following information:

- [Multi-Domain User Authentication Overview](#)

- [Windows NT User Normalization](#)
- [Kerberos Support](#)
- [Windows NT4 Support](#)

Multi-Domain User Authentication Overview

The Pulse Secure access management framework allows for multidomain Active Directory and Windows NT authentication. The system authenticates users in the domain that you configure, users in child domains, and users in all domains trusted by the configured domain.

Users in the default domain can sign into the system using just their username, or the default domain and the username in the format default-domain\username.

When you enable trusted domain authentication, users in trusted or child domains can sign in using the name of the trusted or child domain and the username in the format trusted-domain\username. Note that enabling trusted domain authentication adds to the server response time.

Windows NT User Normalization

To support multidomain authentication, the Pulse Secure access management framework uses “normalized” Windows NT credentials when it contacts an Active Directory or Windows NT4 domain controller for authentication. Normalized Windows NT credentials include both the domain name and the username: domain\username. Regardless of how the user signs in (either using just a username or using the domain\username format), the access management framework always processes the username in domain\username format.

When a user signs in using only their username, the access management framework normalizes their Windows NT credentials as default-domain\username. Authentication succeeds only if the user is a member of the default domain.

When a user signs in using the domain\username format, the access management framework attempts to authenticate the user as a member of the domain the user specifies. Authentication succeeds only if the user-specified domain is a trusted or child domain of the default domain. If the user specifies an invalid or untrusted domain, authentication fails.

Two variables, <NTUser> and <NTDomain>, allow you to individually refer to Windows NT domain and username values. The system populates these two variables with the Windows NT domain and username information.

In role mapping rules, when you specify USER = someusername, the system treats this rule semantically as NTUser = someusername AND NTDomain = defaultdomain.

Kerberos Support

We recommend you configure the Pulse Secure access management framework to use the Kerberos authentication protocol with Windows domain controllers. When a user logs in to the system, the system performs Kerberos authentication and attempts to fetch the Kerberos realm name for the domain controller, as well as all child and trusted realms, using LDAP calls.

You can use Kerberos differently. You can specify the Kerberos realm name when configuring an Active Directory authentication server. We do not recommend this method for two reasons:

- You cannot specify more than one realm name. The system cannot then authenticate against child or trusted realms of the realm you specify.
- If you misspell the realm name, the system cannot authenticate users against the proper realm.

Windows NT4 Support

The Pulse Secure access management framework does not support Kerberos-based authentication in Windows NT4 domain controllers. The system uses NTLM with a backend Windows NT4 domain controller.

Understanding Active Directory and Windows NT Group Information Support

This topic describes support for polling group information from Active Directory and Windows NT servers. It includes the following information:

- [Active Directory Group Information Overview](#)
- [Windows NT4 Group Information Overview](#)

Active Directory Group Information Overview

The Pulse Secure access management framework supports user group lookup in Domain Local, Domain Global, and Universal groups in the default domain, child domains, and all trusted domains. The system obtains group membership using one of three methods that have different capabilities:

- Group information in User's Security Context—Returns information about the user's Domain Global groups.
- Group information obtained using LDAP search calls—Returns information about the user's Domain Global groups and about the user's Universal groups if the access management framework queries the Global Catalog Server.
- Group information using native RPC calls—Returns information about the user's Domain Local Group.

With respect to role-mapping rules, the system attempts group lookup in the following order:

- Checks for all Domain Global groups using the user's security context.
- Performs an LDAP query to determine the user's group membership.
- Performs an RPC lookup to determine the user's Domain Local group membership.

Windows NT4 Group Information Overview

The Pulse Secure access management framework supports group lookup in the Domain Local and Domain Global groups created in the default domain, as well as all child and other trusted domains. The system obtains group membership using:

- Domain Global group information from the user's security context.
- Domain Local information using RPC calls.

In the Windows NT4 environment, the system does not use LDAP-based search calls.

Importing and Exporting an Active Directory Mode Configuration

You can use the Maintenance > Import/Export > Import/Export users page to copy an Active Directory mode configuration from one system to another. If Active Directory credentials for joining a domain are not stored in the exported configuration, you must update the configuration to specify them.



NOTE: Push configuration is not supported for Active Directory mode configurations.

XML Import/Export for the Active Directory mode configuration has limitations. An XML exported Active Directory configuration (standalone/cluster) can be imported to the same system from which it is exported. However, an XML exported Active Directory configuration from a standalone configuration cannot be imported into a cluster configuration.

Similarly, an XML exported Active Directory configuration from a cluster cannot be imported into a standalone configuration.

It is not recommended that you import a configuration into a different system than the one from which the configuration was exported. Although the import operation will be successful, the importing system will join the AD domain with the same computer name as the exporting system. When this occurs, the Active Directory disconnects the earlier join from the exporting system.

To work around this, modify the value of the computer-name parameter in the XML file to be unique and then import it to another system. In cluster configurations, in addition to modifying the computer-name parameter, also modify the node parameter for each cluster member to match with the importing cluster node names.

Here are the parameters you must change before importing the XML configuration file of Active Directory:

```
<nodenames>
<node>clusternode1</node>
<computer-name>computer1</computer-name>
</nodenames>
<nodenames>
<node>clusternode2</node>
<computer-name>computer2</computer-name>
</nodenames>
```



NOTE: You must specify the clear text password within `<password-cleartext>` `</password-cleartext>` tags, in place of `<user-password-encrypted>` `</user-password-encrypted>` tags, before you perform an XML Import of an Active Directory mode configuration.

Using the Anonymous Server

This topic describes integration with the anonymous server. It includes the following information:

- [Anonymous Server Overview](#)
- [Configuring Authentication with the Anonymous Server](#)
- [Monitoring Anonymous User Sessions](#)

Anonymous Server Overview

This section describes support for using PPS with the anonymous server. It includes the following sections:

- [Understanding the Anonymous Server](#)
- [Anonymous Server Feature Support](#)
- [Interoperability Requirements and Limitations](#)

Understanding the Anonymous Server

The anonymous server is a local authentication server that allows any user to access the system without providing a username and password.

Instead, when a user enters the URL of a sign-in page that is configured to authenticate against an anonymous server, the PPS access management framework bypasses the standard sign-in page and immediately displays the welcome page to the user.

Anonymous Server Feature Support

PPS access management framework supports the following anonymous server features:

- Enables guest access without username or password
- Supports Host Checker scans before allowing a guest device to connect to the network
- Supports firewall enforcement roles and policies to limit the resources available to the guest user

Interoperability Requirements and Limitations

The following limitations apply to the anonymous server configuration and logging:


- You can add only one anonymous server configuration.
- You cannot create an administrator realm that uses the anonymous server. Anonymous administration is not allowed.
- During configuration, you must choose the anonymous server as both the authentication server and the directory or attribute server in the Users > User Realms > General tab.
- For security reasons, you might want to limit the number of users who sign in through an anonymous server at any given time. To do this, use the option on the Users > User Realms > [Realm] > Authentication Policy > Limits tab (where [Realm] is the realm that is configured to use the anonymous server to authenticate users).

Configuring Authentication with the Anonymous Server

To configure authentication with the anonymous server:

1. Select Authentication > Auth. Servers.
2. Select Anonymous Server and click New Server to display the configuration page.
3. Save the configuration.


Figure251: Anonymous Server Configuration Page

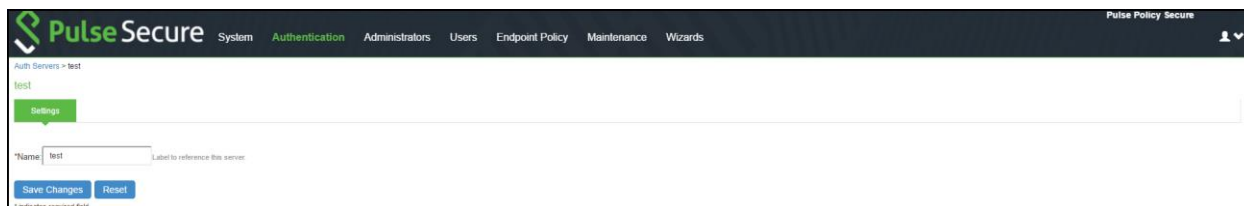

Monitoring Anonymous User Sessions

The purpose of the anonymous server is to enable unauthenticated access. Therefore, the system does not maintain session tables, and the Anonymous Server configuration page does not have a corresponding Users tab. The system does maintain user access logs for anonymous access. The username is recorded in the user access log as “AnonUser1234”. If the user is logging in using the agentless access method, the user access log records the host’s IP address. You can view the User Access Log file by navigating to **System > Log/Monitoring**.

Figure252: User Access Log


System Authentication Administrators Users Endpoint Policy Maintenance Wizards
Pulse Policy Secure

LogMonitoring > User Access > Logs

Events
User Access
Admin Access
Sessions
Client Logs
SNMP
Statistics
Advanced Settings

Log
Settings
Filters

View by filter: Standard Standard (default) Show 200 items

Edit Query

Update
Reset Query
Save Query

Save Log As...
Clear Log
Save All Logs
Clear All Logs

Filter: Standard (default)
Date: Oldest to Newest
Query:
Export Format: Standard

| Severity | ID | Message |
|----------|----------|---|
| Info | AUT22673 | 2016-08-31 19:07:53 - k - [10.204.90.240] testUsers@remed, Users - Logout from 10.204.90.240 (session:523db0ef) |
| Info | AUT24414 | 2016-08-31 19:02:51 - k - [10.204.90.240] testUsers@remed, Users - Agent login succeeded for testUsers from 10.204.90.240 with Pulse-Secure/8.2.5.869 (Windows 7) Pulse/5.2.5.869 |
| Info | AUT24326 | 2016-08-31 18:02:51 - k - [10.204.90.240] testUsers@ - Primary authentication successful for testSystem Local from 10.204.90.240 |
| Info | AUT22675 | 2016-08-31 17:48:07 - k - [10.204.90.240] testUsers@remed, Users - Logout from 10.204.90.240 (session:c03a04af) |

Using the Certificate Server

This topic describes integration with the certificate server. It includes the following information:

- [Certificate Server Overview](#)
- [Configuring Authentication with the Certificate Server](#)
- [Displaying the User Accounts Table](#)

Certificate Server Overview

This section describes support for using PPS with the certificate server. It includes the following sections:

- [Understanding the Certificate Server](#)
- [Feature Support](#)
- [Interoperability Requirements and Limitations](#)

Understanding the Certificate Server

The certificate server is a local server that allows user authentication based on the digital certificate presented by the user without any other user credentials.

When you use a certificate server, the user experience is similar to anonymous authentication. If the certificate is secured through a hardware or a software token or through a password, the certificate server authentication is very useful. The certificate contains the full distinguished name (DN) and the system extracts the values from the DN and uses it for role mapping rules, authentication policies, and role restrictions.

Feature Support

The PPS access management framework supports the following certificate server features:

- Certificate directory services to retrieve user attributes in role mapping rules, authentication policies, and role restrictions.
- Load CA-created certificates on the system.
- Load multiple certificates from different CAs for use with different authentication realms.

Interoperability Requirements and Limitations

If you choose a certificate attribute with more than one value, the system uses the first matched value. For example, if you enter <certDN.OU> and the user has two values for the attribute (ou=management, ou=sales), the system uses the "management" value.

To use all values, add the SEP attribute to the variable. For example, if you enter <certDN.OUT SEP=":"> the system uses "management:sales".

Configuring Authentication with the Certificate Server

1. To configure authentication with the certificate server:
2. Select **Authentication > Auth. Servers**.
3. Select Certificate Server and click New Server to display the configuration page.
4. Complete the configuration as described below.
5. Save the configuration.

Figure253: Certificate Server Configuration Page

Table41: Certificate Server Settings

| Settings | Guidelines |
|--------------------------|---|
| Name | Specify a name to identify the server within the system. |
| User Name Template | Specify a username template. Specify how the system should construct a username. You may use any combination of certificate variables contained in angle brackets and plain text. NOTE: This value populates the <USER> and <USERNAME> session variables for use throughout the rest of the system configuration. |
| Logical Auth Server Name | Specify a logical authentication server name. |

Displaying the User Accounts Table

To display user accounts:

1. Select Authentication > Auth. Servers.
2. Click the link for the authentication server you want to manage.
3. Click the Users tab to display the user accounts table.

The user accounts table includes entries for the accounts that have been created. The Last Sign-in Statistic column shows the last successful sign-in date and time for each user, the user's IP address, and the agent or browser type and version.

4. Use the controls to search for users and manage user accounts:

- To search for a specific user, enter a username in the Show users named box and click Update.



TIP: You can use an asterisk (*) as a wildcard, where * represents any number of zero or more characters. For example, to search for all usernames that contain the letters jo, enter *jo*. The search is case-sensitive. To display the entire list of accounts again, type * or delete the field's contents and click Update.

- To limit the number of users displayed on the page, enter a number in the Show *N* users box and click Update.
- To terminate the user session and delete the account, select the check box next to the user account record and click Delete.

Using an LDAP Server

This topic describes integration with the LDAP server. It includes the following information:

- [LDAP Server Overview](#)
- [Configuring Authentication with an LDAP Server](#)
- [Displaying the User Accounts Table](#)

LDAP Server Overview

This section describes support for using PPS with the LDAP server. It includes the following sections:

- [Understanding LDAP Server](#)
- [LDAP Feature Support](#)
- [Interoperability Requirements and Limitations](#)

Understanding LDAP Server

Lightweight Directory Access Protocol (LDAP) facilitates the access of online directory services. The Internet Engineering Task Force (IETF) designed and specified LDAP as a better way to make use of X.500 directories, having found the original Directory Access Protocol (DAP) too complex for average Internet clients to use. LDAP is a relatively simple protocol for updating and searching directories running over TCP/IP.

LDAP directory consists of a collection of attributes with a name, known as a distinguished name (DN). Each of the entry's attributes, known as a relative distinguished name (RDN), has a type and one or more values. The types are typically mnemonic strings, such as CN for common name. The valid values for each field depend on the types.

The full DN is constructed by stringing together RDNs from most specific to least specific, separated by commas, as shown in the following example:

```
cn=Bob_Employee, ou= account_mgr, o=sales, dc=Acme,dc=com.
```

LDAP Feature Support

Pulse Secure access management framework supports the following LDAP features:

- LDAP directory services to retrieve user attributes and group membership in role mapping rules
- Encrypted connections to the LDAP server using LDAP over SSL (LDAPS) or Start Transport Layer Security (TLS)
- Password management feature enabling users who access an LDAP server to manage their passwords using the policies defined on the LDAP server
- Fine-grained password policy (FGP) for Active Directory 2008

Interoperability Requirements and Limitations

The following limitations apply to interoperability with LDAP:

- By default, challenge response protocols are disabled for LDAP servers. Use these protocols only with noninteractive devices (for example, phones), as password management is not possible if these protocols are used for authentication.
- To use the CHAP, EAP-MD5-Challenge, MS-CHAP-V1, and MS-CHAP-V2 protocols, the LDAP server must store the user's password in clear text.

- Backup LDAP servers must be the same version as the primary LDAP server. Also, we recommend that you specify the IP address of a backup LDAP server instead of its hostname, which might accelerate failover processing by eliminating the need to resolve the hostname to an IP address.

Configuring Authentication with an LDAP Server

To configure authentication with an LDAP server:

1. Select Authentication > Auth. Servers.
2. Select LDAP Server and click New Server to display the configuration page.
3. Complete the configuration as described below.
4. Save the configuration.

Figure254: LDAP Server Configuration Page

Table42: LDAP Server Settings

| Settings | Guidelines |
|----------|--|
| Name | Specify a name to identify the server within the system. |

| Settings | Guidelines |
|------------------------------|---|
| LDAP Server | Specify the LDAP server name or the IP address. |
| LDAP Port | Specify the LDAP port for the LDAP server. Default port number: 389 (unencrypted connection) Default port number: 636 (SSL connection) |
| Backup LDAP Server1 | (Optional) Specify the parameters for backup LDAP server1. The specified backup LDAP server is used for failover processing. The authentication request is first routed to the primary LDAP server, and then to the specified backup servers if the primary server is unreachable. |
| Backup LDAP Port1 | Specify the parameters for backup LDAP port1. |
| Backup LDAP Server2 | (Optional) Specify the parameters for backup LDAP server2. |
| Backup LDAP Port2 | Specify the parameters for backup LDAP port2. |
| LDAP Server Type | Select the backend LDAP server type from the following choices: Generic Active Directory iPlanet Novell eDirectory Profiler (<i>Policy Secure only</i>) |
| Connection | Select one of the following options for the connection to the LDAP server: Unencrypted– The device sends the username and password to the LDAP Directory Service in clear text. LDAPS– The device encrypts the data in the LDAP authentication session using the Secure Socket Layer (SSL) protocol before sending it to the LDAP Directory Service. Start TLS– The device allows both secure and plain requests against an LDAP server on a single connection. NOTE: If you select LDAPS or Start TLS, the Validate Certificate option is displayed for the configured LDAP server(s) and its referral servers. Select this option if the SSL connection uses digital certificate security. If you enable validation for the referral servers, make sure your network DNS supports reverse lookup zone. If you want to verify the server certificates, the root CA and Intermediate CAs must be imported as trusted CAs. |
| Connection Timeout (seconds) | Specify the time to wait for connection to the primary LDAP server, and then to each backup LDAP server. Default: 15 seconds |
| Search Timeout (seconds) | Specify the time to wait for search results from a connected LDAP server. |
| Test Connection | (Optional) To verify the connection between Pulse Secure client and LDAP servers, click the Test Connection button. NOTE: We recommend using the Test Connection function only after saving changes on the LDAP Server Configuration page. |

Authentication required?

| Settings | Guidelines |
|---|---|
| Authentication required to search LDAP | <p>Select this option to require authentication when performing search or password management operations.</p> <p>NOTE:</p> <p>If you use Active Directory, you must select the Authentication required to search LDAP check box and provide the full DN and password of an account that can reach Active Directory.</p> <p>You can enable password management on any LDAP server.</p> <p>This feature enables users who authenticate through an LDAP server to manage their passwords through the system using the policies defined on the LDAP server. To enable password management on any LDAP server, you must provide an administrator account (with write privileges to the directory) for the administrator DN.</p> |
| Admin DN | Specify the administrator DN for queries to the LDAP directory. |
| Password | Specify the password for the LDAP server. |
| Finding user entries | |
| Base DN | Specify the base DN under which the users are located. For example, dc=sales,dc=acme, dc=com. |
| Filter | <p>Specify a unique variable that can be used to do a fine search in the tree. For example, samAccountname=<username> or cn=<username>.</p> <p>NOTE:</p> <p>Include <username> in the filter to use the username entered on the sign-in page for the search.</p> <p>Specify a filter that returns 0 or 1 user DN's per user; the device uses the first DN returned if more than 1 DN is returned.</p> |
| Remove Domain from Windows users names? | |
| Strip domain from Windows username | Select this option to pass the username without the domain name to the LDAP server. |
| Enable Challenge-Response open protocols? | |
| Enable Challenge-Response open protocols | <p>Select this option if you want to use a challenge-response protocol for authentication.</p> <p>NOTE: By default, these protocols are disabled for LDAP servers because account management is not possible.</p> |
| Determining group membership | |
| Base DN | Specify the base DN to search for user groups. |
| Filter | Specify a unique variable which can be used to do a fine search in the tree. For example, samAccountname=<username> or cn=<GROUPNAME>. |
| Member Attribute | Specify all the members of a static group. For example, member or uniquemember (iPlanet specific). |
| Reverse group search | Select this option to start the search from the member instead of the group. This option is available only for Active Directory server types. |
| Query Attribute | Specify an LDAP query that returns the members of a dynamic group. For example, memberURL. |
| Nested Group Level | <p>Specify how many levels within a group to search for the user.</p> <p>NOTE: The higher the number, the longer the query time, so we recommend that you specify to perform the search no more than two levels deep.</p> |
| Nested Group Search | <p>Select one of the following options:</p> <p>Nested groups in Server Catalog—This option is faster because it can search within the implicit boundaries of the nested group.</p> <p>Search all nested groups—With this option, the device searches the Server Catalog first. If the device finds no match in the catalog, then it queries LDAP to determine if a group member is a subgroup.</p> |

Displaying the User Accounts Table

To display user accounts:

1. Select Authentication > Auth. Servers.
2. Click the link for the authentication server you want to manage.
3. Click the Users tab to display the user accounts table.

The user accounts table includes entries for the accounts that have been created. The Last Sign-in Statistic column shows the last successful sign-in date and time for each user, the user's IP address, and the agent or browser type and version.

4. Use the controls to search for users and manage user accounts:

- To search for a specific user, enter a username in the Show users named box and click Update.



TIP: You can use an asterisk (*) as a wildcard, where * represents any number of zero or more characters. For example, to search for all usernames that contain the letters jo, enter *jo*. The search is case-sensitive. To display the entire list of accounts again, type * or delete the field's contents and click Update.

- To limit the number of users displayed on the page, enter a number in the Show *N* users box and click Update.
- To terminate the user session and delete the account, select the check box next to the user account record and click Delete.

Using the LDAP Password Management Feature

This topic describes support and limitations for LDAP password management. It includes the following information:

- [LDAP Password Management Feature Overview](#)
- [Enabling LDAP Password Management](#)
- [LDAP Password Management Support](#)
- [LDAP Password Management for Windows AD Versions](#)
- [Troubleshooting LDAP Password Management](#)

LDAP Password Management Feature Overview

The password management feature enables users who access an LDAP server to manage their passwords through the Pulse Secure access management framework using the policies defined on the LDAP server. For example, if a user tries to sign in to the system with an LDAP password that is about to expire, the system notices the user through the interface, and then passes the user's response back to the LDAP server without requiring the user to sign in to the LDAP server separately.

Users, administrators, and help desk administrators who work in environments where passwords have set expiration times may find the password management feature very helpful. If users are not informed that their passwords are about to expire, they can change them themselves through the system rather than call the help desk.

Once this feature is enabled, the system performs a series of queries to determine user account information, such as when the user's password was last set, whether the account is expired, and so on. The Pulse Secure access management framework does this by using its internal LDAP or Samba client. Many servers, such as Microsoft Active Directory or Sun iPlanet, offer an Administrative Console to configure account and password options.

LDAP-based password management works with only three types of LDAP servers:

- Microsoft Active Directory. For Active Directory, password policy attributes can be configured in the user entry container level or any organization level above the user container. If these attributes are configured at multiple levels, the level closest to the user node takes precedence. The password management feature is not supported on the Active Directory Global Catalog because password policy attributes are not fully populated in the Active Directory Global Catalog.
- For Active Directory 2008, the Pulse Secure access management framework supports the Fine Grained Password Policy (FGP) configured in the AD user container.
- Sun Microsystems iPlanet
- Novell eDirectory

LDAP-based password management does not work on generic LDAP servers such as OpenLDAP.

The system relies on the back-end server to pinpoint the cause of error when a password change operation fails. However, although LDAP servers may report errors accurately to human operators, they do not always do so when communicating programmatically to systems. Therefore, reported errors might be generic or cryptic.

The system does not support customized password policies.

Enabling LDAP Password Management

To enable password management, you must first create an instance of the LDAP server. Next, you associate the LDAP server with the applicable realms. Finally, you select the enable password management feature at the realm level.

LDAP Password Management Support

The Pulse Secure access management framework supports password management with the following LDAP directories:

- Microsoft Active Directory/Windows NT
- Sun iPlanet
- Novell eDirectory
- Generic LDAP directories, such as IBM Secure Directory and OpenLDAP

The below table describes supported password management functions, their corresponding function names in the individual LDAP directories, and any additional relevant details. These functions must be set through the LDAP server itself before the system can pass the corresponding messages, functions, and restrictions to end users.

The Active Directory attribute names shown are specific to the Domain Security Policy object. Similar attributes for the corresponding functions are used for the Active Directory 2008 Fine-Grained Password Policy. Refer to Microsoft documentation for details.

When authenticating against a generic LDAP server, such as IBM Secure Directory, the system supports only authentication and allowing users to change their passwords. Password management functions are not supported when the CHAP family protocols are used for authentication. All functions are available when the JUAC protocol is used for authentication.

Table43: Supported Password Management Functions

| Function | Active Directory | iPlanet | eDirectory | Generic |
|--|--|--|---|--------------|
| Authenticate user | unicodePwd | userPassword | userPassword | userPassword |
| Allow user to change password if enabled | Server tells us in bind response (uses ntSecurityDescriptor) | If passwordChange == ON | If passwordAllowChange == TRUE | Yes |
| Log out user after password change | Yes | Yes | Yes | Yes |
| Force password change at next log in | If pwdLastSet == 0 | If passwordMustChange == ON | If pwdMustChange == TRUE | - |
| Expired password notification | userAccountControl== 0x80000 | If Bind Response includes OID 2.16.840.1.113730.3.4.4 == 0 | Check date/time value | - |
| Password expiration notification (in X days/hours) | if pwdLastSet - now() < maxPwdAge - 14 days (Read from domain attributes) (The system displays warning if less than 14 days) | If Bind Response includes control OID 2.16.840.1.113730.3.4.5 (contains date/time) (The system displays warning if less than 14 days) | If now() - passwordExpirationTime < 14 days (The system displays warning if less than 14 days) | |
| Disallow authentication if "account disabled/locked" | userAccountControl== 0x2 (Disabled) accountExpires userAccountControl == 0x10 (Locked) lockoutTime | Bind ErrorCode: 53 "Account Inactivated" Bind Error Code: 19 "Exceed Password Retry Limit" | Bind ErrorCode: 53 "Account Expired" Bind ErrorCode: 53 "Login Lockout" | |

| Function | Active Directory | iPlanet | eDirectory | Generic |
|---|--|--|--|---------|
| Honor "password history" | Server tells us in bind response | Server tells us in bind response | Server tells us in bind response | |
| Enforce "minimum password length" | If set, the system displays message telling user minPwdLength | If set, the system displays message telling user passwordMinLength | If set, the system displays message telling user passwordMinimumLength | |
| Disallow user from changing password too soon | If pwdLastSet - now() < minPwdAge, then we disallow | If passwordMinAge > 0, then if now() is earlier than passwordAllowChangeTime, then we disallow | Server tells us in bind response | |
| Honor "password complexity" | If pwdProperties == 0x1, then enabled. Complexity means the new password does not contain username, first or last name, and must contain characters from 3 of the following 4 categories: English uppercase, English lowercase, Digits, and Non-alphabetic characters (ex. !, \$, %) | Server tells us in bind response | Server tells us in bind response | |

Note the following expected behavior:

- When you select the User must change password after reset option on the iPlanet server, you must also reset the user password before this function takes effect. This issue is a limitation of iPlanet.
- The system displays a warning about password expiration only if the password is scheduled to expire in 14 days or less. The system displays the message during each sign-in attempt. The warning message contains the remaining number of days, hours, and minutes that the user has to change the password before it expires on the server. The default value is 14 days, but you can change it on the password configuration page of the admin console.

LDAP Password Management for Windows AD Versions

The Pulse Secure access management framework supports password management with the following Windows servers:

- Microsoft Active Directory 2008
- Microsoft Active Directory 2003
- Windows NT 4.0

The below table describes supported password management functions. These functions are not supported for a layer 2 connection when CHAP, MS-CHAP, or PAP are used as authentication protocols.

Table44: AD/NT Password Management Matrix

| Function | Active Directory | Active Directory 2003 | Active Directory 2008 FGP | Windows NT |
|--|------------------|-----------------------|---------------------------|------------|
| Authenticate user | Yes | Yes | Yes | Yes |
| Allow user to change password if licensed and if enabled | Yes | Yes | Yes | Yes |
| Log out user after password change | Yes | Yes | Yes | Yes |

| Function | Active Directory | Active Directory 2003 | Active Directory 2008 FGP | Windows NT |
|--------------------------------------|------------------|-----------------------|---------------------------|------------|
| Force password change at next log in | Yes | Yes | Yes | Yes |
| Password expired notification | Yes | Yes | Yes | Yes |
| Account disabled | Yes | Yes | Yes | Yes |
| Account expired | Yes | Yes | Yes | Yes |

Note the following expected behavior:

- Changes on the Active Directory domain security policy can take 5 minutes or longer to propagate among Active Directory domain controllers. Additionally, this information does not propagate to the domain controller on which it was originally configured for the same time period. This issue is a limitation of Active Directory.
- When changing passwords in Active Directory using LDAP, the system automatically switches to LDAPS, even if LDAPS is not the configured LDAP method. To support LDAPS on the Active Directory server, you must install a valid SSL certificate into the server's personal certificate store. The certificate must be signed by a trusted CA, and the CN in the certificate's Subject field must contain the exact hostname of the Active Directory server, (for example: adsrv1.company.com). To install the certificate, select the Certificates Snap-In in the Microsoft Management Console (MMC).
- The Account Expires option in the User Account Properties tab only changes when the account expires, not when the password expires. Microsoft Active Directory calculates the password expiration using the Maximum Password Age and Password Last Set values retrieved from the User object and Fine-Grained Password Policy objects or the Domain Security Policy LDAP objects.
- The system displays a warning about password expiration only if the password is scheduled to expire in 14 days or less. The system displays the message during each sign-in attempt. The warning message contains the remaining number of days, hours, and minutes that the user has to change the password before it expires on the server. The default value is 14 days, but you can change it on the password configuration page of the admin console.

Troubleshooting LDAP Password Management

When you troubleshoot, provide any pertinent system logs, server logs, configuration information, and a TCP trace from the system. If you are using LDAPS, switch to the "Unencrypted" LDAP option LDAP server configuration while taking the LDAP TCP traces.

Using the MAC Address Authentication Server

This topic describes how to use the MAC address authentication server. It includes the following information:

- [MAC Address Authentication Server Overview](#)
- [Configuring the MAC Address Authentication Server](#)
- [Displaying the User Accounts Table](#)

MAC Address Authentication Server Overview

This section describes PPS MAC address authentication solution. It includes the following sections:

- [Understanding MAC Address Authentication](#)
- [MAC Address Authentication Server Feature Support](#)

- [Interoperability Requirements and Limitations](#)
- [MAC Address Authentication Framework Configuration Overview](#)
- [802.1x Framework Configuration Overview](#)
- [Ethernet Switch MAC Address Authentication Configuration Overview](#)

[Understanding MAC Address Authentication](#)

MAC address authentication is port-based security typically deployed at the edge of the network to enable secure access for non-user devices, such as IP phones, printers, and network attached storage devices. The Pulse Secure MAC address authentication solution uses PPS 802.1x framework. When a device connects to a switch, the switch forwards the MAC address as the log in credential to PPS RADIUS server. With MAC-based authentication, the MAC address serves as both the username and the password. The RADIUS server consults the authentication server and sends back a RADIUS return attribute based on authentication results.



BEST PRACTICE: MAC-based authentication is not as secure as agent access or agentless access authentication. MAC addresses are not generally guarded as secrets, so an attacker can spoof a MAC address and impersonate a device to gain network access. To reduce risk of an exploit, create a special VLAN for each device type.

[MAC Address Authentication Server Feature Support](#)

The MAC address authentication server is a local authentication server that supports both a local database of records and integration with LDAP servers. You can add entries manually or by reference to LDAP servers. The address table for each local MAC address authentication server is limited to 500 entries. We recommend you use LDAP for large-scale projects.

[Interoperability Requirements and Limitations](#)

Integration with an LDAP server requires the LDAP server to communicate with PPS internal interface.

[MAC Address Authentication Framework Configuration Overview](#)

The MAC address authentication framework is similar to the user access management framework. It involves configuration of a MAC address authentication server, MAC address realm, and roles.

To implement the MAC address authentication framework:

1. If necessary, use the Authentication Protocols Sets page to add the protocols that your Ethernet switches use for MAC authentication to PPS 802.1x protocol set. Select Authentication > Signing In > Authentication Protocols Sets.

The HP and Cisco switches can use CHAP and EAP-MD5-Challenge protocols for MAC address authentication with the username (the MAC address) as the clear text password. By default, the Nortel switch uses PAP, with a password in the format .<MAC Address>. We recommend using PAP with the Nortel switch.

2. Create LDAP server configurations for the external LDAP servers used to maintain MAC address records.
3. Create a MAC address authentication server.
4. Create roles for agentless access.
5. Create a MAC address authentication realm that uses the MAC address authentication server and role mapping rules that sort MAC address authentication requests into roles according to your security policy design.

[802.1x Framework Configuration Overview](#)

The MAC address authentication solution uses PPS 802.1x framework.

To implement the 802.1x framework:

1. Complete the Location Group configuration.
2. Complete the RADIUS Client configuration.
3. Complete the RADIUS Return Attributes Policy configuration.

[Ethernet Switch MAC Address Authentication Configuration Overview](#)

The MAC address solution depends on the Ethernet switch configuration.

To configure MAC address authentication on the Ethernet switch:

1. Configure the switch as an 802.1x authenticator and enable MAC RADIUS protocols.
2. Configure RADIUS client communication with PPS RADIUS server.
3. Configure Ethernet switching options and VLANs to provision VLANs for non-user devices.

Configuring the EX Series Switch

The nonsupplicant devices, such as VoIP phones, connect to the network through an EX Series switch using MAC RADIUS authentication. You configure the following EX Series features to support this solution:

- Configure the switch as an 802.1x authenticator and enable MAC RADIUS protocols.
- Configure RADIUS client communication with PPS RADIUS server.
- Configure Ethernet switching options and VLANs to provision a VLAN for VoIP phones.

The following example shows commands that configure the ge-0/1/0.0 and ge-0/1/1.0 interfaces as 802.1x authenticators, enable MAC RADIUS protocols, and create a reference to the authentication profile used for integration with PPS RADIUS server:

```
set protocols dot1x authenticator authentication-profile-name pulsesecure-access-profile
set protocols dot1x authenticator interface ge-0/1/0.0 supplicant multiple
set protocols dot1x authenticator interface ge-0/1/0.0 transmit-period 15
set protocols dot1x authenticator interface ge-0/1/0.0 mac-radius
set protocols dot1x authenticator interface ge-0/1/0.0 maximum-requests 2
set protocols dot1x authenticator interface ge-0/1/0.0 server-fail vlan-name enterprise
set protocols dot1x authenticator interface ge-0/1/1.0 supplicant multiple
set protocols dot1x authenticator interface ge-0/1/1.0 quiet-period 5
set protocols dot1x authenticator interface ge-0/1/1.0 transmit-period 15
set protocols dot1x authenticator interface ge-0/1/1.0 mac-radius
set protocols dot1x authenticator interface ge-0/1/1.0 supplicant-timeout 15
set protocols dot1x authenticator interface ge-0/1/1.0 maximum-requests 2
set protocols dot1x authenticator interface ge-0/1/1.0 guest-vlan guest
set protocols dot1x authenticator interface ge-0/1/1.0 server-reject-vlan vlan-name guest
set protocols dot1x authenticator interface ge-0/1/1.0 server-fail vlan-name enterprise
```


The following example shows commands that configure the access profile for PPS RADIUS server and the RADIUS client connection to it:

```
set access radius-server 10.0.1.5 port 1812
set access radius-server 10.0.1.5 secret "$9$JLZHmzF/t0I69Icrv7N24azikmft3/C"
set access radius-server 10.0.1.5 timeout 5
set access radius-server 10.0.1.5 retry 3
set access profile pulsesecure-access-profile authentication-order radius
set access profile pulsesecure-access-profile radius authentication-server 10.0.1.5
set access profile pulsesecure-access-profile radius accounting-server 10.0.1.5
set access profile pulsesecure-access-profile accounting order radius
```

The following example shows commands that configure the Ethernet switching options and VLAN used for VoIP phones:

```
set ethernet-switching-options voip interface ge-0/0/10.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/0/11.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/0/8.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/0/9.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/0/6.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/0/7.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/0/4.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/0/5.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/1/0.0 vlan VoIP_Phone
set ethernet-switching-options voip interface ge-0/1/1.0 vlan VoIP_Phone
set vlans VoIP_Phone description "VoIP Phones"
set vlans VoIP_Phone vlan-id 5
```

The following example shows the complete configuration hierarchy for the Ethernet switch configuration:

```
system {
  host-name Demo_EX;
  root-authentication {
    encrypted-password "$1$OOuTCh1K$/Z6JTJ/I9BnjTsKAoefLS."; ## SECRET-DATA
  }
  log in {
    user admin {
      full-name Administrator;
      uid 2000;
      class super-user;
      authentication {
        encrypted-password "$1$RKLp.iDP$m//eueOcf.rExsnQXuZNb/"; ## SECRET-DATA
      }
    }
  }
}
services {
  ssh;
  telnet;
  web-management {
```

```
    http;
  }
}
syslog {
  user * {
    any emergency;
  }
  file messages {
    any notice;
    authorization info;
  }
}
}
chassis {
  alarm {
    management-ethernet {
      link-down ignore;
    }
  }
}
}
interfaces {
  ge-0/0/0 {
    unit 0 {
      family ethernet-switching {
        port-mode trunk;
        vlan {
          members [ enterprise guest remediation VoIP_Phone ];
        }
        native-vlan-id default;
      }
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family ethernet-switching {
      port-mode trunk;
      vlan {
        members [ enterprise guest remediation VoIP_Phone ];
      }
      native-vlan-id default;
    }
  }
}
ge-0/0/2 {
  unit 0 {
    family ethernet-switching {
      port-mode trunk;
      vlan {
        members [ enterprise guest remediation VoIP_Phone ];
      }
      native-vlan-id default;
    }
  }
}
ge-0/0/3 {
  unit 0 {
    family ethernet-switching {
      port-mode trunk;
```

```

        vlan {
            members [ enterprise guest remediation VoIP_Phone ];
        }
        native-vlan-id default;
    }
}
}
ge-0/0/4 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/0/5 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/0/6 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/0/7 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/0/8 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/0/9 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/0/10 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/0/11 {
    unit 0 {

```

```
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/1/0 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
ge-0/1/1 {
    unit 0 {
        family ethernet-switching {
            port-mode access;
        }
    }
}
vlan {
    unit 0 {
        family inet {
            address 10.0.1.10/24;
        }
    }
}
}
routing-options {
    static {
        route 0.0.0.0/0 next-hop 10.0.1.1;
    }
}
}
protocols {
    dot1x {
        authenticator {
            authentication-profile-name pulsesecure-access-profile;
            interface {
                ge-0/1/0.0 {
                    supplicant multiple;
                    transmit-period 15;
                    mac-radius;
                    maximum-requests 2;
                    server-fail vlan-name enterprise;
                }
                ge-0/1/1.0 {
                    supplicant multiple;
                    quiet-period 5;
                    transmit-period 15;
                    mac-radius;
                    supplicant-timeout 15;
                    maximum-requests 2;
                    guest-vlan guest;
                    server-reject-vlan guest;
                    server-fail vlan-name enterprise;
                }
            }
        }
    }
}
}
```

```

}
access {
  radius-server {
    10.0.1.5 {
      port 1812;
      secret "$9$JLZHmzF/t0l69lcrv7N24aZikmfT3/C"; ## SECRET-DATA
      timeout 5;
      retry 3;
    }
  }
  profile pulsesecure-access-profile {
    authentication-order radius;
    radius {
      authentication-server 10.0.1.5;
      accounting-server 10.0.1.5;
    }
    accounting {
      order radius;
    }
  }
}
ethernet-switching-options {
  voip {
    interface ge-0/0/10.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/0/11.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/0/8.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/0/9.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/0/6.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/0/7.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/0/4.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/0/5.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/1/0.0 {
      vlan VoIP_Phone;
    }
    interface ge-0/1/1.0 {
      vlan VoIP_Phone;
    }
  }
}
vans {
  VoIP_Phone {
    vlan-id 5;
  }
}

```

```
}
default {
  vlan-id 1;
  interface {
    ge-0/0/4.0;
    ge-0/0/5.0;
  }
  l3-interface vlan.0;
}
enterprise {
  vlan-id 2;
  interface {
    inactive: ge-0/0/5.0;
    ge-0/0/6.0;
    ge-0/0/7.0;
    ge-0/1/0.0;
    ge-0/1/1.0;
  }
}
guest {
  vlan-id 3;
  interface {
    ge-0/0/8.0;
    ge-0/0/9.0;
  }
}
remediation {
  vlan-id 4;
  interface {
    ge-0/0/10.0;
    ge-0/0/11.0;
  }
}
}
poe {
  interface all;
}
```

In addition to the configuration for the MAC authentication solution shown above, you can also configure the switch to send data (SNMP traps) to the Beacon Endpoint Profiler for use in profiling. The following example commands configure SNMP traps to the Beacon Endpoint Profiler. The Beacon Endpoint Profiler can use the traps to build profile entries:

```
set snmp description EX4200-VOIP-Switch
set snmp contact ex-admin@company.com
set snmp view jweb-view-all oid .1 include
set snmp community public view jweb-view-all
set snmp community public authorization read-only
set snmp community public clients <BeaconEndpointProfilerIPAddressOrSubnet>
set snmp trap-group Beacon version v2
set snmp trap-group Beacon categories link
set snmp trap-group Beacon targets <BeaconEndpointProfilerIPAddress>
```



TIP: To verify that the Beacon Endpoint Profiler can read the EX Series MIB, run the following command from the Beacon Endpoint Profiler command line:

```
snmpwalk -v 2c -c public <EXseriesIPAddress>
```

Related Documentation

- [Great Bay Software Beacon Endpoint Profiler Configuration Guide](#)

Using an NIS Server

This topic describes integration with the NIS server. It includes the following information:

- [NIS Server Overview](#)
- [Configuring Authentication with an NIS Server](#)
- [Displaying the User Accounts Table](#)

NIS Server Overview

This section describes support for using PPS PPS with the NIS server. It includes the following sections:

- [Understanding NIS Server](#)
- [Feature Support](#)
- [Interoperability Requirements and Limitations](#)

[Understanding NIS Server](#)

[Network Information Service \(NIS\)](#) is an authentication server that allows a central server to manage password authentication, hosts, services, and so on.

When you use an NIS server as the authentication and authorization service for your Pulse Secure access management framework, users can sign in to PPS using the same username and password that is used for the NIS server.

[Feature Support](#)

Pulse Secure access management framework supports the following NIS server features:

- Password management feature enables users who access an NIS server to manage their policies defined on the NIS server.
- Integrates NIS map data for passwords, groups, and hosts with corresponding objects in Active Directory.
- Allows migration of NIS domains to Active Directory.

[Interoperability Requirements and Limitations](#)

The following limitations apply when defining and monitoring an NIS server instance:

- You can only use NIS authentication with the system if your passwords are stored on the NIS server using Crypt or MD5 formats.
- You can only add one NIS server configuration to the system, but you can use that configuration to authenticate any number of realms.
- The username submitted to the system cannot contain two consecutive tilde symbols (~~).

Configuring Authentication with an NIS Server

To configure authentication with the NIS server:

1. Select **Authentication > Auth.Servers**
2. Select NIS Server and click New Server to display the configuration page.
3. Complete the configuration as described below.
4. Save the configuration.

Figure255: NIS Server Configuration Page

Table45: NIS Server Settings

| Settings | Guidelines |
|------------|--|
| Name | Specify a name to identify the server within the system. |
| NIS Server | Specify the name or IP address of the NIS server. |
| NIS Domain | Specify the domain name for the NIS server. |

Using a RADIUS Server

This topic describes integration with the RADIUS server. It includes the following information:

- [RADIUS Server Overview](#)
- [Configuring Authentication with a RADIUS Server](#)

RADIUS Server Overview

This section describes support for using an external RADIUS server. It includes the following sections:

- [Understanding RADIUS Server](#)
- [Feature Support](#)
- [Using Challenge Expressions](#)
- [Using RADIUS Attributes](#)
- [Understanding RADIUS Accounting](#)
- [Interoperability Requirements and Limitations](#)

[Understanding RADIUS Server](#)

A Remote Authentication Dial-In User Service (RADIUS) server is a type of server that allows you to centralize authentication and accounting for users.

The following authentication schemes are supported:

- Access-Request—The user enters the username and password to request access to RADIUS server.
- Access-Accept—The user is authenticated.
- Access-Reject—The user is not authenticated and is prompted to reenter the username and password, or access is denied.
- Access-Challenge—A challenge is issued by the RADIUS server. The challenge collects additional data from the user.

Feature Support

Pulse Secure access management framework supports the following RADIUS features:

- RADIUS authentication.
- RADIUS attributes that can be used in role mapping.
- RADIUS directory services to retrieve user attributes in role-mapping rules.
- RADIUS accounting to track the services and the network resources used.
- RADIUS proxy to configure your external RADIUS server as an inner or outer proxy target. When you specify RADIUS proxy, some fields in the RADIUS server configuration page are not applicable. This feature is supported only on PPS.
- RADIUS Disconnect messages.

Using Challenge Expressions

The Pulse Secure access management framework supports the RSA Authentication Manager using the RADIUS protocol and a SecurID token (available from Security Dynamics). If you use SecurID to authenticate users, they must supply a user ID and the concatenation of a PIN and a token value.

When you define a RADIUS server, the Pulse Secure access management framework allows administrators to use hard-coded (default) challenge expressions that support Defender 4.0 and some RADIUS server implementations (such as Steel-Belted RADIUS and RSA RADIUS) or to enter custom challenge expressions that allow the system to work with many different RADIUS implementations and new versions of the RADIUS server, such as Defender 5.0. The system looks for the response in the Access-Challenge packet from the server and issues an appropriate Next Token, New PIN, or Generic Passcode challenge to the user.

Using CASQUE Authentication

CASQUE authentication uses a token-based challenge/response authentication mechanism employing a CASQUE player installed on the client system. Once configured with CASQUE authentication, the RADIUS server issues a challenge with a response matching the custom challenge expression (:([0-9a-zA-Z/+=]+):). The system then generates an intermediate page that automatically launches the CASQUE player installed on the user's system.

PassGo Defender

If you are using a PassGo Defender RADIUS server, the user sign-in process is as follows:

1. The user is prompted for and enters a username and password.
2. The username and encrypted password are sent over the network to the RADIUS server.
3. The RADIUS server sends a unique challenge string to the system. The system displays this challenge string to the user.

4. The user enters the challenge string in a Defender token and the token generates a response string.
5. The user enters the response string on the system and clicks Sign In.

Using RADIUS Attributes

The below table describes the RADIUS attributes that are supported in RADIUS role-mapping.

Table46: RADIUS Attributes

| Attribute | Description |
|-------------------------|--|
| ARAP-Challenge-Response | Contains the response to the challenge of a dial-in client. Sent in an Access-Accept packet with Framed-Protocol of ARAP. |
| ARAP-Features | Includes password information that the network access server (NAS) must send to the user in an ARAP feature flags packet. Sent in an Access-Accept packet with Framed-Protocol of ARAP. |
| ARAP-Password | Appears in an Access-Request packet containing a Framed-Protocol of ARAP. Only one of User-Password, CHAP-Password, or ARAP-Password must be included in an Access-Request, or one or more EAP-Messages. |
| ARAP-Security | Identifies the ARAP security module to be used in an Access-Challenge packet. |
| ARAP-Security-Data | Contains the actual security module challenge or response, and is in Access-Challenge and Access-Request packets. |
| ARAP-Zone-Access | Indicates how to use the ARAP zone list for the user. |
| Access-Accept | Provides specific configuration information necessary to begin delivery of service to the user. |
| Access-Challenge | Sends the user a challenge requiring a response, and the RADIUS server must respond to the Access-Request by transmitting a packet with the Code field set to 11 (Access-Challenge). |
| Access-Reject | Transmits a packet with the Code field set to 3 (Access-Reject) if any value of the received Attributes is not acceptable. |
| Access-Request | Conveys information specifying user access to a specific NAS, and any special services requested for that user. |
| Accounting-Request | Conveys information used to provide accounting for a service provided to a user. |
| Accounting-Response | Acknowledges that the Accounting-Request has been received and recorded successfully. |
| Acct-Authentic | Indicates how the user was authenticated, whether by RADIUS, the NAS itself, or another remote authentication protocol. |
| Acct-Delay-Time | Indicates how many seconds the client has been trying to send this record. |
| Acct-Input-Gigawords | Indicates how many times the Acct-Input-Octets counter has wrapped around 2^{32} over the course of this service being provided. |
| Acct-Input-Octets | Indicates how many octets have been received from the port during the current session. |
| Acct-Input-Packets | Indicates how many packets have been received from the port during the session provided to a Framed User. |
| Acct-Interim-Interval | Indicates the number of seconds between each interim update in seconds for this specific session. |
| Acct-Link-Count | Indicates the count of links known to have been in each multilink session at the time the accounting record is generated. |
| Acct-Multi-Session-Id | Indicates a unique Accounting ID to make it easy to link together multiple related sessions in a log file. |
| Acct-Output-Gigawords | Indicates how many times the Acct-Output-Octets counter has wrapped around 2^{32} during the current session. |
| Acct-Output-Octets | Indicates how many octets have been sent to the port during this session. |
| Acct-Output-Packets | Indicates how many packets have been sent to the port during this session to a Framed User. |

| Attribute | Description |
|--------------------------|--|
| Acct-Session-Id | Indicates a unique Accounting ID to make it easy to match start and stop records in a log file. |
| Acct-Session-Time | Indicates how many seconds the user has received service. |
| Acct-Status-Type | Indicates whether this Accounting-Request marks the beginning of the user service (Start) or the end (Stop). |
| Acct-Terminate-Cause | Indicates how the session was terminated. |
| Acct-Tunnel-Connection | Indicates the identifier assigned to the tunnel session. |
| Acct-Tunnel-Packets-Lost | Indicates the number of packets lost on a given link. |
| CHAP-Challenge | Contains the Challenge Handshake Authentication Protocol (CHAP) challenge sent by the NAS to a PPP CHAP user. |
| CHAP-Password | Indicates the response value provided by a PPP CHAP user in response to the challenge. |
| Callback-Id | Indicates the name of a location to be called, to be interpreted by the NAS. |
| Callback-Number | The dialing string to be used for callback. |
| Called-Station-Id | Allows the NAS to send the phone number that the user called, using Dialed Number Identification Service (DNIS) or similar technology. |
| Calling-Station-Id | Allows the NAS to send the phone number that the call came from, using Automatic Number Identification (ANI) or similar technology. |
| Class | Sent by the server to the client in an Access-Accept and then sent unmodified by the client to the accounting server as part of the Accounting-Request packet, if accounting is supported. |
| Configuration-Token | Used in large distributed authentication networks based on proxy. |
| Connect-Info | Sent from the NAS to indicate the nature of the user's connection. |
| EAP-Message | Encapsulates Extended Access Protocol [3] packets to allow the NAS to authenticate dial-in users by means of EAP without having to understand the EAP protocol. |
| Event-Timestamp | Records the time that this event occurred on the NAS, in seconds since January 1, 1970 00:00 UTC. |
| Egress-VLAN-ID | The Egress-VLANID attribute represents an allowed Egress VLANID for this port, indicating if the VLANID is allowed for tagged or untagged frames as well as the VLANID. |
| Egress-VLAN-Name | The Egress-VLAN-Name attribute represents an allowed VLAN for this port. It is similar to the Egress-VLANID attribute, except that the VLAN-ID itself is not specified or known; rather, the VLAN name is used to identify the VLAN within the system. |
| Filter-Id | Indicates the name of the filter list for this user. |
| Framed-AppleTalk-Link | Indicates the AppleTalk network number used for the serial link to the user, which is another AppleTalk router. |
| Framed-AppleTalk-Network | Indicates the AppleTalk Network number which the NAS can probe to allocate an AppleTalk node for the user. |
| Framed-AppleTalk-Zone | Indicates the AppleTalk Default Zone to be used for this user. |
| Framed-Compression | Indicates the compression protocol to be used for the link. |
| Framed-IP-Address | Indicates the address to be configured for the user. |
| Framed-IP-Netmask | Indicates the IP netmask to be configured for the user when the user is a router to a network. |
| Framed-IPv6-Pool | Contains the name of an assigned pool used to assign an IPv6 prefix for the user. |
| Framed-IPv6-Prefix | Indicates an IPv6 prefix (and corresponding route) to be configured for the user. |
| Framed-IPv6-Route | Indicates the routing information to be configured for the user on the NAS. |

| Attribute | Description |
|--------------------------------|--|
| Framed-IPv6 Address | Indicates an IPv6 address assigned to NAS interface of the host. |
| Framed-Interface-Id | Indicates the IPv6 interface identifier to be configured for the user. |
| Framed-IPX-Network | Indicates the IPX Network number to be configured for the user. |
| Framed-MTU | Indicates the maximum transmission unit to be configured for the user, when it is not negotiated by some other means (such as PPP). |
| Framed-Pool | Indicates the name of an assigned address pool used to assign an address for the user. |
| Framed-Protocol | Indicates the framing to be used for framed access. |
| Framed-Route | Indicates the routing information to be configured for the user on the NAS. |
| Framed-Routing | Indicates the routing method for the user, when the user is a router to a network. |
| Idle-Timeout | Sets the maximum number of consecutive seconds of idle connection allowed to the user before termination of the session or prompt. |
| Ingress-Filters | The Ingress-Filters attribute corresponds to the Ingress Filter per-port variable. Supports the following values: Disabled=2 Enabled= 1 When the attribute has the value "Enabled", the set of VLANs that are allowed to ingress a port must match the set of VLANs that are allowed to egress a port. |
| Keep-Alives | Uses SNMP instead of keepalives. |
| Login-IP-Host | Indicates the system with which to connect the user when the Login-Service Attribute is included. |
| Login-IPv6-Host | Indicates the system with which to connect the user when the Login-Service Attribute is included. |
| Login-LAT-Group | Contains a string identifying the LAT group codes that this user is authorized to use. |
| Login-LAT-Node | Indicates the node with which the user is to be automatically connected by LAT. |
| Login-LAT-Port | Indicates the port with which the user is to be connected by LAT. |
| Login-LAT-Service | Indicates the system with which the user is to be connected by LAT. |
| Login-Service | Indicates the service to use to connect the user to the log in host. |
| Login-TCP-Port | Indicates the TCP port with which the user is to be connected when the Login-Service Attribute is also present. |
| MS-ARAP-Challenge | Only present in an Access-Request packet containing a Framed-Protocol Attribute with the value 3 (ARAP). |
| MS-ARAP-Password-Change-Reason | Indicates the reason for a server-initiated password change. |
| MS-Acct-Auth-Type | Represents the method used to authenticate the dial-up user. |
| MS-Acct-EAP-Type | Represents the Extensible Authentication Protocol (EAP) type used to authenticate the dial-up user. |
| MS-BAP-Usage | Describes whether the use of BAP is allowed, disallowed, or required on new multilink calls. |
| MS-CHAP-CPW-1 | Allows the user to change password if it has expired. |
| MS-CHAP-CPW-2 | Allows the user to change password if it has expired. |
| MS-CHAP-Challenge | Contains the challenge sent by a NAS to a MS-CHAP user. |
| MS-CHAP-Domain | Indicates the Windows NT domain in which the user was authenticated. |
| MS-CHAP-Error | Contains error data related to the preceding MS-CHAP exchange. |
| MS-CHAP-LM-Enc-PW | Contains the new Windows NT password encrypted with the old LAN Manager password hash. |
| MS-CHAP-MPPE-Keys | Contains two session keys for use by the Microsoft Point-to-Point Encryption (MPPE). |

| Attribute | Description |
|-------------------------------|---|
| MS-CHAP-NT-Enc-PW | Contains the new Windows NT password encrypted with the old Windows NT password hash. |
| MS-CHAP-Response | Contains the response value provided by a PPP MS-CHAP user in response to the challenge. |
| MS-CHAP2-CPW | Allows the user to change password if it has expired. |
| MS-CHAP2-Response | Contains the response value provided by an MS-CHAP-V2 peer in response to the challenge. |
| MS-CHAP2-Success | Contains a 42-octet authenticator response string. |
| MS-Filter | Transmits traffic filters. |
| MS-Link-Drop-Time-Limit | Indicates the length of time (in seconds) that a link must be underutilized before it is dropped. |
| MS-Link-Utilization-Threshold | Represents the percentage of available bandwidth utilization below which the link must fall before the link is eligible for termination. |
| MS-MPPE-Encryption-Policy | Signifies whether the use of encryption is allowed or required. |
| MS-MPPE-Encryption-Types | Signifies the types of encryption available for use with MPPE. |
| MS-MPPE-Recv-Key | Contains a session key for use by the MPPE. |
| MS-MPPE-Send-Key | Contains a session key for use by the MPPE. |
| MS-New-ARAP-Password | Transmits the new ARAP password during an ARAP password change operation. |
| MS-Old-ARAP-Password | Transmits the old ARAP password during an ARAP password change operation. |
| MS-Primary-DNS-Server | Indicates the address of the primary domain name server (DNS) server to be used by the PPP peer. |
| MS-Primary-NBNS-Server | Indicates the address of the primary NetBIOS name server (NBNS) server to be used by the PPP peer. |
| MS-RAS-Vendor | Indicates the manufacturer of the RADIUS client machine. |
| MS-RAS-Version | Indicates the version of the RADIUS client software. |
| MS-Secondary-DNS-Server | Indicates the address of the secondary DNS server to be used by the PPP peer. |
| MS-Secondary-NBNS-Server | Indicates the address of the secondary DNS server to be used by the PPP peer. |
| Message-Authenticator | Signs Access-Requests to prevent spoofing Access-Requests using CHAP, ARAP, or EAP authentication methods. |
| NAS-IP-Address | Indicates the identifying IP address of the NAS that is requesting authentication of the user, and must be unique to the NAS within the scope of the RADIUS server. |
| NAS-IPv6-Address | Indicates the identifying IPv6 Address of the NAS that is requesting authentication of the user, and must be unique to the NAS within the scope of the RADIUS server. |
| NAS-Identifier | Contains a string identifying the NAS originating the Access-Request. |
| NAS-Port | Indicates the physical port number of the NAS that is authenticating the user. |
| NAS-Port-Id | Contains a text string that identifies the port of the NAS that is authenticating the user. |
| NAS-Port-Type | Indicates the type of the physical port of the NAS that is authenticating the user. |
| Password-Retry | Indicates how many authentication attempts a user is allowed to attempt before being disconnected. |
| Port-Limit | Sets the maximum number of ports to be provided to the user by the NAS. |

| Attribute | Description |
|-------------------------|---|
| Prompt | Indicates to the NAS whether it should echo the user's response as it is entered, or not echo it. |
| Proxy-State | Indicates that a proxy server can send this attribute to another server when forwarding an Access-Request. The attribute must be returned unmodified in the Access-Accept, Access-Reject or Access-Challenge. |
| Reply-Message | Indicates that the text that can be displayed to the user. |
| Service-Type | Indicates the type of service the user has requested, or the type of service to be provided. |
| Session-Timeout | Sets the maximum number of seconds of service to be provided to the user before termination of the session or prompt. |
| State | Indicates that the packet must have only zero or one State Attribute. Usage of the State Attribute is implementation dependent. |
| Telephone-number | Using the Calling-Station-Id and Called-Station-Id RADIUS attributes, authorization and subsequent tunnel attributes can be based on the phone number originating the call, or the number being called. |
| Termination-Action | Indicates the action the NAS should take when the specified service is completed. |
| Tunnel-Assignment-ID | Indicates to the tunnel initiator the particular tunnel to which a session is to be assigned. |
| Tunnel-Client-Auth-ID | Specifies the name used by the tunnel initiator during the authentication phase of tunnel establishment. |
| Tunnel-Client-Endpoint | Contains the address of the initiator end of the tunnel. |
| Tunnel-Link-Reject | Indicates the rejection of the establishment of a new link in an existing tunnel. |
| Tunnel-Link-Start | Marks the creation of a tunnel link. |
| Tunnel-Link-Stop | Marks the destruction of a tunnel link. |
| Tunnel-Medium-Type | Indicates the transport medium to use when creating a tunnel for those protocols (such as L2TP) that can operate over multiple transports. |
| Tunnel-Medium-Type | Indicates the transport medium to use when creating a tunnel for those protocols (such as L2TP) that can operate over multiple transports. |
| Tunnel-Password | Specifies a password used to access a remote server. |
| Tunnel-Preference | Indicates that if RADIUS server returns more than one set of tunneling attributes to the tunnel initiator, you should include this attribute in each set to indicate the relative preference assigned to each tunnel. |
| Tunnel-Private-Group-ID | Indicates the group ID for a particular tunneled session. |
| Tunnel-Reject | Marks the rejection of the establishment of a tunnel with another node. |
| Tunnel-Server-Auth-ID | Specifies the name used by the tunnel terminator during the authentication phase of tunnel establishment. |
| Tunnel-Server-Endpoint | Indicates the address of the server end of the tunnel. |
| Tunnel-Start | Marks the establishment of a tunnel with another node. |
| Tunnel-Stop | Marks the destruction of a tunnel to or from another node. |
| Tunnel-Type | Indicates the tunneling protocol(s) to be used (in the case of a tunnel initiator) or the tunneling protocol in use (in the case of a tunnel terminator). |
| User-Name | Indicates the name of the user to be authenticated. |
| User-Password | Indicates the password of the user to be authenticated, or the user's input following an Access-Challenge. |

Understanding RADIUS Accounting

You can configure the device to send session start and stop messages to a RADIUS accounting server. The device sends a user-session start message after the user successfully signs in and the device maps to a role.

Whenever a user session is terminated, the device sends a user-session stop message to the accounting server. A user session is terminated whenever the user:

- Manually signs out
- Times out because of either inactivity or exceeding the maximum session length
- Is denied access because of Host Checker role-level restrictions
- Is manually forced out by an administrator as a result of dynamic policy evaluation



NOTE: If users are signed into a device cluster, the RADIUS accounting messages might show the users signing in to one node and signing out of another.

Table47 table describes the attributes that are common to start and stop messages.

Table47: Attributes Common to Start and Stop Messages

| Attribute | Description |
|----------------------------|--|
| User-Name (1) | Specifies the string that the device administrator specifies during RADIUS server configuration. |
| NAS-IP-Address (4) | Specifies the device's IP address. |
| NAS-Port (5) | The device sets this attribute to 0 if the user signed in using an internal port, or 1 if an external port is used. |
| Framed-IP-Address (8) | Specifies the user's source IP address. |
| NAS-Identifier (32) | Specifies the configured name for the device client under the RADIUS server configuration. |
| Acct-Status-Type (40) | The device sets this attribute to 1 for a start message, or 2 for a stop message in a user-session or a subsession. |
| Acct-Session-Id (44) | Specifies the unique accounting ID that matches start and stop messages corresponding to a user-session or to a subsession. |
| Acct-Multi-Session-Id (50) | Specifies the unique accounting ID that you can use to link together multiple related sessions. Each linked session must have a unique Acct-Session-Id and the same Acct-Multi-Session-Id. |
| Acct-Link-Count (51) | Specifies the count of links in a multilink session at the time the system generates the accounting record. |

Table48: Start Attributes

| Attribute | Description |
|---------------------|--|
| Acct-Authentic (45) | The device sets this attribute to: <ul style="list-style-type: none">• RADIUS—if the user is authenticated to a RADIUS server.• Local—if the user is authenticated to a local authentication server.• Remote—if the user is authenticated through any other RADIUS server. |

Table49: Stop Attributes

| Attribute | Description |
|---------------------------|---|
| Acct-Session-Time (46) | Specifies the duration of the user-session or the subsession. |
| Acct-Terminate-Cause (49) | <p>The device uses one of the following values to specify the event that caused the termination of a user session or a subsession:</p> <ul style="list-style-type: none">• User Request (1) – User manually signs out.• Idle Timeout (4) – User is Idle and times out.• Session Timeout (5) – User's maximum session times out.• Admin Reset (6) – User is forced out from active user's page. |

Interoperability Requirements and Limitations

You must configure the third-party RADIUS server to communicate with the Pulse Secure access management framework.

On the RADIUS server, configure the following settings:

- Hostname.
- Network IP address.
- Client type, if applicable. If this option is available, select Single Transaction Server or its equivalent.
- Type of encryption for authenticating client communication. This choice should correspond to the client type.
- Shared secret.

The following are the requirements and limitations for Interim update feature:


- If you want a server to receive interim accounting messages, you can statically configure an interim value on the client, in which case, the locally configured value overrides any value that might be included in the RADIUS Access-Accept message.
- The octet count reported in the accounting messages is the cumulative total since the beginning of the user session.
- The interim update byte count is only supported based on a user session, not on SAM or NC sessions.

Configuring Authentication with a RADIUS Server

To configure authentication with the RADIUS server:

1. Select Authentication > Auth. Servers.
2. Select RADIUS Server and click New Server to display the configuration page.
3. Complete the configuration as described below.
4. Save the configuration.

Figure256: RADIUS Server Configuration Page



Pulse Policy Secure
on PPS-122

System
Authentication
Administrators
Users
Endpoint Policy
Maintenance
Wizards

Auth Servers > IPv6-SBR-SRV

IPv6-SBR-SRV

Settings

Users

*Name:

IPv6-SBR-SRV

Label to reference this server.

NAS-Identifier:

Name of the device as known to RADIUS server

Primary Server

*RADIUS Server:

Name or IP address

*Authentication Port:

1812

*Shared Secret:

*Accounting Port:

1813

Port used for RADIUS accounting, if applicable

NAS-IP-Address:

IP address

*Timeout:

30

seconds

*Retries:

0

☐
Users authenticate using tokens or one-time passwords

Backup Server (required only if Backup server exists)

RADIUS Server:

Name or IP address

Authentication Port:

Shared Secret:

Accounting Port:

Port used for RADIUS accounting, if applicable

☐
Load-Balance Auth Requests between Primary and Backup Servers
Accounting requests will not be load-balanced.

RADIUS accounting

User-Name:

<USER>[<REALM>][<ROLE SEP>,""]>

Template for reporting user identity to RADIUS server

The template can contain textual characters as well as variables for substitution. Variables should be enclosed in angle brackets like this <variable>. Click [here](#) to view a list of all variables.

Examples:

<USER>

The user's login name

<REALM>

The user's sign-in realm

<ROLE SEP>

The list of ""-separated roles assigned to the user

<ROLE>

The first role amongst multiple roles assigned to the user

Interim Update Interval:

minutes

Time interval to send an interim update to the accounting server
(min: 15 minutes, max: 1440 minutes)

Custom challenge expressions

☐
Next Token:

☐
New PIN:

☐
Generic Login:

Save Changes

Reset

Table50: RADIUS Server Settings

| Settings | Guidelines |
|----------------|---|
| Name | Specify a name to identify the server within the system. |
| NAS-Identifier | Specify the name that identifies the Network Access Server (NAS) client to the RADIUS server. <div> NOTE: <ul style="list-style-type: none"> If you do not specify the NAS identifier, the value specified in the Hostname field on the System > Network > Overview page of the administrator console is used. If you use the RADIUS proxy feature, the NAS-Identifier field is not used. Proxy passes on the entire RADIUS packet including the NAS identifier from the client. </div> |

| Settings | Guidelines |
|--|---|
| Primary Server | |
| Radius Server | Specify the name or IPv4/IPv6 address of the RADIUS server. |
| Authentication Port | Specify the authentication port value for the RADIUS server. Default port number: 1812, 1645 (legacy servers) |
| NAS-IP-Address | Specify the NAS IP address. NOTE: <ul style="list-style-type: none"> If you leave this field empty, the internal IP address is passed to RADIUS requests. If you configure the NAS IP address, then the system passes the value regardless of which cluster node sends the requests. If you use the RADIUS proxy feature, this field is not used. Proxy passes on the entire RADIUS packet including the NAS IP address from the client. |
| Timeout (seconds) | Specify the interval of time to wait for a response from the RADIUS server before timing out the connection. |
| Retries | Specify the number of times to try to make a connection after the first attempt fails. |
| Users authenticate using tokens or one-time passwords. | Select this option to prompt the user for a token instead of a password. For example, you can use this option to dynamically prompt for a password or token based on sign-in policies by configuring two instances of the same authentication server. You can use one instance for wireless users with this option enabled and that prompts the user for a token, and another instance for wired users with this option disabled and that prompts the user for a password. NOTE: If you are using RADIUS proxy feature, this option is not used. |
| Backup Server (required only if Backup server exists) | |
| Radius Server | Specify the secondary RADIUS server. The authentication request is first routed to the primary RADIUS server, then to the specified backup server if the primary server is unreachable. Accounting messages are sent to the RADIUS server by each cluster node without consolidation. RADIUS accounting follows these assumptions: <ul style="list-style-type: none"> If the cluster is active/passive, all users are connected to one node at a time. If the cluster is active/active and does not use a balancer, users are connected to different nodes but are static. If the cluster is active/active and uses a balancer, the balancer usually enforces a persistent source IP. In this case, users are always connected to the same node. NOTE: RADIUS does not support load balancing. |
| Authentication Port | Specify the authentication port. |
| Shared Secret | Specify the shared secret. |
| Accounting Port | Specify the accounting port. |
| Radius Accounting | |

| Settings | Guidelines |
|---|--|
| User-Name | <p>Specify the user information to the RADIUS accounting server.</p> <p>You can enter any of the applicable session variables. Applicable variables include those that are set the time after the user signs in and maps to a role.</p> <p>The default variables for this field are as follows:</p> <ul style="list-style-type: none"> • USER: Logs the username to the accounting server. • REALM: Logs the realm to the accounting server. • ROLE SEP=","; Logs the list of comma-separated roles assigned to the user. • ROLE: Logs the role to the accounting server. <p>NOTE: If you assign the user to more than one role, the system separates them with commas.</p> |
| Interim Update Interval (minutes) | <p>Select this option to achieve more precise billing for long-lived session clients and during network failure.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • If you are using the RADIUS proxy feature, the fields in this section are not used. • The minimum interim update interval is 15 minutes. The data statistics (bytes in and bytes out) for RADIUS accounting might not be sent for a J-SAM/W-SAM/NC session if the session is less than 30 seconds long and the applications keep the connections open all the time. |
| Custom challenge expressions | |
| <p>(Optional) Three types of challenge expressions exist with each automatically set to its pre-populated default. The custom option allows the administrator to configure the actual string pattern to match for any of the three modes. To add a custom expression, select the check box for the appropriate challenge expression type, and add a custom expression in the associated text box.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • If you use SecureID to authenticate users, then provide the user ID and the concatenation of PIN and the token value. • When using CASQUE authentication, specify:([0-9a-zA-Z/+=]+): as the custom expression for the Generic Login Challenge Expression. • If you are using the RADIUS proxy feature, the fields in this section are not used. | |
| Next Token | Specify the appropriate Next Token. |
| New PIN | Specify the New PIN. |
| Generic Login | Specify the Generic Login challenge to the user. |

Using an ACE Server

This topic describes integration with an ACE Server (now named RSA Authentication Manager). It includes the following information:

- [RSA Authentication Manager Overview](#)
- [Configuring Authentication with RSA Authentication Manager](#)
- [Displaying the User Accounts Table](#)

RSA Authentication Manager Overview

This section describes support for using PPS with an ACE Server (now named RSA Authentication Manager). It includes the following sections:

- [Understanding RSA Authentication Manager](#)
- [Feature Support](#)
- [Interoperability Requirements and Limitations](#)

Understanding RSA Authentication Manager

RSA Authentication Manager (formerly known as ACE/Server) is an authentication and authorization server that allows user authentication based on credentials from the RSA SecurID® product from RSA Security Inc.

When you use RSA Authentication Manager as the authentication and authorization service for your Pulse Secure access management framework, users can sign in to PPS using the same username and password stored in the backend server.

Table51 describes RSA SecurID hardware token and software token user sign-in methods.

Table51: Sign-in Methods

| Method | Action |
|--|--|
| Using a hardware token and the standard system sign-in page | The user browses to the standard system sign-in page, and then enters the username and password (consisting of the concatenation of the PIN and the RSA SecurID hardware token's current value). The system then forwards the user's credentials to the authentication server. |
| Using a software token and the custom SoftID system sign-in page | The user browses to the SoftID custom sign-in page. Then, using the SoftID plug-in, the user enters the username and PIN. The SoftID plug-in generates a passphrase by concatenating the user's PIN and token and passes the passphrase to the authentication server. |

If the RSA Authentication Manager positively authenticates the user, the user gains access to the system. Otherwise, the RSA Authentication Manager:

- Denies the user access to the system.
- Prompts the user to generate a new PIN (New PIN mode) if the user is signing in to the system for the first time. Users see different prompts depending on the method they use to sign in.

If the user signs in using the SoftID plug-in, then the RSA prompts the user to create a new pin; otherwise PPS prompts the user to create a new PIN.

- Prompts the user to enter the next token (Next Token mode) if the token entered by the user is out of sync with the token expected by RSA Authentication Manager. Next Token mode is transparent to users signing in using a SoftID token. The RSA SecurID software passes the token through the system to RSA Authentication Manager without user interaction.
- Redirects the user to the standard system sign-in page (SoftID only) if the user tries to sign-in to the RSA SecurID Authentication page on a computer that does not have the SecurID software installed.

Feature Support

Pulse Secure access management framework supports the following RSA Authentication Manager features:

- New PIN mode
- Next-token mode
- Data Encryption Standard (DES)/ Secure Dial-In (SDI) encryption
- Advanced Encryption Standard (AES) encryption
- Slave Authentication Manager support
- Name locking
- Clustering

Interoperability Requirements and Limitations

The following limitations apply when defining and monitoring an RSA Authentication Manager instance:

- You can only add one RSA Authentication Manager configuration to the system, but you can use that configuration to authenticate any number of realms.
- You cannot customize the load balancing algorithm.
- When you enter the New PIN or Next Token mode, enter the required information within three minutes. Otherwise, the system cancels the transaction and notifies the user to reenter the credentials.
- The system can handle a maximum of 200 RSA Authentication Manager transactions at any given time. A transaction only lasts as long as is required to authenticate against the RSA Authentication Manager.

For example, when a user signs into the system, the RSA Authentication Manager transaction is initiated when the user submits the request for authentication and ends once the RSA Authentication Manager has finished processing the request. The user may then keep his or her session open, even though the RSA Authentication Manager transaction is closed.

Configuring Authentication with RSA Authentication Manager

To configure authentication with an ACE server:

1. Select Authentication > Auth. Servers.
2. Select ACE Server and click New Server to display the configuration page.
3. Complete the configuration as described in Table52.
4. Save the configuration.

Figure257:ACE server

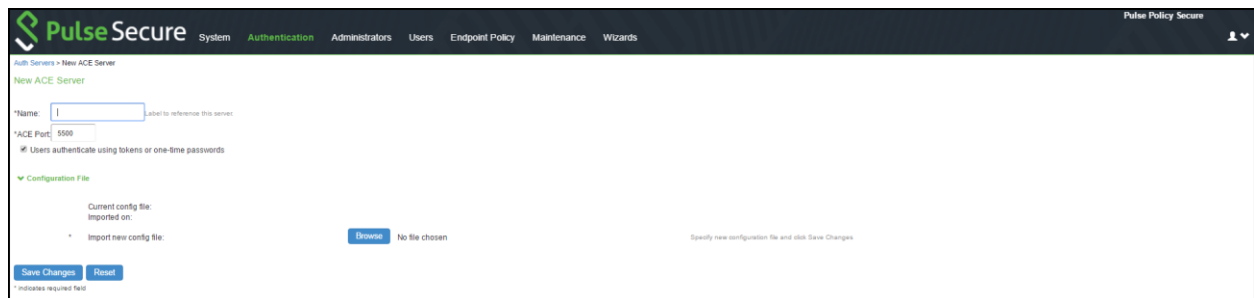


Table52: ACE Server Settings

| Settings | Guidelines |
|---------------------|---|
| Name | Specify a name to identify the server within the system. |
| ACE Port | Specify the default port of the authentication server. NOTE: If no port is specified in the sdconf.rec file, the default port is used. |
| Configuration File | |
| Current config file | Specify the RSA Authentication Manager configuration file. NOTE: You must update this file on the device anytime you make changes to the source file. |
| Imported on | Display the date on which the config file is imported. |

| Settings | Guidelines |
|------------------------|--|
| Import new config file | Use the Choose File button to upload the sdconf.rec configuration file. |
| Node Verification File | |
| Node | Save the configuration to redisplay the configuration page. The updated page includes a section that lists a timestamp for the negotiation of the node secret between the system and the backend RSA server. The negotiation and verification automatically occurs after first successful log in. Do not expect entries in the table until at least one user has authenticated successfully. |

Displaying the User Accounts Table

To display user accounts:

1. Select Authentication > Auth. Servers.
2. Click the link for the authentication server you want to manage.
3. Click the Users tab to display the user accounts table.

The user accounts table includes entries for the accounts that have been created. The Last Sign-in Statistic column shows the last successful sign-in date and time for each user, the user's IP address, and the agent or browser type and version.

4. Use the controls to search for users and manage user accounts:

- To search for a specific user, enter a username in the Show users named box and click Update.



TIP: You can use an asterisk (*) as a wildcard, where * represents any number of zero or more characters. For example, to search for all usernames that contain the letters jo, enter *jo*. The search is case-sensitive. To display the entire list of accounts again, type * or delete the field's contents and click Update.

- To limit the number of users displayed on the page, enter a number in the Show *N* users box and click Update.
- To terminate the user session and delete the account, select the check box next to the user account record and click Delete.

Using a SiteMinder Server

This topic describes integration with the SiteMinder server. It includes the following information:

- [SiteMinder Server Overview](#)
- [Configuring the Back-End SiteMinder Server](#)
- [Configuring Authentication with a SiteMinder Server](#)
- [Displaying the User Accounts Table](#)

SiteMinder Server Overview

This section describes support for using PPS with the SiteMinder server. It includes the following sections:

- [Understanding SiteMinder Server](#)
- [Feature Support](#)
- [Interoperability Requirements and Limitations](#)

Understanding SiteMinder Server

CA SiteMinder server is an authentication and authorization server.

When you configure the Pulse Secure access management framework to authenticate users with a SiteMinder policy server, the system passes the user's credentials to SiteMinder during authentication. Once SiteMinder receives the credentials, it may use standard username and password authentication, RSA Authentication Manager SecurID tokens, or client-side certificates to authenticate the credentials.

The system also passes a protected resource URL to SiteMinder during authentication to determine which SiteMinder realm it should use to authenticate the user. When the system passes the protected resource URL, SiteMinder authorizes the user's URL against the realm that is associated with the resource and allows the user to seamlessly access any resources whose protection levels are equal to or less than the URL that was passed.

Feature Support

The Pulse Secure access management framework supports the following SiteMinder features:

- [Single Sign-on Using SMSESSION Cookies](#)
- [Automatic Sign-In](#)
- [Authentication Schemes](#)

Single Sign-on Using SMSESSION Cookies

The Pulse Secure access management framework enables single sign-on (SSO) to SiteMinder-protected resources using SMSESSION cookies. An SMSESSION cookie is a security token that encapsulates SiteMinder session information. Depending on your configuration, either the SiteMinder Web agent or the system creates an SMSESSION cookie and then posts the cookie to the following locations so the user does not have to reauthenticate to access additional resources.

- Pulse Secure access management framework-If the user tries to access a SiteMinder resource within the session (for example, from the system file browsing page), the system passes its cached SMSESSION cookie to the Web agent for authentication.
- The user's Web browser-If the user tries to access a SiteMinder resource from outside the session (for example, when using a protected resource on a standard agent), SiteMinder uses the cached SMSESSION cookie stored in the user's Web browser to authenticate/authorize the user.

Automatic Sign-In

If you enable the Automatic Sign-In option, the system can use an SMSESSION cookie generated by another agent to enable single sign-on from a SiteMinder resource. When a user accesses the system sign-in page with an SMSESSION cookie, the system verifies the SMSESSION cookie. Upon successful verification, the system establishes a session for the user. You can use the following authentication mechanisms when you enable automatic sign-in through the system:

- Custom agent-The system authenticates the user against the policy server and generates a SMSESSION cookie. When you select this option, you can enable SSO on other SiteMinder agents that use the same policy server. To enable SSO on these agents, update each of them to accept third-party cookies. If you select this option and the user enters his system session with an SMSESSION cookie, the system attempts automatic sign-in when the user enters the session.
- HTML form post-The system posts credentials to a standard Web agent that you have already configured. The Web agent then creates SMSESSION cookies. If you select this option, you cannot use SecurID New Pin and Next Token modes or client-side certificate authentication. If you select this option and the user enters his session with an SMSESSION cookie, the system attempts automatic sign-in when the user enters the session.
- Delegated authentication-The system delegates authentication to a standard agent. If this option is enabled, the system tries to determine the FCC URL associated with the protected resource. The system then redirects the user to the FCC

URL with the system sign-in URL as the target. Upon successful authentication, the user is redirected back to the system with an SMSESSION cookie and the system does an automatic sign-in for the user.

Authentication Schemes

The Pulse Secure access management framework works with the following types of SiteMinder authentication schemes:

- Basic username and password authentication—The user's name and password are passed to the SiteMinder policy server. The policy server authenticates them to another server for authentication.
- RSA Authentication Manager SecurID token authentication—The SiteMinder policy server authenticates users based on a username and password generated by an RSA Authentication Manager SecurID token.
- Client-side certificate authentication—The SiteMinder policy server authenticates users based on their client-side certificate credentials. If you choose this authentication method, the Web browser displays a list of client certificates from which users can select. If you choose to authenticate users with this method, you must import the client certificate through the System > Certificates > Trusted Client CAs tab.

Interoperability Requirements and Limitations

The following requirements and limitations apply:

- The Automatic Sign-in feature is not supported for administrator roles. This feature is only available for end users.
- If you use the Authenticate using custom agent option, update all other Web agents to accept the device generated cookie, and apply a software patch to all other Web agents.
- PPS supports SiteMinder server version 6.0, version 5.5, and version 12.0. If you run older agents than the supported agents, you might experience cookie validation problems, including crossed log entries and intermittent user timeouts.
- You can choose which SiteMinder server version you want to support when you create a server instance. You can choose version 5.5, which supports both versions 5.5 and 6.0, or you can choose version 6.0, which supports only version 6.0, or version 12.0. There is no difference in the SiteMinder authentication server functionality based on which version you select. This option only controls the version of the SDK to use. We recommend you match the compatibility mode with the version of the policy server.
- When you use SiteMinder to authenticate, the primary and backup policy servers must run the same SiteMinder server software version. A mixed deployment (where the primary server runs a different server software version than the backup) is not supported.
- SiteMinder does not store the IP address in the SMSESSION cookie, and therefore cannot pass it to the system.
- SiteMinder sends the SMSESSION cookie to the system as a persistent cookie. To maximize security, the system resets the persistent cookie as a session cookie once authentication is complete.
- When you use SiteMinder to authenticate, the Pulse Secure access management framework disregards any system session and idle timeouts and uses session and idle timeouts set through the SiteMinder realm instead.
- When you use SiteMinder to authenticate, users must access the system using a fully qualified domain name. This is because the SiteMinder SMSESSION cookie is only sent for the domain for which it is configured. If users access the system using an IP address, they might receive an authentication failure and will be prompted to authenticate again.
- You can update all your standard Web agents to the appropriate SiteMinder Agent Quarterly Maintenance Release (QMR) to accept the cookies. If you are running SiteMinder version 5 Web agents, use the QMR5 hot fix. The system is compatible with version 5.x and later SiteMinder agents. Older versions of SiteMinder agents are susceptible to cookie validation failures.
- You can set the Accept Third Party Cookie attribute (AcceptTPCookie) to yes in the Web agent's configuration file (webagent.conf) or to 1 in the Windows Registry for the IIS Web server. The location of the attribute depends on the SiteMinder version and Web server you are using. Refer to the documentation provided with your SiteMinder server.

Configuring the Back-End SiteMinder Server

The following sections do not give complete SiteMinder configuration instructions—they are only intended to help you make SiteMinder work with the Pulse Secure access management framework. For in-depth SiteMinder configuration information, refer to the documentation provided with your SiteMinder policy server.

- [Configuring the SiteMinder Agent](#)
- [Configuring the Authentication Scheme](#)
- [Configuring the SiteMinder Domain](#)
- [Configuring the SiteMinder Realm](#)
- [Configuring a Rule or Response Pair to Pass Usernames](#)

Configuring the SiteMinder Agent

A SiteMinder agent filters user requests to enforce access controls. For instance, when a user requests a protected resource, the agent prompts the user for credentials based on an authentication scheme and sends the credentials to a SiteMinder policy server. A Web agent is simply an agent that works with a Web server. When configuring SiteMinder to work with the Pulse Secure access management framework, you must configure the system as a Web agent in most cases.

If you select the Delegate authentication to a standard agent option, you must set the following options in the agent configuration object of the standard Web agent to host the FCC URL:

- `<EncryptAgentName=no>`
- `<FCCCompatMode=no>`

To configure the system as a Web agent on the SiteMinder policy server:

In the SiteMinder Administration interface, click the System tab.

1. Right-click Agents and select Create Agent.
2. Enter a name for the Web agent and a description. You must enter this name when creating a SiteMinder realm.
3. Select the Support 5.x agents option for compatibility with the system.
4. Under Agent Type, select SiteMinder and then select Web Agent from the list. This setting is required for compatibility with the system.
5. Under IP Address or Hostname, enter the name or IP address of the system.
6. In the Shared Secret box, enter and confirm a secret for the Web agent. Note that you must enter this secret when configuring the system.
7. Click OK.

Configuring the Authentication Scheme

Within SiteMinder, an authentication scheme is a way to collect user credentials and determine the identity of a user. You may create different authentication schemes and associate different protection levels with each. For example, you may create two schemes—one that authenticates users based solely on the users' client-side certificates and provides them a low protection level, and a second that uses RSA Authentication Manager SecurID token authentication and provides users a higher protection level.

To configure a SiteMinder authentication scheme:

In the SiteMinder Administration interface, select the System tab. Right-click Authentication Schemes and select Create Authentication Scheme.

1. Enter a name for the scheme and (optionally) a description. You must enter this name when configuring the SiteMinder realm.
2. Under Authentication Scheme, select one of the following options:
 - Basic Template
 - HTML Form Template
 - SecurID HTML Form Template-If you are using SecurID authentication, you must choose SecurID HTML Form Template (instead of SecurID Template). Choosing this option enables the Policy Server to send ACE sign-in failure codes.
 - X509 Client Cert Template
 - X509 Client Cert and Basic Authentication



NOTE:

- You must select HTML Form Template to handle reauthentication.
 - If you select X509 Client Cert Template or X509 Client Cert and Basic Authentication, you must import the certificate through System > Certificates > Trusted Client CAs.
3. Enter a protection level for the scheme. Note that this protection level carries over to the SiteMinder realm that you associate with this scheme.
 4. Select Password Policies Enabled for this Authentication Scheme if you want to reauthenticate users who request resources with a higher protection level than they are authorized to access.
 5. Select Scheme Setup tab, and enter the options required by your authentication scheme type.

If you want the system to reauthenticate users who request resources with a higher protection level than they are authorized to access, you must enter the following settings:

- Under Server Name, enter the hostname (for example, sales.yourcompany.net).
 - Select the Use SSL Connection check box.
 - Under Target, enter the sign-in URL defined plus the parameter "ive=1" (for example, /highproturl?ive=1). The system must have a sign-in policy that uses */highproturl as the sign-in URL and only uses the corresponding SiteMinder authentication realm.
 - Clear the Allow Form Authentication Scheme to Save Credentials check box.
 - Leave Additional Attribute List empty.
6. Click OK.

If you change a SiteMinder authentication scheme on the policy server, you must flush the cache using the Flush Cache option on the Advanced tab.

Configuring the SiteMinder Domain

Within SiteMinder, a policy domain is a logical grouping of resources associated with one or more user directories. Policy domains contain realms, responses, and policies. When configuring the Pulse Secure access management framework to work with SiteMinder, you must give user access to a SiteMinder resource within a realm, and then group the realm into a domain.

To configure a SiteMinder domain:

1. Select the System tab, right-click Domains and select Create Domain, or click Domains and select an existing SiteMinder domain.
2. Add a realm to the domain.

Configuring the SiteMinder Realm

Within SiteMinder, a realm is a cluster of resources within a policy domain grouped together according to security requirements. When configuring SiteMinder to work with the Pulse Secure access management framework, you must define realms to determine which resources the users might access.

To configure a SiteMinder Realm:

In the SiteMinder Administration interface, In the SiteMinder Administration interface, select the Domains tab.

1. Expand the domain that you created.
2. Right-click Realms and select Create Realm.
3. In the Agent field, select the Web agent that you created.
4. In the Resource Filter field, enter a protected resource. This resource inherits the protection level specified in the corresponding authentication scheme.

For the default protection level, enter /ive-authentication. You must enter this resource when configuring the system. If you use sign-in policies with nondefault URLs such as */nete or */cert, you must have corresponding resource filters in the SiteMinder configuration.

5. From the Authentication Schemes list, select the scheme that you created.
6. Click OK.

Configuring a Rule or Response Pair to Pass Usernames

Within SiteMinder, you can use rules to trigger responses during authentication or authorization. A response passes DN attributes, static text, or customized active responses from the SiteMinder policy server to a SiteMinder agent. When you configure SiteMinder to work with the Pulse Secure access management framework, you must create a rule that triggers when a user successfully authenticates. Then, you must create a corresponding response that passes the user's username to the system Web agent.

To create a new rule:

1. Select the Domain tab.
2. Expand the domain that you created and then expand Realms.
3. Right-click the realm that you created and select Create Rule under Realm.
4. Enter a name and (optionally) description for the rule.
5. Under Action, select Authentication Events and then select OnAuthAccept from the drop down list.
6. Select Enabled.
7. Click OK.

To create a new response:

1. Expand the domain that you created.
2. Right-click Responses and select Create Response.
3. Enter a name and (optionally) a description for the response.

4. Select SiteMinder and then select the Web agent.
5. Click Create.
6. From the Attribute list, select WebAgent-HTTP-Header-Variable.
7. Under Attribute Kind, select Static.
8. Under Variable Name, enter IVEUSERNAME.
9. Under Variable Value, enter a username.
10. Click OK.

Configuring Authentication with a SiteMinder Server

To configure authentication with SiteMinder server:

1. Select Authentication > Auth.Servers.
2. Select SiteMinder Server and click New Server to display the configuration page.
3. Complete the configuration as described in table below.
4. Save the configuration.

After you have saved the configuration, the page that is redisplayed includes an Advanced tab.

5. Click the Advanced tab to display the configuration page.
6. Complete the configuration as described in Table54.
7. Save the configuration.

Figure258: SiteMinder Server Configuration Page

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Auth Servers > New SiteMinder Server

New SiteMinder Server

*Name: Label to reference this server

*Policy Server: Name or IP address

Backup Server(s): Comma-delimited list of names or IP addresses

Fallback Mode? ☐ Yes ☒ No

*Agent Name: Name configured on Policy Server

*Secret:

Compatible with: 5.5 Policy Servers

On logout, redirect to: Included for backwards-compatibility. Please use the Custom Pages feature instead.

Protected Resource: Protected resource for authentication as configured on policy server (example: local_authentication)

Resource Action: GET Resource action for authentication as configured on policy server

☒ Users authenticate using tokens or one-time passwords

Server Catalog

✓ **SMOSESSION cookie settings**

When sending cookies to the end-user's browser:

*Cookie Domain: Example: .company.com

Protocol: ☒ HTTPS ☐ HTTP Use HTTP to send cookies for all protocols.

When setting cookies on the device:

*Pulse Policy Secure Cookie Domain: Example: .company.com

Protocol: ☐ HTTPS ☒ HTTP Use HTTPS to send cookies securely.

✓ **SiteMinder authentication settings**

☒ **Automatic Sign In**

Check if you want users with a valid SMOSESSION cookie to be automatically signed in.

To assign user roles, use this user authentication realm:

If Automatic Sign In fails, redirect to:

☒ Authenticate using custom agent

☐ Authenticate using HTML form post

☐ Delegate authentication to a standard agent

Save Changes **Reset**

Instances required field

Table53: SiteMinder Server Settings

| Settings | Guidelines |
|---|--|
| Name | Specify a name to identify the server within the system. |
| Policy Server | Specify name or IP address of the policy server. |
| Backup Server(s) | (Optional) Specify a comma-delimited list of backup policy servers. |
| Failover Mode? | <p>Select one of the following failover mode options:</p> <ul style="list-style-type: none"> • Yes—The device uses the main policy server unless it fails. • No—The device does the load balancing among all the specified policy servers. |
| Agent Name | Specify the agent name configured on the policy server. |
| Secret | Specify the shared secret configured on the policy server. The value is case sensitive. |
| Compatible with | <p>Select a SiteMinder server version.</p> <ul style="list-style-type: none"> • 5.5 Policy Servers—Supports version 5.5 and version 6.0. This is the default. • 6.0 Policy Servers—Supports only version 6.0 of the SiteMinder server API. • 12.0 Policy Servers—Supports only version 12.0. |
| On log out, redirect to | <p>Specify a URL to which users are redirected when they sign out of the device (optional). If you leave this field empty, users see the default sign-in page.</p> <p>The On log out, redirect to setting is included in the product release for backwards-compatibility. We strongly recommend that you use the customizable sign-in pages feature instead.</p> |
| Protected Resource | <p>Specify a default protected resource. If you do not create sign-in policies, the system uses this default URL to set the user's protection level for the session. The system also uses this default URL if you select the Automatic Sign-In option. If your users are signing in to the "*" URL (default device sign-in page), enter any URL ("/five-authentication" is the default) to set the protection level to the default value. If you do create sign-in policies, the device uses those sign-in policies instead of this default URL.</p> <p>You must enter a forward slash (/) at the beginning of the resource. For example, enter /local-authentication.</p> |
| Resource Action | Displays the resource action configured on the back-end SiteMinder server. |
| Users authenticate using tokens or one-time passwords | <p>Select this option if you want the device to prompt the user for a token instead of a password; that is, if users submit tokens or one-time use passwords to the device.</p> <p>For example, you can use this option to dynamically prompt for a password or token based on sign-in policies by configuring two instances of the same authentication server. You can use one instance for wireless users who have this option enabled and it prompts the user for a token, and another instance for wired users who have this option disabled and it prompts the user for a password.</p> |
| Server Catalog | Use the Server Catalog button to display the Server Catalog in a new window. Add the SiteMinder user attributes (such as the cookienam) that you want to use for role mapping. |
| SMSESSION cookie settings | |
| When sending cookies to the end-user's browser | <p>Specify the cookie domain for either the end user or the device. A cookie domain is a domain in which the user's cookies are active. For example, the system sends cookies to the user's browser in this domain.</p> <p>Multiple domains should use a leading period and be comma-separated. For example, .sales.myorg.com, .marketing.myorg.com.</p> <p>Domain names are case-sensitive. You cannot use wildcard characters</p> <p>Select HTTPS to send cookies securely if other Web agents are set up to accept secure cookies, or HTTP to send cookies nonsecurely.</p> |
| Cookie Domain and Protocol When the Cookie is Set on the Device | Enter the valid Internet domain for the cookie and where the browser of the user sends cookie contents. This cookie domain should be the same as the host domain. For example, .xyz.net |

| Settings | Guidelines |
|---|---|
| <p>Select HTTPS to send cookies securely if other Web agents are set up to accept secure cookies, or HTTP to send cookies non-securely.</p> | |
| SiteMinder authentication settings | |
| Automatic Sign In | <p>Select this option to automatically sign in users with a valid SMSESSION cookie. Then, select the authentication realm to which the users are mapped. If you select this option, note that:</p> <ul style="list-style-type: none"> • If the protection level associated with a user's SMSESSION cookie is different from the protection level of the realm, the protection level associated with the cookie is used. • This option uses SMSESSION cookie, which is already present in the browser to enable single sign-on. • This option provides a single sign-on experience for users. • This option enables users to sign in using a standard Siteminder Web Agent that generates an SMSESSION cookie. <p>When you select this option, you must also configure the following sub options:</p> <ul style="list-style-type: none"> • To assign user roles, use this user authentication realm—Select an authentication realm for automatically signed-in users. The users are mapped to a role based on the role mapping rules defined in the selected realm. • If Automatic Sign In fails, redirect to—Enter an alternative URL for users who sign in through the automatic sign-in mechanism. The users are redirected to the specified URL if the authentication fails and if there is no redirect response from the SiteMinder policy server. If you leave this field empty, users are prompted to sign back in. |
| Authenticate using custom agent | Select this option if you want to authenticate using the custom Web agent. Using this option, the system generates the SMSESSION cookie, just like any other Web agent configured within the organization. |
| Authenticate using HTML form post | <p>Select this option if you want to post user credentials to a standard Web agent that you have already configured rather than contacting the SiteMinder policy server directly.</p> <p>If you select this option, the Web agent contacts the policy server to determine the appropriate sign-in page to display to the user.</p> <p>To configure the system to “act like a browser” that posts credentials to the standard Web agent, you must enter the following information.</p> <ul style="list-style-type: none"> • Target—Specify the target URL. • Protocol—Specify the protocol for communication between the system and the specified Web agent. Select HTTP for non-secure communication. Select HTTPS for secure communication. • Webagent—Specify the name of the Web agent to obtain SMSESSION cookies. An IP address is not allowed for this field. (Specifying the IP address as the Web agent prevents some browsers from accepting cookies.) • Port— Specify the port for the protocol. Enter port 80 for HTTP or port 443 for HTTPS. • Path—Specify the path of the Web agent's sign-in page. The path must start with a backslash (/) character. In the Web agent sign-in page URL, the path appears after the Web agent. • Parameters— Specify the post parameters to be sent when a user signs in. Common SiteMinder variables that you can use include <code>__USER__</code>, <code>__PASS__</code>, and <code>__TARGET__</code>. These variables are replaced by the username and password entered by the user on the Web agent's sign-in page and by the value specified in the Target field. These are the default parameters for log in.fcc—if you have made customizations, you may need to change these parameters. |

| Settings | Guidelines |
|---|---|
| Delegate authentication to a standard agent | <p>Select this option to delegate authentication to a standard agent. When the user accesses the system sign-in page, the FCC URL associated with the protected resource's authentication scheme is determined. The system redirects the user to that URL, setting the system sign-in URL as the target. After successfully authenticating with the standard agent, an SMSESSION cookie is set in the user's browser and the user is redirected back. The system then automatically signs in the user and establishes a session.</p> <p>You must enable the Automatic Sign-In option to use this feature. If you enable this option and a user already has a valid SMSESSION cookie when trying to access a resource, the system tries to automatically sign in using the existing SMSESSION cookie. If the cookie is invalid, the SMSESSION cookie and corresponding system cookies are cleared and a "timeout" page is displayed. The system successfully delegates authentication when the user clicks the sign back in option. If you select this option, your authentication scheme must have an associated FCC URL.</p> |

Table54: SiteMinder Advanced Configuration Options

| Settings | Guidelines |
|---|--|
| Poll Interval (seconds) | Specify the interval at which the system polls the SiteMinder policy server to check for a new key. |
| Max. Connections | Control the maximum number of simultaneous connections that the system is allowed to make to the policy server. The default setting is 20. |
| Max. Requests/ Agent | Control the maximum number of requests that the policy server connection handles before the system ends the connection. If necessary, tune to increase performance. The default setting is 1000. |
| Idle Timeout (minutes) | Control the maximum number of minutes a connection to the policy server may remain idle (the connection is not handling requests) before the system ends the connection. The default setting of "none" indicates no time limit. |
| Authorize while Authenticating | <p>Specify that the system should look up user attributes on the policy server immediately after authentication to determine if the user is truly authenticated.</p> <p>For example, if your SiteMinder server authenticates users based on an LDAP server setting, you can select this option to indicate that the system should authenticate users through the SiteMinder server and then authorize them through the LDAP server before granting them access. If the user fails authentication or authorization, the user is redirected to the page configured on the policy server.</p> |
| Enable Session Grace Period | <p>Eliminate the overhead of verifying a user's SMSESSION cookie each time the user requests the same resource by indicating that the system should consider the cookie valid for a certain period.</p> <p>If you do not select this option, the system checks the user's SMSESSION cookie on each request. Note that the value entered here does not affect session or idle timeout checking.</p> |
| Validate cookie every N seconds (seconds) | Specify the time for the system to eliminate the overhead of verifying a user's SMSESSION cookie each time the user requests the same resource by indicating that the system should consider the cookie valid for a certain period. |
| Ignore Query Data | Specify that the system does not cache the query parameter in its URLs. Therefore, if a user requests the same resource as is specified in the cached URL, the request should not fail. |
| Accounting Port | Specify that the value entered in this field must match the accounting port value entered through the Policy Server Management Console in the Web UI. By default, this field matches the policy server's default setting of 44441. |
| Authentication Port | Specify that the value entered in this field must match the authentication port value entered through the Policy Server Management Console. By default, this field matches the policy server's default setting of 44442. |
| Authorization Port | Specifies that the value entered in this field must match the authorization port value entered through the Policy Server Management Console. By default, this field matches the policy server's default setting of 44443. |

Agent Configuration Settings

| Settings | Guidelines |
|------------------------------|--|
| Overlook Session for Methods | <p>Compare the request method to the methods listed in this parameter. If a match is found, Web Agent does not create a new or update an existing SMSESSION cookie, nor will it make any updates to the cookie provider for that request.</p> <p>You can enter multiple methods; use a comma to separate method names.</p> <p>If Overlook Session for Methods parameter is set but not Overlook Session for URLs, then all requests that match the methods defined in this parameter are processed (SMSESSION cookie creation/update is blocked).</p> <p>If both Overlook Session for Methods and Overlook Session for URL parameters are set, both the method and the URL of the request are matched before proceeding. Then, all URLs with specified methods are processed (SMSESSION cookie creation/update is blocked).</p> |
| Overlook Session for URLs | <p>Compare the request URL to the URLs listed in this parameter. If a match is found, Web Agent does not create a new or update an existing SMSESSION cookie, nor will it make any updates to the cookie provider for that request.</p> <p>Specify a relative URL. For example: If the URL is <code>http://fqdn.host/MyDocuments/index.html</code>, enter <code>/MyDocuments/index.html</code></p> <p>If Overlook Session for URLs is set but not Overlook Session for Methods, then all requests, regardless of the methods, matching the URLs defined in this parameter are processed (SMSESSION cookie creation/update is blocked).</p> <p>If both Overlook Session for Methods and Overlook Session for URL parameters are defined, both the method and the URL of the request are matched before proceeding. Then, all URLs with specified methods are processed (SMSESSION cookie creation/update is blocked).</p> |
| SiteMinder caching | |
| Flush Cache | Select this option to delete the resource cache, which caches resource authorization information for 10 minutes. |

Displaying the User Accounts Table

To display user accounts:

1. Click the link for the authentication server you want to manage.
2. Click the Users tab to display the user accounts table.

The user accounts table includes entries for the accounts that have been created. The Last Sign-in Statistic column shows the last successful sign-in date and time for each user, the user's IP address, and the agent or browser type and version.

3. Use the controls to search for users and manage user accounts:

- To search for a specific user, enter a username in the Show users named box and click Update.



TIP: You can use an asterisk (*) as a wildcard, where * represents any number of zero or more characters. For example, to search for all usernames that contain the letters jo, enter *jo*. The search is case-sensitive. To display the entire list of accounts again, type * or delete the field's contents and click Update.

- To limit the number of users displayed on the page, enter a number in the Show *N* users box and click Update.
- To terminate the user session and delete the account, select the check box next to the user account record and click Delete.

Troubleshooting the SiteMinder Server Configuration

| | |
|----------|--|
| Problem | Description: At some point, you may encounter problems configuring the eTrust SiteMinder server interactions with the Pulse Secure system. You can use the following debugging tools to identify and resolve problems: |
| Solution | <ul style="list-style-type: none">• Review the system log file. The system tracks failures of cookie validation and key rollovers.• Review the Policy Server Authentication log files.• Review the Standard Web Agent log file if you selected the Authenticate using HTML Form POST option.• Confirm that the system time is synchronized with the SiteMinder server system time. If the two system times are too divergent, the timeout settings might not function correctly, and might reject attempts to sign in.• In the SiteMinder server, confirm that you have defined the proper Session Timeout options max timeout and idle in the SiteMinder Realm dialog.• To view the CA SiteMinder error codes select System > Log/Monitoring > User Access page. For information on the CA SiteMinder error codes, see the SiteMinder documentation. |

Using an SQL Auth Server

This topic describes integration with the SQL Auth server. It includes the following information:

- [SQL Auth Server Overview](#)
- [Configuring Authentication with an Oracle SQL Auth Server](#)
- [Displaying the User Accounts Table](#)

SQL Auth Server Overview

This section describes support for using the SQL (also known as Oracle Database server) as a PPS authentication server. It includes the following sections:

- [Understanding SQL Auth Server](#)
- [Feature Support](#)
- [Interoperability Requirements and Limitations](#)

Understanding SQL Auth Server

The SQL Auth server is widely deployed in the enterprise. Some enterprises use the SQL Auth server to store user credentials (usernames and passwords), MAC addresses, and other organizational information, such as group affiliations that are often the basis for authorization decisions. To support authentication and authorization against SQL Auth server databases, PPS supports an authentication server configuration that configures an Oracle Instant Client connection as well as relevant queries to the backend SQL Auth server.

Feature Support

Policy Secure uses Oracle Instant Client 11.2.0.2.0 to communicate with the SQL Auth server. The SQL Auth server version must support this version of the client. The Pulse Secure access management framework depends on the SQL Auth server features described in this section.

- [SQL SELECT Statements](#)
- [SQL Stored Procedures](#)
- [SQL Format Specifiers](#)
- [SQL Statement Parameters](#)
- [SQL Password Hash Format](#)

You can use the SQL queries for authentication, authorization and role mapping, or both.

SQL SELECT Statements

The authentication transaction is based on an SQL query that returns a password (and possibly other information) based on the name entered by the user attempting to log in.

While a sample SQL query is provided in the original configuration file, you must configure the SQL entry of the configuration file with a query appropriate to your database. The query you enter must be either an SQL SELECT or an SQL EXECUTE statement that contains additional syntax elements that are preprocessed by the SQL authentication module.

The SQL authentication module executes SQL statements in parameterized form. This means that the SQL statement is compiled once, with parameter markers (usually question marks) as placeholders for data items that vary from one execution to the next. Only upon execution of the statement are the actual data values supplied.

The SQL statement you compose must not include parameter markers directly. Instead, include the names of the parameters where parameter markers would appear, in an appropriate format.

This is an example of a parameter marker:

```
SELECT password, profile, fullname FROM usertable WHERE username = :username
```

The SQL authentication module translates the SQL statement provided, replacing parameter names with parameter markers prior to passing the SQL statement to the database engine.

The SQL statement can be very simple. Basically, all that is required is to look up a password and possibly some optional information based on a username. The SQL statement can also be quite complex; it can include inner joins, and it can contain expressions. The underlying database engine is responsible for handling the SQL statement; the SQL authentication module performs no interpretation of the SQL statement other than to translate parameter names to parameter markers.

SQL Stored Procedures

A stored procedure is a sequence of SQL statements that form a logical unit and perform a task. You can use stored procedures to encapsulate a set of queries or operations that can be executed repeatedly on a database server. For example, you can code operations on an employee database, such as password lookup, as stored procedures that can be executed by application code. Stored procedures can be compiled and executed with different parameters and results. Stored procedures can use any combination of input parameters (the values passed to the stored procedure at execution time) and output parameters (the values set or returned by the stored procedure to the calling application or environment).

This is an example of a called procedure:

```
BEGIN; myCalledProcedure( :username, :password!os, ipAddr!ios, filterId!o); END;
```

As shown in the example, the procedure is called myCalledProcedure with input variables as name and ipAddr, output parameters as password, ipAddr, and filterId. The names of the output parameters are the names of the attributes added to the server catalog used for role mapping and return attributes. The parameter consists of a colon (:), the name of the parameter, and a format specifier.

SQL Format Specifiers

The below table describes the SQL statement format specifiers with parameters in called procedures.

Table55: SQL Statement Format Specifiers

| Specifier | Definition |
|-----------|--|
| i | Input parameter (Default if none is specified) |
| io | Input/output parameter |
| o | Output parameter |
| s | String type (default if none is specified) |
| n | Int type |

SQL Statement Parameters

The below table describes the SQL statement parameter names and types.

Table56: SQL Statement Parameter Names and Types

| Item | Type | Meaning for SQL Authentication |
|-------------------|--------|--|
| :username | String | Specifies the username as presented to the authentication server. |
| :password | String | Specifies the password as presented to the authentication server. |
| :realm | String | Specifies the realm as presented to the authentication server. |
| :ipAddr | String | Specifies the source IP address (L3 authentications only), which is sent as a string. For example, 10.17.1.155. |
| :userAgent | String | Specifies the user agent string. |
| :log inTime | Int | Specifies the log in time presented in the number of seconds. |
| :log inURL | String | Specifies the user URL of the sign-in policy of the user. |
| :callingStationId | String | Specifies the MAC address of the client presented as xx-xx-xx-xx-xx-xx for L3 authentications and in the format specified by the RADIUS client for L2 authentications. |
| :language | String | Specifies the language used by client as specified by IETF language tag. For example, en-US for English as used in the United States. |

SQL Password Hash Format

The below table describes the different SQL password types.

Table57: Password Hash Format

| Hash/Name | Definition | Password Format | Supported RADIUS Protocols |
|------------|---|-------------------|--|
| Automatic | Automatically determines hash format based on Format. | All | |
| Clear Text | No Encryption | PasswordText | PAP, CHAP, MSCHAP, MSCHAP-V2, EAP-JUAC, EAP-MSCHAP-V2, EAP-MD5-Challenge |
| SHA 1 | SHA1+Base64 hash | {SHA}HashHashHash | PAP, EAP-JUAC |

| Hash/Name | Definition | Password Format | Supported RADIUS Protocols |
|--------------|--|------------------------|---|
| Salted SHA 1 | salted SHA1+Base64 hash | {SSHA}HashHashHashSalt | PAP, EAP-JUAC |
| NT Hash** | MD4 hash of the unicode form of password | {md4}HashHash | PAP, MSCHAP, MSCHAP-V2, EAP-JUAC, EAP-MSCHAP-V2 |

Interoperability Requirements and Limitations

The following limitation applies when defining and monitoring an SQL Auth server instance:

- The maximum number of connections to an Oracle database is limited to 50 connections for L2 and L3 log ins (concurrent and open RADIUS protocol), without any browser log ins.
- You must enter the SQL keywords in uppercase letters.

Configuring Authentication with an Oracle SQL Auth Server

To configure authentication with an SQL Auth server:

1. Select **Authentication > Auth.servers**.
2. Select SQL Auth Server and click New Server to display the configuration page.
3. Complete the configuration as described in **Table58**.
4. Save the configuration.

Figure259: SQL Auth Server Configuration Page

The screenshot shows the 'New SQL Auth Server' configuration page in the Pulse Secure interface. The page is divided into several sections with input fields and buttons. The top navigation bar includes 'Systems', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and ' Wizards'. The main content area has a 'New SQL Auth Server' title. Fields include 'Name', 'SQL Auth Server', 'SQL Port' (default 1521), 'Backup SQL Auth Server', 'Backup SQL Port', 'SQL Service Name', 'Admin', 'Password', 'Connection Timeout' (default 15), 'Search Timeout' (default 15), and 'SQL Vendor' (set to Oracle). There are sections for 'Finding user entries' with fields for 'SQL Statement', 'Password Attribute Name', 'Full Username Attribute Name', and 'SQL Password Type'. A 'Test User Login' section is also present. Buttons for 'Display', 'Save Changes', and 'Reset' are at the bottom.

Table58: SQL Auth Server Settings

| Settings | Guidelines |
|-------------------------|--|
| Name | Specify a name to identify the server within the system. |
| SQL Auth Server | Specify the SQL Auth server host name or IP address. The default value is 1521. |
| SQL Port | Specify the SQL port number through which the SQL Auth server is accessed. |
| Backup SQL Auth Server | (Optional) Specify the backup SQL Auth server host name. |
| Backup SQL Port | (Optional) Specify the backup SQL port number. |
| SQL Service Name | (Optional) Specify the SQL service name if SQL service name has been defined in the SQL Auth server configuration. |
| Admin | Specify the administrator username. |
| Password | Specify the password. |
| Connection Timeout | Specify the connection timeout value from 5 to 60 seconds. If this time is exceeded, and if there is a backup server defined, then the device attempts to reach the backup server. |
| Search Timeout | Specify the search timeout value from 5 to 60 seconds. It specifies the maximum amount of time the device will wait for the SQL Auth server to return search results. |
| SQL Vendor | Select Oracle. Read and accept the license agreement. You cannot save or test the configuration until you have accepted the license agreement. |
| Finding user entries | |
| SQL Statement | Specify the SQL statement to find the user entries. For example: SELECT password FROM usertable WHERE username = :username AND realm = :realm NOTE: You must enter the SQL keywords in uppercase letters. |
| Password Attribute Name | Specify the attribute name specified in the SQL statement that the device uses for password authentication. If the username that is entered exists in the database, then the authentication succeeds. If you are using the SQL Auth server for authorization, no password is necessary here. |

| Settings | Guidelines |
|---|---|
| Full Username Attribute Name | (Optional) Specify the attribute name specified in the SQL statement for the system to use when displaying the user's full name. |
| SQL Password Type | <p>Select one of the following SQL password types:</p> <ul style="list-style-type: none"> • Automatic • Clear Text • SHA 1 • Salted SHA 1 • NT Hash <p>The SQL password type setting specifies the format of the hash used for the password. The values for the SQL password type include a prefix index that indicates how the password has been processed. The prefix is in clear-text between curly braces { } and is immediately followed by a hash value computed from the password. If no prefix is present in the value retrieved from the table Password column, the entire password is assumed to be in clear-text format.</p> |
| Test User Lookup | |
| Select Statement Values | <p>Enter the attributes necessary to fill in the WHERE part of the SQL statement and click the Test Connection button to save the server configuration and attempt to connect to the database server with the information you have entered.</p> <p>Upon a successful connection and retrieval of the user record, the server displays the results. It displays the entire returned user record (hiding the password) from the SELECT portion of the SQL statement. An error line is displayed if the connection to the SQL Auth server fails or if the user record could not be retrieved. The user record is displayed in the following format: attribute Name1 = value, attribute name2 = value, and so on.</p> <p>NOTE: When trying to populate the server catalog attributes for the SQL Auth server, you must enter data into all columns of interest for a record. Columns that are not assigned data are ignored during the lookup and are therefore not added appropriately to the server catalog.</p> |
| Save SQL Column Names or Called Procedure variable names as Attribute names in the Server Catalog | Select this option to use the SQL query statement variables as server catalog attributes. You can use the server catalog in role mapping rules. |
| Server Catalog | |
| Attributes | The Attributes button appears after you have saved the server information or performed a test connection operation. Click the Attributes button to display the server catalog. |

Troubleshooting Oracle Error Codes

The below table describes the Oracle error codes, cause, and action.

Table59: Oracle Error Codes

| Error code | Cause | Action |
|--|---------------------------------------|--|
| ORA-00018: maximum number of sessions exceeded | All session state objects are in use. | Increase the value of the SESSIONS initialization parameter. |
| ORA-00019: maximum number of session licenses exceeded | All licenses are in use. | Increase the value of the LICENSE MAX SESSIONS initialization parameter. |
| ORA-00020: maximum number of processes (string) exceeded | All process state objects are in use. | Increase the value of the PROCESSES initialization parameter. |

Network Device Administration using TACACS+

- [Overview](#)
- [Configuration](#)
- [Monitoring Device Administration](#)
- [Troubleshooting](#)
- [Appendix](#)


Overview

The network device administrators are required to configure and maintain the network devices such as switches, wireless access points, routers, and gateways. PPS supports configuring and coordinating the network devices through PPS Admin UI.

The administrator implements policies to determine who can login to a network device console, telnet session, secure shell (SSH) session to manage each device, what level of privilege do they have, what operations they can run (that is, the commands the admin user is permitted to run on the device) and also audit all the actions taken.

Managing these policies separately on each device is not just unmanageable but can lead to security incidents or errors that result in loss of service and network downtime due to undesired access. Most compliance requirements and security standards require using standardized tools to centralize authentication for administrative management.

Figure: TACACS+ Overview

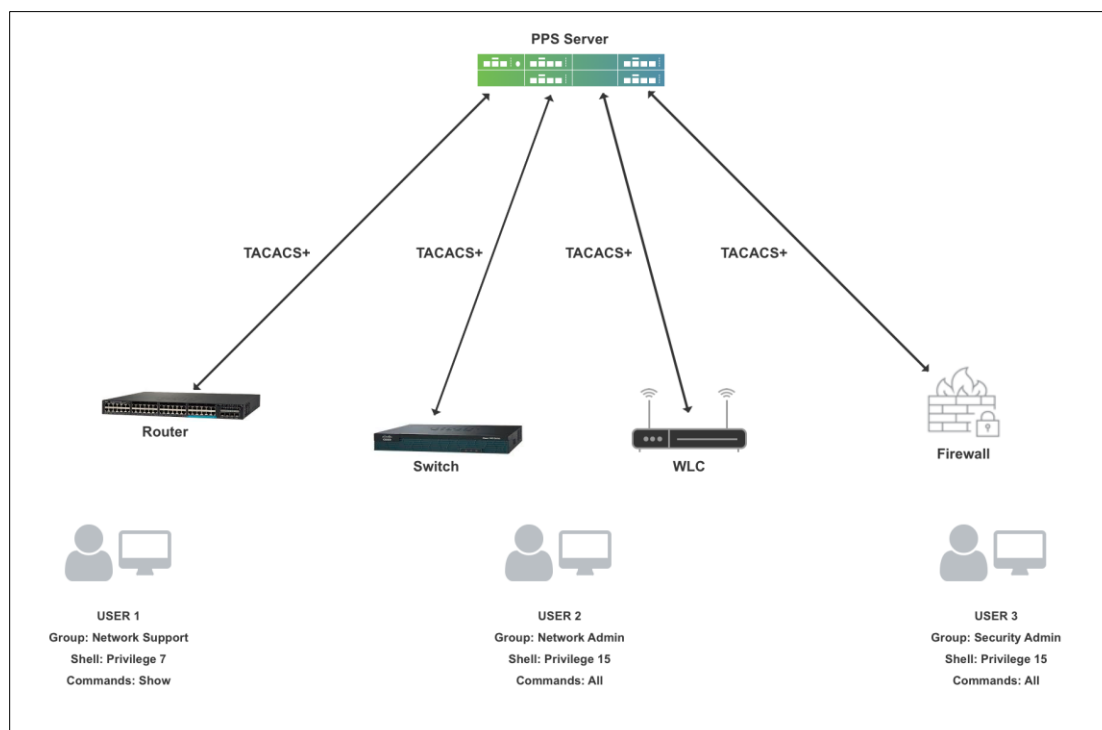

The above deployment consists of 3 types of administrators:

- User1 - This admin belongs to Network Support Group and can only access show commands on router, switches and access points. The admin has no access to Firewall.
- User2 - This admin belongs to Network Admin Group and can access all commands on routes, switches and access points. The admin has no access to Firewall.
- User3- This admin belongs to Security admin group and an firewall administrator and does not have access to routers, switches and access points.

A large company will have many devices from different vendors. It requires administrators to manage the network with many hierarchical levels.

Without a centralized server for administration, every time a new device is deployed, several admin accounts needs to be created on the new device to assign the required privilege for each of the admin. Similarly, if a new admin onboards an functional organization, the account needs to be created on thousands of devices.

With PPS acting as a centralized server for device administration using TACACS+, a new admin can just be mapped to required group. A new Admin account can be configured either locally on PPS or any external servers such as AD, LDAP and so on. Similarly, when a new device is purchased, the only configuration is configuring PPS as a centralized server for device administration on device.

Licensing

TACACS+ user login does not consume any user license however either POLSEC license or Profiler license is required to be installed.

Authentication

Provides complete control of authentication through login and password.

Authorization

Provides fine-grained control over user capabilities for the duration of the user's session, which includes idle time-out, session duration. You can enforce restrictions on what commands a user may execute by configuring the privilege level for administrators. Within the privilege-level, further control can be forced by specifying command or regex match.

PPS supports 2 types of authorization techniques for administrators:

- Exec authorization- This determines a user's privilege level when they are authenticated. The admins can run the commands, which are allowed in the user's privilege level.
- Command authorization- TACACS+ command authorization provides centralized control of the commands available to PPS admin user. In this, every command is sent to PPS for authorization and command is permitted after getting authorized by PPS.
 - A Telnet, SSH, or console interface user who is previously authenticated by PPS using TACACS+ enters a command on the device.
 - The network device looks at its configuration to see if the command is at a privilege level that requires TACACS+ command authorization.
 - If the command requires authorization, the device consults the PPS to see if the user is authorized to use the command.
 - If the user is authorized to use the command, the command is executed.

Accounting

Collects and sends information used for auditing to the TACACS+ server. Network device administrators can use the accounting facility to track user activity for a security audit or to provide information for user billing. Accounting records include user identities, start and stop, executed commands.

Configuration

- Configuring Admin Role
- Configuring Admin Realm
- Configuring Device Group
- Configuring TACACS+ Client
- Configuring Shell Policies
- TACACS+ Command Sets
- Monitoring Device Administration
- Troubleshooting
- Appendix

Configuring Admin Role

Admin role enables you to define granular administrative access privileges. For example, an organization would require multiple admin roles with different privilege levels to ensure protection from sensitive company information.


To create an Admin role for TACACS+:

1. Select **Administrators > Admin Roles > New Admin Role**. Enter a role name. You can create multiple admin roles with different privilege levels. For example, `tac_admin_role`

Figure: TACACS+ Admin Role


The screenshot shows the Pulse Secure web interface. The top navigation bar includes the Pulse Secure logo and tabs for System, Authentication, Administrators (selected), Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail is Admin Roles > tac_admin_role > General > Overview. The main content area has tabs for General (selected), System, Users, Administrators, and Resource Policies. Under the General tab, there are sub-tabs for Overview (selected), Restrictions, Session Options, and UI Options. The Overview sub-tab shows a form with a Name field containing 'tac_admin_role' and an empty Description field. Below the form is a 'Save Changes' button. A section titled 'Options' is expanded, showing two checked items: 'Session Options' and 'UI Options', each with an '(Edit)' link. A note states: 'Session and appearance options are specified in Default Options. Check the following if this role should override these defaults.'

2. Under Session Options, specify the following attributes:
 - **Idle Time-out** - If no input is received or sent in the period specified, the session is disconnected.
 - **Max session length**- It specifies the maximum length of time that the session can exist. After this value has expired, the session gets disconnected.

 **Pulse Secure**

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure

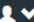

Admin Roles > tac_admin_role > General > Session Options

Session Options

GeneralSystemUsersAdministratorsResource Policies

OverviewRestrictionsSession OptionsUI Options

Save Changes

▼ Session lifetime

*Idle Timeout: minutes (min: 5)

*Max. Session Length: minutes (min: 6)

Configuring Admin Realm

An authentication realm defines the authentication server with which end user is authenticated and the list of restrictions that must be satisfied on the client machine during sign-in. It also provides role mapping option to administrators for configuring the list of roles that needs to be assigned to the user. Role mapping provides flexibility to administrators in configuring how different set of roles need to be assigned to the user.

An admin can configure multiple admin realms when different authentication servers are required for authentication for different devices. Admin's can also use different backend servers for managing different device groups.

Create an Authentication realm and then associate the authentication server to it.

1. Select Administrators > Admin Realms > New Authentication Realm.
2. Under Servers, specify the Authentication server (AD, LDAP, Local, or RSA (ACE Server). For more information, see AAA Servers.

Figure: TACACS+ Admin Realm

The screenshot displays the Pulse Secure web interface for configuring an Admin Realm. The breadcrumb trail at the top reads "Admin Realms > tac_admin_realm > General". The "General" tab is selected, showing fields for "Name" (set to "tac_admin_realm") and "Description". A checkbox "When editing, start on the Role Mapping page" is present. The "Servers" section contains dropdown menus for "Authentication" (System Local), "Directory/Attribute" (None), and "Accounting" (None). The "Dynamic policy evaluation" section has an unchecked checkbox "Enable dynamic policy evaluation". The "Other Settings" section shows "Authentication Policy" and "Role Mapping" as links, and "Password restrictions" as "1 Rule". A "Save Changes" button is at the bottom.

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Admin Realms > tac_admin_realm > General

General Authentication Policy Role Mapping

* Name: tac_admin_realm Label to reference this realm

Description:

☐ When editing, start on the Role Mapping page

▼ Servers

Specify the servers to use for authentication and authorization. To create or manage servers, see the [Servers](#) page.

Authentication: System Local Specify the server to use for authenticating users.

Directory/Attribute: None Specify the server to use for authorization.

Accounting: None Specify the server to use for Radius accounting.

▼ Dynamic policy evaluation

☐ Enable dynamic policy evaluation

▼ Other Settings

Authentication Policy: Password restrictions: 1 Rule

Role Mapping:

Save Changes

3. Configure any Admin role restrictions. For example, Source IP restriction.

Note: Browser, Host Checker, Certificate restrictions are not supported with TACACS+.

Pulse Secure System Authentication **Administrators** Users Endpoint Policy Maintenance Wizards

Admin Roles > tac_admin_role > General > Restrictions > Source IP

Source IP

General System Users Administrators Resource Policies

Overview **Restrictions** Session Options UI Options

Source IP Browser Certificate Host Checker

☐ Allow users to sign in from any IP address
☒ Allow or deny users from the following IP addresses:

| IPv4/v6 Address | Netmask/Prefix Length | Allow/Deny | |
|---|-----------------------|---|------------------------------------|
| <input type="text"/> | <input type="text"/> | <input checked="" type="radio"/> Allow <input type="radio"/> Deny | <input type="button" value="Add"/> |
| <input checked="" type="checkbox"/> 10.204.89.239 | 255.255.255.0 | Allow | |

Note: This restriction will not allow access to the role if no IP addresses are listed. Add one or more source IP addresses from which users are allowed to sign in or denied access.

- Set the role mapping rules. For example, create a rule to assign all users with username as tac_user to tac_admin_role.

Figure: TACACS+ Admin Realm

Pulse Secure System Authentication **Administrators** Users Endpoint Policy Maintenance Wizards

Admin Realms > tac_admin_realms > Role Mapping > Role Mapping Rule

Role Mapping Rule

Rule based on:

* Name:

▼ Rule: If username...

If more than one username should match, enter one username per line. You can use * wildcards.

▼ then assign these roles

Available Roles:


- .Administrators
- .Read-Only Administrators

Selected Roles:

- tac_admin_role

☐ Stop processing rules when this rule matches

To manage roles, see the [Roles](#) configuration page.

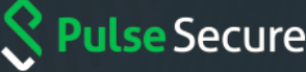

Pulse Policy Secure

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Admin Realms > tac_admin_realms > Role Mapping

Role Mapping

GeneralAuthentication PolicyRole Mapping

Specify how to assign delegated admin roles to users when they sign in. Users that are not assigned a role will not be able to sign in.

New Rule...DuplicateDeleteUpDown

Save Changes

| | | When users meet these conditions | | assign these roles | Rule Name | S |
|--------------------------|----|----------------------------------|---|--------------------|-----------|---|
| <input type="checkbox"/> | 1. | username is "tac_user" | → | tac_admin_role | tac_rule | |
| | | | | | | |

When more than one role is assigned to a user:

☒ Merge settings for all assigned roles
☐ User must select from among assigned roles
☐ User must select the sets of merged roles assigned by each rule

Note: Users that do not meet any of the above rules will not be able to sign into this realm.

Note: Role mapping rule execution is based on the order of the rules.

Configuring Device Group

The device groups are created in a heterogeneous network where there are devices from multiple vendors with different command set. Devices with same command syntax are grouped so that it is easy to manage. PPS considers each group as a single unit while applying the shell policies.

For example, if your deployment has devices from multiple vendors, you can group them into multiple device groups based on their command syntax. Similarly, you can also create different device groups based on whether the device is a WLC/Switch.

To create a device group:

1. Select Endpoint Policy > Network Device Administration > Device Group.
2. Enter the name and description of the device group
3. Associate the previously created Admin Realm with the device group.
A device group policy logically groups network devices by associating the devices with specific admin realm.
4. Click Save Changes.

Figure: TACACS+ Device Group

The screenshot displays the Pulse Secure web interface for configuring a device group. The top navigation bar includes the Pulse Secure logo and links for System, Authentication, Administrators, Users, Endpoint Policy (highlighted), Maintenance, and Wizards. The breadcrumb trail shows 'Network Device Administration > Device Group > tacacs_device'. The main content area is titled 'tacacs_device' and 'Device Group'. It contains three form fields: 'Name' (pre-filled with 'tacacs_device'), 'Description' (empty), and 'Admin Realm' (a dropdown menu with 'tac_admin_realm' selected). A 'Save Changes' button is located at the bottom left. A note next to the Admin Realm field states: 'To manage realm, see the [Admin Realms](#)'.

Configuring TACACS+ Client

A TACACS+ client policy specifies the information required for the device to connect to Pulse Policy Secure for admin access control. You can add the network devices as TACACS+ clients for the administrator to manage. PPS allows you to configure an IP address range for TACACS+ clients.

To create a TACACS+ client:

1. Select Endpoint Policy > Network Device Administration > TACACS+ Clients > New TACACS+ Client.
2. Enter a name for the TACACS+ client.
3. Enter a description.
4. Enter the IP address of the client.
5. Enter the IP address range for the TACACS+ clients.
6. Enter the shared secret.
7. Select the device group from the drop down.
8. Click Save Changes.

Figure: TACACS+ Client

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Network Device Administration > TACACS+ Client > cisco_switch

cisco_switch

▼ TACACS+ Client

| | | |
|---------------------|--|--|
| * Name: | <input type="text" value="cisco_switch"/> | Label to reference this TACACS+ Client. |
| Description: | <input type="text"/> | |
| * IP Address: | <input type="text" value="10.204.88.10"/> | IP Address of this TACACS+ Client. |
| * IP Address Range: | <input type="text" value="1"/> | Number of IP Addresses for this TACACS+ Client |
| * Shared Secret: | <input type="password" value="*****"/> | TACACS+ shared secret |
| * Device Group: | <input type="text" value="tacacs_device"/> | To manage groups, see the Device Group |

[Save Changes](#)

Note: PPS does not support adding IPv6 TACACS+ clients.

Configuring Shell Policies

Define the Policies for the Admin Role and the corresponding Device Group. The Policies should be mapped with the selected Admin Roles and the Device Group.

To configure shell policies:

1. Select Endpoint Policy > Network Device Administration > Shell Policies.
2. Enter the name of the policy.
3. Enter the description.
4. Under Device Group, select the Device Group.
 - **Policy Applies to all groups-** If you select this option, the shell policy is applied to all the device groups.
 - **Policy Applies to selected groups-** If you select this option, the shell policy is applied only to the selected device group.
5. Under Shell Policy, Enter the Default and the Maximum Privilege level (1-15).
6. Under Command Set, Enter the command, arguments, and the action (permit/deny) for the Admin. If it doesn't match any rule it takes the default action:
 - Deny any command that does not hit any of the rule
 - Permit any command that does not hit any of the rule
7. Under, Roles select the Admin Role.
 - **Policy Applies to all roles-** If you select this option, the shell policy is applied to all the admin roles.
 - **Policy Applies to selected roles-** If you select this option, the shell policy is applied only to the selected admin role.
 - **Policy Applies to all roles other than the selected role-** If you select this option, the shell policy is applied to all the admin roles other than the selected role.
8. Click Save Changes.

Figure: TACACS+ Shell Policy

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure

Network Device Management > Shell Policies > tacacs_policy

tacacs_policy

New Shell Policy

* Name:

tacacs_policy

Label to reference this policy.

Description:

Device Group

☒ Policy applies to ALL groups

☐ Policy applies to SELECTED groups

Available Device Groups:

Default

Add ->

Remove

Selected Device Groups:

tacacs_device

Shell Policy

* Default Privilege

15

Shell Privilege Levels supported

* Maximum Privilege

15

Command Set

Delete

| | Command | Arguments | Action | |
|--------------------------|-------------|--------------------------|-------------------|----------------|
| | <div></div> | <div></div> | <div>permit</div> | <div>Add</div> |
| <input type="checkbox"/> | show | ver[a-z]*on | permit | |
| <input type="checkbox"/> | menu | | deny | |
| <input type="checkbox"/> | show | device-[a-z]* st[a-z]*us | permit | |

☒ Deny any command that does not hit any of the rule in the table above

☐ Permit any command that does not hit any of the rule in the table above

Roles

☐ Policy applies to ALL roles

☒ Policy applies to SELECTED roles

☐ Policy applies to all roles OTHER THAN those selected below

Available roles:

.Administrators

.Read-Only Administr

Add ->

Remove

Selected roles:


tac_admin_role

Save Changes

The below page is displayed after configuring the shell policy.

© 2019 by Pulse Secure, LLC. All rights reserved

493



SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure

Network Device Management > Shell Policies

Shell Policies

Device GroupsTACACS+ ClientsShell Policies

New PolicyDuplicateDeleteUpDownSave Changes

10 records per pageSearch:

| | | Name | Device Group | Default Privilege | Maximum Privilege | Command | Applies to |
|--------------------------|---|-------------------------------|--------------|-------------------|-------------------|---|----------------|
| <input type="checkbox"/> | 1 | tacacs_policy | All | 15 | 15 | show ver[a-z]*on menu show device-[a-z]* st[a-z]*us | tac_admin_role |

TACACS+ Command Sets

Command sets consists of a specific list of commands that can be executed by a network device administrator. PPS determines whether the administrator is authorized to execute these commands based on the privilege level configuration.

Regex (Wildcards)

A command line comprises the command and zero or more arguments. When PPS receives a command line (request), it handles the command and its arguments in different ways. It matches the command in the request with the command specified.

For example, Show device-[a-z]* st[a-z]*us

This command has 2 arguments.

- Argument 1 – device-[a-z]*
- Argument 2 – st[a-z]*us

The command arguments in the request are taken based on the order. After the command and arguments match to any of the command set based on the order corresponding action (permit/deny) is taken by PPS.

If command doesn't match with the any of the command set configured then default action will be taken. The default action taken can be:

- Deny any command that does not hit any of the rule
- Permit any command that does not hit any of the rule

Multiple command Sets

PPS checks all the commands in the command set sequentially for the first match.

It compares the command name from the network device with the exact command configured in the command set.

If the command matches and there are no arguments from device group

1. There are no arguments to match from device as well as no arguments configured, then the command set is considered as match
2. There are no arguments from device group but arguments are configured, then it's a no match
3. If arguments are sent by device group, then it is compared with regex pattern configured in arguments of the command set.

If argument is matched, then command set is considered as a match, and corresponding action is taken.

- If the first match has action as Permit, PPS designates the command set as Permit.
- If the first match has Deny, PPS designates the command set as Deny.

If the command doesn't match with any of the command set configured one of the below default action is taken.

PPS checks all the commands in the command set sequentially for the first match.

- Deny any command that does not hit any of the rule.
- Permit any command that does not hit any of the rule.

If there are many profiles then the first matching profile is applied.

Monitoring Device Administration

PPS provides various logs that allow you to view information related to accounting, authorization, and command accounting of devices configured with TACACS+.

General recommendation – For recovery purposes, it is suggested to have a local backup account. The console login should be redirected to local.

To monitor device administration:

Select System > Log Monitoring > Admin Access:

1. To enable Accounting, you must click the checkbox for **TACACS+ Accounting messages**.
2. To enable authorization, you must click the checkbox for **TACACS+ Authorization messages**.

Figure: TACACS+ Device Administration

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'Pulse Secure', 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'Log/Monitoring > Admin Access > Log settings'. The 'Log settings' page has tabs for 'Events', 'User Access', 'Admin Access' (selected), 'Sensors', 'Client Logs', 'SNMP', 'Statistics', and 'Advanced Settings'. Under the 'Admin Access' tab, there are sub-tabs for 'Log', 'Settings', and 'Filters'. The 'Settings' sub-tab is active. It contains a 'Save Changes' button and a 'Reset' button. Below these are sections for 'Maximum Log Size' (set to 200 MB) and 'Select Events to Log'. The 'Select Events to Log' section has a red box highlighting the checkboxes for 'TACACS+ Accounting messages' and 'TACACS+ Authorization messages', both of which are checked. Other visible checkboxes include 'Administrator changes', 'License Changes', and 'Administrator logins'. A 'Syslog Servers' section is also visible at the bottom.

Troubleshooting

PPS provides logging and monitoring capabilities to help you track events and user activities. The system generates event logs related to system performance, administrator actions, network communications, access management framework results, user sessions, and so forth.

The available logs, includes:

- Event Logs- This file contains a variety of system events, such as session timeouts, systems errors and warnings, server restart notifications and connectivity requests.
- Admin Access Logs- This file contains administration information, including administrator changes to user, system and network settings, such as changes to session timeouts, license changes and so on.

TACACS+ Event and Admin Logs

Event Logs

1. Logging when count of TACACS+ connection reached system limit.

Minor – Limit of <max count> TACACS+ concurrent users reached

| | | |
|-------|--------------------------|---|
| Minor | TAC31628 | 2018-01-31 14:40:48 - ic - [127.0.0.1] System() - Limit of 2 TACACS+ concurrent users reached |
|-------|--------------------------|---|

2. Dropping the incoming TACACS+ connection because received from unknown host.

Major - TACACS+ request received from unknown TACACS+ client <switch IP>

| | | |
|-------|--------------------------|--|
| Major | TAC31629 | 2018-01-31 14:37:54 - ic - [127.0.0.1] System() - TACACS+ request received from unknown client 10.204.89.239 |
|-------|--------------------------|--|

3. Dropping the incoming TACACS+ connection due to shared-secret mismatch.

Minor - Invalid TACACS+ packet from <switch IP>, discarding.

| | | |
|-------|--------------------------|---|
| Minor | TAC31628 | 2018-01-31 14:35:58 - ic - [127.0.0.1] System() - Invalid TACACS+ packet from 10.204.89.239, discarding. Incorrect shared secret? |
|-------|--------------------------|---|

Admin Access Logs

1. Exec Authorization [Only when Authorization is enabled under authorization setting]

- Log for exec authorization success

TACACS+ Shell authorization successful for <user> on switch-<switch ip> and attributes are: privilege = %d, idle-timeout = %d, session-timeout = %d

| | | |
|------|--------------------------|---|
| Info | TAC31611 | 2018-01-30 18:59:03 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [tac_admin_role] - 'TACACS+ Shell authorization successful for tac_user on 10.204.89.239 and attributes are: privilege = 15, idle-timeout = 5, session-timeout = 60' |
|------|--------------------------|---|

- Log for exec authorization failure due to no shell policy assigned to roles.
TACACS+ Shell authorization rejected for <user> on switch-<switch ip>. Reason- %s
Reasons- No session found
No Shell policy found for the assigned roles

| | | |
|------|--------------------------|---|
| Info | TAC31612 | 2018-01-30 19:06:45 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm)[tac_admin_role] - 'TACACS+ Shell authorization rejected for tac_user on 10.204.89.239. Reason: No Shell policy found for the assigned roles' |
|------|--------------------------|---|

2. Command authorization [Only when Authorization is enabled under authorization setting]

- Log for command authorization success.
TACACS+ Authorization successful for command-%s from <user> on switch-<switch ip>

| | | |
|------|--------------------------|---|
| Info | TAC31611 | 2018-01-30 19:08:14 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm)[tac_admin_role] - 'TACACS+ Authorization successful for command-'show version' from tac_user on 10.204.89.239' |
|------|--------------------------|---|

- Log for command authorization failure due to no shell policy assigned to roles or due to deny under command set.
TACACS+ authorization rejected for command-<cmd> from <user> on switch-<switch ip>. Reason- %s
Reasons- . No session found

| | | |
|------|--------------------------|---|
| Info | TAC31612 | 2018-01-30 19:37:02 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm)[tac_admin_role] - 'TACACS+ authorization rejected for command-'show version' from tac_user on 10.204.89.239. Reason- No session found' |
|------|--------------------------|---|

- No Shell policy found for the assigned roles
- Matched with the rule – [command = %s, Arguments = %s, action = %s] in shell policy-%s

| | | |
|------|--------------------------|---|
| Info | TAC31612 | 2018-01-30 19:11:31 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm)[tac_admin_role] - 'TACACS+ authorization rejected for command-'menu ' from tac_user on 10.204.89.239. Reason- Matched with the rule – [command = menu, Arguments = null, action = deny] in shell policy-tacacs_policy' |
|------|--------------------------|---|

- No match found. Default action is deny in shell policy-%s

| | | |
|------|--------------------------|--|
| Info | TAC31612 | 2018-01-30 19:12:31 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm)[tac_admin_role] - 'TACACS+ authorization rejected for command-'display arp' from tac_user on 10.204.89.239. Reason- No match found. Default action is 'deny' in shell policy-tacacs_policy' |
|------|--------------------------|--|

3. Login Authentication: [Only when Administrator login is enabled under admin access setting]

- Login Success

| | | |
|------|--------------------------|---|
| Info | AUT30684 | 2018-01-30 18:59:02 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [] - Primary authentication successful for tac_user/System Local from 10.204.59.223(Shell login to 10.204.89.239). |
|------|--------------------------|---|

- Login failure due to authentication failure.

| | | |
|------|--------------------------|--|
| Info | AUT23458 | 2018-01-30 19:15:10 - ic - [10.204.59.223] tac_user(tac_admin_realm) [tac_admin_role] - Login failed using auth server System Local (Local Authentication). Reason: Failed |
|------|--------------------------|--|

- Login failure due to restrictions.

| | | |
|------|--------------------------|--|
| Info | AUT23458 | 2018-01-30 19:04:23 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [tac_admin_role] - Login failed. Reason: No Roles |
|------|--------------------------|--|

- Login failure due to no role available.

| | | |
|------|--------------------------|--|
| Info | AUT23458 | 2018-01-30 19:04:23 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [tac_admin_role] - Login failed. Reason: No Roles |
|------|--------------------------|--|

- Session deletion due to accounting stop received

| | | |
|------|--------------------------|---|
| Info | AUT31627 | 2018-01-30 19:23:43 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [tac_admin_role] - 'Received a TACACS+ Accounting stop request. Terminated Session.' |
|------|--------------------------|---|

- Session deletion due to session timeout.

| | | |
|------|--------------------------|--|
| Info | ADM20664 | 2018-01-30 19:34:40 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [tac_admin_role] - Session timed out for tac_user/tac_admin_realm due to inactivity (last access at 19:29:38 2018/01/30). Idle session identified during routine system scan. |
|------|--------------------------|--|

4. Enable Authentication: [Only when Administrator login is enabled under admin access setting]

- Enable authentication success.

| | | |
|------|--------------------------|---|
| Info | AUT30684 | 2018-01-30 19:28:09 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [] - Enable Service authentication successful for tac_user/System Local from 10.204.59.223(Shell login to 10.204.88.10). |
|------|--------------------------|---|

- Login failure due to authentication failure.

| | | |
|------|--------------------------|--|
| Info | AUT23458 | 2018-01-30 19:29:44 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm) [tac_admin_role] - Login failed using auth server System Local (Local Authentication). Reason: Failed |
|------|--------------------------|--|

- Login failure due to restrictions.

| | | |
|------|--------------------------|--|
| Info | AUT23458 | 2018-01-30 19:31:15 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm)[tac_admin_role] - Login failed. Reason: No Roles |
|------|--------------------------|--|

- Login failure due to no role available.

| | | |
|------|--------------------------|---|
| Info | AUT23458 | 2018-01-30 19:31:15 - ic - [xx.xxx.xx.xxx] tac_user(tac_admin_realm)[tac_admin_role] - Login failed. Reason: No Roles |
|------|--------------------------|---|

Once the session is established the session is seen as TACACS+ Session in the Active Users Page

Figure: TACACS+ Active Users

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Status > Active Users

Active Users

Activity Overview **Active Users** Device Profiles Admin Notification

Show users named: * Show 200 users Update

Delete Session... Delete All Sessions... Refresh Roles Disable All Users...

Number of Users: 3

| | User | Realm | Roles | Signed in | Signed in IP | MAC Address | Device Details | Agent Type | Agent Version | Endpoint Security Status |
|--------------------------|--------|-----------------|----------------|--------------------|---------------|-------------|----------------|----------------------------|---------------|--------------------------|
| <input type="checkbox"/> | admin | Admin Users | Administrators | 2018/3/29 10:15:41 | 172.24.16.225 | | | Mac OS 10.12 Google Chrome | | Not Applicable |
| <input type="checkbox"/> | admin1 | Admin Users | Administrators | 2018/3/30 12:42:13 | | | | Windows 8.1 Google Chrome | | Not Applicable |
| <input type="checkbox"/> | | tac_admin_realm | tac_admin_role | 2018/3/30 13:06:07 | | | | TACACS+ Session | | Not Applicable |

Appendix

The following example shows how to configure the switch to authenticate and account using TACACS+.

Output 1: Example: TACACS+ authentication, authorization, and accounting configuration for Cisco IOS.

**Authentication

```
aaa authentication login default group <group-name> local
aaa authentication enable default group <group-name> enable
```

**Authorization

```
aaa authorization exec default group <group-name> local
aaa authorization commands <privilege no.> default group <group-name> local
aaa authorization config-commands
```

**Accounting

```
aaa accounting exec default start-stop group <group-name>
aaa accounting commands <privilege no.> default start-stop group <group-name>
aaa accounting send stop-record authentication failure
```

**Mapping TACACS+ server IP to group

```
aaa group server tacacs+ <group-name>
server-private <server-ip> key <shared-secret>
```

Output 2: Example: TACACS+ authentication and accounting configuration for HP switch.

```
tacacs-server host <host-ip> key <shared-secret>
aaa authentication telnet login tacacs
aaa authentication telnet enable tacacs
aaa authentication login privilege-mode
aaa accounting exec start-stop tacacs
```

Note- HP switches should be set with privilege level always. Enable authentication is not supported.

Guest Access

This chapter covers the following topics:

- [Overview](#)
- [Deployments](#)
- [Configuring PPS for WLC Deployment](#)
- [Configuring PPS for SRX/EX Deployment](#)
- [Configuring PPS for Guest Wired Authentication using Cisco Switch](#)
- [Configuring PPS for Sponsored Guest Access](#)
- [Guest Self Registration for Sponsor Approved Guest Access](#)
- [Guest User Administration](#)
- [Creating Guest User Accounts](#)
- [Creating Guest Sponsor](#)
- [Customizing Guest Self Registration User Pages](#)
- [Configuring Cisco 2500 WLC](#)
- [Configuring Cisco 3850 WLC](#)
- [Configuring Cisco 2620 for Guest Wired Authentication](#)
- [Configuring Aruba WLC](#)

Overview

PPS provides guest access management solution through which you can manage and secure your guest network access.

PPS supports the following mechanisms for guest access management:

- Guest Access through Guest User Account Manager (GUAM)
- Self-Registration
- Sponsor Approved Guest Access

Guest User Account Manager (GUAM)

The guest users use their own devices to access internet. A guest account can be created by a guest admin (GUAM) such as a receptionist. The GUAM user has below guest administration capabilities:

- Create temporary guest access accounts for guest users
- Create bulk accounts for numerous guest users
- Notify guest user credentials through email or text message.

Self-Registration

The guest self-registration enables a guest to access a Self-Registration URL and create their own guest account for internet access. The username and password for a self-provisioned guest account is delivered directly to the guest's web browser, or sent via SMS or email.

The self-registration workflow is described below:

1. The user connects to wireless network through guest SSID.
2. The user tries to access internet.
3. WLC redirects the user to PPS guest sign-in URL.
4. The user performs self-registration and signs-in through the credentials.
5. If the authentication is successful, the guest user can access internet.

Sponsor Approved Guest Access

The sponsor approved guest access provides access to the guest user only if it is approved by the Guest Sponsorer. The Sponsorer validates the guest user before giving the required access. This feature provides additional security by providing access only to valid guest users. The Sponsor takes the responsibility for the actions of the Guest and thus it brings accountability for the network usage and enhances the security of the network.

The sponsored guest access workflow is described below:

1. The Guest user connects to wireless network through guest SSID.
2. The Guest user performs the self-registration and the guest account will be created in disabled state and the access request is sent to the Sponsor (Employee/GUAM).
3. The Sponsorer will receive an email notification about the new guest access request.
4. The Sponsorer logs in to the Sponsor portal and approves/denies the guest user.
5. If the Sponsor approves the request the guest account becomes active and an email/SMS notification is sent to guest about activation of the account. If sponsor denies the request, the guest account will be deleted and an email/SMS notification is sent to guest about deny access.

Deployments

This topic describes the deployment scenarios of the Guest access solution.

- Guest Access using WLC
- Guest Access using SRX/EX
- Guest Access using Cisco switch

Guest Access using WLC


The guest access solution for wireless network can be deployed with leading Wireless LAN controllers. You can deploy wireless network with WLCs and wireless network for guests. The guest authentication is done with external authentication server and PPS server can be used as an external authentication server.

The assumption for this deployment the user has already deployed wireless network for guest using WLC and would like to have centralized authentication server. When wireless network is built with multiple vendors WLCs then it further becomes useful to have centralized authentication server.

The user flow is explained below:

1. Guest user comes on-premises and connects to guest SSID.
2. Guest user opens a browser to access an internet resource.
3. The user is redirected to PPS guest login page.
4. Guest user clicks the self-registration link from the guest login page and completes the registration process.
If the Administrator has configured Host Checker policy then PPS evaluates the Host Checker results.
 - Pre authentication – Host Checker policies are evaluated first and then user is prompted for credentials. For configuration details, see [User Realms](#).
 - Post authentication – User credentials are validated first and then the Host Checker policies are evaluated. For configuration details, see [User Roles](#).
5. Guest user logs in with guest user credentials. PPS validates the credentials and based on the result WLC redirects the guest user to the resource requested.

Figure 260: Guest Access using WLC

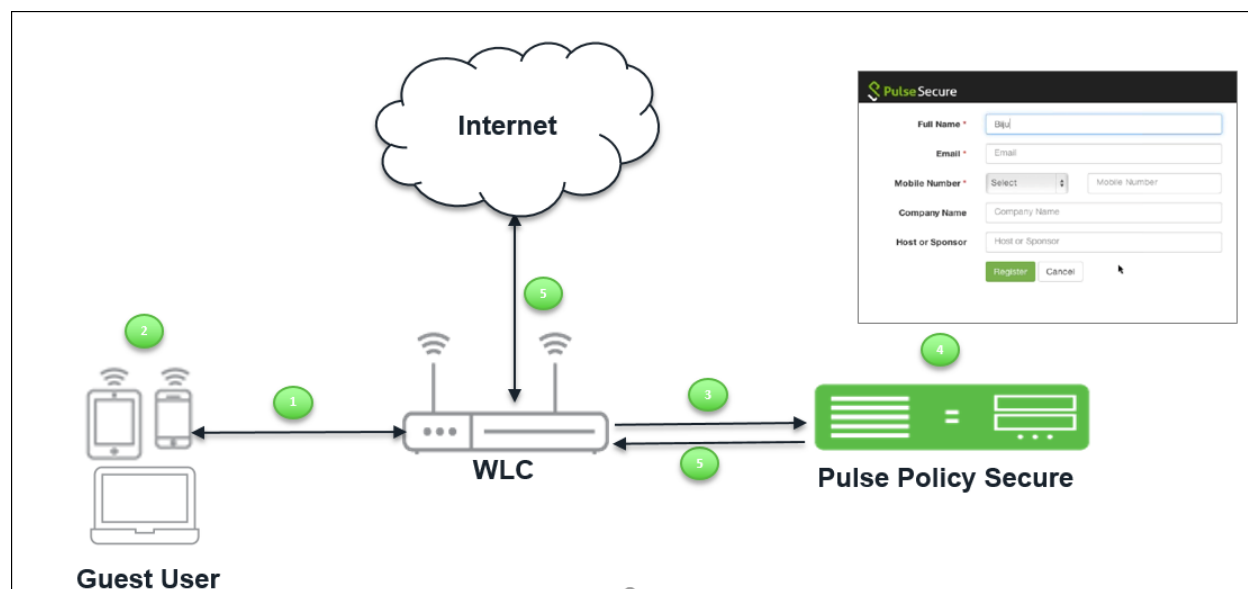

Guest Access using EX switch/SRX Firewall

When a PPS and an EX Series switch/SRX firewall is deployed, users must first sign into PPS for authentication before they can access a protected resource behind the EX Series switch/SRX firewall.

To facilitate sign-in, you can configure a redirect policy on the EX Series switch/SRX firewall to automatically redirect HTTP traffic destined for protected resources to PPS. When the sign-in page for the PPS is displayed, the user signs in, and access is granted to internet. These user accounts can be created by Guest User Account Manager.

The user flow is explained below:


1. Guest user comes on-premises and tries to connect to internet.
2. Guest user opens a browser to access an internet resource.
3. The Guest user is redirected to PPS login page.
4. If the Admin has configured Host Checker restrictions on the Guest role/realm then the Guest user is provided access only after Host Checker policies are evaluated.

The Admin can configure the Host Checker in two ways:

- Pre-Authentication (Host Checker restriction on guest realm)– The Host Checker policies are evaluated first and then user is prompted for credentials.
- Post-Authentication (Host Checker restriction on guest role) – The user credentials are validated first and then the host checker policies are evaluated.

5. The Guest user logs in with the credentials provided by the guest Admin (GUAM).

Figure 261: Guest Access using SRX/EX

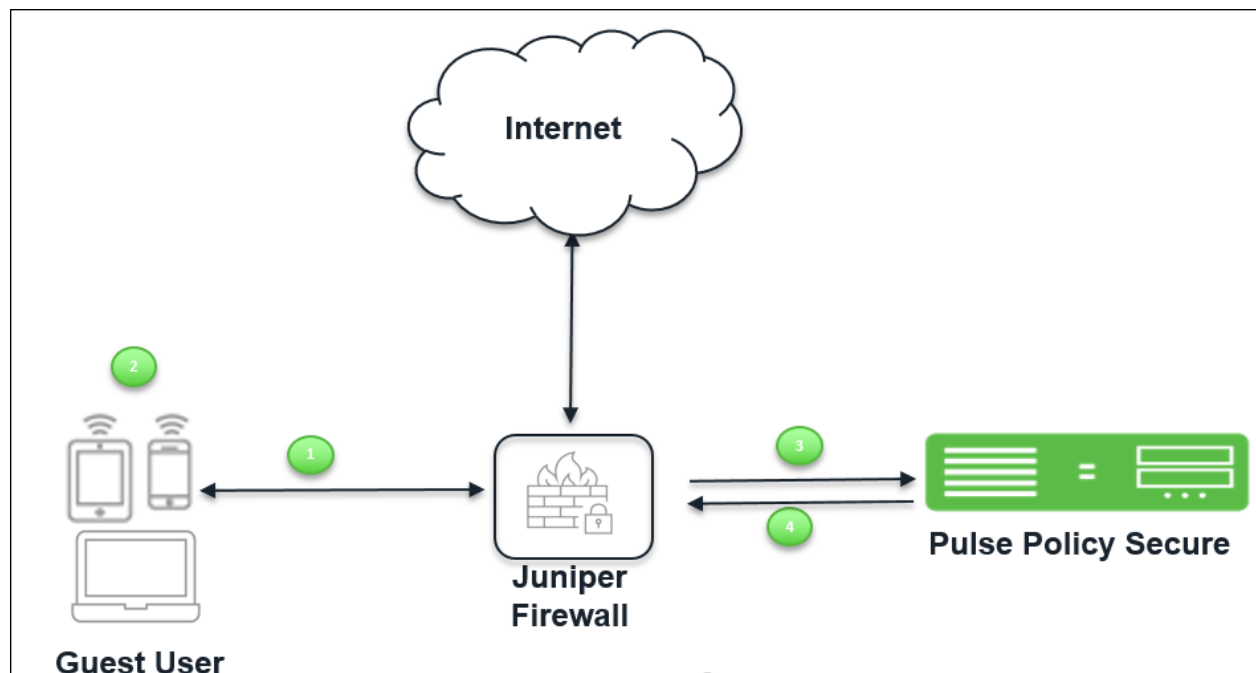


Guest Access using Cisco Switch

The guest access feature is supported for wired guest endpoints with Cisco switches. To facilitate sign-in, you can configure a redirect policy on the Cisco switch to automatically redirect HTTP traffic destined for protected resources through PPS. When the sign-in page for the PPS is displayed, the user signs in, and access is granted to internet.

The user flow is explained below:

1. Guest user comes on-premises and connects to LAN.
 2. Guest user opens a browser to access an internet resource.
 3. The user is redirected to PPS guest login page.
 4. The Guest user self registers on PPS guest portal and receives the credentials over the email/SMS or on the UI.
- If the Administrator has configured Host Checker policy then PPS evaluates the Host Checker results.
- Pre authentication – Host Checker policies are evaluated first and then user is prompted for credentials. For configuration details, see User Realms.
 - Post authentication – User credentials are validated first and then the Host Checker policies are evaluated. For configuration details, see User Roles.
5. The guest user gets authenticated and gets redirected to the requested internet resource.

Figure 262: Guest Access using Cisco Switch

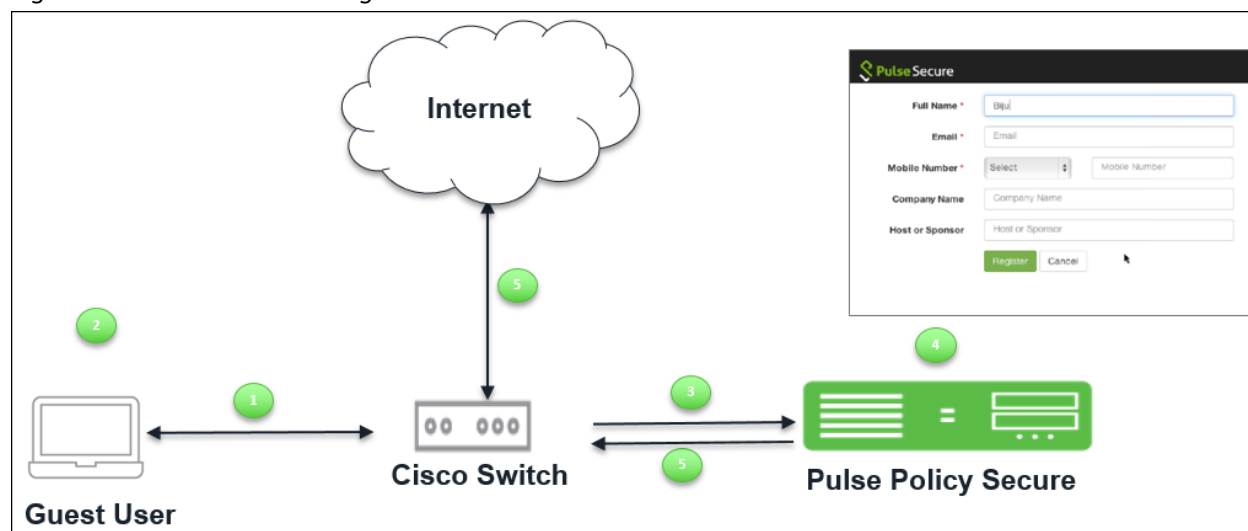

The configuration details are covered in [Configuring PPS for Guest Wired Authentication using Cisco Switch](#).

Configuring PPS for WLC Deployment

This section describes the configuration that is required on PPS to communicate with a Wireless LAN Controller (WLC) for Guest user management.

PPS server acts as RADIUS server that allows to centralize the authentication and accounting for the users. You can add Cisco, Aruba, or Ruckus WLC as a RADIUS client on PPS. Guest user Self-Registration options need to be configured in the authentication server used for managing guest accounts and in sign-in policy settings.

- [Default Configurations for Guest Access](#)
- [Configuring a RADIUS Client](#)
- [Configuring SMTP and SMS Gateway](#)
- [Configuring Guest Access Settings on PPS](#)

Default Configurations for Guest Access

PPS has some default configuration settings for convenience of the Admin users.

The default settings are:

- [Sign-in Policies](#)
- [User Realms](#)
- [User Roles](#)
- [Location Groups](#)
- [Authentication Protocol Sets](#)
- [Authentication Server](#)

Sign-In-Policies

The */guestadmin/, */guest/, and */guestsponsor are the default Sign-in-Policies in PPS. A Sign-in Policy is mapped with a default Authentication Realm.

To view the Sign-in-Policies:

1. Select Authentication > Signing In > Sign-in Policies. The Sign-in Policies screen appears.

Figure 263: Guest Sign-In Policies

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Signing In > Sign-in Policies

Sign-in Policies

Sign-in Policies Sign-in Pages Sign-in Notifications Authentication Protocol Sets

☐ Restrict access to administrators only
Only administrator URLs will be accessible. Note that Administrators can attempt to sign in even if all rules on this page are disabled.
Warning: Enabling this option will immediately terminate all user sessions.


New URL... Delete... Enable Disable Up Down Save Changes

| Administrator URLs | Sign-In Page | Authentication Realm(s) | Enabled |
|-----------------------------------|----------------------|-------------------------|---------|
| <input type="checkbox"/> */admin/ | Default Sign-In Page | Admin Users | ✓ |

| User URLs | Sign-In Page | Authentication Realm(s) | Enabled |
|--|----------------------|-------------------------|---------|
| <input type="checkbox"/> */guest/ | Default Sign-In Page | Guest (Guest) | ✓ |
| <input type="checkbox"/> */guestadmin/ | Default Sign-In Page | Guest Admin (N/A) | ✓ |
| <input type="checkbox"/> */guestsponsor/ | Default Sign-In Page | Guest Sponsor (N/A) | ✓ |


2. Click on a Sign-in Policy to view the settings. You can make necessary changes or add realms in a Sign-in Policy and click **Save Changes**.

Figure 264: Default Guest Sign-In Policy

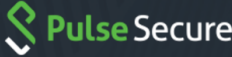

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure



Signing In > Sign-In Policies > */guestadmin/

*/guestadmin/

User type:

Users

Administrators

Sign-in URL:

*/guestadmin/

Format: <host>[/<path>]. Use * as wildcard in the beginning of the host name.

Description:

System created Guest Admin Sign In

Sign-in page:

Default Sign-In Page

To create or manage pages, see [Sign-In pages](#).

Authentication realm

Specify what realms will be available when signing in.

Delete

Up

Down

| | Available realms | Authentication protocol set | |
|--|------------------------|-------------------------------|----------------|
| | <div>Guest</div> | <div>- Not applicable -</div> | <div>Add</div> |
| | <div>Guest Admin</div> | <div>- Not applicable -</div> | |

If more than one realm appears above, Odyssey Access Client or the Policy Secure sign-in page will ask the user to choose. Other endpoints cannot choose a realm; the Policy Secure will assign the first suitable realm from the list. If no realms appear above, sign-in will fail.

User may specify the realm name as a Username suffix

When this option is selected, the Username suffix will be used to specify a realm

Remove realm suffix before passing to authentication server

When this option is selected, the username suffix will be stripped from the Username prior to authenticating with an authentication server

Fail if suffix does not match any of the realms

When this option is selected, the user should provide one of the realm as suffix. If not, the user will be denied sign-in.

Configure Guest Settings

Use this sign-in policy for Guest and Guest admin to use specific pages.

Show Guest Self-Registration link on guest login page.

Show On-Boarding link on guest login page.

Configure Signin Notifications

Pre-Auth Sign-in Notification

Post-Auth Sign-in Notification

Save Changes

© 2019 by Pulse Secure, LLC. All rights reserved

509

User Realms

The Guest, Guest Admin and Guest Sponsor are the default user realms in PPS. A user realm is mapped with a default Role.




Note: For a Guest Admin realm and Guest Sponsor Realm, Administrator must create the role mapping rule for the user name who has rights for creating Guest accounts.

To configure a guest admin realm:


1. Select **Users > User Realms**. The User Authentication Realms screen appears.

Figure 265: User Authentication Realm

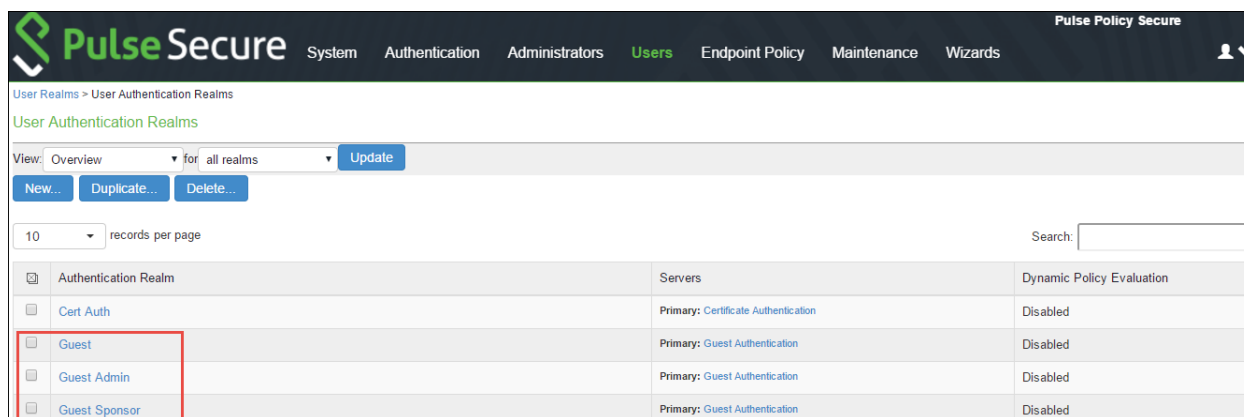

2. Click on a Guest Authentication Realm to view the settings. The Role Mapping screen of the Realm appears.

Figure 266: User Realm - Role Mapping Page

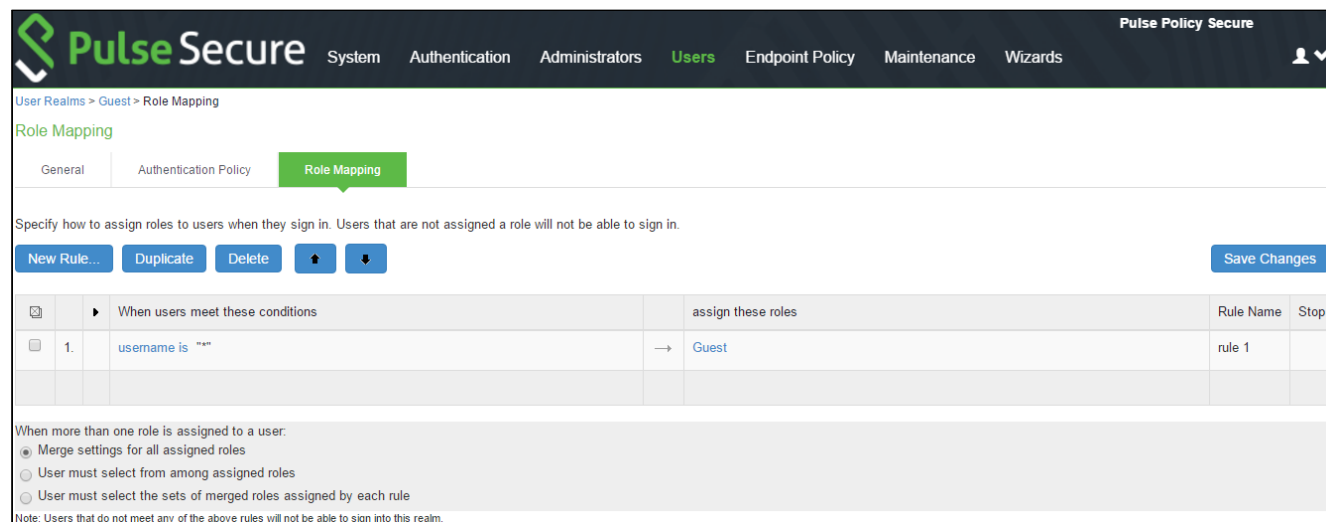

3. Click an existing Rule of the Role to view the settings.

Figure 267: User Realm - Role Mapping Rule

PulseSecure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards Pulse Policy Secure

User Realms > Guest > Role Mapping > Role Mapping Rule

Role Mapping Rule

* Name:

▼ Rule:if username...

is If more than one username should match, enter one username per line. You can use * wildcards.

▼ then assign these roles

Available Roles: Guest Admin, Guest Sponsor, Users

Selected Roles: Guest

☐ Stop processing rules when this rule matches

To manage roles, see the [Roles](#) configuration page.

[Save Changes](#) [Save as Copy](#)

*Indicates required field

- For Guest Sponsor, Click the **Guest Sponsor Realm** and specify how to assign the role. Click **New Rule** to add a new role and then click **Save Changes**.

Figure 268: User Realm – Guest Sponsor

PulseSecure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards Pulse Policy Secure on N2

User Realms > Guest Sponsor > Role Mapping > Role Mapping Rule

Role Mapping Rule

* Name:

▼ Rule:if username...

is If more than one username should match, enter one username per line. You can use * wildcards.

▼ then assign these roles

Available Roles: Guest, Guest Admin, Guest Wired Restricted, HC, Users

Selected Roles: Guest Sponsor

☐ Stop processing rules when this rule matches

To manage roles, see the [Roles](#) configuration page.

[Save Changes](#) [Save as Copy](#)

- You can make necessary changes and click **Save Changes** to save the settings.

Figure 269: Guest Sponsor Role Mapping

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Realms > Guest Sponsor > Role Mapping

Role Mapping

General Authentication Policy **Role Mapping**

Specify how to assign roles to users when they sign in. Users that are not assigned a role will not be able to sign in.

[New Rule...](#) [Duplicate](#) [Delete](#) [↑](#) [↓](#) [Save Changes](#)

| | When users meet these conditions | assign these roles | Rule Name | Stop |
|----|----------------------------------|--------------------|-----------|------|
| 1. | username is "adm" | → Guest Sponsor | rule1 | |

When more than one role is assigned to a user:

- ☒ Merge settings for all assigned roles
- ☐ User must select from among assigned roles
- ☐ User must select the sets of merged roles assigned by each rule

Note: Users that do not meet any of the above rules will not be able to sign into this realm.

- Click the **General** tab to view the settings. The **General** screen appears.

Figure 270: User Realm - General

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Realms > Guest > General

General Authentication Policy Role Mapping

* Name: Label to reference this realm

Description:

System created authentication realm for Guest Admin.

☐ When editing, start on the Role Mapping page

▼ Servers

Specify the servers to use for authentication and authorization. To create or manage servers, see the [Servers](#) page.

Authentication: Specify the server to use for authenticating users.

User Directory/Attribute: Specify the server to use for authorization.

Accounting: Specify the server to use for Radius accounting.

Device Attributes: Specify the server to use for device authorization.

▼ Dynamic policy evaluation

☐ Enable dynamic policy evaluation

▼ Session Migration

☐ Session Migration

▼ Other Settings


Authentication Policy:
 Role Mapping:
 Password restrictions: 1 Rule

[Save Changes](#)

* indicates required field

- You can make necessary changes and click **Save Changes** to save the settings.
- Click **Host Checker**. You can make the necessary changes and click **Save Changes**.

Figure 271: User Realm – Host Checker

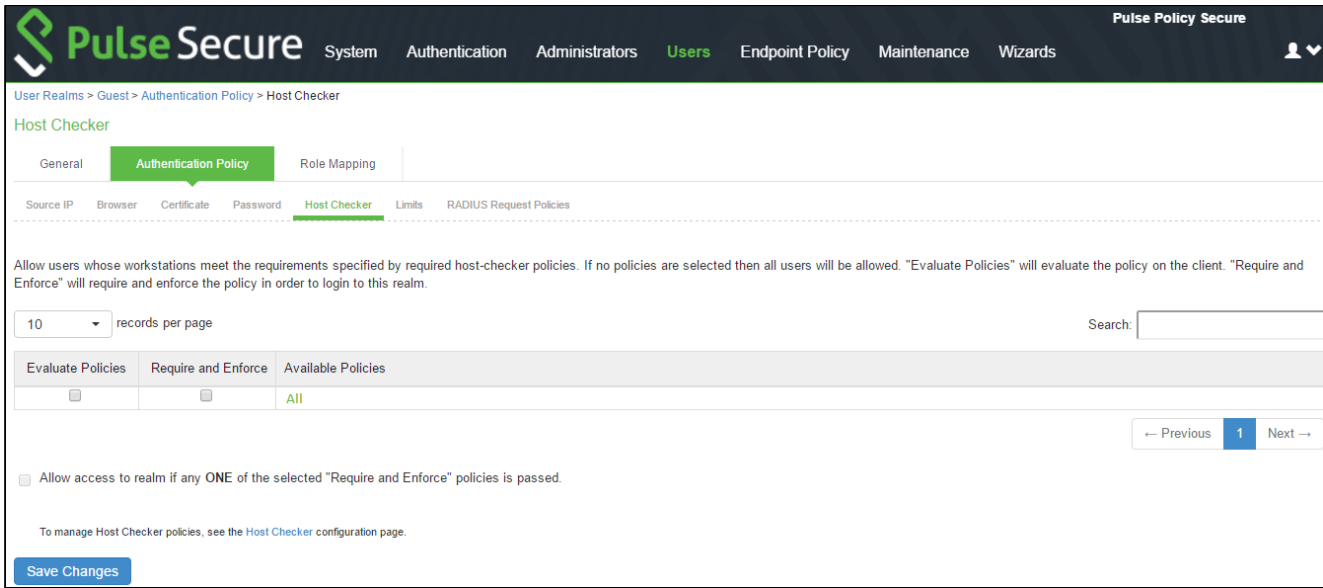


User Roles

The Guest Admin, Guest, and Guest Sponsor are the default user roles in PPS. A user realm is mapped with a default Role.

To view a User Role:

1. Select **Users > User Roles**. The Roles screen appears.

Figure 272: User Roles

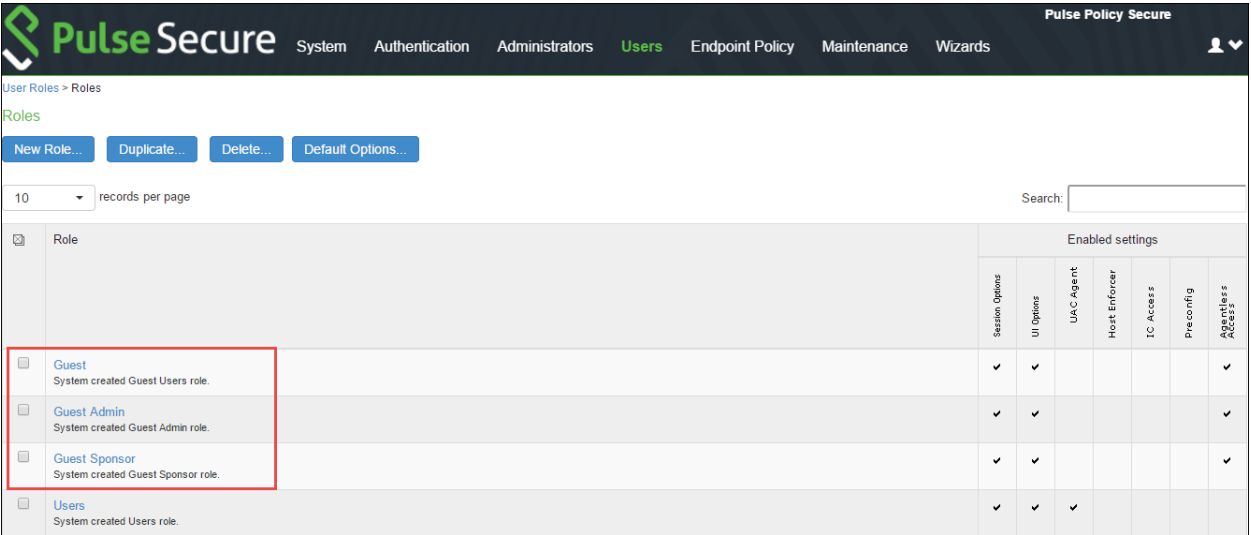

2. Click on a default Guest Role to view the settings.

The **General > Overview** screen appears. You can make necessary changes and click Save Changes

to save the settings.

Figure 273: Default User Role Settings

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users' (highlighted), 'Endpoint Policy', 'Maintenance', and 'Wizards'. The main content area is titled 'Overview' and has tabs for 'General', 'Agent', and 'Agentless'. Under the 'General' tab, there are sub-tabs for 'Overview', 'Restrictions', 'Session Options', and 'UI Options'. The 'Overview' sub-tab is active, showing the 'Users' role. The 'Name' field is 'Users' and the 'Description' is 'System created Users role.' Below these fields is a 'Save Changes' button. Under the 'Options' section, there is a note: 'If these settings are not specified by any roles assigned to the user, the settings specified in Default Options will be used.' The options listed are: 'Session Options' (checked), 'UI Options' (checked), 'Enable Guest User Account Management Rights' (unchecked), and 'Enable Sponsored Guest User Account Management Rights' (unchecked). Each option has an '(Edit)' link next to it. A 'Save Changes' button is at the bottom.

3. Click **Guest Sponsor** in the user role page to view the settings.

Figure 274: Guest Sponsor Role

The screenshot shows the Pulse Secure web interface for the 'Guest Sponsor' role. The top navigation bar is the same as in Figure 273. The main content area is titled 'User Roles > Guest Sponsor > General > Overview'. The 'Overview' sub-tab is active, showing the 'Guest Sponsor' role. The 'Name' field is 'Guest Sponsor' and the 'Description' is 'System created Guest Sponsor role.' Below these fields is a 'Save Changes' button. Under the 'Options' section, there is a note: 'If these settings are not specified by any roles assigned to the user, the settings specified in Default Options will be used.' The options listed are: 'Session Options' (checked), 'UI Options' (checked), 'Odyssey Settings for Policy Secure Access' (unchecked), 'Odyssey Settings for Preconfigured Installer' (unchecked), 'Enable Guest User Account Management Rights' (unchecked), and 'Enable Sponsored Guest User Account Management Rights' (checked). Each option has an '(Edit)' link next to it. There is also a link for 'Enterprise Device Onboarding'. A 'Save Changes' button is at the bottom.

4. You can go to other tabs of the User Roles, to view the default settings and make necessary changes.


Location Groups

The 'Guest' is the default Location Group configured in PPS. A Location Group is mapped with a default Sign-in Policy and a default Realm.

To view a Location Group:


1. Select **Endpoint Policy > Network Access > Location Group**. The Location Group screen appears.

Figure 275: Location Group for Guest Access

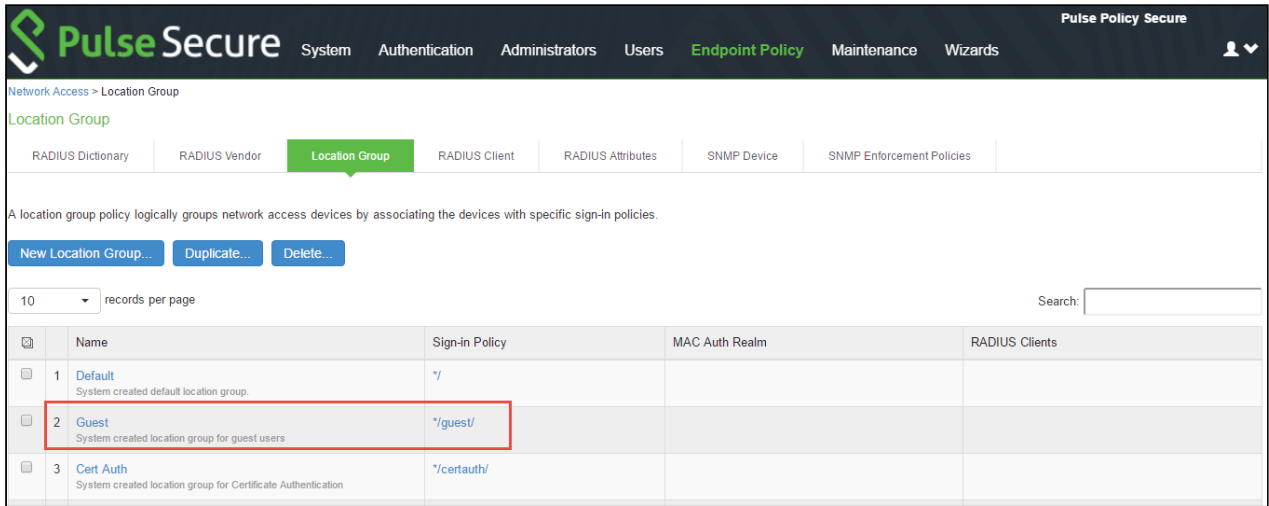

2. Click the **Location Group** to view the settings.

Figure 276: Default Location Group

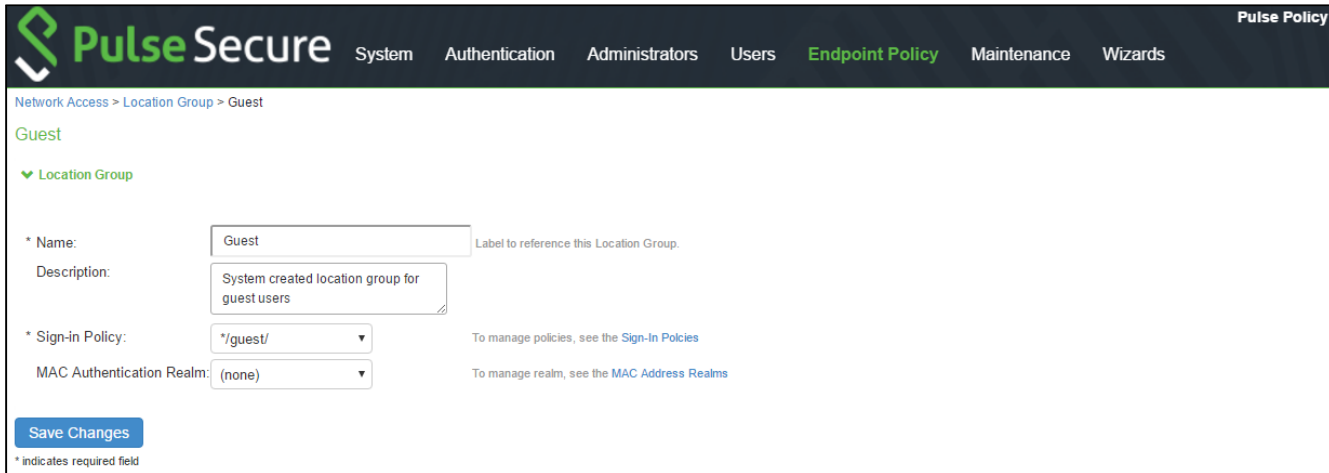

3. You can make necessary changes and click **Save Changes** to save the settings.

Authentication Protocol Set

The 'Guest' is the default Authentication Protocol Set configured in PPS.

To view the Authentication Protocol:

1. Select Authentication > Signing In > Authentication Protocol Sets. The Authentication Protocol screen appears.

Figure 277: Authentication Protocols

The screenshot shows the Pulse Secure Administration console interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The 'Authentication' tab is selected, and the 'Authentication Protocol Sets' sub-tab is active. Below the navigation bar, there are buttons for 'New Authentication Protocol...', 'Duplicate...', 'Delete...', and 'Restore Factory Default'. A table lists the authentication protocol sets, with the 'Guest' set highlighted by a red box. The table has columns for Name, Authentication Protocol, PEAP, and TTLS.

| Name | Authentication Protocol | PEAP | TTLS |
|--|---------------------------------|----------------------------|---|
| 1 802.1X System created default authentication protocol required for UAC agents | EAP-TTLS EAP-PEAP | EAP-JUAC EAP-MS-CHAP-V2 | EAP-JUAC PAP MS-CHAP-V2 EAP-MS-CHAP-V2 EAP-GenericTokenCard |
| 2 802.1X-Phones System created default authentication protocol for phones | EAP-MD5-Challenge EAP-TLS | | |
| 3 Guest System created authentication protocol for guest users | PAP CHAP | | |
| 4 Cert Auth System created authentication protocol for Certificate Authentication | EAP-TLS EAP-TTLS EAP-PEAP | EAP-JUAC EAP-TLS | EAP-JUAC EAP-GenericTokenCard |

2. Click the Authentication Protocol to view the settings.

Figure 278: Default Authentication Protocol Set

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure

Signing In > Authentication Protocols > Guest

Guest

Name: Label to reference this Authentication Protocol.

Description:

Authentication Protocol

Specify authentication protocols in preferred order

Available protocols:

Selected protocols:

PEAP

If EAP-PEAP is selected in authentication protocol and is not used for inner proxy, specify inner authentication protocols in preferred order

Available protocols:

Selected protocols:

TTLS

If EAP-TTLS is selected in authentication protocol and is not used for inner proxy, specify inner authentication protocols in preferred order

Available protocols:

Selected protocols:

3. You can make necessary changes and click **Save Changes** to save the settings.


Authentication Server

The 'Guest Authentication and Guest Wired Authentication are the default Authentication Servers configured in PPS.

To view the Authentication Server:

1. Select **Authentication > Auth. Servers**. The Authentication Servers screen appears.

Figure 279: Guest Authentication Server

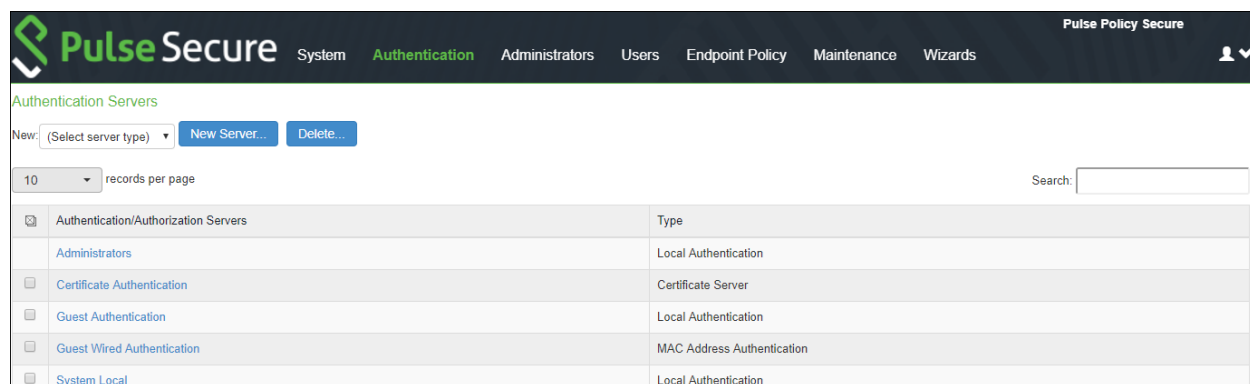

2. Click the **Guest Authentication** server to view the settings.

The options under the **Settings** tab appears.

Figure 280: Authentication Server Settings

Copyright © 2001-2017 Pulse Secure, LLC. All rights reserved.

3. You can make necessary changes and click **Save Changes** to save the settings.
4. Click the **Users** tab to view the guest users list. This page displays all the users that are created by guest self-registration option, GUAM, and Sponsorer.

Figure 281: Authentication Server - Users

The screenshot shows the Pulse Secure Administration console. The top navigation bar includes 'System', 'Authentication' (highlighted), 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'Auth Servers > Guest Authentication'. Below this, there are tabs for 'Settings', 'Users' (selected), and 'Admin Users'. A search bar shows 'Show users named: *' and a 'Show 200 users' button. Below the search bar are 'New...' and 'Delete...' buttons, and a pagination control showing 'Page 1 of 1'. The main content area is a table with the following columns: 'Username', 'Name', 'Usertype', and 'Last Sign-in Statistic'. The 'Last Sign-in Statistic' column is further divided into 'Date&Time', 'IPAddress', and 'Agent'. A single user is listed with the username 'abhi', name 'Unspecified Name', and usertype 'Normal'. The last sign-in statistics are: Date&Time: 2017/05/02 02:35:21, IPAddress: 172.21.8.119, and Agent: Mozilla/5.0 (Windows NT 6.3; WOW64; rv:53.0) Gecko/20100101 Firefox/53.0.

| | Username | Name | Usertype | Last Sign-in Statistic | | |
|--|----------|------------------|----------|------------------------|--------------|--|
| | | | | Date&Time | IPAddress | Agent |
| | abhi | Unspecified Name | Normal | 2017/05/02 02:35:21 | 172.21.8.119 | Mozilla/5.0 (Windows NT 6.3; WOW64; rv:53.0) Gecko/20100101 Firefox/53.0 |

Configuring RADIUS Client on PPS

PPS is configured with the default settings for RADIUS. You must configure only the RADIUS client and a RADIUS Return Attributes Policy.

To configure RADIUS Client on PPS:

1. Select **Endpoint Policy > Network Access > RADIUS Client > New RADIUS Client** to create a new RADIUS client. The New RADIUS Client screen appears.

Figure 282: Creating and configuring new RADIUS client-Aruba WLC

The screenshot shows the 'New RADIUS Client' configuration page in the Pulse Secure interface. The breadcrumb trail is 'Network Access > RADIUS Client > Aruba'. The page title is 'Aruba'. Under the 'RADIUS Client' section, the following fields are visible: Name (Aruba), Description (empty), IP Address (10.204.89.150), IP Address Range (1), Shared Secret (empty), Make/Model (Aruba Networks), and Location Group (Guest). To the right of these fields are labels: 'Label to reference this RADIUS Client', 'IP Address of this RADIUS Client', 'Number of IP Addresses for this RADIUS Client', 'RADIUS shared secret', 'To manage make/model, see the RADIUS Vendor', and 'To manage groups, see the Location Group'. Under the 'Dynamic Authorization Support' section, there are checkboxes for 'Support Disconnect Messages' (checked) and 'Support CoA Messages' (checked), and a text field for 'Dynamic Authorization Port' (3799). To the right of these are labels: 'Disconnect Message Support', 'Change of Authorization Message Support', and 'Dynamic Authorization Extensions Port'. At the bottom left is a 'Save Changes' button, and below it is a note '* Indicates required field'.

Figure 283: Creating and configuring new RADIUS client-Cisco WLC

The screenshot shows the 'New RADIUS Client' configuration page in the Pulse Secure interface, similar to Figure 282 but for a Cisco WLC. The breadcrumb trail is 'Network Access > RADIUS Client > Aruba'. The page title is 'Aruba'. Under the 'RADIUS Client' section, the following fields are visible: Name (Cisco), Description (empty), IP Address (10.204.89.150), IP Address Range (1), Shared Secret (empty), Make/Model (Cisco Systems), and Location Group (Guest). To the right of these fields are labels: 'Label to reference this RADIUS Client', 'IP Address of this RADIUS Client', 'Number of IP Addresses for this RADIUS Client', 'RADIUS shared secret', 'To manage make/model, see the RADIUS Vendor', and 'To manage groups, see the Location Group'. Under the 'Dynamic Authorization Support' section, there are checkboxes for 'Support Disconnect Messages' (checked) and 'Support CoA Messages' (checked), and a text field for 'Dynamic Authorization Port' (3799). To the right of these are labels: 'Disconnect Message Support', 'Change of Authorization Message Support', and 'Dynamic Authorization Extensions Port'. At the bottom left is a 'Save Changes' button, and below it is a note '* Indicates required field'.

Figure 284: Creating and configuring new RADIUS Client-Ruckus WLC

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Network Access > RADIUS Client > New RADIUS Client

New RADIUS Client

RADIUS Client

* Name: Label to reference this RADIUS Client.

Description:

* IP Address: IP Address of this RADIUS Client.

* IP Address Range: Number of IP Addresses for this RADIUS Client.

* Shared Secret: RADIUS shared secret.

* Make/Model: To manage make/model, see the [RADIUS Vendor](#).

Ruckus Request Password: Ruckus SmartZone Northbound Portal Interface password (used for guest access).

Ruckus Server Certificate Validation: ☐ Ruckus SmartZone Server Certificate Validation.

* Location Group: To manage groups, see the [Location Group](#).

Dynamic Authorization Support

Support Disconnect Messages: ☐ Disconnect Message Support.

Support CoA Messages: ☐ Change of Authorization Message Support.

[Save Changes](#)

* Indicates required field

Configure the WLC (For example, Aruba, Cisco, Ruckus) as a RADIUS client and map with the default location group.

Note: You can enable Ruckus Server Certificate Validation option to validate the device certificate. See Verifying Device Certificates for understanding the validation procedure.

2. Click **Save Changes** to save the settings.
3. Select Endpoint Policy > Network Access > RADIUS Attributes > Return Attributes > New Policy to create a new RADIUS Return Attribute policy.

Figure 285: RADIUS Return Attribute Policy

System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards
Pulse Policy Secure

Network Access > RADIUS Return Attributes Policies > New Policy

New Policy

* Name: Required: Label to reference this policy.

Description:

Location Group

Specify the Location Group for which this policy applies.

Available Location Groups:

- Default
- Guest
- Cert Auth

Add -> Remove

Selected Location Groups:

- (all)

RADIUS Attributes

☐ Open port
☐ VLAN: (1 - 4094)
☐ Return Attribute

Delete
Add
Remove

| Return Attribute | Radius Auth Server Attribute Value | Auth Server Catalog Attribute Value | Value | |
|------------------|------------------------------------|-------------------------------------|----------------------|-----|
| Ruckus-APN-NI | -none- | -none- | <input type="text"/> | Add |

☐ Add Session-Timeout attribute with value equal to the session lifetime
☐ Add Termination-Action attribute with value equal 1

Interface

Specify the Interface which endpoints on this VLAN use to connect to the Pulse Policy Secure

☒ Automatic (use configured VLANs)
☐ Internal
☐ External

Roles

☒ Policy applies to ALL roles
☐ Policy applies to SELECTED roles
☐ Policy applies to all roles OTHER THAN those selected below

Available roles:

- Guest
- Guest Admin
- Users

Add -> Remove

Selected roles:

- (none)

NOTE: changes to this page will cause all L2 clients to drop their connections and reconnect.

Save Changes Save as Copy

* indicates required field

Licensed to VASPHG2326CZZKDKE

Host Id: localhost2

Copyright © 2001-2016 Pulse Secure, LLC. All rights reserved.

- Map with the default location group. Configure other return attributes and session-timeout attributes as required.
- Click **Save Changes** to save the Return Attribute Policy.

Configuring SMTP and SMS gateway settings on PPS

The SMTP and SMS configuration settings must be configured to enable guest users to create user accounts on their own.

SMTP Settings for Guest User Accounts

To configure the SMTP settings:

1. Select **System > Configuration > Guest Access > SMTP Settings**. The SMTP Settings screen appears.

Figure 286: SMTP settings

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Guest Access > SMTP Settings

SMTP Settings

Configuration
Guest Access

Licensing Pulse One Security Certificates DMI Agent Sensors Client Types **Guest Access**

SMTP Settings SMS Gateway Settings

General SMTP Settings

Email Account Details: ☐ Enabled

*SMTP Server: IP Address or hostname of the SMTP server

SMTP Login: Required if the server requires credentials to relay

SMTP Password: Required if the server requires credentials to relay

*SMTP Email: Default email address used to send emails and receive bounce-back messages

Advanced Profiler Only

* This section is applicable only for profiler notifications.

Use SSL: ☐ Enabled

*SMTP Port: 25 Port to be used for SMTP server.

Guest Access Settings

Enter settings to modify Guest User Account Manager and Guest Self-Registration features.
The SMTP settings to send account details to guest via email.

*Email Subject: Subject to use

*Email Format: ☒ html ☐ text Content type to set in the email header. The default template page is in HTML (this can be changed using Custom Pages).

Save Changes

2. Under **General SMTP settings**:
 - a. Enter the host name or IP address of the SMTP server.
 - b. Enter the SMTP login name.
 - c. Enter the SMTP password.
 - d. Enter the SMTP email address.
3. The Advanced Profiler options in the UI are not applicable for Guest Access settings.
4. Under Guest Access Settings:
 - a. Enter the email subject.
 - b. Select the email format- html, text.
5. Click **Save Changes**.

SMS Gateway Settings for Guest User Accounts

Short Message Service (SMS) is delivered through an SMS gateway service that supports HTTP, HTTPS, and SMTP

(Simple Mail Transport Protocol) delivery. You need to subscribe to an external service to be able to deliver guest details using SMS. The SMS gateway sends SMS in formatted text message using HTTP/HTTPS interface (SMS message) and can also allow email message to be sent as an SMS. An example of an SMS gateway is clickatell.com. You should have a valid account with this third party.

To create an account with Clickatell:

1. Go to http://www.clickatell.com/products/sms_gateway.php, and choose the appropriate API sub-product (connection method) you wish to use.
2. Click on the registration hyperlink.
3. Select the Account type you would like to use (Local or International).
4. Enter your personal information to complete the registration form.
5. Accept the Terms & Conditions.
6. Click Continue - An email containing your log in details such as account log in name, password, and clientID will be sent to the email address you have provided.
7. Activate your account – When user has logged in, and user will be on the Clickatell Central landing page and HTTP API will be added to the account and client API ID will be issued to the account. A single account may have multiple API IDs associated with it.

To enable the SMS gateway settings using PPS:

1. Select **System > Configuration > Guest Access > SMS Gateway Settings**. The SMS Gateway Settings screen appears.

Figure 287: SMTP Gateway settings

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Guest Access > SMS Gateway Settings

SMS Gateway Settings

Configuration
Guest Access

Licensing Pulse One Security Certificates DMIL Agent Sensors Client Types **Guest Access**

SMTP Settings **SMS Gateway Settings**

Enter settings to modify Guest User Account Manager and Guest Self-Registration features.
The SMS gateway settings to send account details to guest via SMS.

▼ **SMS Gateway Settings**

Enable SMS Gateway Settings: ☐

*SMS Gateway Type: Required if the server requires credentials to relay

*API product ID: Required if the server requires credentials to relay

*SMS Gateway Login Name: Required if the server requires credentials to relay

*SMS Gateway Password: Required if the server requires credentials to relay

*SMS Gateway URL:

Source Mobile Number: Require "two-way" number (Sender ID) in order to deliver messages to the few service providers.

HTTPS: ☒ Secure Channel

☐ Use Proxy Server

Address Port

Username:

Password:

Text Message(SMS) Format(Optional Fields):

☐ Guest Account Start Time

☐ Guest Account End Time

☐ Guest Account Sign-In URL

☐ Wireless SSID

▼ **Send Test SMS?**

Mobile Number:

Licensed to VASPHG2326CZZKDKE
Host Id: localhost2
Copyright © 2001-2016 Pulse Secure, LLC. All rights reserved.

2. Select the Enable SMS Gateway Settings check box.
3. Complete the configuration settings as described in the following table.
4. Click Save Changes.
5. Click Send Test SMS.

Table 60: Guest Access SMS Gateway Settings

| Settings | Guidelines |
|-----------------------------|--|
| SMS Gateway Settings | |
| SMS Gateway Type | <p>Select the gateway type:</p> <p>Clickatell – Select this option to send SMS as a text message.</p> <p>Clickatell Email2SMS – Select this option to use email format as an SMS using SMTP.</p> |

| | |
|--|---|
| API product ID | Specify the API product ID that you received from Clickatell during account creation. |
| SMS Gateway Login Name | Specify the SMS gateway login name. |
| SMS Gateway Login password | Specify the SMS gateway login password. |
| Text Message (SMS) Format | (Optional) Select the following fields: Guest Account Start Time Guest Account End Time Guest Account Sign-in URL Wireless SSID |
| The following options apply if you select Clickatell as gateway type. | |
| SMS Gateway URL | Specify the SMS Gateway URL. (Default) https://api.clickatell.com or http://api.clickatell.com |
| HTTPS | Select this option to use a secure connection. If you don't select this option user will be notified about clear text transmission of guest user credentials. |
| Use Proxy Server | Select this option to access the internet or SMS gateway URL using a proxy server. |
| Address | Specify the address of the proxy server and its port. |
| Username | Specify the username of the proxy server. |
| Password | Specify the password of the proxy server. |
| Send Test SMS | |
| Mobile Number | Select the country name and then specify a valid phone number of the guest user. The phone number should not include country code or any special character such as +, *, and so on. The PPS sends a test SMS with the login credentials to this mobile number through SMS. |
| Source Mobile Number | Specify the sender ID configured in Clickatell Account |


Configuring Guest Access Settings on PPS

To configure guest access settings on PPS:

1. Select **Authentication > Auth. Servers > System Local > Settings**.
2. Under Guest Access Configurations:
 - Select the check box **Enable Guest User Account Managers** to administer Guest Accounts
 - Under the Guest Self-Registration select **Send guest user credentials via**
 - **SMS**
 - **Email**
 - Click the **SMS/Email settings** link and do the necessary settings.
 - Show credentials on screen after guest completes registration
 - **Maximum Account Validity Period for Self Registered Guest** – Default is 24 hours. You can change this as per the requirement.
 - For Sponsored Guest Access, select **Enable Sponsored Guest Access**.

 Note: Self-Registration is supported only with WLC deployment.

Figure 288: Guest Access Configuration

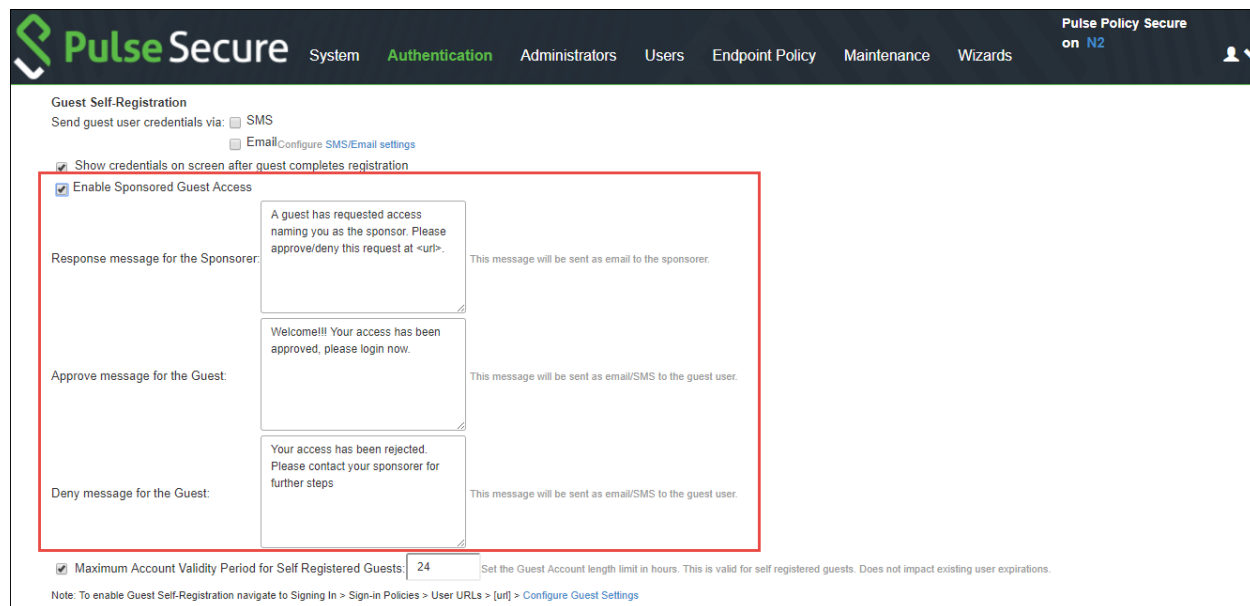

PulseSecure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Pulse Policy Secure on N2

Guest Self-Registration
Send guest user credentials via: ☐ SMS ☐ Email [Configure SMS/Email settings](#)

☒ Show credentials on screen after guest completes registration

☒ Enable Sponsored Guest Access

Response message for the Sponsor:

A guest has requested access naming you as the sponsor. Please approve/deny this request at <url>.

This message will be sent as email to the sponsor.

Approve message for the Guest:

Welcome!!! Your access has been approved, please login now.

This message will be sent as email/SMS to the guest user.

Deny message for the Guest:

Your access has been rejected. Please contact your sponsor for further steps

This message will be sent as email/SMS to the guest user.

☒ Maximum Account Validity Period for Self Registered Guests: 24 Set the Guest Account length limit in hours. This is valid for self registered guests. Does not impact existing user expirations.

Note: To enable Guest Self-Registration navigate to Signing In > Sign-in Policies > User URLs > [url] > [Configure Guest Settings](#)

3. Select **Authentication > Signing In > Sign-In Policies**.

Figure 289: Sign-in Policy

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards Pulse Policy Secure

Signing In > Sign-in Policies > New Sign-In Policy

New Sign-In Policy

User type: ☒ Users ☐ Administrators

Sign-in URL: Format: <host><path>/; Use * as wildcard in the beginning of the host name.

Description:

Sign-in page: Default Sign-In Page
To create or manage pages, see Sign-in pages.

▼ **Authentication realm**

Specify what realms will be available when signing in.

Delete ↑ ↓

| Available realms | Authentication protocol set | |
|------------------------|---------------------------------|------------------|
| Cert Auth | - Not applicable - | Add |

If more than one realm appears above, Odyssey Access Client or the Policy Secure sign-in page will ask the user to choose. Other endpoints cannot choose a realm; the Policy Secure will assign the first suitable realm from the list. If no realms appear above, sign-in will fail.

☐ **User may specify the realm name as a username suffix**
When this option is selected, the username suffix will be used to specify a realm

☐ **Remove realm suffix before passing to authentication server**
When this option is selected, the username suffix will be stripped from the username prior to authenticating with an authentication server

☒ **Fail if suffix does not match any of the realms**
When this option is selected, the user should provide one of the realm as suffix. If not, the user will be denied sign-in.

▼ **Configure Guest Settings**

☐ Use this sign-in policy for Guest and Guest admin to use specific pages.

▼ **Configure SignIn Notifications**

☐ Pre-Auth Sign-in Notification

☐ Post-Auth Sign-in Notification

Save Changes

Licensed to VASPHG2326CZZKDKKE
Host id: localhost2
Copyright © 2001-2016 Pulse Secure, LLC. All rights reserved.

4. Select the sign-in policy that is created earlier.

Under **Configure Guest settings** select the check boxes:

- Use this sign-in policy for Guest and Guest admin to use specific pages
- Show Guest Self Registration link on the guest log in page.

The **Register as Guest** link appears on the guest log in page.

Configuring PPS for SRX/EX Deployment

The Administrator must follow the below procedure for enabling guest access using SRX firewall:

- [Default Configurations for Guest Access](#)
- [Configuring SMTP and SMS Gateway](#)
- [Configuring Guest Access Settings on PPS](#)

To configure captive portal:

1. From PPS admin UI, select **Endpoint Policy > Infranet Enforcer > Connection** and add SRX/EX

Figure 290: Guest Access using SRX

The screenshot shows the Pulse Secure admin interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy' (highlighted), 'Maintenance', and 'Wizards'. The breadcrumb trail is 'Infranet Enforcer > Connection > New Infranet Enforcer'. The main form is titled 'New Infranet Enforcer'. Under the 'Infranet Enforcer' section, there are fields for 'Platform' (JUNOS SRX), 'Name', 'Password', and 'Serial number(s)'. To the right of these fields are labels: 'Platform of this Infranet Enforcer.', 'Label to reference this Infranet Enforcer.', 'Connection password.', and 'One per line.'. Below these fields is a 'Location Group' dropdown menu set to 'Guest', with a note 'To manage groups, see the Location Group'. Under the 'Coordinated Threat Control' section, there is a note 'Note that not all enforcer versions and platforms have an IDP module.' and a checkbox 'Use IDP Module as Sensor'. A 'Save Changes' button is located at the bottom left of the form.

2. From the SRX CLI configuration menu, configure a captive portal named guests that redirects the unauthenticated traffic to guest URL. For example, <https://xyz.abc.local/guest>
3. Create a new policy that redirects any source that attempts to access the server. For more information on configuration, see [Captive Portal](#).
4. You can also create Host Checker restrictions on the Guest realm/role. For more information, see [Host Checker Restrictions](#).


Configuring PPS for Guest Wired Authentication using Cisco Switch

This section describes the configuration that is required on PPS to communicate with a Cisco switch for Guest wired authentication.

To configure PPS for guest wired authentication:


1. Select **Authentication > Auth. Servers**. The Authentication Servers screen appears.

Figure 291: Guest Wired Authentication

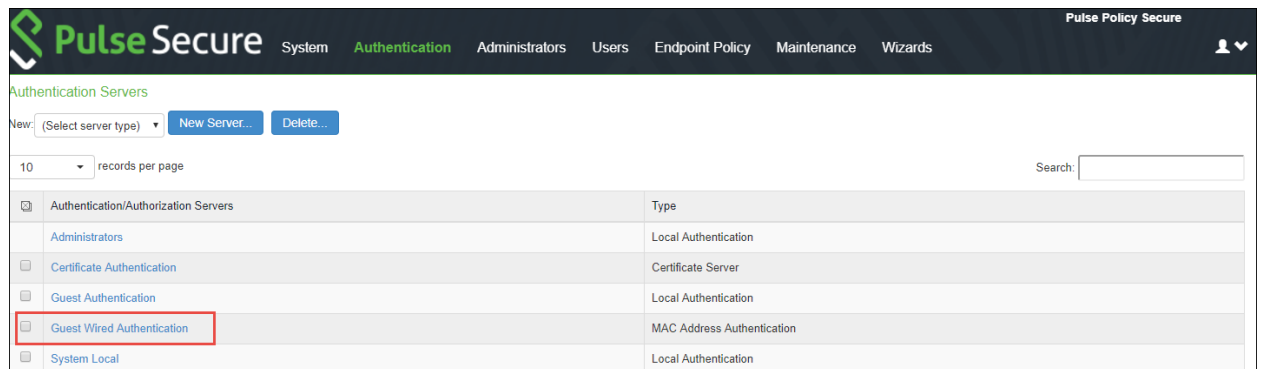

2. Click **Guest Wired Authentication** available by default to view the settings.


Figure 292: Guest Wired Authentication Settings

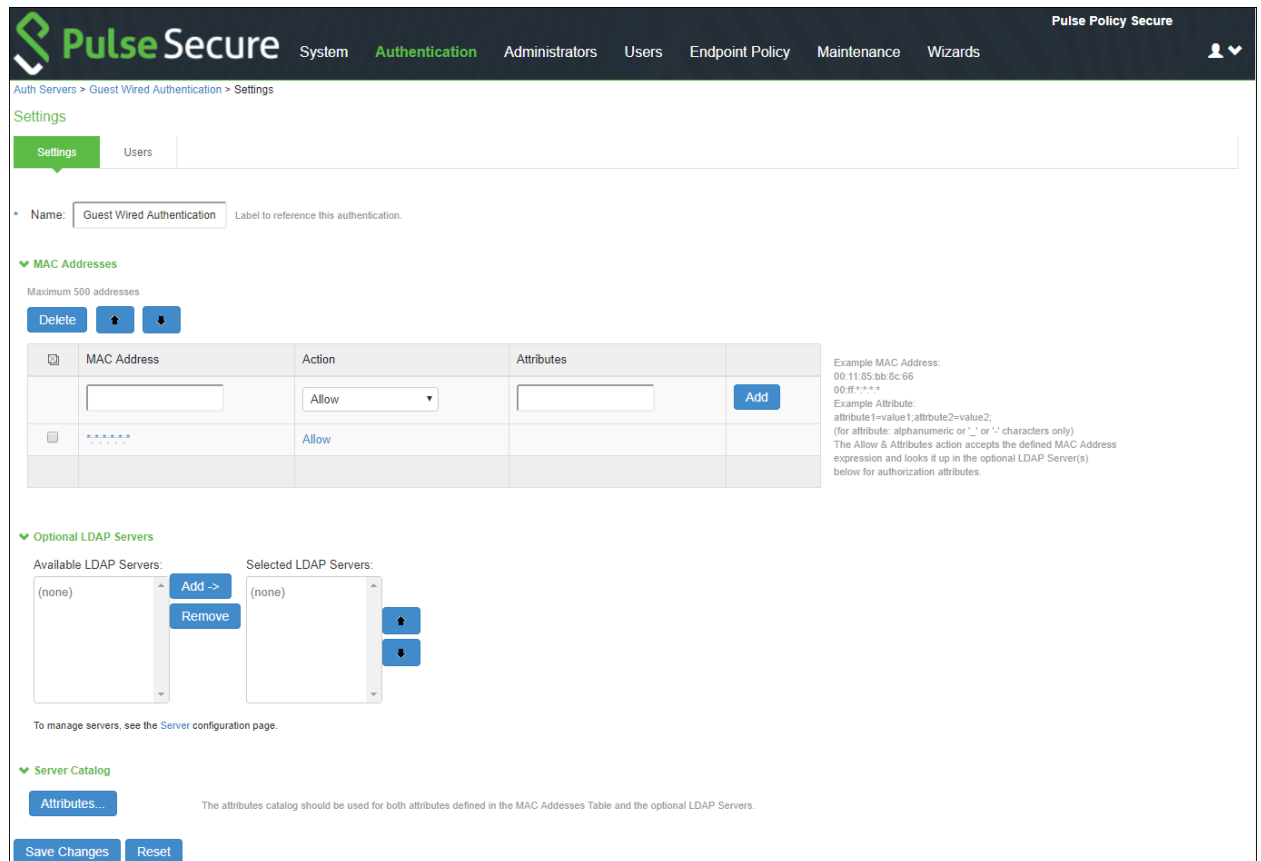

3. You can make the necessary changes and click **Save Changes**.

4. Select **Users > User Roles**. The User Roles page appears.

Figure 293: Guest Wired Restricted Role

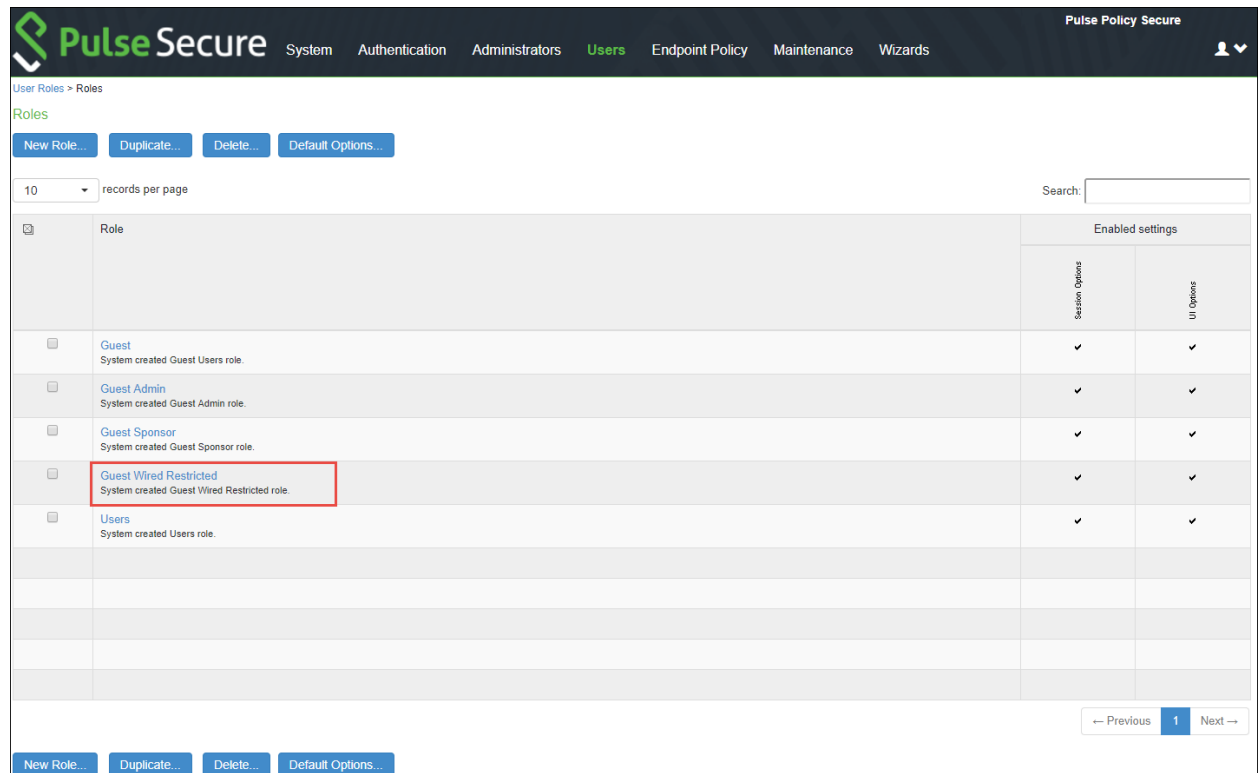

| Role | | Enabled settings | |
|--------------------------|--|------------------|------------|
| | | Session Options | UI Options |
| <input type="checkbox"/> | Guest System created Guest Users role. | ✓ | ✓ |
| <input type="checkbox"/> | Guest Admin System created Guest Admin role. | ✓ | ✓ |
| <input type="checkbox"/> | Guest Sponsor System created Guest Sponsor role. | ✓ | ✓ |
| <input type="checkbox"/> | Guest Wired Restricted System created Guest Wired Restricted role. | ✓ | ✓ |
| <input type="checkbox"/> | Users System created Users role. | ✓ | ✓ |
| | | | |
| | | | |
| | | | |
| | | | |

5. Click **Guest Wired Restricted** user role available by default. The Agentless access is enabled for this role. You can also configure Host Checker for assessing the compliance status of the endpoint.

Figure 294: Guest Wired Authentication General Settings

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

User Roles > Guest Wired Restricted > General > Overview

Overview

General Enterprise Onboarding Agent Agentless

Overview Restrictions Session Options UI Options

* Name: Guest Wired Restricted

Description: System created Guest Wired Restricted role.

Save Changes

Options

If these settings are not specified by any roles assigned to the user, the settings specified in Default Options will be used.

☒ Session Options (Edit)

☒ UI Options (Edit)

☐ Odyssey Settings for Policy Secure Access (Edit)

☐ Odyssey Settings for Preconfigured Installer (Edit)

☐ Enable Guest User Account Management Rights

☐ Enable Sponsored Guest User Account Management Rights

Enterprise Device Onboarding

Check the 'Enterprise Onboarding' to enable for this user role, and specify any role-based options. Note that features disabled here may be granted by other roles assigned to the user.

☐ Enterprise Onboarding Options (VPN, Wifi and Certificate Profiles)

Save Changes

6. Select **Endpoint Policy > MAC Address Authentication Realms** and click **Guest Wired** authentication realm available by default.

Figure 295: MAC Auth Realm- Guest Wired

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

MAC Address Realms > Guest Wired > General

General Authentication Policy Role Mapping

* Name: Guest Wired

Description: System created MAC authentication realm for Guest Wired users.

☐ When editing, start on the Role Mapping page

Servers

Specify the servers to use for authentication and authorization. To create or manage servers, see the Servers page.

Authentication: Guest Wired Authentication

User Directory/Attribute: Same as above

Accounting: None

Device Attributes: None

Dynamic policy evaluation

☐ Enable dynamic policy evaluation

Other Settings

Authentication Policy: Password restrictions

Role Mapping: 1 Rule

Save Changes

7. Select the default role mapping rule, which specifies the conditions to assign the Guest Wired Restricted role.

Figure 296: Guest Wired Role Map

The screenshot shows the Pulse Secure web interface. The top navigation bar includes System, Authentication, Administrators, Users, Endpoint Policy (selected), Maintenance, and Wizards. The breadcrumb trail is MAC Address Realms > Guest Wired > Role Mapping. The 'Role Mapping' tab is active, showing a configuration for assigning roles to users. A table lists a single rule: 'When users meet these conditions' (username is 'any') leading to 'assign these roles' (Guest Wired Restricted). The rule is named 'rule 1'. Buttons for 'New Rule...', 'Duplicate', 'Delete', and 'Save Changes' are visible. A note at the bottom states: 'When more than one role is assigned to a user the settings for all assigned roles will be merged. Note: Users that do not meet any of the above rules will not be able to sign into this realm.'

8. Select **Endpoint Policy > Network Access > Location Group**. Select **Guest Wired** as MAC Auth Realm.

Figure 297: Guest Wired Location Group

The screenshot shows the Pulse Secure web interface for configuring a Location Group. The top navigation bar is the same as Figure 296. The breadcrumb trail is Network Access > Location Group > Guest Wired. The 'Guest Wired' location group is selected. The configuration form includes fields for Name (Guest Wired), Description (System created location group for wired guest users), Sign-in Policy (/guest/), and MAC Authentication Realm (Guest Wired). A 'Save Changes' button is at the bottom.

9. Configure the Cisco switch as a RADIUS client. Ensure that the **Guest Wired** location group and **Support CoA Messages** options are enabled.

Figure 298: RADIUS Client- Guest Wired

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Network Access > RADIUS Client > Cisco wired

Cisco wired

▼ RADIUS Client

* Name: Cisco wired
 Description:
 * IP Address: 10.204.88.10
 * IP Address Range: 1
 * Shared Secret: *****
 * Make/Model: Cisco Systems
 * Location Group: Guest Wired

Label to reference this RADIUS Client.
 IP Address of this RADIUS Client.
 Number of IP Addresses for this RADIUS Client.
 RADIUS shared secret
 To manage make/model, see the [RADIUS Vendor](#)
 To manage groups, see the [Location Group](#)

▼ Dynamic Authorization Support

Support Disconnect Messages ☒
 Support CoA Messages ☒
 *Dynamic Authorization Port 3799

Disconnect Message Support
 Change of Authorization Message Support
 Dynamic Authorization Extensions Port

Save Changes

* indicates required field

- Configure the RADIUS return attributes for Guest Wired policy. The RADIUS return attributes are required for moving the endpoint to the appropriate VLAN.

Figure 299: RADIUS Return Attributes Guest Wired Authentication

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Network Access > RADIUS Return Attributes Policies

RADIUS Return Attributes Policies

RADIUS Dictionary RADIUS Vendor Location Group RADIUS Client **RADIUS Attributes** SNMP Device SNMP Enforcement Policies

Return Attributes Request Attributes Attribute Logging

Show policies that apply to: All roles Update

A RADIUS return attributes policy specifies the return list attributes to send to an 802.1X network access device, such as which VLAN endpoints must use to access the network. If no policy applies, Open Port is the default action.

New Policy... Duplicate Delete... Save Changes

| | Policies | Attributes | Location Group | Interface | Applies to role |
|-----------------------------|-------------|--|----------------|-----------|------------------------|
| <input type="checkbox"/> 1. | Guest | Filter-Id=PERMIT-ALL Termination-Action=1 Cisco-AVPair=subscriber.command=reauthenticate Cisco-AVPair=subscriber.reauthenticate-type=last | Guest Wired | N/A | Guest |
| <input type="checkbox"/> 2. | Guest Wired | Cisco-AVPair=url-redirect-acl=sathya-redirect Cisco-AVPair=url-redirect=https://10.204.88.102/guest?ClientMacAddr=<callingStationId> | Guest Wired | N/A | Guest Wired Restricted |

Keyboard shortcuts:
 Use "<" and ">" keys to move selected items up and down (remember to click Save Changes after rearranging the list). Use Ctrl+Plus and Ctrl-Minus to expand and collapse all items.

- The user configures the RADIUS URL-redirection attributes on the Cisco Switch. Using RADIUS URL-Redirection return attributes the Cisco switch redirects any initial HTTP/s traffic to PPS. You must configure the following return attributes (supported only on Cisco switches):

```
Cisco-AVPAIR=url-redirect-acl=REDIRECT_To_PPS
Cisco-AVPAIR=url-redirect=https://<PPS-SIGN-IN-URL>/guest?ClientMacAddr=<callingStationId>
```

Here in redirect guest portal URL (*/guest), the "ClientMacAddr" is to identify the end client being redirected to PPS. As part of MAB authentication, PPS updates the value of radius return attribute "url-redirect" and replaces <callingStationId> with the client MAC address.

The RADIUS CoA configuration for various Cisco switch platforms is described below.

| Cisco Platform | IOS Version | RADIUS CoA Configuration |
|----------------|-------------|---|
| 3850 | 16.3 | Filter-Id=PERMIT-ALL.in Termination-Action=1 Session-Timeout=43400 |
| 2960X | 15.2 | Filter-Id=PERMIT-ALL.in Termination-Action=1 Session-Timeout=43400 |
| 2960 | 12.2 | Filter-Id=PERMIT-ALL.in CiscoAVPAIR=subscriber:command=reauthenticate Cisco-AVPAIR=subscriber:reauthenticate-type=last Termination-Action=1 Session-Timeout=43400 |

Figure 300: RADIUS Attribute Policies Guest Wired

The screenshot displays the Pulse Secure web interface for configuring a RADIUS Attribute Policy. The navigation bar includes links for System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail shows: Network Access > RADIUS Return Attributes Policies > Guest Wired.

General

* Name: Guest Wired (Required: Label to reference this policy.)
Description:

Location Group

Specify the Location Group for which this policy applies.

Available Location Groups: Default, Guest, Cert Auth. Selected Location Groups: Guest Wired.

RADIUS Attributes

☐ Open port
☐ VLAN: (1 - 4094)
☒ Return Attribute

| Return Attribute | Radius Auth Server Attribute Value | Auth Server Catalog Attribute Value | Value |
|------------------|------------------------------------|-------------------------------------|---|
| Filter-Id | -none- | -none- | |
| Cisco-AVPair | -none- | -none- | url-redirect=radius-redirect |
| Cisco-AVPair | -none- | -none- | url-redirect=https://10.204.88.102/guest?ClientMacAddr=<callingStationId> |

☐ Add Session-Timeout attribute with value equal to the session lifetime
☐ Add Termination-Action attribute with value equal 1

Interface

Specify the Interface which endpoints on this VLAN use to connect to the Pulse Policy Secure

☒ Automatic (use configured VLANs)
☐ Internal
☐ External

Roles

☐ Policy applies to ALL roles
☒ Policy applies to SELECTED roles
☐ Policy applies to all roles OTHER THAN those selected below

Available roles: Guest, Guest Admin, Guest Sponsor, Users. Selected roles: Guest Wired Restricted.

NOTE: changes to this page will cause all L2 clients to drop their connections and reconnect.

Buttons: Save Changes, Save as Copy

Configuring PPS for Sponsored Guest Access


This section describes the configuration that is required for configuring Sponsored Guest access.

- Enable "Sponsored Guest Access" checkbox under Guest Authentication Server.
- Create a list of Sponsor's names in Guest Authentication Server.
- Create Role mapping rule in "Guest Admin" realm to point to "Sponsor" role for the list of sponsor's.
- If sponsor reside in AD, then AD needs to be selected as authentication server instead of "Guest Authentication" under "Guest Admin" realm.
- As part of default configuration, "sponsor" role is created with enabled sponsor management rights. This role can be used for sponsor approved guest access.

To configure PPS for Sponsored Guest access:

1. Select **Authentication > Auth. Servers**. The Authentication Servers screen appears. Click **Guest Authentication** available by default to view the settings.

Figure 301: Guest Authentication

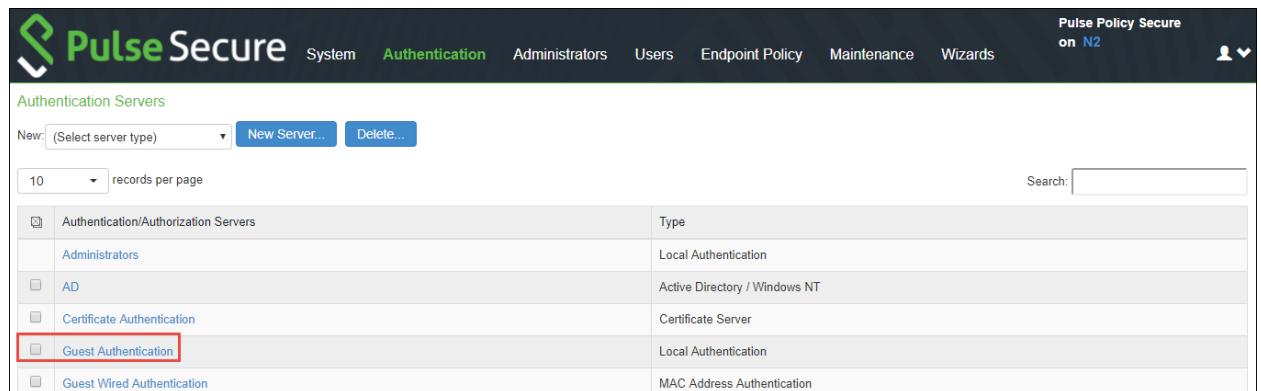

2. Select **Enable Sponsored Guest Access**.

Figure 302: Guest Authentication Settings

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards **Pulse Policy Secure on N2**

Auth Servers > Guest Authentication > Settings

Settings Users Admin Users

*Name: Guest Authentication Label to reference this server.

► Password Options

► Password Management

▼ Guest Access

Guest User Account Managers

☒ Enable Guest User Account Managers to administer Guest Accounts [Configure system GUAM settings](#)

Instructions for Guest User Account Manager:

Maximum Account Validity Period: 24 Set the Guest Account length limit (end time minus start time) in hours. This is valid for guests created by Guest Admin. Does not impact existing user expirations.

Guest Self-Registration

Send guest user credentials via: ☐ SMS ☒ Email [Configure SMS/Email settings](#)

☒ Show credentials on screen after guest completes registration

☒ Enable Sponsored Guest Access

☒ Maximum Account Validity Period for Self Registered Guests: 24 Set the Guest Account length limit in hours. This is valid for self registered guests. Does not impact existing user expirations.

Note: To enable Guest Self-Registration navigate to Signing In > Sign-in Policies > User URLs > [url] > Configure Guest Settings

Common configuration for Guest User Account Managers and Guest Self-Registration

Guest User Name Prefix: guest_ Prefix applied to auto-generated user names.

Guest User Info Fields: Company Name, Host or Sponsor, Title, Company name, Sponsor

Save Changes Reset

3. Select **Email** to send guest user credentials through email. You can make the necessary changes and click **Save Changes**.

Figure 303: Guest Authentication Settings

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards **Pulse Policy Secure on N2**

Auth Servers > Guest Authentication > Settings

Settings Users Admin Users

*Name: Guest Authentication Label to reference this server.

► Password Options

► Password Management

▼ Guest Access

Guest User Account Managers

☒ Enable Guest User Account Managers to administer Guest Accounts [Configure system GUAM settings](#)

Instructions for Guest User Account Manager:

Maximum Account Validity Period: 24 Set the Guest Account length limit (end time minus start time) in hours. This is valid for guests created by Guest Admin. Does not impact existing user expirations.

Guest Self-Registration

Send guest user credentials via: ☐ SMS ☒ Email [Configure SMS/Email settings](#)

☒ Show credentials on screen after guest completes registration

☒ Enable Sponsored Guest Access

☒ Maximum Account Validity Period for Self Registered Guests: 24 Set the Guest Account length limit in hours. This is valid for self registered guests. Does not impact existing user expirations.

Note: To enable Guest Self-Registration navigate to Signing In > Sign-in Policies > User URLs > [url] > Configure Guest Settings


Common configuration for Guest User Account Managers and Guest Self-Registration

Guest User Name Prefix: guest_ Prefix applied to auto-generated user names.

Guest User Info Fields: Company Name, Host or Sponsor, Title, Company name, Sponsor

Save Changes Reset

4. Select **Users > User Roles**. The User Roles page appears.


System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

10 records per page

Search:

| | Role | Enabled settings | | | | | | |
|--------------------------|---|------------------|------------|-----------|---------------|-----------|-----------|-------------------|
| | | Session Options | UI Options | UAC Agent | Host Enforcer | IC Access | Preconfig | App Access Agents |
| <input type="checkbox"/> | Guest System created Guest Users role. | ✓ | ✓ | | | | | ✓ |
| <input type="checkbox"/> | Guest Admin System created Guest Admin role. | ✓ | ✓ | | | | | ✓ |
| <input type="checkbox"/> | Guest Sponsor System created Guest Sponsor role. | ✓ | ✓ | | | | | ✓ |
| <input type="checkbox"/> | Guest Wired Restricted System created Guest Wired Restricted role. | ✓ | ✓ | | | | | ✓ |

- Figure 305: Guest Sponsor General Settings

PulseSecure

SystemAuthenticationAdministratorsUsersEndpoint PolicyMaintenanceWizards

Pulse Policy Secure on N2

User Roles > Guest Sponsor > General > Overview

Overview

GeneralEnterprise OnboardingAgentAgentless

OverviewRestrictionsSession OptionsUI Options

* Name:Guest Sponsor

Description:System created Guest Sponsor role.

Save Changes

Options

If these settings are not specified by any roles assigned to the user, the settings specified in Default Options will be used.

☒ Session Options

(Edit)

☒ UI Options

(Edit)

☐ Odyssey Settings for Policy Secure Access

(Edit)

☐ Odyssey Settings for Preconfigured Installer

(Edit)

☐ Enable Guest User Account Management Rights

☒ Enable Sponsored Guest User Account Management Rights

-
- 539

Pulse Secure

Full Name *

Email

Mobile Number

Company Name

Host or Sponsor

Sponsor Email *

7. Select **Authentication > Signing In > Sign-in Policies** and use the default `*/guestsponsor/` sign-in policy.
8. Select **Users > User Realms**. Click the **Guest Sponsor Realm** and specify how to assign the role. Click **New Rule** to add a new role and then click **Save Changes**.

Figure 306: User Realm – Guest Sponsor

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

Pulse Policy Secure on N2

User Realms > Guest Sponsor > Role Mapping > Role Mapping Rule

Role Mapping Rule

* Name:

▼ Rule: If username...

*

If more than one username should match, enter one username per line. You can use * wildcards.

▼ then assign these roles

Available Roles:

Selected Roles:

☐ Stop processing rules when this rule matches

To manage roles, see the [Roles](#) configuration page.

9. Select **User Realms > Guest Sponsor > Role Mapping** and make necessary changes and click **Save Changes** to save the settings.

Figure 307: Guest Sponsor Role Mapping

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

Pulse Policy Secure on N2

User Realms > Guest Sponsor > Role Mapping

Role Mapping

General Authentication Policy **Role Mapping**

Specify how to assign roles to users when they sign in. Users that are not assigned a role will not be able to sign in.

New Rule... Duplicate Delete Up Down Save Changes

| | When users meet these conditions | assign these roles | Rule Name | Stop |
|----|----------------------------------|--------------------|-----------|------|
| 1. | username is *** | → Guest Sponsor | rule1 | |

When more than one role is assigned to a user:

- ☒ Merge settings for all assigned roles
- ☐ User must select from among assigned roles
- ☐ User must select the sets of merged roles assigned by each rule

Note: Users that do not meet any of the above rules will not be able to sign into this realm.

Enabling Onboarding Feature

Enterprise onboarding feature provides automated onboarding of BYOD clients on premises (WLAN & LAN). PPS enables personal devices to be automatically configured for corporate access.

To enable this feature:

- Select Authentication > Signing In > Sign-in Policies.

The **Sign-in Policies** tab displays the available sign-in policies.

- Under the **User URLs** section select the default sign-in policy.

Figure 308: Onboarding

If more than one realm appears above, Odyssey Access Client or the Policy Secure sign-in page will ask the user to choose. Other endpoints cannot choose a realm; the Policy Secure will assign the first suitable realm from the list. If no realms appear above, sign-in will fail.

☐ User may specify the realm name as a username suffix

When this option is selected, the username suffix will be used to specify a realm

☐ Remove realm suffix before passing to authentication server

When this option is selected, the username suffix will be stripped from the username prior to authenticating with an authentication server

☒ Fail if suffix does not match any of the realms

When this option is selected, the user should provide one of the realm as suffix. If not, the user will be denied sign-in.

▼ Configure Guest Settings

☒ Use this sign-in policy for Guest and Guest admin to use specific pages.

☒ Show Guest Self-Registration link on guest login page.

☒ Show On-Boarding link on guest login page. */guest/

▼ Configure Signin Notifications

☐ Pre-Auth Sign-in Notification


☐ Post-Auth Sign-in Notification

Save Changes

- Select the **Show On-Boarding** link on guest log in page check box. A drop-down list appears next to it.
- Select a required URL.
- Click **Save Changes** to save the settings.

The **Employees can onboard their device here** link appears in an enterprise guest environment as shown in the following figure.

Figure 309: Onboarding link displayed in guest environment on PPS Login Page



Username *

Password *

Sign In

[Forgot Password?](#)

[Register as guest](#)

[Employees can onboard their device here](#)

Localization

In a localized guest user environment when a user tries to register as a guest all the fields are displayed in that localized language, except the **Company Name** and **Host or Sponsor** fields which are displayed in English language.



Note: French Language is used as an example.

To localize these two fields, an Admin user must enter the translated field names of **Company Name** and **Host or Sponsor** fields in the Guest Access Configurations section in PPS.

To make these changes:

1. Select **Authentication > Auth.Servers**. The Authentication Servers screen appears.
 - f. Select a default Authentication Server to make the changes.

The **Settings** tab of the Auth Server displays the settings.

Figure 310: Guest Access Configurations- Update the marked fields in a localized language

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards **Pulse Policy Secure**

Note: Use options on the Administrators/Users > Authentication > [Realm] > Authentication Policy > Password page to specify which realms should inherit the server's password management capabilities

Guest Access

Guest User Account Managers

☒ Enable Guest User Account Managers to administer Guest Accounts [Configure system GUAM settings](#)

Instructions for Guest User Account Manager:

☐ Maximum Account Validity Period: Set the Guest Account length limit (end time minus start time) in hours. This is valid for guests created by Guest Admin. Does not impact existing user expirations.

Guest Self-Registration

Send guest user credentials via: ☐ SMS ☒ Email [configure SMS/Email settings](#)

☒ Show credentials on screen after guest completes registration

☐ Enable Sponsored Guest Access

☒ Maximum Account Validity Period for Self Registered Guests: Set the Guest Account length limit in hours. This is valid for self registered guests. Does not impact existing user expirations.

Note: To enable Guest Self-Registration navigate to Signing In > Sign-in Policies > User URLs > [url] > [Configure Guest Settings](#)

Common configuration for Guest User Account Managers and Guest Self-Registration

Guest User Name Prefix: Prefix applied to auto-generated user names.

Guest User Info Fields:

Enter additional fields for guest user information, one field per line. For example:
Title
Company name
Sponsor

- g. In the **Guest Access Configurations** section, enter the translated field names of **Company Name** and **Host or Sponsor** fields in the **Guest User Info Fields** box.
- h. Click **Save Changes** to save the settings.
- i. In the enterprise guest environment when a guest tries to register, the **Company Name** and **Host or Sponsor** fields are displayed in the respective language.

Figure 311: Enterprise Guest Environment - Localization

Guest Self Registration

To enable Guest Self-Registration:

1. Select **Authentication > Signing In > Sign-in Policies > User URLs**.
2. Configure guest settings.

Figure 312: Guest settings

Authentication realm

Specify what realms will be available when signing in.


| Available realms | Authentication protocol set |
|------------------|-----------------------------|
| Cert Auth | - Not applicable - |
| Guest | Guest |

Configure Guest Settings

- ☒ Use this sign-in policy for Guest and Guest admin to use specific pages.
- ☒ Show Guest Self-Registration link on guest login page.
- ☒ Show On-Boarding link on guest login page. */guest/

3. Login as guest user and click **Register as Guest**.

Figure 313: Guest-Login

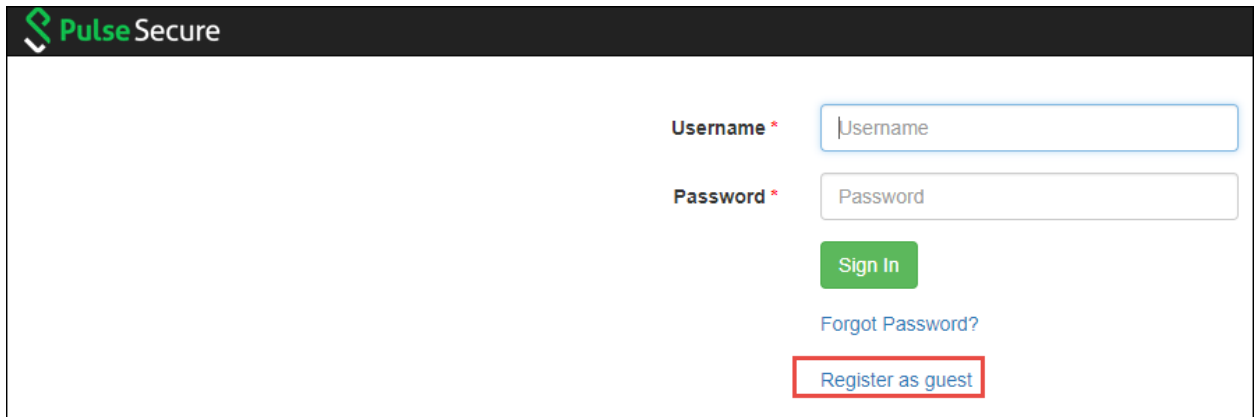

The image shows the Pulse Secure login and registration interface. At the top left is the Pulse Secure logo. The main area contains a login form with fields for 'Username *' and 'Password *'. Below these fields is a green 'Sign In' button. To the right of the 'Sign In' button are two links: 'Forgot Password?' and 'Register as guest'. The 'Register as guest' link is highlighted with a red rectangular border.

Pulse Secure

Username *

Password *

[Sign In](#)

[Forgot Password?](#)

[Register as guest](#)

4. Enter the name, email, contact number, company name, host or sponsor name.
5. Click **Register**.


Guest Self Registration for Sponsor Approved Guest Access

The guest user logs in and registers as guest by entering the contact information such as name, email, phone, company name, sponsor name and the sponsor email who approves/denies the guest access. Once the sponsor approves the access request. The Guest user can access the internet resources.

The user flow for sponsor approved guest access is described below:

1. Open the guest URL and click Register as Guest.


Figure 314: Guest-Login

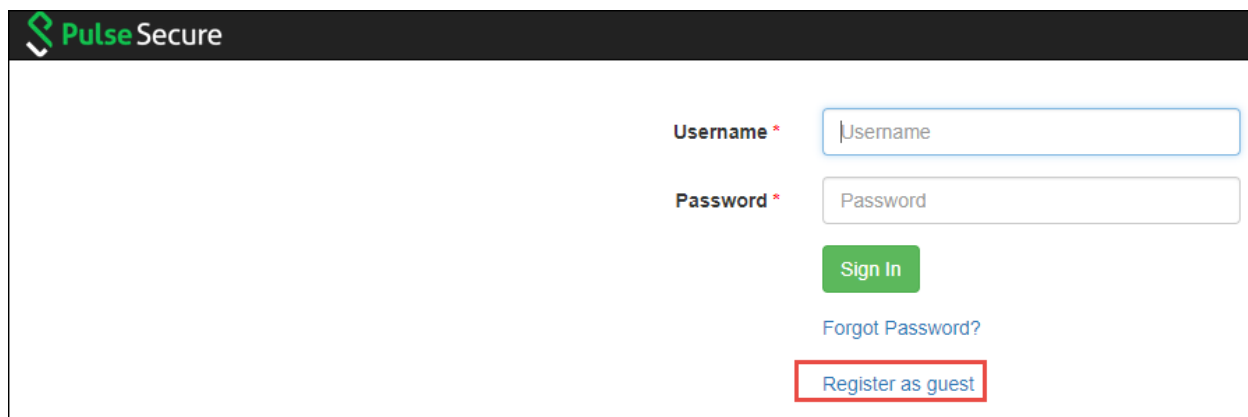

The screenshot shows the Pulse Secure login interface. At the top left is the Pulse Secure logo. Below it, there are two input fields: 'Username *' and 'Password *'. Below the password field is a green 'Sign In' button. To the right of the 'Sign In' button are two links: 'Forgot Password?' and 'Register as guest'. The 'Register as guest' link is highlighted with a red rectangular box.

2. Enter the name, email, contact number, company name, host or sponsor name, and the sponsor email ID (Sponsored Guest Access) The sponsor email ID appears in the self-registration page only when the user enables Sponsored Guest Access option. See [Configuring PPS for Sponsored Guest Access](#).

Figure 315: Guest-Self Registration Configuration

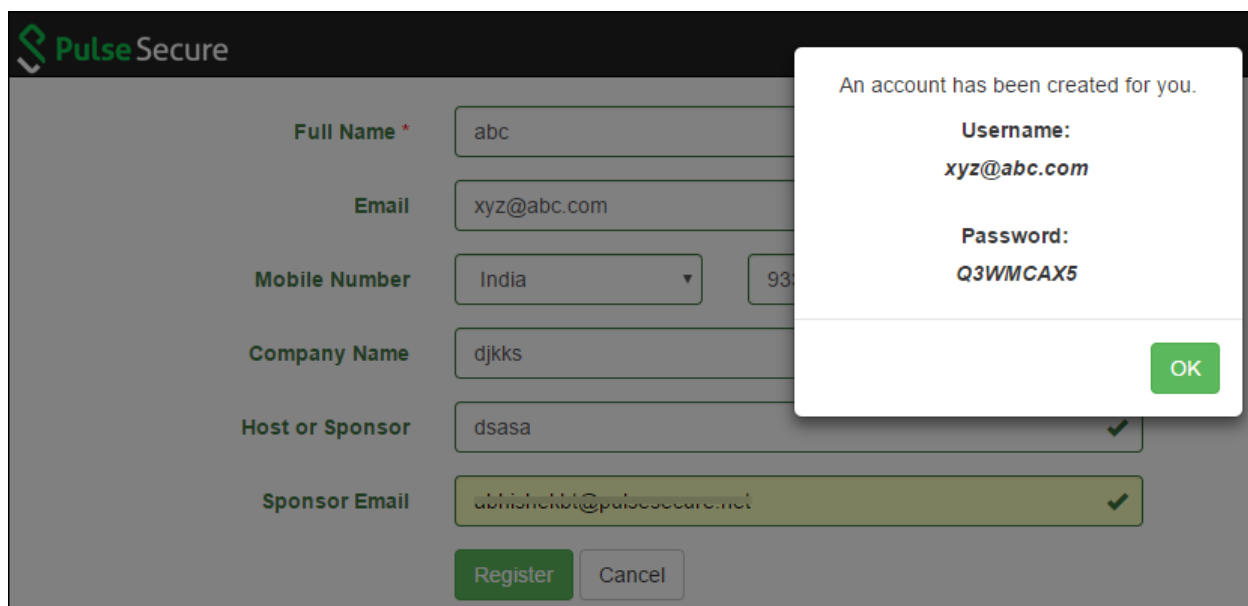

The screenshot shows the Pulse Secure self-registration page. The page has a dark header with the Pulse Secure logo. Below the header, there are several input fields: 'Full Name *' (abc), 'Email' (xyz@abc.com), 'Mobile Number' (India), 'Company Name' (djks), 'Host or Sponsor' (dsasa), and 'Sponsor Email' (abhishekbt@pulsesecure.net). There are 'Register' and 'Cancel' buttons at the bottom. A white modal box is overlaid on the right side of the page, displaying the message: 'An account has been created for you.' Below this message, it shows the 'Username: xyz@abc.com' and 'Password: Q3WMCA5'. There is an 'OK' button at the bottom right of the modal box.

3. The Guest user tries to open the Guest Account using the credentials. The user fails to login as the account should be approved by the Sponsor.

Figure 316: Guest User- Disabled

The screenshot shows the Pulse Secure login interface. At the top left is the Pulse Secure logo. A large red banner across the top center contains the text "Waiting for Approval". Below this, the login form includes fields for "Username *" and "Password *", a green "Sign In" button, and links for "Forgot Password?" and "Register as guest".

4. The Sponsor user receives an email notification to validate the Guest user.

Figure 317: Email Notification

The screenshot shows an email notification from Pulse Secure. The header includes "From: admin@pulsesecure.net", "Sent: 20 June 2017 09:59", and "To: Vidyaashankar Mittal <v.mittal@pulsesecure.net>". The subject is "Subject: Guest Details". The body text states: "A guest has requested access naming you as the sponsor. Please approve/deny this request at <https://10.201.55.16/guestsponsor>". Below this, the "Guest User Record Details:" are listed: Username: v.mittal@gmail.com, Full Name: Guest_1, Start Time: 06/19/2017 09:28 pm, End Time: 06/20/2017 09:28 pm, Time Zone: (GMT-08:00) Pacific Time (US & Canada); Tijuana, Company Name: aabc, and Host or Sponsor: v.mittal@gmail.com.

5. The Sponsor logs in with the user credentials and opens the Sponsor Portal to view the list of Guest users.

Figure 318: Sponsor Log In Page

| Username | Status | Full Name | Email | Mobile Number | Start Time | End Time | Company Name | Sponsor Name | Actions |
|------------|------------------|-----------|-----------------|---------------|---------------------|---------------------|--------------|--------------|---------|
| guest_3200 | Pending Approval | | xyz@xyz.com | | 05/25/2017 01:58 pm | 05/26/2017 01:58 pm | | | [Icons] |
| guest_3202 | Pending Approval | | abc@abc.com | | 05/25/2017 01:59 pm | 05/26/2017 01:59 pm | | | [Icons] |
| guest_3204 | Pending Approval | Prakesh | prakesh@xyz.com | | 05/25/2017 02:03 pm | 05/26/2017 02:03 pm | abc | xyz | [Icons] |
| guest_3199 | Pending Approval | | pqr@pqr.com | | 05/25/2017 01:58 pm | 05/26/2017 01:58 pm | | | [Icons] |
| ... | Pending Approval | ... | ... | | 05/25/2017 03:02 | 05/26/2017 03:02 | Juniper | ... | [Icons] |

- From the Sponsor page, the Sponsor user can click ? icon and click **Approve** to approve the guest user account details. The following figure shows the Approve window.

Figure 319: Guest User – Approve

| Username | Status | Full Name | Email | Mobile Number | Start Time | End Time | Company Name | Host or Sponsor | Actions |
|-----------------------|------------------|-----------|-----------------------|---------------|---------------------|---------------------|--------------|-----------------|---------|
| bt.abhishek@gmail.com | Pending Approval | Guest_1 | bt.abhishek@gmail.com | | 06/19/2017 09:28 pm | 06/20/2017 09:28 pm | aabc | vshankar | [Icons] |


- Click **Approve**. The Guest User receives a notification email describing that the access is approved.

Figure 320: Guest User – Approved

| Username | Status | Full Name | Email | Mobile Number | Start Time | End Time | Company Name | Host or Sponsor | Actions |
|-----------------------|------------------|-----------|-----------------------|---------------|---------------------|---------------------|--------------|-----------------|---------|
| bt.abhishek@gmail.com | Pending Approval | Guest_1 | bt.abhishek@gmail.com | | 06/19/2017 09:28 pm | 06/20/2017 09:28 pm | aabc | vshankar | [Icons] |


- The Sponsor has the flexibility to edit the user details as shown below. For example, the Sponsorer can revoke the access by changing the setting to disabled.

Figure 321: Guest User –Edit

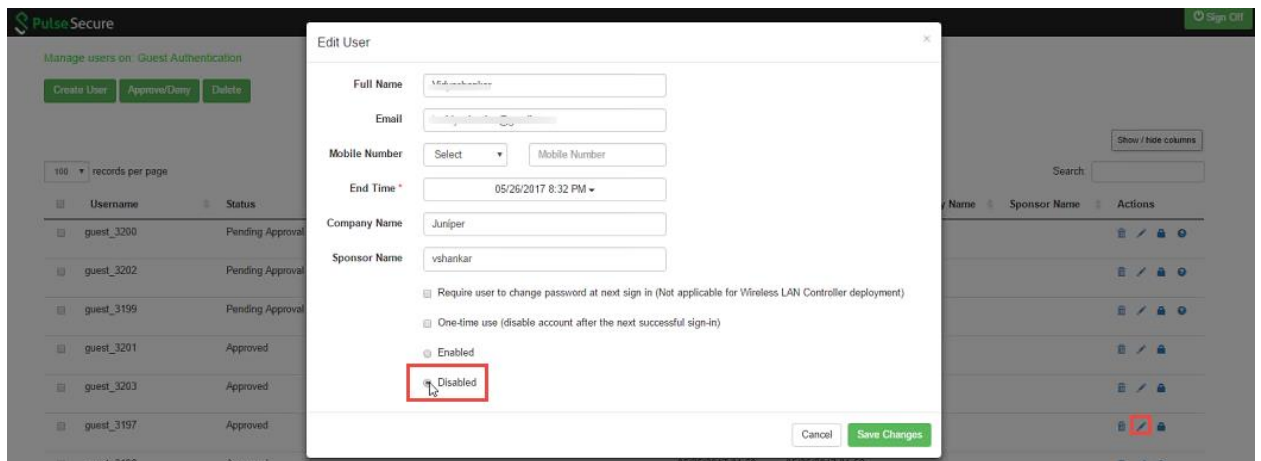

9. The following page is displayed if the Sponsor chooses to deny access to the Guest User. A notification email is sent to the Guest User describing that the access is denied.

Figure 322: Guest User – Denied

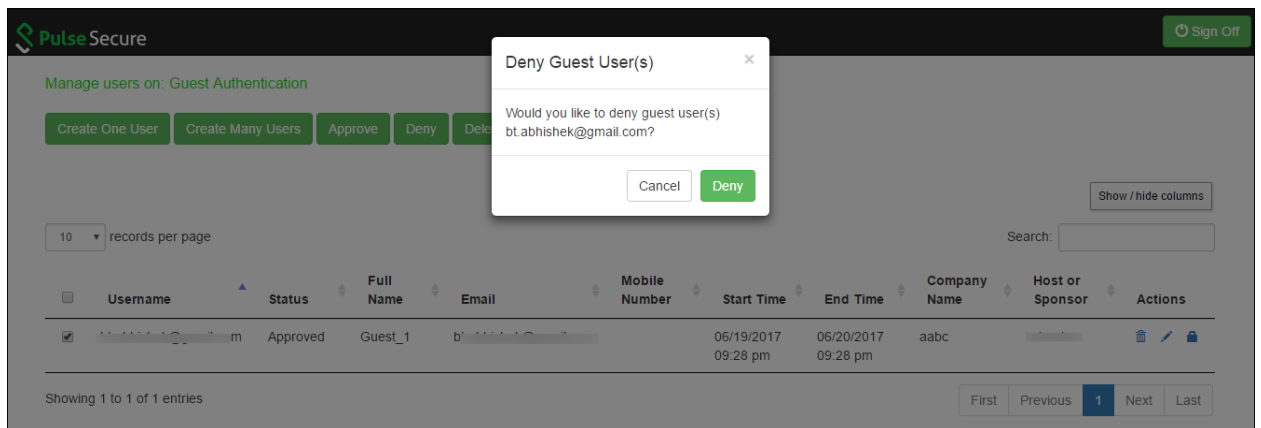

Guest User Administration

- Creating Guest User Accounts
- Creating Guest Sponsor

Creating Guest User Accounts

When the guest user account manager (GUAM) logs in through the sign-in page for the guest realm, an interface is presented for creating accounts as shown in the following figure. The GUAM can view all the guest users created by the GUAM, self registered, and sponsorer created users.

Figure 323: GUAM Page after Log In

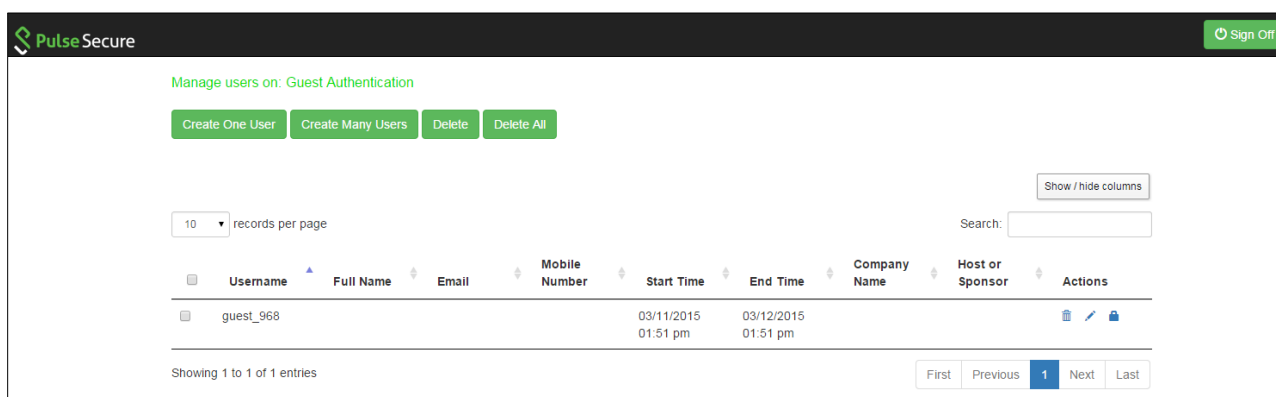





Table 61: Admin User Page - Field Descriptions

| Settings | Guidelines |
|---|---|
| Create One User | Creates one user |
| Create Many Users | Creates multiple users |
| Delete | Deletes the selected users |
| Delete All | Deletes all the users on the page. |
| Show / hide columns | Select the option to hide or show specific columns. |
|  | Deletes the record of the guest user. |
|  | Resets the password of the guest user. |

| | |
|---|---|
|  | Edits the details of the guest user. |
| Search | Searches for guest/s with specific names. |

The following figure shows the page for adding a single guest user.

Figure 324: Guest User – Create One User Page

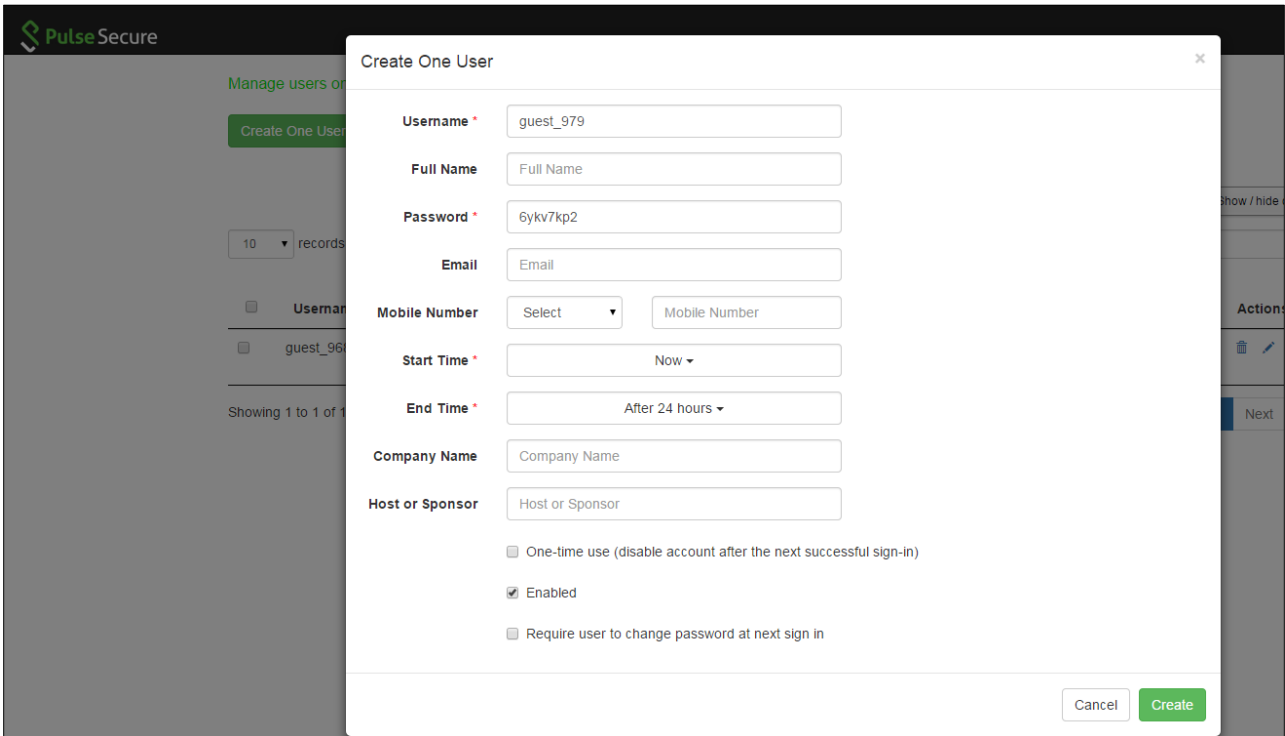


Table 62: Create One User Page Field Descriptions

| Settings | Guidelines |
|----------------------|---|
| Username | Specify an account username. If the local authentication server has been configured with a prefix for guest accounts, the username box is populated with the next username in the prefix-based sequence. We recommend you retain the guest_ prefix so that you can rely on the naming convention in your role mapping rules. |
| Full Name | Specify the name of the guest. |
| Password | <p>A strong password is generated automatically, or you can specify a different password. After you have saved the configuration, the system displays the password characters as asterisks (*) instead of blanks or cleartext.</p> <p>NOTE: The password cannot be decrypted later unless the appropriate option is set when you create a local authentication server.</p> |
| Mobile Number | Select the country name and then specify a valid phone number of the guest user. The PPS sends the login credentials to this mobile number through SMS. |

| Settings | Guidelines |
|--|--|
| Email | Specify an email address you can use to contact the guest if necessary. |
| Start Time | By default, the 'Now' option is displayed. You can specify a start time for the account activity period by clicking on the drop-down and selecting from the calendar menu. |
| End Time | <p>By default, 'After 24 hours is displayed. You can specify an end of the account activity period. Click on the drop-down menu and select from the calendar menu. Once a user account has expired, it is deleted from the system.</p> <p>The process that deletes the guest user account runs every ten minutes. There may be a delay of some minutes before the account is purged. Even if the time or date on the system is moved ahead past the expiration time, the account could still be valid until the purge process runs. One-time user accounts are not affected by the ten-minute delay: one-time accounts are deleted immediately after the user exits.</p> |
| Company Name | Enter the name of the company of the guest. |
| Host or Sponsor | Enter whether the guest is a Host or Sponsor. |
| One-time use | Select this option if you want the account deleted immediately after the guest user exits the browser or signs out. |
| Enabled | Select this option to enable the account |
| Require user to change password at next sign in | <p>Select this option to prompt the user to change the configured password.</p> <p>NOTE: This option will not be supported in GUAM for WLC case. This option should not be enabled. Even if enabled, it will not have any effect.</p> |

The following figure shows the page for adding many users. The below table describes the user configuration.

Figure 325: Guest User – Create Many Users Page

The guest usernames and passwords are created by the system as you click in the **Username** text box.


Table 63: Create Many Users Page - Field Descriptions

| Settings | Guidelines |
|------------------------|--|
| Username | Specify the prefix to be used for the multiple accounts you are creating. |
| Full Name | Enter the full name of the guest. |
| Password | A strong password is generated automatically, or you can specify a different password. After you have saved the configuration, the system displays the password characters as asterisks (*) instead of blanks or cleartext. |
| Start Time | You can specify a start time for the account activity period by clicking on the drop-down and selecting from the calendar menu |
| End Time | <p>You can specify an end of the account activity period. Click on the drop-down menu and select from the calendar menu. Once a user account has expired, it is deleted from the system.</p> <p>The process that deletes the guest user account runs every ten minutes. There may be a delay of some minutes before the account is purged. Even if the time or date on the system is moved ahead past the expiration time, the account could still be valid until the purge process runs. One-time user accounts are not affected by the ten-minute delay: one-time accounts are deleted immediately after the user exits.</p> |
| Company Name | Enter the name of the company of the guest. (Optional) |
| Host or Sponsor | Enter whether the guest is a Host or Sponsor. (Optional) |
| One-time use | Select this option if you want the account deleted immediately after the guest user exits the browser or |

| Settings | Guidelines |
|--|--|
| | signs out |
| Enabled | Select this option to enable the account. |
| Require user to change password at next sign in | Select this option to prompt the user to change the configured password NOTE: This option will not be supported in GUAM for WLC case. This option should not be enabled. Even if enabled, it will not have any effect. |

After the GUAM user clicks the **Create** button the following popup is displayed.

Figure 326: Multiple Users Created Popup Message

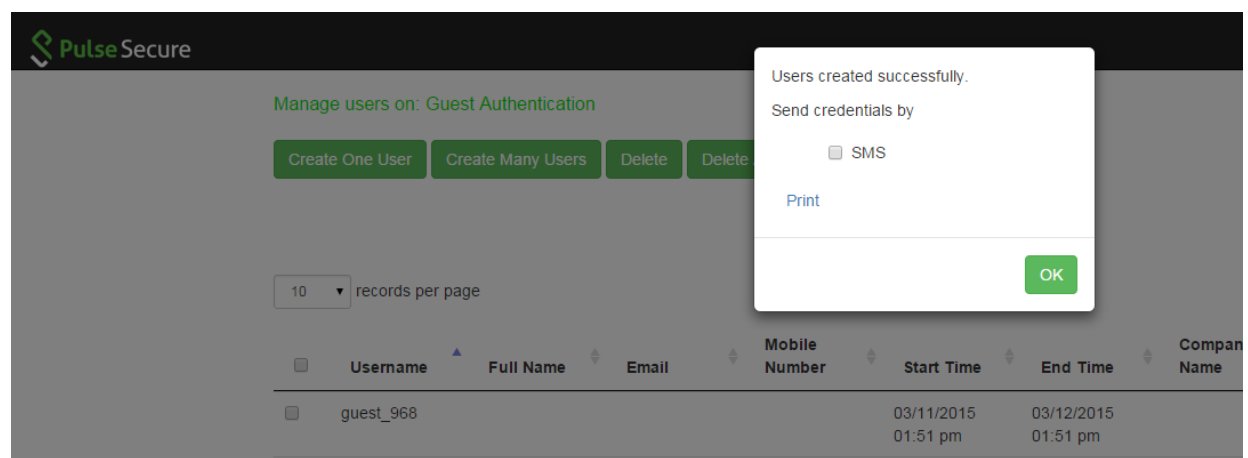

- Select **SMS** and click **OK** to send the credentials to the guests' mobiles.
- Click **Print** to generate a printout of the credentials.

Figure 327: Multiple users created - Displayed on the guest admin page

Manage users on: Guest Authentication

[Create One User](#)
[Create Many Users](#)
[Delete](#)
[Delete All](#)

[Show / hide columns](#)

10 records per page

Search:

| <input type="checkbox"/> | Username | Full Name | Email | Mobile Number | Start Time | End Time | Company Name | Host or Sponsor | Actions |
|--------------------------|-----------|-----------|-------|-------------------|---------------------|---------------------|--------------|-----------------|---------|
| <input type="checkbox"/> | guest_968 | | | | 03/11/2015 01:51 pm | 03/12/2015 01:51 pm | | | |
| <input type="checkbox"/> | guest_981 | | | | 03/11/2015 02:35 pm | 03/12/2015 02:35 pm | GE | Sponsor | |
| <input type="checkbox"/> | guest_992 | | | + (1) 18883145822 | 03/11/2015 03:16 pm | 03/12/2015 03:16 pm | | | |
| <input type="checkbox"/> | guest_993 | | | | 03/11/2015 03:16 pm | 03/12/2015 03:16 pm | | | |
| <input type="checkbox"/> | guest_994 | | | | 03/11/2015 03:16 pm | 03/12/2015 03:16 pm | | | |
| <input type="checkbox"/> | guest_995 | | | | 03/11/2015 03:16 pm | 03/12/2015 03:16 pm | | | |

Showing 1 to 6 of 6 entries

[First](#)
[Previous](#)
[1](#)
[Next](#)
[Last](#)

From the GUAM page, the GUAM user can click **Edit** icon of a guest user account to modify the guest user account details. The following figure shows the Edit User window.

Figure 328: Guest User – Edit User Page

Manage users on

[Create One User](#)

10 records

| <input type="checkbox"/> | Username | Full Name | Email | Mobile Number | Start Time | End Time | Company Name | Host or Sponsor | Actions |
|--------------------------|-----------|-----------|-------|---------------|------------|----------|--------------|-----------------|---------|
| <input type="checkbox"/> | guest_968 | | | | | | | | |
| <input type="checkbox"/> | guest_981 | | | | | | | | |
| <input type="checkbox"/> | guest_992 | | | | | | | | |
| <input type="checkbox"/> | guest_993 | | | | | | | | |
| <input type="checkbox"/> | guest_994 | | | | | | | | |
| <input type="checkbox"/> | guest_995 | | | | | | | | |

Edit User
✕

Full Name

Email

Mobile Number

United States

End Time *

03/12/2015 2:35 PM

Company Name

Host or Sponsor

☐ Require user to change password at next sign in

☐ One-time use (disable account after the next successful sign-in)

☒ Enabled


☐ Disabled

Cancel

Save Changes

After clicking **Save Changes** the following popup appears.

Figure 329: Guest User – Edit User Successful popup with Email, SMS, and Print options

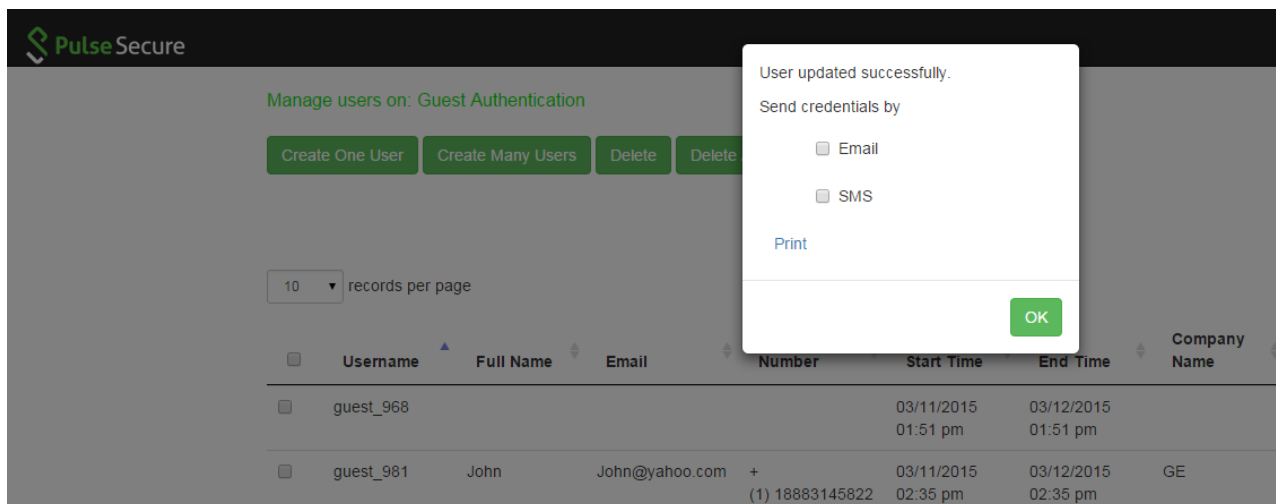

From the GUAM page, the GUAM user can click **Print** to generate a printable record of the guest user account. [bookmark91](#)

The following figure shows the print details page.

Figure 330: Guest User – Print Details Page

Guest User Record Details:

| | |
|-----------------|---------------------|
| Username: | guest_981 |
| Full Name: | John |
| Password: | ***** |
| Start Time: | 03/11/2015 02:35 pm |
| End Time: | 03/12/2015 02:35 pm |
| Company Name | GE |
| Host or Sponsor | Sponsor |

Creating Guest Sponsor Portal

The Sponsor page is similar to GUAM page, where the Sponsor can see the list of guest users who marked the Sponsor while creating the guest user account. When the guest sponsor logs in through the sign-in page for the guest sponsor realm the following page is displayed for creating accounts. The Sponsor can see only the guest users created by the Sponsor and the Guest users who have marked someone as a Sponsor while creating guest user account.




Figure 331: Sponsor Log In Page

| Username | Status | Full Name | Email | Mobile Number | Start Time | End Time | Company Name | Host or Sponsor | Actions |
|----------|----------|-----------|-------|---------------|---------------------|---------------------|--------------|-----------------|---------|
| guest_33 | Approved | | | | 08/07/2017 04:56 pm | 08/08/2017 04:56 pm | | | [Icons] |
| guest_34 | Approved | | | | 08/07/2017 04:56 pm | 08/08/2017 04:56 pm | | | [Icons] |
| guest_35 | Approved | | | | 08/07/2017 04:56 pm | 08/08/2017 04:56 pm | | | [Icons] |
| guest_36 | Approved | | | | 08/07/2017 04:56 pm | 08/08/2017 04:56 pm | | | [Icons] |
| guest_37 | Approved | | | | 08/07/2017 04:56 pm | 08/08/2017 04:56 pm | | | [Icons] |

The below table describes the various fields on the Sponsor user page.

Table 64: Sponsor User Page - Field Descriptions

| Settings | Guidelines |
|--|---|
| Create One User | Creates one user |
| Create Many Users | Creates multiple users |
| <div>Approve</div> <div> <div>Actions</div> <div> <input checked="" type="checkbox"/> <input type="checkbox"/> </div> </div> | Approves the guest user access. |
| <div>Deny</div> <div> <div>Actions</div> <div> <input checked="" type="checkbox"/> <input type="checkbox"/> </div> </div> | Denies the guest user access. |
| Delete | Deletes the selected users |
| Delete All | Deletes all the users on the page. |
| Show / hide columns | Select the option to hide or show specific columns. |

| | |
|---|---|
|  | Deletes the record of the guest user. |
|  | Resets the password of the guest user. |
|  | Edits the details of the guest user. |
| Search | Searches for guest/s with specific names. |

The following figure shows the page for adding a single guest user.

Figure 332: Guest User – Create One User Page

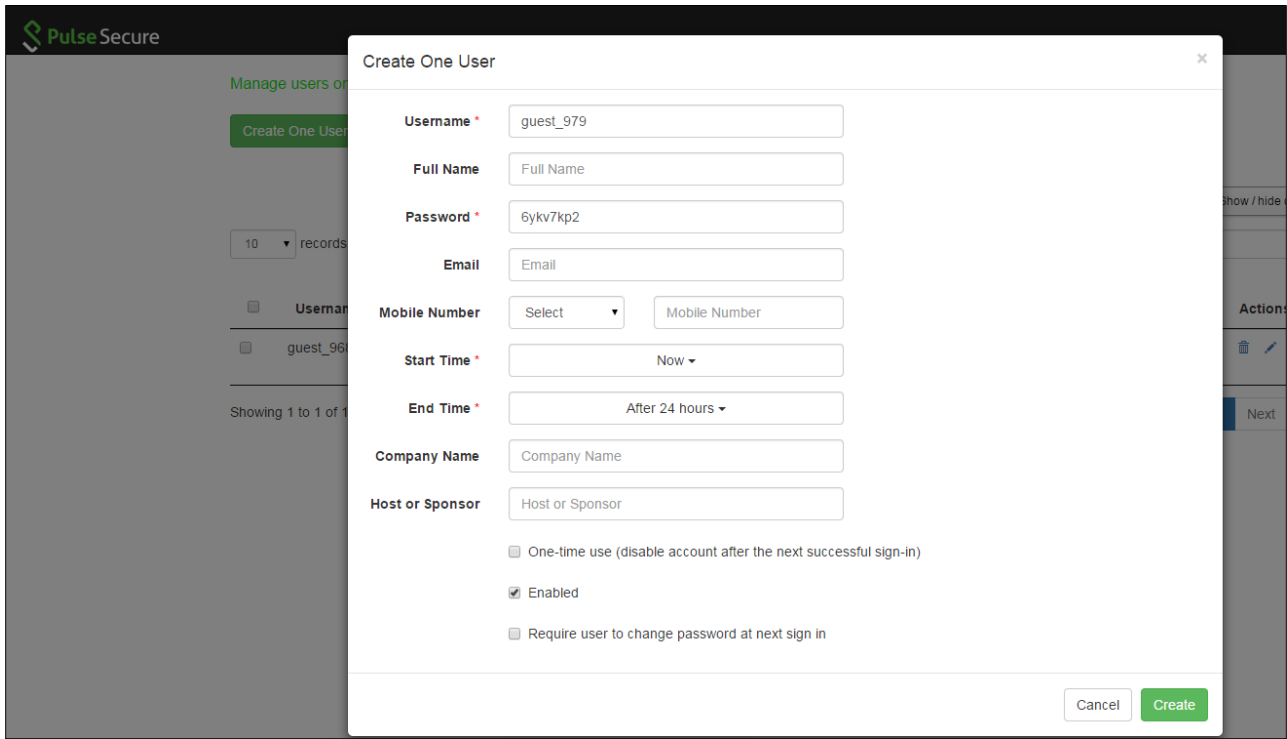


Table 65: Create One User Page Field Descriptions

| Settings | Guidelines |
|------------------|--|
| Username | Specify an account username. If the local authentication server has been configured with a prefix for guest accounts, the username box is populated with the next username in the prefix-based sequence. We recommend you retain the guest_ prefix so that you can rely on the naming convention in your role mapping rules. |
| Full Name | Specify the name of the guest. |
| Password | A strong password is generated automatically, or you can specify a different password. After you have saved the configuration, the system displays the password characters as asterisks (*) instead of blanks or |

| Settings | Guidelines |
|--|---|
| | cleartext. NOTE: The password cannot be decrypted later unless the appropriate option is set when you create a local authentication server. |
| Mobile Number | Select the country name and then specify a valid phone number of the guest user. The PPS sends the login credentials to this mobile number through SMS. |
| Email | Specify an email address you can use to contact the guest if necessary. |
| Start Time | By default, the 'Now' option is displayed. You can specify a start time for the account activity period by clicking on the drop-down and selecting from the calendar menu. |
| End Time | By default, 'After 24 hours is displayed. You can specify an end of the account activity period. Click on the drop-down menu and select from the calendar menu. Once a user account has expired, it is deleted from the system. The process that deletes the guest user account runs every ten minutes. There may be a delay of some minutes before the account is purged. Even if the time or date on the system is moved ahead past the expiration time, the account could still be valid until the purge process runs. One-time user accounts are not affected by the ten-minute delay: one-time accounts are deleted immediately after the user exits. |
| Company Name | Enter the name of the company of the guest. |
| Host or Sponsor | Enter whether the guest is a Host or Sponsor. |
| One-time use | Select this option if you want the account deleted immediately after the guest user exits the browser or signs out. |
| Enabled | Select this option to enable the account |
| Require user to change password at next sign in | Select this option to prompt the user to change the configured password. NOTE: This option will not be supported in GUAM for WLC case. This option should not be enabled. Even if enabled, it will not have any effect. |

The following figure shows the page for adding many users. The below table describes the user configuration.

Figure 333: Guest User – Create Many Users Page

Sign Out

Create Many Users

| Username * | Full Name | Password * | Email | Mobile Number |
|-------------|-----------|------------|-------|---------------|
| guest_982 ✓ | | dRd2KRNr | | Select ▼ |
| guest_983 ✓ | | A49zQSSM | | Select ▼ |
| guest_984 ✓ | | JSImRAVU | | Select ▼ |
| guest_985 ✓ | | DREA563B | | Select ▼ |
| guest_986 ✓ | | FxdAAMQr | | Select ▼ |
| guest_987 | | FRdzzXNe | | Select ▼ |
| | | | | Select ▼ |
| | | | | Select ▼ |
| | | | | Select ▼ |
| | | | | Select ▼ |

Start Time

Now ▼

End Time

After 24 hours ▼

Company Name

Company Name

Host or Sponsor

Host or Sponsor

☐ One-time use (disable account after the next successful sign-in)

☒ Enabled

☐ Require user to change password at next sign in

Cancel

Create


The guest usernames and passwords are created by the system as you click in the **Username** text box.

Table 66: Create Many Users Page - Field Descriptions

| Settings | Guidelines |
|--|--|
| Username | Specify the prefix to be used for the multiple accounts you are creating. |
| Full Name | Enter the full name of the guest. |
| Password | A strong password is generated automatically, or you can specify a different password. After you have saved the configuration, the system displays the password characters as asterisks (*) instead of blanks or cleartext. |
| Start Time | You can specify a start time for the account activity period by clicking on the drop-down and selecting from the calendar menu |
| End Time | <p>You can specify an end of the account activity period. Click on the drop-down menu and select from the calendar menu. Once a user account has expired, it is deleted from the system.</p> <p>The process that deletes the guest user account runs every ten minutes. There may be a delay of some minutes before the account is purged. Even if the time or date on the system is moved ahead past the expiration time, the account could still be valid until the purge process runs. One-time user accounts are not affected by the ten-minute delay: one-time accounts are deleted immediately after the user exits.</p> |
| Company Name | Enter the name of the company of the guest. (Optional) |
| Host or Sponsor | Enter whether the guest is a Host or Sponsor. (Optional) |
| One-time use | Select this option if you want the account deleted immediately after the guest user exits the browser or signs out |
| Enabled | Select this option to enable the account. |
| Require user to change password at next sign in | <p>Select this option to prompt the user to change the configured password</p> <p>NOTE: This option will not be supported in GUAM for WLC case. This option should not be enabled. Even if enabled, it will not have any effect.</p> |

After the GUAM user clicks the **Create** button the following popup is displayed.


Figure 334: Multiple Users Created Popup Message

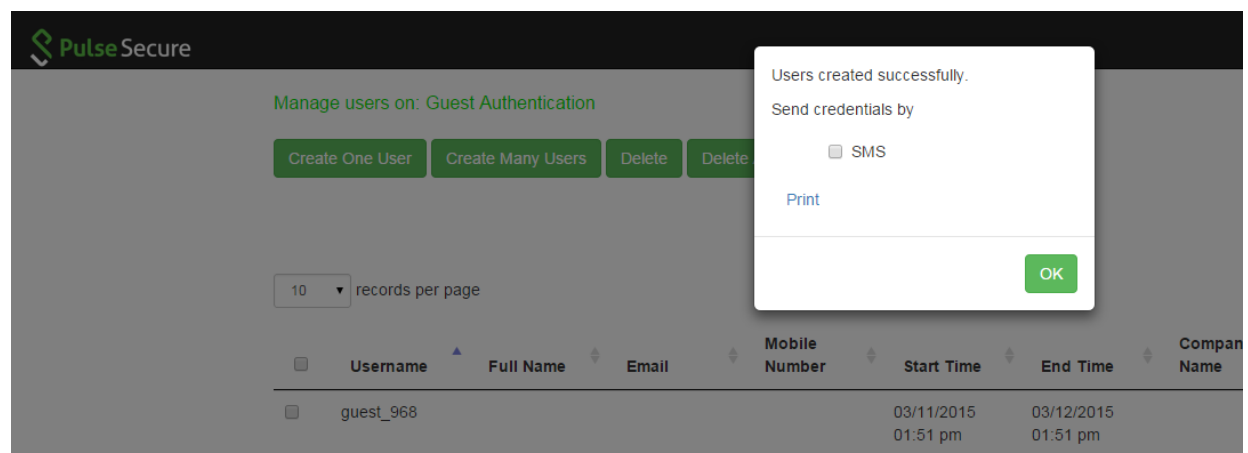

- Select **SMS** and click **OK** to send the credentials to the guests' mobiles.


- Click **Print** to generate a printout of the credentials.

Figure 335: Multiple users created - Displayed on the Sponsor page

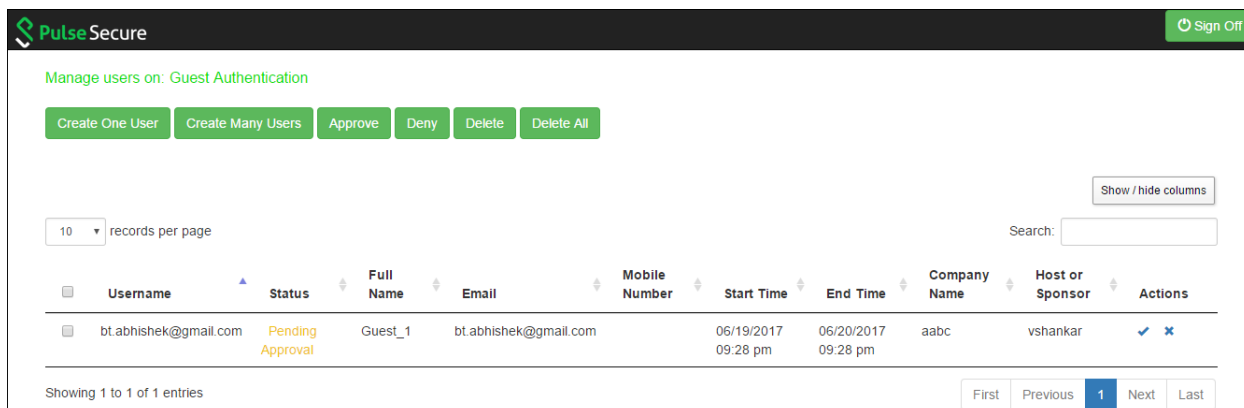


From the Sponsor page, the Sponsor user can click **Approve** icon of a guest user account to approve the guest user account details. The following figure shows the Approve window.

Figure 336: Guest User – Approve

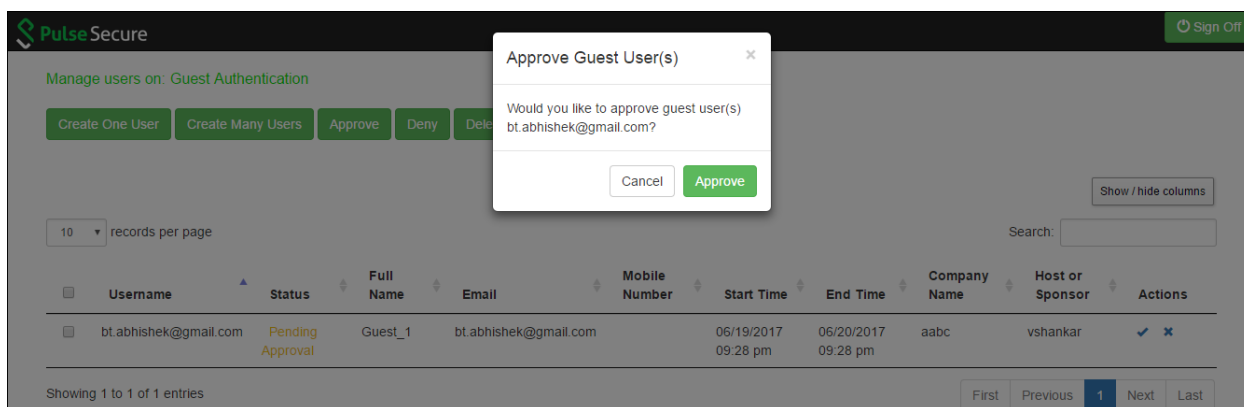

Click **Approve**. The Guest User receives a notification email describing that the access is approved.

Figure 337: Guest User – Approved

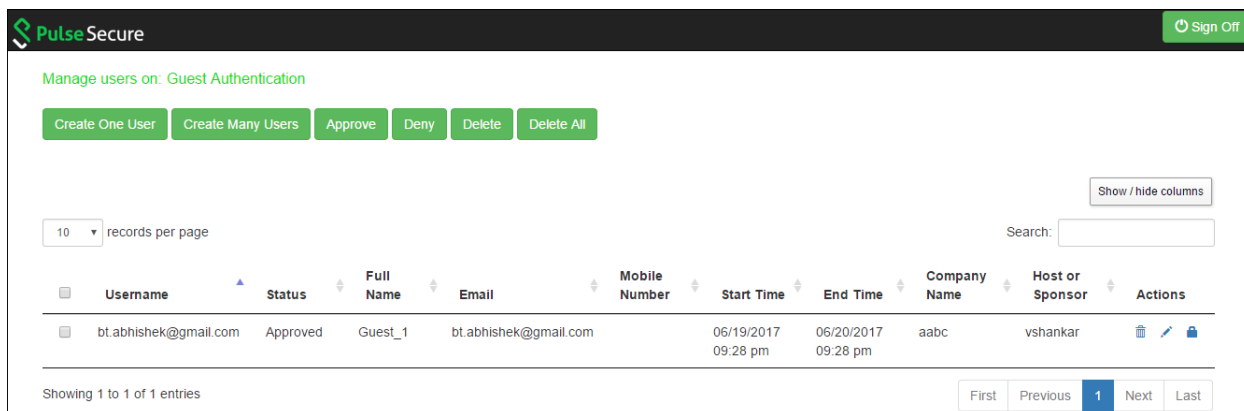

The Sponsor has the flexibility to edit the user details as shown below.

Edit User

Full Name: Guest_1

Email: bt.abhishek@gmail.com

Mobile Number: Select

End Time: 06/21/2017 9:58 AM

Company Name: aabc

Host or Sponsor: vshankar

☐ Require user to change password at next sign in (Not applicable for Wireless LAN Controller deployment)

☐ One-time use (disable account after the next successful sign-in)

☒ Enabled

☐ Disabled

Cancel Save Changes

The following page is displayed if the Sponsor chooses to deny access to the Guest User. A notification email is sent to the Guest User describing that the access is denied.

Deny Guest User(s)

Would you like to deny guest user(s) bt.abhishek@gmail.com?

Cancel Deny

Manage users on: Guest Authentication

Create One User Create Many Users Approve Deny Delete

10 records per page

| | Username | Status | Full Name | Email | Mobile Number | Start Time | End Time | Company Name | Host or Sponsor | Actions |
|-------------------------------------|-----------------------|----------|-----------|-----------------------|---------------|---------------------|---------------------|--------------|-----------------|---------|
| <input checked="" type="checkbox"/> | bt.abhishek@gmail.com | Approved | Guest_1 | bt.abhishek@gmail.com | | 06/19/2017 09:28 pm | 06/20/2017 09:28 pm | aabc | vshankar | |

Showing 1 to 1 of 1 entries

First Previous 1 Next Last

Customizing Guest Self Registration User Pages

The customization for GUAM is no more supported from the PPS 5.2 release.

This topic describes how to customize the Guest Self Register page. It includes the following information:

- [Downloading the Sample Template Files](#)
- [Modifying the Sample Template Files](#)
- [Uploading Your Customized Files](#)
- [Using the Customized Pages](#)

- [Verifying the Customization](#)

Downloading the Sample Template Files

The sample template zip file includes the following files which are added for the PPS 5.2 release:

- GuestLoginPage.html
- GuestLogout.html
- GuestSelfRegistration.html
- GuestForgotPassword.html
- GuestSigninNotifPreAuth.html

To download the sample template files:

1. Select **Authentication > Signing In > Sign in pages**. The Signing In screen appears.
2. Click Upload Custom Pages.

The Upload Custom Sign-In Pages screen appears. This page hosts the sample.zip files which can be used to customize the guest sign in pages.

3. Click the **Sample** link in the Sample Template Files pane.
4. Download the latest sample.zip file.

Modifying the Sample Template Files

You can edit the HTML to modify the look and feel of your page. You can add, modify, or delete JavaScript functions and variables to customize the functionality presented on your page. This section provides examples of common customizations for Guest Self Registration pages. For a reference on the files, functions, and variables found in the templates included in the sample.zip file, see the Custom Sign-In Pages Developer Reference.

The below figure shows the contents of the GuestSelfRegistration.html file. The JavaScript functions and variables used for the standard user interface controls that appear in the predefined pages are highlighted in bold.

The table describes some of the common variables used in the templates and their meaning.

Table 67 Variables

| Variable | Definition |
|-------------------------------|---|
| I18N_FULL_NAME | Field for entering the full name of guest user. |
| I18N_USERNAME_ADMIN_EMAIL | Field for entering the email id of guest user. |
| I18N_USER_ADMIN_MOBILE_NUMBER | Field for entering mobile number of guest user. |
| I18N_USER_ADMIN_REGISTER | Register option in the Guest Self Registration page. Click the button after entering the user details. |
| I18N_CANCEL | Cancel option. Cancels the registration process and takes the user back to the Sign In page of Guest User |

| | |
|----------------------------------|---|
| I18N_USERNAME_COLON | Username: field. It displays the username in the confirmation box. |
| I18N_PASSWORD_COLON | Password: field. It displays the password in the confirmation box. |
| I18N_USER_ADMIN_CREATING_ACCOUNT | Displays the message “An account has been created for you” in the confirmation box. |

Figure 338: GuestSelfRegistration.thtml

```

<div id= "fnDiv" class="form-group required">

    <label for="fullName" class="col-sm-2 control-label"><% I18N_FULL_NAME %></label>

    <div id="fnDiv2" class="col-sm-5">

        <input type="text" class="form-control" id="fullName" name="fullName" placeholder="<% I18N_FULL_NAME %>" autofocus
        validate>

    </div>

</div>

<div id= "emailDiv" class="form-group <%IF emailRequired == 1%> required <%END%>">

    <label for="email" class="col-sm-2 control-label"><% I18N_USER_ADMIN_EMAIL %></label>

    <div id="emailDiv2" class="col-sm-5">

        <input type="email" class="form-control" id="email" name="email" placeholder="<% I18N_USER_ADMIN_EMAIL %>"
        validate>

    </div>

</div>

<div id= "mnDiv" class="form-group <%IF smsRequired == 1%> required <%END%>">

    <label for="mobilenumber" class="col-sm-2 control-label"><% I18N_USER_ADMIN_MOBILE_NUMBER %></label>

    <div id="mnDiv1" class="col-sm-2">

        <select id="cmbCountryCode" class="form-control" name="cmbCountryCode" <%disabled%>>

            <% FOREACH country = countryCode %>

                <option id="<% country.id %>" value="<% country.id %>" <%IF countrySelected == country.id%> selected <%END%>>
                <% country.name %> </option>

            <%END%>

        </select>

    </div>

    <div id="mnDiv2" class="col-sm-3">

        <input type="tel" class="form-control" id="mobilenumber" name="mobilenumber" placeholder="<%
I18N_USER_ADMIN_MOBILE_NUMBER %>" validate>

    </div>

```

```
</div>
```

Removing Fields

You can remove fields from the user interface form by deleting the HTML and JavaScript that define them from the sample file. For example, to delete the “Email” option box, delete the following HTML and variables:

Example

```
<div id= "emailDiv" class="form-group <%IF emailRequired == 1%> required <%END%>">

  <label for="email" class="col-sm-2 control-label"><% I18N_USER_ADMIN_EMAIL %></label>

  <div id="emailDiv2" class="col-sm-5">

    <input type="email" class="form-control" id="email" name="email" placeholder="<%
I18N_USER_ADMIN_EMAIL %>" validate>

  </div>

</div>
```

NOTE: Never delete or modify the following required variables:

- Guest_Includes–
- signinAgainUrl–
- LoginPageErrorMessage–Specifies the error message. The device generates the error message in case of an error otherwise it will be empty
- preAuthSNTText

Figure 339: Default Guest Self Registration Page

The screenshot shows the Pulse Secure Guest Self Registration page. It features a dark header with the Pulse Secure logo. The main content area is white and contains a registration form with the following fields and labels:

- Full Name ***: A text input field.
- Email**: A text input field.
- Mobile Number**: A dropdown menu with a downward arrow and a separate text input field labeled "Mobile Number".
- Company Name**: A text input field.
- Host or Sponsor**: A text input field.

At the bottom of the form are two buttons: a green "Register" button and a white "Cancel" button.

NOTE: You can add a field in the html to display messages

The below figure shows the result of the customization

Figure 340: Custom Guest Self Registration Page - Email field removed

Pulse Secure

Full Name *

Mobile Number Select Mobile Number

Company Name Company Name

Host or Sponsor Host or Sponsor

Register Cancel

Editing Fields

You can edit fields in the user interface form by editing the HTML and JavaScript that define them from the sample file. For example, to edit the “Mobile Number” option box as ‘Contact Number’, edit the following HTML and variables:

Script Before Editing


```
<div id= "mnDiv" class="form-group <%IF smsRequired == 1%> required <%END%>">
<label for="mobilenumber" class="col-sm-2 control-label"> <% I18N_USER_ADMIN_MOBILE_NUMBER %>Contact
Number</label>
<div id="mnDiv1" class="col-sm-2">
  <select id="cmbCountryCode" class="form-control" name="cmbCountryCode" <%disabled%>>
    <% FOREACH country = countryCode %>
      <option id="<% country.id %>" value="<% country.id %>" <%IF countrySelected == country.id%> selected
<%END%>> <% country.name %> </option>
    <%END%>
  </select>
</div>
<div id="mnDiv2" class="col-sm-3">
  <input type="tel" class="form-control" id="mobilenumber" name="mobilenumber" placeholder="<%
I18N_USER_ADMIN_MOBILE_NUMBER %>" validate>
</div>
</div>
```

Script After Editing

```
<div id= "mnDiv" class="form-group <%IF smsRequired == 1%> required <%END%>">
<label for="mobilenumber" class="col-sm-2 control-label"> Contact Number</label>
<div id="mnDiv1" class="col-sm-2">
  <select id="cmbCountryCode" class="form-control" name="cmbCountryCode" <%disabled%>>
    <% FOREACH country = countryCode %>
      <option id="<% country.id %>" value="<% country.id %>" <%IF countrySelected == country.id%> selected
<%END%>> <% country.name %> </option>
    <%END%>
  </select>
</div>
<div id="mnDiv2" class="col-sm-3">
  <input type="tel" class="form-control" id="mobilenumber" name="mobilenumber" placeholder="Contact Number"
validate>
</div>
</div>
```

The below figure shows the result of the customization

Figure 341: Custom Guest Self Registration Page – Mobile Number to Contact Number



Full Name *

Email

Contact Number

Company Name

Host or Sponsor

Uploading Your Customized Files

After you have edited the sample template files, save the files with the same name and add them to the sample.zip file (replacing the previous files).

To upload the files to the system:

- Select Signing In > Sign-in pages.
- Click **Browse** to select the sample.zip file containing the custom templates and assets.
- Click Upload Custom Pages.

The Upload Custom Sign-In Pages screen appears.

Table 68 Guidelines for Configuring a Customized Collection

| Setting | Guidelines |
|--------------------------------------|--|
| Sign-In Pages | |
| Name | Specify the name for the sign-in page. |
| Page Type | Specify the page type. Access is selected by default. |
| Template File | Select the template file in zipped format that contains the custom templates and assets. |
| Upload | |
| Skip validation checks during upload | Select this option to skip the validation checks for the template file. |
| Upload Custom Pages | Select this option to upload the custom pages. |

Using the Customized Pages

After you have uploaded the customized files, you can associate them with your Guest Self Registration sign-in page.

To use the customized pages:


1. Select **Authentication > Signing-In > Sign-In Policies** to display the sign-in policies configuration page.
 - j. Select the custom sign-in page from the drop-down list.
 - k. Click Save Changes.

Verifying the Customization

Sign in to the Guest Self Registration sign-in page as a guest user account manager and verify that the customizations you have made were applied.

[bookmark77](#) The below figure shows the customized Guest Self Registration page, without the **Email ID** field, and the **Mobile Number** field changed as **Contact Number**.

Figure 342: Customized Guest Self Registration Page

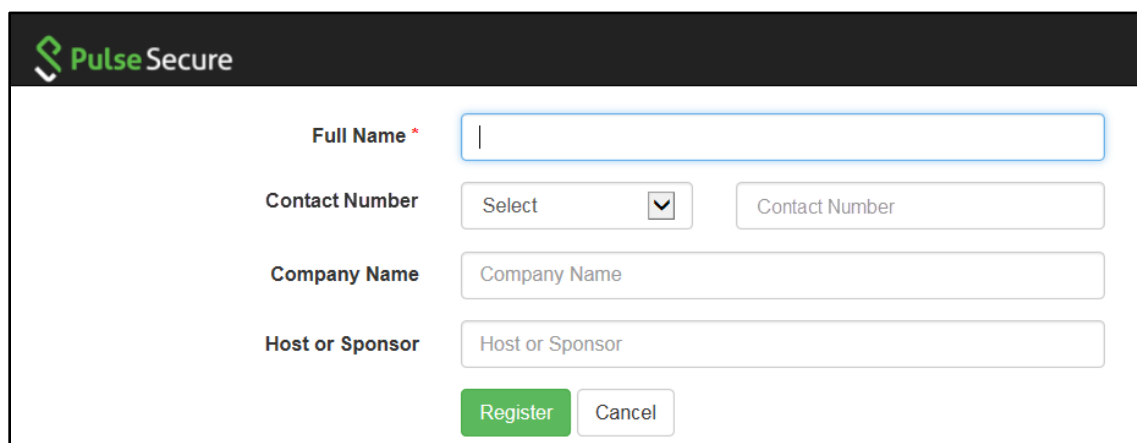

The screenshot displays the Pulse Secure Guest Self Registration page. The header features the Pulse Secure logo. The form includes the following fields and controls:

- Full Name ***: A text input field.
- Contact Number**: A dropdown menu with "Select" and a downward arrow, followed by a text input field labeled "Contact Number".
- Company Name**: A text input field labeled "Company Name".
- Host or Sponsor**: A text input field labeled "Host or Sponsor".
- Buttons**: "Register" (green) and "Cancel" (white) buttons.

Configuring Cisco 2500 WLC

- [Configuring Cisco WLC for PPS GUAM and Guest Self-Registration](#)
- [Configuration required on Cisco WLC for Local AP mode](#)
- [Configuration Required on Cisco WLC in Remote AP mode](#)

Configuring Cisco WLC for PPS GUAM and Guest Self-Registration

This section explains the steps to configure Cisco 2500 WLC for deploying PPS GUAM and Guest Self-Registration feature. This section provides examples of how to configure the Cisco WLC. For more information, see Cisco documentation.

Configuration required on Cisco WLC for Local AP mode

Configuring RADIUS server

1. Login to Cisco WLC. Select **Security > AAA > RADIUS**. Configure PPS server as authentication and accounting servers.
 - **Support for RFC 3576** - Enable this option to trigger RADIUS disconnect when required.

Figure 343: Authentication server settings

The screenshot shows the Cisco WLC configuration interface. The top navigation bar includes links for MONITOR, WLANs, CONTROLLER, WIRELESS, SECURITY (highlighted), MANAGEMENT, COMMANDS, HELP, and FEEDBACK. The left sidebar shows the configuration tree with Security > AAA > RADIUS selected. The main content area is titled 'RADIUS Authentication Servers > New' and contains the following configuration fields:

| Field | Value |
|-------------------------|--|
| Server Index (Priority) | 3 |
| Server IP Address | 3.3.3.2 |
| Shared Secret Format | ASCII |
| Shared Secret | ***** |
| Confirm Shared Secret | ***** |
| Key Wrap | <input type="checkbox"/> (Designed for FIPS customers and requires a key wrap compliant RADIUS server) |
| Port Number | 1812 |
| Server Status | Enabled |
| Support for RFC 3576 | Enabled |
| Server Timeout | 2 seconds |
| Network User | <input checked="" type="checkbox"/> Enable |
| Management | <input checked="" type="checkbox"/> Enable |
| IPSec | <input type="checkbox"/> Enable |

Figure 344: Accounting server settings

The screenshot shows the Cisco WLC configuration interface. The top navigation bar includes links for MONITOR, WLANs, CONTROLLER, WIRELESS, SECURITY (highlighted), MANAGEMENT, COMMANDS, HELP, and FEEDBACK. On the left, the 'Security' menu is expanded, showing options like AAA, RADIUS, TACACS+, and Local EAP. The main content area is titled 'RADIUS Accounting Servers > New'. It contains a form with the following fields: 'Server Index (Priority)' set to 7, 'Server IP Address' set to 3.3.3.2, 'Shared Secret Format' set to ASCII, 'Shared Secret' and 'Confirm Shared Secret' fields filled with dots, 'Port Number' set to 1813, 'Server Status' set to Enabled, 'Server Timeout' set to 2 seconds, 'Network User' checked and set to Enable, and 'IPSec' unchecked.

Using CLI

Before creating the radius server, you need to allot an index number to it which is not currently in use. To find out the index numbers which are currently in use in WLC, use the following command

```
show radius summary
Go through the authentication servers and accounting servers section in the displayed output. Use an unused index
number for adding radius authentication or accounting server.
config radius auth add <RADIUS auth server ID> <RADIUS server IP> 1812 ascii <password>
config radius auth disable < RADIUS auth server ID >
config radius auth rfc3576 enable < RADIUS auth server ID >
config radius auth enable < RADIUS auth server ID >
config radius acct add <RADIUS acct server ID > <RADIUS server IP> 1813 ascii <password>
```

Configuring ACLs

1. On the CISCO WLC main screen go to **Security > Access Control Lists**. Create an IPv4 ACL list to allow DNS, DHCP and PPS (Traffic).

Figure 345: Creating an IPv4 ACL

[MONITOR](#)
[WLANs](#)
[CONTROLLER](#)
[WIRELESS](#)
[SECURITY](#)
[MANAGEMENT](#)
[COMMANDS](#)
[HELP](#)
[FEEDBACK](#)

[Save Configuration](#)

Security

AAA

General

RADIUS

Authentication

Accounting

Fallback

DNS

TACACS+

LDAP

Local Net Users

MAC Filtering

Disabled Clients

User Login Policies

AP Policies

Password Policies

Local EAP

Priority Order

Certificate

Access Control Lists

Access Control Lists

CPU Access Control Lists

FlexConnect ACLs

Layer2 ACLs

Access Control Lists > Edit

< Back

General

Access List Name

test

Deny Counters

0

| Seq | Action | Source IP/Mask | Destination IP/Mask | Protocol | Source Port | Dest Port | DSCP | Direction | Number of Hits |
|-----|--------|-------------------------|-------------------------|----------|-------------|-----------|------|-----------|----------------|
| 1 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | UDP | DHCP Client | Any | Any | Any | 0 |
| 2 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | UDP | DHCP Server | Any | Any | Any | 0 |
| 3 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | UDP | DNS | Any | Any | Any | 0 |
| 4 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | UDP | Any | DNS | Any | Any | 0 |
| 5 | Permit | 3.3.3.0 / 255.255.255.0 | 3.3.3.0 / 255.255.255.0 | Any | Any | Any | Any | Any | 0 |
| 6 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | Any | Any | Any | Any | Any | 0 |

Using CLI

To see all the ACLs that are configured on the controller enter the following command:

```
show acl summary
To create an ACL with name test
config acl create test
To create a rule in the test ACL
config acl rule add test 1 # Creating Rule No 1
config acl rule protocol test 1 17 # 17 is UDP protocol
config acl rule source port range test 1 68 68 # 68 is DHCP client port number
config acl rule action test 1 permit # Allow access

config acl rule add test 2 # Creating Rule No 2
config acl rule protocol test 2 17
config acl rule source port range test 2 67 67 # 67 is DHCP server port number
config acl rule action test 2 permit

config acl rule add test 3 # Creating Rule No 3
config acl rule protocol test 3 17
config acl rule source port range test 3 53 53 # Port 53 for DNS
config acl rule action test 3 permit

config acl rule add test 4 # Creating Rule No 4
config acl rule protocol test 4 17
config acl rule destination port range test 4 53 53
config acl rule action test 4 permit

config acl rule add test 5 # Creating Rule No 5
config acl rule source address test 5 3.3.3.2 255.255.255.255
config acl rule action test 5 permit

config acl rule add test 6 # Creating Rule No 6
config acl rule destination address test 6 3.3.3.2 255.255.255.255
config acl rule action test 6 permit
```

Configuring WLAN

To configure Cisco WLAN:

1. On the CISCO WLC main screen select **WLANs** tab and create a new WLAN.

Figure 346: Creating a WLAN

The screenshot shows the Cisco WLC interface with the 'WLANs' tab selected. The 'WLANs > New' configuration page is displayed. The left sidebar shows 'WLANs' and 'Advanced' options. The main configuration area has the following fields:

- Type: WLAN (dropdown)
- Profile Name: Test (text input)
- SSID: test (text input)
- ID: 10 (dropdown)

- I. Select to **General** tab and enable **Status** checkbox


Figure 347: WLAN - General settings

The screenshot shows the Cisco WLC interface with the 'WLANs' tab selected. The 'WLANs > Edit Test' configuration page is displayed. The left sidebar shows 'WLANs' and 'Advanced' options. The main configuration area has the following fields:

- Profile Name: Test
- Type: WLAN
- SSID: test
- Status: ☒ Enabled
- Security Policies: [WPA2][Auth(802.1X)] (Note: Modifications done under security tab will appear after applying the changes.)
- Radio Policy: All (dropdown)
- Interface/Interface Group(G): management (dropdown)
- Multicast Vlan Feature: ☐ Enabled
- Broadcast SSID: ☒ Enabled
- NAS-ID: SOL-CISCO-WLC


- m. Select **Security > Layer 2** in **WLANs** tab. Select 'None' from the **Layer 2 Security** drop-down list.

Figure 348: WLAN Layer 2 settings

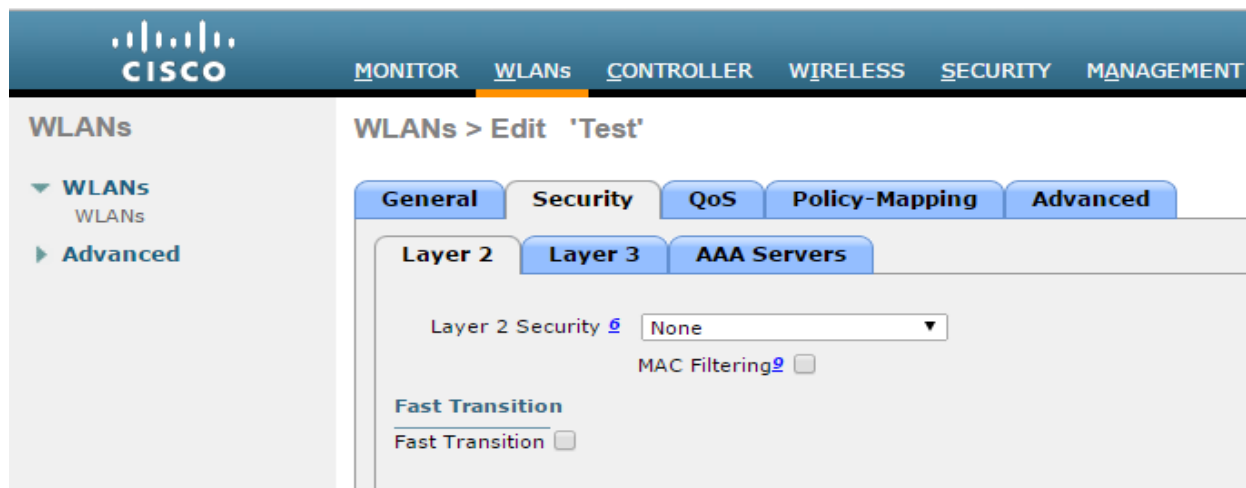

- n. Select **Security > Layer3** in WLANs tab.
- From the **Layer 3 security** drop-down list select 'Web Policy'.
 - For **Preauthentication ACL**, associate the ACL that is created earlier for IPv4.
 - **Over-ride Global Config** - Select the **Enable** check box.
 - From the **Web auth type** drop-down list select External (Re-direct to external server)
 - **URL** – Enter the PPS (Guest sign-in URL) for redirection URL.

Figure 349: WLAN Layer 3 settings

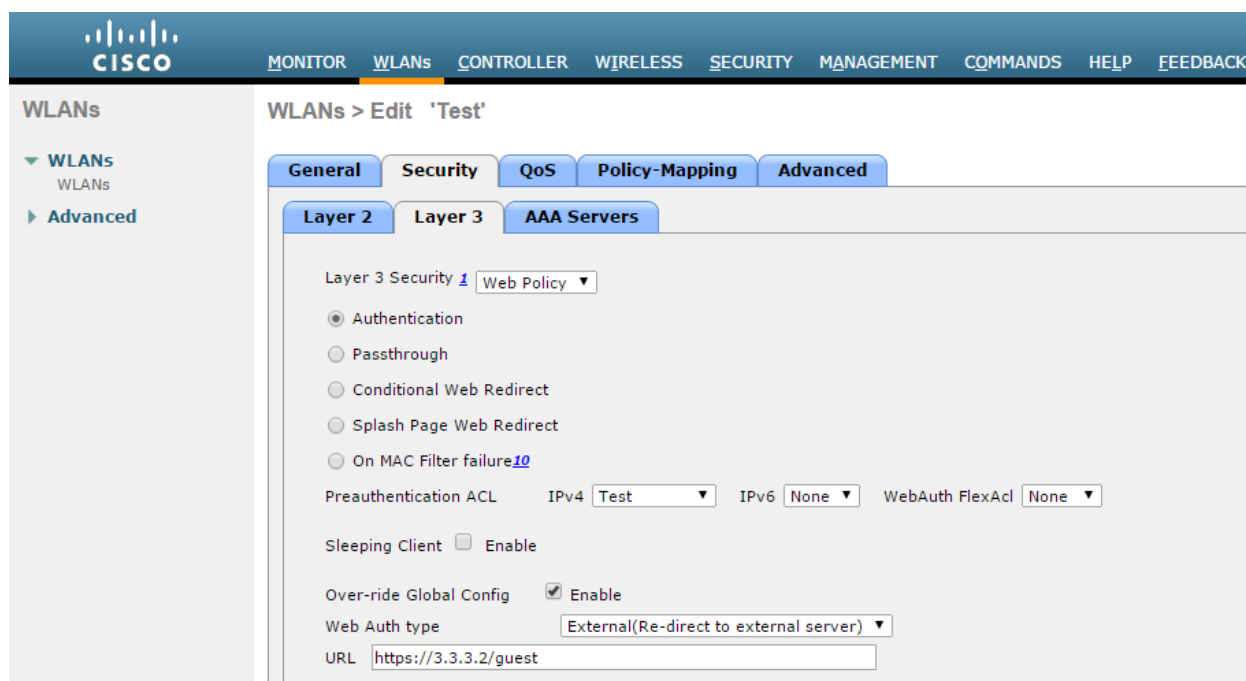

- o. Select **Security > AAA Servers** tab. Configure RADIUS server for authentication and

accounting.

Figure 350: WLAN – AAA Server settings

WLANs > Edit 'Test'

General Security QoS Policy-Mapping Advanced

Layer 2 Layer 3 AAA Servers

Select AAA servers below to override use of default servers on this WLAN

Radius Servers

Radius Server Overwrite interface ☐ Enabled

| Authentication Servers | Accounting Servers |
|------------------------|---|
| Server 1 | <input checked="" type="checkbox"/> Enabled IP:3.3.3.2, Port:1812 |
| Server 2 | <input type="checkbox"/> None |
| Server 3 | <input type="checkbox"/> None |
| Server 4 | <input type="checkbox"/> None |
| Server 5 | <input type="checkbox"/> None |
| Server 6 | <input type="checkbox"/> None |

Radius Server Accounting

Interim Update ☒ Interim Interval 600

- p. Select the **Interim Update** check box.

Note: Instead of management port, if some other Interface/Interface Group (G) is selected during WLAN creation then **Radius Server Overwrite interface** option must be enabled.

WLANs > Edit 'Test'

General Security QoS Policy-Mapping Advanced

Layer 2 Layer 3 AAA Servers

Select AAA servers below to override use of default servers on this WLAN

Radius Servers


Radius Server Overwrite interface ☒ Enabled

Interface Priority WLAN

| Authentication Servers | Accounting Servers |
|------------------------|---|
| Server 1 | <input checked="" type="checkbox"/> Enabled IP:3.3.3.2, Port:1812 |
| Server 2 | <input type="checkbox"/> None |
| Server 3 | <input type="checkbox"/> None |
| Server 4 | <input type="checkbox"/> None |
| Server 5 | <input type="checkbox"/> None |
| Server 6 | <input type="checkbox"/> None |

- q. Select **Advanced** tab and enable **Allow AAA Override** checkbox.

Figure 351: WLAN – Advanced settings

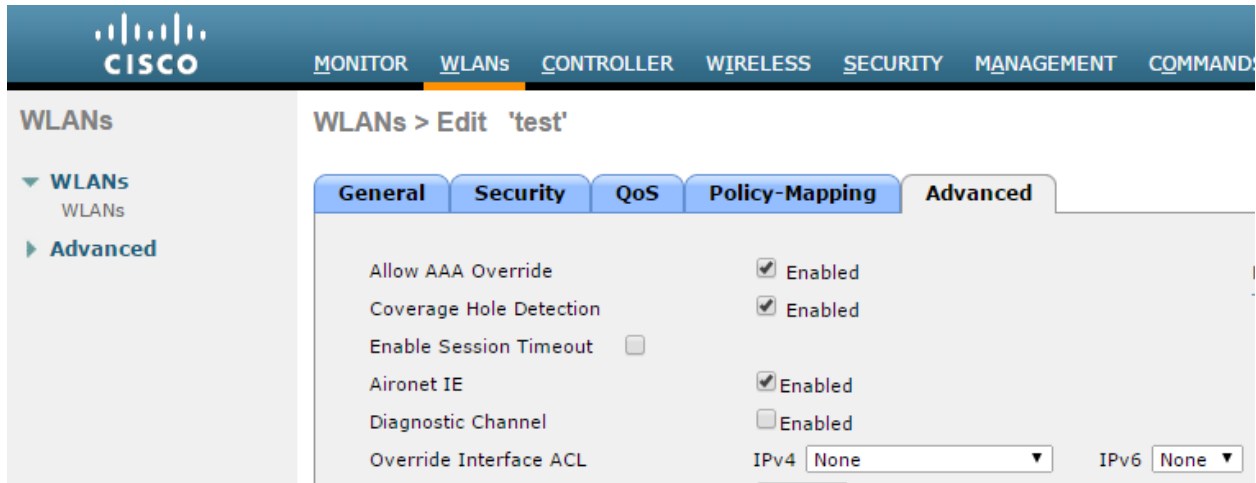

Using CLI


Before creating a new WLAN verify the existing WLANs on the WLC using the following command and use an unused index id for the new WLAN

```
show wlan summary
To create a new WLAN
config wlan create <WLAN_ID> <Profile name> <SSID>
Ex: - config wlan create 10 Test Test # Test is the WLAN name and SSID
config wlan interface <WLAN_ID> <interface-name>
Ex: - config wlan interface 10 management # assigning the WLAN to management port
config wlan security wpa disable <WLAN_ID>
config wlan security web-auth enable <WLAN_ID>
config wlan custom-web global disable <WLAN_ID>
config wlan custom-web ext-webauth-url <ext-webauth-url> <WLAN_ID>
config wlan custom-web webauth-type external <WLAN_ID>
config wlan security web-auth acl <WLAN_ID> <ACL_name>
config wlan radius_server auth add <WLAN_ID> <Radius_auth_server_ID>
config wlan radius_server acct add <WLAN_ID> <Radius_acct_server_ID>
config wlan radius_server overwrite-interface enable <WLAN_ID> ( This command is required only if instead of
management, some other interface is configured for WLAN. Please
check steps 2 and 5)
config wlan radius_server acct interim-update enable <WLAN_ID>
config wlan radius_server acct interim-update <Interval> <WLAN_ID>
config wlan aaa-override enable <WLAN_ID>
config wlan enable <WLAN_ID>
```

Configuring AP Group

1. On the CISCO WLC main screen go to **WLANs > Advanced > AP Groups** screen and map WLAN to the Local AP (Campus Only mode) group.

Figure 352: Mapping WLAN with the Local AP

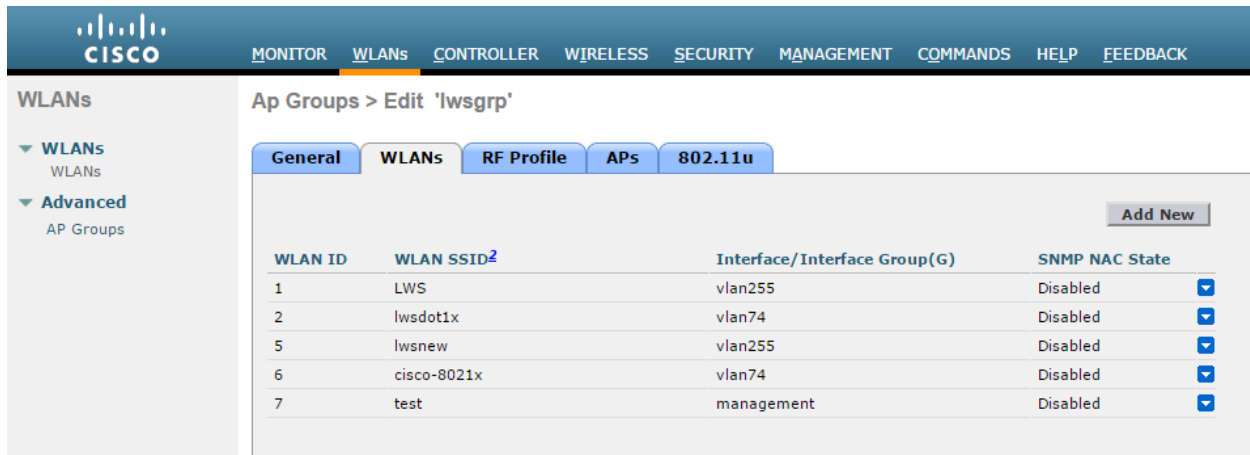

WLANs

MONITOR **WLANs** CONTROLLER WIRELESS SECURITY MANAGEMENT COMMANDS HELP FEEDBACK

WLANs

▼ WLANs
WLANs

▼ Advanced
AP Groups

Ap Groups > Edit 'lwsgrp'

General **WLANs** RF Profile APs 802.11u

Add New

| WLAN ID | WLAN SSID ² | Interface/Interface Group(G) | SNMP NAC State |
|---------|------------------------|------------------------------|----------------|
| 1 | LWS | vlan255 | Disabled |
| 2 | lwsdot1x | vlan74 | Disabled |
| 5 | lwsnew | vlan255 | Disabled |
| 6 | cisco-8021x | vlan74 | Disabled |
| 7 | test | management | Disabled |

Using the CLI

config wlan apgroup interface-mapping add <APgroup Name> <WLAN ID> <interfacename>

To save the configuration use the following command:

save config

Configuration Required on Cisco WLC in Remote AP mode

Configuring RADIUS server

1. Login to Cisco WLC. Go to **Security > AAA > RADIUS**. Configure PPS server as authentication and accounting server.
 - **Support for RFC 3576** - Enable this option to trigger RADIUS disconnect when required.

NOTE: Support for RFC3576 for RADIUS disconnect does not work properly with Cisco 2500, 5500, 7500, and 8500 series.

Figure 353: Authentication server settings

The screenshot displays the Cisco WLC configuration interface for a new RADIUS Authentication Server. The left sidebar shows the navigation tree with 'Security' expanded, and 'RADIUS' selected under 'AAA'. The main content area is titled 'RADIUS Authentication Servers > New' and contains the following configuration fields:

| Field | Value |
|-------------------------|--|
| Server Index (Priority) | 3 |
| Server IP Address | 3.3.3.2 |
| Shared Secret Format | ASCII |
| Shared Secret | ***** |
| Confirm Shared Secret | ***** |
| Key Wrap | <input type="checkbox"/> (Designed for FIPS customers and requires a key wrap compliant RADIUS server) |
| Port Number | 1812 |
| Server Status | Enabled |
| Support for RFC 3576 | Enabled |
| Server Timeout | 2 seconds |
| Network User | <input checked="" type="checkbox"/> Enable |
| Management | <input checked="" type="checkbox"/> Enable |
| IPSec | <input type="checkbox"/> Enable |

Figure 354: Accounting server settings

Using the CLI

Before creating the radius server, you need to allot an index number to it which is not currently in use. To find out the index numbers which are currently in use in WLC, use the following command

```
show radius summary
```


Go through the authentication servers and accounting servers section in the displayed output. Use an unused index number for adding radius authentication or accounting server.

```
config radius auth add <RADIUS auth server ID> <RADIUS server IP> 1812 ascii <password>
config radius auth disable < RADIUS auth server ID >
config radius auth rfc3576 enable < RADIUS auth server ID >
config radius auth enable < RADIUS auth server ID >
config radius acct add <RADIUS acct server ID > <RADIUS server IP> 1813 ascii <password>
```

Configuring FlexConnect ACLs

1. Select **Security > Access Control Lists > FlexConnect ACLS**. Create a FlexConnect ACL list to allow DNS, DHCP and PPS (Traffic).

Figure 355: FlexConnect ACL list



[MONITOR](#)
[WLANs](#)
[CONTROLLER](#)
[WIRELESS](#)
[SECURITY](#)
[MANAGEMENT](#)
[COMMANDS](#)
[HELP](#)
[FEEDBACK](#)

Security

AAA

General
RADIUS

Authentication
Accounting
Fallback
DNS

TACACS+
LDAP
Local Net Users
MAC Filtering
Disabled Clients
User Login Policies
AP Policies
Password Policies

Local EAP

Priority Order

Certificate

Access Control Lists

Access Control Lists
CPU Access Control Lists
FlexConnect ACLs

Access Control Lists > Edit

General

Access List NameNew

| Seq | Action | Source IP/Mask | Destination IP/Mask | Protocol | Source Port | Dest Port | DSCP |
|-----|--------|---------------------------|---------------------------|----------|-------------|-----------|------|
| 1 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | UDP | DHCP Server | Any | Any |
| 2 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | UDP | DNS | Any | Any |
| 3 | Permit | 0.0.0.0 / 0.0.0.0 | 0.0.0.0 / 0.0.0.0 | UDP | Any | DNS | Any |
| 4 | Permit | 3.3.3.2 / 255.255.255.255 | 0.0.0.0 / 0.0.0.0 | Any | Any | Any | Any |
| 5 | Permit | 0.0.0.0 / 0.0.0.0 | 3.3.3.2 / 255.255.255.255 | Any | Any | Any | Any |

Using the CLI

To see all the ACLs that are configured on the controller enter the following command:

```
show flexconnect acl summary
```

To create a new ACL

```
config flexconnect acl create <ACL name>
```

To create rules in the newly created ACL

```
config flexconnect acl rule add <ACL name> <Rule number1>
config flexconnect acl rule protocol <ACL name> <Rule number1> 17 # 17 is UDP
config flexconnect acl rule source port range <ACL name> <Rule number1> 68 68 # 68 is DHCP client port number
config flexconnect acl rule action <ACL name> <Rule number1> permit # Allow access
```

```
config flexconnect acl rule add <ACL Name> <Rule number2>
config flexconnect acl rule protocol <ACL name> <Rule number2> 17
config flexconnect acl rule source port range <ACL name> <Rule number2> 67 67 # 67 is DHCP server port number
config flexconnect acl rule action <ACL name> <Rule number2> permit
```

```
config flexconnect acl rule add <ACL name> <Rule number3>
config flexconnect acl rule protocol <ACL name> <Rule number3> 6
config flexconnect acl rule source port range <ACL name> <Rule number3> 53 53 # Port 53 for DNS
config flexconnect acl rule action <ACL name> <Rule number3> permit
```

```
config flexconnect acl rule add <ACL name> <Rule number4>
config flexconnect acl rule protocol <ACL name> <Rule number4> 6
config flexconnect acl rule destination port range <ACL name> <Rule number4> 53 53 #port 53 for DNS
config flexconnect acl rule action <ACL name> <Rule number4> permit
```

```
config flexconnect acl rule add <ACL name> <Rule number5>
config flexconnect acl rule source address <ACL name> <Rule number5> <PPS IP> <Subnetmask>
config flexconnect acl rule action <ACL name> <Rule number5> permit
```

```
config flexconnect acl rule add <ACL name> <Rule number6>
```

```
config flexconnect acl rule destination address <ACL name> <Rule number6> <PPS IP> <Subnetmask>
config flexconnect acl rule action <ACL name> <Rule number6> permit
```

Configuring WLAN

1. Go to **WLANs** tab and create a new WLAN.

Figure 356: Creating a WLAN

The screenshot shows the Cisco Pulse Secure Administration console. The top navigation bar includes tabs for MONITOR, **WLANs**, CONTROLLER, WIRELESS, SECURITY, MANAGEMENT, and COMMANDS. The left sidebar shows 'WLANs' and 'Advanced' options. The main content area is titled 'WLANs > New' and contains the following configuration fields:

| | |
|--------------|------|
| Type | WLAN |
| Profile Name | Test |
| SSID | test |
| ID | 10 |

2. Navigate to **General** tab and enable **Status** checkbox.


Figure 357: WLAN - General settings

The screenshot shows the Cisco Pulse Secure Administration console. The top navigation bar includes tabs for MONITOR, **WLANs**, CONTROLLER, WIRELESS, SECURITY, MANAGEMENT, COMMANDS, HELP, and EE. The left sidebar shows 'WLANs' and 'Advanced' options. The main content area is titled 'WLANs > Edit 'Test'' and contains the following configuration fields:

| | |
|------------------------------|---|
| Profile Name | Test |
| Type | WLAN |
| SSID | test |
| Status | <input checked="" type="checkbox"/> Enabled |
| Security Policies | [WPA2][Auth(802.1X)] (Modifications done under security tab will appear after applying the changes.) |
| Radio Policy | All |
| Interface/Interface Group(G) | management |
| Multicast Vlan Feature | <input type="checkbox"/> Enabled |
| Broadcast SSID | <input checked="" type="checkbox"/> Enabled |
| NAS-ID | SOL-CISCO-WLC |

3. Go to **Security > Layer 2** in WLAN settings. From the **Layer 2 Security** drop-down list Select 'None'


Figure 358: WLAN – Layer 2 settings

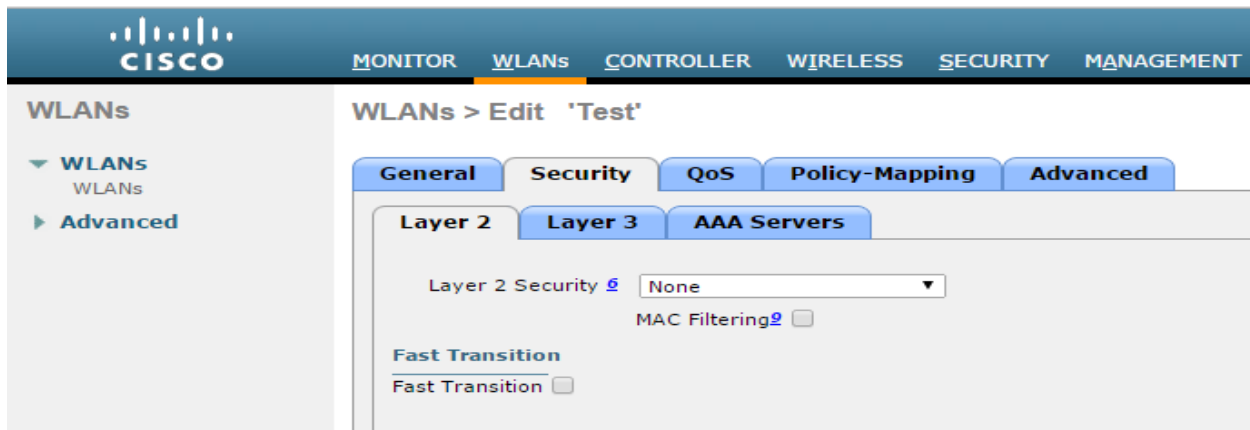

4. Go to Security > Layer3 in WLANs tab.

- From the **Layer 3 security** drop-down list select 'Web Policy'.
- For **Preauthentication ACL**, associate the FlexConnectACL that is created earlier.
- Over-ride Global Config - Select the Enable check box.
- From the **Web auth type** drop-down list select External (Re-direct to external server)
- **URL** – Enter the PPS (Guest sign-in URL) for redirection URL.

Figure 359: WLAN – Layer 3 settings

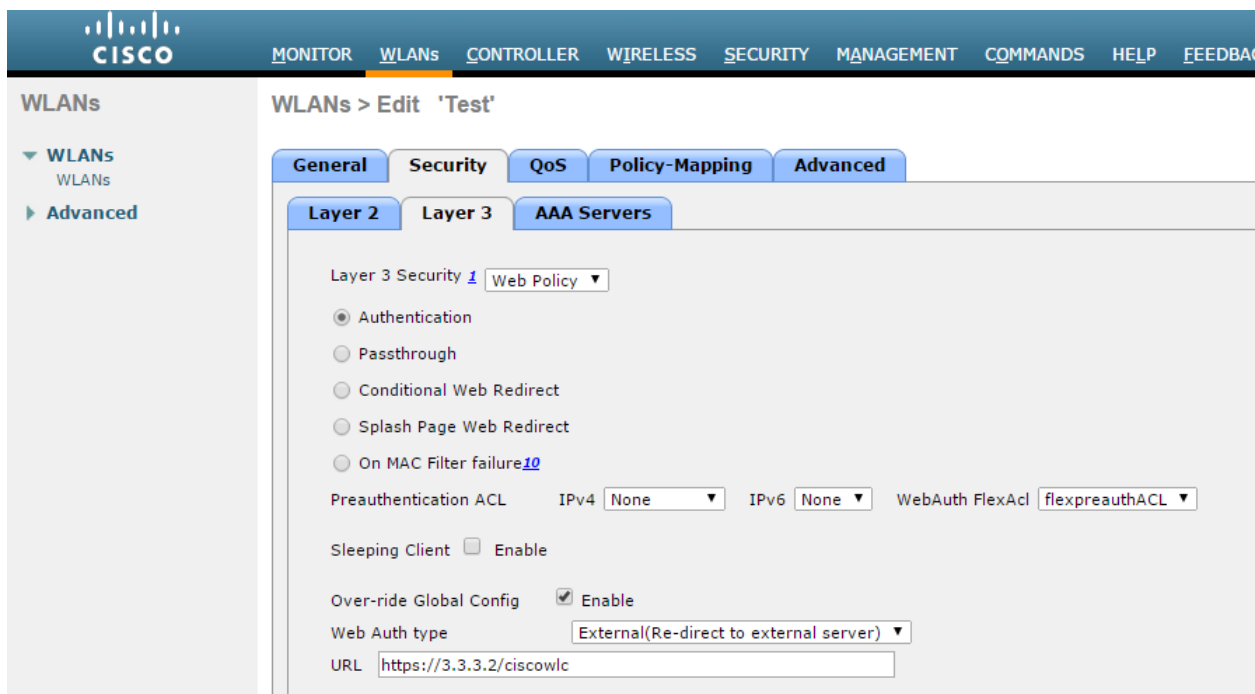

5. Go to **Security > AAA Servers** in **WLANs** tab. Configure RADIUS server for authentication and accounting.

Figure 360: WLAN – AAA Server settings

WLANs > Edit 'Test'

General Security QoS Policy-Mapping Advanced

Layer 2 Layer 3 AAA Servers

Select AAA servers below to override use of default servers on this WLAN

Radius Servers

Radius Server Overwrite interface ☐ Enabled

Authentication Servers Accounting Servers

| Server | Enabled | IP:3.3.3.2, Port:1812 | IP:3.3.3.2, Port:1813 |
|----------|-------------------------------------|-----------------------|-----------------------|
| Server 1 | <input checked="" type="checkbox"/> | IP:3.3.3.2, Port:1812 | IP:3.3.3.2, Port:1813 |
| Server 2 | <input type="checkbox"/> | None | None |
| Server 3 | <input type="checkbox"/> | None | None |
| Server 4 | <input type="checkbox"/> | None | None |
| Server 5 | <input type="checkbox"/> | None | None |
| Server 6 | <input type="checkbox"/> | None | None |

Radius Server Accounting

Interim Update ☒ Interim Interval 600

6. Select the **Interim Update** check box.

WLANs > Edit 'Test'

General Security QoS Policy-Mapping Advanced

Layer 2 Layer 3 AAA Servers

Select AAA servers below to override use of default servers on this WLAN

Radius Servers

Radius Server Overwrite interface ☒ Enabled


Interface Priority WLAN

Authentication Servers Accounting Servers

| Server | Enabled | IP:3.3.3.2, Port:1812 | IP:3.3.3.2, Port:1813 |
|----------|-------------------------------------|-----------------------|-----------------------|
| Server 1 | <input checked="" type="checkbox"/> | IP:3.3.3.2, Port:1812 | IP:3.3.3.2, Port:1813 |
| Server 2 | <input type="checkbox"/> | None | None |
| Server 3 | <input type="checkbox"/> | None | None |
| Server 4 | <input type="checkbox"/> | None | None |
| Server 5 | <input type="checkbox"/> | None | None |
| Server 6 | <input type="checkbox"/> | None | None |

7. Select **Advanced** tab and enable **Allow AAA Override** checkbox.

Figure 361 WLAN – Advanced settings

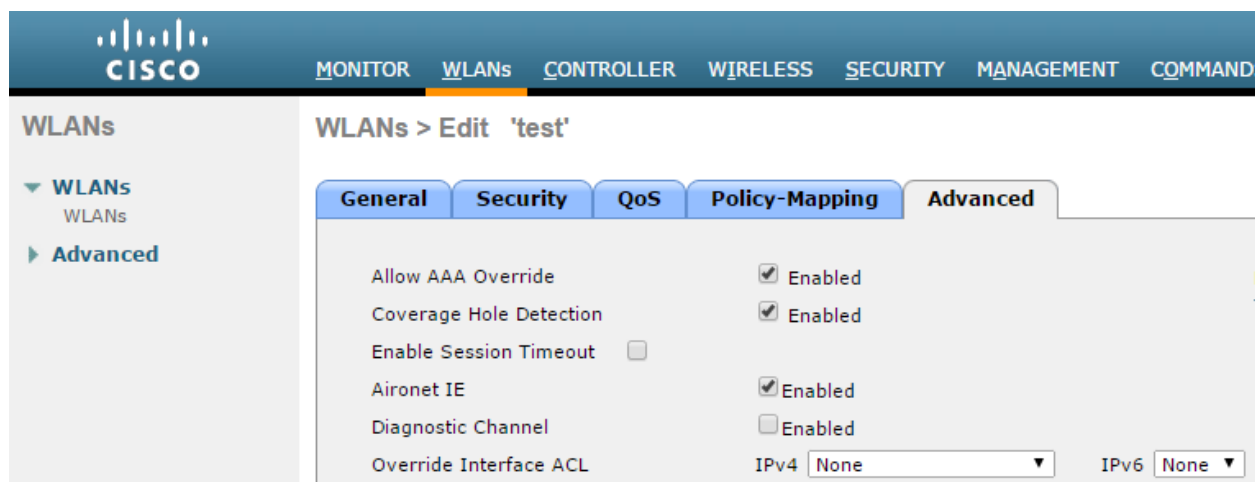

Using the CLI

Before creating a new WLAN verify the existing WLANs on the WLC using the following command and use an unused index id for the new WLAN

```
show wlan summary
```


To create a new WLAN:

```
config wlan create <WLAN_ID> <Profile name> <SSID>
eg: config wlan create 10 Test Test # Test is the WLAN name and SSID
config wlan interface <WLAN_ID> <interface-name>
eg: config wlan interface 10 management # assigning the WLAN to management port
config wlan security wpa disable <WLAN_ID>
config wlan security web-auth enable <WLAN_ID>
config wlan custom-web global disable <WLAN_ID>
config wlan custom-web ext-webauth-url <ext-webauth-url> <WLAN_ID>
config wlan custom-web webauth-type external <WLAN_ID>
config wlan security web-auth flexacl <WLAN_ID> <ACL_name>
config wlan radius_server auth add <WLAN_ID> <Radius_auth_server_ID>
config wlan radius_server acct add <WLAN_ID> <Radius_acct_server_ID>
config wlan radius_server overwrite-interface enable <WLAN_ID> ( This command is required only if instead of
management, some other interface is configured for WLAN.
Please check steps 2 and 5)
config wlan radius_server acct interim-update enable <WLAN_ID>
config wlan radius_server acct interim-update <Interval> <WLAN_ID>
config wlan aaa-override enable <WLAN_ID>
config wlan enable <WLAN_ID>
```

Configuring AP Group

1. On the CISCO WLC main screen go to **WLANs > Advanced > AP Groups** screen and map WLAN FlexI AP (Remote AP mode) group.

Figure 362: Mapping WLAN FlexI AP

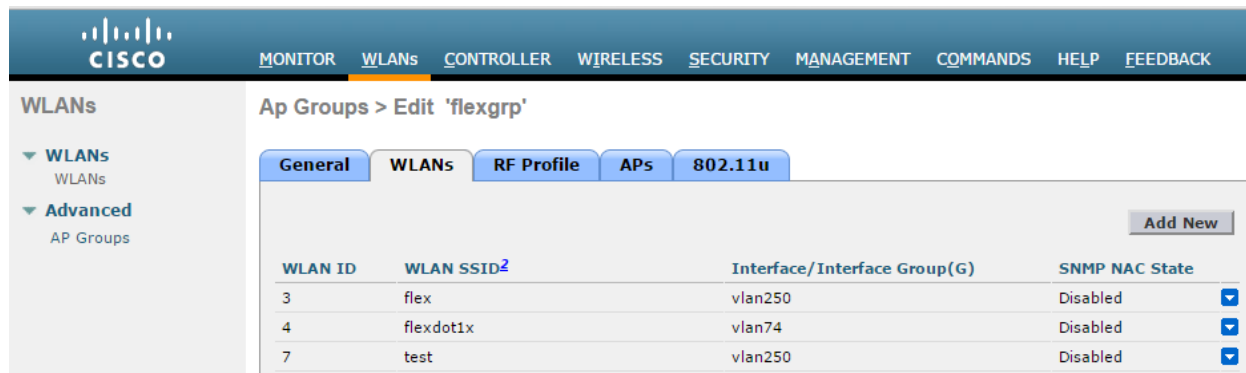

The screenshot shows the Cisco Pulse Secure Administration interface. The top navigation bar includes MONITOR, WLANs, CONTROLLER, WIRELESS, SECURITY, MANAGEMENT, COMMANDS, HELP, and FEEDBACK. The left sidebar shows WLANs, Advanced, and AP Groups. The main content area is titled 'Ap Groups > Edit 'flexgrp''. It has tabs for General, WLANs, RF Profile, APs, and 802.11u. The 'WLANs' tab is active, showing a table with columns: WLAN ID, WLAN SSID, Interface/Interface Group(G), and SNMP NAC State. There is an 'Add New' button in the top right of the table area.

| WLAN ID | WLAN SSID | Interface/Interface Group(G) | SNMP NAC State |
|---------|-----------|------------------------------|----------------|
| 3 | flex | vlan250 | Disabled |
| 4 | flexdot1x | vlan74 | Disabled |
| 7 | test | vlan250 | Disabled |

Using the CLI

```
config wlan apgroup interface-mapping add <APgroup Name> <WLAN ID> <interfacename>
```

Adding ACLs in FlexConnect Group

To add ACLs in FlexConnect Group:

1. Select **Wireless > FlexConnect Groups**. Click on the required FlexConnect Group and select **ACL Mapping > Policies**. Add all the required FlexConnect ACLs to this group. This configuration is required when admin wants to push ACL name using RADIUS return attributes from PPS.

Figure 363: Adding ACLs in FlexConnect Group



The screenshot shows the Cisco Pulse Secure Administration interface. The top navigation bar includes MONITOR, WLANs, CONTROLLER, WIRELESS, SECURITY, MANAGEMENT, COMMANDS, HELP, and FEEDBACK. The left sidebar shows Wireless, Access Points, Radios, Advanced, Mesh, RF Profiles, FlexConnect Groups, and FlexConnect ACLs. The main content area is titled 'FlexConnect Groups > Edit 'flex-group''. It has tabs for General, Local Authentication, Image Upgrade, ACL Mapping, Central DHCP, and WLAN VLAN mapping. The 'ACL Mapping' tab is active, showing sub-tabs for AAA VLAN-ACL mapping, WLAN-ACL mapping, and Policies. The 'Policies' sub-tab is active, showing a 'Policy ACL' dropdown menu with 'Sol-flex' selected and an 'Add' button. Below this is a section titled 'Policy Access Control Lists' with a table listing 'acl', 'Sol-flex', and 'postauth', each with a dropdown arrow.

| Policy ACL |
|------------|
| Sol-flex |

| Policy Access Control Lists |
|-----------------------------|
| acl |
| Sol-flex |
| postauth |

Using the CLI

To see all the flexconnect groups that are configured on the controller enter the following command:

```
show flexconnect group summary
```

To add policy ACLs in the flexconnect group use the following command:

```
config flexconnect group <flex-group> policy acl add <flexconnect_ACL>
```

Save the config using the following command:

```
save config
```

Configuring Cisco 3850 WLC

- [Configuring Cisco WLC using Web GUI](#)
- [Configuring Cisco WLC using CLI](#)

Configuring Cisco WLC using Web GUI

You can configure CISCO WLC 3850 by performing the steps as stated below:

1. Create a RADIUS server.
2. Create a Radius Server Group and map with the newly created RADIUS server
3. Create an Authentication list and map with the newly created Radius Server Group.
4. Create an Accounting list and map with the newly created Radius Server Group.
5. Create an Authorization list and map with the newly created Radius Server Group.
6. Create a Webauth Parameter Map
7. Create an Access List
8. Create a Sequence Number
9. Create a Wireless SSID

To configure the CISCO WLC 3850:

1. Login to CISCO WLC. The CISCO Wireless Controller home page appears.

Figure 364: CISCO Wireless Controller home page

System Summary

| | |
|-----------------------------|--------------------------------------|
| System Time | 23:26:47.949 UTC Thu Mar 5 2015 |
| Software Version | 03.07.00E RELEASE SOFTWARE (fc4) |
| System Name | c3850wlc |
| System Model | WS-C3850-24T |
| Up Time | 2 weeks, 3 days, 20 hours, 0 minutes |
| Wireless Management IP | 10.209.125.128 |
| 802.11 a/n/ac Network State | Enabled |
| 802.11 b/g/n Network State | Enabled |
| Mobility Role | MC |
| Software Activation | Detail |

Access Point Summary

| | Total | Up | Down |
|---------------------|-------|----|------|
| 802.11a/n/ac Radios | 0 | 0 | 0 |
| 802.11b/g/n Radios | 0 | 0 | 0 |
| All APs | 0 | 0 | 0 |

Client Summary

Protocol Statistics

No Protocol Statistics available

Search

Username

Top WLANs

| Profile Name | Number of Clients |
|---------------------------|-------------------|
| open3850 | 0 |
| dot1x3850 | 0 |

AVC for WLAN : open3850


AVC is not enabled on this WLAN

Rogue APs

| | | |
|----------------------|---|------------------------|
| Active Rogue APs | 0 | Detail |
| Active Rogue Clients | 0 | Detail |
| Adhoc Rogues | 0 | Detail |


2. From the **Configuration**, drop-down list select **Security**. The options under the **Security** section are displayed.

Figure 365: Security section

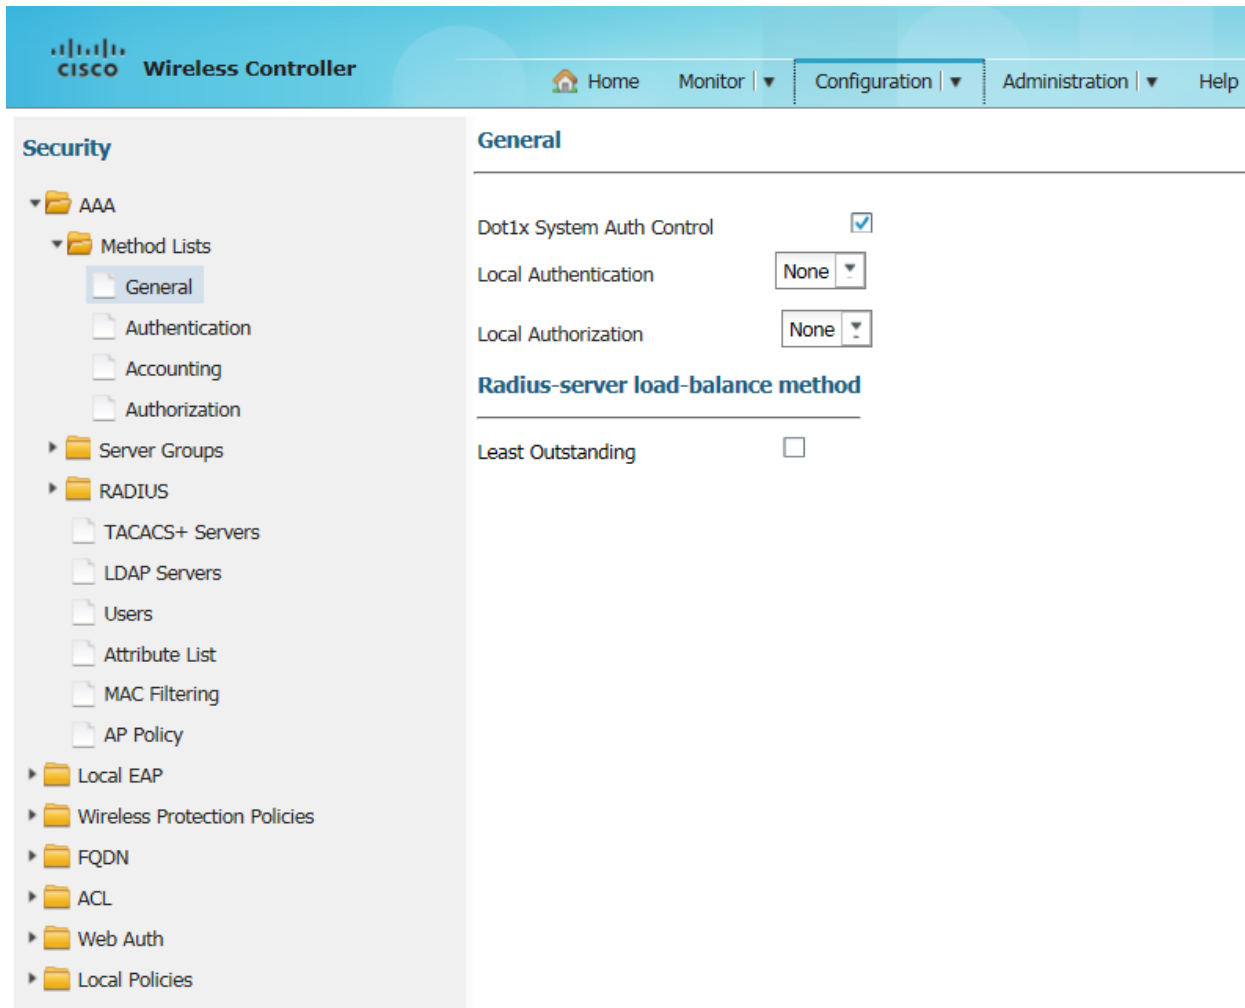

3. Select **AAA > Radius > Servers** to create a Radius server. The **Radius Server** screen appears.

Figure 366: Radius Servers

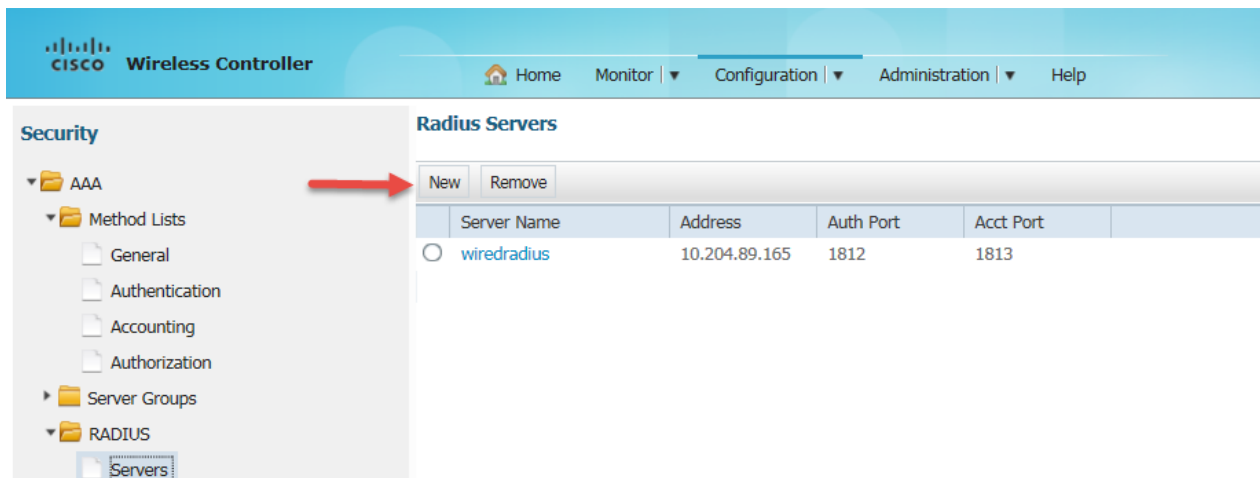

Click **New** to create a Radius server.

Figure 367: Creating a Radius Server

The screenshot shows the Cisco Wireless Controller configuration interface. The left sidebar is under the 'Security' section, with 'RADIUS' > 'Servers' selected. The main area is titled 'RADIUS Servers' and shows a 'New' form. The form fields are as follows:

| | |
|-----------------------------|---------------|
| Server Name | IC165 |
| Server IP Address | 10.204.89.165 |
| Shared Secret | ••••• |
| Confirm Shared Secret | ••••• |
| Auth Port (0-65535) | 1645 |
| Acct Port (0-65535) | 1646 |
| Server Timeout (1-1000)secs | |
| Retry Count (0-100) | |
| Support for RFC 3576 | Enable |

- Enter relevant details and click **Apply** at the right top corner of the page. A new RADIUS server is created
- Select **AAA > Server Groups > Radius** to create a Radius Server Group. The Radius Server Groups screen appears

Figure 368: Radius Server Groups

The screenshot shows the 'Radius Server Groups' configuration page. The left sidebar is under 'Security' > 'Server Groups' > 'Radius'. The main area has a 'New' button and a table of existing groups. A red arrow points to the 'New' button.

| Name | Server1 | Server2 | Server3 |
|-----------------------------------|-------------|---------|---------|
| <input type="radio"/> wiredradius | wiredradius | N/A | N/A |

- Click **New** The Radius Server Group > New screen appears.

Figure 369: Creating a Radius Server Group

Security

- AAA
 - Method Lists
 - General
 - Authentication
 - Accounting
 - Authorization
 - Server Groups
 - Radius**
 - TACACS+
 - Ldap
 - RADIUS
 - TACACS+ Servers

Radius Server Group
Radius Server Group > New

Name: wirelessradius

MAC-delimiter: none

MAC-filtering: none

Dead-time (0-1440) in minutes:

Group Type: radius


Servers In This Group

Available Servers

- wiredradius
- ic165

Assigned Servers

- IC165

Enter a name in the **Name** field. From the **Available Servers** box select the server which you have created in step 5 and click the button  to move it to the **Assigned Servers** box.

- Click **Apply** to save the Radius Server Group.
- Select **AAA > Method List > Authentication** to create an Authentication list.

The Authentication screen appears.

Figure 370: Authentication list

Security

- AAA
 - Method Lists
 - General
 - Authentication**
 - Accounting
 - Authorization
 - Server Groups


Authentication

New Remove

| Name | Type | Group Type | Group1 | Group2 | Group3 |
|---|-------|------------|----------------|--------|--------|
| <input type="radio"/> local_webauth | login | local | N/A | N/A | N/A |
| <input checked="" type="radio"/> dot1x_radius | login | group | wirelessradius | N/A | N/A |
| <input type="radio"/> default | dot1x | group | wiredradius | N/A | N/A |

- Click **New**. The Authentication > New screen appears.

Figure 371: Creating a new Authentication list

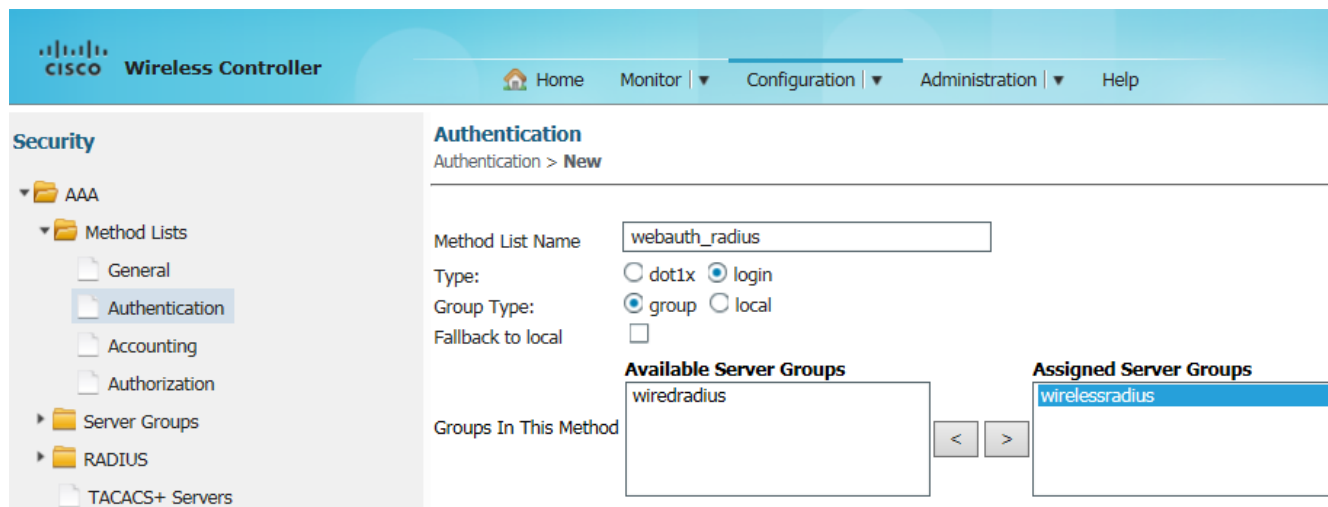


The screenshot shows the Cisco Wireless Controller configuration interface. The left sidebar is under the 'Security' tab, with 'AAA' expanded and 'Method Lists' selected. The 'Authentication' sub-tab is active. The main content area is titled 'Authentication > New'. It contains the following fields and options:

- Method List Name:** webauth_radius
- Type:** ☐ dot1x ☒ login
- Group Type:** ☒ group ☐ local
- Fallback to local:** ☐
- Available Server Groups:** A box containing 'wiredradius'.
- Assigned Server Groups:** A box containing 'wirelessradius'.

Navigation buttons '<' and '>' are located between the two server group boxes.


Enter the details in the fields as follows:

- In the **Method List Name** field enter webauth_radius
- For **Type**, select **login**
- For **Group Type** select group
- Select the 'wirelessradius' server group that you have created earlier from the **Available Server Groups** box and click  to move it to the **Assigned Server Groups** box.

10. Click **Apply** to save the Authentication.

11. Select **AAA > Method List > Accounting** to create an Accounting list. The Accounting screen appears.

Figure 372: Accounting list

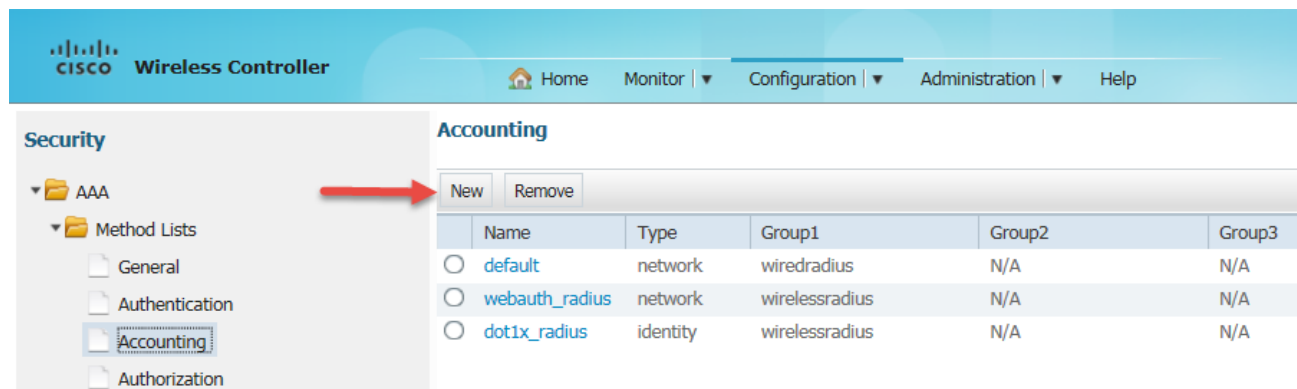


The screenshot shows the Cisco Wireless Controller configuration interface. The left sidebar is under the 'Security' tab, with 'AAA' expanded and 'Accounting' selected. The main content area is titled 'Accounting'. It features a table with columns: Name, Type, Group1, Group2, and Group3. A red arrow points to the 'New' button above the table.


| Name | Type | Group1 | Group2 | Group3 |
|--------------------------------------|----------|----------------|--------|--------|
| <input type="radio"/> default | network | wiredradius | N/A | N/A |
| <input type="radio"/> webauth_radius | network | wirelessradius | N/A | N/A |
| <input type="radio"/> dot1x_radius | identity | wirelessradius | N/A | N/A |

12. Click **New** to create an Accounting list. The Accounting > New screen appears.

Figure 373: Creating an Accounting list

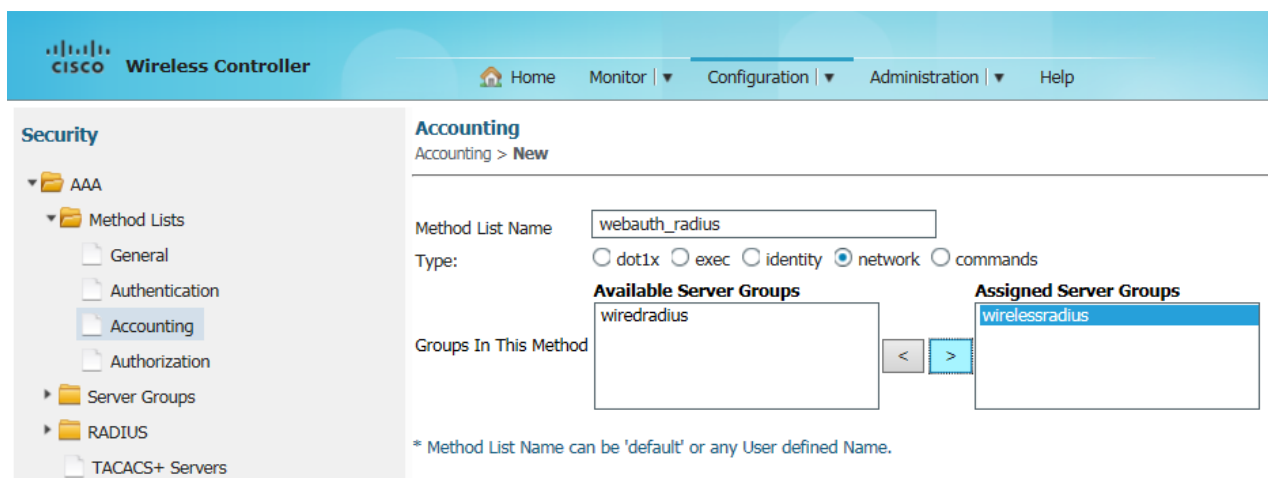


13. Enter the details in the fields as follows:

- In the **Method List Name** field enter webauth_radius.
- For Type, select **network**.
- Select the 'wirelessradius' server group that you have created earlier from the **Available Server Groups** box and click  to move it to the **Assigned Server Groups** box.

14. Click **Apply** to save the Accounting list.


15. Select **AAA > Method Lists > Authorization** to create an Authorization list. The Authorization screen appears.

Figure 374: Authorization list

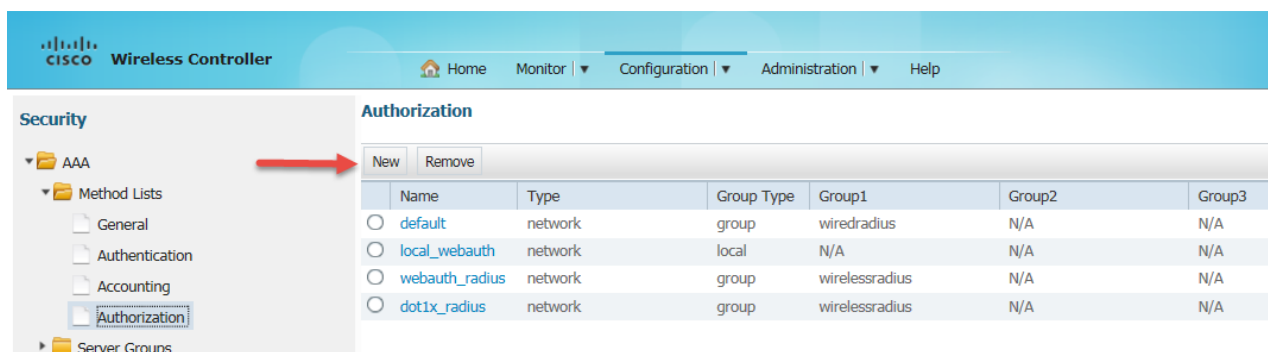

16. Click **New** to create an Authorization list. The Authorization > New screen appears.

Figure 375: Creating an Authorization list

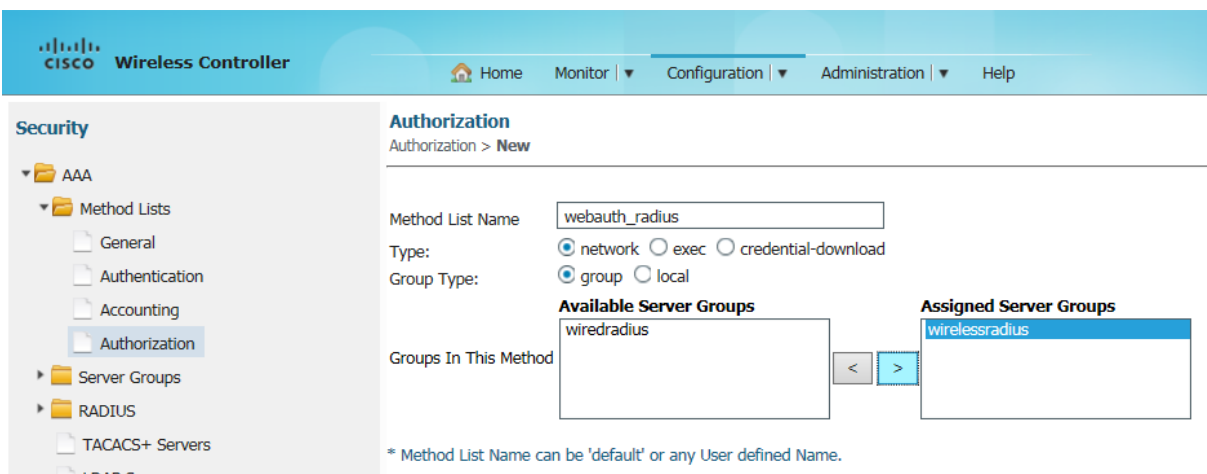

Security

- AAA
 - Method Lists
 - General
 - Authentication
 - Accounting
 - Authorization**
 - Server Groups
 - RADIUS
 - TACACS+ Servers
 - LDAP Servers

Authorization
Authorization > New

Method List Name:

Type: ☒ network ☐ exec ☐ credential-download

Group Type: ☒ group ☐ local


Available Server Groups

Groups In This Method:

Assigned Server Groups

* Method List Name can be 'default' or any User defined Name.


17. Enter the details in the fields as follows:

- In the **Method List Name** field enter webauth_radius.
- For Type, select **network**.
- For Group Type select group.
- Select the 'wirelessradius' server group that you have created earlier from the **Available Server Groups** box and click  to move it to the **Assigned Server Groups** box.

18. Click **Apply** to save the Authorization list.


19. Select **Web Auth > Webauth Parameter Map** to create a Webauth Parameter Map. The Webauth Parameter Map screen appears.

Figure 376: Webauth Parameter Map

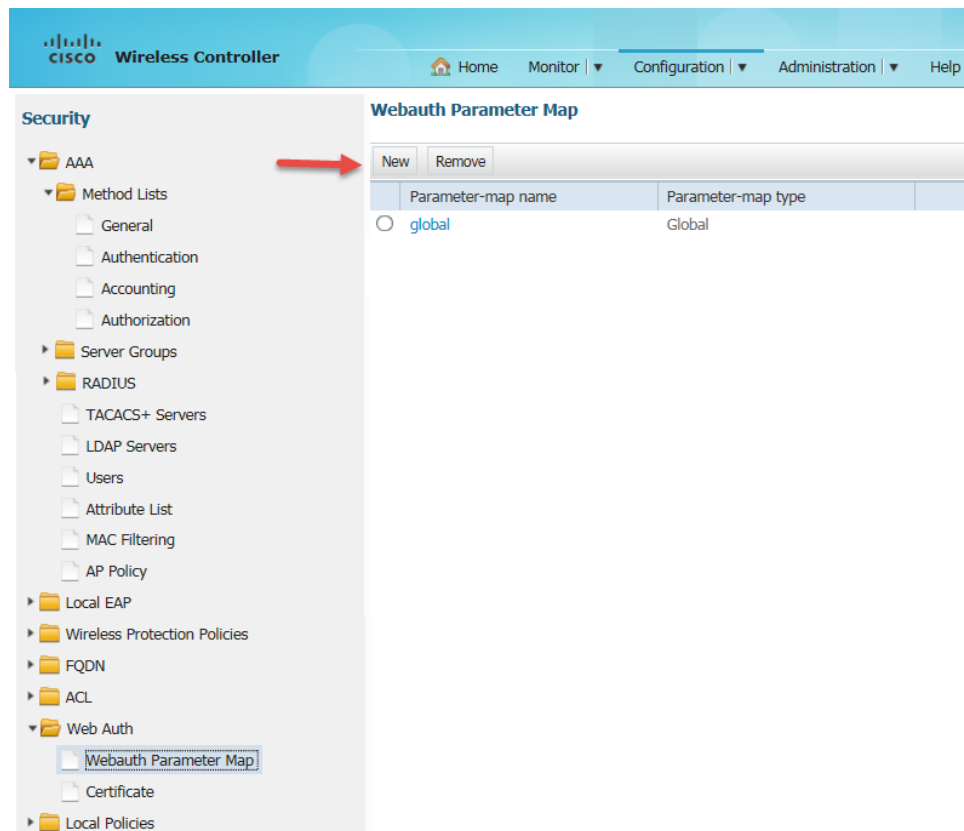

20. Click **New** to create a Webauth Parameter Map. The Webauth Parameter Map > New screen appears.

Figure 377: Creating a Webauth Parameter Map

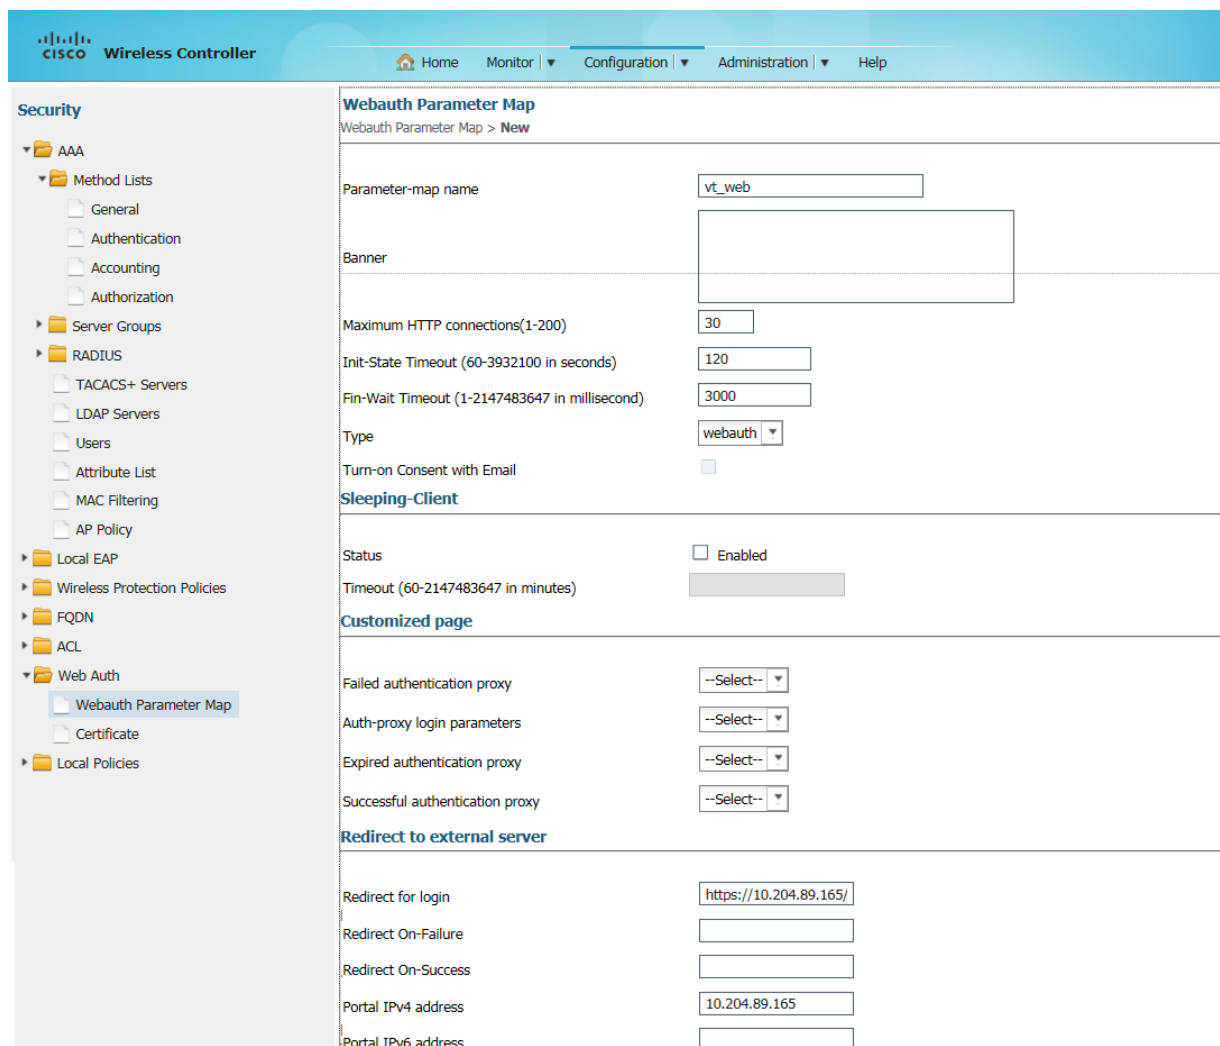

Security

- AAA
 - Method Lists
 - General
 - Authentication
 - Accounting
 - Authorization
 - Server Groups
 - RADIUS
 - TACACS+ Servers
 - LDAP Servers
 - Users
 - Attribute List
 - MAC Filtering
 - AP Policy
 - Local EAP
 - Wireless Protection Policies
 - FQDN
 - ACL
 - Web Auth
 - Webauth Parameter Map**
 - Certificate
 - Local Policies

Webauth Parameter Map
Webauth Parameter Map > New

Parameter-map name: vt_web

Banner:

Maximum HTTP connections(1-200): 30

Init-State Timeout (60-3932100 in seconds): 120

Fin-Wait Timeout (1-2147483647 in millisecond): 3000

Type: webauth

Turn-on Consent with Email: ☐

Sleeping-Client

Status: ☐ Enabled

Timeout (60-2147483647 in minutes):

Customized page

Failed authentication proxy: --Select--

Auth-proxy login parameters: --Select--

Expired authentication proxy: --Select--

Successful authentication proxy: --Select--

Redirect to external server

Redirect for login: https://10.204.89.165/

Redirect On-Failure:

Redirect On-Success:

Portal IPv4 address: 10.204.89.165

Portal IPv6 address:


21. Enter the details in the fields as follows:

- In the **Parameter – map name** field enter vt_web.
- In Maximum HTTP connections (1-200) enter 30.
- In Init-State Timeout (60-3932100 in seconds) enter 120.
- In Fin-Wait Timeout (1-2147483647 in millisecond) enter 3000
- In **Redirect for login** field enter <https://10.204.89.165/guest> - This is the PPS URL to which a guest is redirected when tried to access a website.
- In **Portal IPv4 address** enter 10.204.89.165

22. Click **Apply** to save the Webauth Parameter Map.

NOTE: A default Webauth Parameter Map is created as shown in the following figure.

Figure 378: Default Webauth Parameter Map

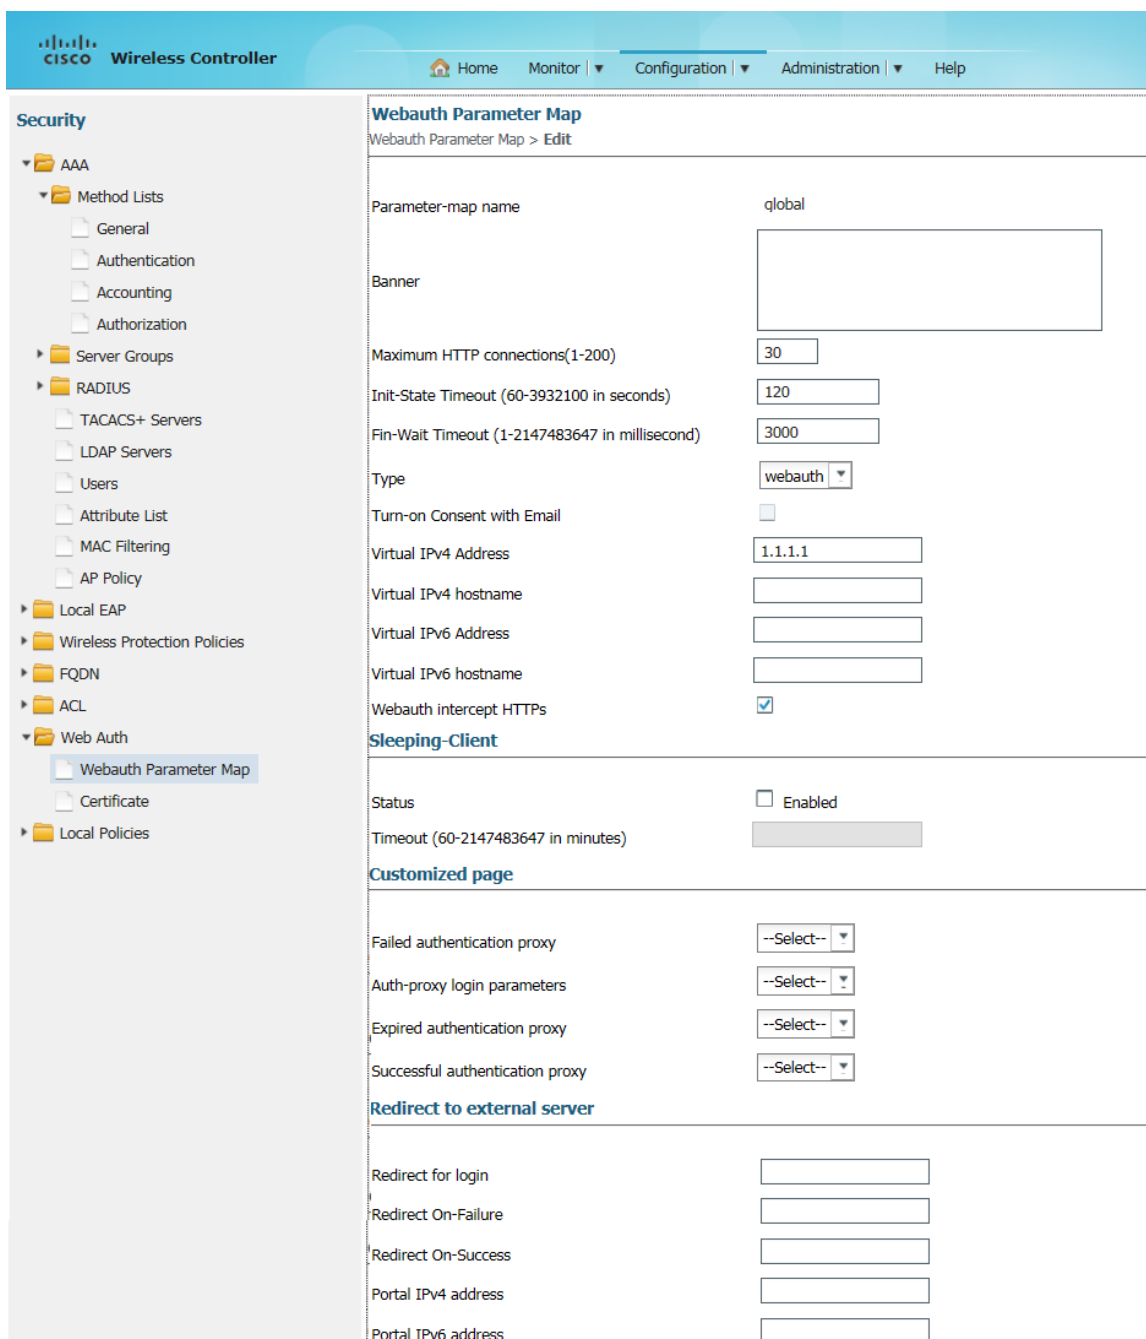

Security

- AAA
 - Method Lists
 - General
 - Authentication
 - Accounting
 - Authorization
 - Server Groups
 - RADIUS
 - TACACS+ Servers
 - LDAP Servers
 - Users
 - Attribute List
 - MAC Filtering
 - AP Policy
 - Local EAP
 - Wireless Protection Policies
 - FQDN
 - ACL
 - Web Auth
 - Webauth Parameter Map**
 - Certificate
 - Local Policies

Webauth Parameter Map
Webauth Parameter Map > Edit

Parameter-map name: global

Banner:

Maximum HTTP connections(1-200):

Init-State Timeout (60-3932100 in seconds):

Fin-Wait Timeout (1-2147483647 in millisecond):

Type:

Turn-on Consent with Email: ☐

Virtual IPv4 Address:

Virtual IPv4 hostname:

Virtual IPv6 Address:

Virtual IPv6 hostname:

Webauth intercept HTTPs: ☒

Sleeping-Client

Status: ☐ Enabled

Timeout (60-2147483647 in minutes):

Customized page

Failed authentication proxy:

Auth-proxy login parameters:

Expired authentication proxy:

Successful authentication proxy:

Redirect to external server

Redirect for login:

Redirect On-Failure:


Redirect On-Success:

Portal IPv4 address:

Portal IPv6 address:


23. Select **ACL > Access Control List** to create an Access Control List. The Access Control Lists screen appears.

Figure 379: Access Control List

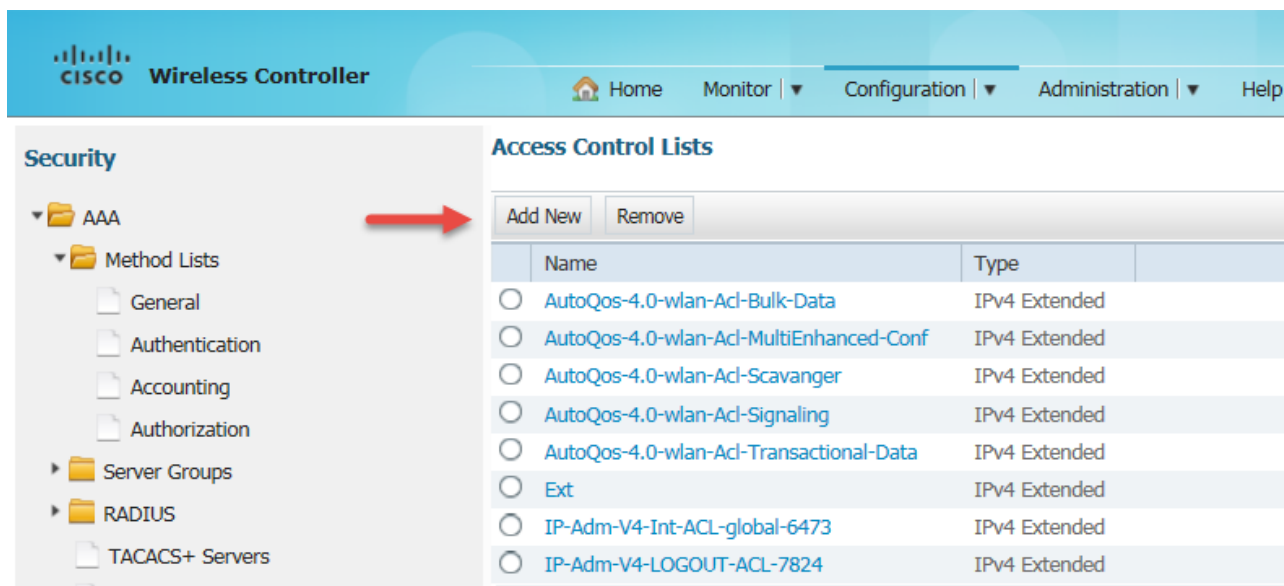

24. Click **Add New**. The New Access List screen appears.

Figure 380: Creating an Access Control List

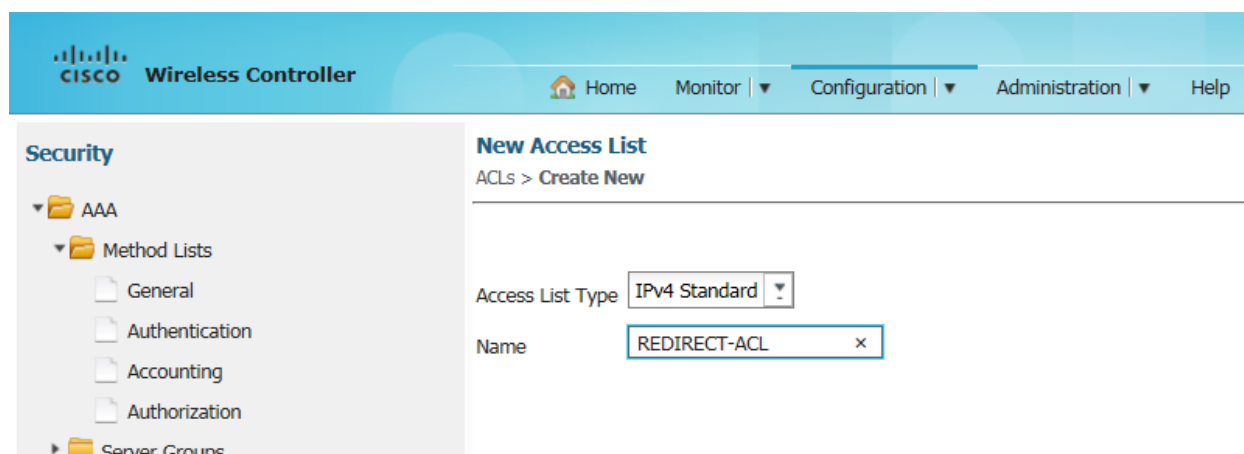

25. In the **Name** field enter REDIRECT-ACL and then click **Apply** at the right top corner. The New Sequence Number screen appears.

Figure 381: Creating a Sequence Number

Cisco Wireless Controller

Home | Monitor | Configuration | Administration | Help

Security

- AAA
 - Method Lists
 - General
 - Authentication
 - Accounting
 - Authorization
 - Server Groups
 - RADIUS
 - TACACS+ Servers
 - LDAP Servers

New Sequence Number
ACLs > Create New

Details :

Name: **REDIRECT-ACL**
Type: **IPv4 Standard**

General

Sequence number:
Action: **deny**
Source: **any**

26. Enter relevant details and click **Apply**. Allow traffic to the Pulse Policy server IP address - 10.204.89.165.

Figure 382: Connecting with Pulse Policy server IP address

Cisco Wireless Controller

Home | Monitor | Configuration | Administration | Help

Security

- AAA
 - Method Lists
 - General
 - Authentication
 - Accounting
 - Authorization
 - Server Groups
 - RADIUS
 - TACACS+ Servers
 - LDAP Servers

Access Control Lists
ACLs > ACL detail


Details :

Name: **REDIRECT-ACL**
Type: **IPv4 Extended**

| | Seq | Action | Protocol | Source IP/Mask | Destination IP/Mask | Source Port | Destination Port |
|-----------------------|-----|--------|----------|----------------|---------------------|-------------|------------------|
| <input type="radio"/> | 1 | permit | ip | any | 10.204.89.165 | - | - |
| <input type="radio"/> | 2 | permit | ip | 10.204.89.165 | any | - | - |
| <input type="radio"/> | 3 | permit | udp | any | any | eq 53 | - |
| <input type="radio"/> | 10 | deny | ip | any | any | - | - |


27. On the main menu select **Configuration > Wireless** to create a Wireless SSID. The WLANs screen appears.

Figure 383: WLANs

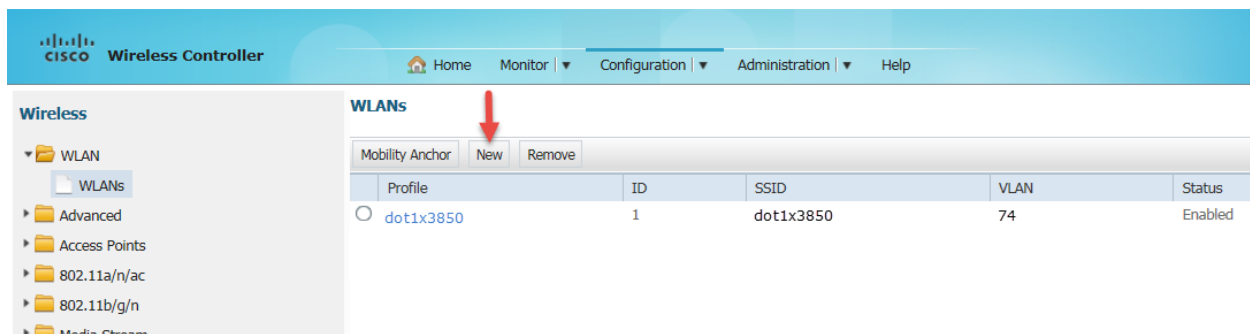


28. Click **New**. The WLANs > Create New screen appears.

Figure 384: Creating a WLAN

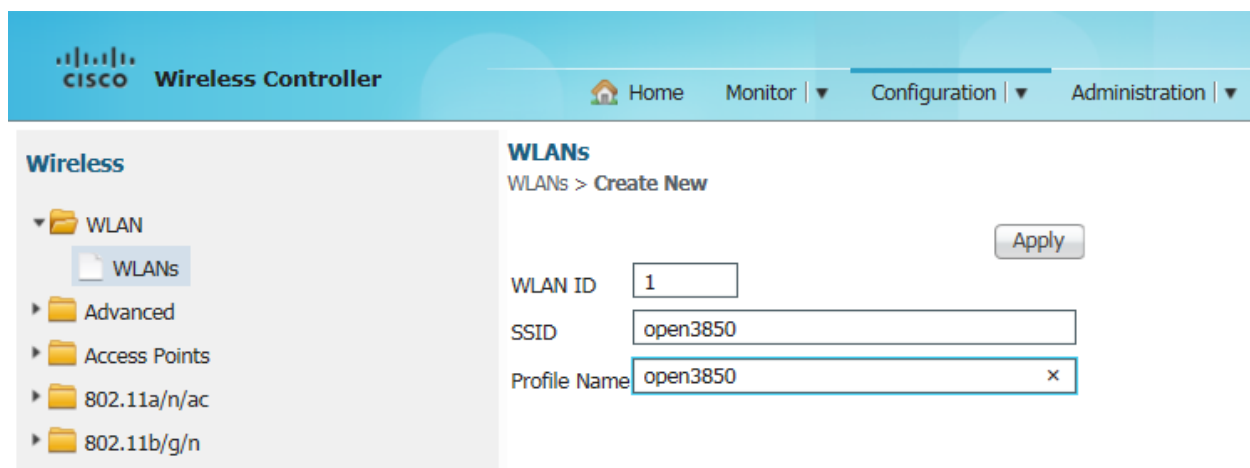

29. Click **Apply**. The WLAN is created and displayed in WLANs screen.

Figure 385: Newly created WLAN

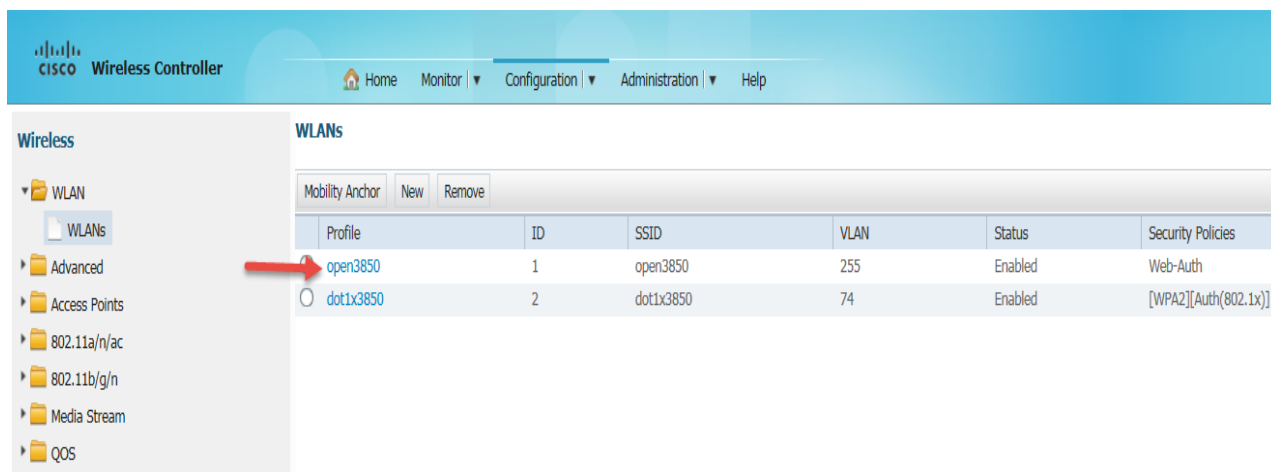

30. Click the WLAN to configure. The **General** tab options of the WLAN appears.


Figure 386: WLAN - General screen



31. Select the options as shown in the above figure and then click **Apply** to save the configurations.

32. Click the **Security** tab. The options under **Security > Layer2** appears.


Figure 387: WLAN - Security - Layer2

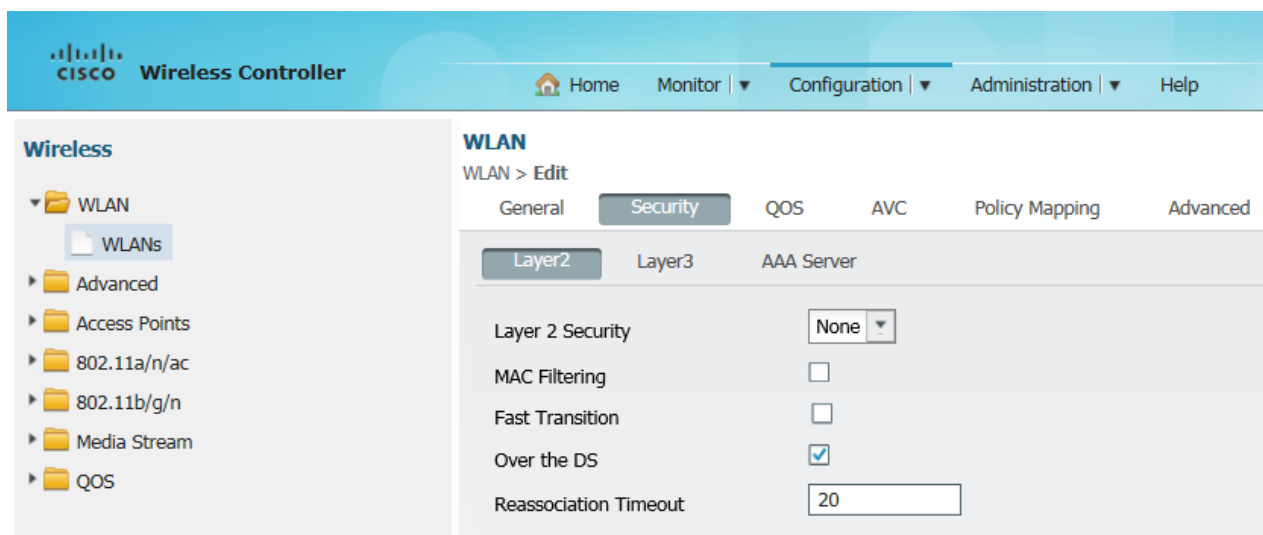

33. Select the options as shown in the above figure and then click **Apply** to save the configurations.

34. Click **Layer3** The options under **Layer3** appears.

Figure 388: WLAN - Security - Layer3

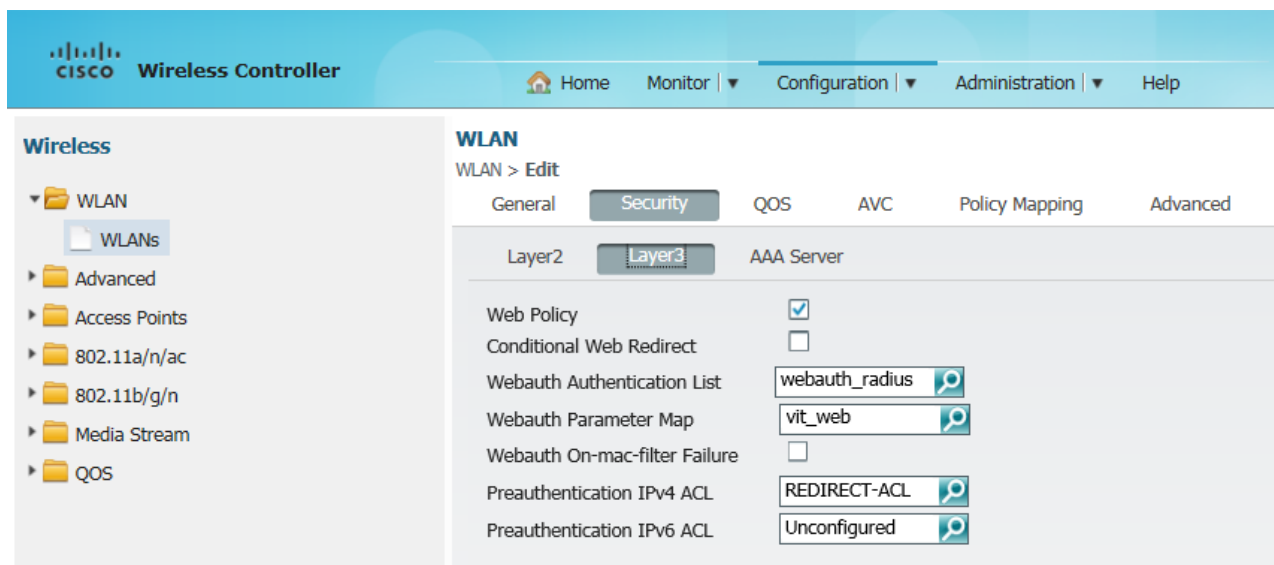

35. Select the options:


- For **Webauth Authentication List** select 'webauth_radius' which you have created earlier.
- For **Preauthentication IPv4 ACL** select 'REDIRECT-ACL' which you have created earlier.

36. Click **Apply** to save the configurations.

37. Click AAA Server.

The options under **AAA Server** appears.

Figure 389: WLAN - Security - AAA Server

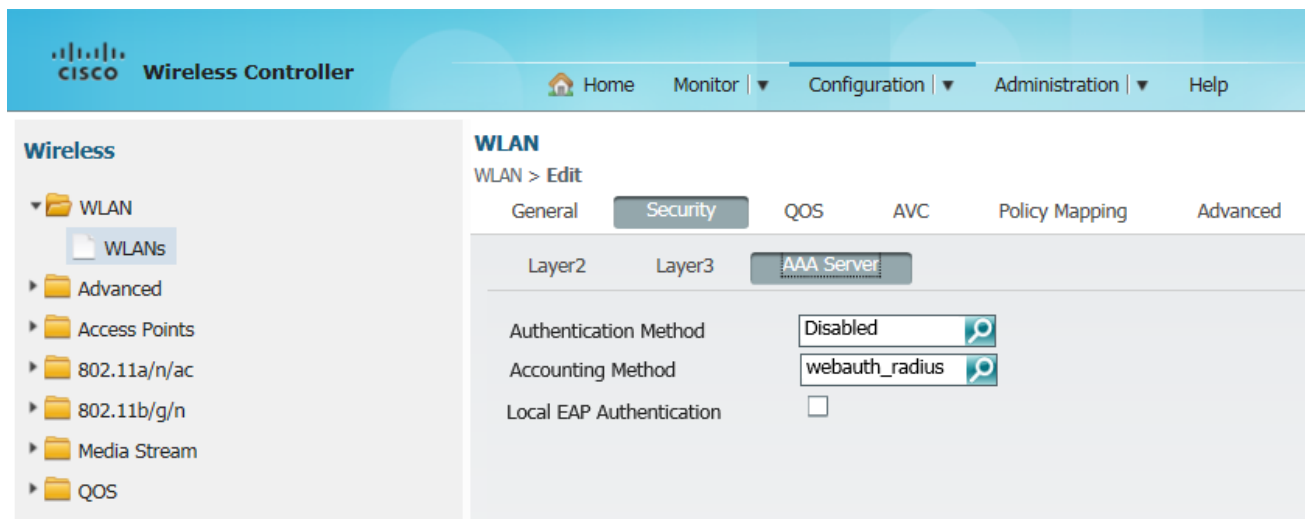

38. From the **Accounting Method** drop-down list select 'webauth_radius' which you have created earlier.

Click **Apply** to save the configurations.

39. Click **Advanced**.

The options under **Advanced** appears.

Figure 390: WLAN - Advanced settings

Wireless

- WLAN
 - WLANs
 - Advanced
 - Access Points
 - 802.11a/n/ac
 - 802.11b/g/n
 - Media Stream
 - QOS

WLAN > Edit

General Security QOS AVC Policy Mapping **Advanced**

DHCP

DHCP Server IP Address: 0.0.0.0

DHCP Address Assignment required: ☐

DHCP Option 82: ☐

DHCP Option 82 Format: None

DHCP Option 82 Ascii Mode: ☐

DHCP Option 82 Rid Mode: ☐

NAC

NAC State: ☐

Load Balancing and Band Select

Load Balance: ☐

Band Select: ☐

Off Channel Scanning Defer

Scan Defer Priority: 0 1 2 3 4 5 6 7

Scan Defer Time(msecs): 100

Override Interface ACL

IPv4 ACL: Unconfigured

IPv6 ACL: Unconfigured

40. Select the check box **Allow AAA Override**, so that radius attribute sent from PPS can be applied.
Select other options as shown in the above figure and then click **Apply** to save the configurations.

Configuring Cisco WLC using CLI

Configuring RADIUS server

```
radius server <RADIUS-Profile-Name>
address ipv4 <RADIUS-Server-IP> auth-port <auth-port> acct-port <acct-port>
key <RADIUS-Shared-Secret>
```

Configuring server group

```
aaa group server radius <Server-group-name>
server name <RADIUS-Server-name>
```

Configuring AAA method lists

```
aaa authentication login <authentication-list-name> group <Server-group-name>
aaa authorization network <authorization-list-name> group <Server-group-name>
aaa accounting network <accounting-list-name>
action-type start-stop
group <Server-group-name>
```

Configuring Webauth Parameter-map

```
parameter-map type webauth <Webauth-name>
type webauth
redirect for-login <PPS-guest-URL>
redirect portal ipv4 <PPS-IP>
```

Configuring IPv4 extended ACL

```
ip access-list extended <ACL-Name>
permit ip any host <PPS-IP>
permit ip host <PPS-IP> any
permit udp any eq domain any
deny ip any any
```

Configuring WLAN profile

```
wlan <wlan-profile-name> <wlan-id> <ssid-name>
aaa-override
accounting-list <accountung-list-name>
client vlan <vlan-id>
ip access-group web <ipv4-acl>
no security wpa
security web-auth
security web-auth authentication-list <authentication-list-name>
security web-auth parameter-map <parameter-map name>
no shutdown
```

Configuring Cisco 2620 for Guest Wired Authentication

```

policy-map type control subscriber POLICY_Gi1/0/24
event session-started match-all
10 class always do-until-failure
10 authenticate using mab priority 10
event authentication-failure match-first
5 class DOT1X_FAILED do-until-failure
10 terminate dot1x
20 authentication-restart 60
10 class MAB_FAILED do-until-failure
10 terminate mab
20 authenticate using dot1x priority 20
20 class DOT1X_NO_RESP do-until-failure
10 terminate dot1x
20 authentication-restart 60
40 class always do-until-failure
10 terminate mab
20 terminate dot1x
30 authentication-restart 60
event agent-found match-all
10 class DOT1X_MEDIUM_PRIO do-until-failure
10 authenticate using dot1x priority 20
event authentication-success match-all
10 class always do-until-failure
10 activate service-template DEFAULT_LINKSEC_POLICY_SHOULD_SECURE

```

Configuring Interface

```

switchport mode access
authentication periodic
authentication timer reauthenticate server
access-session host-mode multi-domain
access-session port-control auto
no snmp trap link-status
dot1x pae authenticator
spanning-tree portfast
service-policy type control subscriber POLICY_Gi1/0/24

```

Configuring ACLs

```

C2960X(config)#ip access-list extended as-redirect (Configure the same on PPS Radius Return Attributes)
C2960X(config-ext-nacl)#deny ip any host 10.xxx.xx.xxx (PPS IP)
C2960X(config-ext-nacl)#permit ip any any
C2960X(config-ext-nacl)#do wr mem

```

Configuring RADIUS CoA

```

under aaa server radius dynamic-author :
client 10.xxx.xx.xxx server-key xxx . Save
radius server test
address ipv4 10.xxx.xx.xxx auth-port 1645 acct-port 1646
key r
C2960X(config)#aaa group server radius dsad-IPV6
C2960X(config-sg-radius)#server name test
/**Go to interface : type mab and save**/
C2960X(config)#interface GigabitEthernet 1/0/14
C2960X(config-if)#mab

```

Configuring Aruba WLC

- Configuring Aruba WLC for PPS Guest Self-Registration
- Configuration required on Aruba WLC for Campus Only mode
- External Captive Portal Configuration
- RFC 3576 server configuration
- WLAN Configuration for Remote Networking mode on Aruba WLC
- Configuring Aruba WLC in campus only mode using CLI
- Configuring Aruba WLC in Remote Networking mode using CLI

Configuring Aruba WLC for PPS Guest Self-Registration


This sections explains the steps to configure Aruba WLC for deploying PPS GUAM and 'Guest Self-Registration' feature. This section provides examples of how to configure the Aruba WLC. For more information, see Aruba documentation.

Configuration required on Aruba WLC for Campus Only mode

WLAN Configuration for Campus Only mode


1. Login to Aruba WLC. Select **Configuration > Wizards > WLAN/LAN Wizard**. The Welcome to the WLAN/LAN Configuration Wizard appears.

Figure 391: WLAN Configuration

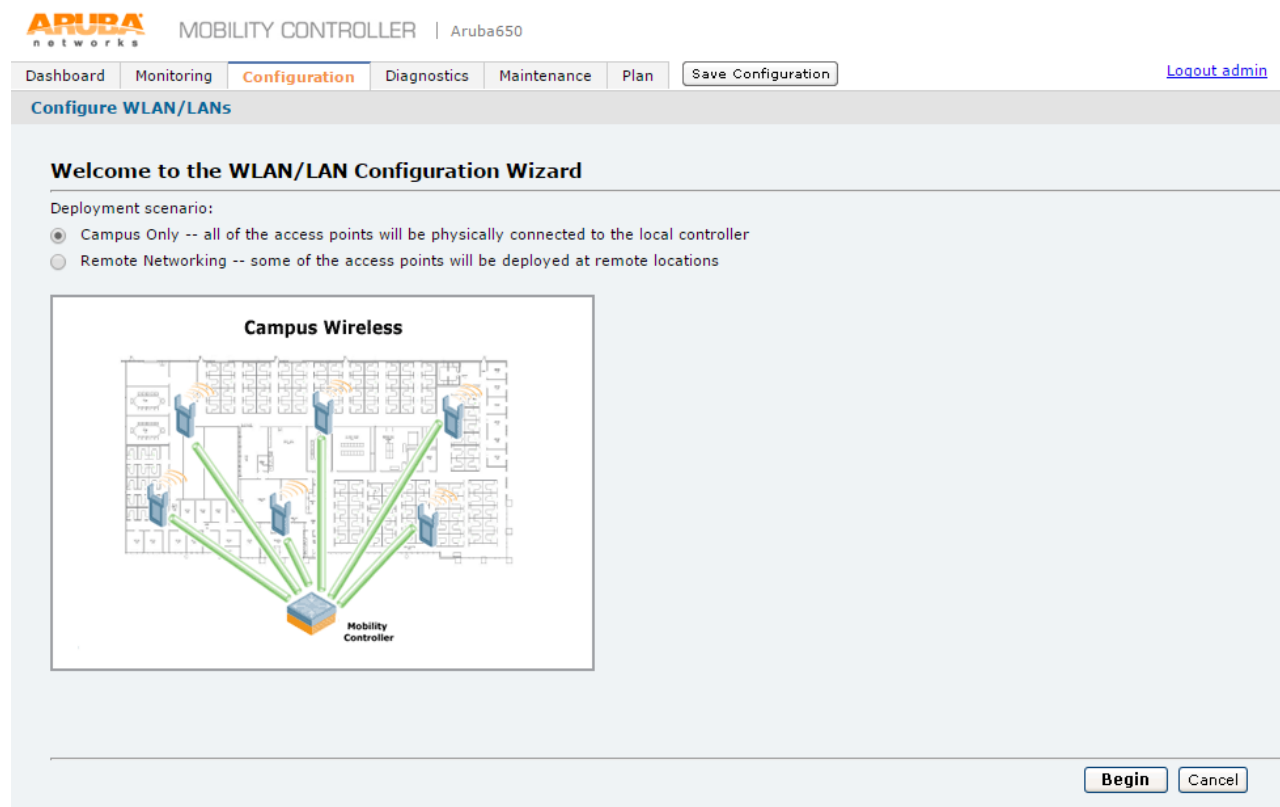

2. Select **Campus Only** option and click **Begin**. The Specify Group to Configure screen appears


Figure 392: WLAN Configuration – Specifying a Group

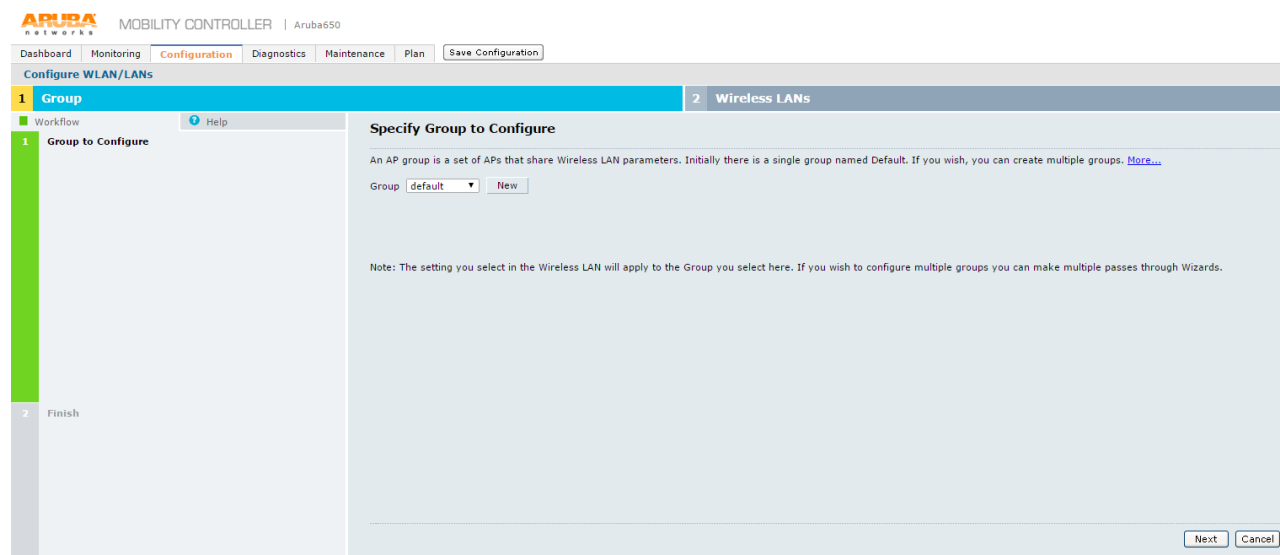

3. On **Specify Group to Configure** screen select an existing AP group or create a new AP group and click


Next. The Ready to Configure Wireless LANs for Group screen appears.

Figure 393: WLAN Configuration – Wireless LANs configuration

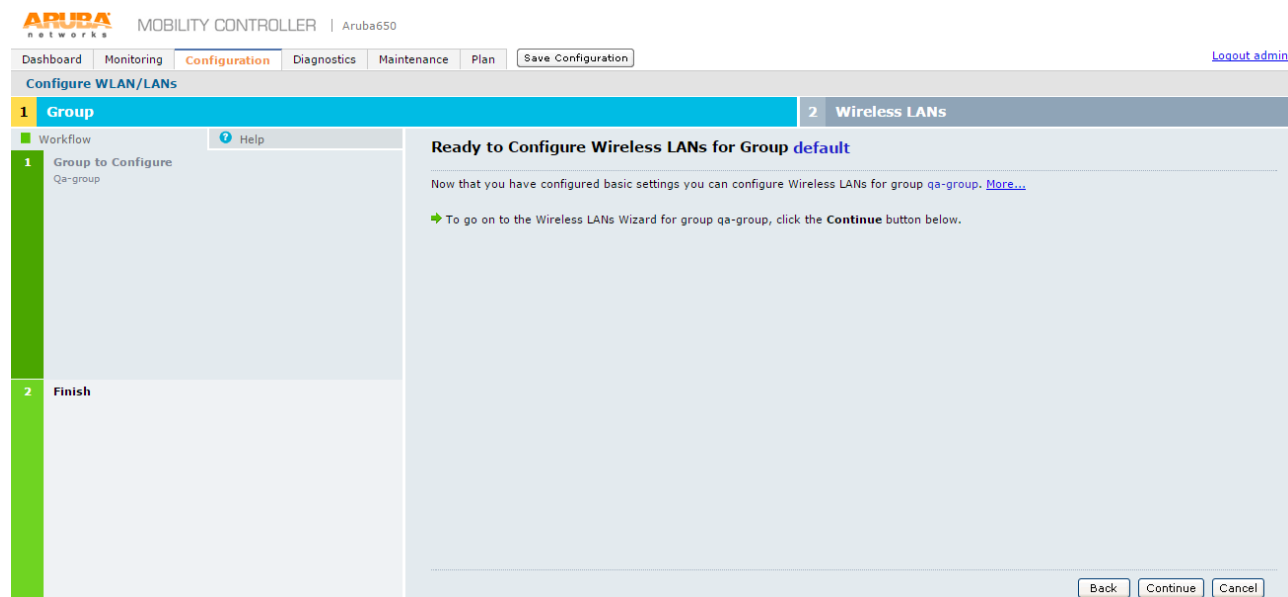

4. Click **Continue** button. The Specify Wireless LAN (WLAN) for Group default screen appears

Figure 394: Specifying a WLAN

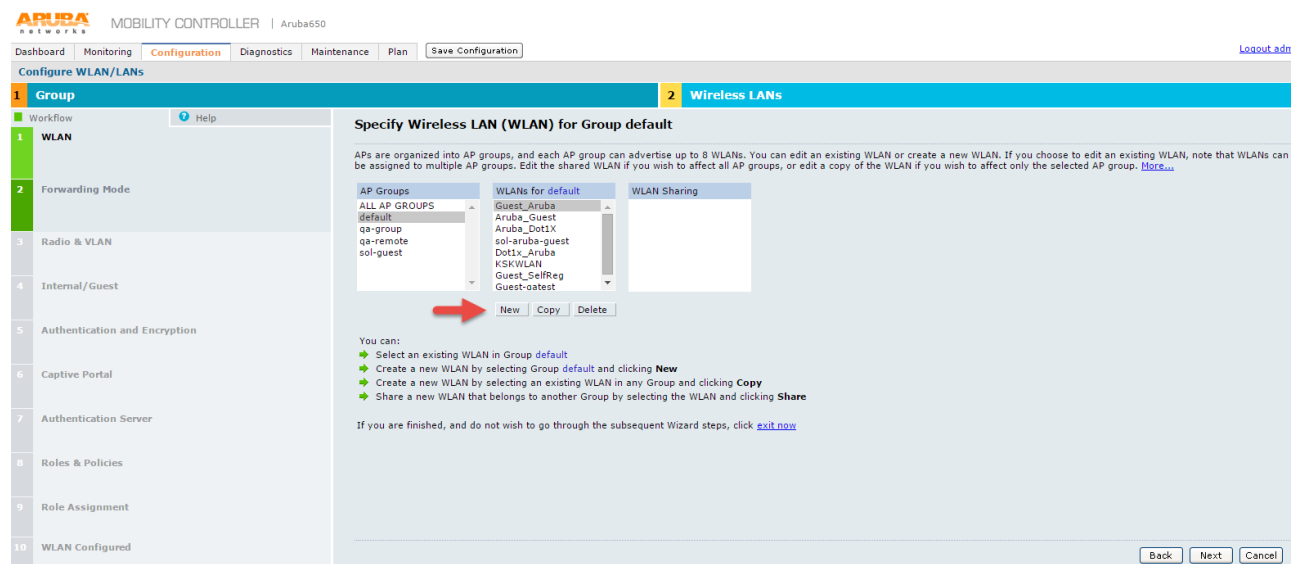


5. On Specify Wireless LAN (WLAN) for Group default screen, select a group from the AP Groups list.

- In the **WLANs for** list select an existing WLAN, or

- Click **New** to create a new WLAN
6. Click **Next**.


The Specify Forwarding Mode for Guest_Aruba in Group default screen appears

Figure 395: Forwarding Mode configuration

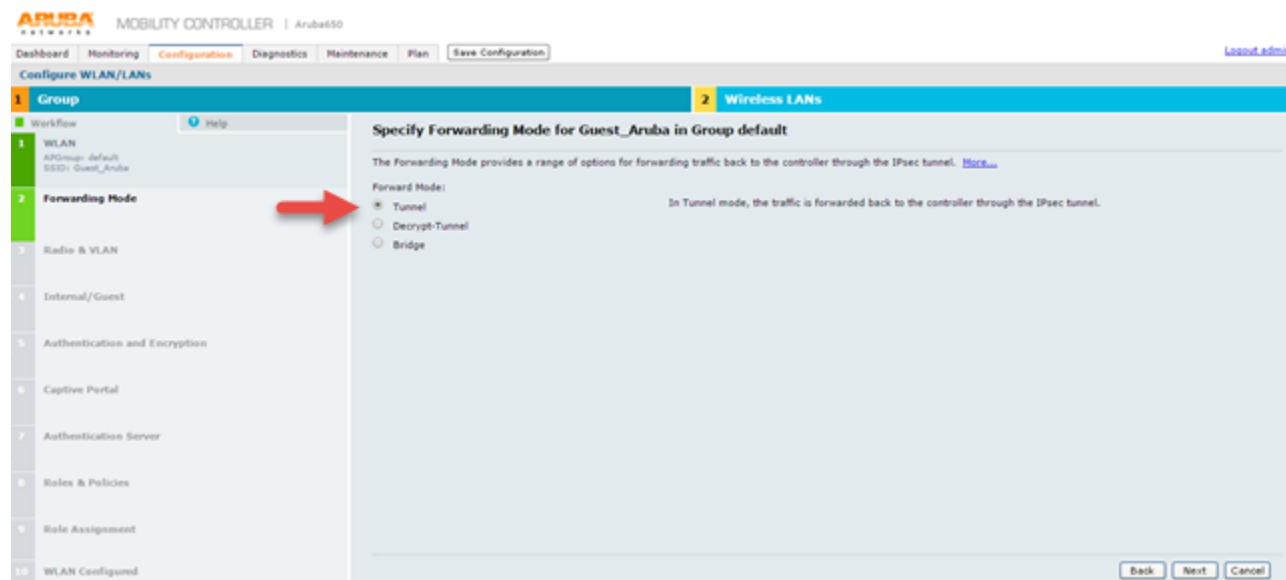

7. On Specify Forwarding Mode for Guest_Aruba in Group default screen, under Forward Mode, select **Tunnel** option and click **Next**. The Specify Radio Type and VLAN for Guest_Aruba in Group default screen appears.

Figure 396: Radio and VLAN configuration

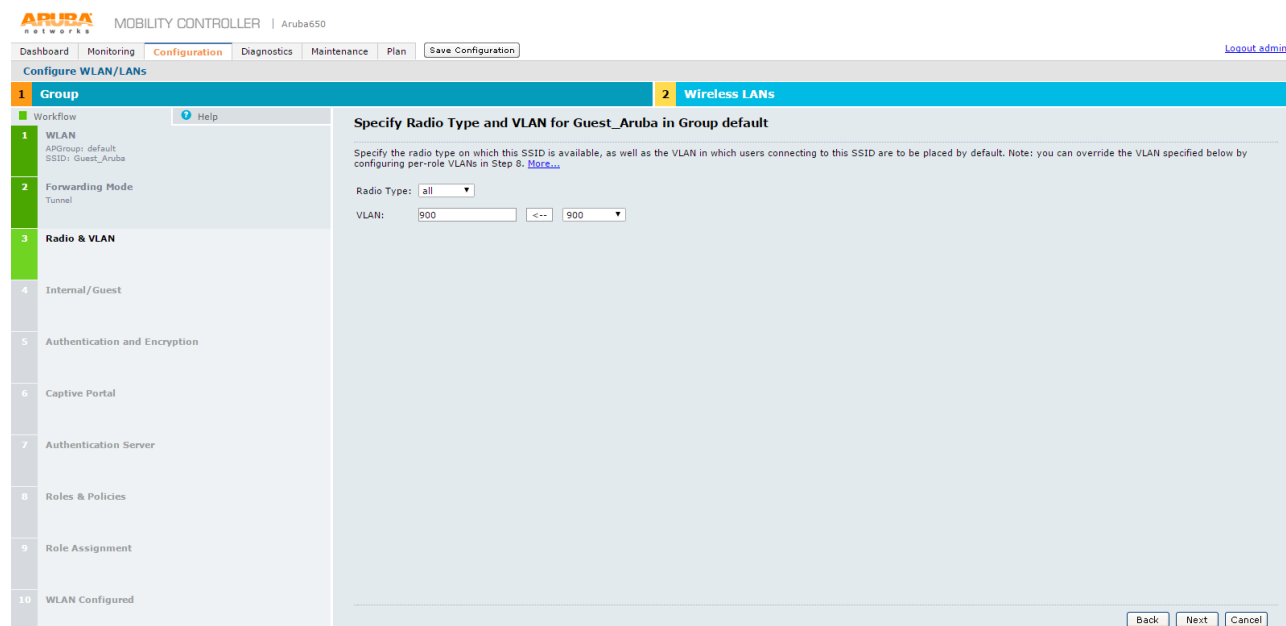

8. On Specify Radio Type and VLAN for Guest_Aruba in Group default screen select:

- **Radio Type** - Select 'all' from the drop-down list
- **VLAN** - Select required options from the drop-down list and click the arrow button to include in the **VLAN** box.

9. Click **Next**.

The Specify whether WLAN is for Internal or Guest use for Guest_Aruba in Group default screen appears


Figure 397: Internal Guest configuration

The screenshot shows the Aruba Mobility Controller configuration interface. The top navigation bar includes 'Dashboard', 'Monitoring', 'Configuration' (selected), 'Diagnostics', 'Maintenance', 'Plan', and 'Save Configuration'. The user is logged in as 'admin'. The main content area is titled 'Configure WLAN/LAN' and is divided into two tabs: '1 Group' and '2 Wireless LANs'. The '1 Group' tab is active, showing a workflow on the left with steps 1 through 10. Step 4, 'Internal/Guest', is currently selected. The main panel displays the 'Specify whether WLAN is for Internal or Guest use for Guest_Aruba in Group default' screen. It includes a description of Guest WLANs and a question: 'Is this WLAN intended for internal use or for use by guests?'. The 'Guest' option is selected with a radio button. At the bottom right, there are 'Back', 'Next', and 'Cancel' buttons.

10. Specify whether WLAN is for Internal or Guest use for Guest_Aruba in Group default screen specify the purpose of the WLAN. Select **Guest** option for WLAN use and click **Next**.


The Specify Authentication and Encryption for Guest_Aruba in Group default screen appears.

Figure 398: Authentication and Encryption

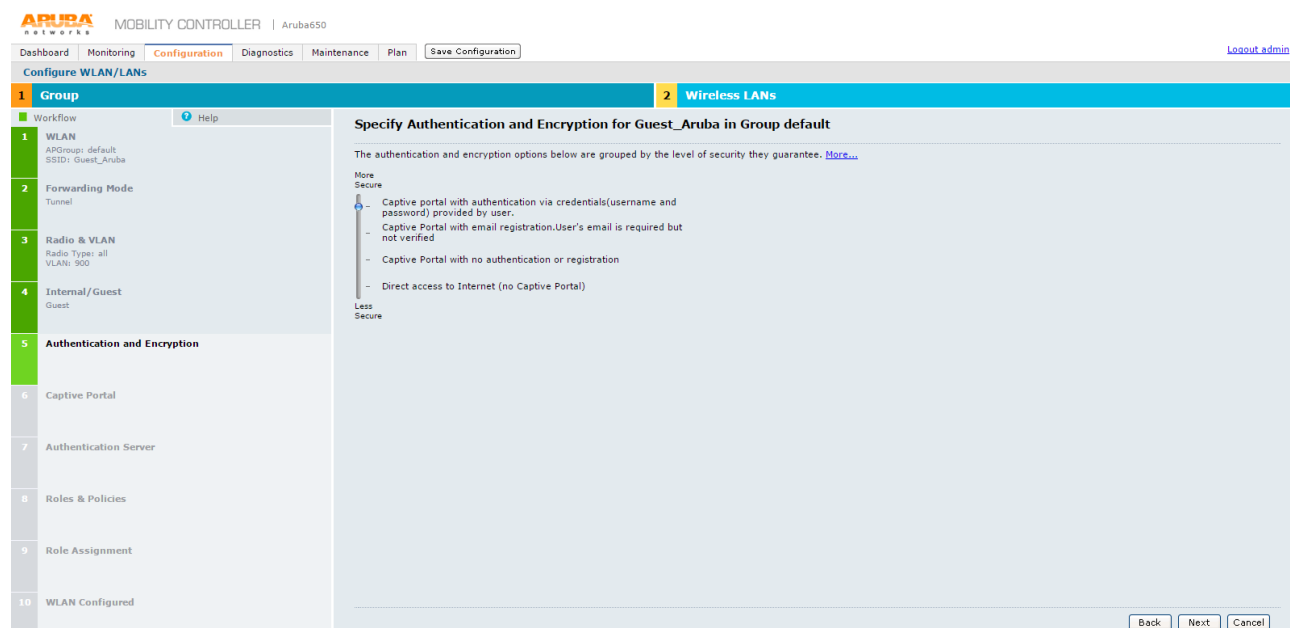

11. On Specify Authentication and Encryption for Guest_Aruba in Group default screen move the slider to **Captive portal with authentication via credentials** option and click **Next**. The Specify Captive Portal Options for Guest_Aruba in Group default screen appears.

Figure 399: Captive Portal options

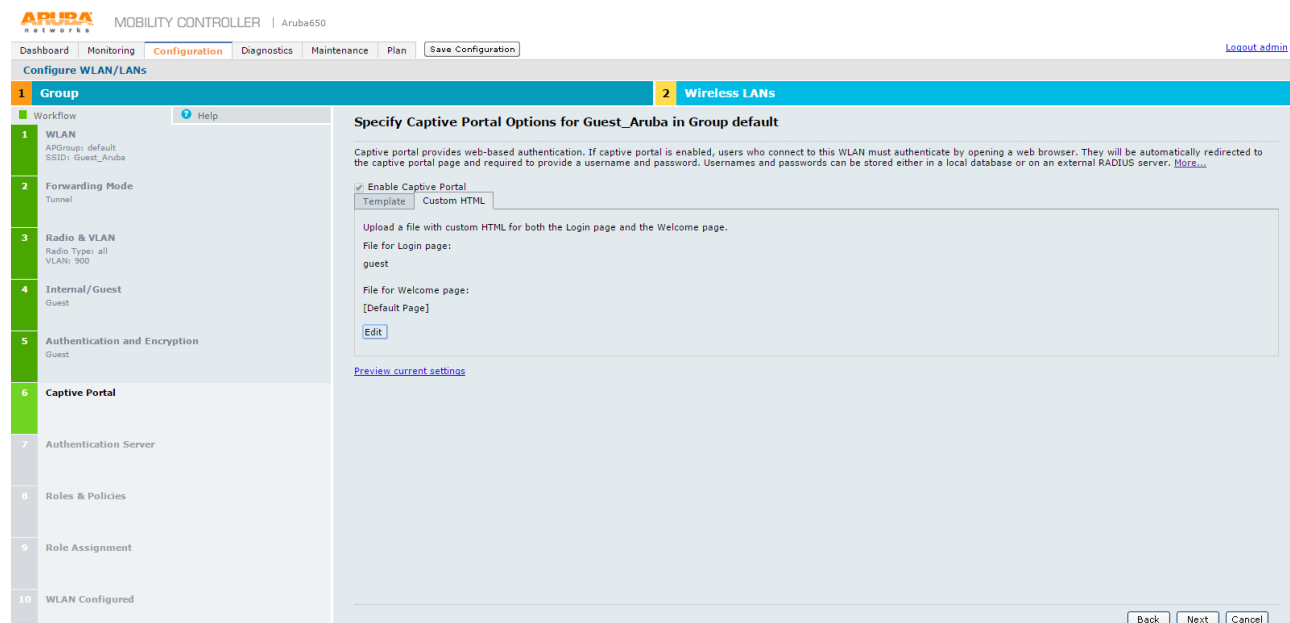

12. Specify Captive Portal Options for Guest_Aruba in Group default screen, click **Next**. The Specify Authentication Server for Guest_Aruba in Group default screen appears.

Figure 400: Authentication Server configuration

The screenshot shows the Aruba Mobility Controller configuration page for 'Aruba650'. The 'Configuration' tab is active, and the 'Wireless LANs' section is selected. The 'Specify Authentication Server for Guest_Aruba in Group default' screen is displayed. The interface includes a left sidebar with a workflow list: 1. WLAN, 2. Forwarding Mode, 3. Radio & VLAN, 4. Internal/Guest, 5. Authentication and Encryption, 6. Captive Portal, 7. Authentication Server, 8. Roles & Policies, 9. Role Assignment, and 10. WLAN Configured. The main content area has a title 'Specify Authentication Server for Guest_Aruba in Group default' and a description: 'An enterprise environment typically uses an external RADIUS server for authentication. The controller also has an internal database that can be used for small scale or test deployments. [More...](#)'. Below this is an 'Ordered list of Authentication servers:' section with a list box containing 'JC' and 'Up'/'Down' buttons. A modal dialog is open for 'Specify new server' with the following fields: 'Server type' (RADIUS selected), 'Name' (Guest_RADIUS), 'IP address' (3.3.3.2), 'Auth port' (1812), 'Acct port' (1813), 'Shared key' (masked with asterisks), and 'Retype key' (masked with asterisks). 'Ok' and 'Cancel' buttons are at the bottom of the dialog. At the bottom right of the main screen are 'Back', 'Next', and 'Cancel' buttons.

13. On Specify Authentication Server for Guest_Aruba in Group default screen, specify PPS server as the authentication server and click **Next**.

The Specify Roles & Policies for Guest_Aruba in Group default screen appears.

Figure 401: Specifying Roles and Policies

ARUBA networks MOBIILITY CONTROLLER | Aruba650

Dashboard Monitoring **Configuration** Diagnostics Maintenance Plan Save Configuration

Configure WLAN/LANS

1 Group **2 Wireless LANs**

Workflow ? Help

1 WLAN
APGroup: default
SSID: Guest_Aruba

2 Forwarding Mode
Tunnel

3 Radio & VLAN
Radio Type: all
VLAN: 63

4 Internal/Guest
Guest

5 Authentication and Encryption
Guest

6 Captive Portal
Enabled

7 Authentication Server
Radius: 2

8 Roles & Policies

Specify Roles & Policies for Guest_Aruba in Group default

Each authenticated client is assigned a role, which determines the resources to which the client will have access. Each role has a list of policies, in order, and the client's access is determined by the first rule that matches. Policies can be shared and used by multiple roles. [More...](#)

Roles/Policies/Roles Role Details Policy Details Role VLANs


| Roles | Policies for Guest_Aruba-g... | Rules for captiveportal | Policy Sharing |
|-------------------------|-------------------------------|----------------------------|---|
| Guest_Aruba-guest-lo... | global-sacl | Source Dest Service Action | <p>The policy captiveportal is also used by these roles:</p> <ul style="list-style-type: none"> Aruba_DK-guest-logon Aruba_Guest-guest-logon Guest-gatest-guest-logon GuestSelfReg_Aruba-guest-logon Guest_SelfReg-guest-logon Licensing_Aruba-guest-logon Sanitha-Aruba-Guest-guest-logon Sanitha-Aruba-Guest-guest-logon dotix-qa-aruba-slf-guest-logon quest-logon logon qa-aruba-remote-guest-logon qa-remote-guest-logon qa_aruba-guest-logon qa_aruba_new-guest-logon qa_aruba_sim-guest-logon qa_aruba_slf-guest-logon qa_aruba_wrk-guest-logon sol-aruba-guest-guest-logon |
| guest | apprf-Guest_Aruba-gu | user any svc-h... dst-n... | |
| | logon-control | user any svc-h... dst-n... | |
| | captiveportal | user any svc-h... dst-n... | |
| | | user any svc-h... dst-n... | |
| | | host 3... any any permit | |
| | | any host ... any permit | |
| | | | |
| | | | |
| | | | |

Delete New...

Delete Add... Delete Add...

14. On Specify Roles & Policies for Guest_Aruba in Group default screen, configure the roles and click **Next**. The Configure Role Assignment for Guest_Aruba in Group default screen appears.


Figure 402: Configuring Role Assignment

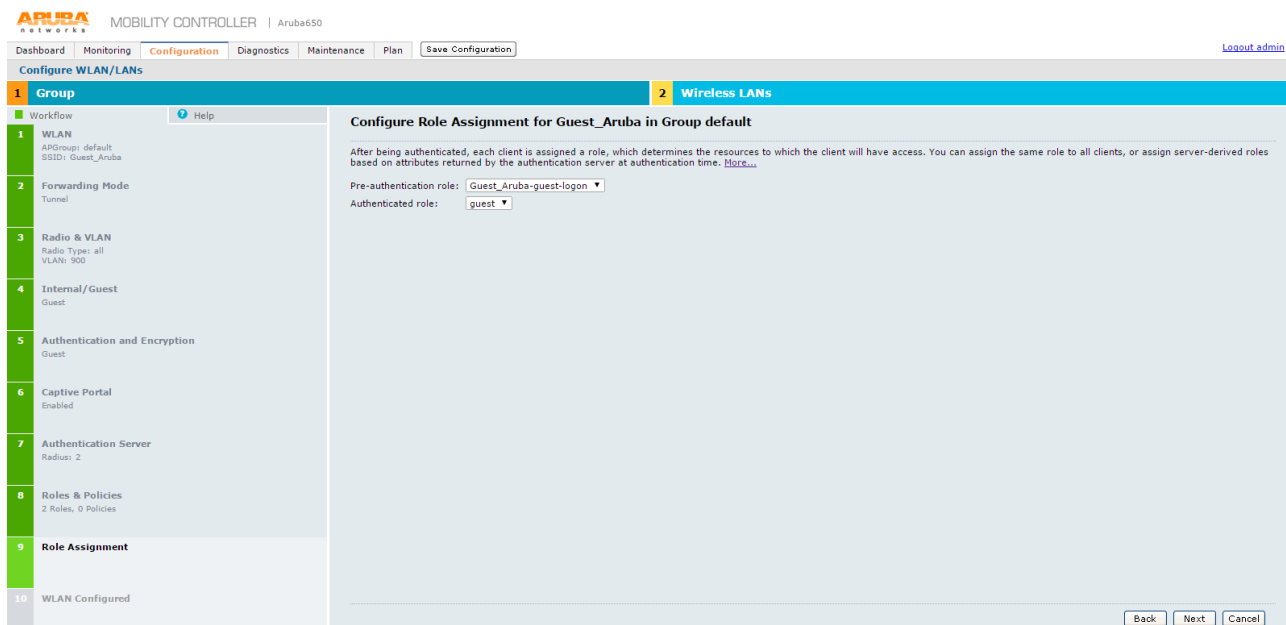

15. On Configure Role Assignment for Guest_Aruba in Group default screen, click **Next**.

The WLAN Configuration is Complete screen appears.


Figure 403: WLAN configuration complete message

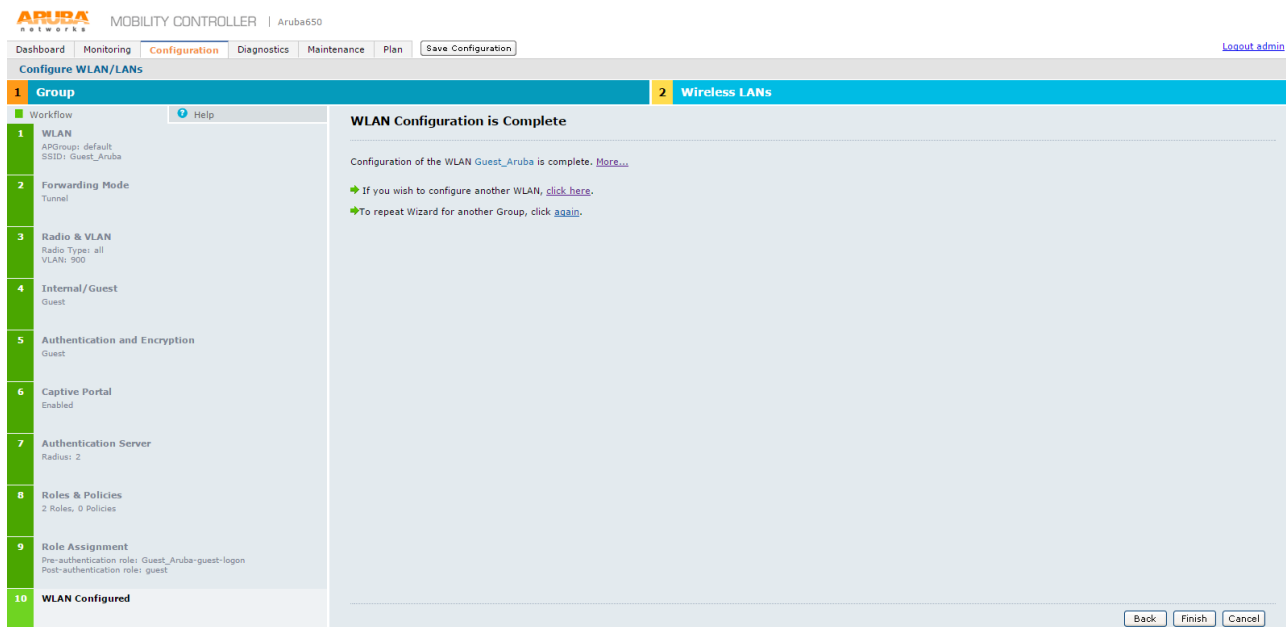

16. Click **Finish** to complete the configuration.

The WLAN Configuration is Complete screen appears displaying the summary of the configuration.


Figure 404: WLAN configuration complete message with details

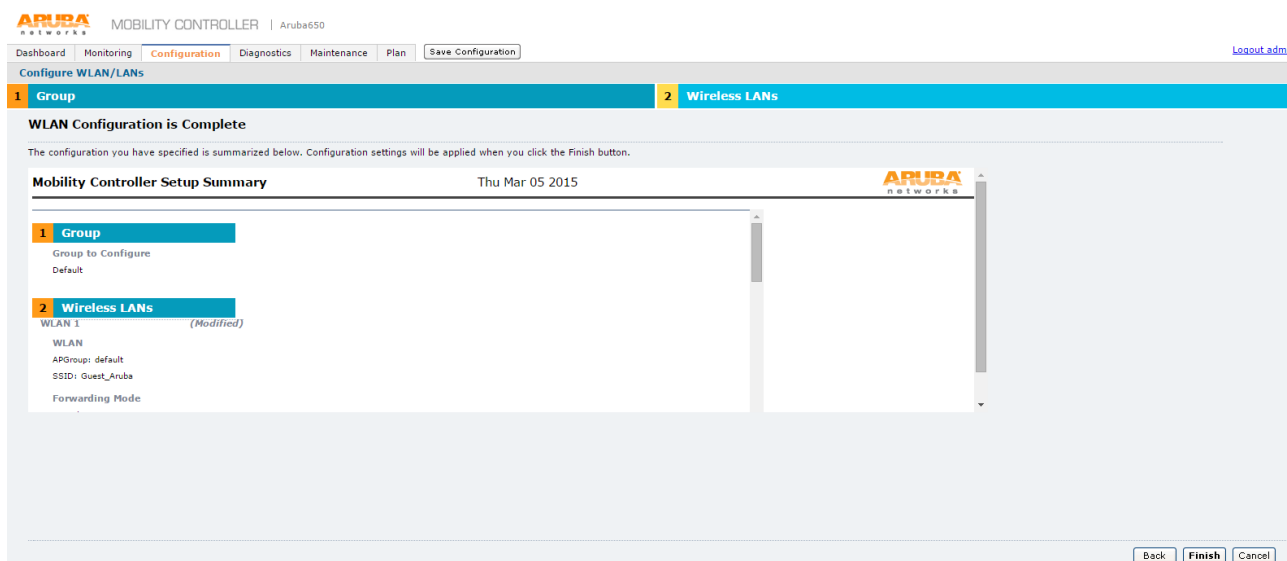

17. Click **Finish**.

The Controller Has Been Configured screen appears.

Figure 405: Controller configured

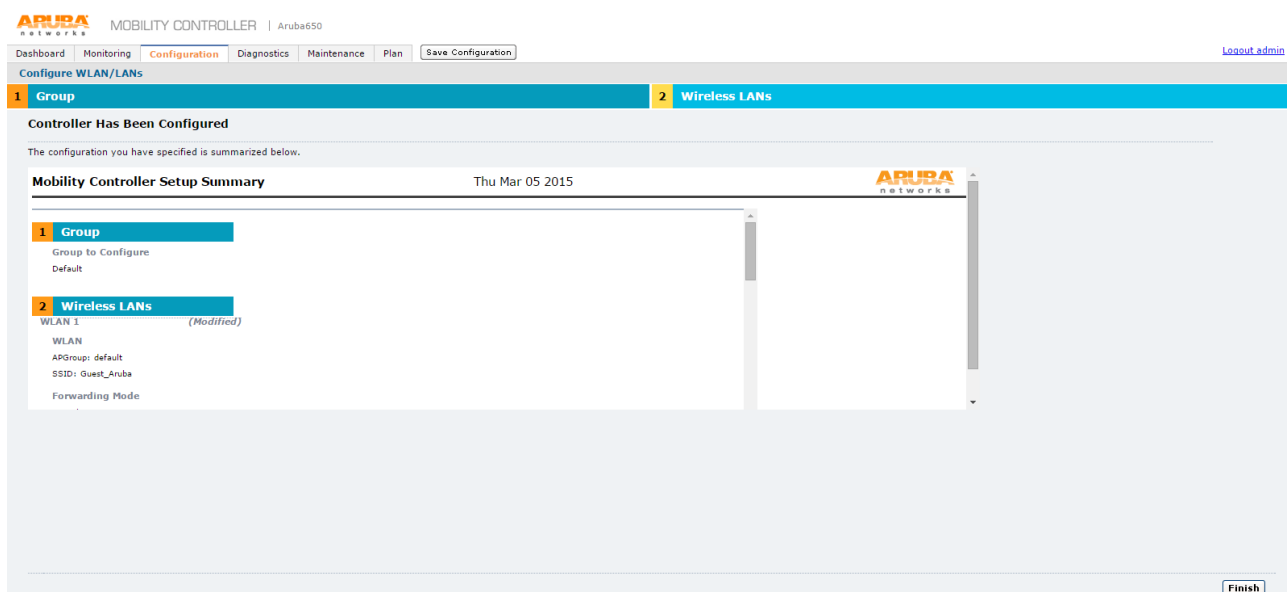

18. Click **Finish**.

The system refreshes and takes you to the **Configuration** tab.

19. Select **Security > Authentication > AAA Profiles** and click on **RADIUS Accounting Server Group**.

Select an appropriate server group for **RADIUS Accounting Server Group**.

Figure 406: RADIUS Accounting Server Group



Dashboard Monitoring **Configuration** Diagnostics Maintenance Plan Save Configuration

WIZARDS

AP Wizard
Controller Wizard
WLAN/LAN Wizard
License Wizard
WIP Wizard

NETWORK

Controller
VLANs
Ports
Uplink
IP

SECURITY

> Authentication

Access Control

WIRELESS

AP Configuration
AP Installation

MANAGEMENT

General
Administration
Certificates
SNMP
Logging
Clock
Guest Provisioning
Captive Portal

Security > Authentication > Profiles

Servers AAA Profiles L2 Authentication L3 Authentication User Rules Advanced

AAA Profile

- Aruba_Dot1X-aaa_prof
- Aruba_Guest-aaa_prof
- default
- default-dot1x
- default-dot1x-psk
- default-mac-auth
- default-open
- default-xml-api
- Dot1x_Aruba-aaa_prof
- Guest-aaa_prof
- Guest-qatest-aaa_prof
- Guest_Aruba-aaa_prof
 - MAC Authentication Profile
 - MAC Authentication Server Group default
 - 802.1X Authentication Profile
 - 802.1X Authentication Server Group
 - RADIUS Accounting Server Group** Guest_Aruba_srvgrp-cwq68

RADIUS Accounting Server Group > Guest_Aruba_srvgrp-cwq68

Fail Through ☐

Servers

| Name | Server-Type | trim-FQDN | M |
|------|-------------|-----------|---|
| IC | Radius | No | |

New

Server Rules

| Priority | Attribute | Operation | Operand | Type | Action |
|----------|-----------|-----------|---------|------|--------|
| New | | | | | |

External Captive Portal Configuration

1. In Aruba WLC select **Configuration > Security > Authentication > L3 authentication**.

The L3 authentication screen appears.

Figure 407: L3 Authentication configuration

The screenshot shows the Aruba WLC configuration interface for L3 Authentication. The left sidebar contains navigation menus for WIZARDS, NETWORK, SECURITY, WIRELESS, and MANAGEMENT. The main content area is titled 'Security > Authentication > L3 Authentication'. Under the 'Captive Portal Authentication Profile' section, a list of profiles is shown, with 'Guest_Aruba-cp_prof' selected. The configuration details for this profile are displayed in a table-like format. The 'Add switch IP address in the redirection URL' checkbox is checked, and the 'Login page' field contains the URL 'https://10.204.50.16/guest'.

2. Click **Captive Portal Authentication Profile**. The list expands. Select the corresponding profile of the above configured WLAN.

- Select the check box **Add switch IP address in the redirection URL**.
- In the **Login page** box enter the PPS guest access URL that is configured as part of PPS configuration.

3. Click **Apply** to save the configuration.

RFC 3576 server configuration

1. In Aruba WLC go to **Configuration > Security > Authentication > Servers** tab.

A list of configured servers is displayed.

Figure 408: RFC 3576 Server Configuration

The screenshot shows the Aruba Mobility Controller configuration interface. The left sidebar lists various configuration categories like WIZARDS, NETWORK, and SECURITY. The main content area is titled 'Security > Authentication > Servers'. Under the 'Servers' tab, there is a list of server groups including RADIUS, LDAP, Internal DB, Tacacs Accounting, TACACS, XML API, and RFC 3576. The 'RFC 3576 Server' is selected, and its configuration is displayed in a table with columns for Instance and Actions. The table lists several IP addresses and their corresponding actions (Show Reference, Delete). Below the table, there is an 'Add' button. At the bottom, there is a 'Commands' section with an 'Apply' button and a 'View Commands' link.

| Instance | Actions |
|----------------|-----------------------|
| 10.204.50.112 | Show Reference Delete |
| 10.204.50.16 | Show Reference Delete |
| 10.204.89.134 | Show Reference Delete |
| 10.204.89.166 | Show Reference Delete |
| 10.207.129.76 | Show Reference Delete |
| 10.209.113.211 | Show Reference Delete |

- Click the **RFC 3576 Server** and add PPS as RFC 3576 server, for supporting disconnect messages.
- Click on the RFC server that is newly created to provide the key.

Figure 409: RFC Server - Key Details

The screenshot shows the Aruba Mobility Controller configuration interface. The left sidebar lists various configuration categories like WIZARDS, NETWORK, and SECURITY. The main content area is titled 'Security > Authentication > Servers'. Under the 'Servers' tab, there is a list of server groups including RADIUS, LDAP, Internal DB, Tacacs Accounting, TACACS, XML API, and RFC 3576. The 'RFC 3576 Server' is selected, and its configuration is displayed in a table with columns for Instance and Actions. The table lists several IP addresses and their corresponding actions (Show Reference, Delete). Below the table, there is an 'Add' button. At the bottom, there is a 'Commands' section with an 'Apply' button and a 'View Commands' link.

| Instance | Actions |
|----------------|-----------------------|
| 10.204.50.112 | Show Reference Delete |
| 10.204.50.16 | Show Reference Delete |
| 10.204.89.134 | Show Reference Delete |
| 10.204.89.166 | Show Reference Delete |
| 10.207.129.76 | Show Reference Delete |
| 10.209.113.211 | Show Reference Delete |

- Select **Security > Authentication > AAA Profiles**. Go to AAA profile and click on RFC 3576 server. Add the server that is newly created in step1.

Figure 410: RFC Server - Adding a server

Dashboard Monitoring **Configuration** Diagnostics Maintenance Plan Save Configuration

WIZARDS
 AP Wizard
 Controller Wizard
 WLAN/LAN Wizard
 License Wizard
 WIP Wizard

NETWORK
 Controller
 VLANs
 Ports
 Uplink
 IP

SECURITY
 > **Authentication**
 Access Control

WIRELESS
 AP Configuration
 AP Installation

MANAGEMENT
 General
 Administration
 Certificates
 SNMP
 Logging
 Clock
 Guest Provisioning
 Captive Portal
 SMTP
 Disks

Security > Authentication > Profiles

Servers AAA Profiles L2 Authentication L3 Authentication User Rules Advanced

AAA Profile

- Aruba_Dot1X-aaa_prof
- Aruba_Guest-aaa_prof
- default
- default-dot1x
- default-dot1x-psk
- default-mac-auth
- default-open
- default-xml-api
- Dot1x_Aruba-aaa_prof
- Guest-aaa_prof
- Guest-qatest-aaa_prof
- Guest_Aruba-aaa_prof
 - MAC Authentication Profile
 - MAC Authentication Server Group default
 - 802.1X Authentication Profile
 - 802.1X Authentication Server Group
 - RADIUS Accounting Server Guest_Aruba_srvgrp-cwq68 Group
- XML API server
- RFC 3576 server**

RFC 3576 servers


| Name |
|---------|
| 3.3.3.2 |

Add a profile 10.204.50.112 Add

WLAN Configuration for Remote Networking mode on Aruba WLC

1. Login to Aruba WLC. Select **Configuration > Wizards > WLAN/LAN Wizard**. The Welcome to the WLAN/LAN Configuration Wizard screen appears.


Figure 411: Remote Networking configuration

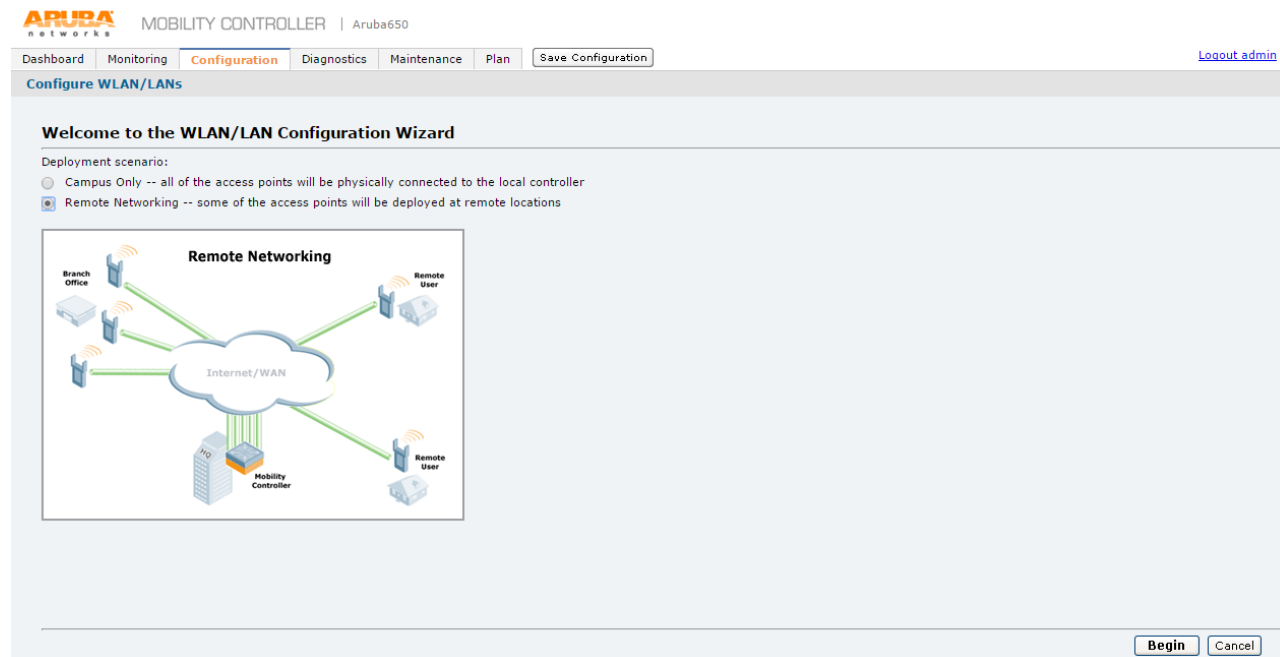

2. Select **Remote Networking** option and click **Begin**.

The Specify Group to Configure screen appears.

Figure 412: Group configuration

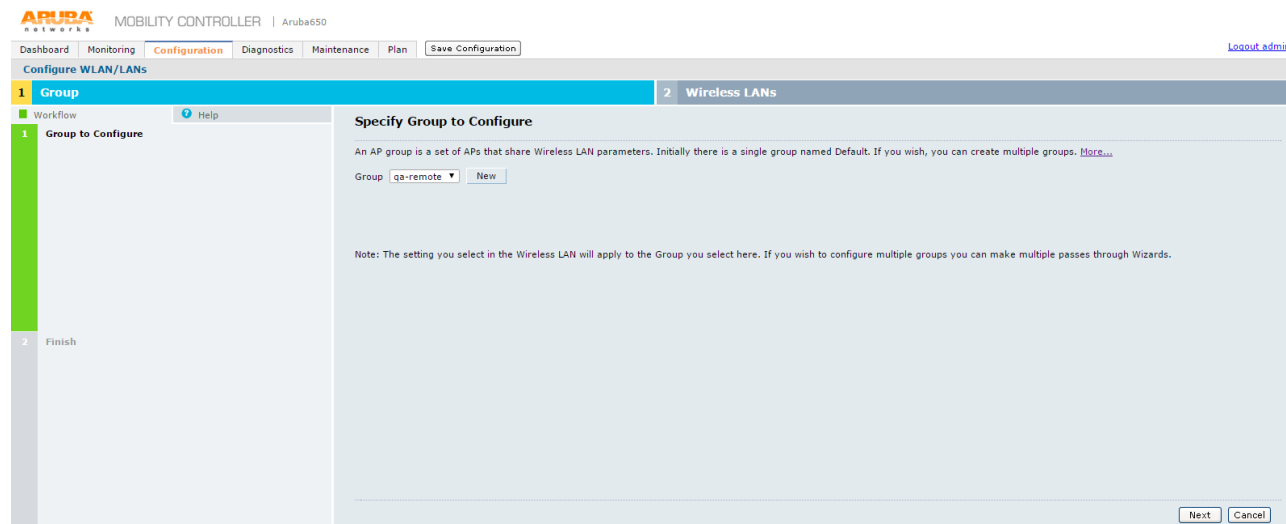

3. On Specify Group to Configure screen, select an AP group and click **Next**.

Figure 413: RAP DHCP Settings

The screenshot shows the Aruba Mobility Controller configuration interface for Group qa-group. The interface is divided into three main sections: Group, Wired LANs, and Wireless LANs. The Group section is active, showing a workflow with four steps: 1. Group to Configure, 2. RAP DHCP Settings, 3. RAP DNS Query Routing, and 4. Finish. The RAP DHCP Settings step is highlighted, and a red arrow points to the 'Use internal DHCP server' checkbox, which is checked. Below this, the following fields are configured: DHCP pool start: 192.168.11.2, DHCP pool end: 192.168.11.254, DHCP pool netmask: 255.255.255.0, Default router: 192.168.11.1, DNS server: (empty), VLAN ID: 192, and DHCP Lease time: Limit to: 30 Days. The 'No Limit' option is selected. At the bottom right, there are 'Back', 'Next', and 'Cancel' buttons.


4. On Specify RAP DHCP settings for Group qa-group screen, configure:

- DHCP pool start
- DHCP pool end
- DHCP pool netmask
- Default router
- DNS server
- VLAN ID
- DHCP Lease time – Select the required option and set the limit.

5. Click **Next**.

The Specify RAP DNS Query Routing for Groups qa-group appears.


Figure 414: RAP DNS Query Routing

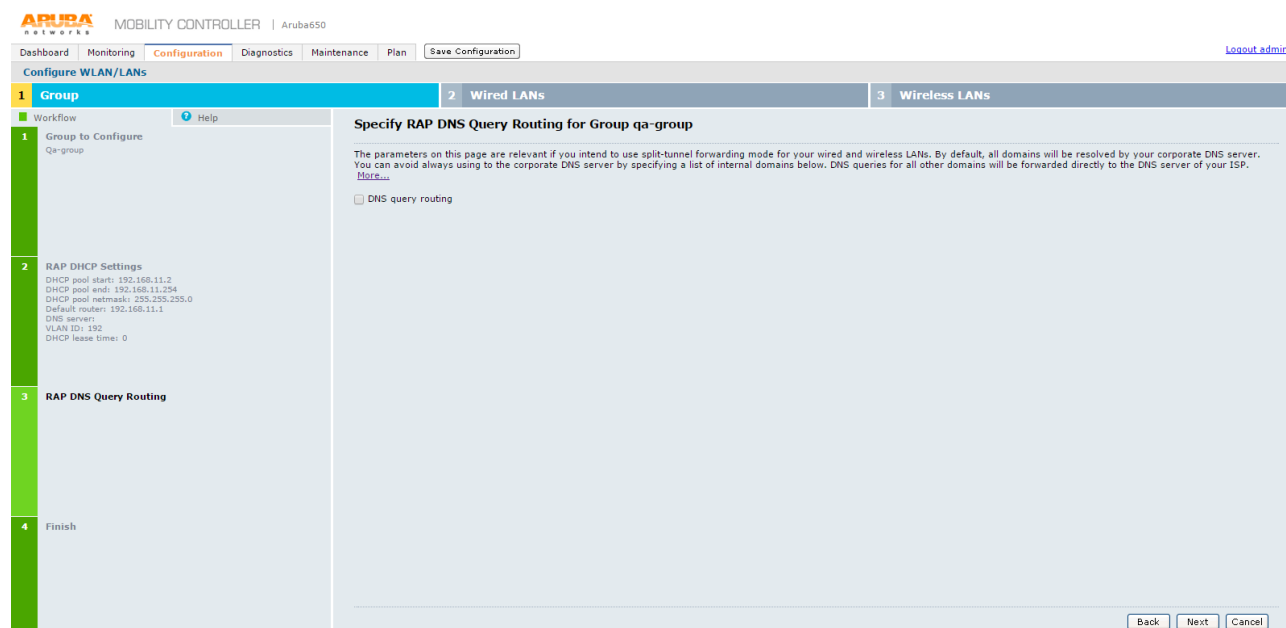

- On the Specify RAP DNS Query Routing for Groups qa-group screen click **Next**.

The Ready to Configure Wired LANs, and Wireless LANs for Group screen appears.

Figure 415: Configuring Wireless LANs

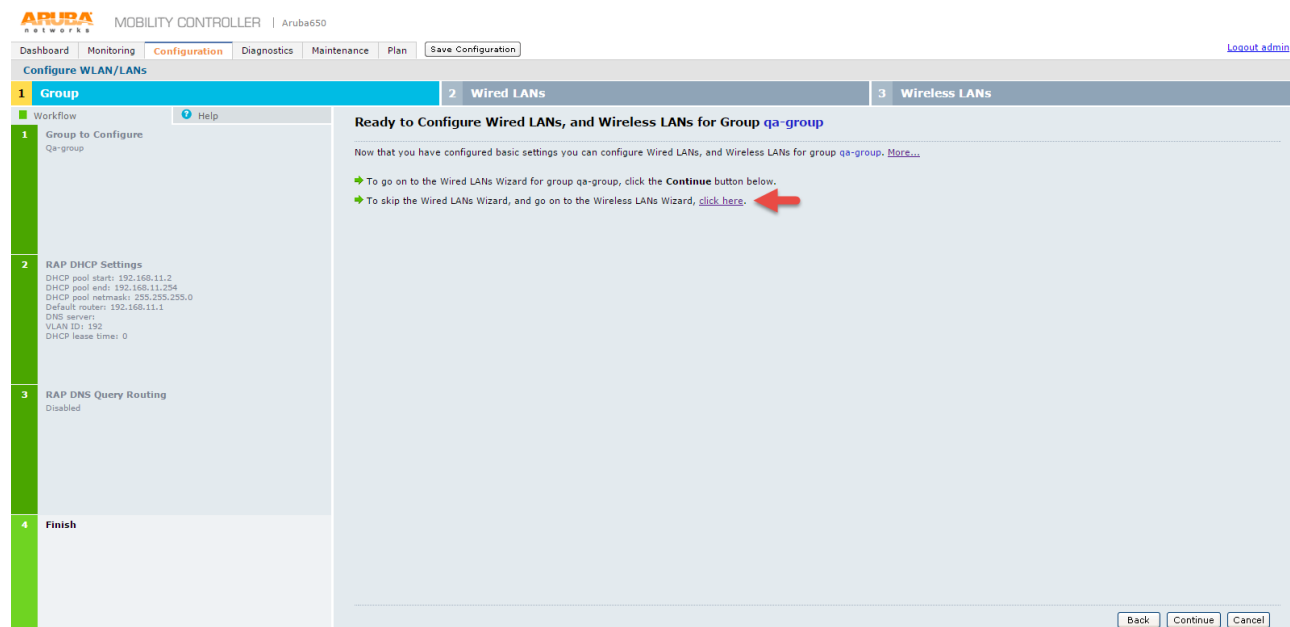

- On Ready to Configure Wired LANs, and Wireless LANs for Group screen, click Wireless LANs Wizard link.
- Follow the [Steps 4-18](#) of Campus Only mode to complete Wireless WLAN configuration.

9. Follow [External Captive Portal Configuration](#) of Campus Only mode to configure Captive Portal for Remote Networking mode.
10. Follow [RFC 3576 Configuration](#) of Campus Only mode to configure PPS as RFC 3576 server.

Configuring Aruba WLC in campus only mode using CLI

To configure Aruba WLC for Guest Access in campus only mode via command-line interface, access the CLI in config mode and issue the following commands.

Configuring RADIUS server:

```
aaa authentication-server radius <RADIUS-profile-name>  
host <PPS ip-address>  
key <password>
```

Configuring Server Group:

```
aaa server-group <server-group-name>  
auth-server <RADIUS-profile-name>
```

Configuring AAA profile:

```
aaa profile <AAA-profile-name>
```

Configuring SSID profile:

```
wlan ssid-profile <ssid-profile-name>  
ssid <ssid-name>  
ssid-enable  
no hide-ssid  
opmode opensystem
```

Configuring Captive portal:

```
aaa authentication captive-portal <CP-profile-name>  
login-page <PPS-guest-URL>  
switchip-in-redirection-url  
server-group <server-group-name>  
user-logon  
no guest_logon  
default-role guest
```

Creating a User-role:

```
user-role <Role-Name>  
captive-portal <CP-profile-name>  
access-list session logon-control  
access-list session captiveportal
```

Attaching initial-role to AAA profile:

```
aaa profile <AAA-profile-name>  
initial-role <role-name>
```

Configuring Firewall policy rules for PPS: ip access-list session captiveportal

```
host <PPS-IP> any permit position 1  
any host <PPS-IP> any permit position 2
```

Configuring Virtual-AP and associating SSID profile:

```
wlan virtual-ap <vap-profile-name>
forward-mode tunnel
vlan <vlan-id>
ssid-profile <ssid-profile-name>
aaa-profile <AAA-profile-name>
```

Configuring AP group and associating Virtual-AP profile:

```
ap-group default
```

If it is another ap-group, give as required.

```
virtual-ap <vap-profile-name>
```

Configuring RFC-3576 server:

```
aaa rfc-3576-server <PPS-IP>
key <password>
```

Attaching RFC-3576 server to AAA profile:

```
aaa profile <aaa-profile-name>
rfc-3576-server <PPS-IP>
```

Attaching RADIUS accounting server group to AAA profile:

```
aaa profile <aaa-profile-name>
radius-accounting <server-group-name>
```

Configuring Aruba WLC in Remote Networking mode using CLI

To configure Aruba WLC for Guest Access in Remote Networking mode via command-line interface, access the CLI in config mode and issue the following commands.

Configuring RADIUS server:

```
aaa authentication-server radius <RADIUS-profile-name>
host <PPS ip-address>
key <password>
```

Configuring Server Group:

```
aaa server-group <server-group-name>
auth-server <RADIUS-profile-name>
```

Configuring AAA Profile:

```
aaa profile <AAA-profile-name>
```

Configuring SSID Profile:

```
wlan ssid-profile <ssid-profile-name>
ssid <ssid-name>
ssid-enable
no hide-ssid
opmode opensystem
```

Configuring Captive Portal:

```
aaa authentication captive-portal <CP-profile-name>
```

```
login-page <PPS-guest-URL>
switchip-in-redirection-url
server-group <server-group-name>
user-logon
no guest_logon
default-role guest
```

Creating a User-role:

```
user-role <Role-Name>
captive-portal <CP-profile-name>
access-list session logon-control
access-list session captiveportal
```

Attaching initial-role to AAA profile:

```
aaa profile <AAA-profile-name>
initial-role <role-name>
```

Configuring Firewall policy rules for PPS:

```
ip access-list session captiveportal
host <PPS-IP> any any permit position 1
any host <PPS-IP> any permit position 2
```

Configuring Virtual-AP and associating SSID profile:

```
wlan virtual-ap <vap-profile-name>
forward-mode tunnel
vlan <vlan-id>
ssid-profile <ssid-profile-name>
aaa-profile <AAA-profile-name>
```

Configuring DHCP server on Remote AP:

```
ap system-profile <name>
rap-dhcp-default-router <ipaddr>
rap-dhcp-dns-server <ipaddr>
rap-dhcp-lease <days>
rap-dhcp-pool-start <ipaddr>
rap-dhcp-pool-end <ipaddr>
rap-dhcp-pool-netmask <netmask>
rap-dhcp-server-vlan <vlan>
```

Configuring AP group and associating Virtual-AP profile:

```
ap-group default
```

If it is another ap-group, give as required.

```
virtual-ap <vap-profile-name>
ap-system-profile <name>
```

Configuring RFC-3576 server:

```
aaa rfc-3576-server <PPS-IP>
key <password>
```

Attaching RFC-3576 server to AAA profile:

```
aaa profile <aaa-profile-name>
rfc-3576-server <PPS-IP>
```

Attaching RADIUS accounting server group to AAA profile:


```
aaa profile <aaa-profile-name>
radius-accounting <server-group-name>
```

Configuring Aruba Instant Access Point

To configure Aruba Instant Access Point:


1. Login to the Aruba Instant Access portal. The Aruba Instant page appears.

Figure 416: Aruba Instant Home Page

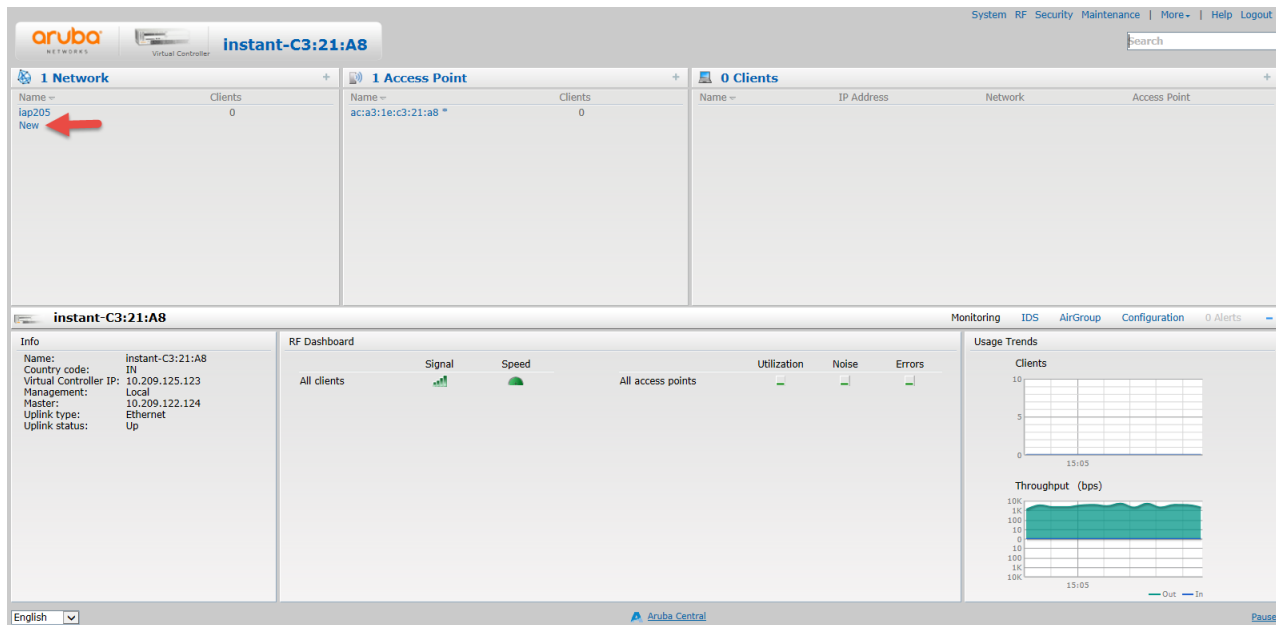

2. Click **New** to create a new SSID. The **New WLAN** window appears.

Figure 417: Creating a New WLAN

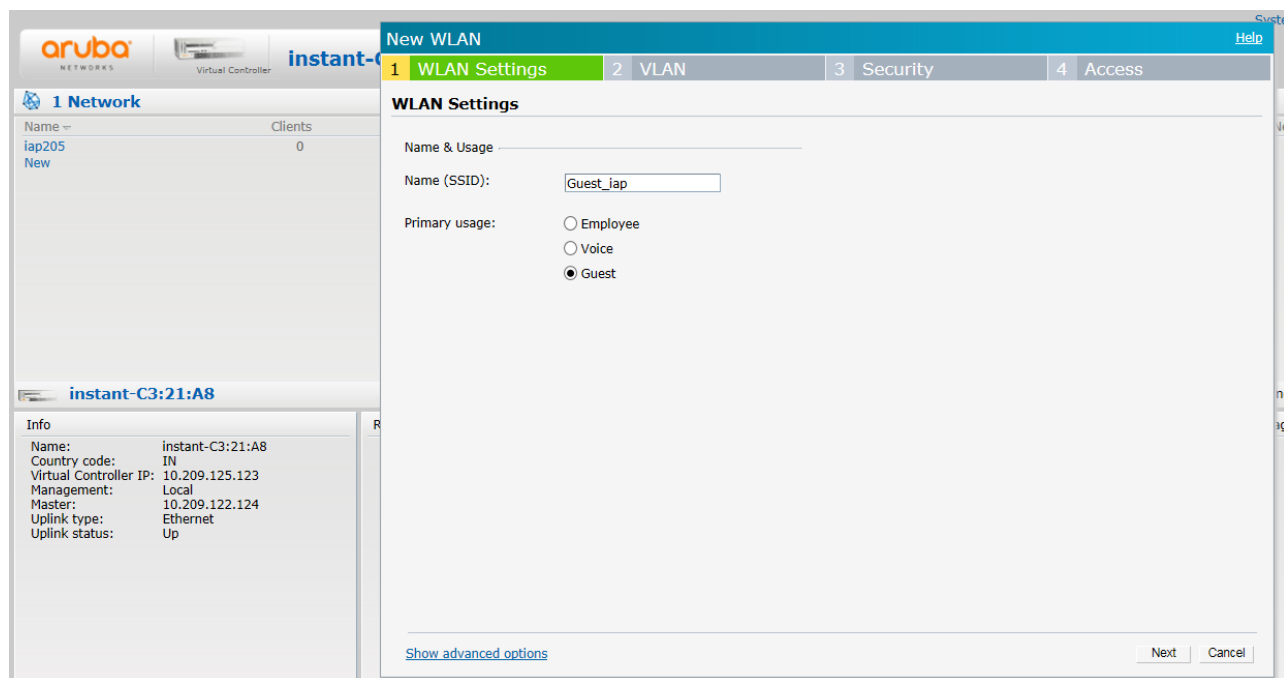

3. In the WLAN Settings tab:

- In the **New (SSID)** field enter a name for the SSID.
- In the **Primary usage** options select **Guest**.

4. Click **Next**.

The **VLAN** tab options appears.

Figure 418: VLAN Settings

New WLAN [Help](#)

1 **WLAN Settings** 2 **VLAN** 3 Security 4 Access

Client IP & VLAN Assignment

Client IP assignment: ☐ Virtual Controller managed
☒ Network assigned

Client VLAN assignment: ☒ Default
☐ Static
☐ Dynamic

[Back](#) [Next](#) [Cancel](#)

5. Keep the DHCP setting as per your network design.
 - **Client IP assignment** here **Network Assigned** is chosen.
 - For **Client VLAN assignment** here **Default.** is chosen
6. Click **Next**.

The **Security** tab options appear.

Figure 419: Security Settings

New WLAN [Help](#)

1 WLAN Settings **2 VLAN** **3 Security** **4 Access**

Security Level

Splash page type:

Captive portal profile:

WISPr:

MAC authentication:

Auth server 1:

Reauth interval:

Internal server:

Blacklisting:

Walled garden:

Disable if uplink type is:

Encryption:

Redirect URL: (optional)

7. In the **Security Level** section do the following:

- From the **Security page type**, drop-down list select **External**.
- From the **Captive portal profile**, drop-down list select **New**

The **New** screen appears.

Enter the details as shown in the above figure and then click **OK**.

The newly created captive portal appears in the **Captive portal profile** drop-down list.

Figure 420: Security Settings - Creating a New Server

New WLAN [Help](#)

1 **WLAN Settings** 2 **VLAN** 3 **Security** 4 **Access**

Security Level

Splash page type:

Captive portal profile: [Edit](#)

WISPr:

MAC authentication:

Auth server 1:

New Server

☒ **RADIUS** ☐ **LDAP**

Name:

IP address:

Auth port:

Accounting port:

Shared key:

Retype key:

Timeout: sec.

Retry count:

RFC 3576:

Air Group CoA port:

NAS IP address: (optional)

NAS identifier: (optional)

Dead time: min.

DRP IP:

DRP Mask:

DRP VLAN:

DRP Gateway:

[Back](#) [Next](#) [Cancel](#)

[OK](#) [Cancel](#)

8. From the **Auth server 1** drop-down list select **New**.

The **New Server** screen appears.

Create a server pointing to PPS server. Enter the details as shown in the above figure and then click **OK**.

The configured **Security** tab options appears as in the following figure.

Figure 421: Security Settings

New WLAN[Help](#)

1 WLAN Settings**2** VLAN**3** Security4 Access

Security Level

Splash page type:

External

Captive portal profile:

cap

Edit

WISPr:

Disabled

MAC authentication:

Disabled

Auth server 1:

ic

Edit

Auth server 2:

-- Select Server --

Reauth interval:

0

min.

Accounting:

Use authentication servers

Accounting mode:

Authentication

Accounting interval:

min.

Blacklisting:

Disabled

Walled garden:

[Blacklist: 0](#) [Whitelist: 0](#)

Disable if uplink type is: ☐ 3G/4G ☐ Wifi ☐ Ethernet

Encryption:

Disabled


Back

Next

Cancel

9. Click **Next**. The **Access** tab options appears.

Figure 422: Access Settings

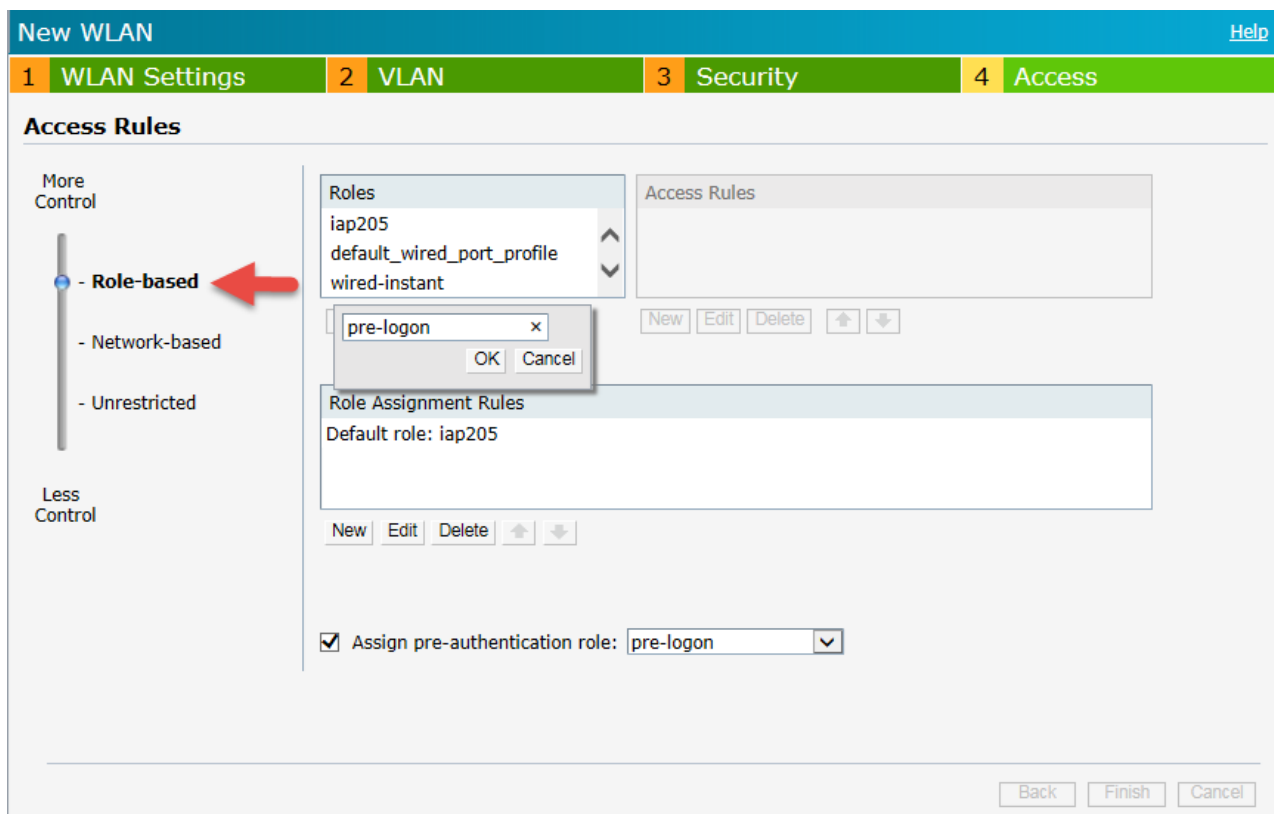

10. In the Access Rules section:

- Move the slider to **Role-based**,
- Under the **Roles** section, click **New** to create a new role 'pre-logon'.

Figure 423: Access Settings - Creating a Role

11. Under the **Access Rules** section click **New** to create an access rule for the role. The New Rule window appears.

Figure 424: Access Settings - Creating a Rule

12. Select the options as shown in the above figure.

- From the **Destination** drop-down list select 'to a particular server'.
- In the **IP** box enter the PPS server's IP address.

Click **OK**.

The Access Rule appears in the **Access Rules for** list box.

Figure 425: Access Settings - Creating an Access Rule

New WLAN

Help

1 WLAN Settings

2 VLAN

3 Security

4 Access

Access Rules

More Control

Less Control

- Role-based

- Network-based

- Unrestricted

Roles

default_wired_port_profile

wired-instant

pre-logon

New

Delete

Access Rules for pre-logon

● Allow any on server 10.204.88.211

New

Edit

Delete

↑

↓

Role Assignment Rules

Default role: iap205

New

Edit

Delete

↑

↓

☒ Assign pre-authentication role:

pre-logon

▼

Back

Finish


Cancel

13. Select the **Assign pre-authentication role** check box and then select 'pre-logon' from the drop-down list.
14. Click **Finish** to complete the settings.

Configuring Ruckus WLC

Ruckus WLC is configured as Radius Client where PPS is the Radius Server. The below figure illustrates the workflow of Guest Access on PPS for Ruckus WLC. This section provides examples of how to configure the Ruckus WLC. For more information, see Ruckus documentation.

Figure 426: Guest Access on PPS for Ruckus WLC

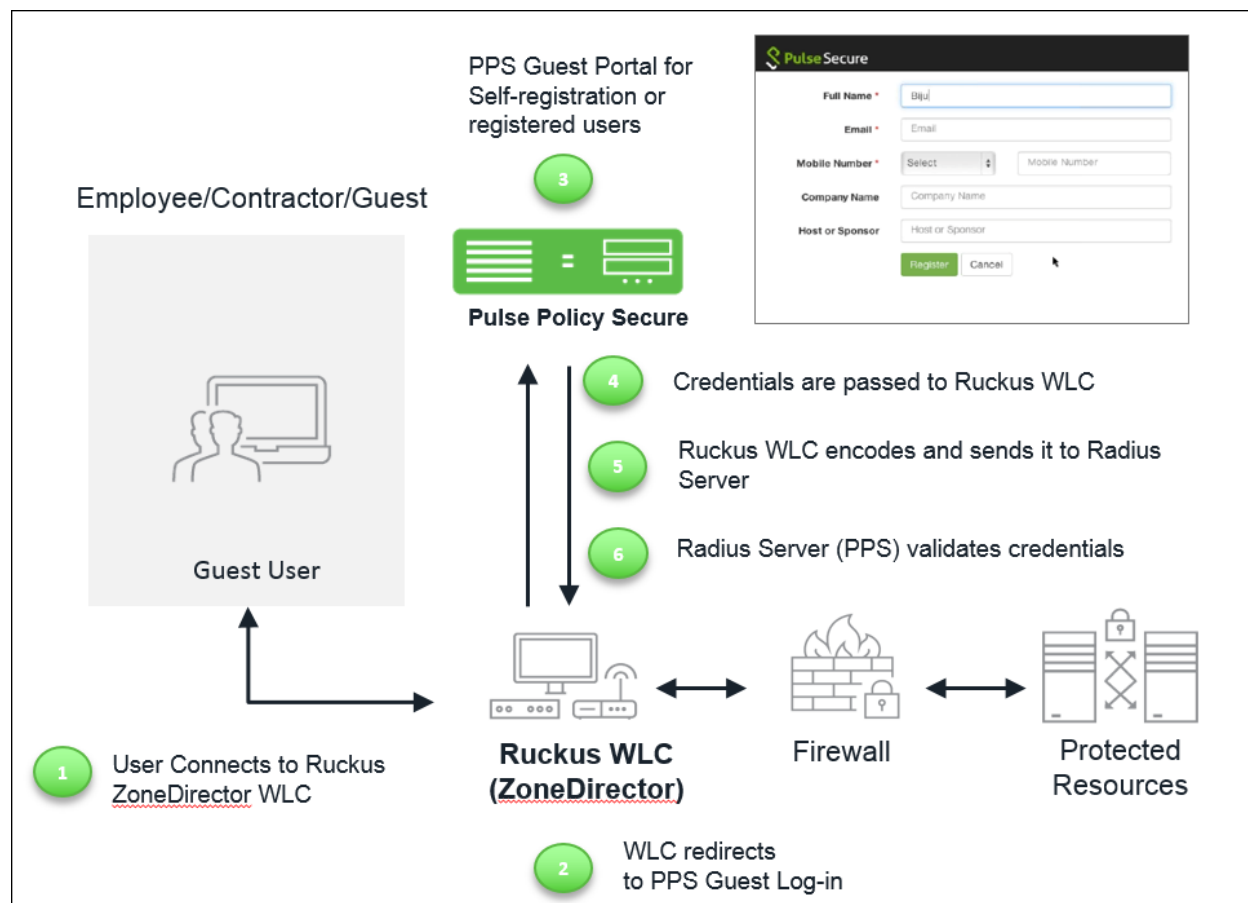

To configure Ruckus WLC with PPS:

1. Connect user/endpoint to the Ruckus Wireless network with open SSID over 802.1X with restricted access through ACLs.
2. Redirect Ruckus WLC guest to external (PPS) captive portal when guest tries to access a web-resource.
3. Enter credentials on captive portal page.
4. For guest access authentication, PPS provides guest user credentials to Ruckus SmartZone WLC's management interface via REST API.
5. Ruckus WLC can encode the credentials and send it to a RADIUS server (PPS) through Radius Access Request.
6. The RADIUS server validates the credentials and sends a RADIUS response, which contains standard RADIUS attributes and Vendor Specific Attributes.

7. Ruckus WLC provides network access to the guest by changing VLAN based on PPS role-based policy.

Ruckus SmartZone WLC Configuration

The Ruckus SmartZone software platform provides unified software architecture across wireless LAN (WLAN) controllers, for appliance, virtualized and cloud environments for deployment flexibility.

To configure SmartZone WLC:

1. Configure PPS as Radius Sever.
2. Go to Configuration > AP Zone > Zone Name > AAA servers> Create New.
3. Configure Name, IP Address, Shared Secret and Confirm Secret.

Figure 427: SmartZone WLC Configuration

The screenshot displays the Ruckus SmartZone web interface. The top navigation bar includes the Ruckus logo, a timestamp (2016/03/14 14:40:57), and user information (admin | Super Admin | My Account | Log Off). The main navigation tabs are Dashboard, Monitor, Configuration, Report, Identity, Device, and Administration. The left sidebar lists various configuration options, with 'AAA' highlighted under the 'AP Zones' section. The main content area shows the 'AAA Servers' configuration page. A modal dialog titled 'Create New AAA Server' is open, displaying the following fields:

- General Options:**
 - Name: * Radius Server
 - Description: *
 - Type: * ☒ RADIUS ☐ RADIUS Accounting ☐ Active Directory ☐ LDAP
 - Backup RADIUS: ☐ Enable Secondary Server
- Primary Server:**
 - IP Address: * 10.204.88.139
 - Port: * 1812
 - Shared Secret: * ••••••••
 - Confirm Secret: * ••••••••

At the bottom of the dialog are 'OK' and 'Cancel' buttons. The background shows a table of existing AAA servers with columns for Name, Type, Description, and Actions.

To configure Hotspot (WISPr) service:

1. Go to Configuration > AP Zone > Zone Name > Hotspot (WISPr)> Create New.

Figure 428: SmartZone Hotspot Service

The screenshot shows the Ruckus Virtual SmartZone - High Scale (SmartZone) configuration interface. The left sidebar lists various configuration options, with 'Hotspot (WISPr)' selected. The main content area is titled 'Create New Hotspot Portal' and contains the following sections:

- General Options:**
 - Portal Name: * HotSpot
 - Portal Description:
- Redirection:**
 - Smart Client Support:
 - ☒ None
 - ☐ Enable
 - ☐ Only Smart Client Allowed
 - Login URL:
 - ☐ Internal
 - ☒ External
 - Redirect unauthenticated user to the URL for authentication: * https://10.204.88.139/guest
 - Redirected MAC Format: * AA:BB:CC:DD:EE:FF (format used for including client's MAC inside redirected URL request)
 - Start Page:
 - ☒ Redirect to the URL that user intends to visit.
 - ☐ Redirect to the following URL:
- User Session:**
- Location Information:**
- Walled Garden:**

At the bottom of the form are 'OK' and 'Cancel' buttons.

2. Configure Portal Name, Login URL text box with https://pps-ip/guest.
3. Configure Northbound Interface password as Ruckus Request Password on Radius Client page in PPS.

Figure 429: Northbound Portal Interface – Ruckus SmartZone

The screenshot shows the Ruckus Virtual SmartZone - High Scale (SmartZone) configuration interface. The left sidebar lists various configuration options, with 'Northbound Portal Interface' selected. The main content area is titled 'Northbound Portal Interface' and contains the following sections:

- General System Settings:**
- System Time:**
- Syslog Server:**
- Northbound Portal Interface:**
 - Set the northbound portal interface password. 3rd party applications use the northbound portal interface to authenticate users and to retrieve user information during the UE association.
 - Password: *
 - Buttons: Refresh, Apply, Cancel
- SMTP Server:**
- FTP Server for Uploading Statistical Data:**
- Critical AP Rules:**
- Manage User Agent Blacklist:**
- Node Affinity:**
- Certificate Store:**
- Cluster & Planes:**
- Cluster Planes:**
- Cluster Redundancy:**
- Network Management:**
- SNMP Agent:**
- Event Management:**

To configure WLAN:

4. Go to Configuration > AP Zone > Zone Name > WLAN > Create New.
5. Configure Name, SSID, Authentication type as “Hotspot (WISPr)”, Authentication Method as “open” and Encryption as “None”.
6. Select Hotspot configured from drop down list and select Authentication Server.

Figure 430: SmartZone WLAN

Ruckus 2016/03/14 14:46:11 | Administration Domain | admin | Super Admin | My Account | Log Off | ?

Virtual SmartZone - High Scale (SmartZone)

Dashboard Monitor Configuration Report Identity Device Administration

Configuration >> AP Zones >> AP Zone List >> SmartZone

Zone Configuration

- AP Group
- AAA
- Hotspot (WISPr)
- WeChat
- Guest Access
- Web Authentication
- Hotspot 2.0
- WLAN**
- WLAN Scheduler
- Device Policy
- L2 Access Control
- Bonjour Gateway Policies
- DiffServ
- Ethernet Port
- Global Configuration
- AP Tunnel Profiles

General Options

Name: * Ruckus-SmartZone

SSID: * Ruckus-SmartZone

HESSID:

Description:

WLAN Usage

Access Network: ☐ Tunnel WLAN traffic through Ruckus GRE

Authentication Type: * ☐ Standard usage (For most regular wireless networks)

- ☒ Hotspot (WISPr)
- ☐ Guest Access + Hotspot 2.0 Onboarding
- ☐ Web Authentication
- ☐ Hotspot 2.0 Access
- ☐ Hotspot 2.0 Secure Onboarding (OSEN)
- ☐ WeChat

Authentication Options

Method: * ☒ Open ☐ 802.1x EAP ☐ MAC Address

Encryption Options

Method: * ☐ WPA2 ☐ WPA-Mixed ☐ WEP-64 (40 bits) ☐ WEP-128 (104 bits) ☒ None

Hotspot Portal

Hotspot (WISPr) Portal: * HotSpot

Bypass CNA: ☒ Enable

Ruckus ZoneDirector WLC Configuration

The following steps give configuration of Ruckus ZoneDirector WLC:

1. Configure PPS as Radius Sever.
2. Go to Configuration > AP Zone > Zone Name > AAA servers> Create New.
3. Enter Name, select "Type" as "Radius", IP Address, Shared Secret and Confirm Secret.

Figure 431: ZoneDirector WLC Configuration

Authentication/Accounting Servers

This table lists all authentication mechanisms that can be used whenever authentication is needed.

| Name | Type | Actions |
|---------------|--------|--|
| 10.204.88.141 | RADIUS | Edit Clone |

Editing (10.204.88.141)

Name:

Type: ☒ Active Directory ☐ LDAP ☒ RADIUS ☐ RADIUS Accounting ☐ TACACS+

Encryption: ☐ TLS

Auth Method: ☒ PAP ☐ CHAP

Backup RADIUS: ☐ Enable Backup RADIUS support

IP Address*:

Port*:

Shared Secret*:

Confirm Secret*:

Retry Policy

Request Timeout*: seconds

Max Number of Retries*: times

| | | |
|---|-------------------|--|
| <input type="checkbox"/> Len-Dev-PPS | RADIUS | Edit Clone |
| <input type="checkbox"/> Coa | RADIUS Accounting | Edit Clone |
| <input type="checkbox"/> 10.204.88.139 | RADIUS Accounting | Edit Clone |
| <input type="checkbox"/> Len-Dev-PPS-Acct | RADIUS Accounting | Edit Clone |
| <input type="checkbox"/> Kajali-IC | RADIUS | Edit Clone |
| <input type="checkbox"/> 10.204.88.139-Auth | RADIUS | Edit Clone |

[Create New](#) 1-7 (7)

To configure Hotspot (WISPr) service:

1. Go to **Configuration > AP Zone > Zone Name > Hotspot Services>Create New**.
2. Configure Name, Login page text box with `https://pps-ip/guest`.
3. Select authentication server configured in AAA servers.

Figure 432: ZoneDirector Hotspot Services

Hotspot Services

| Name | Login Page | Start Page | WISPr Smart Client Support | Actions |
|---------------|-----------------------------|--------------------------|----------------------------|--|
| Len-PPS-Guest | https://10.204.50.112/guest | The user's intended page | None | Edit Clone |
| Guest-PS | https://10.204.88.139/guest | The user's intended page | None | Edit Clone |

Editing (Guest-PS)

Name:

Redirection

WISPr Smart Client Support: ☒ None ☐ Enabled ☐ Only WISPr Smart Client allowed

Login Page*: Redirect unauthenticated user to for authentication.

Start Page: After user is authenticated, ☒ redirect to the URL that the user intends to visit. ☐ redirect to the following URL:

User Session

Session Timeout: ☐ Terminate user session after minutes

Grace Period: ☐ Allow users to reconnect with out re-authentication for minutes

Authentication/Accounting Servers

Authentication Server: ☐ Enable MAC authentication bypass(no redirection).

Accounting Server:

Wireless Client Isolation

☐ Isolate wireless client traffic from other clients on the same AP.

☐ Isolate wireless client traffic from all hosts on the same VLAN/subnet. (Requires whitelist for gateway and other allowed hosts.)

Location Information

☐ Walled Garden

☐ Restricted Subnet Access

☐ Advanced Options

To configure WLAN:

1. Go to **Configuration > AP Zone > Zone Name > WLAN > Create New**.
2. Enter the Name, SSID, Authentication type as "Hotspot (WIPSR)", Authentication method as "Open" and Encryption as "None".
3. Select Hotspot services as "Guest PS" from drop down list.

Figure 433: ZoneDirector WLAN

WLANs

This table lists your current WLANs and provides basic details about them. Click [Create New](#) to add another WLAN, or click [Edit](#) to make changes to an existing WLAN.

| Name | ESSID | Description | Authentication | Encryption | Actions |
|---|------------------|-------------|----------------|-------------------|--|
| <input type="checkbox"/> NCSA | NCSA | | Open | WEP-128 (104 bit) | Edit Clone |
| <input type="checkbox"/> Ruckus-Guest | Ruckus-Guest | | Open | None | Edit Clone |
| <input type="checkbox"/> Ruckus-Guest-Len | Ruckus-Guest-Len | | Open | None | Edit Clone |
| <input type="checkbox"/> Ruckus-Test | Ruckus-Test | | 802.1x EAP | WPA2 | Edit Clone |
| <input type="checkbox"/> VIP | VIP | | Open | WPA2 | Edit Clone |

Create New

General Options

Name/ESSID* ESSID

Description

WLAN Usages

Type

- ☐ Standard Usage (For most regular wireless network usages.)
- ☐ Guest Access (lowest access policies and access control will be applied.)
- ☒ Hotspot Service (WISPr)
- ☐ Hotspot 2.0
- ☐ Autonomous

Authentication Options

Method ☒ Open ☐ 802.1x EAP ☐ MAC Address ☐ 802.1x EAP + MAC Address

Fast BSS Transition ☐ Enable 802.11r FT Roaming (Recommended to enable 802.11k Neighbor-list Report for assistant.)

Encryption Options

Method ☐ WPA2 ☐ WPA-Mixed ☐ WEP-64 (40 bit) ☐ WEP-128 (104 bit) ☒ None

Options

Hotspot Services

Priority ☒ High ☐ Low

[Advanced Options](#)

[Create New](#) [Delete](#) [1-5 \(5\)](#)

1. Click **OK** to save changes to the settings.

Verifying Device Certificates


Ruckus device certificate validation enhances the security between PPS and the Ruckus device for guest access. It allows PPS to verify whether the server certificate is from a trusted source. This topic describes how to configure the PPS for validating device certificates, create certificates on Ruckus, and check the validity of the certificate.

Step1: Creating a Server Certificate

To create a CSR:

1. From Certificate Server generate a Server Certificate with private key and import the certificate on Ruckus SmartZone.
2. To import the certificate on Ruckus, select **Configuration > System > Certificate Store > Import**.

Figure 434: Creating Server Certificate

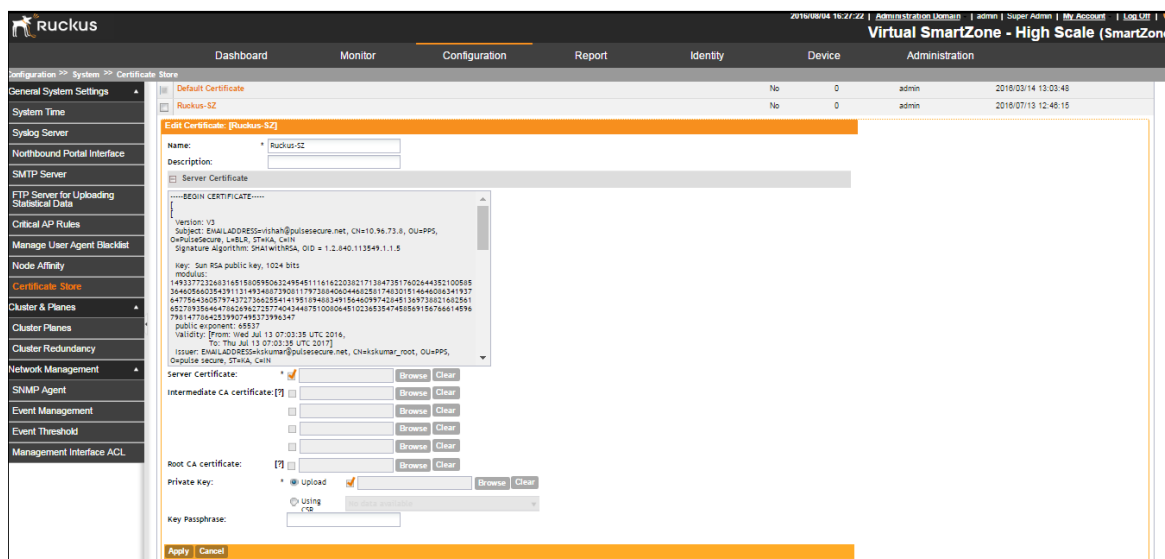

Step2: Importing the Certificate on PPS

To import the certificate on PPS:

1. Obtain the root CA from the certificate server for the generated certificate.
2. Select **System > Configuration > Certificates > Trusted Server CAs > Import Trusted Server CA** and import the certificate.

Step3: Adding Ruckus Wireless device as RADIUS Client

To add Ruckus wireless device to PPS:

1. Select **Endpoint policy > Network Access > RADIUS Client > New RADIUS Client**.
2. Select **Ruckus Wireless** as a Radius client and enable **Ruckus Server Certificate Validation**.
3. (Optional) From client machine, perform a guest authentication, if the guest user is able to authenticate then the certificate is valid. Otherwise it is an invalid certificate or certificate is not available.
4. (Optional) Verify the event logs to check if there are any certificate invalid logs.

Enterprise Onboarding

This chapter covers the following topics:

- [Overview](#)
- [Deployments](#)
- [Configuring Enterprise Onboarding](#)
- [Troubleshooting](#)

Overview

PPS Enterprise Onboarding feature automatically configures and provisions mobile and personal devices running on platforms such as Windows, MAC OSX, Android, and iOS. It enables them to securely connect to the enterprise network in support for Bring Your Own Device (BYOD) initiatives.

The onboarding provides a way to configure Wireless, VPN, and device certificate profiles on a device. Using these profiles the users can securely connect to enterprise network and access enterprise resources. The profiles can be configured on a single PPS server dedicated to onboarding or on each server.

The supported profiles depend on the device type and whether the Pulse Secure client is installed. For enterprise onboarding a separate license called “*Advanced Mobile Licenses – Onboarding*” is required.

NOTE:

- Android platform supports all profiles. However, Pulse Secure application must be installed during onboarding.
- iOS platform supports all profiles through Safari browser.
- Windows platform supports Wi-Fi and certificate profiles (IE, Firefox, or Chrome browser). The Pulse Secure client onboarding application must be installed during onboarding. Windows 8 RT and Windows 8 Phone are not supported.
- MAC OSx platform supports Wi-Fi and certificate profiles (Safari browser).


You can see more information on the supported platforms in the Supported Platform document.

You can also define the profiles on an external MDM server. If an external MDM server is used, the user will see a link and instructions on the onboarding page to continue onboarding. Onboarding is initiated from the browser.

Deployments

Enterprise Onboarding allows users to securely access enterprise network resources with any device. Wi-Fi, VPN and certificate profiles can be defined and downloaded to a device during onboarding, depending on the device type. The deployment diagram illustrates how a BYOD user can get onboarded through PPS to connect to enterprise network and access enterprise resources.

Figure 435: Enterprise Onboarding

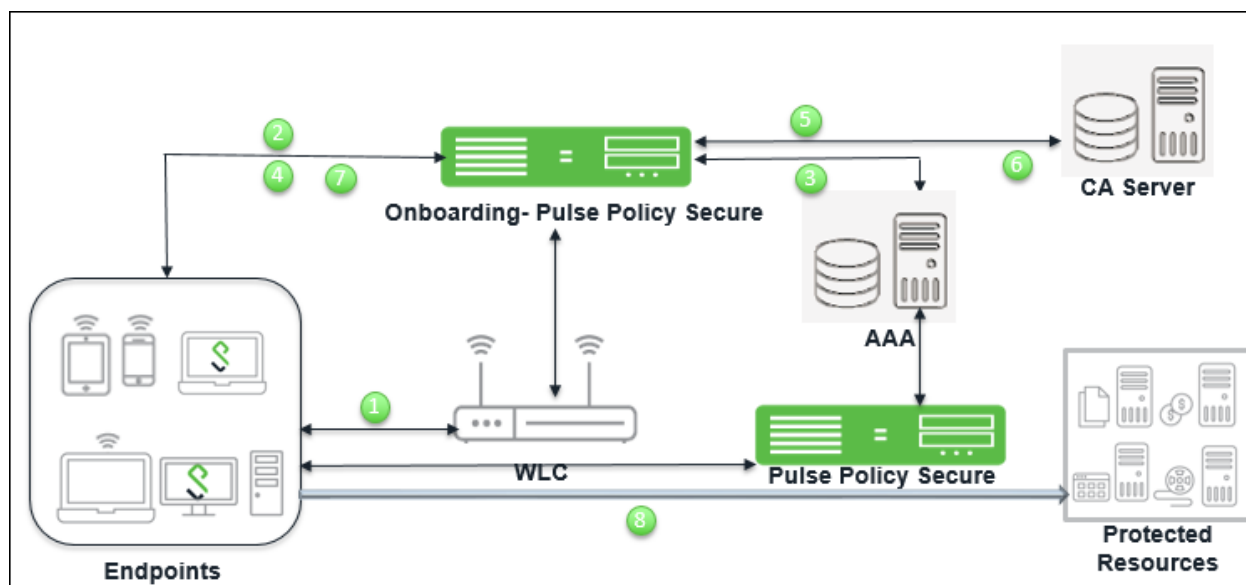

The workflow for enterprise onboarding is described below:

15. User tries to connect to enterprise network using the BYOD.
16. WLC is configured with Captive portal, which redirects the user to PPS login page where the devices can be onboarded.
17. User is authenticated through AAA framework.
18. User is provided with an onboarding link.
19. To generate and provision device certificate, PPS submits CSR to CA server.
20. CA server signs the CSR and sends the certificate to PPS.
21. PPS pushes the configured profiles to devices.
22. User logs in and access the network.

Configuring Enterprise Onboarding

This section covers the configuration for enterprise onboarding. It involves configuring the profiles, SCEP server and CSR templates.

The Administrator can perform the following configurations for enterprise onboarding:

- [Configuring Enterprise Onboarding for a User Role](#)
- [Configuring the SCEP Server](#)
- [Configuring CSR Templates](#)
- [Configuring VPN Profiles](#)
- [Configuring Wi-Fi Profiles](#)
- [Configuring Certificate Profiles](#)
- [Troubleshooting](#)

Configuring Enterprise Onboarding for a User Role

Enterprise onboarding is enabled in the user role, and each profile can be applied to all user roles or specific roles. The SCEP server and CSR templates allow certificates to be generated dynamically for device and server authentication.

To enable enterprise onboarding for a user role:

1. In the admin console, choose Users > User Roles > *RoleName* > General > Overview.
2. In the Enterprise Device Onboarding section, select the Enterprise Onboarding check box.
3. Click Save Changes.
4. Click the Enterprise Onboarding tab or click Options next to the Enterprise Onboarding check box to specify the following:
 - Auto launch – Displays the onboarding page when the user logs in to PPS if enterprise onboarding is enabled for the user's role (the default). If this option is disabled, an onboarding link is displayed on the home page.
 - Install Pulse Secure client – Select this option to automatically install Pulse Secure Client during windows onboarding.
 - Use third party MDM for onboarding – Displays a link on the onboarding or home page where the user can download profiles from an MDM server. Enter the URL for the MDM page in the text box.

The screenshot shows the Pulse Secure administration interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users' (highlighted), 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'User Roles > Users > Enterprise Onboarding > Options'. The 'Options' section has four tabs: 'General', 'Enterprise Onboarding' (active), 'Agent', and 'Agentless'. Under the 'Enterprise Onboarding' tab, there are three configuration options, each with a checkbox and a description:

- ☒ Auto launch: Use this to automatically push Enterprise Onboarding profile configurations to the device when user logs in.
- ☒ Install Pulse Secure client: Use this to automatically install Pulse Secure client during onboarding from Windows OS. With this option enabled, you must also enable "Pulse Secure client" option [here](#) for the changes to take effect.
- ☐ Use third party MDM for Onboarding: Below this checkbox is a text box labeled 'Redirect to MDM URL' and a 'Save Changes' button.

5. Click Save Changes.

Configuring the SCEP Server

The Simple Certificate Enrollment Protocol (SCEP) server configuration and CSR templates allows each client device to dynamically obtain certificates for authentication. The SCEP server and CSR templates allow certificates to be generated dynamically for device and server authentication.

To define the SCEP server:

1. Select Users > Enterprise Onboarding.
2. Click SCEP Configuration.

Pulse Secure Pulse Policy Secure

System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

Enterprise Onboarding > SCEP Configuration

SCEP Configuration

SCEP Configuration | CSR Templates | VPN Profiles | WiFi Profiles | Certificate Profiles

* SCEP Server URL: Example: http://<SCEP Server>/certsrv/mscep/mscep.dll for Microsoft Network Device Enrollment Service(NDES)

Challenge: Shared secret for automatic enrollment

Retries: Number of retries when connection fails (0 - 10)

Retry Delay: Duration in seconds between successive retries (0 - 10)

Upload Encryption Certificate: No file chosen Used to encrypt the requests to SCEP Server

Manually upload the encryption certificate or run Test Configuration below with Test Enrollment to upload it automatically.

Current Certificate: Issued To: Issued By: Valid: Details: [Other Certificate Details](#)

☒ Test Connectivity ☐ Test Enrollment

3. Complete the configuration as described below.

| Setting | Description |
|-------------------------------|---|
| SCEP Server URL | Enter the URL for a SCEP server. The following SCEP servers are supported: <ul style="list-style-type: none"> • Microsoft AD 2008 • Symantec mPKI |
| Challenge | Specify the password required by the SCEP server. |
| Retries | Specify the number of attempts to access the server when the first attempt fails. |
| Retry Delay | Specify the number of seconds between retry attempts. |
| Upload Encryption Certificate | Click Browse to upload the certificate used to encrypt SCEP requests. To upload the certificate automatically, select the Test Enrollment check box, select a CSR template, and click Test Configuration. |

4. Click Save Changes.

Configuring CSR Templates

If the SCEP server is configured, the Certificate Signing Request (CSR) templates can be used in the VPN, Wi-Fi, and certificate profiles to allow each onboarded device to dynamically obtain certificates for authentication on iOS devices. Up to 10 templates can be defined.



NOTE: All LDAP attributes (such as <ldap.userAttrName>) and variables (such as <user>) can be used in the Subject DN, Email, and Subject Alternative Name Value fields. However, if you enter an LDAP variable with a string vector data type in the Subject Alternative Name Value field, only the first value in the string will be used.

To configure CSR templates:

1. In the admin console, choose Users > Enterprise Onboarding > CSR Templates.
2. To add a template, click New CSR Template or select an existing template that you want to change, duplicate, or delete. Clicking Duplicate creates a copy of the selected template with Copy of before the template name.

The screenshot shows the Pulse Secure admin console interface. The breadcrumb trail is 'Enterprise Onboarding > CSR Templates > New Certificate Signing Request Template'. The form title is 'New Certificate Signing Request Template'. The form contains the following fields:

- Name:** A text input field with a label 'Label to reference this CSR Template'.
- Subject DN:** A text input field with an example 'Example: CN=<USERNAME>,OU=Employees,O=Company'.
- Email:** A text input field.
- Subject Alternative Name Type:** A dropdown menu currently set to 'None'.
- Subject Alternative Name Value:** A text input field.
- Key Size:** A dropdown menu currently set to '2048-bit'. A note below it says 'Ensure that the selected Key Size is enabled on the SCEP Server. An invalid Key Size will cause a certificate request failure.'

A blue 'Save Changes' button is located at the bottom left of the form. A small note at the bottom left of the form area states '* indicates required field'.

3. Specify the following information:

| Setting | Description |
|--------------------------------|---|
| Name | Specify the template name displayed in the list of CSR templates. |
| Subject DN | Specify the subject distinguished name. For example: CN=<USERNAME>,OU=Engineering,O=Comp All LDAP attributes (such as <ldap.userAttrName>) and variables (such as <user>) can be used. |
| Email | (Optional) Specify an email address with the <USER> variable, such as <USER>@sample.net. |
| Subject Alternative Name Type | Select an alternative name type if the CA requires an alternative subject name. The types include RFC-822 Name (an e-mail address), DNS domain name, URI, and IP address. |
| Subject Alternative Name Value | Specify one or more values for the selected alternative name type. Multiple values must be separated by a comma or space. NOTE: If an LDAP variable is specified that has a string vector data type, only the first value in the string will be used. |
| Key Size | Select the key size used by the SCEP server. |

4. Click Save Changes.

Configuring VPN Profiles

VPN profiles provide Android and iOS devices with secure access to enterprise networks. One or more VPN profiles can be assigned to specific user roles or to all roles. Up to 10 profiles can be defined.



NOTE: All LDAP attributes (such as <ldap.userAttrName>) and variables (such as <user>) can be used in the Username, Realm, and Role fields.

To define VPN profiles:

1. In the admin console, choose Users > Enterprise Onboarding > VPN Profiles.
2. To add a profile, click New Profile or select an existing profile that you want to change, duplicate, or delete. Clicking Duplicate creates a copy of the selected profile with Copy of before the profile name.

The first profile that matches a user's role and client type becomes the default VPN profile on the client. Use the arrow keys to move a profile up or down the list.

3. Specify the following profile information:

| Setting | Description |
|-----------------------|---|
| Name | Specify the name to be displayed in the list of VPN profiles. |
| Description | (Optional) Enter a description of the VPN profile. |
| Apply to Client Types | Select the device types the profile applies to (Android and iOS only). |
| Server URL | Specify the URL of the VPN server (must be a PPS device). |
| Realm | Specify the realm name. The realm is required only if the sign-in URL has the User picks from a list of authentication realms option enabled. |

| Setting | Description |
|-----------------------|---|
| Role | Specify the user role. The user role is required if the role mapping rules for the user realm specify multiple roles and the User must select from among assigned roles option is enabled. |
| Username | Specify the <USER> variable for the user name. |
| Authentication Method | <p>Select Password or Certificate for the user authentication method. For certificate authentication, specify the following:</p> <ul style="list-style-type: none"> Use CSR Template—Select the CSR template used to obtain the certificate. To create a CSR template, see “Defining CSR Templates”. Enable VPN On Demand—Select this option to allow iOS devices to establish the VPN when a specific host or domain is accessed. To specify the first host or domain: <ul style="list-style-type: none"> Match Domain or Host—Enter a hostname or a partial domain name. For example, if you enter example.com, a match occurs when the user accesses any domain that ends with example.com, such as www.test-example.com. On Demand Action—When a match occurs on the specified host or domain, select whether a VPN is always established, never established, or only if the DNS look-up fails (Establish If Needed). Selecting Never Establish does not prevent an existing VPN from being used. <p>To add another domain, click the + button. To remove a domain, select the check box next to the domain and click the - button. Up to 10 domains can be defined.</p> |
| Roles | <p>Select one of the following options:</p> <ul style="list-style-type: none"> Policy applies to ALL roles—To apply this profile to all users. Policy applies to SELECTED roles—To apply this profile only to users who are mapped to roles in the Selected roles list. Make sure to add roles to this list from the Available roles list. Policy applies to all roles OTHER THAN those selected below—To apply this profile to all users except for those who map to the roles in the Selected roles list. Make sure to add roles to this list from the Available roles list. |

4. Click Save Changes.

Configuring Wi-Fi Profiles

Wi-Fi profiles provide Android, iOS, MAC OS X, and Windows devices with secure access to wireless networks. One or more Wi-Fi profiles can be assigned to specific user roles or to all roles. Up to 10 profiles can be defined.



NOTE: All LDAP attributes (such as <ldap.userAttrName>) and variables (such as <user>) can be used in the Username and Password fields for the WPA Enterprise and WPA2 Enterprise security types.

To define Wi-Fi profiles:

1. In the admin console, choose Users > Enterprise Onboarding > WiFi Profiles.
2. To add a profile, click New Profile or select an existing profile that you want to change, duplicate, or delete. Clicking Duplicate creates a copy of the selected profile with Copy of before the profile name.

Pulse Secure System Authentication Administrators **Users** Endpoint Policy Maintenance Wizards

Enterprise Onboarding > Wifi Profiles > New Wifi Profile

New Wifi Profile

* Name: Label to reference this profile.

Description:

Apply to Client Types: ☒ iOS ☒ Android ☒ Mac OS X ☒ Windows

* SSID: SSID of the Wifi Network.

Non-Broadcast SSID: ☐

Auto Connect: ☐ Not applicable for Android clients.

Security Type:

Roles

Enterprise Onboarding in the Role must be enabled in order for this policy to take effect.

☒ Policy applies to ALL roles

☐ Policy applies to SELECTED roles

☐ Policy applies to all roles OTHER THAN those selected below

Available roles:

Add -> Remove

Selected roles:

*Indicates required field

3. Specify the following profile information:

| Setting | Description |
|-----------------------|---|
| Name | Specify the name to be displayed in the list of Wi-Fi profiles. |
| Description | (Optional) Enter a description of the profile. |
| Apply to Client Types | Select the device types the profile applies to (Android, iOS, MAC OS X, and Windows). |
| SSID | Specify the server set ID of the wireless network. |
| Non-Broadcast SSID | Select the check box if the wireless network does not broadcast its identity. |
| Auto Connect | Select the check box to connect the client automatically when the network is detected (not supported by Android clients). |

| Setting | Description |
|---------------|--|
| Security Type | <p>Select the type of authentication used by the network, and specify the password or enterprise settings, as required:</p> <ul style="list-style-type: none"> • None—No authentication required. • WEP—Wired Equivalent Privacy used for a non-enterprise network. Enter the network shared key in the displayed text box. • WPA Personal or WPA2 Personal—Wi-Fi Protected Access used for a non-enterprise network. You can select the encryption method (AES or TKIP) and enter the network shared key in the displayed text box (applies to Windows clients only). • WPA Enterprise or WPA2 Enterprise—Wi-Fi Protected Access used for an enterprise network. Select the Extensible Authentication Protocols (EAP) supported by the network's RADIUS authentication server. <p>For Android devices, note the following:</p> <ul style="list-style-type: none"> • Android 4.3 or later is required • For the EAP-TLS protocol, the CA certificate must be configured (along with the client certificate) on Samsung devices for authentication. • An 802.1x RADIUS server certificate must be signed by a private root CA. Authentication fails if the certificate is signed by an intermediate root CA. |
| EAP | <p>For the WPA Enterprise and WPA2 Enterprise security types, select the supported EAP protocols and specify the associated authentication settings:</p> <ul style="list-style-type: none"> • None—If none of the EAP protocols is selected (Android devices only), enter the <USER> and <PASSWORD> variables in the Username and Password fields. <p>NOTE: iOS, MAC OS X, and Windows clients require at least one of the EAP types to be selected (PEAP, EAP-TLS, or EAP-TTLS).</p> |
| PEAP | <p>The PEAP protocol is supported by all clients. Specify the following:</p> <ul style="list-style-type: none"> • Inner Authentication Method—Select the protocol used to authenticate the username and password (None or MSCHAPv2). The None option is valid only for Android devices. • Username and Password—Enter the <USER> and <PASSWORD> variables. • Outer Identity—Specify an alternate username to be used outside the encrypted tunnel, such as anonymous, to conceal the user's identity in unencrypted packets. • Trusted Server Name(s)—Specify the IP address or fully qualified domain name of one or more trusted RADIUS servers used by the network. Multiple servers must be separated by a semicolon. • Trusted CA Certificate—For Windows clients, select the Trusted Root CA of the RADIUS server certificate, even if the device certificate is signed by an intermediate CA. The Trusted Root CA must be configured in a certificate profile before it can be selected here (see "Defining Certificate Profiles"). <p>For iOS, MAC OS X, and Android clients, if the RADIUS server certificate is signed by an intermediate CA, create a certificate profile for the intermediate CA, and then select the certificate here. The certificate profile ensures that the intermediate CA is downloaded to the client.</p> |

| Setting | Description |
|----------|--|
| EAP-TLS | <p>The EAP-TLS protocol is supported by all clients. Specify the following:</p> <ul style="list-style-type: none"> Username—Enter the <USER> variable. Use CSR Template—Select the CSR template used to obtain the certificate. To create a CSR template, see “Defining CSR Templates”. Trusted Server Name(s)—Specify the IP address or fully qualified domain name of one or more trusted RADIUS servers used by the network. Multiple servers must be separated by a semicolon. Trusted CA Certificate—For Windows clients, select the Trusted Root CA of the RADIUS server certificate, even if the device certificate is signed by an intermediate CA. The Trusted Root CA must be configured in a certificate profile before it can be selected here (see “Defining Certificate Profiles”). <p>NOTE: On Windows 7 clients that have multiple certificates, users are prompted to select the certificate for 802.1x connections that use EAP-TLS.</p> <p>For iOS, MAC OS X, and Android, if the RADIUS server certificate is signed by an intermediate CA, create a certificate profile for the intermediate CA, and then select the certificate here. The certificate profile ensures that the intermediate CA is downloaded to the client.</p> |
| EAP-TTLS | <p>The TTLS protocol is supported by all clients. Specify the following:</p> <ul style="list-style-type: none"> Inner Authentication Method—Select the protocol used to authenticate the username and password (None, PAP, or MSCHAPv2). The None option is valid only for Android devices. Username and Password—Enter the <USER> and <PASSWORD> variables. Outer Identity—Specify an alternate username to be used outside the encrypted tunnel, such as anonymous, to conceal the user’s identity in unencrypted packets. Trusted Server Name(s)—Specify the IP address or fully qualified domain name of one or more trusted RADIUS servers used by the network. Multiple servers must be separated by a semicolon. Trusted CA Certificate—For Windows clients, select the Trusted Root CA of the RADIUS server certificate, even if the device certificate is signed by an intermediate CA. The Trusted Root CA must be configured in a certificate profile before it can be selected here (see “Defining Certificate Profiles”). Also, if the RADIUS server certificate is signed by an intermediate CA, then the public intermediate CA must be configured in a certificate profile to ensure that the intermediate CA is downloaded to the client along with the Wi-Fi TTLS profile configuration. <p>For iOS, MAC OS X, and Android clients, if the RADIUS server certificate is signed by an intermediate CA, create a certificate profile for the intermediate CA, and then select the certificate here. The certificate profile ensures that the intermediate CA is downloaded to the client.</p> |
| Roles | <p>Select one of the following options:</p> <ul style="list-style-type: none"> Policy applies to ALL roles—To apply this profile to all users. Policy applies to SELECTED roles—To apply this profile only to users who are mapped to roles in the Selected roles list. Make sure to add roles to this list from the Available roles list. Policy applies to all roles OTHER THAN those selected below—To apply this profile to all users except for those who map to the roles in the Selected roles list. Make sure to add roles to this list from the Available roles list. |

4. Click Save Changes.

Configuring Certificate Profiles

Certificate profiles specify the device certificates sent to each client device during onboarding. Up to 10 profiles can be defined.



NOTE: For security reasons, certificate profiles cannot be included in the XML export or import.

To define certificate profiles:

1. In the admin console, choose Users > Enterprise Onboarding > Certificate Profiles.
2. To add a profile, click New Profile or select an existing profile that you want to change, duplicate, or delete. Clicking Duplicate creates a copy of the selected profile with Copy of before the profile name.

The screenshot shows the 'New Certificate Profile' page in the Pulse Secure admin console. The page has a dark header with the Pulse Secure logo and navigation tabs: System, Authentication, Administrators, Users (selected), Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail is 'Enterprise Onboarding > Certificate Profiles > New Certificate Profile'. The main content area is titled 'New Certificate Profile' and contains the following sections:

- Name:** A text input field.
- Description:** A larger text input field.
- Apply to Client Types:** Four checkboxes: ☒ iOS, ☒ Android, ☒ Mac OS X, and ☒ Windows.
- Import and Use Global Certificate:** ☐
- Import and Use CA Certificate:** ☐
- Generate per User Certificate:** ☐
- Roles:** A section with a green arrow icon. It contains a note: 'Enterprise Onboarding in the Role must be enabled in order for this policy to take effect.' Below this are three radio buttons:
 - ☒ Policy applies to ALL roles
 - ☐ Policy applies to SELECTED roles
 - ☐ Policy applies to all roles OTHER THAN those selected below
- Available roles:** A list box containing 'Guest', 'Guest Admin', and 'Users'. There are 'Add ->' and 'Remove' buttons between the available and selected roles lists.
- Selected roles:** A list box currently showing '(none)'.
- Save Changes:** A blue button at the bottom left.

3. Specify the following information:

| Setting | Description |
|-----------------------------------|--|
| Client Types | Select the device types the profile applies to (Android, iOS, MAC OS X, and Windows). |
| Import and Use Global Certificate | Select this option to use the PPS global certificate to authenticate the client device. Click Import Certificate & Key, click Browse to locate the certificate file, and then click Import. For more information about device certificates, see Using Device Certificates . |
| Import and Use CA Certificate | Select this option to import any CA certificate (public Root CA, private Root, public intermediate CA, or private intermediate CA). These CA's can be used in Wi-Fi profiles and must be downloaded to the client devices. Click Import and Use CA Certificate, click Browse to locate the certificate, and then click Import CA Certificate. |
| Generate per User Certificate | Select this option to use the SCEP server and a CSR template to generate a certificate for each client. Select a CSR template from the Use Certificate Template list. To create a CSR template, see Defining CSR Templates . |

| Setting | Description |
|---------|---|
| Roles | <p>Select one of the following options:</p> <ul style="list-style-type: none">• Policy applies to ALL roles—To apply this profile to all users.• Policy applies to SELECTED roles—To apply this profile only to users who are mapped to roles in the Selected roles list. Make sure to add roles to this list from the Available roles list.• Policy applies to all roles OTHER THAN those selected below—To apply this profile to all users except for those who map to the roles in the Selected roles list. Make sure to add roles to this list from the Available roles list. |


4. Click Save Changes.

Example: Onboarding Android Devices

To onboard an Android device:


1. Enter the onboarding URL in the browser.

Figure436: Onboarding Start Page

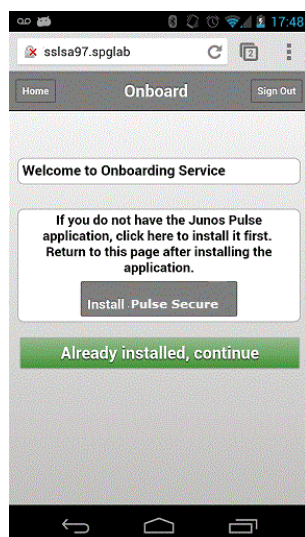


2. The End User License Agreement Page (EULA) is displayed.

Figure437: End User License Agreement

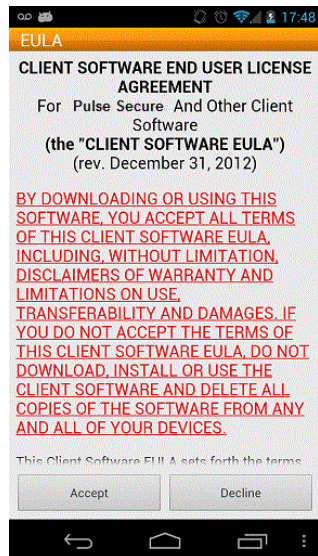

3. On the Pulse Secure client onboarding Wizard page, read the instructions carefully and tap Next.

Figure438: Onboarding Wizard Start Page

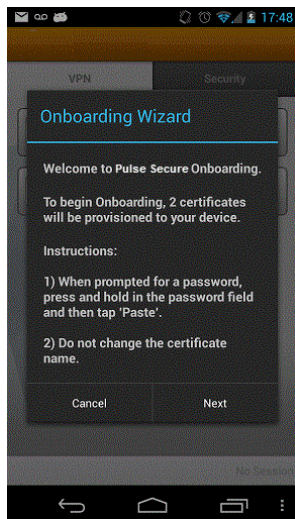

4. On the CA certificate provisioning page, tap OK.
5. Paste the password from the clipboard to extract the certificates, and tap OK.

Figure439: Certificate Provisioning Page


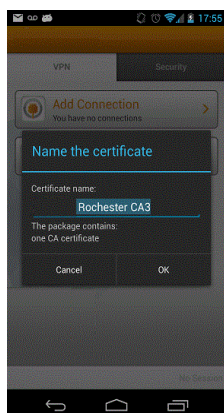


Figure440: Certificate Password Page




6. Tap OK to confirm the certificate name.

Figure441: Certificate Name Page

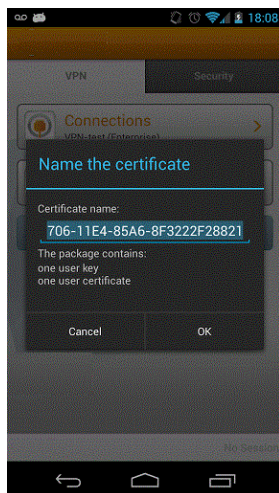

7. View the number of certificates and profiles provisioned on the client, and tap Finish.

Figure442: Onboarding Wizard Summary Page

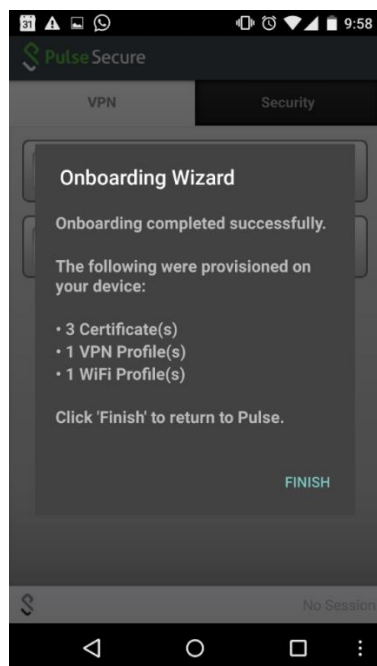

8. If onboarding fails due to an error, tap Retry. Users should contact their administrator if onboarding fails after three attempts.
9. If onboarding is successful, tap the VPN tab to view the provisioned VPN connections.
10. Tap the Wi-Fi icon to view the provisioned Wi-Fi networks. To enable a Wi-Fi connection, select the network and tap the Connect icon.

Viewing Onboarded Devices

The Device Management page lists the following types of devices:

- Onboarded devices— Devices that have Enterprise Onboarding enabled in the user's role and have been onboarded during device registration. After a device is onboarded, it is displayed on the Device Management page until it is deleted.

The username, user roles, operating system, and registration date are shown for each device, along with the onboarded, and access status. Devices that become inactive or invalid must be deleted manually.

To view the Device Management page:

1. Select System > Status > Devices.
2. Use the controls described in table below to view and manage the devices.

Table69: Device Management Page

| Buttons | Administrative Actions |
|---|--|
| Update | <ul style="list-style-type: none"> • To refresh the page, click Update. • To view a specific user, enter the username in the Show Users Named box and click Update. If you do not know the exact username, use an asterisk (*) as a wildcard character. • To change the number of displayed devices, enter a number in the Show N devices box and click Update. |
| <p>TIP: To change the sort, click a column header.</p> | |

| Buttons | Administrative Actions |
|------------|--|
| Delete | To delete one or more devices, select the check box next to the appropriate devices and click Delete. If an onboarded device is deleted in error, the user must re-onboard the device. ActiveSync-only devices that are deleted in error are added automatically by the next ActiveSync. |
| Delete All | To delete the all devices, click Delete All. |

Troubleshooting

You can use the following message IDs in the user access log for troubleshooting:

- AUT31186—Indicates the status of an onboarding attempt (failed or successful)
- AUT31152—Indicates onboarding failed because the maximum device limit of 10000 has been reached
- AUT31187—Indicates the attempt to build a configuration profile failed due to an error
- AUT31188—Indicates a configuration profile was generated successfully, and lists the names of the profiles contained in the configuration profile

The following message IDs are related to device limits:

- SYS31177—Indicates the number of devices onboarded is nearing the system limit of 10000.
- SYS31178—Indicates the number of devices onboarded has exceeded the system limit of 10000 (critical error).
- SYS31193—Information message generated by a background process that attempts to delete device records when 95% of system limit (10000) is reached. It displays the number of device records deleted, the current number of onboarded devices, and the system limit.

NOTE:

- If profile generation in the server is successful, but it fails in the client while installing, then the client logs should be analysed for the failure.

Clustering

This chapter provides an overview of the clustering. It includes the following information:

- [Overview](#)
- [Deployments](#)
- [Cluster](#)
- [Monitoring and Troubleshooting](#)
- [Appendix](#)

Overview

A PPS cluster is a group of PPS devices that act like a single PPS device, which enables high availability, load balancing and parallel processing. A PPS cluster pair is used to refer to a cluster of two PPS devices and a multiunit PPS cluster refers to a cluster of more than two PPS devices.

Clustering provides the following benefits:

- **Load balancing-** It refers to efficiently distributing the incoming request across a group of PPS devices. It optimizes resource usage, maximizes throughput, minimizes response time, and avoids overload of any single device.
- **High Availability (HA)-** It provides increased availability and enables uninterrupted access to data even if one of the devices fails.

Deployments

PPS supports two types of cluster deployments:

- Deployment of Active/Active Cluster
- Deployment of Active/Passive Cluster

Deployment of Active/Active Cluster

An Active/Active deployment provides load balancing and high availability. PPS relies on an external load balancer for distributing the load among PPS nodes. Active/Active cluster configuration allows increased aggregate system throughput; however, it does not provide increased scalability beyond the total licensed users. It also provides seamless failover, which is achieved by state synchronization between the devices.


If a node goes offline, the load balancer adjusts the load on the active nodes. Users do not need to sign in again, however some session information entered a few seconds before the active machine went offline, such as cookies and passwords, may not have been synchronized on the current device, in which case users may need to sign in again.



NOTE:

- WAN clustering is not supported.
- You can deploy up to 8 nodes for PSA-7000. All other platform models support 2 node clusters only. The system (UI) allows adding up to 8 nodes. However, only up to 4 nodes in a cluster have been officially qualified.

Figure443: Active/Active Cluster

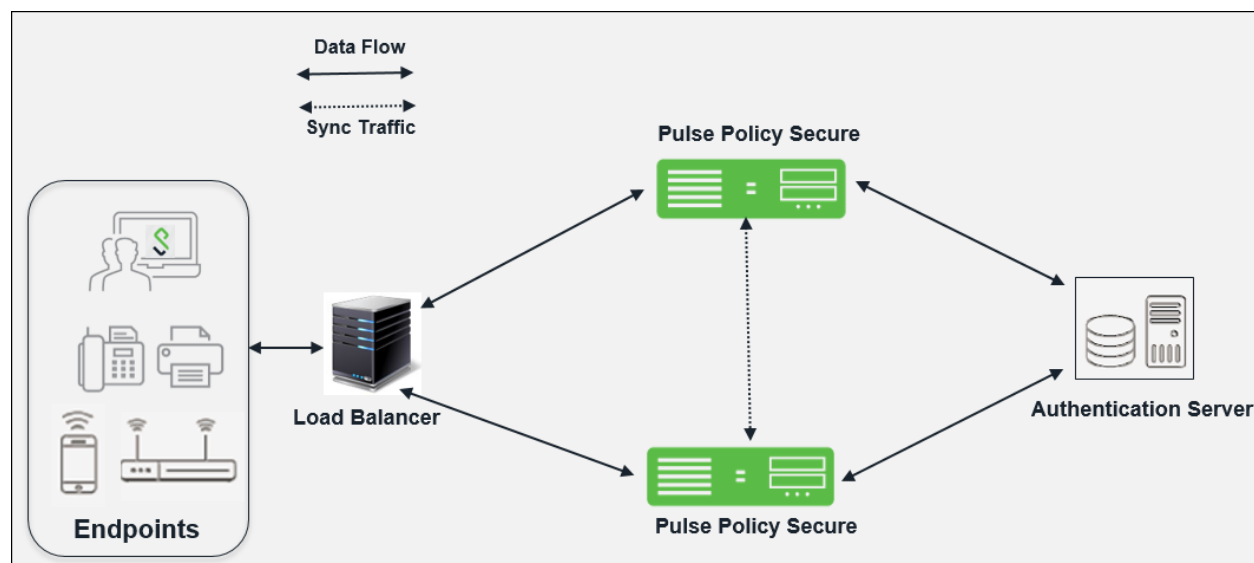


Deployment of Active/Passive Cluster

An active/passive cluster configuration provides high availability. Active/Passive deployment allows seamless failover without the need to set up any external equipment. The states are synchronized between the two devices for all the configurations so that the devices are virtually identical.

Active/Passive clustering is supported only if the members of the cluster pair are in the same subnet because the VIP address must be shared by both the members. PPS uses a virtual IP (VIP) address to address the cluster pair in addition to addressing each device. The IP address takeover (IPAT) approach is used for the VIP address. If the active node fails, the passive node takes over the VIP address and sends a gratuitous Address Resolution Protocol (ARP) message notifying other networking devices that it now owns the VIP address. You should check that other devices in your network, especially the next-hop gateways, will consider the gratuitous ARP messages.

i **NOTE:** The Active/Passive cluster supports only 2 node clusters in all types of platforms except VA.

Figure444: Active/Passive Cluster

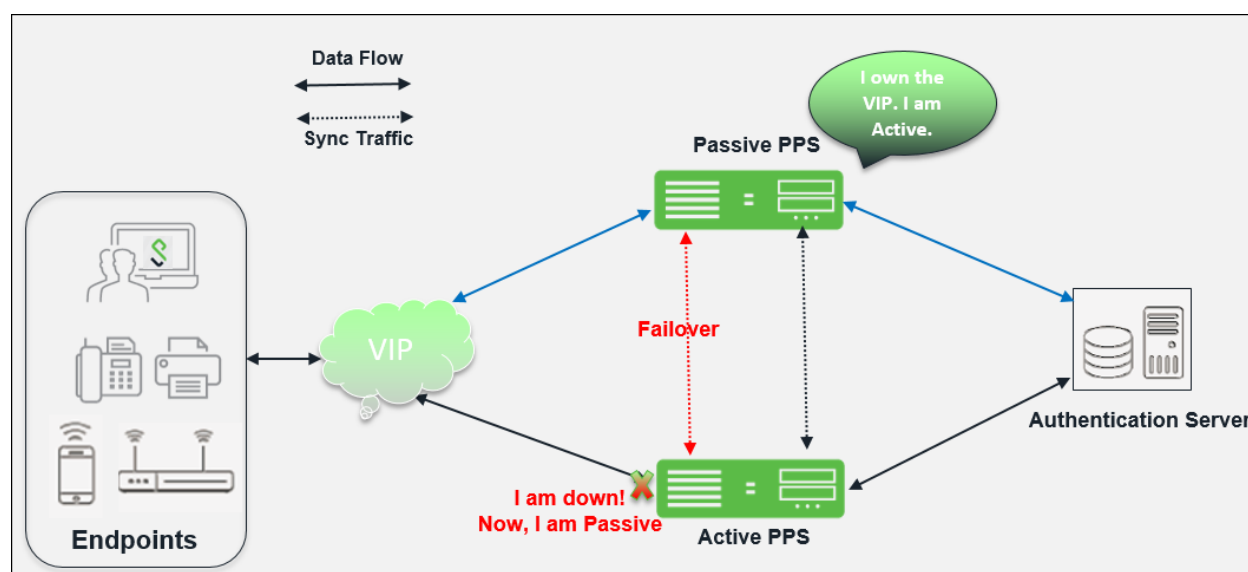

Deployment Requirements and Limitations

The following are the requirements and limitations for clustering:

- Cluster members must run the same software version.
- Cluster members must use the same hardware platform.
- State synchronization must occur only through the internal Network Interface Card (NIC). Ensure the cluster communication and resource access must take place over an internal network.
- You can deploy active/active or active/passive clustering only within the same IP subnet.

i **NOTE:** We recommend you to use Pulse One instead of cluster to sync only the configuration across devices.

Cluster Configuration

This section lists the following topics:

- [Admin UI Configuration](#)
- [Serial Console Configuration](#)

Admin UI Configuration

This section describes the configuration performed through Admin UI:

- [Creating a Cluster](#)
- [Adding Cluster Members](#)
- [Joining Existing Cluster](#)
- [Deleting a Cluster](#)
- [Verifying the Cluster Status](#)

Creating a Cluster

To create a cluster:

1. Select System > Clustering > Create Cluster.

Figure445: Creating Cluster

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Clustering > Create New Cluster

Create New Cluster

Join Create

Type:

Cluster Name: Name of the cluster to create. Must be alphanumeric, "-", or "_", must start with a letter and have a maximum of 19 characters.

Cluster Password: Shared secret among the nodes in the cluster. Must be at least 6 characters long

Confirm Password: Shared secret among the nodes in the cluster. Must match the password you typed in the previous line

Member Name: Name of this node in the cluster. Must be alphanumeric, "-", or "_", must start with a letter and have a maximum of 19 characters.

Create Cluster

Table70: Creating Cluster

| Settings | Actions |
|------------------|--|
| Cluster Name | Specifies a name to identify the cluster. |
| Cluster Password | Specifies the cluster password. You need to enter the password again when specifying additional nodes to join the cluster. All nodes in the cluster use this password to communicate. |
| Confirm Password | Specifies the password that is confirmed. |

| Settings | Actions |
|-------------|---|
| Member Name | Specifies the name of this node in the cluster. |

- Click Create Cluster. When prompted to confirm the cluster creation, click Create. After the device initializes the cluster, the Clustering page displays the Status and Properties tabs.

Configuring as Active/Active or Active/Passive Cluster

Once the cluster is created, you can modify the cluster properties to configure the cluster as an Active/Active cluster or Active/Passive cluster.

To deploy Active/Active or Active/Passive cluster:

- Click Properties of the cluster.

Figure 446: Cluster Properties Page

Pulse Secure Pulse Policy Secure on node1

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Clustering > Cluster Properties

Cluster Properties

Status Properties

Type:

Cluster Name: test123

Cluster Password: *****

Confirm Password: *****

▼ Configuration Settings

☐ Active/Passive configuration
This is a high-availability failover mode, in which one node is active while the other is held as backup.

Internal VIP:

IPv4: IPv6:

External VIP:

IPv4: IPv6:

☒ Active/Active configuration

▼ Synchronization Settings

☐ Synchronize log messages

☒ Synchronize last access time for user sessions

▼ Network Healthcheck Settings

Number of ARP Ping failures before interface is disabled (should be greater than 0): 3

☐ Disable external interface when internal interface fails

▼ Advanced Settings

☐ Enable Advanced Settings

Save Changes Delete Cluster...

- Complete the configuration as described in [table](#). Active/Active configuration is selected by default.

Table71: Clustering Property Settings

| Settings | Actions |
|------------------------|-------------------------|
| Cluster Name | Identifies the cluster. |
| Configuration Settings | |

| Settings | Actions |
|---|--|
| Active/Passive configuration | Runs a cluster pair in active/passive mode. Then specify an internal VIP (virtual IP address) and an external VIP if the external port is enabled. |
| Active/Active configuration | <p>(Default) Runs a cluster pair in active/active mode. This configuration runs a cluster of two or more nodes in active/active mode using an external load balancer.</p> <p>NOTE: To change a two-unit active/passive cluster to an active/active cluster with more than two nodes, first change the configuration of the two-unit cluster to active/active and then add the additional nodes.</p> |
| Synchronization Settings | |
| Synchronize log messages | Propagates all log messages among the devices in the cluster. |
| Synchronize last access time for user sessions | Propagates the latest user access information across the cluster. |
| <p>NOTE:</p> <ul style="list-style-type: none"> If your cluster node configurations diverge because of changes made to one node while another is disabled or unavailable, the system manages the remerging of the configurations automatically for up to 16 updates. Beyond the maximum number of allowable updates, you might need to intervene and remerge the configurations manually. In some instances, the system might be unable to remerge the configurations if there is not enough overlapping configuration information between two nodes to manage the internode communication. <p>For example, for a two-node cluster in which the two nodes are partitioned from each other because of a network outage, if the internal network IP address of one of the nodes changes in one of the partitions, the two partitions are unable to rejoin, even when the network is repaired. In such a case, you must remerge the configurations manually.</p> <ul style="list-style-type: none"> If you configure your cluster as active/passive, synchronize last access time for user sessions option is automatically selected. | |
| Network Health Check Settings | |
| Number of ARP Ping Failures | Specifies the number of ARP ping failures allowed before the internal interface is disabled. |
| Disable external interface when internal interface fails | Disables the external interface of the device if the internal interface fails. |
| Advanced Settings | |
| | Specifies the timeouts for the underlying cluster system. Do not change any values under this setting unless instructed to do so by Pulse Secure Global Support Center (PSGSC). |

- Click Save Changes.
- Click **Add Members** to specify additional cluster nodes.

Adding a Load Balancer for Active/Active Cluster

In active/active mode, you have the option of using an external load balancer with a cluster. The load balancer hosts the cluster VIP and routes user requests to a node defined in its cluster group based on source-IP routing. If a node goes off line, the load balancer adjusts the load on the active nodes. Users do not need to sign in again.

The following are the recommendations while choosing and configuring a load balancer for your cluster:

- Listens for traffic on multiple ports
- Can be configured to manage traffic using assigned source and destination IP addresses (not destination port)

To add a load balancer using an active/active configuration:

1. Select System > Network > Load Balancer.

Figure447: Network Settings Page

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance', and 'Wizards'. The breadcrumb trail is 'Network > Load Balancer'. The page title is 'Load Balancer' with a sub-header 'Network Settings'. Below this is a tabbed interface with 'Overview', 'Internal Port', 'External Port', 'VLANs', 'Routes', 'Hosts', and 'Load Balancer' (which is active). A message states: 'Enter the load balancer settings and click the Save Changes button at the bottom of the page.' There are two main sections: 'Load Balancer IP Address' and 'Load Balancer Usage'. The first section has input fields for 'Internal IPv4 Address', 'External IPv4 Address', 'Internal IPv6 Address', and 'External IPv6 Address'. The second section has checkboxes for 'Between endpoints and the Pulse Policy Secure' and 'Between Infranet Enforcers and the Pulse Policy Secure (This option is not supported for IPv6 Addresses)'. A 'Save Changes' button is at the bottom.

2. Enter the IPv4/IPv6 address of the interface connected to the load balancer in the appropriate port window. Do not enter addresses in both fields unless the load balancer is connected to both interfaces.
3. Select the appropriate load balancer usage options.
 - Between endpoints and PPS
 - Between Infranet Enforcers and PPS
4. Click Save Changes.

Health Checking a Server from Load Balancer

The system hosts an HTML page that provides service status for each node in a cluster. External load balancers can check this resource to determine how to effectively distribute the load among all the cluster nodes.

To perform the Layer 7 health check for a node:

- Using a web browser browser, enter the URL: `https://<PPS Series device-Hostname>/dana-na/healthcheck/healthcheck.cgi?status=all`

This returns either HTTP Status 200 OK or 500 Internal Error. If this returns HTTP Status 200 OK, the following additional parameters are shown:

| Parameter Name | Value | Description |
|----------------|-------|-------------|
|----------------|-------|-------------|

| | | |
|----------------------------|---------|--|
| CPU-UTILIZATION | 0-100 | Specifies the CPU utilization percentage (0-100). |
| SWAP-UTILIZATION | integer | Specifies the swap utilization percentage of the device (0-100). |
| DISK-UTILIZATION | integer | Specifies the used disk space percentage (0-100). |
| USER-COUNT | integer | Specifies the total number of licensed users logged in to the device. This does not include any MAC address users or Radius users. |
| MAX-LICENSED-USERS-REACHED | boolean | Specifies the maximum number of licensed users reached. |

The following example performs the Layer 7 health check from an external load balancer:

```
GET /dana-na/healthcheck/healthcheck.cgi?status=all HTTP/1.1\r\nHost: localhost\r\n\r\n
```

The concept of receive string is used by health check. The receive string is configured on the load balancer to decide whether or not to mark a node as active or inactive. It is a regular expression that checks for a value present in the response. For example, PPS sends a page to the load balancer that has USER-COUNT=25 indicating that the number of active licensed users on that device is 25.

A receive string of USER-COUNT\=[([0-9])([0-9][1-9])100); means check if USER-COUNT is between 0 and 100. In this example, 25 is between 0 and 100 and the load balancer marks the device as active and considers it for load balancing. Suppose more users log in to the device and it now sends USER-COUNT=150 to the load balancer. This value is now out of

Adding Cluster Members

To add multiple nodes to a cluster:

1. Select **System > Clustering > Cluster status**.
2. Click **Add Members**.
3. Enter the node name and internal IP address.
4. Modify or add the default internal netmask and internal gateway addresses, if necessary.
5. Click **Add**.

Figure448: Add Cluster Member Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards on test123

Clustering > Cluster Add

Cluster Add

Cluster: test

Delete

| Node Name | Internal IPv4 address | Internal IPv4 Netmask | Internal IPv4 Gateway |
|----------------------|-----------------------|-----------------------|-----------------------|
| <input type="text"/> | <input type="text"/> | 255.255.252.0 | 10.204.88.1 |

Add

Note: after the changes are saved, you must click "Network" on the left panel to check and ensure the network settings for all new nodes are fully configured prior to their joining. Keep in mind that the entire state currently on the new nodes will be completely overwritten during the joining process.

Save Changes Cancel

6. Repeat the process until you have added all the nodes.
7. Click Save Changes to save the node configurations.

The system automatically enables the added nodes, even if they are unreachable.



NOTE:

- You configure the node-specific settings for the newly added node manually because binary import options are not useful.
- The only recommended binary import option into a cluster is "Import everything except network settings and licenses" from the Maintenance > Import/Export > Configuration page, which restores cluster-wide configuration (sign-in, realms, roles, resource policies etc.) from a backup binary file. Because this option skips node-specific settings, you must perform step 2 manually to populate the newly joined node with the right set of node-specific settings.

Joining Existing Cluster

The following procedure describes how to join a node to the existing cluster.

To join additional nodes to the cluster:

9. Select the System > Clustering > Join tab and enter:
 - The name of the cluster to join
 - The cluster password you specified when defining the cluster
 - The IP address of an active cluster member
10. Click Join Cluster. When prompted to confirm joining the cluster, click Join.



NOTE:

The join cluster operation validates IPv4 and IPv6 settings for all the physical ports (internal, external, and management) against those present in the existing cluster. For example, the external port IPv6 settings present on Node-Y are compared against external port IPv6 settings that were specified for the Node-Y add member operation entered on the primary node (Node-X). If there is a mismatch, the join operation fails with an appropriate error message.

Figure449: Joining Cluster

The screenshot displays the Pulse Secure web interface. At the top, the Pulse Secure logo is on the left, and the text 'Pulse Policy Secure' is on the right. Below the logo is a navigation bar with tabs: System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The 'System' tab is selected. Under 'System', there is a sub-menu 'Clustering > Join Existing Cluster'. The main content area is titled 'Join Existing Cluster' and features two tabs: 'Join' (selected) and 'Create'. Below the tabs are three input fields: 'Cluster Name' with a placeholder 'Name of the cluster to join', 'Cluster Password', and 'Existing Member Address' with a placeholder 'Internal IP address of any existing cluster member'. A blue 'Join Cluster' button is at the bottom left of the form.


Deleting a Cluster

If you delete a cluster, all the nodes begin running as standalone systems.

To delete a cluster:

1. Select the **System > Clustering > Properties** page.
2. Click the **Delete Cluster** button.
3. Click **Save Changes**.

Figure450: Deleting Cluster

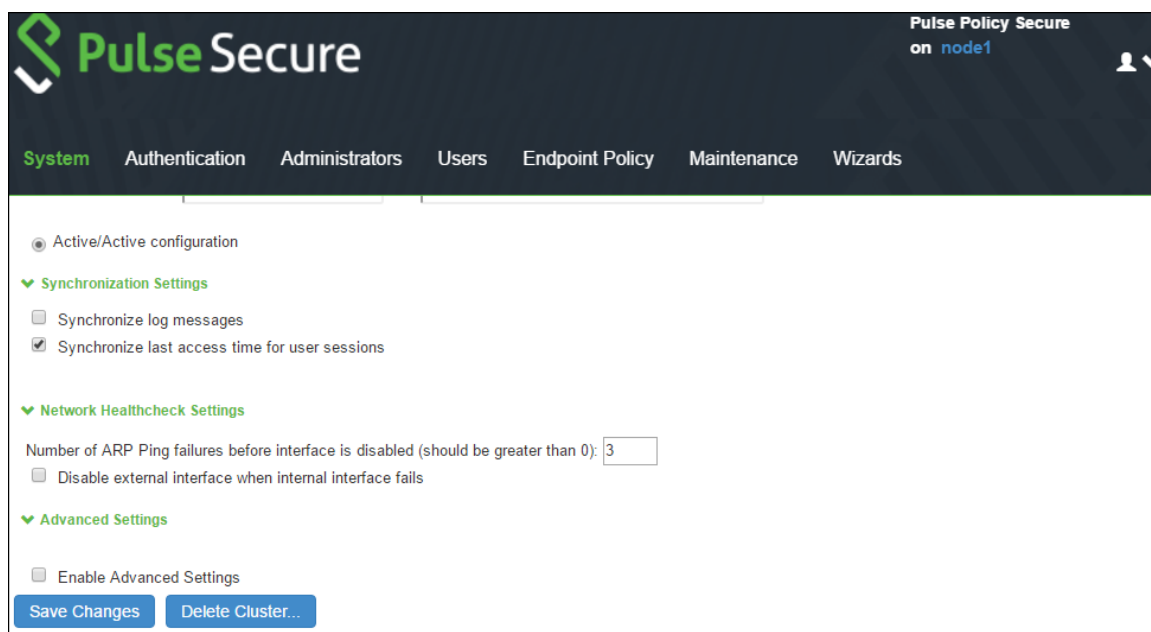

Verifying the Cluster Status

You can verify the cluster status on any node using System > Clustering > Cluster Status page. The list displays each node in the cluster along with its status. In an Active/Passive cluster, you can verify which node owns the VIP and you can force a manual fail over to the passive node by selecting the Fail-over VIP option.

Figure451: Verifying Cluster Status Page

Pulse Secure on node1

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Clustering > Cluster Status

Cluster Status

Status Properties

Cluster Name: test123
 Type:
 Configuration: Active/Active
 Cluster GUID: 42AB949D-11A0-774D-9FB7-6483653A24A7

Add Members... Enable Disable Remove

10 records per page Search:

| | Member Name | Internal Address | External Address | Status | Notes | Sync Rank | Update |
|--------------------------|-------------|------------------|------------------|--------------------------------------|----------------------|-----------|--------|
| <input type="checkbox"/> | * node1 | 10.204.54.64/20 | | ● | Leader | 0 | |
| <input type="checkbox"/> | node2 | 10.204.63.250/20 | | ● | Enabled, Unreachable | 0 | |

Table72: Cluster Status

| GUI Element | Description |
|---------------------------|--|
| Status Information labels | Displays the cluster name, type, configuration, internal VIP, and external VIP for an active/passive cluster. |
| Add Members button | Click this button to specify a node you intend to add to the cluster. You can add multiple nodes at the same time. |
| Enable button | Click this button to add a node that was previously disabled. When you add a node, all state information is synchronized on the node. |
| Disable button | Click this button to disable a node within the cluster. The node retains awareness of the cluster but does not participate in state synchronizations or receive user requests unless members sign in to the node, directly. |
| Remove button | Click this button to remove the selected node or nodes from the cluster. After removal, the node runs in standalone mode. |
| Fail-Over VIP | Click this button to failover the VIP to the other node in the active/passive cluster. Only available if cluster is configured as active/passive. |
| Member Name column | Lists all nodes belonging to the cluster. You can click on a node's name to modify its name and network settings. |
| Internal Address column | Shows the internal IP address of the cluster member using Classless Interdomain Routing (CIDR) notation. |
| External Address column | Shows the external IP address of the cluster member using CIDR notation. Note that this column shows only the external IP address of the cluster leader unless you specify a different address for the node on its individual network settings page, which is accessible by clicking its name in the Member Name column. If you change the external IP address on the Network > Network Settings page, the change affects all cluster nodes. |

| GUI Element | Description |
|------------------|--|
| Status column | <p>Shows the current state of the node:</p> <ul style="list-style-type: none"> Green light, Leader—The node is the active member of an active/active cluster and is handling user requests. Green light/enabled—The node is handling user requests and participating in cluster synchronization. Yellow light/transitioning—The node is joining the cluster. Red light/disabled—The node is not handling user requests or participating in cluster synchronization. Red light/enabled, unreachable —The node is enabled but because of a network issue, it cannot be reached. <p>NOTE: A node's state is considered standalone when it is deployed outside of a cluster or after being removed from a cluster.</p> |
| Notes column | <p>Shows the status of the node's connection to the cluster:</p> <ul style="list-style-type: none"> OK—The node is actively participating in the cluster. Transitioning—The node is switching from the standalone state to the enabled state. Unreachable—The node is not aware of the cluster. A cluster member might be unreachable even when it's online and can be pinged. Possible reasons include: its password is incorrect, it doesn't have information about all cluster nodes, it's configured with a different group communication mode, it is running a different service package version, or the machine is turned off. |
| Sync Rank column | Specifies the synchronization order for nodes when a node rejoins a cluster. Accepts sync ranks from 0 (lowest rank) to 255 (highest rank). The highest rank takes precedence. If two nodes have identical sync ranks, the alphanumeric rank of the member name is used to determine precedence. |
| Update button | Updates the sync rank after you change the precedence of the nodes in the Sync Rank column. |

Serial Console Configuration

If you are adding a factory-set device to a cluster, we recommend that you use the serial console, which enables you to join an existing cluster during the initialization process by entering minimal information. When a node joins a cluster, it receives the cluster state settings, which overwrite all settings on a device with an existing configuration and provide new machines with the required preliminary information. You can also use the serial console to disable the node. If the node is in a synchronization state, you cannot access its admin console. Therefore, if you need to upgrade or reboot the node, for example, you must first disable the node from a cluster through its serial console.

Joining a Node to a Cluster

To add a node to a cluster through its serial console:

1. Connect to the serial console of the device you want to add to the cluster.
2. Reboot the device and watch its serial console. After the system software starts, a message appears stating that the device is about to boot as a standalone node and to press the Tab key for clustering options. Press the Tab key as soon as you see this option.



NOTE: The interval to press the Tab key is five seconds. If the device begins to boot in standalone mode, wait for it to finish and then reboot again.

3. Enter 2 to join an existing cluster.
4. Enter the requested information, including:
 - The internal IP address of an active member in the cluster
 - The cluster password, which is the password you entered when defining the cluster
 - The name of the device to add
 - The internal IP address of the device to add

- The netmask of the device to add
 - The gateway of the device to add
5. The active cluster member verifies the cluster password and that the new device's name and IP address match what you specified in the admin console. If the credentials are valid, the active member copies all its state data to the new cluster member, including certificate, user, and system data.
 6. From the Admin Console, select System > Clustering > Cluster Status of any active cluster member to confirm that the new member's Status is green, indicating that the node is now an enabled node of the cluster (status is green).

**NOTE:**

If you add a node running an earlier version service package to a cluster, the node automatically detects the mismatch, gets the newer package from the cluster, and joins the cluster.

Disabling a Clustered Node

To disable a node within a cluster using its serial console:

1. Connect to the serial console of the device you want to disable within the cluster
2. Enter 4 for the System Operations option.
3. Enter 8 for Disable Node option.
4. Enter y when the serial console prompts you to confirm that you want to disable the node.
5. From the Admin console, verify that the node has been disabled (status is red) within the cluster by selecting System > Clustering > Status of any active cluster member.

Restarting or Rebooting Cluster Nodes Using Its Serial Console

When you create a cluster of two or more nodes, the clustered nodes act as a logical entity. When you reboot one of the nodes using either the serial console or the admin console, all nodes in the cluster restart or reboot.

To reboot only one node:

1. Connect to the serial console of the device you want to disable within the cluster.
2. Enter 4 for System Operations option.
3. Select **System > Clustering > Status** to disable the node you want to restart or reboot within the cluster.
4. Under system operations select the appropriate menu option 9 <Reboot this device>, 10 <Shutdown this device>, or 11 <Restart Services>.
5. Reboot the node, then enable the node within the cluster again.

Monitoring and Troubleshooting

If you have a problem with a cluster, a Pulse Secure Global Support Center (PSGSC) representative might ask you to create a snapshot that includes group communication statistics to assist with debugging the cluster problem. When you enable the group communication monitor, the system records statistics related to all the cluster nodes. As the local node communicates with other nodes in the cluster, the system captures statistics related to intra cluster communication. The Group Communication tab is displayed only when you enable clustering on your system. On a standalone system, you do not have access to the Group Communication tab.

You can also enable the cluster networking troubleshooting server on the Network Connectivity page.



NOTE:

- Performing excessive node monitoring can impact system performance and stability. You should only perform extensive monitoring when directed by your Pulse Secure Global Support Center (PSGSC) representative.
- Performing log synchronization across cluster nodes can impact your system performance and stability.

This section covers the following topics:

- [Group Monitoring](#)
- [Node Monitoring](#)
- [Network Connectivity Monitoring](#)
- [Monitoring using SNMP Traps](#)
- [Troubleshooting](#)
- [Restarting or Rebooting Cluster Nodes](#)

Group Monitoring

To enable group communication monitoring:


1. Enter the maximum size of the statistics log.
2. Enter the interval, in seconds, at which events are to be logged.
3. If you want to monitor all cluster nodes from the current local node, select the Monitor all cluster nodes from this node check box. If you do not check this option, the group communication monitor gathers statistics only for the local node.



NOTE: If you select the Monitor all cluster nodes from this node option, the cluster nodes must be able to communicate over UDP port 6543.

4. Select the Enable group communication monitoring check box to start the monitoring tool.
5. Click **Save Changes**.

Figure452: Troubleshooting using Group Communication

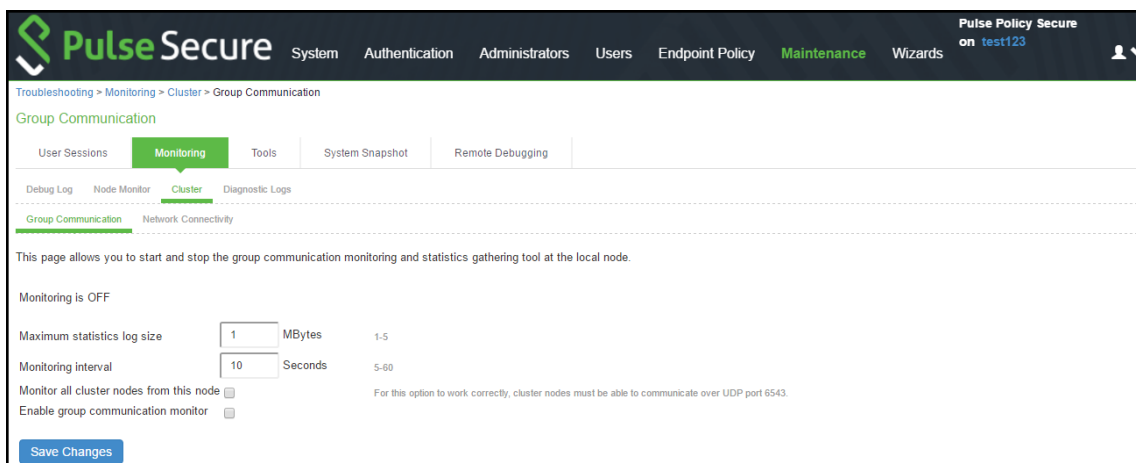


6. If you want to include the node monitoring results in the system snapshot, choose **Maintenance > Troubleshooting > System Snapshot**, and select the **Include debug log** check box.
7. Take a system snapshot to retrieve the results.

Node Monitoring

To enable node monitoring:

1. Select **Maintenance > Troubleshooting > Monitoring > Node Monitor** to enable the node monitor.
2. Enter the maximum size for the node monitor log.
3. Enter the interval, (in seconds) at which node statistics are to be captured.
4. Select the Node monitoring enabled check box to start monitoring cluster nodes.

Figure453: Troubleshooting using Node Monitor

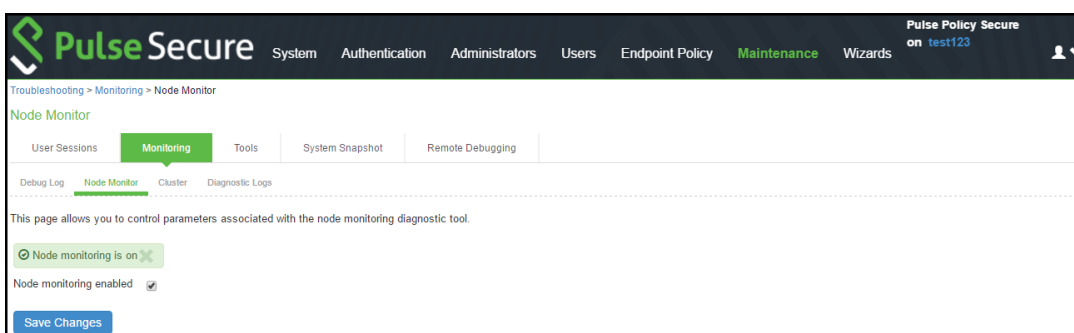

5. For Maximum node monitor log size, enter the maximum size (in MB) of the log file. Valid values in the range of 1 - 30.
6. Specify the interval (in seconds) that defines how often nodes are to be monitored.
7. Select the commands to use to monitor the node.
8. If you select dsstatdump, enter its parameters as well.
9. Click **Save Changes**.
10. To include the node monitoring results in the system snapshot, select **Maintenance > Troubleshooting > System Snapshot**, and select the **Include debug log** check box.

11. Take a system snapshot to retrieve the results.

Network Connectivity Monitoring

Use the Network Connectivity tab to enable the cluster node troubleshooting server and to select a node on which to perform troubleshooting tasks. The troubleshooting tool allows you to determine the network connectivity between cluster nodes.

The server component of this tool runs on the node to which connectivity is being tested. The client component runs on the node from which connectivity is being tested. The basic scenario for testing connectivity is this:

- The administrator starts the server component on the passive node.
- The administrator tests the connectivity to the server node from the Active node, by starting the client component on the active node and then contacting the passive node running the server component.



NOTE: The server component must be run on nodes that are configured as either standalone or in a cluster but disabled. Cluster services cannot be running on the same node as the server component.

To enable network connectivity monitoring:

1. Select the Enable cluster network troubleshooting server check box to enable the server component.

Figure454: Troubleshooting using Network Connectivity

2. Click Save Changes.
3. On another machine, select Maintenance > Troubleshooting > Cluster > Network Connectivity. Perform one of the following steps:
 - Select a node from the list.
 - Enter the IP address of the server node.
4. Click Go to begin troubleshooting the machine on which the server component is running.
5. Click the Details link below the fields to view the results.

Monitoring using SNMP Traps

You can monitor clusters using the standard logging tools. Specifically, you can use several cluster-specific SNMP traps to monitor events that occur on your cluster nodes, such as:

- External interface down
- Internal interface down
- Disabled node
- Changed virtual IP address (VIP)
- Deleted cluster node (cluster stop)



NOTE: In general, it is desirable to configure your SNMP traps on a clusterwide basis so that any given cluster node can send its generated traps to the right target. Setting up clusterwide configuration for the traps is particularly important when you also use a load balancer, because you might not know which node is responsible for a specific operation. In that case, the load balancer can independently determine which cluster node can manage an administrative session.

You can use SNMP traps that are included in the Pulse Secure Standard MIB to monitor these events. These traps include:

- `iveNetExternalInterfaceDownTrap`—Supplies type of event that brought down the external interface.
- `iveNetInternalInterfaceDownTrap`—Supplies type of event that brought down the internal interface.
- `iveClusterDisableNodeTrap`—Supplies the cluster name on which nodes are disabled, along with a space-separated list of disabled node names.
- `iveClusterChangedVIPTrap`—Supplies the type of the VIP, whether external or internal, and its value before and after the change.
- `iveClusterDelete`—Supplies the name of the cluster node on which the cluster delete event was initiated.

These traps are always enabled and available in the MIB. You cannot disable the traps.

Troubleshooting

You can use a built-in feature on the clustering Status page to identify the status of each cluster node. Mouse over the Status light icon to display a tool tip containing a hexadecimal number. The hexadecimal number is a snapshot of the status of the system.

Table73: Cluster Status

| Value | Meaning |
|------------|---|
| 0x000001 | System is in standalone mode. |
| 0x000002 | System is in cluster disabled state. |
| 0x000004 | System is in cluster enabled state. |
| 0x000008 | System is unreachable (because it is offline, has the wrong password, has a different cluster definition, different version, or other problem). |
| 0x00002000 | The node owns the VIPs (on) or not (off). |
| 0x000100 | System is synchronizing its state from another node (initial synchronizing phase). |
| 0x000200 | System is transitioning from one state to another. |
| 0x00020000 | Group communication subsystems at the local and remote nodes are disconnected from each other. |
| 0x00040000 | Management interface (mgt0) is displayed disconnected. |
| 0x00080000 | Management gateway is unreachable for ARP ping. |

| Value | Meaning |
|----------|--|
| 0x000800 | Interface int0 displays disconnected (no carrier). |
| 0x001000 | Interface int1 displays disconnected (no carrier). |
| 0x002000 | System is syncing its state to another node that is joining. |
| 0x004000 | Initial Synchronization as master or slave is taking place. |
| 0x008000 | System is the leader of the cluster. |
| 0x010000 | The spread daemon is running and the cache server is connected to it. |
| 0x020000 | The gateway on int0 is unreachable for ARP pings (see log file). |
| 0x040000 | The gateway on int1 is unreachable for ARP pings (see log file). |
| 0x080000 | Leader election is taking place. |
| 0x100000 | Server lifecycle process is busy. |
| 0x200000 | System is performing post state synchronization activities. |
| 0x30004 | <ul style="list-style-type: none"> The spread daemon is running and the cache server is connected to it. The gateway on int0 is unreachable for ARP pings (see log file). System is in cluster enabled state. |
| 0x38004 | <ul style="list-style-type: none"> The spread daemon is running and the cache server is connected to it. The gateway on int0 is unreachable for ARP pings (see log file). System is the leader of the cluster. System is in cluster enabled state. |

Each code, as you see it in the system, may relate specifically to one state. However, each code may represent a combination of states, and so the actual code does not appear in the above table. Instead, the code you see in the system is the sum of several of the hexadecimal numbers shown above. You will need to factor out the codes, as in the following example:

- 0x38004—The rightmost digit (4) in this hexadecimal number corresponds to:
 - 0x000004—The system is in a cluster enabled state.
- 0x38004—The digit in the fourth position from the right (8) corresponds to:
 - 0x008000—This system is the leader of the cluster.
- 0x38004—The leftmost digit (3) in this hexadecimal number does not exist in the table, which indicates that it corresponds to the sum of two other digits, in this case, 1 and 2, as shown in the following codes:
 - 0x020000—The gateway on int0 is unreachable for ARP pings (see log file).
 - 0x010000—The spread daemon is running and the cache server is connected to it.

Restarting or Rebooting Cluster Nodes

When you create a cluster of two or more nodes, the clustered nodes act as a logical entity. When you reboot one of the nodes using either the serial console or the admin console, all nodes in the cluster restart or reboot.

To reboot only one node:

1. Select **System > Clustering > Status** to disable the node you want to restart or reboot within the cluster.
2. Select **Maintenance > System > Platform**.
3. Reboot the node, then enable the node within the cluster again.

Figure455: System Maintenance

Pulse Secure System Authentication Administrators Users Endpoint Policy **Maintenance** Wizards

Pulse Policy Secure on test123

System Maintenance > Platform

Platform Upgrade/Downgrade Options Installers

Cluster: test
Hostname: test123
Model: MAG-4610
Serial Number: 0274062012000155
Uptime: 3 hours, 53 minutes, 42 seconds
Current version: 5.4R1 (build 41880)
Rollback version: 5.3R3 B2 (build 35622)

Node operations: [Reboot this node...](#)

Cluster operations:
Cluster operations affect all nodes in the cluster.
[Restart Services](#) [Reboot...](#) [Shut Down...](#) [Rollback...](#)

Connectivity:
This will ping various configured servers to test the device's connectivity.
[Test Connectivity](#)

▼ Hardware Status

Fan Status:

| Fan | Status |
|-----|--------|
| 0 | ● |
| 1 | ● |

Temperature: 44 °C

Appendix

Licensing

PPS software include a Pulse Secure Licensing and Software Download Center @ <https://my.pulsesecure.net>, that lets you configure the license server to allow administrators to view all configured systems and move those licenses as needed. Other devices on the network lease licenses from the central license server. For more information, see [License Management Guide](#).

Starting with PPS version 5.0, clustering works as follows:

- Clustering does not require a license.
- Place an equal number of licenses on each appliance, when they are joined together to form a cluster, the user licenses add up so that the cluster supports all the licensed users.
For example, building a 1,000-user cluster is done by bringing together two appliances with 500 user licenses in each of the two units.
- For third-party features, each node in a cluster should have similar license counts.
- The maximum number of concurrent users allowed in a cluster is the sum of all user licenses of all connected nodes

If your client devices are using PPS prior to release 5.0:

- A license is no longer required to create a cluster. Prior to Release 4.0, to create a multiple node cluster that supports multiple concurrent users, you were required to purchase one ADD-ccccE license for one cluster node, and n-1 CL licenses (one for each of the remaining cluster nodes). For example, to create a 4-node cluster supporting 2000 concurrent users, you needed to purchase one ADD-2000E license and 3 CL licenses.
- CL licenses are no longer necessary but are still supported. When you upgrade to Release 4.0, your existing licenses continue to work. There is no cluster grace period for the node with a CL license installed. When the node with a CL license installed disconnects, the capacity computation is the same as before Release 4.0.
- A 5-day *cluster grace period* provides license flexibility when a node crashes or loses connectivity with the rest of the cluster.
- We recommend that you distribute your ADD licenses equally across the cluster to avoid losing large number of licenses when a node disconnects from the cluster.

The below table illustrates why we recommend distributing licenses equally across all cluster nodes.

Table74: License Distribution Examples

| License Distribution | Example |
|-------------------------------|--|
| Example 1: Equal distribution | <p>Suppose Node A and Node B are part of a cluster, and each node has 500 concurrent user licenses then the maximum number of licenses is 1000.</p> <p>Suppose Node B disconnects from the cluster. Until the clustering grace period ends, the maximum number of licenses on Node A is 500 (from Node A's original license) + minimum (licenses on Node A (500), licenses on Node B (500)) = 500 + 500 = 1000.</p> <p>After the grace period ends, the maximum number of licenses on Node A reverts to its original license of 500.</p> |

| License Distribution | Example |
|---|---|
| Example 2: Unequal distribution | <p>In this example, Node A and Node B are part of a cluster. Node A has 600 ADD licenses and Node B has 400 ADD licenses then the maximum number of licenses is 1000.</p> <p>Suppose Node B disconnects from the cluster. Until the clustering grace period ends, the maximum number of licenses on Node A is 600 (from Node A's original license) + minimum (licenses on Node A (600), licenses on Node B (400)) = 600 + 400 = 1000. After the grace period ends, the maximum number of licenses on Node A is 600.</p> <p>Suppose Node A disconnects from the cluster. Until the clustering grace period ends, the maximum number of licenses on Node B is 400 (from Node B's original license) + minimum (licenses on Node A (600), licenses on Node B (400)) = 400 + 400 = 800. After the grace period ends, the maximum number of licenses on Node B is 400.</p> |
| Example 3. Unequal distribution (extreme) | <p>In this example, Node A and Node B are part of a cluster. Node A has 1000 ADD licenses and Node B has no ADD licenses.</p> <p>Suppose Node B disconnects from the cluster. Until the clustering grace period ends, the maximum number of licenses on Node A is 1000 (from Node A's original license) + minimum (licenses on Node A (1000), licenses on Node B (0)) = 1000 + 0 = 1000. After the grace period ends, the maximum number of licenses on Node A is 1000.</p> <p>Suppose Node A disconnects from the cluster. Until the clustering grace period ends, the maximum number of licenses on Node B is 0 (from Node B's original license) + minimum (licenses on Node A (1000), licenses on Node B (0)) = 0 + 0 = 0. After the grace period ends, the maximum number of licenses on Node B is 0.</p> <p>For the scenarios in Examples 2 and 3, we recommend you distribute the licenses equally amongst the nodes.</p> |

Configuring IPv6 on an Existing IPv4 Active/Passive Cluster

We recommend as a best practice that you configure IPv6 host and network settings on individual nodes before you create a cluster. In some cases, such as routine upgrade, you have already created a cluster configuration and only want to add IPv6 addresses to the existing interface configuration. If so, follow the procedures in this section precisely.



NOTE: You must leave IPv6 disabled until the last step of the procedures shown below.

To modify the internal port configuration for the cluster:

1. Select System > Network > Internal Port > Settings.
2. Under Settings for, select Entire cluster.
3. Complete the configuration for the IPv6 prefix and the IPv6 gateway, but do not enable IPv6.
4. Verify that all the nodes are up and running, are in sync, and are in reachable state. Complete synchronization of the cluster pair might take a few minutes.
5. Under Settings for, select Node 1.
6. Configure the IPv6 address, but do not enable IPv6.
7. Verify both the nodes are up and running and in reachable state.
8. Repeat steps 6-8 for Node 2.
9. Select System > Network > Internal Port > Virtual Ports.
10. Update the cluster virtual port configuration to add the IPv6 address.
11. Select System > Network > Internal Port > Settings.
12. Under Settings for, select Entire cluster.
13. Select Enable IPv6.
14. To modify the external port configuration for the cluster:
15. Select System > Network > External Port > Settings.
16. Under Settings for, select Entire cluster.
17. Complete the configuration for the IPv6 prefix and the IPv6 gateway, but do not enable IPv6.

18. Verify that all the nodes are up and running, are in sync, and are in reachable state. Complete synchronization of the cluster pair might take a few minutes.
19. Under Settings for, select Node 1.
20. Configure the IPv6 address, but do not enable IPv6.
21. Verify both the nodes are up and running and in reachable state.
22. Repeat steps 6-8 for Node 2.
23. Select System > Network > External Port > Virtual Ports.
24. Update the cluster virtual port configuration to add the IPv6 address.
25. Select System > Network > External Port > Settings.
26. Under Settings for, select Entire cluster.
27. Select Enable IPv6.

Cloud Secure

Cloud Secure provides secure, seamless, and compliant access to cloud resources on a hybrid IT environment where companies are combining the best of the cloud with their own localized data centers. Cloud Secure solution integrates with multiple Pulse Secure products such as Pulse Connect Secure, Pulse Policy Secure, Pulse Workspace etc.

Cloud Secure provides great level of flexibility with integration to various Third-Party vendors such as MDM vendors, IdP vendors etc. It is a licensed feature, so the Administrator should procure and install the required license.

For more details about the configuration, various deployment scenarios, reports, etc. refer to Cloud Secure documentation available on [Pulse Secure Techpubs site](#).

For On-Premise deployment usecase, see [Configuring PPS for On-Premise users](#).

For Cloud Application Visiblity, see [CAV Overview](#).

System Management

This part covers the following chapters:

- [Network and Host Administration](#)
- [Certificate Security Administration](#)
- [FIPS Level 1 Support \(Software FIPS\)](#)
- [File Management](#)
- [Dashboard and Reports](#)
- [System Maintenance](#)

Network and Host Administration

This chapter describes how to configure network and host settings. It includes the following information:

- [Network and Host Administration Overview](#)
- [Configuring the Internal Port](#)
- [Configuring the External Port](#)
- [Using the Management Port](#)
- [Configuring VLAN Ports](#)
- [Using Virtual Ports](#)
- [Configuring the System Date and Time](#)
- [Configuring Network Services](#)
- [Managing the Routes Table](#)
- [Managing the Hosts Table](#)
- [Managing the ARP Table](#)
- [Managing the Neighbor Discovery Table](#)
- [Configuring SSL Options](#)
- [Configuring Miscellaneous Security Options](#)
- [Using the Serial Port](#)

Network and Host Administration Overview

When you install and initially set up the device, you use the serial port console to set basic network and host settings. To get started, you must use the serial console to configure these settings for the internal interface. You have the option to use the serial console to configure network and host settings for the external interface and the management interface. The network and host settings you configure with the serial port console include:

- IPv4/IPv6 address
- Netmask
- Default gateway
- Speed and duplex
- MTU
- DNS
- Default domain
- WINS

Once the internal interface has been configured, you can use the admin console Network Settings pages to modify settings for the internal interface, to enable and configure the external interface and the management interface, and to configure or manage advanced networking features, including:

- Hostname
- IPv6 addresses
- VLAN ports
- Virtual ports
- Route table entries

- Host mapping table entries
- ARP cache entries
- Neighbor discovery cache entries
- System date and time (manual configuration) or NTP

Configuring the Internal Port

The internal port connects to the local area network (LAN). The internal port settings are configured when you run the setup wizard from the serial console as part of the installation procedure. You can use the System > Network pages to make changes to the configuration.

To modify the internal port configuration:

1. Select System > Network > Internal Port > Settings to display the configuration page.
2. Complete the configuration as described in table below.
3. Save your changes.

Figure456: Internal Port Configuration Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Network > Internal > Internal Port - Settings

Internal Port - Settings

Network Settings
Internal Port - Settings

Overview **Internal Port** External Port Management Port VLANs Routes Hosts Load Balancer

Settings Virtual Ports ARP Cache ND Cache

Enter the network settings and click the Save Changes button at the bottom of the page.

IPv4 Settings

*IP Address: 10.204.00.100

*Netmask: 255.255.255.0

*Default Gateway: 10.204.00.1

Note: If you need to specify static routes, you can do so on the [Static Routes](#) page.

IPv6 Settings

☐ Enable IPv6 ☒ Disable IPv6

Note: Changing above setting might restart some services. This restart might drop all the connections to the Pulse Connect Secure.

Link Local Address:

*IPv6 Address:

*Prefix Length: 64 (1 to 128)

*Default Gateway:

Advanced Port

MAC Address: 00:18:7D:22:48:C0

Link Speed: Auto

*ARP Ping Timeout: 3 seconds 3 to 300 seconds

*MTU: 1500 bytes Maximum Transmission Unit. If IPv6 is enabled (1280 to 1500), else (576 to 1500).

Default VLAN ID:

Default VLAN ID for the traffic for this port.
WARNING: Adding VLAN ID may break connectivity unless corresponding switch port is configured to handle tagged traffic.

Save Changes

* indicates required field

Table75: Internal Port Configuration Guidelines

| Settings | Guidelines |
|----------------------------|--|
| IPv4 Settings | |
| IP Address | <p>Assign an IP address. You must assign an IPv4 address to the internal interface.</p> <p>An IP address is an identifier for a computer or device on a TCP/IP network. Networks using the TCP/IP protocol route messages based on the IP address of the destination.</p> <p>The format of an IPv4 address is a 32-bit numeric address written as four numbers separated by periods. Each number can be 0 to 255.</p> |
| Netmask | <p>Assign a netmask. A netmask indicates which part of an IP address indicates network identification and which part indicates the host identification. For example, the IP address and netmask 10.20.30.1 255.255.255.0 (or 10.20.30.1/24) refer to all the hosts in the 10.20.30.0 subnet. The IP address and netmask 10.20.30.1 255.255.255.255 (or 10.20.30.1/32) refer to a single host.</p> |
| Default Gateway | <p>Specify the IPv4 address for the default gateway for the routing domain to which the device belongs.</p> <p>A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway.</p> |
| IPv6 Settings | |
| Enable IPv6 / Disable IPv6 | <p>Disabled by default. Enable to support access from IPv6 endpoints.</p> <p>When you enable IPv6, the system acquires a link local address.</p> <p>If you switch from enabled to disabled, the system clears the link local address.</p> |
| Link Local Address | <p>Display the auto configured link local address (after you have enabled and saved the IPv6 configuration).</p> |
| IPv6 Address | <p>Specify a routable IPv6 address, such as a global unicast address that your network plan has provisioned for this host and interface. Automatic configuration methods are not supported. You must specify the appropriate address manually.</p> |
| Prefix Length | <p>Specify how many of the higher order contiguous bits of the IPv6 address comprise the prefix (the network portion of the IPv6 address). The default is 64.</p> |
| Gateway | <p>Specify the IPv6 address for the default gateway for the routing domain to which the device belongs.</p> <p>A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway.</p> |
| Advanced Settings | |
| MAC Address | <p>Display the MAC address for the interface.</p> |
| Link Speed | <p>Specify the speed and duplex combination for the interface.</p> <p>If you run SNMP_GET and then change the Link Speed value, you must wait at least 5 minutes after submitting the change before running SNMP_GET again.</p> |
| ARP Ping Timeout | <p>(IPv4 only.) Specify how long the system should wait for responses to Address Resolution Protocol (ARP) requests before timing out. Cluster nodes send ARP requests to the gateways of other nodes to determine if they are properly communicating with one another.</p> <p>If you have not deployed a cluster, the system does not use this setting. If the node belongs to a cluster, the timeout interval that you specify is synchronized across the cluster. In multisite clusters, you can override this setting for the individual nodes in the cluster using options in the System > Clustering page. Use caution when changing this setting in active/passive clusters, however, because the system also uses the ARP Ping Timeout setting on the Internal tab as a failover timer for the VIP.</p> |

| Settings | Guidelines |
|-----------------|---|
| MTU | <p>Specify the maximum transmission unit.</p> <p>If IPv6 is enabled, the valid range is 1280 to 1500. If IPv6 is not enabled, the valid range is 576 to 1500.</p> <p>We recommend you retain the default MTU setting (1500) unless you must change the setting for troubleshooting purposes.</p> |
| Default VLAN ID | <p>(Optional) Specify the default VLAN ID for the traffic of this port. When this parameter is set, all the traffic on this interface is subsequently tagged with the set VLAN ID and also accepts only incoming traffic with the same tag. Necessary changes are required on the connected switch port to handle bi-directional tagged traffic.</p> <p>Note:</p> <ul style="list-style-type: none"> If default VLAN ID is set incorrectly or the connected switch port is not configured accordingly, the interface can become unreachable. Default VLAN ID cannot be set if IPv6 is enabled. Default VLAN ID is supported in a clustered environment. In case of VMware ESXi based Virtual Appliance(VA), set the vSwitch configuration to port 4095 to allow PPS to tag the traffic. The set default VLAN ID should be added as a member in the physical port of switch and the same VLAN should be removed from native VLAN ID. |

Configuring the External Port

The external port connects to the Internet. You can use the System > Network pages to configure the external port.

To configure the external port:

1. Select System > Network > External Port > Settings to display the configuration page.
2. Complete the configuration as described below.
3. Save your changes.

Figure457: External Port Configuration Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Network > External > External Port - Settings

External Port - Settings

Network Settings
External Port - Settings

Overview Internal Port **External Port** Management Port VLANs Routes Hosts Load Balancer

Settings Virtual Ports ARP Cache ND Cache

Enter the network settings and click the Save Changes button at the bottom of the page.

Use Port
☐ Enabled ☒ Disabled

IPv4 Settings
 *IP Address:
 *Netmask:
 *Default Gateway:
 Note: If you need to specify static routes, you can do so on the [Static Routes](#) page.

IPv6 Settings
☐ Enable IPv6 ☒ Disable IPv6
 Note: Changing above setting might restart some services. This restart might drop all the connections to the Pulse Connect Secure.

Link Local Address:
 *IPv6 Address:
 *Prefix Length: (1 to 128)
 *Default Gateway:

Advanced Port
 MAC Address: 00:18:7D:22:48:BF
 Link Speed:
 *ARP Ping Timeout: seconds 3 to 300 seconds
 *MTU: bytes Maximum Transmission Unit. If IPv6 is enabled (1280 to 1500), else (576 to 1500).
 Default VLAN ID:

Default VLAN ID for the traffic for this port.
 WARNING: Adding VLAN ID may break connectivity unless corresponding switch port is configured to handle tagged traffic.

Save Changes

Table76: External Port Configuration Guidelines

| Settings | Guidelines |
|----------------------------|--|
| Use Port? | |
| Use Port? | Select Enabled to use the port; otherwise, select Disabled. |
| IPv4 Settings | |
| IP Address | <p>Specify an IP address. An IP address is an identifier for a computer or device on a TCP/IP network. Networks using the TCP/IP protocol route messages based on the IP address of the destination.</p> <p>The format of an IPv4 address is a 32-bit numeric address written as four numbers separated by periods. Each number can be 0 to 255.</p> |
| Netmask | <p>Specify a netmask. A netmask indicates which part of an IP address indicates network identification and which part indicates the host identification. For example, the IP address and netmask 10.20.30.1 255.255.255.0 (or 10.20.30.1/24) refer to all the hosts in the 10.20.30.0 subnet. The IP address and netmask 10.20.30.1 255.255.255.255 (or 10.20.30.1/32) refer to a single host.</p> |
| Default Gateway | <p>Specify the IPv4 address for the default gateway for the routing domain to which the device belongs.</p> <p>A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway.</p> |
| IPv6 Settings | |
| Enable IPv6 / Disable IPv6 | <p>Disabled by default. Enable to support access from IPv6 endpoints.</p> <p>When you enable IPv6, the system acquires a link local address.</p> <p>If you switch from enabled to disabled, the system clears the link local address.</p> |
| Link Local Address | Display the auto configured link local address (after you have enabled and saved the IPv6 configuration). |
| IPv6 Address | Specify a routable IPv6 address, such as a global unicast address that your network plan has provisioned for this host and interface. Automatic configuration methods are not supported. You must specify the appropriate address manually. |
| Prefix Length | Specify how many of the higher order contiguous bits of the IPv6 address comprise the prefix (the network portion of the IPv6 address). The default is 64. |
| Gateway | <p>Specify the IPv6 address for the default gateway for the routing domain to which the device belongs.</p> <p>A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway.</p> |
| Advanced Settings | |
| MAC Address | Display the MAC address for the interface. |
| Link Speed | <p>Specify the speed and duplex combination for the interface.</p> <p>If you run SNMP_GET and then change the Link Speed value, you must wait at least 5 minutes after submitting the change before running SNMP_GET again.</p> |
| ARP Ping Timeout | <p>(IPv4 only.) Specify how long the system should wait for responses to Address Resolution Protocol (ARP) requests before timing out. Cluster nodes send ARP requests to the gateways of other nodes to determine if they are properly communicating with one another.</p> <p>If you have not deployed a cluster, the system does not use this setting. If the node belongs to a cluster, the timeout interval that you specify is synchronized across the cluster. In multisite clusters, you can override this setting for the individual nodes in the cluster using options in the System > Clustering page. Use caution when changing this setting in active/passive clusters, however, because the system also uses the ARP Ping Timeout setting on the Internal tab as a failover timer for the VIP.</p> |


| Settings | Guidelines |
|-----------------|---|
| MTU | <p>Specify the maximum transmission unit.</p> <p>If IPv6 is enabled, the valid range is 1280 to 1500. If IPv6 is not enabled, the valid range is 576 to 1500.</p> <p>We recommend you retain the default MTU setting (1500) unless you must change the setting for troubleshooting purposes.</p> |
| Default VLAN ID | <p>(Optional) Specify the default VLAN ID for the traffic of this port. When this parameter is set, all the traffic on this interface is subsequently tagged with the set VLAN ID and also accepts only incoming traffic with the same tag. Necessary changes are required on the connected switch port to handle bi-directional tagged traffic.</p> <p>Note:</p> <ul style="list-style-type: none">• If default VLAN ID is set incorrectly or the connected switch port is not configured accordingly, the interface can become unreachable.• Default VLAN ID cannot be set if IPv6 is enabled.• Default VLAN ID is not supported in a clustered environment.• In case of VMware ESXi based Virtual Appliance(VA), set the vSwitch configuration to port 4095 to allow PPS to tag the traffic.• The set default VLAN ID should be added as a member in the physical port of switch and the same VLAN should be removed from native VLAN ID. |

JITC Mode Option

To enable the Joint Interoperability Test Command (JITC) mode:

6. In the admin console, select System > Configuration > Security > Inbound SSL Options.
7. Under DOD certification option, enable **Turn on JITC mode**.


Figure458: JITC Mode

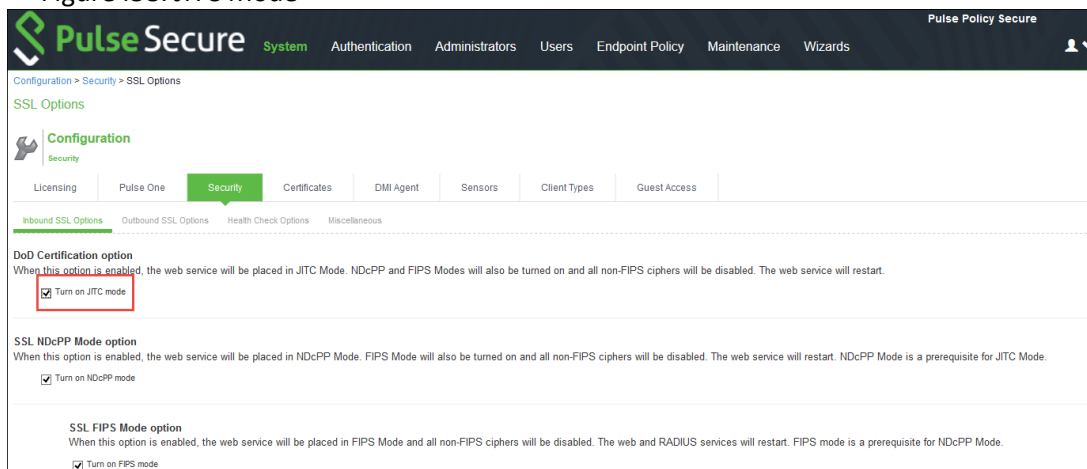

Note: NdcPP and FIPS mode are automatically enabled after enabling the **JITC mode**.

8. Click **Save Changes**.
9. With JITC mode enabled, PPS detects any duplicate RADIUS Return and Request Attribute policies and an error message is displayed if the user tries to create a duplicate policy.

Figure459:RADIUS Return/Request Attribute Policy

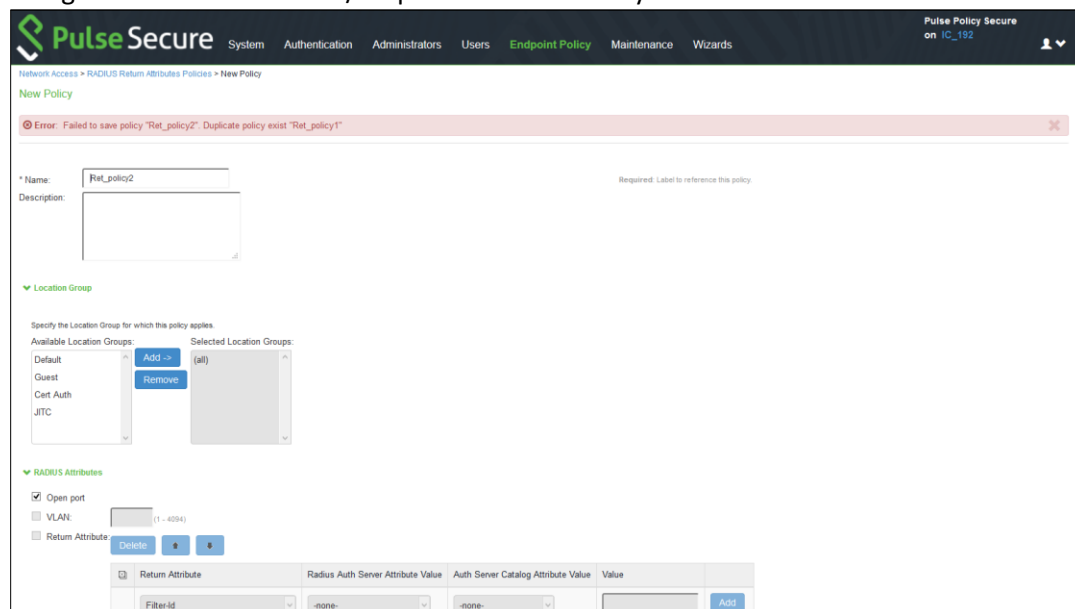

Note: With JITC mode enabled, only the first match duplicate RADIUS policy found is reported in the error message.

Important Factors to Consider

Password Strengthening: When JITC is enabled, PPS does not allow an administrator to configure a password exactly same as previously configured 5 passwords. An error message is displayed in this case.

Figure460:Password Strenghtening

Pulse Secure System **Authentication** Administrators Users Endpoint Policy Maintenance Wizards

Error: Could not change password. New password must not be one of the previous 5 password(s).

Auth Servers > Administrators > Update Administrator root

Update Administrator root

Full Name:

Authenticate using: Administrators

Password:

Confirm Password:

Start Time:

End Time:

Time Zone: (GMT+05:30) Kolkata, Chennai, Mumbai, New Delhi

☐ One-time use (disable account after the next successful sign-in)

☐ Allow console access

☒ Enabled

☐ Disabled

☐ Quarantined

☐ Require user to change password at next sign in

Note: You must also configure password management on the [Authentication server Settings](#) with 'Allow users to change their passwords' option enabled. Use options on the Administrators/Users > Authentication > [Realm] > Authentication Policy > Password page to specify which realms should inherit the server's password management capabilities.

[Save Changes](#)

Notification for Unsuccessful Admin Login Attempts: With JITC Mode on, PPS shows a banner with the count of unsuccessful login attempts. This includes any change in the Admin status that would have happened since the last successful login. Upon clicking on the banner, the Administrator is directed to the status page, which provides more details about status or configuration change since last login. These configuration changes are cleared before the next login so that admin can see different set of configuration changes, if anything happened from the last login.

Figure461: Banner for Unsuccessful Admin Login Attempts

Pulse Secure System Administrators Endpoint Policy Wizards

Status > Activity > Pulse Policy Secure Dashboard

Pulse Policy Secure Dashboard

Your SSL settings allow insecure TLS renegotiation. [Please click here to modify](#)

There is a change in account status since last login. [Please click here for details](#)

Activity Overview Active Users Devices Admin Notification

Dashboard Settings

Figure462: Admin Notification for Unsuccessful Admin Login Attempts

Pulse Secure System Endpoint Policy Wizards

Status > Admin Notification

Admin Notification

Activity Overview Active Users Admin Notification

Login Status


Number of failed login attempts since last login :2

Re-authentication of Admin Users: PPS will force the administrator to re-authenticate with PPS whenever the following conditions occur:

- Add Role
- Delete Role
- Modify the Role
- Delete the Realm
- Update the Realm
- During DPE (Dynamic Policy Evaluation)

Configuration Change Notification: For details about configuration changes and status information since last login, go to **System > Status > Admin Notification**.

Figure463: Configuration Change Notification for Admin Users

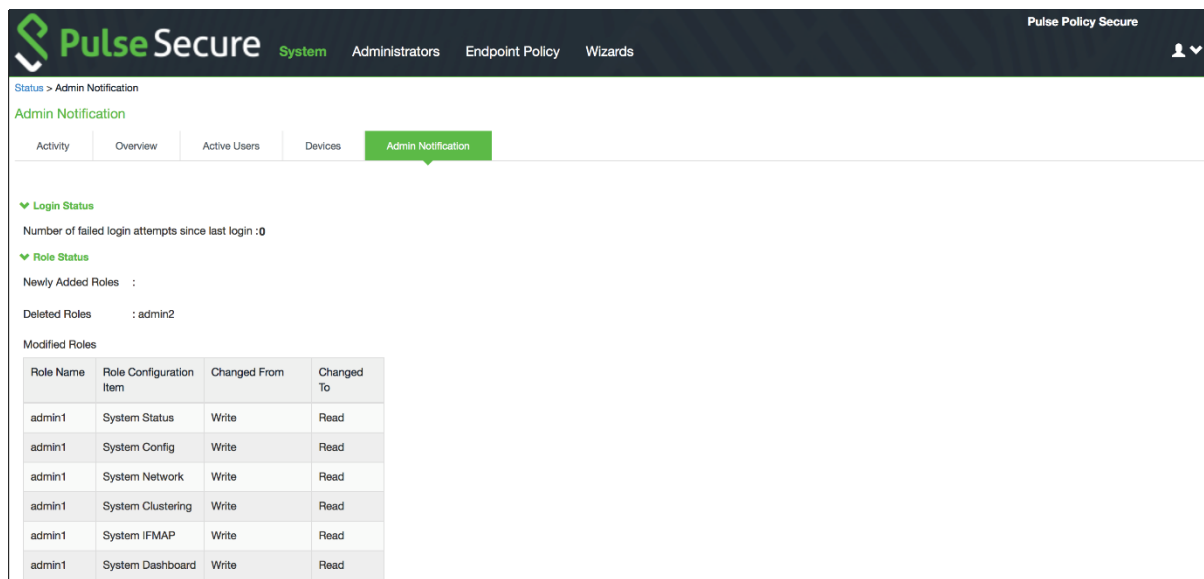

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Administrators', 'Endpoint Policy', and 'Wizards'. The main content area is titled 'Admin Notification' and has tabs for 'Activity', 'Overview', 'Active Users', 'Devices', and 'Admin Notification' (which is selected). Under 'Login Status', it shows 'Number of failed login attempts since last login :0'. Under 'Role Status', it shows 'Newly Added Roles : ' and 'Deleted Roles : admin2'. A section titled 'Modified Roles' contains a table:

| Role Name | Role Configuration Item | Changed From | Changed To |
|-----------|-------------------------|--------------|------------|
| admin1 | System Status | Write | Read |
| admin1 | System Config | Write | Read |
| admin1 | System Network | Write | Read |
| admin1 | System Clustering | Write | Read |
| admin1 | System IFMAP | Write | Read |
| admin1 | System Dashboard | Write | Read |

NDcPP Mode Option

NDcPP mode can be enabled in the Inbound tab with a checkbox. This status is also applied over to the Outbound tab. Turning on NDcPP automatically turns on FIPS mode and disables SSL/TLS Version TLS1.0 and below. Also, NDcPP Mode allows to choose only 16 Ciphers under Custom Encryption Strength. Turning on the NDcPP checkbox selects all the NDcPP ciphers by default on both, the Inbound and Outbound sides.



NOTE: When the NDcPP Mode is enabled, backend server like Windows 2008 R2 which supports the SSL/TLS Version only till TLS1.0 cannot be connected.

syslog-ng server

- Connection to syslog-ng server does NOT get established, since syslog-ng does not support TLSv1.1 and TLSv1.2.

rsyslog


- Supports only till TLSv1.1. So, connection would not get established, if Outbound SSL Options is set to use TLSv1.2.



NOTE:

- To be NDcPP compliant, NTP Update Interval needs to be limited to 60 minutes. This is to avoid the potential drift becoming too excessive.
- For incoming client certificate during client certificate authentication and for incoming server certificate during backend syslog server connection 1024 bit Key Length is not allowed in both NDcPP and FIPS Mode where as SHA1 Signature Algorithm is not allowed only in FIPS Mode and is allowed in NDcPP Mode. This restriction is not applicable for Outgoing Certificates from PPS during SSL Negotiation.

Figure 464: SSL NDcPP Mode Option

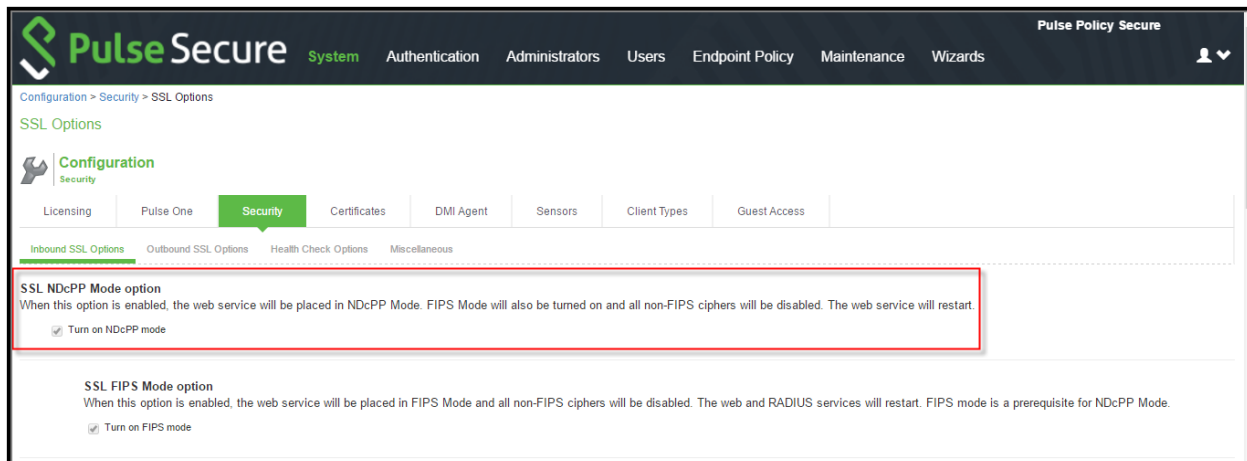


Inbound Settings

When the NDcPP mode is enabled, the following settings appear by default in the Inbound SSL Options page:

- The **Accept only TLS 1.1 and later** is enabled by default in the Allowed SSL and TLS Version settings. Only the **Accept only TLS 1.1** and **Accept only TLS 1.2** options can be chosen. The **Accept only TLS 1.0 and later** and the **Accept SSL V3 and TLS (maximize compatibility)** are disabled. See Figure 465.
- With regards to the Allowed Encryption Strength settings the **Custom SSL Cipher Selection** is enabled by default with NDcPP Ciphers. All other options are disabled.


Figure 465: NDcPP Inbound Settings Page

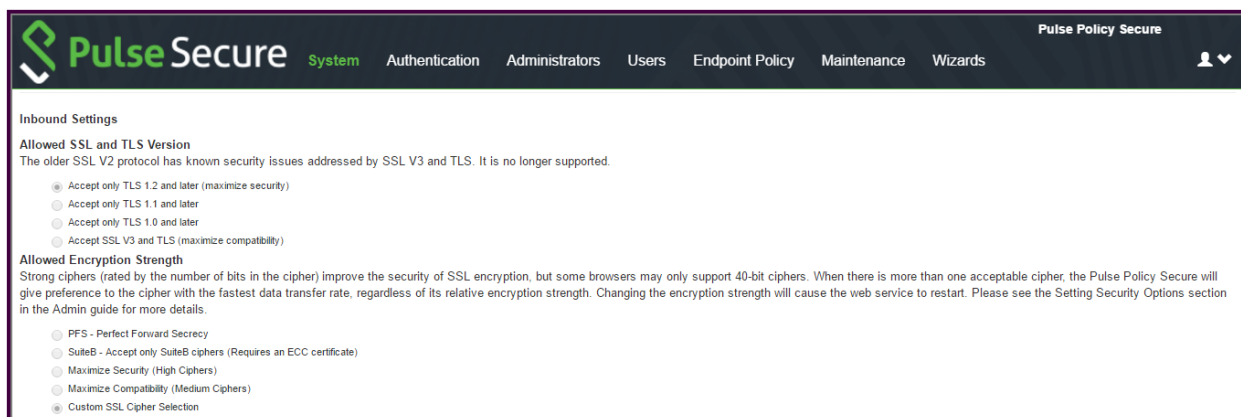

The following is a list of Selected Ciphers in the Inbound Settings with the NDcPP mode enabled:

- TLS_RSA_WITH_AES_128_CBC_SHA
- TLS_RSA_WITH_AES_256_CBC_SHA
- TLS_DHE_RSA_WITH_AES_128_CBC_SHA
- TLS_DHE_RSA_WITH_AES_256_CBC_SHA
- TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA
- TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA
- TLS_RSA_WITH_AES_128_CBC_SHA256
- TLS_RSA_WITH_AES_256_CBC_SHA256
- TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256
- TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA384
- TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256
- TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384
- TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256
- TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384

Figure 466: Selected Ciphers in the Inbound Settings with the NDcPP Mode

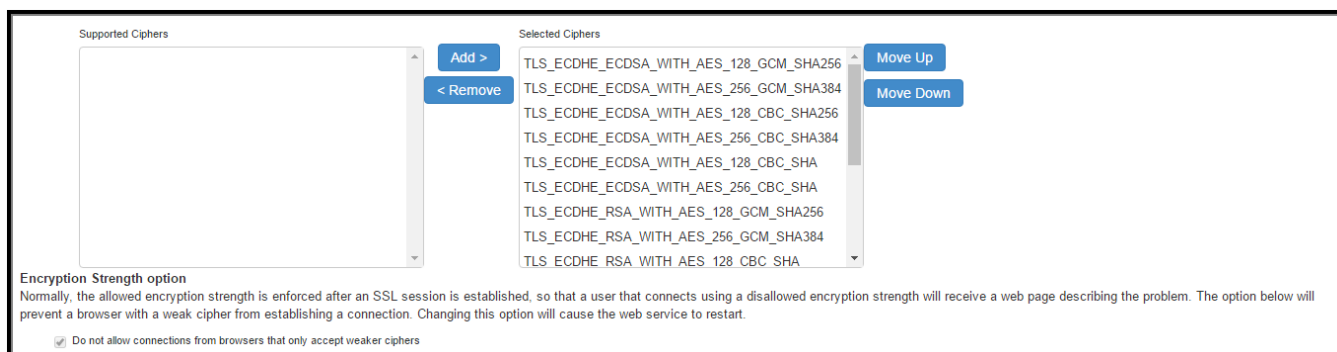


Outbound Settings

When the NDcPP mode is enabled, the following settings appear by default in the Outbound SSL Options page:

- The **Accept only TLS 1.1 and later** is enabled by default in the Allowed SSL and TLS Version settings. Only the **Accept only TLS 1.1** and **Accept only TLS 1.2** are editable. The **Accept only TLS 1.0 and later** and the **Accept SSL V3 and TLS (maximize compatibility)** are disabled.
- With regards to the Allowed Encryption Strength settings the **Custom SSL Cipher Selection** is enabled by default. All other options are disabled.
- Only the NDcPP ciphers configured in the Outbound SSL options settings are sent in the Outbound connections (PPS → backend SSL).

Figure 467: NDcPP Outbound Settings Page

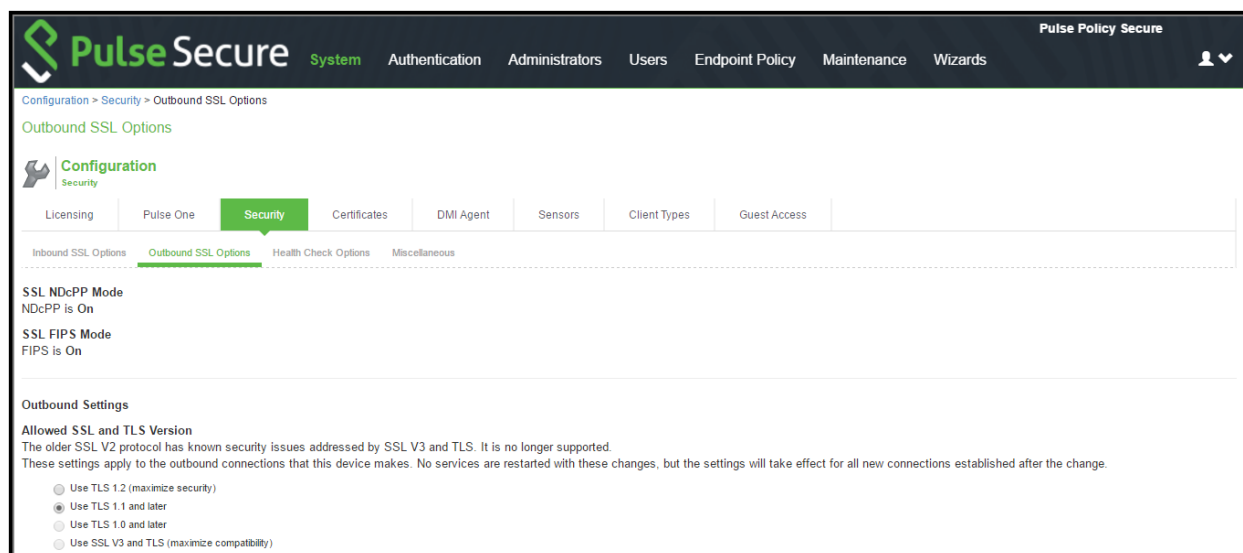


The following is a list of Selected Ciphers in the Outbound Settings with the NDcPP mode enabled:

- TLS_RSA_WITH_AES_128_CBC_SHA
- TLS_RSA_WITH_AES_256_CBC_SHA
- TLS_DHE_RSA_WITH_AES_128_CBC_SHA
- TLS_DHE_RSA_WITH_AES_256_CBC_SHA
- TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA
- TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA

- TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA
- TLS_RSA_WITH_AES_128_CBC_SHA256
- TLS_RSA_WITH_AES_256_CBC_SHA256
- TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256
- TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA384
- TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256
- TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384
- TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256
- TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384

Figure 468: Selected Ciphers in the Outbound Settings with the NDcPP Mode

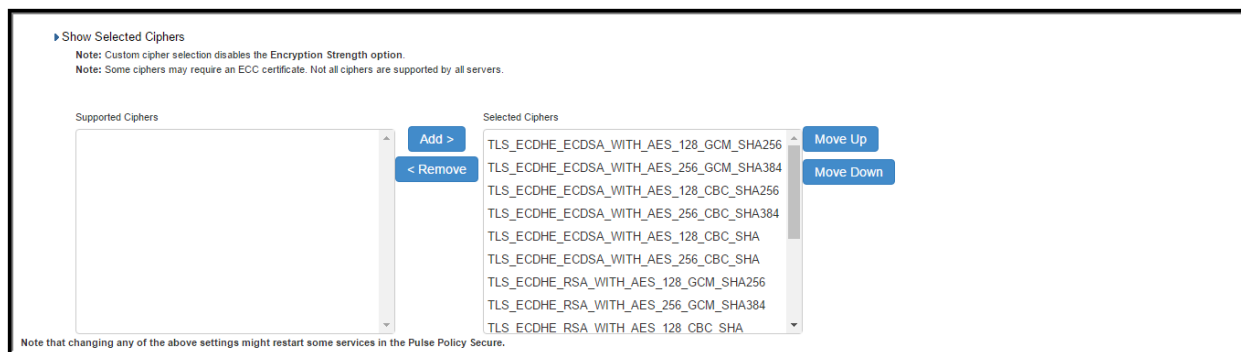

Using the Management Port

This topic describes how to configure the management port. It includes the following information:

- [Management Port Overview](#)
- [Supported Platforms](#)
- [Configuring the Management Port](#)
- [Using the Serial Console to Configure the Management Port](#)
- [Configuring Administrator Access](#)

Management Port Overview

You connect the management port to an Ethernet switch or router that is part of your internal local area network (LAN) and that can connect to your network management infrastructure. When the management port is enabled, the following traffic is directed out the management port: archiving (FTP/SCP), NTP, push config, SNMP, syslog. When the management port is not enabled, that traffic uses the internal port.

Supported Platforms

The following hardware platforms are equipped with a management port:

PSA Series

Configuring the Management Port

To configure the management port:

1. Select System > Network > Management Port > Settings to display the configuration page.
2. Complete the configuration as described below.

3. Save your changes.

Figure469: PPS Management Port Configuration Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Network > Management > Management Port - Settings

Management Port - Settings

Network Settings
Management Port - Settings

Overview Internal Port External Port **Management Port** VLANs Routes Hosts Load Balancer

Settings ARP Cache NO Cache

Enter the network settings and click the Save Changes button at the bottom of the page.

Use Port

☐ Enabled ☒ Disabled

When the management port is enabled, the following traffic is directed out the management port: syslog, SNMP traps, SNMP queries, NSM, NTP, FTP/SCP archiving and Push Config.

IPv4 Settings

*IP Address:

*Netmask:

*Default Gateway:

Note: If you need to specify static routes, you can do so on the [Static Routes](#) page.

IPv6 Settings

☐ Enable IPv6 ☒ Disable IPv6

Note: Changing above setting might restart some services. This restart might drop all the connections to the Pulse Connect Secure.

Link Local Address:

*IPv6 Address:

*Prefix Length: (1 to 128)

*Default Gateway:

Advanced Port

MAC Address: 00:18:7D:22:48:C1

Link Speed:

*ARP Ping Timeout: seconds 3 to 300 seconds

*MTU: bytes Maximum Transmission Unit. If IPv6 is enabled (1280 to 1500), else (576 to 1500).

Default VLAN ID:

Default VLAN ID for the traffic for this port.
WARNING: Adding VLAN ID may break connectivity unless corresponding switch port is configured to handle tagged traffic.

Save Changes

Table77: Management Port Configuration Guidelines

| Settings | Guidelines |
|-----------------|--|
| Use Port? | |
| Use Port? | Select Enabled to use the port; otherwise, select Disabled. |
| IPv4 Settings | |
| IP Address | Specify an IP address. An IP address is an identifier for a computer or device on a TCP/IP network. Networks using the TCP/IP protocol route messages based on the IP address of the destination. The format of an IPv4 address is a 32-bit numeric address written as four numbers separated by periods. Each number can be 0 to 255. |
| Netmask | A netmask indicates which part of an IP address indicates network identification and which part indicates the host identification. For example, the IP address and netmask 10.20.30.1 255.255.255.0 (or 10.20.30.1/24) refer to all the hosts in the 10.20.30.0 subnet. The IP address and netmask 10.20.30.1 255.255.255.255 (or 10.20.30.1/32) refer to a single host. |
| Default Gateway | Specify the IPv4 address for the default gateway for the routing domain to which the device belongs. A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway. |

| Settings | Guidelines |
|----------------------------|---|
| IPv6 Settings | |
| Enable IPv6 / Disable IPv6 | <p>Disabled by default. Enable to support network management traffic over IPv6 networks.</p> <p>When you enable IPv6, the system acquires a link local address.</p> <p>If you switch from enabled to disabled, the system clears the link local address.</p> |
| Link Local Address | Display the auto configured link local address (after you have enabled and saved the IPv6 configuration). |
| IPv6 Address | Specify a routable IPv6 address, such as a global unicast address that your network plan has provisioned for this host and interface. Automatic configuration methods are not supported. You must specify the appropriate address manually. |
| Prefix Length | Specify how many of the higher-order contiguous bits of the IPv6 address comprise the prefix (the network portion of the IPv6 address). The default is 64. |
| Gateway | <p>Specify the IPv6 address for the default gateway for the routing domain to which the device belongs.</p> <p>A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway.</p> |
| Advanced Settings | |
| MAC Address | Display the MAC address for the interface. |
| Link Speed | <p>Specify the speed and duplex combination for the interface.</p> <p>If you run <code>SNMP_GET</code> and then change the Link Speed value, you must wait at least 5 minutes after submitting the change before running <code>SNMP_GET</code> again.</p> |
| ARP Ping Timeout | <p>(IPv4 only.) Specify how long the system should wait for responses to Address Resolution Protocol (ARP) requests before timing out. Cluster nodes send ARP requests to the gateways of other nodes to determine if they are properly communicating with one another.</p> <p>If you have not deployed a cluster, the system does not use this setting. If the node belongs to a cluster, the timeout interval that you specify is synchronized across the cluster. In multisite clusters, you can override this setting for the individual nodes in the cluster using options in the System > Clustering page. Use caution when changing this setting in active/passive clusters, however, because the system also uses the ARP Ping Timeout setting on the Internal tab as a failover timer for the VIP.</p> |
| MTU | <p>Specify the maximum transmission unit.</p> <p>If IPv6 is enabled, the valid range is 1280 to 1500. If IPv6 is not enabled, the valid range is 576 to 1500.</p> <p>We recommend you retain the default MTU setting (1500) unless you must change the setting for troubleshooting purposes.</p> |
| Default VLAN ID | <p>(Optional) Specify the default VLAN ID for the traffic of this port. When this parameter is set, all the traffic on this interface is subsequently tagged with the set VLAN ID and also accepts only incoming traffic with the same tag. Necessary changes are required on the connected switch port to handle bi-directional tagged traffic.</p> <p>Note:</p> <ul style="list-style-type: none"> If default VLAN ID is set incorrectly or the connected switch port is not configured accordingly, the interface can become unreachable. Default VLAN ID cannot be set if IPv6 is enabled. Default VLAN ID is not supported in a clustered environment. In case of VMware ESXi based Virtual Appliance(VA), set the vSwitch configuration to port 4095 to allow PPS to tag the traffic. The set default VLAN ID should be added as a member in the physical port of switch and the same VLAN should be removed from native VLAN ID. |

Using the Serial Console to Configure the Management Port

To configure management port network settings from the serial console:

1. Start a serial console session.
2. Select item 1, System Settings and Tools.
3. Select item 10, Configure Management port. The text indicates if the option is enabled or disabled.
4. Enter the network settings for the Management Port, as prompted.



NOTE: If you enable the Management Port but neglect to configure the IP address and netmask, the port reverts to a disabled state. Also, you cannot clear Management Port settings from the serial console when the port is disabled, though you can clear them from within the admin console.

5. When prompted to accept the changes, if they are correct, enter y. Otherwise, repeat the process to correct the settings.
6. Close the serial console.

Configuring Administrator Access

You can configure the Administrators > Admin Realm > Authentication Policy > Source IP restrictions configuration to enable administrator sign-in through the management port.

You can use Administrator realms to control administrator access to system ports, including the management port.

To control administrator access to the management port:

Enable the management port.

1. Perform one of the following steps:
 - Select Administrators > Admin Realms > Admin Users to modify the default admin users realm.
 - Select Administrators > Admin Realms, then click New, to create a new administrator realm.
2. Select the Authentication Policy > Source IP.
3. Select one of the following options:
 - Allow users to sign in from any IP address—Allows users to sign in from any IP address to satisfy the access management requirement.
 - Allow or deny users from the following IP addresses—Specifies whether to allow or deny users access from all the listed IP addresses, based on their settings.

To specify access from an IP address:

- Enter the IP address and netmask.
 - Select either Allow to allow users to sign in from the specified IP address, or Deny to prevent users from signing in from the specified IP address.
4. Select the available options to allow administrators to sign in to all available ports, to the management port or the internal port only, or to restrict them from signing in to any of the ports. In some cases, you may inadvertently limit administrative access completely. If this occurs, you can reconfigure the ports by way of the serial console.
 5. Select from the following available options:
 - Enable administrators to sign in on the management port.
 - Enable administrators to sign in on the internal port.
 - Enable administrators to sign in on the external port.

Figure470: Configuring Administrator Access

Pulse Secure System Authentication **Administrators** Users Endpoint Policy Maintenance Wizards

Admin Realm > Admin Users > Authentication Policy > Source IP

Source IP

General **Authentication Policy** Role Mapping

Source IP Browser Certificate Password Host Checker Limits

* Allow users to sign in from any IP address
 @ Allow or deny users from the following IP addresses:

Delete [X] [X]

| IP v4/v6 Address | Netmask/Prefix Length | Allow/Deny |
|----------------------|-----------------------|----------------|
| <input type="text"/> | <input type="text"/> | * Allow @ Deny |
| <input type="text"/> | <input type="text"/> | |
| <input type="text"/> | <input type="text"/> | |

Add

Note: This restriction will not be enforced if no IP addresses are listed. Add one or more source IP addresses from which users are allowed to sign in or denied access.

Administrator sign in ports

External Port is not enabled.
 Management Port is not enabled.

☒ Enable administrators to sign in on the Management Port
☒ Enable administrators to sign in on the Internal Port
☐ Enable administrators to sign in on the External Port

Save Changes

Configuring VLAN Ports

Your network design might include VLANs to provide network segmentation. When connected to a trunk port on a VLAN-enabled switch, the system encounters traffic from all VLANs. This is useful for network designs with separate VLANs for separate classes of users or endpoints, and for making the system accessible from all VLANs. You can use RADIUS attributes to place different users in different network segments.

The system supports IEEE 802.1Q VLAN tagging. You must define a VLAN port for each VLAN. The internal port must be assigned to the root system and must be marked as the default VLAN. Routes to servers reachable from the VLAN interfaces must have the next-hop gateway set to the configured gateway for the VLAN interface, and must have the output port defined as the VLAN port.

When you save the configuration for a new VLAN port, the system creates two static routes by default:

- The default route for the VLAN pointing to the default gateway.
- The interface route to the directly connected network.

To configure a VLAN port:

1. Select **System > Network > VLANs**.
2. Click New Port to display the configuration page.
3. Complete the configuration as described in table below.
4. Save your changes.

Figure471: VLAN Port Configuration Page

Pulse Secure Pulse Policy Secure on PPS-122

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Overview Internal Port External Port **VLANs** Routes Hosts Load Balancer

Settings Virtual Ports ARP Cache

Enter the network settings and click the Save Changes button at the bottom of the page.

Use Port

☒ Enabled ☐ Disabled

VLAN Settings

Port Name: VLAN60 Name of the VLAN port. Only alphanumeric characters, "-", or "_" are allowed. You cannot edit the port name unless you chose clusterwide settings

VLAN ID: 60 1-4094. You cannot edit the VLAN ID unless you chose clusterwide settings

IPv4 Settings

*IP Address:

*Netmask: 255.255.252.0 You cannot edit the netmask unless you chose clusterwide settings

*Default Gateway: 10.204.88.1 You cannot edit the default gateway unless you chose clusterwide settings

Note: If you need to specify static routes, you can do so on the [Static Routes](#) page.

IPv6 Settings

☒ Enable IPv6 ☐ Disable IPv6

Note: Changing above setting might restart some services. This restart might drop all the connections to the Pulse Connect Secure.

Link Local Address: Link Local address is not yet available. Please refresh the page again to view the address.

*IPv6 Address:

*Prefix Length: 64 (1 to 128)

*Default Gateway: fda8:6c3:ce53:a890::1

[Save Changes](#) [Cancel](#)

Table78: VLAN Port Configuration Guidelines

| Settings | Guidelines |
|-----------------|---|
| Use Port? | |
| Use Port? | Select Enabled to use the port; otherwise, select Disabled. |
| VLAN Settings | |
| Port Name | Specify a name that is unique across all VLAN ports that you define on the system or cluster. Only alphanumeric characters, "-", or "_" are allowed. |
| VLAN ID | Specify a number between 1 and 4094. The VLAN ID assignment must be unique on the system. |
| IPv4 Settings | |
| IP Address | Specify an IP address and netmask combination that is from the same network as the VLAN. VLAN IP addresses must be unique. You cannot configure a VLAN to have the same network as the internal port. For example, if the internal port is 10.64.4.30/16 and you configure a VLAN as 10.64.3.30/16, you might get unpredictable results and errors. The format of an IPv4 address is a 32-bit numeric address written as four numbers separated by periods. Each number can be 0 to 255. |
| Netmask | Specify a netmask. A netmask indicates which part of an IP address indicates network identification and which part indicates the host identification. For example, the IP address and netmask 10.20.30.1 255.255.255.0 (or 10.20.30.1/24) refer to all the hosts in the 10.20.30.0 subnet. The IP address and netmask 10.20.30.1 255.255.255.255 (or 10.20.30.1/32) refer to a single host. |
| Default Gateway | Specify the IPv4 address for the default gateway for the routing domain to which the device belongs. A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway. |

| Settings | Guidelines |
|-----------------|---|
| IPv6 Settings | |
| IPv6 settings | Select Enable IPv6 to use the port; otherwise, select Disable IPv6. |
| IPv6 Address | Specify a routable IPv6 address, such as a global unicast address that your network plan has provisioned for this host and interface. Automatic configuration methods are not supported. You must specify the appropriate address manually. |
| Prefix Length | Specify how many of the higher order contiguous bits of the IPv6 address comprise the prefix (the network portion of the IPv6 address). The default is 64. |
| Default Gateway | Specify the IPv6 address for the default gateway for the routing domain to which the device belongs. A gateway is the router that resides at the point of entry to the current routing domain, often called the default gateway. |

**NOTE:**

- Link speed, ARP ping timeout, and MTU settings are inherited from the internal port configuration.
- To configure an external VLAN port, Select **System > Network > VLANs > External Port > New VLAN Port - Settings**.
- To configure a Management port, Select **System > Network > VLANs > Management Port > New VLAN Port - Settings**.

Using Virtual Ports

This topic describes virtual ports. It includes the following information:

- [Configuring Virtual Ports](#)
- [Using Device Certificates with Virtual Ports](#)

Configuring Virtual Ports

You can use virtual ports to provide different groups of users access to the same system using different IP aliases and domains.

Virtual ports are associated with the physical internal port and physical external port. The virtual port shares all the network settings with the associated physical port, except for the IP address.

When you configure virtual ports, you are creating name-IP address pairs. The names and IP addresses must be unique in your network. An alias can include IPv4 addresses, IPv6 addresses, or both. However, the corresponding IP protocol must be enabled on the physical port for the addresses to take effect.

To configure a virtual port:

1. Select **System > Network > PortName > Virtual Ports**. PortName is Internal Port or External Port.
2. Click New Port to display the configuration page.
3. Complete the configuration as described in table below.
4. Save your changes.

Figure472: Virtual Port Configuration Page

Table 79: Virtual Port Configuration Guidelines

| Settings | Guidelines |
|---------------|--|
| Name | Specify a name for the virtual port. The names and IP addresses in the virtual port configuration must be unique in your network. |
| Physical Port | Display the name of the physical port associated with the virtual port. The virtual port inherits link speed, ARP ping timeout, and MTU settings from the physical port configuration. |
| IPv4 Address | Specify an IPv4 address. An alias can include IPv4 addresses, IPv6 addresses, or both. However, the corresponding IP protocol must be enabled on the physical port for the addresses to take effect. |
| IPv6 Address | Specify an IPv6 address. An alias can include IPv4 addresses, IPv6 addresses, or both. However, the corresponding IP protocol must be enabled on the physical port for the addresses to take effect. |

Using Device Certificates with Virtual Ports

Virtual ports can be used to create multiple fully qualified domain names for user sign-in. When a user tries to sign in using the IP address defined in a virtual port, the system presents the certificate associated with the virtual port to initiate the SSL transaction.

You can approach the digital certificate security and virtual ports implementation in either of the following ways:

- Associate all hostnames with a single certificate—With this approach, you use a single wildcard certificate to validate the identity of all system hostnames, regardless of which hostname is used to sign in. A wildcard certificate includes a variable element in the domain name, making it possible for users who sign in from multiple hosts to map to the “same” domain. For example, if you create a wildcard certificate for *.yourcompany.com, the system uses the same certificate to validate its identity to users who sign in to employees.yourcompany.com as it does to users who sign into partners.yourcompany.com.
- Associate each hostname with its own certificate—With this approach, you associate different hostnames with different certificates. Create a virtual port for each hostname. A virtual port activates an IP alias on a physical port. For example, you can create two virtual ports on a single appliance, mapping the first virtual port to the IP address 10.10.10.1 (sales.yourcompany.com) and the second virtual port to the IP address 10.10.10.2 (partners.yourcompany.com). Then you can associate each of these virtual ports with its own certificate, ensuring that users authenticate through different certificates.

To associate certificates with virtual ports:

1. Create virtual ports.
2. Import the device certificates.
3. Associate the device certificates with the virtual ports:
 - a. Select System > Configuration > Certificates > Device Certificates.
 - b. Click the link of the device certificate you want to configure to display the configuration page.
 - c. Use the controls in the “Present certificate on these ports” section to associate ports with the certificate.

Configuring the System Date and Time

You can use the admin console to set the system date and time manually or by configuring a network time protocol (NTP) server. The system supports NTPv4, which is backwards compatible with NTPv3 and NTPv2.



BEST PRACTICE: We recommend you use NTP to synchronize the date and time clocks on all network systems. Using NTP obviates issues that might occur with cluster synchronization, network communication that uses time-sensitive protocols, such as SAML, and implementation of time-based policies, such as local authentication server account expiration. In addition, using NTP as a standard in your network rationalizes timestamps in logs, which facilitates reporting and troubleshooting.

On a VMware virtual appliance, the data may be erased each hour if the same NTP server is not defined on the license server, and on the ESXi server.

To set the system date and time:

1. Select System > Status to display the System Status dashboard.
2. Click the System Date and Time Edit link to display the configuration page.
3. Complete the configuration as described below
4. Save the configuration.

Table80: Date and Time Configuration Guidelines

| Settings | Guidelines |
|----------------------|---|
| Time Zone | Select your time zone. Selecting the appropriate time zone enables the system to automatically adjust the time for Daylight Saving Time changes. |
| Use NTP Server | |
| NTP Server | Specify the fully qualified domain name or IP address for the NTP server. |
| Key | <p>If you are using NTPv4, specify the symmetric key.</p> <p>The key must be pre-synchronized with the NTP server. For example, if you want to configure NIST's clock as the NTP server, you must request a key beforehand and have NIST send that key to you.</p> <p>The key for MD5 is in the following format:</p> <p><i>KeyNumber M KeyValue</i></p> <p>The key for SHA1 is in the following format:</p> <p><i>KeyNumber SHA1KeyValue</i></p> |
| Secondary NTP Server | <p>Specify the fully qualified domain name or IP address for a secondary NTP server.</p> <p>If the system fails three times to reach the primary server or if the authentication fails three times, the system attempts to contact the secondary NTP server.</p> |
| Key | If you are using NTPv4, specify the symmetric key. |
| Update Interval | Specify an update interval. The maximum interval is 999999 (enforced by the user interface). |
| Set Time Manually | |
| Date | Specify the date. You can click Get from Browser to automatically populate the Date and Time fields. |
| Time | Specify the time and select AM or PM. |

Configuring Network Services

You configure DNS and WINS services when you initially configure the system with the serial console. If necessary, you can use the System > Network > Overview page to modify the configuration. You can also use this page to configure a hostname.

The network services overview page also displays the node name (if the node belongs to a cluster), and the status and interface statistics for the internal port, external port, and management port.

To configure network services:

1. Select System > Network > Overview to display the configuration page.
2. Complete the configuration as described below.
3. Save your changes.

Figure473: Network Services Configuration Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Network > Overview

Overview Network Settings Overview

Overview Internal Port External Port Management Port VLANs Routes Hosts

Enter the network settings and click the Save Changes button at the bottom of the page.

Status

Internal Port: Connected, Speed: 10000Mb/s, Duplex: full
 RxPacket: 348407 RxError: 0 RxDrop: 0 RxMulticast: 139
 TxPacket: 21934 TxError: 0 TxDrop: 0 TxMulticast: 0

External Port: Disconnected, Speed: Unknown, Duplex: Unknown
 RxPacket: 0 RxError: 0 RxDrop: 0 RxMulticast: 0
 TxPacket: 0 TxError: 0 TxDrop: 0 TxMulticast: 0

Management Port: Disabled

Network Identity

Hostname: Fully-qualified hostname (example: device.domain.com)

DNS name resolution

Primary DNS: IPv4/IPv6 address

Secondary DNS: IPv4/IPv6 address

DNS Domain(s): Example: "company.com, company.net"

Preferred DNS Response: ☒ IPv4 ☐ IPv6

Note: If you need to resolve names without using DNS, you can do so on the Hosts page.

Windows networking

WINS: Name or IP address

Save Changes

Table81: Network Services Configuration Guidelines

| Settings | Guidelines |
|------------------|---|
| Status | |
| Status | Display interface statistics for the internal port, external port, and management port. |
| Network Identity | |
| Hostname | Specify a fully qualified hostname. For example, domain.company.com. The hostname cannot exceed 30 characters |

| Settings | Guidelines |
|------------------------|--|
| DNS Name Resolution | |
| Primary DNS | Specify the IPv4/IPv6 address for the primary DNS server. |
| Secondary DNS | Specify the IPv4/IPv6 address for the secondary DNS server. |
| DNS Domain(s) | Specify a comma-separated list of default domains. The system searches the domains in the order they are listed. |
| Preferred DNS response | Determines the preferred DNS response from the DNS server. <ul style="list-style-type: none"> Select IPv4 if PPS sends and receives only IPv4 hostname resolution requests and responses from the DNS server. Select IPv6 if PPS sends and receives both IPv4 and IPv6 hostname resolution requests and responses from the DNS server. |
| Windows Networking | |
| WINS | Specify the hostname or IP address of a local or remote Windows Internet Naming Service (WINS) server that you use to associate workstation names and locations with IP addresses. |

Managing the Routes Table

The system populates the routes table with dynamic, auto-discovered routes. Many networks will not require changes to this routing table. If necessary, you can delete routes or add static routes.

To manage the routes table:

1. Select System > Network > Routes to display the routes table.
2. Use the controls described in below table to manage the routes table.

Figure474: PPS Routes Table

| Controls | Description |
|----------------------|---|
| View route table for | Use the controls to change the display to show the route table for internal, external, or management interfaces; and for IPv4 or IPv6 routes. |
| Delete | Select a row in the table and click Delete to delete a route. |

Table82: Routes Table Controls

| Controls | Description |
|----------------------|---|
| View route table for | Use the controls to change the display to show the route table for internal, external, or management interfaces; and for IPv4 or IPv6 routes. |
| Delete | Select a row in the table and click Delete to delete a route. |

| Controls | Description |
|-----------|---|
| New Route | Click New Route and complete the configuration to add a route to the table. You must specify a valid IP address, gateway, DNS address, and metric. The metric is a way of comparing multiple routes to establish precedence. Generally, the lower the number (from 1 to 15), the higher the precedence. Thus, a route with a metric of 2 is chosen over a route with a metric of 14. The metric value of zero (0) identifies the route as one that should not be used. |

Managing the Hosts Table

In general, the system uses the configured DNS servers to resolve hostnames, but it also maintains a local hosts table that can be used for name resolution. The system populates some entries from host-IP address pair settings in your configuration. You can add host-IP address mappings for other hosts that might not be known to the DNS servers used by the system, or in cases where DNS is not reachable.

To manage the hosts table:

1. Select System > Network > Hosts to display the hosts table.
2. Figure475: PPS Hosts Table

3. Use the controls described in the below table to manage the hosts table.

Table83: Hosts Table Controls

| Controls | Description |
|----------|---|
| Add | Specify an IP address, hostname, and comment (a description for the benefit of system administrators), and click Add. |
| Delete | Click the delete icon in the last column to delete the row from the table. |


Managing the ARP Table

ARP stands for Address Resolution Protocol. In IPv4 networking, network nodes use ARP to maintain information about peer network nodes. ARP is used to associate the Layer 3 IP address with a Layer 2 MAC address of neighboring peer nodes. The system maintains an ARP table with dynamic, cached entries, and you can add static entries if necessary. The system caches dynamic entries for up to 20 minutes. Dynamic entries are deleted during a reboot. Static entries are restored after a reboot.

To manage the ARP table:

1. Select System > Network > *Port* > ARP Cache. *Port* is the Internal Port, External Port, or Management Port tab.

Figure476: PPS ARP Table

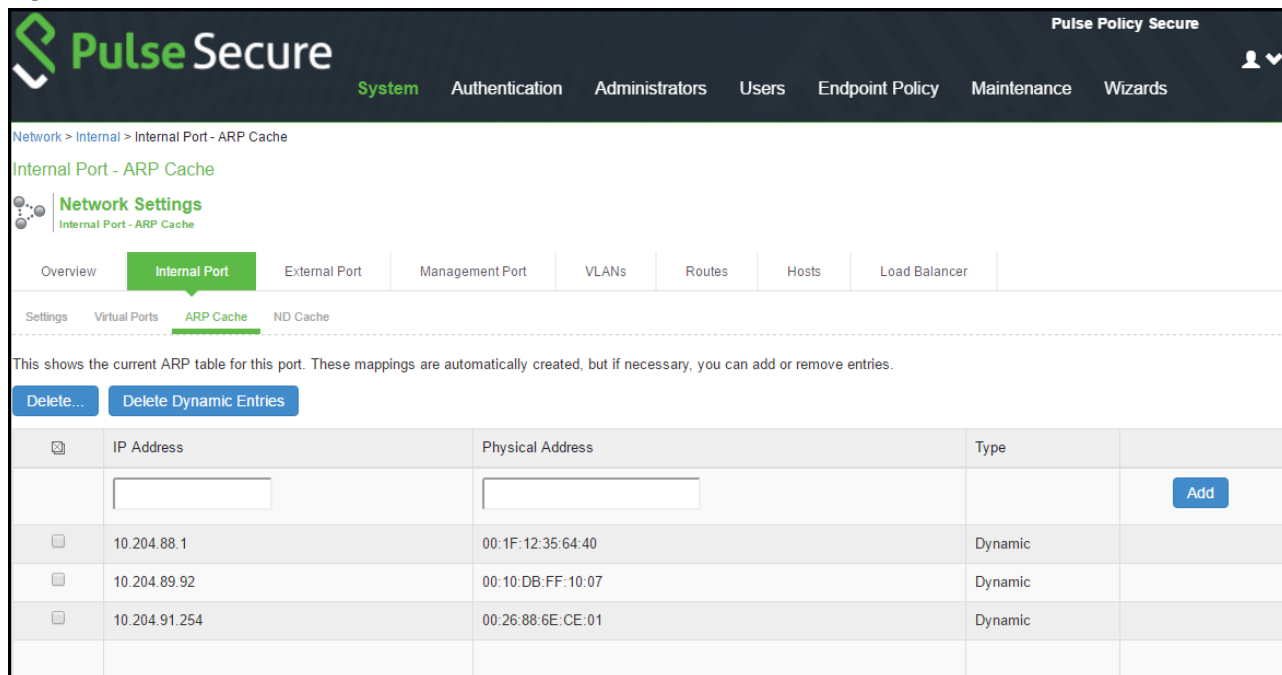

2. Use the controls described in table below to manage the ARP table.

Table84: ARP Table Controls

| Controls | Description |
|------------------------|---|
| Delete | Select a row in the table and click Delete to delete the entry. |
| Delete Dynamic Entries | Delete all dynamically discovered entries. |
| Add | Specify an IP address, a MAC address, and click Add to add an entry. If you add an entry that has the same IP address as an existing entry, the system overwrites the existing entry with your new entry. |

Managing the Neighbor Discovery Table

In IPv6 networking, network nodes use the [Neighbor Discovery Protocol \(NDP\)](#) to determine the Layer 2 MAC addresses for neighboring hosts and routers. The system uses NDP to maintain a cache of neighboring routers that are reachable and can forward packets on its behalf.

To manage the neighbor discovery table:

1. Select System > Network > *Port* > ND Cache. *Port* is the Internal Port, External Port, or Management Port tab.
2. Select **Flush NDP Entries** to delete all dynamically discovered entries.

Figure477: PPS Neighbor Discovery Table

Configuring SSL Options

Use the System > Configuration > Security > SSL Options page to change the default security settings. We recommend that you use the default security settings, which provide maximum security, but you may need to modify these settings if your users cannot use certain browsers or access certain Web pages.

TLS_DHE_RSA_WITH_AES_128_CBC_SHA TLS_DHE_RSA_WITH_AES_256_CBC_SHA cipher suites are supported. Both these ciphers use RSA for server authentication and ephemeral Diffie-Hellman (DHE) for key exchange. RSA server certificate is required for these ciphers. Only TLS_DHE_RSA_WITH_AES_256_CBC_SHA is available with the Accept 168-bit and greater option. In the Custom SSL Cipher configuration, TLS_DHE_RSA_WITH_AES_128_CBC_SHA is available only when AES-Medium is selected and TLS_DHE_RSA_WITH_AES_256_CBC_SHA is available only when AES-High is selected. Both ciphers are lower in priority over the other widely used cipher suites.

Enabling Granular Cipher Selection for Setting the Security Options

Granular cipher selection provides an administrator the ability to select specific ciphers and the preferred ordering of the selected ciphers. This feature also provides presets like Suite-B and PFS. There are two tabs, Inbound OpenSSL options and Outbound OpenSSL options. With this feature the administrator can select the ciphers that TLS/SSL connections will use. The Inbound OpenSSL options apply to all incoming connections. Outbound OpenSSL options apply to the following services:

- SCEP
- Syslog
- LDAPS
- Start TLS



NOTE: FIPS Mode Settings is common for both Inbound and Outbound SSL Options.

A common cipher library has been added which can be used by both, the inbound and outbound connections. The outbound options are listed in a separate tab next to the inbound settings. The outbound settings have presets for High and Medium ciphers along with custom options. There is no PFS or SuiteB presets on the outbound side. From 5.3R3 release onwards, support for preset Low has been removed and the same can be configured using Custom SSL Cipher Selection option. For the SuiteB preset to work, PPS should have ECC Device Certificate mapped to Internal or External Port. SuiteB preset does not work if the ECC Device Certificate is mapped only to virtual port.


Enabling Inbound SSL Options

Only when FIPS mode is turned on, the FIPS compliant ciphers are available to be chosen from the Supported Ciphers panel. FIPS mode is editable only on the inbound option page.

To set the security options with Inbound SSL options:

1. In the admin console, select System > Configuration > Security > Inbound SSL Options.
2. Under Allowed Encryption Strength choose Custom SSL Cipher Selection.

Figure478: Setting Custom SSL Cipher Selections

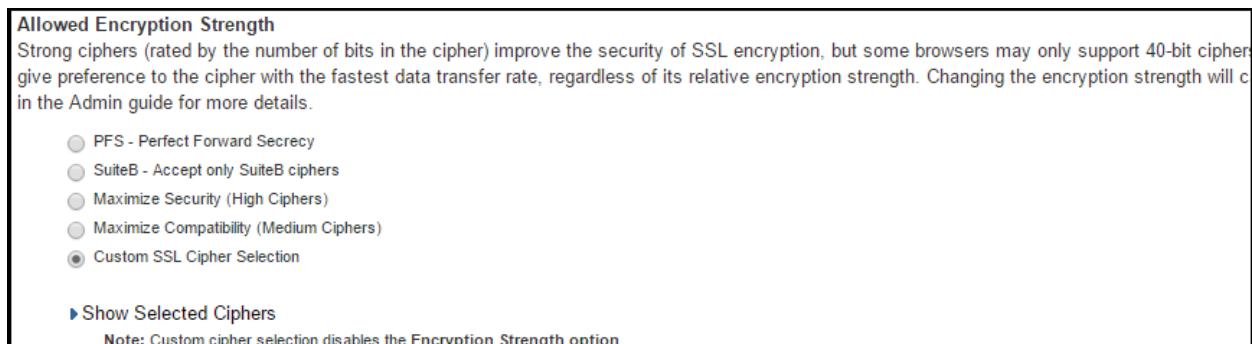

Allowed Encryption Strength

Strong ciphers (rated by the number of bits in the cipher) improve the security of SSL encryption, but some browsers may only support 40-bit ciphers. When there is more than one acceptable cipher, the Pulse Connect Secure will give preference to the cipher with the fastest data transfer rate, regardless of its relative encryption strength. Changing the encryption strength will cause the web service to restart. Please see the Setting Security Options section in the Admin guide for more details.


- ☐ PFS - Perfect Forward Secrecy
- ☐ SuiteB - Accept only SuiteB ciphers
- ☐ Maximize Security (High Ciphers)
- ☐ Maximize Compatibility (Medium Ciphers)
- ☒ Custom SSL Cipher Selection

[Show Selected Ciphers](#)

Note: Custom cipher selection disables the Encryption Strength option.

3. The two panels of **Supported Ciphers** and **Selected Ciphers** are displayed. Supported ciphers has the entire list of ciphers supported for the selected SSL or TLS version. Selected ciphers list the currently selected ciphers list. The below figure shows the two panels (Supported Ciphers and Selected Ciphers). Note that the Selected Ciphers and Supported Ciphers List will also be displayed for all Preset like PFS or SuiteB or Medium or High.

Figure479: Supported Ciphers and Selected Ciphers Panels

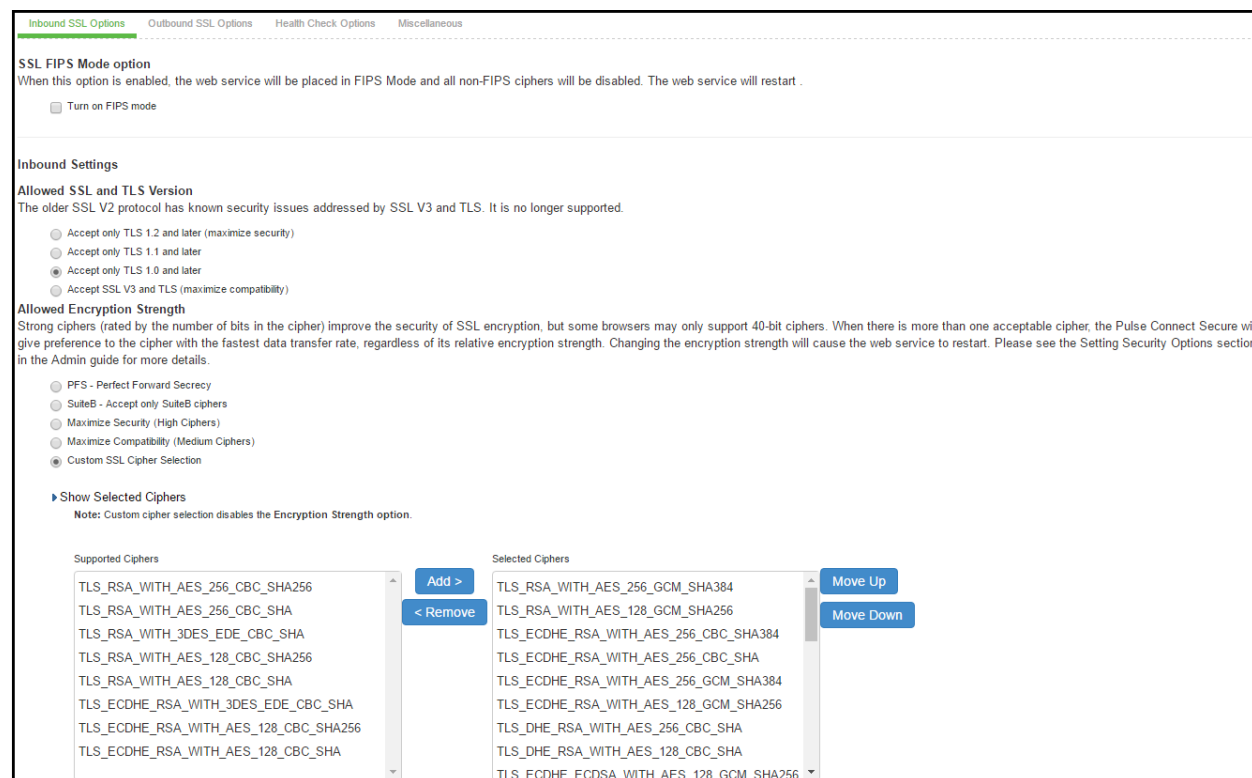

Inbound SSL Options | Outbound SSL Options | Health Check Options | Miscellaneous

SSL FIPS Mode option
When this option is enabled, the web service will be placed in FIPS Mode and all non-FIPS ciphers will be disabled. The web service will restart.

☐ Turn on FIPS mode

Inbound Settings

Allowed SSL and TLS Version
The older SSL V2 protocol has known security issues addressed by SSL V3 and TLS. It is no longer supported.

- ☐ Accept only TLS 1.2 and later (maximize security)
- ☐ Accept only TLS 1.1 and later
- ☒ Accept only TLS 1.0 and later
- ☐ Accept SSL V3 and TLS (maximize compatibility)

Allowed Encryption Strength
Strong ciphers (rated by the number of bits in the cipher) improve the security of SSL encryption, but some browsers may only support 40-bit ciphers. When there is more than one acceptable cipher, the Pulse Connect Secure will give preference to the cipher with the fastest data transfer rate, regardless of its relative encryption strength. Changing the encryption strength will cause the web service to restart. Please see the Setting Security Options section in the Admin guide for more details.

- ☐ PFS - Perfect Forward Secrecy
- ☐ SuiteB - Accept only SuiteB ciphers
- ☐ Maximize Security (High Ciphers)
- ☐ Maximize Compatibility (Medium Ciphers)
- ☒ Custom SSL Cipher Selection

[Show Selected Ciphers](#)
Note: Custom cipher selection disables the Encryption Strength option.

Supported Ciphers

- TLS_RSA_WITH_AES_256_CBC_SHA256
- TLS_RSA_WITH_AES_256_CBC_SHA
- TLS_RSA_WITH_3DES_EDE_CBC_SHA
- TLS_RSA_WITH_AES_128_CBC_SHA256
- TLS_RSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_RSA_WITH_3DES_EDE_CBC_SHA
- TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA256
- TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA

Add > < Remove


Selected Ciphers

- TLS_RSA_WITH_AES_256_GCM_SHA384
- TLS_RSA_WITH_AES_128_GCM_SHA256
- TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA384
- TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA
- TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384
- TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256
- TLS_DHE_RSA_WITH_AES_256_CBC_SHA
- TLS_DHE_RSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256

Move Up Move Down


1. For adding a cipher, click the cipher string on the left panel and then click **Add** or double click the cipher name in the left panel.
2. To remove the cipher, click the cipher name on the right panel and then click **Remove** or double click on the cipher name on the right side.
3. The selected ciphers on the right are listed in order of their priority from top to bottom. To change the priority of the ciphers, click on the cipher name and then click on **Move Up** to increase priority or the **Move Down** button to decrease the priority.

Figure480: Setting Custom SSL Cipher Selections

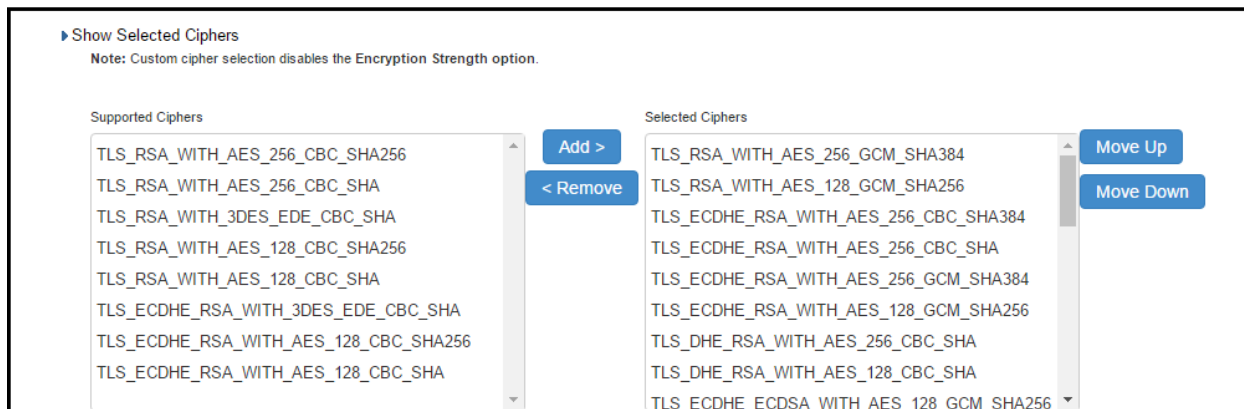

A list of the custom ciphers to be used on the device's port is displayed in the order the web server will select them. Note that Suite B ciphers are listed on top. End users who now log in to external virtual port p_ecdsa256 must have at least one of the listed ciphers installed on their browser or else they cannot log in to the server.

Figure481: Confirming Custom Ciphers

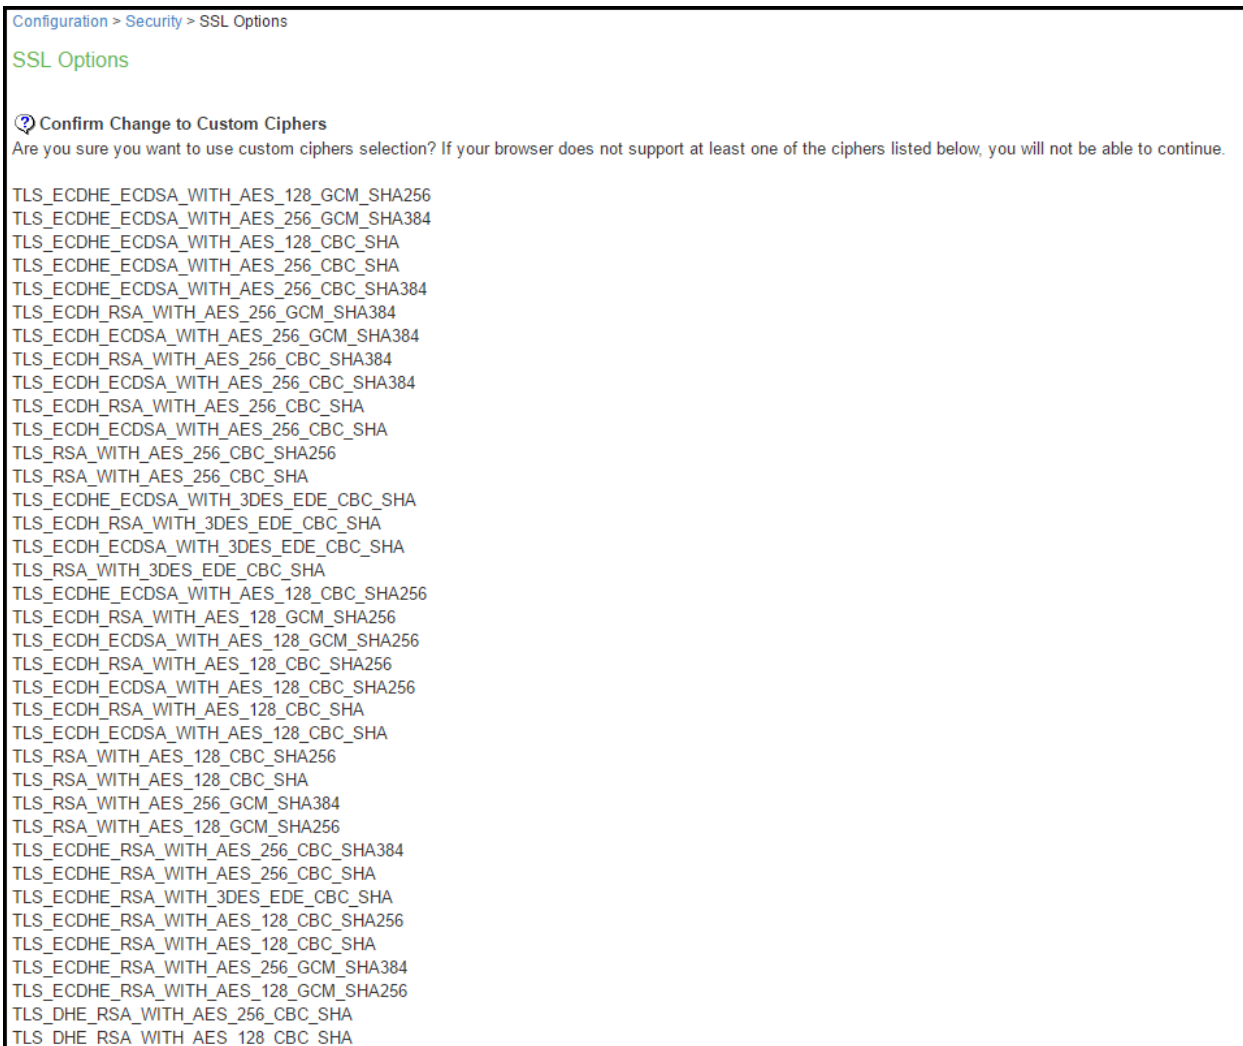

- Click Change Allowed Encryption Strength.




NOTE: When custom ciphers are selected, there is a possibility that some ciphers are not supported by the web browser. Also, if any of ECDH/ECDSA ciphers are selected, they require ECC certificate to be mapped to the internal/external interface. If ECC certificate is not installed, administrator may not be able to log in to the box. The only way to recover from this situation is to connect to the system console and select option 8 to reset the SSL settings from the console menu. Option 8 resets the SSL settings to its default. So, the previously set SSL settings are lost. This is applicable only to Inbound SSL settings.

Enabling Outbound SSL Options

We can configure non FIPS ciphers only for Outbound SSL Settings using Custom Cipher Selection option. There are options to change different SSL/TLS versions and different encryptions in the Outbound SSL Settings. The below figure shows the Outbound SSL Settings.

Figure482: Outbound SSL Settings

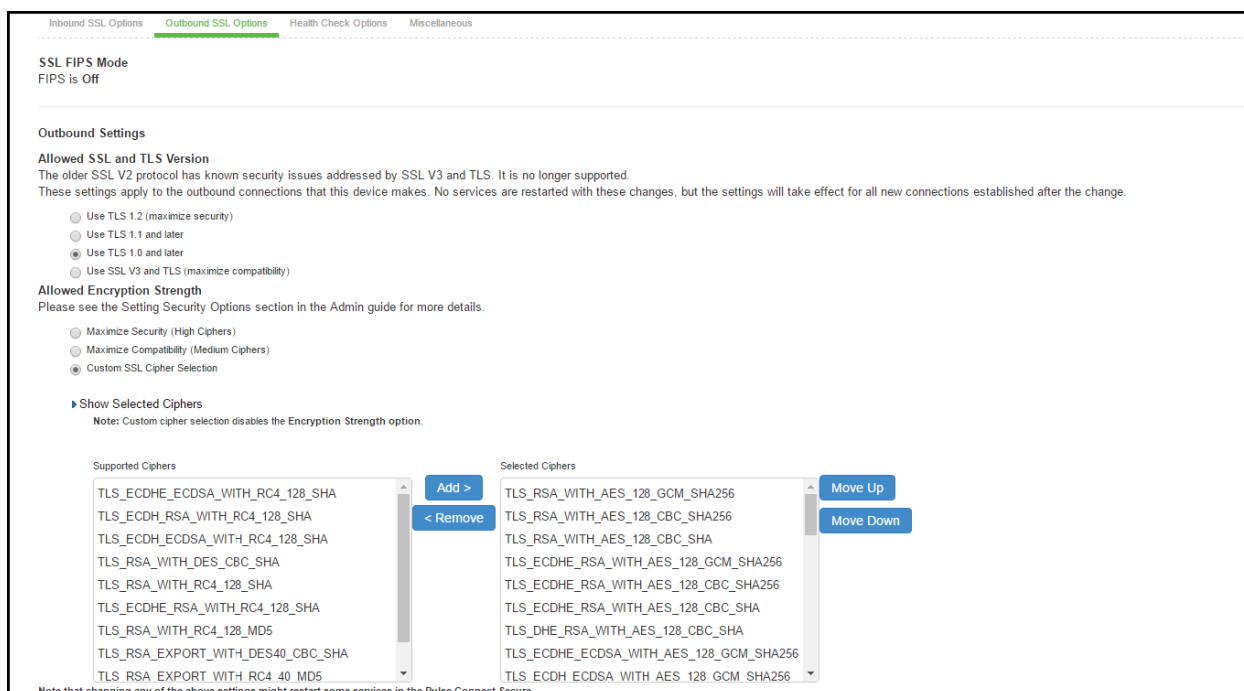

Inbound SSL Options **Outbound SSL Options** Health Check Options Miscellaneous

SSL FIPS Mode
FIPS is Off

Outbound Settings

Allowed SSL and TLS Version
The older SSL V2 protocol has known security issues addressed by SSL V3 and TLS. It is no longer supported. These settings apply to the outbound connections that this device makes. No services are restarted with these changes, but the settings will take effect for all new connections established after the change.

☐ Use TLS 1.2 (maximize security)
☐ Use TLS 1.1 and later
☒ Use TLS 1.0 and later
☐ Use SSL V3 and TLS (maximize compatibility)

Allowed Encryption Strength
Please see the Setting Security Options section in the Admin guide for more details.

☐ Maximize Security (High Ciphers)
☐ Maximize Compatibility (Medium Ciphers)
☒ Custom SSL Cipher Selection

► **Show Selected Ciphers**
Note: Custom cipher selection disables the Encryption Strength option.

Supported Ciphers

- TLS_ECDHE_ECDSA_WITH_RC4_128_SHA
- TLS_ECDH_RSA_WITH_RC4_128_SHA
- TLS_ECDH_ECDSA_WITH_RC4_128_SHA
- TLS_RSA_WITH_DES_CBC_SHA
- TLS_RSA_WITH_RC4_128_SHA
- TLS_ECDHE_RSA_WITH_RC4_128_SHA
- TLS_RSA_WITH_RC4_128_MD5
- TLS_RSA_EXPORT_WITH_DES40_CBC_SHA
- TLS_RSA_EXPORT_WITH_RC4_40_MD5

Selected Ciphers

- TLS_RSA_WITH_AES_128_GCM_SHA256
- TLS_RSA_WITH_AES_128_CBC_SHA256
- TLS_RSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256
- TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA256
- TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA
- TLS_DHE_RSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256
- TLS_ECDH_ECDSA_WITH_AES_128_GCM_SHA256

Note that changing any of the above settings might restart some services in the Pulse Connect Secure.

Table85: SSL Options Configuration Guidelines

| Settings | Guidelines |
|------------------------------|---|
| SSL FIPS Mode option | Turn on FIPS mode— Select this option to enable FIPS mode. |
| Allowed SSL and TLS Version | Specify encryption requirements for clients. By default, the system requires SSL version 3 and TLS. The system honors this setting for all Web server traffic and all types of clients. You can require users who have older browsers that use SSL version 2 to update their browsers, or you can change this setting to allow SSL version 3, and TLS. |
| Allowed Encryption Strength | <p>Accept only 168-bit and greater— If you select this option the system gives preference to 256-bit AES over 3DES.</p> <p>Accept only 128-bit and greater— (Default) If you select this option the system gives preference to RC4 ciphers. You can require users to have this level of encryption strength or change this default to an option compatible with the user base.</p> <p>Accept 40-bit and greater—If you select this option the system gives preference to RC4 ciphers.</p> <p>Older browsers that predate the change in the U.S. export law in year 2000 that required 40-bit cipher encryption for international export, can still use 40-bit encryption.</p> <p>Custom SSL Cipher Selection—Specify a combination of cipher suites for the incoming connection from the user's browser. If you select the AES/3DES option, the system gives preference to 256-bit AES over 3DES.</p> <p>NOTE: When using 168-bit encryption, some Web browsers may still show 128-bit encryption (the gold lock on the browser status bar) even though the connection is 168-bit. This is typically a limitation of the browser's capability.</p> |
| Encryption Strength option | The allowed encryption strength is enforced after an SSL session is established, so that a user connecting with a disallowed encryption strength receives a Web page describing the problem. Enable this option to prevent a browser with a weak cipher from establishing a connection. |
| SSL Handshake Timeout option | Determines the time elapse before the SSL handshake timeout. The default is 60 seconds. |

| Settings | Guidelines |
|---|--|
| SSL Legacy Renegotiation Support option | SSL and Transport Layer Security (TLS) renegotiations can be subjected to man-in-the-middle (MITM) attacks that can lead to abuse. A new TLS extension (defined in RFC 5746) ties renegotiations to the TLS connections they are being performed over to prevent these kinds of attacks. The SSL Legacy Renegotiation Support option is enabled by default and allows renegotiation between clients and servers even if they do not support the new TLS extension. Disable this option to not allow renegotiations between clients and servers that do not support the new TLS extension. A web server restart is required when you change the value of this option. |

Configuring Health Check Options

You can use the **System > Configuration > Security > Health Check Options** page to configure the following security options:

- Enable additional information via healthcheck.cgi—This option is used by entities like load balancers to monitor the health status of the node.

To configure health check options:

1. Select **System > Configuration > Security > Health Check Options** to display the configuration page.

Figure 483: Health Check Security Options Configuration Page

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Security > Health Check Options

Health Check Options

Configuration Security

Licensing Pulse One **Security** Certificates DMI Agent Sensors Client Types Guest Access

Inbound SSL Options Outbound SSL Options **Health Check Options** Miscellaneous

Health Check URL: https://<Pulse Policy Secure>/dana-na/healthcheck/healthcheck.cgi

This service can be used by entities like load balancers to monitor the health status of this node.
An HTTP return code of 200 indicates that the node is up and 500 indicates that it is unable to provide service.

☒ Enable additional information via healthcheck.cgi

A URL parameter 'status' needs to be passed to get additional information to the health check url.
Valid values for this parameter are 'all' (CPU Usage, number of active sessions etc.) and 'sbr' (SBR statistics).
The additional information will be available only to requests received from the below list of IP addresses.

Delete Save Changes

| IPv4/v6 Address | Netmask | |
|----------------------|----------------------|-----|
| <input type="text"/> | <input type="text"/> | Add |

2. Select the **Enable additional information via healthcheck.cgi** checkbox and **Save Changes**. A URL parameter 'status' needs to be passed to get additional information to the health check URL.
For more information about parameters such as CPU usage and number of active sessions use https://<Pulse Policy Secure>/dana-na/healthcheck/healthcheck.cgi?status=all.
For more information about SBR statistics use https://<Pulse Policy Secure>/dana-na/healthcheck/healthcheck.cgi?status=sbr
3. Enter the IPv4/v6 address of the load balancer and click **Add**.
4. Click **Save Changes**.

Configuring Miscellaneous Security Options

You can use the System > Configuration > Security > Miscellaneous page to configure the following security options:

- Persistent cookie options—Choose whether to preserve or delete persistent cookies when a session is terminated.
- Lockout options—You can configure lockout options to protect the system from denial of service (DoS), distributed denial of service (DDoS), and password-guessing attacks.

To configure cookie and lockout options:

1. Select System > Configuration > Security > Miscellaneous to display the configuration page.
2. Complete the configuration as described below.
3. Save the configuration.

Figure484: Miscellaneous Security Options Configuration Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Security > Miscellaneous

Miscellaneous

Configuration Security Certificates DM Agent Sensors Client Types Guest Access

Inbound SSL Options Outbound SSL Options Health Check Options Miscellaneous

Delete all cookies at session termination
 For convenience, some persistent cookies (the last realm cookie and the last sign-in URL cookie) are set on the user's machine. If you desire additional security or privacy, you may choose to not set them.
☐ Delete all cookies at session termination (increase security)
☒ Preserve cookies at session termination (maintain usability)

Lockout options
 The following settings determine how failed sign-in attempts are handled. When the number of allowed attempts is exceeded, the IP or MAC address that is used for sign-in will be temporarily locked to prevent automated sign-in attacks.

Rate: per minute (1-2147483647 Rate of failed attempts)
 Attempts: (2-2147483647 Initial trigger of failed attempts)
 Lockout period: minutes (1-10080 minutes)

Slow post attack defence
 The Pulse Policy Secure is vulnerable to a slow post HTTP attack, which is a kind of Denial-of-Service (DoS) attack in which the attacker slowly sends HTTP requests in small pieces, keeping server resources busy and making out concurrent connection pools. The following countermeasures are supported:
 1. Set a smaller maximum wait time (Timeout) for an unauthenticated post connection to complete.
 2. Set a smaller maximum request size. Unauthenticated requests exceeding set values will be dropped.
 NOTE: Very small values for either parameter may result in legitimate requests being dropped. The settings should minimally be slightly higher than lifetime statistical medians.

Timeout: Seconds (3 - 180 Seconds)
 Maximum request size: Bytes (256 - 524288 Bytes)

[Save Changes](#)

Table86: Miscellaneous Security Options Configuration Guidelines

| Settings | Guidelines |
|---|---|
| Delete all cookies at session termination | For convenience, the system sets persistent cookies on the user's machine to support functions such as multiple sign-in, last associated realm, and the last sign-in URL. For additional security or privacy, you can choose not to set them. |
| Lockout options | |
| Rate | Specify the number of failed sign-in attempts to allow per minute. |
| Attempts | Specify the maximum number of failed sign-in attempts to allow before triggering the initial lockout. The system determines the maximum initial time (in minutes) to allow the failed sign-in attempts to occur by dividing the specified number of attempts by the rate. For example, 180 attempts divided by a rate of 3 results in an initial period of 60 minutes. If 180 or more failed sign-in attempts occur within 60 minutes or less, the system locks out the IP address being used for the failed sign-in attempt. |
| Lockout period | Specify the length of time (in minutes) the system must lock out the IP address. |

The following scenario illustrates how lockout settings work. For example, assume the following settings:

- Rate = 3 failed sign-in attempts per minute
- Attempts = 180 maximum allowed in initial period of 60 minutes (180/3)

- Lockout period = 2 minutes

The following sequence illustrates the effect of these settings:

During a period of 3 minutes, 180 failed sign-in attempts occur from the same IP address. Because the specified value for Attempts occurs in less than the allowed initial period of 60 minutes (180/3), the system locks out the IP address for 2 minutes (fourth and fifth minutes).

In the sixth minute, the system removes the lock on the IP address and begins maintaining the rate of 3 failed sign-in attempts/minute. In the sixth and seventh minutes, the number of failed sign-in attempts is 2 per minute, so the system does not lock the IP address. However, when the number of failed sign-in attempts increases to 5 in the eighth minute, which is a total of 9 failed sign-in attempts within 3 minutes, the system locks out the IP address for 2 minutes again (ninth and tenth minutes).

3. In the eleventh minute, the system removes the lock on the IP address and begins maintaining the rate of 3 failed sign-in attempts per minute again. When the rate remains below an average of 3 per minute for 60 minutes, the system returns to its initial monitoring state.

Configuring Custom HTTP Headers

PPS supports several HTTP headers, which are sent in response to the client request. There are several more headers built to improve security and prevent attacks like XSS. The Custom HTTP Headers configuration enables the administrator to add new headers that they want to enforce.

To configure custom HTTP header:


1. Select **System > Configuration > Security > Advanced**.
2. In the Custom HTTP Headers section, enter the HTTP header name and the directives along with the values.
3. Click **Add**.
4. Multiple headers can be added or removed. After adding the headers, click **Save Changes**.



NOTE:

- Administrator should ensure the correctness of the values that they enter, as the system validation on the input values is limited.
- If the administrator configured HTTP header seems to affect the way the page is rendered or is locked out, use the console option to reset the custom HTTP header values.

Figure 485: Custom HTTP Headers Page

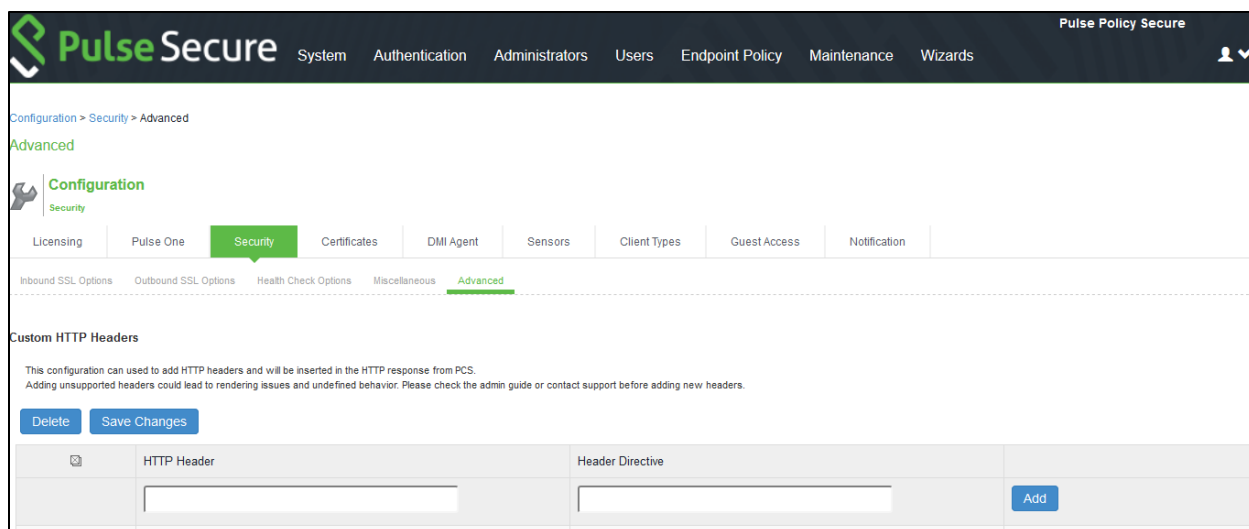

The following table lists the OWASP recommended headers.

| Header | Need PPS Web Server Changes | Supported Browsers |
|-----------------------------------|-----------------------------|-------------------------------|
| HPKP | Yes | Firefox, Chrome, Opera |
| X-XSS-Protection | No | Chrome and IE |
| X-Content-Type-Options | No | Firefox, Chrome, Opera and IE |
| Content-Security-Policy | Yes | All major browsers |
| X-Permitted-Cross-Domain-Policies | Yes | Not supported |
| Referrer-Policy | No | Chrome, Firefox and Opera |
| Expect-CT | No | Chrome and Opera |
| Feature-Policy | No | Not supported |
| HSTS | No | |
| X-Frame-Options | No | |

Using the Serial Port

This topic describes use of the serial port and serial port console. It includes the following information:

- [Connecting to the Serial Port Console](#)
- [Using the Serial Console to Roll Back to a Previous OS Version](#)
- [Using the Serial Console to Reset the System to the Factory Image](#)

Connecting to the Serial Port Console

In cases where the admin console is unavailable, you can perform network and host configuration tasks and troubleshooting using the serial port console.

To connect to the serial console:

1. Plug a null modem crossover cable from a console terminal or laptop into the device serial port. This cable is provided in the product box. Do not use a straight serial cable.

2. Configure a terminal emulation utility, such as HyperTerminal, with the following serial connection parameters:
 - 9600 bits per second
 - 8-bit No Parity (8N1)
 - 1 Stop Bit
 - No flow control
3. Press Enter until the serial console is displayed.

Figure486: Serial Console Menu

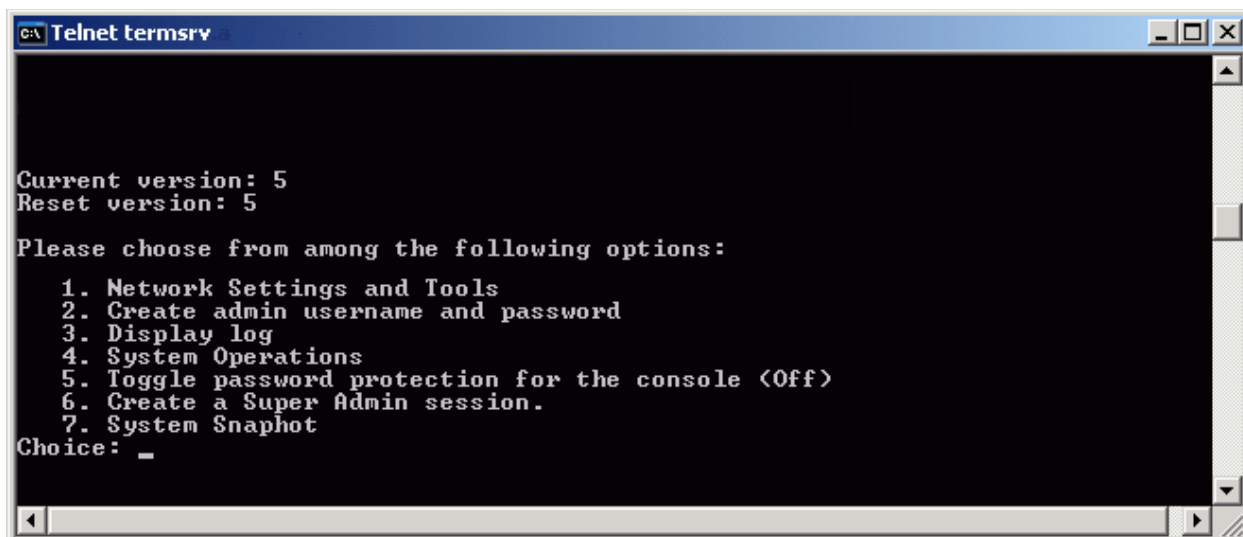


Table87: Serial Console Menu Options

| Options | Description |
|---|--|
| 1. Network Settings and Tools | Enables you to change standard network settings; print a routing table; print or clear an ARP cache; run the ping and traceroute commands, remove static routes, and add an ARP entry. |
| 2. Create admin username and password | Enables you to create a new super administrator account. |
| 3. Display log | Enables you to display system configuration, user access logs, or administrator access logs through the serial console. Note that must enter q to return to serial console options after viewing the logs. |
| 4. System Operations | Enables you to reboot, shut down, restart, roll back, or factory reset the system without using the admin console. |
| 5. Toggle password protection for the console | Enables you to password protect the serial console. When you toggle this option to "on," only super administrators are allowed access. |
| 6. Create a Super Admin session | <p>Enables you to create a recovery session to the admin console, even if you have configured the system to block access to all administrators. When you select this option, the system generates a temporary token that is valid for 3 minutes. Enter the following URL into a browser window:</p> <p><code>https://<fully-qualified-domain-name>/dana-na/auth/recover.cgi</code></p> <p>Then, enter the temporary token when prompted to sign in to the admin console.</p> <p>When you select this option, the system blocks any additional administrators from signing in to the admin console until you sign in to the specified URL and initiate a session using your token. The appliance blocks additional sign-in attempts so that you can fix any configuration problems that the system may have encountered without conflicting with another session.</p> |

| Options | Description |
|--------------------|---|
| 7. System Snapshot | <p>Enables you to take a system snapshot without using the admin console. When you select this option, the system takes the snapshot immediately. You can then send the snapshot file, by way of SCP, to a remote system. The system prompts you for the destination server port, user ID, password, and the destination path to the remote directory.</p> <p>If you choose not to send the snapshot file to a remote system, the system saves the file locally. The next time you log in to the admin console, the System Snapshot tab contains a link to the snapshot file.</p> |

Using the Serial Console to Roll Back to a Previous OS Version

You can use the admin console to roll back the configuration to a previous state. If the rollback option is not available in the admin console, you can use the procedure described in this section to perform the system rollback.

If you have not yet performed an OS service package upgrade, there is no previous state to roll back to, and the rollback option is not available. If you have performed an OS service package upgrade, any system and user configuration data created after the upgrade is lost unless you export the most current configuration files before rolling back the system and then import them afterwards.

To roll back to the previous OS service package:

1. Connect to the serial console.
2. In a browser window, sign in to the admin console.
3. Select **Maintenance > System > Platform**.
4. Click **Reboot Now** and then return to the console utility window. The window displays a message that the system is restarting.
5. After several moments, you are prompted to use the Tab key to select options. Press Tab, and when prompted for the configuration to load, type **rollback** and then press Enter.

After you click **Reboot Now**, the rollback status is output to the screen, and when complete, you are prompted to press Return (Enter) to modify system settings, which returns you to the initial setup options. When you are finished entering data, simply close the serial console window.

If you wait more than 5 seconds to enter your choice, the current system configuration is automatically loaded and you must go back to the admin console and click **Reboot Now** to start the process again. If you have already performed a system rollback, the rollback option is not available again until you upgrade the OS service package again.

Using the Serial Console to Reset the System to the Factory Image

In rare cases, you might need to reset the system to its original factory settings. Before performing this advanced system recovery option, contact PSGSC (<http://www.pulsesecure.net/support/>). If possible, export the most current system and user configuration data before performing a factory reset.

To perform a factory reset:

1. Connect to the serial console. In a browser window, sign in to the admin console.
2. Select **Maintenance > System > Platform**.
3. Click **Reboot** and then go back to the console utility window. The window displays a message that the system is restarting.
4. After several moments, you are prompted to use the Tab key to select options. Press Tab, and when prompted for the configuration to load, type **factory-reset** and then press Enter. If you wait more than 5 seconds to enter your choice, the current system configuration is automatically loaded, and you must go back to the admin console and click **Reboot Now** to start the process again.

5. When you are prompted to confirm performing a factory reset, type `proceed` and then press `Enter`. The system begins the process of resetting the machine to its original settings and outputs several screens of data. After several minutes, you are prompted to use the `Tab` key to select configuration choices.
6. When prompted to press the `Tab` key, do one of the following:
 - Wait for the default selection (`current`) to start automatically.
 - Press `Tab`, type `current`, and then press `Enter`.

You are then prompted to enter the initial configuration settings. For details on how to proceed, see the Installation Guide provided in the product packaging or on the Pulse Secure Global Support Center.

After you complete the initialization process, you can upgrade to the latest OS service package and import saved system and user configuration files to return to the last good working state of your system.

You might receive errors from the system during the initial setup or on a factory reset. Before the system starts services, it monitors the network port for a maximum of 120 seconds. The system checks the link status and sends ARP requests to the default gateway. If there is a problem, after 5 seconds, the system displays a message on the serial console that starts with `NIC:.....`. If the link recovers within 120 seconds, the startup process continues. If the link does not recover, the following message is displayed:

```
Internal NIC: .....[Down code=0x1]
```

- `0x1` means that the interface link status reported by the NIC remains off (for example, a disconnected cable or a cable is in the wrong port).
- `0x2` means that the gateway is unreachable. The system boots but is not reachable from IP addresses bound to that network port.

Certificate Security Administration

This chapter describes how to use certificates. It includes the following information:

- [Understanding Digital Certificate Security](#)
- [Using Device Certificates](#)
- [Using Trusted Client CAs](#)
- [Using Trusted Server CAs](#)
- [Understanding Client Auth Certificates](#)
- [Understanding ECC Certificates](#)
- [Example: Assigning an ECC P-256 Certificate to an External Virtual Port and Giving Preference to Suite B Ciphers](#)

Understanding Digital Certificate Security

PPS uses Public Key Infrastructure (PKI) to secure the data sent to clients over the Internet. PKI is a security method that uses public and private keys to encrypt and decrypt information. These keys are enabled and stored through digital certificates. A digital certificate is an encrypted electronic file issued by a certificate authority (CA) that establishes credentials for client/server transactions.

In public key cryptography, a public/private key pair is used to encrypt and decrypt data. Data encrypted with a public key, which the owner makes available to the public, can be decrypted with the corresponding private key only, which the owner keeps secret and protected. For example, if User1 wants to send User2 an encrypted message, User1 can encrypt it with User2's public key and send it. User2 then decrypts the message with the private key. The reverse process is also useful: encrypting data with a private key and decrypting it with the corresponding public key. This process is known as creating a digital signature. For example, if User1 wants to present their identity as the sender of a message, they can encrypt the message with her private key and send the message to User2. User2 then decrypts the message with User1's public key, thus verifying that User1 is indeed the sender.

PPS use the following types of digital certificates to establish credentials and secure session transactions:

- **Device certificates**—A device certificate helps to secure network traffic to and from the Pulse Secure service using elements such as company name, a copy of your company's public key, the digital signature of the CA that issued the certificate, a serial number, and expiration date. In addition, PPS uses a device certificate for communications with the Infranet Enforcers.
- **Trusted client CAs**—A trusted client CA is a client-side certificate issued by a CA. You can use trusted client CAs in the access management framework realm and role configurations to require certificates or certificates with specific attributes. For example, you may specify that users must present a valid client-side certificate with the OU attribute set to "yourcompany.com" to sign into the Users authentication realm.
- **Trusted server CAs**—A trusted server CA is the certificate of a Web server that you trust. You can install a trusted server CA to validate the credentials of the web sites that users access through the Pulse Secure client service.
- **Code-signing certificates**—A code-signing certificate (also called an applet certificate) is a type of server-side certificate that re-signs Java applets that are intermediated by PPS. You can use the self-signed code-signing certificate that comes pre-loaded, or you can install your own code-signing certificate.
- **Client Authentication certificates**—The client auth certificate is used when backend SSL servers require PPS to present a client certificate.



NOTE:

- The system can verify certificates that use SHA2 as the message digest.

- Only ECDSA certificates are supported other DSA certificates are not supported.

Using Device Certificates

This topic describes how to use device certificates. It includes the following information:

- [Understanding Device Certificates](#)
- [Understanding Self-Signed Certificates](#)
- [Importing a Device Certificate and Private Key](#)
- [Creating a Certificate Signing Request](#)
- [Importing a Signed Certificate Created from a CSR](#)
- [Understanding Intermediate Certificates](#)
- [Importing Intermediate CA Certificates](#)
- [Importing a Renewed Certificate That Uses the Existing Private Key](#)
- [Downloading a Device Certificate](#)
- [Using Device Certificates with Virtual Ports](#)
- [Enabling Certificate Revocation Check for Device Certificate](#)

Understanding Device Certificates

A device certificate helps to secure network traffic to and from the Pulse Secure client service using elements such as your company name, a copy of your company's public key, the digital signature of the Certificate Authority (CA) that issued the certificate, a serial number, and an expiration date. The system also uses device certificates for secure communications with the Infranet Enforcer.

When receiving encrypted data from the system, the client's browser first verifies whether the device certificate is valid and whether the user trusts the CA that issued the certificate. If the user has not already indicated that they trust the certificate issuer, the Web browser prompts the user to accept or install the certificate.

The system supports X.509 device certificates in DER and PEM encode formats (file extensions include .cer, .crt, .der, and .pem) as well as PKCS #12 (file extensions include .pfx and .p12). The system also supports the following features:

- Intermediate device CA certificates—Within a certificate hierarchy, one or more intermediate certificates are branched off a single root certificate.
- Multiple device certificates—When using multiple device certificates, each certificate handles validation for a separate hostname or fully qualified domain name (FQDN) and can be issued by a different CA.

Understanding Self-Signed Certificates

When you initialize the system with the serial console, the system creates a self-signed certificate that enables you to immediately begin setting up the system. Users are prompted with a security alert each time they sign in because the certificate is not issued by a trusted CA.

Figure487: Security Alert When the Device Certificate Is Not Issued by a Trusted CA



There is a problem with this website's security certificate.

The security certificate presented by this website was not issued by a trusted certificate authority.
The security certificate presented by this website was issued for a different website's address.

Security certificate problems may indicate an attempt to fool you or intercept any data you send to the server.

We recommend that you close this webpage and do not continue to this website.

[Click here to close this webpage.](#)

[Continue to this website \(not recommended\).](#)

[More information](#)

If you use the self-signed certificate created upon initialization with the serial console, users are prompted with a certificate warning when accessing the sign-in page.

Before promoting the system to production use, we recommend you replace the self-signed certificate with a certificate issued by a trusted CA.



NOTE: In PPS deployments with ScreenOS Enforcers, you must use a CA-signed device certificate. If you use a self-signed certificate, the ScreenOS Enforcer does not allow a connection. Import a CA-signed device certificate into PPS, and then import the certificate of the CA that signed the device certificate into the ScreenOS Enforcer.

Importing a Device Certificate and Private Key

The system uses certificates to verify itself to other network devices. A digital certificate is an electronic means of verifying your identity through a trusted third party, known as a Certificate Authority (CA). Your company might use its own enterprise CA server, or it might use a reputable third-party CA.

To import an enterprise root server certificate and private key:

1. Select System > Configuration > Certificates > Device Certificates.

Figure488: Device Certificates Management Page

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Certificates > Device Certificate

Device Certificate

Licensing Pulse One Security **Certificates** DMI Agent Sensors Client Types Guest Access

Device Certificates Trusted Client CAs Trusted Server CAs Client Auth Certificates Certificates Validity Check

Specify the Device Certificate(s). If you don't have a certificate yet, you can create a CSR and import the resulting signed certificate. If necessary, you can add custom [Intermediate CAs](#).

[Import Certificate & Key...](#) [Delete...](#)

10 records per page Search:

| | Certificate issued to | Issued by | Valid Dates | Used by |
|--------------------------|-----------------------|-------------|---|-----------------|
| <input type="checkbox"/> | juniper.net | juniper.net | Dec 7 10:27:09 2016 GMT to May 30 10:27:09 2022 GMT | <Internal Port> |

2. Click Import Certificate & Key to display the configuration page.

Figure489: Import Certificate and Key Page

3. Use one of the following options to complete the import procedure:
 - If certificate file includes private key—When the certificate and key are contained in one file. The file format is .pfx.
 - If certificate and private key are separate files—When the certificate and key are in separate files.
 - Import via System Configuration file—When the certificate and key are contained in a system configuration file. With this option, the system imports all the certificates specified (including private keys and pending CSRs, but not the corresponding port mappings).

In the appropriate form, browse to the certificate and key files. If the file is encrypted, enter the password key.

4. Click Import.



NOTE: The Import Certificate and Key button is disabled on FIPS hardware platforms because importing private keys is not allowed. On a FIPS hardware platform, you must create a CSR and then import a signed certificate from the CA.

Creating a Certificate Signing Request

If your company does not own a digital certificate for its Web servers, you can create a certificate signing request (CSR) and then send the request to a CA for processing. When you create a CSR, a private key is created locally that corresponds to the CSR. If you delete the CSR at any point, this file is also deleted, prohibiting you from installing a signed certificate generated from the CSR.

To create a certificate signing request:

1. Select System > Configuration > Certificates > Device Certificates.
2. Click New CSR to display the configuration page.
3. Complete the required information and click Create CSR.

4. Follow the onscreen instructions, which explain what information to send to the CA and how to send it.

When you submit a CSR to a CA authority, you might be asked to specify either the type of Web server on which the certificate was created or the type of Web server the certificate is for. Select apache (if more than one option with apache is available, select any). If you are prompted for the certificate format to download, select the standard format.

Do not send more than one CSR to a CA at one time. Doing so can result in duplicate charges.

Figure490: New Certificate Signing Request

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Certificates > New Certificate Signing Request

New Certificate Signing Request

Use this page to create a new Certificate Signing Request (CSR) to send to your Certificate Authority of choice.

Common Name:
(e.g., secure.company.com) pulsesecure.net

Organization Name:
(e.g., Company Inc.) PulseSecure

Org. Unit Name:
(e.g., IT Group) ??

Locality:
(e.g., SomeCity) ??

State (fully spelled out):
(e.g., California) ??

Country (2 letter code):
(i.e., US) ??

Email Address: ??

Key Type: ☒ RSA ☐ ECC

Key Length: 1024 bits

Please enter some random characters to augment the system's random key generator.
We recommend that you enter approximately twenty characters.

Random Data:
(used for key generation)

Create CSR



NOTE: To view details of any pending requests that you previously submitted, click the Certificate Signing Request Details link.

Importing a Signed Certificate Created from a CSR


When you receive the signed certificate from the CA, import it.

To import a signed device certificate created from a CSR:

Select System > Configuration > Certificates > Device Certificates.

1. Under Certificate Signing Requests, click the Pending CSR link that corresponds to the signed certificate.
2. Under Import signed certificate, browse and select the certificate file you received from the CA, and then click Import.

Figure491: Pending Certificate Signing Request

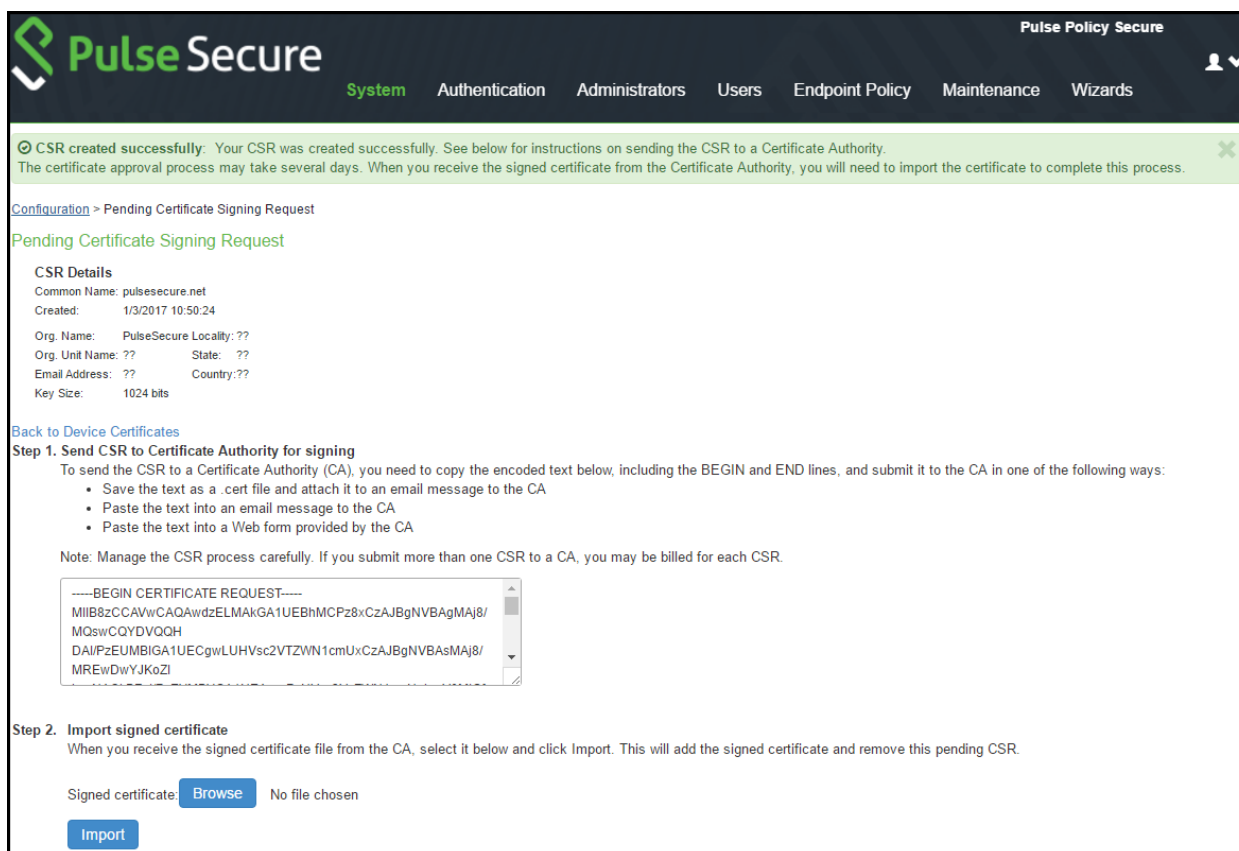

Pulse Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

CSR created successfully: Your CSR was created successfully. See below for instructions on sending the CSR to a Certificate Authority. The certificate approval process may take several days. When you receive the signed certificate from the Certificate Authority, you will need to import the certificate to complete this process.

Configuration > Pending Certificate Signing Request

Pending Certificate Signing Request

CSR Details

Common Name: pulsesecure.net
 Created: 1/3/2017 10:50:24
 Org. Name: PulseSecure Locality: ??
 Org. Unit Name: ?? State: ??
 Email Address: ?? Country: ??
 Key Size: 1024 bits

[Back to Device Certificates](#)

Step 1. Send CSR to Certificate Authority for signing

To send the CSR to a Certificate Authority (CA), you need to copy the encoded text below, including the BEGIN and END lines, and submit it to the CA in one of the following ways:

- Save the text as a .cer file and attach it to an email message to the CA
- Paste the text into an email message to the CA
- Paste the text into a Web form provided by the CA

Note: Manage the CSR process carefully. If you submit more than one CSR to a CA, you may be billed for each CSR.

```
-----BEGIN CERTIFICATE REQUEST-----
MIIB8zCCAVwCAQAwdzELMAkGA1UEBhMCPz8xCzAJBgNVBAGMAj8/
MOswCQYDVQOH
DAJ/PzEUMBIGA1UECgwLUHVsc2VTZW1cmUxCzAJBgNVBAsMAj8/
MREwDwYJKoZI
```

Step 2. Import signed certificate

When you receive the signed certificate file from the CA, select it below and click Import. This will add the signed certificate and remove this pending CSR.

Signed certificate: No file chosen

Understanding Intermediate Certificates

Within a certificate hierarchy, one or more intermediate certificates are branched off a single root certificate. The root certificate is issued by a root CA and is self-signed. Each intermediate certificate is issued by the certificate preceding it in the chain.

To use chained certificates in your deployment, you must ensure that the server and client (Web browser) together contain the entire certificate chain. For example, you can secure traffic using a chain that stems from a VeriSign root certificate. If your users' browsers come preloaded with VeriSign root certificates, you need to install only the lower-level certificates in the chain. When your users sign in, the system presents any required certificates within the chain to the browser to secure the transaction. The system creates the proper links in the chain using the root certificate's IssuerDN. If the system and browser together do not contain the entire chain, the user's browser does not recognize or trust the device certificate because it is issued by another certificate instead of by a trusted CA.

You can upload one or more intermediate CAs in a PEM file. The entire chain must be sent to the client in descending order, starting with the root certificate.

Within a certificate hierarchy, one or more intermediate certificates are branched off a single root certificate. The root certificate is issued by a root CA and is self-signed. Each intermediate certificate is issued by the certificate preceding it in the chain.

To use chained certificates in your deployment, you must install the appropriate client-side certificates in each user's Web browser and then upload the corresponding CA certificates to Pulse Secure Client Service Intermediate CA store. Use one of the following methods to upload the certificate chain:

- Import the entire certificate chain in one file. The file must contain the root certificate and any subcertificates whose parents are in the file or already imported. You can include certificates in any order in the import file.

- Import the certificates one at a time in descending order. You must install the root certificate first, and then install the remaining chained certificates in descending order.

If you follow one of these methods, the system automatically chains the certificates together in the correct order and displays them hierarchically in the admin console.




NOTE: If you install multiple certificates in a user's Web browser, the browser prompts the user to choose which certificate to use when signing in.

Importing Intermediate CA Certificates

To import an intermediate CA certificate:

1. Select **System > Configuration > Certificates > Device Certificates**.
2. Click the **Intermediate Device CAs** link to display the management page.
3. Click **Import CA certificate**.
4. Browse to the certificate file, select it, and click **Import Certificate** to complete the import operation.

Figure492: Intermediate CAs Management Page

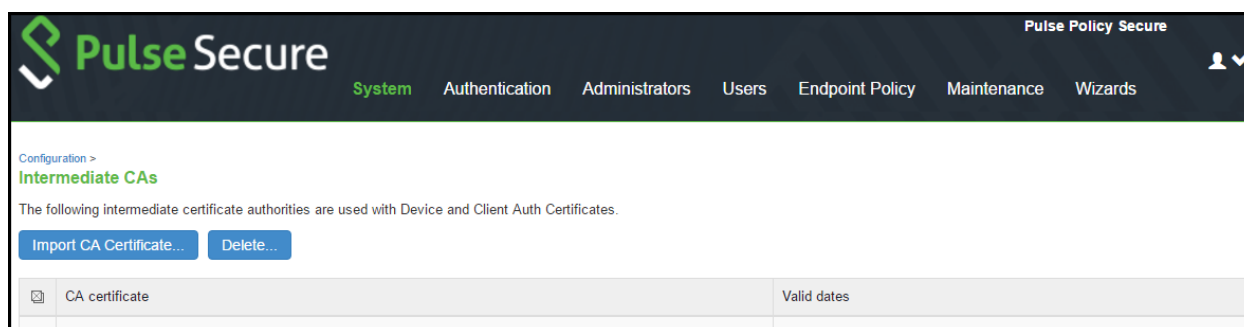

Importing a Renewed Certificate That Uses the Existing Private Key

You can renew a device certificate in two ways:

- Submit a new CSR to a CA—This process is more secure because the CA generates a new certificate and private key and retires the older private key. To use this renewal method, you must first create a CSR through the admin console.
- Request renewal based on the CSR previously submitted to the CA—This process is less secure, because the CA generates a certificate that uses the existing private key.

When you order a renewed certificate, you must either resubmit your original CSR or ensure that the CA has a record of the CSR that you submitted for your current certificate.

To import a renewed device certificate that uses the existing private key:

1. Follow your CA's instructions for renewing a certificate that you previously purchased through them. Be sure to specify the same information you used in the original CSR. Your CA uses this information to create a new certificate that corresponds to the existing key.




NOTE: Even though you specify the same information used in the original CSR, your root CA might have different serial numbers and keys from the original. You might need to support both new client and old client certificates during the transition period, which also requires that you maintain two root CA certificates (your existing certificate and the renewed certificate), at least temporarily

2. Select **System > Configuration > Certificates > Device Certificates**.

3. Click the link that corresponds to the certificate you want to renew.
4. Click **Renew Certificate** to display the page.
5. In the Renew the Certificate form, browse to the renewed certificate file, enter the password for the certificate key, and click Import.

Figure493: Renew Certificate Page

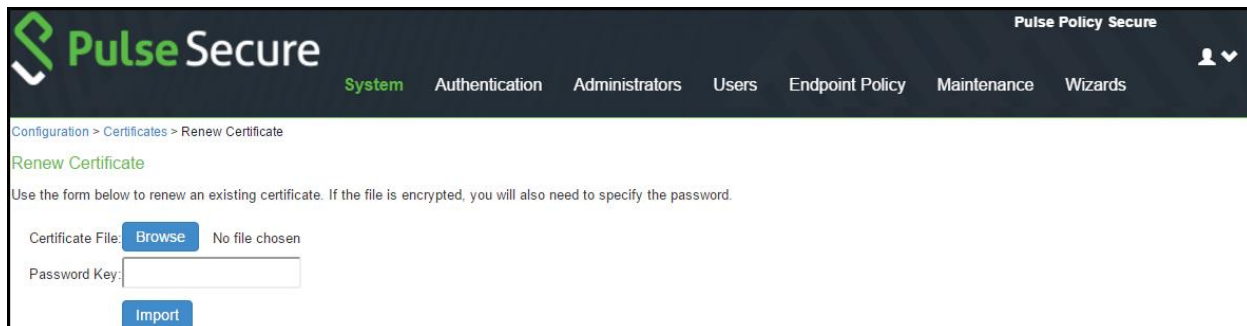

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Certificates > Renew Certificate

Renew Certificate

Use the form below to renew an existing certificate. If the file is encrypted, you will also need to specify the password.

Certificate File: No file chosen

Password Key:

Downloading a Device Certificate

You download the device certificate to your local host so that you can import it into other network devices as needed.

To download a device certificate:

1. Select **System > Configuration > Certificates > Device Certificates**.
2. Click the link of the device certificate you want to download to display the configuration page.
3. Click the **Download** link.
4. Save the file to the desired location.

Using Device Certificates with Virtual Ports

Virtual ports can be used to create multiple fully qualified domain names for user sign-in.

When a user tries to sign in using the IP address defined in a virtual port, the system uses the certificate associated with the virtual port to initiate the SSL transaction and for NetScreen Address Change Notification (NACN) communications with the Infranet Enforcer.

You must associate the signed certificate with the port that is connected to the Infranet Enforcer. You can use the same port and certificate for Pulse Client.

You can implement digital certificate security with virtual ports in either of the following ways:

- Associate all hostnames with a single certificate—With this method, you use a single wildcard certificate to validate the identity of all system hostnames, regardless of which hostname is used to sign into. A wildcard certificate includes a variable element in the domain name, making it possible for users who sign in from multiple hosts to map to the “same” domain. For example, if you create a wildcard certificate for *.yourcompany.com, the system uses the same certificate to validate its identity to users who sign in to employees.yourcompany.com as it does to users who sign into partners.yourcompany.com.
- Associate each hostname with its own certificate—With this method, you associate different hostnames with different certificates. Create a virtual port for each hostname. A virtual port activates an IP alias on a physical port. For example, you can create two virtual ports on a single appliance, mapping the first virtual port to the IP address 10.10.10.1 (sales.yourcompany.com) and the second virtual port to the IP address 10.10.10.2 (partners.yourcompany.com). Then you can associate each of these virtual ports with its own certificate, ensuring that users authenticate through different certificates.

To associate certificates with virtual ports:

Create the virtual ports.

Import the device certificates.

Associate the device certificates with the virtual ports:

1. Select **System > Configuration > Certificates > Device Certificates**.
2. Click the link of the device certificate you want to configure to display the configuration page.
3. Use the controls in the “Present certificate on these ports” section to associate ports with the certificate.



NOTE: You can assign only one device certificate to the Management Port. If you assign a certificate other than the default device certificate to the Management Port, the default device certificate is automatically deselected as the default. If you do not select a device certificate for the Management Port, the system uses the default device certificate that is presented on the Internal port. You cannot assign certificates to Management Port VIPs.

Enabling Certificate Revocation Check for Device Certificate

To enable the CRL for Device Certificates:

1. Go to **System > Configuration > Certificates > Device Certificates**.
2. Click on the certificate from the list to go to the certificate details.
3. In the **Certificate Details** page, go to **Certificate Status Checking** and enable the **Use CRLs (Certificate Revocation Lists)** checkbox.

Figure 494: Enabling Certificate Revocation Check for Device Certificate

▼ Certificate status checking

☒ Use CRLs (Certificate Revocation Lists)

CRL Settings
Certificate revocation lists (CRL) are used to verify the ongoing validity of client-side certificates, and are obtained from CRL distribution points (CDP).

| CRL distribution points | Status | Last Updated | Next Update |
|-------------------------|--------|--------------|-------------|
| No CRL checking | | | |

[Save Changes](#) [Renew Certificate...](#)

4. Click on Save Changes.
5. Import the CA or CA Chain that issued the Device Certificate to **System > Configuration > Trusted Server CAs**. Once the CRL is successfully downloaded for Device Certificate, it is listed in the CRL distribution points.

Figure 495: Successful CRL Download for Device Certificate

▼ Certificate status checking

☒ Use CRLs (Certificate Revocation Lists)

CRL Settings
Certificate revocation lists (CRL) are used to verify the ongoing validity of Device certificates, and are obtained from CRL distribution points (CDP).

| CRL distribution points | Status | Last Updated | Next Update |
|--|---------------------------------------|---------------------|---------------------|
| <input type="checkbox"/> http://win-kurshgmdcp0.chlddc.test.sagacertserv.com/CertEnroll/EnterpriseSub-CA.crl Last result: Success, same CRL | Enabled; OK: 2KB, 6 revocations | 2016/06/07 19:17:25 | 2016/06/13 05:49:05 |

[Save Changes](#) [Renew Certificate...](#)



NOTE: PPS supports 3072-bit key length for Device Certificates.

Figure 496: 3072 Bit Key Length for Device Certificates

Configuration > Certificates > New Certificate Signing Request

New Certificate Signing Request

Use this page to create a new Certificate Signing Request (CSR) to send to your Certificate Authority of choice.

Common Name:
(e.g., secure.company.com)

Organization Name:
(e.g., Company Inc.)

Org. Unit Name:
(e.g., IT Group)

Locality:
(e.g., SomeCity)

State (fully spelled out):
(e.g., California)

Country (2 letter code):
(e.g., US)

Email Address:

Key Type:
☒ RSA ☐ ECC

Key Length:
1024 bits

Please enter some random characters in the box below. You can use the system's random key generator.

We recommend that you enter approximately twenty characters.

Random Data:
(used for key generation)

Using Trusted Client CAs

This topic describes how to use trusted client Certificate Authorities (CAs). It includes the following information:

- [Understanding Trusted Client CAs](#)
- [Trusted Client CA Implementation Notes](#)
- [Understanding CRLs](#)
- [Understanding OCSP](#)
- [Importing a Trusted Client CA Certificate](#)
- [Renewing a Certificate](#)
- [Configuring Auto-Importing of Client Certificates](#)
- [Configuring Options for Trusted Client CA Certificates](#)
- [Configuring a Proxy Server for CRL Downloads and OCSP Status Checks](#)

Understanding Trusted Client CAs

A trusted client CA is a CA that you deem trusted by adding it the trusted client CA store. The system trusts any certificate issued by that CA. To use client CA certificates, you must install and enable the proper certificates. Additionally, you must install the corresponding client-side certificates in your users' Web browsers, or you must use the MMC snap-in in your users' computer accounts (machine certificate). When validating a client-side CA certificate, the system verifies that the certificate is not expired or corrupt and that the certificate is signed by a CA that the system has been configured to recognize. If the CA certificate is chained, the system also follows the chain of issuers until it reaches the root CA, validating each issuer in turn. The system supports X.509 CA certificates in DER and PEM encode formats.

When you install a client-side certificate, you must determine whether to use the certificate to identify individual users or individual machines. To use the certificate to identify individual users, you must install the certificate in each user's individual certificate store. Then you must enable authentication using a certificate server, or you must enable authorization using realm, role, and/or resource policy settings. To use the certificate to identify individual machines, you must install the certificate in each computer's certificate store. Then you must configure a Host Checker policy that checks for the machine certificate and authorizes access to realms, roles, or resource policies based on the certificate's validity.

The system supports using the following additional features with CA certificates:

- **Certificate servers**—A certificate server is a type of local authentication server that allows you to authenticate users based solely on their certificate attributes rather than authenticating them against a standard authentication server (such as LDAP or RADIUS), and it requires specific certificates or certificate attributes.
- **Certificate hierarchies**—Within a certificate hierarchy, one or more subordinate certificates (called intermediate certificates) are branched off a root certificate to create a certificate chain. Each intermediate certificate (also called a chained certificate) handles requests for a part of the root CA domain. For example, you can create a root certificate that handles all requests to the yourcompany.com domain and then branch off intermediate certificates that handle requests to partners.yourcompany.com and employees.yourcompany.com. When you install a chained certificate, the system confirms that the chain is valid and allows users to authenticate using the leaf certificate (that is, the lowest certificate in the chain).
- **Certificate revocation lists**—Certificate revocation is a mechanism by which a CA invalidates a certificate before its expiration date. The CA publishes a certificate revocation list (CRL) which is a list of revoked certificates. Within CRLs, each entry contains the serial number of the revoked certificate, the date that the certificate was revoked, and the reason the certificate was revoked. The CA can invalidate a certificate for various reasons such as when the employee to whom the certificate is issued leaves the company, the certificate's private key is compromised, or the client-side certificate is lost or stolen. When the CA revokes a certificate, the system can appropriately deny access to users who present a revoked certificate.

Trusted Client CA Implementation Notes

Uploading a trusted client CA certificate does not enable client-side SSL authentication or authorization. To do so, you must use a certificate server, or enable certificate restrictions at the realm, role, or resource policy level, or create a Host Checker policy that verifies a machine certificate.

With client-side certificates, we strongly recommend that you advise users to close their Web browsers after signing out. If they do not, other users might be able to use their open browser sessions to access certificate-protected resources without reauthentication. After loading a client-side certificate, Internet Explorer caches the certificate's credentials and private key. The browser keeps this information cached until the user closes the browser (or, in some cases, until the user reboots the workstation). For details, see <http://support.microsoft.com/?kbid=290345>.) To remind users to close their browsers, you can modify the sign out message on the Sign-in Pages tab.



NOTE: Certificate authentication does not work on Internet Explorer 8 and 9 if SSL 2.0 is enabled with other SSL and TLS versions. For details, see <http://support.microsoft.com/kb/2851628>.

Understanding CRLs

A certificate revocation list (CRL) is a mechanism for canceling a client-side certificate. As the name implies, a CRL is a list of revoked certificates published by a CA or a delegated CRL issuer. The system supports base CRLs, which includes the company's revoked certificates in a single, unified list.

The system determines the correct CRL to use by checking the client's certificate. (When it issues a certificate, the CA includes CRL information for the certificate in the certificate itself.) To ensure that it receives the most up-to-date CRL information, the system periodically contacts a CRL distribution point to get an updated list of CRLs. A CRL distribution point (CDP) is a location on an LDAP directory server or Web server where a CA publishes CRLs. The system downloads CRL information from the CDP at the interval specified in the CRL, at the interval that you specify during CRL configuration, and when you manually download the CRL. The system also supports CRL partitioning. CRL partitioning enables you to verify portions of very large CRLs without spending the time and bandwidth necessary to access and validate a very large CRL or collection of large CRLs. CRL partitioning is only enabled when you employ the Specify the CDP(s) in the client certificates method (described below). In this case, the system validates the user by verifying only the CRL specified in the client certificate.

Although CAs include CRL information in client-side certificates, they do not always include CDP information as well. A CA can use any of the following methods to notify the system of a certificate's CDP location:

- Specify the CDP(s) in the CA certificate—When the CA issues a CA certificate, it might include an attribute specifying the location of the CDPs that the system should contact. If more than one CDP is specified, the system chooses the first one listed in the certificate and then fails over to subsequent CDPs, if necessary.
- Specify the CDP(s) in the client certificates—When the CA issues a client-side certificate, it might include an attribute specifying the location of the CDPs that the system must contact. If more than one CDP is specified, it chooses the first one listed in the certificate and then fails over to subsequent CDPs, if necessary. When the system employs CRL partitioning and the client certificate specifies only one CRL, it performs verification using only that CRL.



NOTE: If you choose this method, the user receives an error on the first sign-in attempt because no CRL information is available. Once the system recognizes the client's certificate and extracts the CRL location, it can start downloading the CRL and subsequently validate the user's certificate. To successfully sign in, the user must try to reconnect after a few seconds.

- Require the administrator to manually enter the CDP location—If the CA does not include the CDP location in the client or CA certificates, you must manually specify how to download the entire CRL object. You can specify a primary and backup CDP. (Manually entering the CDP location provides the greatest flexibility because you do not need to reissue certificates if you change the CDP location.)

The system compares the user's certificate against the appropriate CRL during authentication. If it determines that the user's certificate is valid, the system caches the certificate attributes and applies them, if necessary, during role and resource policy checks. If it determines that the user's certificate is invalid, if it cannot contact the appropriate CRL, or if the CRL is expired, it denies the user access.

**NOTE:**

- The system supports only CRLs that are in a PEM or DER format and that are signed by the CA for which the revocations apply.
- The system only saves the first CRL in a PEM file.

Understanding OCSP

The Online Certification Status Protocol (OCSP) is a service that enables you to verify client certificates. When OCSP is enabled, the system becomes a client of an OCSP responder and forwards validation requests for users based on client certificates. The OCSP responder maintains a store of CA-published certificate revocation lists (CRLs) and maintains an up-to-date list of valid and invalid client certificates. After the OCSP responder receives a validation request, it validates the status of the certificate using its own authentication database, or it calls upon the OCSP responder that originally issued the certificate to validate the request. After formulating a response, the OCSP responder returns the signed response, and the original certificate is either approved or rejected.

Importing a Trusted Client CA Certificate

If you require users to provide a client-side certificate to sign in, you must upload the corresponding CA certificate. You can upload CA certificates manually, or you can configure the system to upload CA certificates automatically. The system uses the uploaded certificate to verify that the browser-submitted certificate is valid. In addition, you can specify if you want to automatically import CA certificates for validation, and you can specify a CRL or OCSP retrieval method to use to automatically import CA certificates.

To import a trusted client CA certificate:

1. Select **System > Configuration > Certificates > Trusted Client CAs** to display the configuration page.
2. Click **Import CA Certificate** to display the configuration page.
3. Browse to the certificate file, select it, and click **Import Certificate** to complete the import operation.

Renewing a Certificate

To renew a certificate:

1. Select **System > Configuration > Certificates > Trusted Client CAs**.
2. Click the link for the certificate you want to renew.
3. Click **Renew Certificate** to display the import certificate page.
4. Browse to the certificate file, select it, and click **Import Certificate** to complete the import operation.

Configuring Auto-Importing of Client Certificates

To enable auto-importing:

1. Select **System > Configuration > Certificates > Trusted Client CAs**.
2. Click the **Auto-Import Options** button to display the options.

3. Complete the configuration described below.

4. Save your changes.

Table88: Auto-Import Options Settings

| Settings | Guidelines |
|---|---|
| Auto-import trusted CAs | Select this option to enable auto-import and display its configuration settings. |
| Client Certificate Status Checking | <p>Select a method to validate the trusted client certificate:</p> <ul style="list-style-type: none"> • None—Do not validate. • Use OCSP—Use the OCSP method, validating the client certificate in real-time, as needed. After you select this option, you can specify options for OCSP. • Use CRLs—Use CRLs to validate the client certificate. After you select this option, you can specify options for OCSP. • Use OCSP with CRL fallback—Use the OCSP validation method when possible, but attempt to validate client certificates using CRLs if the OCSP method fails (for example, if the link to the OCSP responder fails). After you select this option, you can specify options for OCSP. • Inherit from root CA—Use the method configured for the device certificate. |
| CDP(s)/OCSP responder | <p>Select the location of the responder value:</p> <ul style="list-style-type: none"> • None—Do not use the responder. • From client certificate—Use the responder value configured in the client certificate. • From trusted CA certificate—Use the responder value configured in the trusted CA certificate that has been uploaded to the system. |
| Verify imported CA certificates | Select this option to verify that this trusted client CA is valid. Enabling this will check the CRL of this certificate's issuer, and repeat up the chain until reaching the root trusted client CA. |
| Skip Revocation check when OCSP/CDP server is not available | <p>Select this option to instruct PPS to skip revocation check and accept end user certificates when either OCSP server or CDP server is not accessible over the network. This option is applicable to digital certificates used for end user authentication.</p> <p>PPS skips the revocation check in the following conditions:</p> <ul style="list-style-type: none"> • Server IP is not reachable • Server Hostname is either not resolvable or resolving to non OCSP/CRL Server IP • Proxy IP is either not reachable or not resolving • Download CRL has expired • OCSP/CRL service in Server is not responding |

Configuring Options for Trusted Client CA Certificates

To configure options for the trusted client CA certificate:

1. Select System > Configuration > Certificates > Trusted Client CAs.
2. Click the certificate you want to configure.
3. Complete the configuration described in table below.

Table89: Trusted Client CA Settings

| Settings | Guidelines |
|---|---|
| Certificate | <p>Use the expander buttons to display the following details:</p> <ul style="list-style-type: none"> • Issued To—Name and attributes of the entity to whom the certificate is issued. • Issued By—Name and attributes of the entity that issued the certificate. Note that the value of this field must match either the Issued To field (for root certificates) or the Issued To field of the next highest certificate in the chain (for intermediate certificates). • Valid Dates—Time range for which the certificate is valid. • Details—Various certificate details, including its version, serial number, signature algorithm, CRL distribution points, public key algorithm type, and public key. |
| Client Certificate Status Checking | <p>Select a method to validate the trusted client certificate:</p> <ul style="list-style-type: none"> • None—Do not validate. • Use OCSP—Use the OCSP method, validating the client certificate in real-time, as needed. After you have selected this option and saved the configuration, you can specify options for OCSP. • Use CRLs—Use CRLs to validate the client certificate. After you have selected this option and saved the configuration, you can specify options for CRL. • Use OCSP with CRL fallback—Use the OCSP validation method when possible, but attempt to validate client certificates using CRLs if the OCSP method fails (for example, if the link to the OCSP responder fails). After you have selected this option and saved the configuration, can specify options for OCSP and CRL. |
| Verify Trusted Client CA | <p>Select this option to verify that this trusted client CA is valid. Enabling this will check the CRL of this certificate's issuer, and repeat up the chain until reaching the root trusted client CA.</p> |
| Trusted for Client Authentication | <p>Clear this check box to exclude the CA from being trusted for client certificate authentication. You might want to do this if this CA was added for another trusting purpose, such as SAML signature verification or machine certificate validation.</p> |
| Skip Revocation check when OCSP/CDP server is not available | <p>Select this option to instruct PPS to skip revocation check and accept end user certificates when either OCSP server or CDP server is not accessible over the network. This option is applicable to digital certificates used for end user authentication.</p> <p>PPS skips the revocation check in the following conditions:</p> <ul style="list-style-type: none"> •Server IP is not reachable •Server Hostname is either not resolvable or resolving to non OCSP/CRL Server IP •Proxy IP is either not reachable or not resolving •Download CRL has expired •OCSP/CRL service in Server is not responding |

4. Save your changes.
5. If you have enabled CRL Checking, click CRL Checking Options.
6. If you have enabled OCSP options:
 - Click OCSP Options.

- Complete the configuration described in table below.

Table90: OCSP Options Settings

| Settings | Guidelines |
|--|--|
| Use | <p>Select the type of OCSP responder to validate trusted client CAs:</p> <ul style="list-style-type: none"> • None—The system does not use OCSP to verify the status of certificates issued by this CA. • Responder(s) specified in the CA certificate—The system uses OCSP responders specified in the imported client CA to perform verification. When you select this option, the system displays a list of OCSP responders specified in the imported CA (if any) and the last time they were used. • Responder(s) specified in the client certificates—The system uses responders specified during client authentication to perform verification. When you select this option, the system displays a list of known OCSP responders (if any) and the last time they were used. • Manually configured responders—The system uses primary and secondary OCSP responders at the addresses you specify. |
| Device Certificate to sign the request | Select the appropriate device certificate or leave the default (unsigned). |
| Signature Hash Algorithm | Select SHA-1 or SHA-2. |
| Use Nonce | A nonce is random data the system includes in an OCSP request and the OCSP responder returns in the OCSP response. The system compares the nonce in the request and response to ensure that the response is generated by the OCSP responder. If the two do not match, the system disregards the response and sends a new request. |

7. Save the configuration.
8. After you have added an OCSP responder to the list, you can click its link to display the page.
9. Complete the configuration described below.

Table91: Responder Signer Certificate Settings

| Settings | Guidelines |
|------------------------------|--|
| Responder Signer Certificate | Browse to the network path or local directory location of a Responder Signer Certificate. This is the certificate the OCSP responder uses to sign the response. You must specify the Responder Signer Certificate if the signer certificate is not included in the response. |
| Trust Responder Certificate | Select this option to allow an OCSP responder certificate that matches the responder signer certificate. |
| Revocation Checking | Select this option to ensure that the certificate has not recently been revoked. This option has implications only if you specified the Use OCSP with CRL fallback option. |
| Allow clock discrepancy | Use this option to account for possible mismatches in timestamps between the system clock and the OCSP responder clock. If the mismatch is significant, the system disregards the response from the OCSP responder as out of date or expired. |

10. Save the configuration.

Configuring a Proxy Server for CRL Downloads and OCSP Status Checks

You can configure the system to send CRL download requests and OCSP status checks to the proxy server and collect the response. You might want to do this if you deploy proxy server to control access to the Internet.

The following types of CRL downloads can use the proxy server:

- CRL distribution points (CDPs) specified in the trusted client CAs
- CDPs specified in client certificates
- Manually configured CDPs

Similarly, the system can send OCSP requests to the OCSP responder through the proxy server. The OCSP responses are also received through the proxy server. This feature is useful when you deploy many PPS systems and the OCSP responders are located outside the network.

To configure a proxy server:

1. Select System > Configuration > Certificates > Trusted Client CAs.
2. Click Proxy Settings to display the page.
3. Complete the configuration described in table below.
4. Save the configuration.

Table92: Proxy Settings

| Settings | Guidelines |
|--|--|
| Use Proxy Server for HTTP-based CRL download | Select to enable the CRL operations to use a proxy server. NOTE: You can configure a proxy server for web-based URLs, not LDAP URLs. |
| Use Proxy Server for HTTP-based OCSP status checking | Select to enable the OCSP operations to use a proxy server. |
| Host Address | Specify either an IP address or a fully qualified domain name. |
| Port | Enter the proxy server port number if it is different from the default value of 80. |
| Username/password | If your proxy server required authentication, enter a username and password to log in to the proxy server. |

Using Client Auth Certificates

This topic describes how to use client auth certificates. It includes the following information:

- [Understanding Client Auth Certificates](#)
- [Importing a Client Auth Certificate](#)
- [Renewing a Client Auth Certificate](#)
- [Configuring Two-Way SSL Authentication](#)
- [Enabling Certificate Revocation Check for Client Auth Certificate](#)

Understanding Client Auth Certificates

In certain corporate environments, servers on the LAN are protected with two-way SSL authentication. These servers require the client to authenticate by presenting a valid certificate.

In the remote access scenario, PCS is a client of these servers. You can configure PPS to present client authentication certificates to servers whenever it communicates over SSL.



NOTE: This feature authenticates end users or end-user machines to servers on the corporate LAN.

The SSL protocol provides for mutual authentication of server and client at the time of session initiation. The client part of the authentication is optional. For enhanced security, some deployments may require that the client also authenticate itself with a certificate. Normally, when setting up an SSL connection with a server on behalf of the end user, PCS does not present any certificate to the server. It needs to be explicitly configured to present such certificate. This section explains how such configuration may be performed.

The basic idea is to upload a certificate, private key pair to the Pulse Secure access management framework, and configure a mapping between this pair and a server resource. Subsequently, when an end user attempts to establish a connection with that server, PPS presents the associated certificate to the server. If no certificate is associated with the server in PCS certificate store, then it is assumed that the server does not demand client certificate.

If, during the SSL handshake, the back-end server requests a client certificate but PPS doesn't send a certificate, the end user sees an "access denied" error message. Similarly, if the back-end server rejects the PPS certificate, the end user sees an "access denied" error message. If a certificate is configured, is successfully retrieved and no error is encountered during handshake, the user is granted access to the server.



NOTE: The PPS access management framework allows client authentication certificates to be uploaded to the device in two ways: generate a CSR and upload the signed certificate returned by the CA, or directly import the certificate if one is available.

Importing a Client Auth Certificate

The Pulse Secure access management framework allows certificates that include the private key and for instances where the private key is in a separate file from the certificate. In addition, if your certificates have been exported into a system configuration file, you can import the system configuration file to upload the certificates.

To import the client auth certificates files:

1. Select **System > Configuration > Certificates > Client Auth Certificates**.
2. Click **Import Certificate & Key** to display the configuration page.
3. Complete the configuration described in table below.
4. Click **Import**.

Table 93: Import Certificate and Key Settings

| Settings | Guidelines |
|---|--|
| If certificate file includes private key | |
| Certificate File | Browse to the network path or local directory location of your private key file. |
| Password Key | Enter the password key. |
| If certificate and private file are separate keys | |
| Certificate File | Browse to the network path or local directory location of your certificate key file. |
| Private Key File | Browse to the network path or local directory location of your private key file. |
| Password Key | Enter the password key. |
| Import via System Configuration file | |
| System Configuration File | Browse to the network path or local directory location of the system configuration file. |
| Password | Enter the password. |

Renewing a Client Auth Certificate

To renew a certificate:

1. Select **System > Configuration > Certificates > Client Auth Certificates**.
2. Click the link that corresponds to the certificate you want to renew.
3. Click **Renew Certificate** to display the configuration page.
4. In the **Renew the Certificate** form, browse to the renewed certificate file, enter the password for the certificate key, and click **Import**.

Configuring Two-Way SSL Authentication

To configure two-way SSL authentication:

1. Import the certificates used for two-way SSL handshake in the **System > Configuration > Certificates > Client Auth Certificates** window.
2. Define the back-end resource and assign a certificate to be presented when accessing it using the **Users > Resource Policies > Web > Client Authentication** window.

Enabling Certificate Revocation Check for Client Auth Certificate

Client Auth Certificate Revocation Check is only applicable for TLS Syslog Backend Server. It is not applicable for any other backend server configured to ask Client Certificate.

To enable the CRL for Client Auth Certificate:

1. Go to **System > Configuration > Certificates > Client Auth Certificates**.
2. Click on the certificate from the list to go to the certificate details.
3. In the **Certificate Details** page, go to **Certificate Status Checking** and enable the **Use CRLs (Certificate Revocation Lists)** checkbox.

Figure 497: Enabling Certificate Revocation Check for Client Auth Certificate

Certificate Details

Certificate

Issued To: pulsesecure.net
 Issued By: ??
 Valid: May 1 21:41:54 2016 GMT to Oct 22 21:41:54 2021 GMT
 Details: Other Certificate Details
[Download](#)

Certificate status checking

☒ Use CRLs (Certificate Revocation Lists)

CRL Settings
 Certificate revocation lists (CRL) are used to verify the ongoing validity of Device certificates, and are obtained from CRL distribution points (CDP).

| | CRL distribution points | Status | Last Updated | Next Update |
|--|-------------------------|--------|--------------|-------------|
| | No CRL checking | | | |

4. Click on **Save Changes**.
5. Import the CA or CA Chain that issued the Client Auth Certificate to **System > Configuration > Trusted Client CAs**.
6. Once the CRL is successfully downloaded for Client Auth Certificate, it is listed in the CRL distribution points.

Figure 498: Successful CRL Download for Client Auth Certificate

Certificate status checking

☒ Use CRLs (Certificate Revocation Lists)
 Note: This option only applies to the Syslog Server.

CRL Settings
 Certificate revocation lists (CRL) are used to verify the ongoing validity of Client Authentication certificates, and are obtained from CRL distribution points (CDP).

| | CRL distribution points | Status | Last Updated | Next Update |
|--|--|---------------------------------------|---------------------|---------------------|
| | http://win-kurshgndcp0.chiddc.test.sagacertserv.com/CertEnrollEnterpriseSub-CA.crl Last result: Success, same CRL | Enabled; OK: 2KB, 6 revocations | 2016/06/08 13:19:57 | 2016/06/13 05:49:05 |



NOTE: This version of the PPS supports the 3072 bit key length for Client Auth Certificates.

Figure 499: 3072 Bit Key Length for Client Auth Certificates

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Configuration > Certificates > New Certificate Signing Request

New Certificate Signing Request

Use this page to create a new Certificate Signing Request (CSR) to send to your Certificate Authority of choice.

Common Name:
 (e.g., secure.company.com)

Organization Name:
 (e.g., Company Inc.)

Org. Unit Name:
 (e.g., IT Group)

Locality:
 (e.g., SomeCity)

State (fully spelled out):
 (e.g., California)

Country (2 letter code):
 (i.e., US)

Email Address:

Key Type: ☒ RSA ☐ ECC

Key Length: bits
 1024
 2048

Please enter some random characters in the box below. You can use the system's random key generator.
 We recommend that you enter approximately twenty characters.

Random Data:

(used for key generation)

i **NOTE:** CRL Download for Device Certificate and Client Auth Certificate using LDAP based URL won't work due to dependency of LDAP Username and Password. In some cases, CDP LDAP URL hostname field is also required which is also not supported.

Using Trusted Server CAs

This topic describes trusted server certificate authorities (CAs). It includes the following information:

- [Understanding Trusted Server CAs](#)
- [Uploading Trusted Server CA Certificates](#)
- [Restoring the Prepopulated Group of Trusted Server CA Certificates](#)
- [Renewing a Trusted Server CA Certificate](#)
- [Deleting a Trusted Server CA Certificate](#)

Understanding Trusted Server CAs

All the trusted root CAs for the Web certificates installed in Internet Explorer are preinstalled. You might need to install a trusted server CA for additional Web servers in the following situations:

- If you are using third-party integrity measurement verifiers (IMVs) that are installed on a remote server, you must upload the trusted root certificate of the CA that signed the remote server's server certificate.
- If you are using virus signature version monitoring with your own staging site for storing the current virus signatures list, you must upload the trusted root certificate of the CA that signed the staging server certificate.

You can install the trusted root CA certificate on the endpoint in any of the following ways:

- Use a CA certificate that is chained to a root certificate that is already installed on the endpoint, such as VeriSign.
- Upload the CA certificate and any intermediate CA certificates to the Pulse Secure client system. During client installation, the system automatically installs the trusted root device CA certificates on the endpoint. When prompted during installation, the user must allow the installation of the CA certificate(s).
- Prompt users to import the CA certificates on the endpoint using Internet Explorer or other Microsoft Windows tools. In other words, you can use common methods organizations use to distribute root certificates.

i **NOTE:** You cannot use CRL revocation checks for trusted server CA certificates.

Uploading Trusted Server CA Certificates

You can use the Trusted Server CAs page to upload the trusted root certificate of the CA that signed the Pulse Secure client service device certificate. If you upload a certificate chain, you must install the certificates one at a time in descending order starting with the root certificate (DER or PEM files), or you must upload a single file that contains the entire certificate chain (PEM files only). The system supports X.509 CA certificates in PEM (Base 64) and DER (binary) encode formats.

To upload CA certificates:

1. Select System > Configuration > Certificates > Trusted Server CAs to display the page.
2. Click Import Trusted Server CA to display the page.
3. Browse to the certificate file, select it, and click Import Certificate to complete the import operation.

Restoring the Prepopulated Group of Trusted Server CA Certificates

The System > Configuration > Certificates > Trusted Server CAs page is prepopulated with some of the trusted root CAs for the Web certificates installed in Internet Explorer and Windows. You can use the delete functionality on this page to delete CAs and the reset functionality to restore the list to the set that was installed during the upgrade. The reset operation clears all manually imported certificates.

To restore the prepopulated group of trusted CA certificates:

1. Select System > Configuration > Certificates > Trusted Server CAs.
2. Click Reset Trusted Server CAs.
3. Confirm that you want to restore the set of trusted server CAs that was installed when you upgraded.

Renewing a Trusted Server CA Certificate

If a trusted CA renews its certificate, you must upload the renewed CA certificate.

To import a renewed CA certificate:

1. Select System > Configuration > Certificates > Trusted Server CAs.
2. Click the link that corresponds to the certificate that you want to renew to display the page.
3. Click Renew Certificate.
4. Browse to the certificate file, select it, and click Import Certificate to complete the import operation.

Deleting a Trusted Server CA Certificate

You can delete any trusted server CA certificate, including preinstalled certificates.

To delete a trusted server CA certificate:

1. Select System > Configuration > Certificates > Trusted Server CAs.
2. Select the check box for the certificate you want to delete.
3. Click Delete, and then confirm that you want to delete the certificate.

Understanding ECC Certificates

Public-key cryptography is a cryptographic system that requires a secret key and a public key that are mathematically linked with each other. One key encrypts the plain text while the other decrypts the cipher text. RSA is the most widely used public-key algorithm.

Elliptic Curve Cryptography (ECC) were introduced as an alternative to RSA in public key cryptography. One advantage of ECC over RSA is key size versus strength. For example, a security strength of 80 bits can be achieved through an ECC key

size of 160 bits, whereas RSA requires a key size of 1024. With a 112-bit strength, the ECC key size is 224 bits and the RSA key size is 2048 bits.

The most popular signature scheme that uses elliptic curves is called the Elliptic Curve Digital Signature Algorithm (ECDSA). The most popular key agreement scheme is called Elliptic Curve Diffie-Hellman (ECDH). An ECDH exchange is a variant of the Diffie-Hellman (DH) protocol and is an integral part of the Suite B cryptography standards proposed by the National Security Agency (NSA) for protecting both classified and unclassified information.

About Suite B

The Advanced Encryption Standard (AES) is a specification for the encryption of electronic data established by the U.S. National Institute of Standards and Technology (NIST) in 2001. Because a single encryption algorithm cannot satisfy all the needs of the national security community, NSA created a larger set of cryptographic algorithms, called Suite B, which can be used along with AES in systems used by national security users. In addition to AES, Suite B includes cryptographic algorithms for hashing, digital signatures, and key exchanges.

Per RFC 6460, to be Suite B TLS 1.2 compliant the server and client should negotiate with the following ciphers:

- TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256
- TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384

RFC 6460 also lists a transitional Suite B profile for TLS 1.0 and TLS 1.1. Clients and servers that do not yet support Suite B TLS 1.2 should negotiate with the following ciphers:

- TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA
- TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA

There is no special configuration to ensure that PPS negotiates Suite B ciphers. However, the following general steps should be performed to enable Suite B compliance:

- An ECC certificate signed by an ECC Root CA is associated with a network port.
 - A P-256 CSR is signed by either a P-256 or P-384 Root CA.
 - A P-384 CSR is signed by a P-384 Root CA.
- Manually enable only AES128 and/or AES256 custom ciphers.



NOTE: PPS cannot be configured to allow only Suite B ciphers.

Using ECC Certificates

ECC certificates are currently supported only on the virtual appliance platforms. As with RSA certificates, ECC certificates are associated with a network port. You can create multiple virtual ports on the server with each port supporting a specific certificate. For example, external virtual port 1 can use a 1024-bit RSA while external virtual port 2 uses ECC P-256 and external virtual port 3 uses ECC P-384. Only clients that support ECC cipher suites can connect to the web server on that network port.

When an Elliptic Curve Cryptography (ECC) certificate is associated with a network port, only clients that support ECC cipher suites can connect to the Web server on that network port.

Except for the key and certificate generation process, the use of ECC certificates is basically the same as using RSA certificates.

FIPS Level 1 Support (Software FIPS)

This chapter covers the following topics:

- [Understanding Pulse Secure FIPS Level 1 Support](#)
- [FIPS Supported Platforms](#)
- [Enabling FIPS Level 1 Support](#)
- [Turning Off FIPS Level 1 Support from the Serial Console](#)

Understanding Pulse Secure FIPS Level 1 Support

Federal Information Processing Standard (FIPS) are a set of standards that define security requirements for products that implement cryptographic modules used to secure sensitive but unclassified information. The most recent standards are defined in the FIPS Publication 140-2.

The FIPS documents define, among other things, security levels for computer and networking equipment. U.S. Federal Government departments, and other organizations, use FIPS to evaluate the cryptographic capabilities of the equipment they consider for purchase. Cryptographic modules are validated against separate areas of the FIPS specification. An overall certification level is assigned based on the minimum level achieved in any area. Although primarily aimed at environments requiring strict security, FIPS levels are increasingly enforced as qualifying criteria for all U.S. Federal Government contracts. Security-conscious private enterprises might also use FIPS levels as an equipment evaluation benchmark. FIPS levels also serve as a customer-neutral description of vendor requirements. Vendors can engineer security products to FIPS levels and extend the applicability and eligibility of these products across a broad customer base, thereby eliminating exhaustive and time-consuming customer-by-customer product qualification procedures.

Pulse Secure offers FIPS level 1 support for PPS. Both services use a 140-2 level 1 certified cryptographic module to comply with FIPS. When FIPS level 1 support is enabled applications, such as browsers, accessing the web server must support Transport Layer Security (TLS), the latest version of Secure Socket Layer (SSL). If the platform features hardware acceleration, then for SSL processing SSL hardware acceleration is disabled as hardware acceleration does not comply with FIPS validation. Only FIPS approved algorithms are used when in FIPS level 1 support is enabled.

For more information about the Pulse Secure Cryptography Module, see the [security policy](#) and the [validation certificate](#). For a complete list of validated FIPS 140-1 and FIPS 140-2 cryptography modules, see <http://csrc.nist.gov/groups/STM/cmvp/documents/140-1/140val-all.htm#2018>.

FIPS Supported Platforms

The following platforms support FIPS level 1:

- PSA 300/3000/5000/7000
- PPS virtual appliances

Enabling FIPS Level 1 Support

Once you enable FIPS level 1 support, your browser is restricted to specific custom cipher strengths. A list of supported ciphers is shown during the enabling process.

When you enable FIPS level 1 support, the following events occur on the system:

- The Web server restarts and turns on FIPS level 1 support. The Web server now allows only TLSv1.0, TLSv1.1 and TLSv1.2 protocols that include FIPS approved cryptographic algorithms which include Suite B cipher suites.



NOTE: Once FIPS level 1 support is enabled, new client sessions will use FIPS if the client supports FIPS. Existing client sessions may not be using FIPS. To ensure FIPS capable clients are in FIPS level 1 support, all client sessions should be terminated after the FIPS level 1 support is enabled. Administrators can use the System > Status > Active Users page to terminate client sessions.

- If the platform features hardware acceleration, when FIPS level 1 support is enabled SSL processing does not utilize the hardware acceleration. IPsec hardware acceleration is not affected.

The following event logs are generated for FIPS level 1 support:

- SYS30966 when the web server turns FIPS level 1 support on.
- ADM30965 when the administrator turns FIPS level 1 support on or off.
- ERR30967 when the web server fails to turn on FIPS level 1 support.

To enable FIPS level 1 support:

1. Select System > Configuration > Security > Inbound SSL Options.
2. Under SSL FIPS Mode option, select Turn on FIPS mode.

Figure500: Enabling FIPS Level 1 Support

Configuration > Security > SSL Options

SSL Options

Configuration

Licensing | Pulse One | **Security** | Certificates | DMIL Agent | NCP | Sensors | Client Types | Pulse Collaboration | Virtual Desktops

User Record Synchronization | IKEv2 | SAML | Mobile | VPN Tunneling | Telemetry

Inbound SSL Options | Outbound SSL Options | Health Check Options | Miscellaneous

SSL NDcPP Mode option
When this option is enabled, the web service will be placed in NDcPP Mode. FIPS Mode will also be turned on and all non-FIPS ciphers will be disabled. The web service will restart.

☐ Turn on NDcPP mode

SSL FIPS Mode option
When this option is enabled, the web service will be placed in FIPS Mode and all non-FIPS ciphers will be disabled. The web service will restart. FIPS mode is a prerequisite for NDcPP Mode.

☒ Turn on FIPS mode

Inbound Settings

Allowed SSL and TLS Version
The older SSL V2 protocol has known security issues addressed by SSL V3 and TLS. It is no longer supported.

☐ Accept only TLS 1.2 and later (maximize security)
☐ Accept only TLS 1.1 and later
☒ Accept only TLS 1.0 and later
☐ Accept SSL V3 and TLS (maximize compatibility)

Allowed Encryption Strength
Strong ciphers (rated by the number of bits in the cipher) improve the security of SSL encryption, but some browsers may only support 40-bit ciphers. When there is more than one acceptable cipher, the Pulse Connect Secure will give preference to the cipher with the fastest data transfer rate, regardless of its relative encryption strength. Changing the encryption strength will cause the web service to restart. Please see the Setting Security Options section in the Admin guide for more details.

☐ PFS - Perfect Forward Secrecy
☐ SuiteB - Accept only SuiteB ciphers (Requires an ECC certificate)
☐ Maximize Security (High Ciphers)
☒ Maximize Compatibility (Medium Ciphers)
☐ Custom SSL Cipher Selection

[Show Selected Ciphers](#)

Encryption Strength option
Normally, the allowed encryption strength is enforced after an SSL session is established, so that a user that connects using a disallowed encryption strength will receive a web page describing the problem. The option below will prevent a browser with a weak cipher from establishing a connection. Changing this option will cause the web service to restart.

☒ Do not allow connections from browsers that only accept weaker ciphers

Key Exchange Options
If the Allowed Encryption Strength includes any DH ciphers, the system uses 1024bit DHE key exchange by default. The option below will increase key exchange strength to 2048bit DHE.

☒ Use 2048bit Diffie-Hellman key exchange

SSL Legacy Renegotiation Support option
When this option is enabled, renegotiation with clients and servers, which don't support the new TLS Renegotiation Info extension (defined in RFC 5746), will be allowed. When disabled, renegotiation with such clients and servers will not be allowed. Changing this option will cause the web service to restart.

☐ Enable support for SSL legacy renegotiation

Once you turn on FIPS level 1 support, the following changes are made:

- Under Allowed SSL and TLS Version, the Accept only TLS option is selected.
 - Under Allowed Encryption Strength, Maximize Compatibility (Medium Ciphers) is set. Only FIPS approved ciphers are selected. See [“Supported Cipher Suites when FIPS Level 1 Support is Enabled and Disabled”](#)
 - Under Encryption Strength, the Do not allow connections from browsers that only accept weaker ciphers option is selected.
3. Click Save Changes.

FIPS Level 1 support is now enabled on the device. If your browser does not support any of the listed ciphers, you will not be able to log in to the device.

When enabling FIPS mode on PPS, only the following protocols are FIPS compliant:

- EAP-TTLS

- EAP-PEAP
- EAP-TLS

A warning is displayed if non-FIPS protocols are configured on an PPS FIPS enabled device. However, these protocols are not disabled as they may be required for other use cases such as for the MAC authentication bridge.

Entries are made in the Events logs to show that FIPS level 1 support is enabled.

Figure501: Events Log Entries for FIPS Level 1

The screenshot displays the Pulse Secure web interface. The top navigation bar includes the Pulse Secure logo and a menu with options: System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail indicates the current location: Log/Monitoring > Events > Logs. The 'Events' tab is selected, showing a list of log categories: Log, Settings, and Filters. The 'Log' sub-tab is active. Below the tabs, there are controls for viewing the logs: a dropdown menu set to 'Standard:Standard (default)', a 'Show' button, and a text input set to '200' items. An 'Edit Query' field is also present. Below these are buttons for 'Update', 'Reset Query', and 'Save Query...'. Further down are buttons for 'Save Log As...', 'Clear Log', 'Save All Logs', and 'Clear All Logs'. The log entries are displayed in a table with columns for severity, ID, timestamp, and message. The entries show the FIPS mode being set and then turned on.

| Severity | ID | Timestamp | Message |
|----------|----------|--|---|
| Info | SYS30966 | 2012-11-11 21:32:20 - live - [127.0.0.1] | System()[] - FIPS Mode Set for web server |
| Minor | SYS10306 | 2012-11-11 21:32:19 - live - [127.0.0.1] | System()[] - Starting services: web server |
| Info | ADM30965 | 2012-11-11 21:32:13 - live - [127.0.0.1] | System()[] - FIPS Mode is now turned on. The web server will restart. |

Turning Off FIPS Level 1 Support from the Serial Console

| | |
|----------|--|
| Problem | Description: If you have FIPS level 1 support enabled and your browser does not support the required cipher suites, you cannot access the device. If this happens to an administrator account, you can no longer administer or configure the system. |
| Solution | <p>You can turn off FIPS level 1 support and reset the encryption strength from the device's serial console. After choosing that option, SSL options are reset to Accept only TLS 1.0 and later and to Maximize Compatibility (Medium Ciphers).</p> <p>Open a serial console to your device and select option 8. Turn off FIPS Mode and reset allowed encryption strength for SSL.</p> |

Turning Off FIPS Level 1 and Resetting Encryption Strength from the Serial Console

Please choose the operation to perform:

1. Network Settings and Tools
2. Create admin username and password
3. Display log/status
4. System Operations
5. Toggle password protection for the console (Off)
6. Create a Super Admin session.
7. System Maintenance
8. Turn off FIPS Mode and reset allowed encryption strength for SSL

Choice: 8



NOTE: Once you turn off FIPS level 1 support, option 8 is relabeled "Reset allowed encryption strength for SSL."

Supported Cipher Suites When FIPS Level 1 Support is Enabled

When FIPS level 1 support is enabled, only TLSv1.0, v1.1, v1.2 and AES256, 3DES and AES128 are allowed. The order of the cipher suites is not dependent on the SSL hardware acceleration module since hardware acceleration is not used when FIPS level 1 support is enabled.

When FIPS level 1 support is enabled, the following settings are automatically configured:

- In the SSL Options window:
 - Under Allowed SSL and TLS Version, the Accept only TLS option is selected. All other options under this section are disabled.
 - Under Allowed Encryption Strength, the Maximize Compatibility (Medium Ciphers) option is selected. Only FIPS approved ciphers are selected.
 - Under Encryption Strength Option, the Do not allow connections from browsers that only accept weaker ciphers option is selected.
- SSL hardware acceleration is disabled. IPsec hardware acceleration is not affected by the FIPS level 1 support being enabled.

The first four cipher suites in the below table are given preference due to the requirements in RFC 6460. The first two cipher suites meeting the requirement for Suite B Profile for TLS 1.2. The next two meeting the requirement for Suite B Transitional Profile for TLS 1.0 and 1.1.

Table94: Supported Cipher Suites with FIPS Level 1 Support ON, Hardware Acceleration ON with ECC Server Certificates

| Cipher Suite | Protocol |
|---|-------------------|
| TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA384 | TLSv1.2 |
| TLS_ECDH_RSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_ECDH_RSA_WITH_AES_256_CBC_SHA384 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_256_CBC_SHA384 | TLSv1.2 |
| TLS_ECDH_RSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_ECDH_ECDSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_ECDH_RSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_ECDH_ECDSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_ECDH_RSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_ECDH_RSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_DHE_RSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_DHE_RSA_WITH_AES_128_CBC_SHA | TLSv1.0 and later |

Table95: Supported Cipher Suites with FIPS Level 1 Support ON, Hardware Acceleration ON and RSA Server Certificates in Use

| Cipher Suite | Protocol |
|---------------------------------------|-------------------|
| TLS_RSA_WITH_AES_256_CBC_SHA256 | TLSv1.2 |
| TLS_RSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_RSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_RSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_RSA_WITH_AES_128_CBC_SHA | TLSv1.0 and later |
| TLS_RSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_RSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA384 | TLSv1.2 |
| TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_RSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |

| Cipher Suite | Protocol |
|---------------------------------------|-------------------|
| TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_DHE_RSA_WITH_AES_256_CBC_SHA | TLS1.0 and later |
| TLS_DHE_RSA_WITH_AES_128_CBC_SHA | TLS1.0 and later |

Table96: Supported Cipher Suites with FIPS Level 1 Support ON, Hardware Acceleration OFF with RSA Device Certificates

| Cipher Suite | Protocol |
|---------------------------------------|-------------------|
| TLS_RSA_WITH_AES_256_CBC_SHA256 | TLSv1.2 |
| TLS_RSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_RSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_RSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_RSA_WITH_AES_128_CBC_SHA | TLSv1.0 and later |
| TLS_RSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_RSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA384 | TLSv1.2 |
| TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_RSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_DHE_RSA_WITH_AES_256_CBC_SHA | TLS1.0 and later |
| TLS_DHE_RSA_WITH_AES_128_CBC_SHA | TLS1.0 and later |

Table97: Supported Cipher Suites with FIPS Level 1 Support ON, Hardware Acceleration OFF with ECC Certificates

| Cipher Suite | Protocol |
|---|-------------------|
| TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |
| TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA384 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_256_GCM_SHA384 | TLSv1.2 |

| Cipher Suite | Protocol |
|---|-------------------|
| TLS_ECDH_ECDSA_WITH_AES_256_CBC_SHA384 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_256_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_ECDH_ECDSA_WITH_3DES_EDE_CBC_SHA | TLSv1.0 and later |
| TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_128_GCM_SHA256 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_128_CBC_SHA256 | TLSv1.2 |
| TLS_ECDH_ECDSA_WITH_AES_128_CBC_SHA | TLS1.0 and later |

File Management

This chapter describes features for managing configuration files. It includes the following information:

- [Overview](#)
- [Configuration](#)

Overview

The system supports multiple administrator capabilities related to configuration and log file management. The below list describes the purpose of the different features:

- Archiving- This feature helps to archive system and user configuration files and user logs on a remote backup server. It also helps in scheduling the archiving jobs. The system allows to import the configurations archived.
- Local backup and restore- This feature helps to create backups on the local system and then recover or restore the data during a disaster or while doing significant configuration changes.
- Binary configuration file import/export- This feature helps to export or import the system (system.cfg) and user configuration (user.cfg) in a binary format to replicate the configuration across multiple systems and across the system upgrades.
- XML configuration file import/export- This feature helps to selectively or fully import or export the configuration in an XML format from one PPS device to another. The XML configurations can be modified for system details such as IP address and so on before importing.
- Push Configuration- This feature helps to push a partial configuration from one PPS device to one or more PPS devices directly.

Configuration

The Admin can perform the following configuration procedures:

- [Archiving](#)
- [Backup and Restore](#)
- [Importing/Exporting Binary System Configuration Files](#)
- [Importing/Exporting Binary User Configuration Files](#)
- [Importing/Exporting XML Configuration Files](#)
- [Exporting Universal XML](#)
- [Modifying Configuration XML Files](#)
- [Pushing the Configuration](#)

Archiving

The Admin must configure the archiving backup server details to transfer the files. You can also schedule the archiving jobs.

NOTE:

- The system does not continue to retry the process if it fails, and log files are not deleted.
- It is recommended to schedule an archive operation when traffic is low to minimize its impact on users. The automatic archiving process compresses files and may lead to performance issues.
- The daylight savings time (DST) must be considered while scheduling the archiving.

To configure log archiving:

1. Select Maintenance > Archiving > Archiving Servers to display the configuration page.
2. Complete the configuration as described below.
3. Save the configuration.

Figure502: Archiving Configuration Page

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy **Maintenance** Wizards

Archiving > Archiving Servers

Archiving Servers Local Backups

You can schedule automatic archiving of log data, system configuration, and user accounts. To do so, specify an FTP accessible location for the data, an FTP account to use, and the specific schedule for each type of archived data.

▼ Archive Settings

Archive Server: Name or IP address

Destination Directory:

Username:

Password:

Method: ☒ SCP ☐ FTP

▼ Archive Schedule

Select one or more components to schedule an archive.

☐ Archive events log

☐ Archive user access log

☐ Archive admin access log

☐ Archive Sensors log

☐ Archive system configuration

☐ Archive user accounts

☐ Archive XML configuration

☐ Archive Debug Log

☐ Archive Periodic SnapShots

[Save Changes](#)

Table98: Archiving Configuration Guidelines

| Settings | Guidelines |
|-----------------------|--|
| Archive Settings | |
| Archive Server | Specify the fully qualified domain name or IP address of the server to which to send the archive files. |
| Destination Directory | <p>Specify the destination directory. Follow these recommendations:</p> <ul style="list-style-type: none"> For UNIX systems, you can specify an absolute or relative path. We recommend you specify a full path. For Windows systems, specify a path that is relative to the ftproot directory. We recommend you specify a full path. <p>Do not include a drive specification for the destination directory, such as: pulsesecure/log.</p> |
| Username | Specify a username that has privileges to log into the server and write to the destination directory. |
| Password | Specify the corresponding password. |
| Method | <p>Select SCP or FTP.</p> <p>SCP is the default method. SCP is a file transfer utility similar to FTP. SCP encrypts all data during transfer. When the data reaches its destination, it is rendered in its original format. SCP is included in most SSH distributions and is available on all major operating system platforms.</p> |
| Archive Schedule | |

| | |
|------------------------------|---|
| Archive events log | <p>Schedule archiving for the Events log. The archive file has the following format:</p> <p>PulseSecureEventsLog-[clustername standalone]-[nodename hostname]-[date]-[time]</p> <p>For example, an archive file for a cluster named Gen has a filename similar to the following: PulseSecureEventsLog-Gen-node1-Root-20090109-1545.gz.</p> <p>The archiving schedule configuration includes the following options:</p> <ul style="list-style-type: none"> • Use this filter—Select a log format filter. • Day of week—Select the days of the week on which to run the archiving job. • Every hour or a Specified Time. Every hour option runs a job every hour on the hour for the selected days. The specified time option runs a job once on the selected days. • Clear log after archiving. Select this option to clear the local log file after the archiving job is successfully completed. If an archive job fails, the log files are not deleted. • Password—(Optional) Specify a password to secure and encrypt system configuration or user account archives. |
| Archive user access log | <p>Schedule archiving for the User Access log. The archive file has the following format:</p> <p>PulseSecureAccessLog-[clustername standalone]- [nodename hostname]-[date]-[time]</p> <p>The archiving schedule configuration includes the same options as those described for the Events log.</p> |
| Archive admin access log | <p>Schedule archiving for the Admin Access log. The archive file has the following format:</p> <p>PulseSecureAdminLog-[clustername standalone]- [nodename hostname]-[date]-[time]</p> <p>The archiving schedule configuration includes the same options as those described for the Events log.</p> |
| Archive sensors log | <p>Schedule archiving for the Sensors log. The archive file has the following format:</p> <p>PulseSecureSensorsLog-[clustername standalone]- [nodename hostname]-[date]-[time]</p> <p>The archiving schedule configuration includes the same options as those described for the Events log.</p> |
| Archive system configuration | <p>Schedule archiving for the system configuration binary file (system.cfg). The archive file has the following format:</p> <p>PulseSecureConf-[clustername standalone]- [nodename hostname]-[date]-[time]</p> <p>The archiving schedule configuration includes the same day, time, and password-protection options as those described for the Events log.</p> |
| Archive user accounts | <p>Schedule archiving for user account configuration binary file (user.cfg). The archive file has the following format:</p> <p>PulseSecureUserAccounts-[clustername standalone]- [nodename hostname]-[date]-[time]</p> <p>The archiving schedule configuration includes the same day, time, and password-protection options as those described for the Events log.</p> |
| Archive XML configuration | <p>Schedule archiving for the XML configuration files.</p> <p>The archiving schedule configuration includes the same day and time options as those described for the Events log.</p> |
| Archive debug log | <p>Enable archiving for collected debug logs.</p> <p>You cannot specify a day and time for archiving debug logs. If you select this option, debug logs are archived periodically and cleared if the Clear log after archiving option is selected.</p> |
| Archive periodic snapshots | <p>Enable archiving for snapshots.</p> <p>You cannot specify a day and time for archiving periodic snapshots. If you select this option, snapshots are archived periodically.</p> |

Backup and Restore

Using the backup and restore feature the Administrator can take the system and user account backup and restore it as needed.

NOTE: System allows you to save five system configuration backups and five user account backups on the local server.

To manage configuration file backups:

1. Select Maintenance > Archiving > Local Backups to display the configuration page.
2. Use the controls to backup or restore the configuration as described below.
3. Save the configuration.

Figure503: Local Backups Management Page

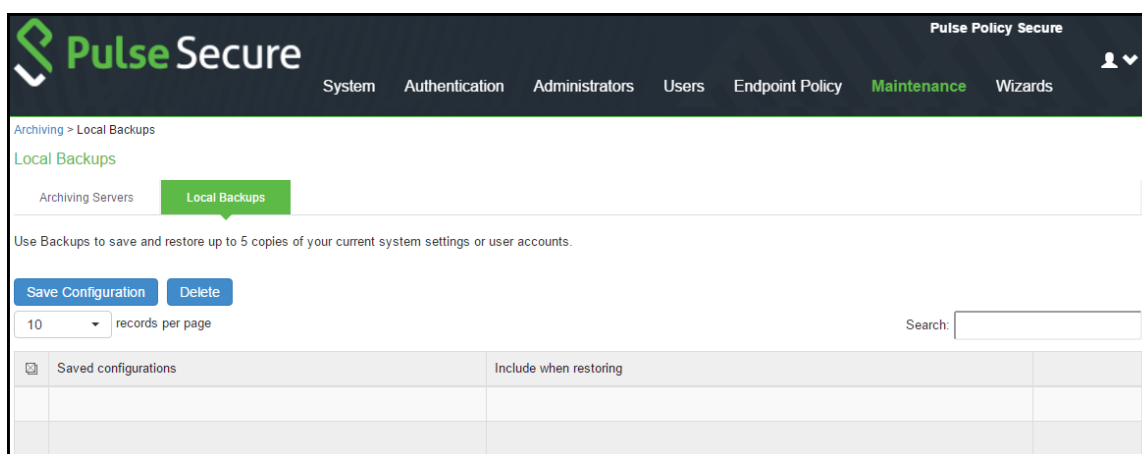


Table99: Local Backups Management Guidelines

| Controls | Guidelines |
|----------------------|---|
| System Configuration | |
| Save Configuration | Create a backup of the running configuration. |
| Delete | Select a row in the table and click Delete to delete the backup. |
| Restore | Select a row in the table and components in the "Include when restoring" column and click Restore to replace the running configuration with the archived configuration. |
| User Configuration | |
| Save Configuration | Create a backup of the running configuration. |
| Delete | Select a row in the table and click Delete to delete the backup. |
| Restore | Select a row in the table and click Restore to replace the running configuration with the archived configuration. |

Importing/Exporting Binary System Configuration Files

PPS enables you to import and export the system and network settings using binary system configuration files. When importing a system configuration file, you can exclude the device certificate and the server's IP address or network settings

from the imported information. For example, to set up multiple PPS systems behind a load balancer, import everything except for the IP address. To set up the system as a backup server, import everything except for the digital certificate and the network settings.

The binary system configuration file includes the following settings:

- Network settings
- Certificates. The system imports only device certificates, not the chains that correspond to the device certificates or trusted client CAs.
- Cluster configuration
- Licenses. When you import a configuration file that contains licenses, the system gives precedence to any existing licenses. Licenses are imported only if no licenses are currently installed.
- SNMP settings
- Sensor configuration. Sensor configurations are included in the system configuration file while sensor event policies are included in the user configuration file. To import or export all sensor-related settings, import or export both the system and user configuration files. The user configuration file, not the system configuration file, includes resource profiles, resource policies, and the local user database. To perform a complete backup, export both the system and user configuration files.
- Client-side logs. To import or export client-side logs, import or export both the system and user configuration files.



NOTE:

- Import of system and user configuration across different hardware platforms is not supported.
- You can import a FIPS configuration file into a non-FIPS device and vice versa if you do not include the certificate and security world in the import process.

To export a binary system configuration file:

1. Select Maintenance > Import/Export > Import/Export Configuration to display the configuration page.
2. Complete the configuration and import/export operation as described below.

Figure504: Export/Import Binary System Configuration File Configuration Page

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy **Maintenance** Wizards

Import/Export > System Configuration

System Configuration

Configuration User Accounts XML Import/Export

Export

To export system settings to a configuration file, click Save Config As. You can optionally password-protect this file:

Password for configuration file:

Confirm Password:

Save Config As...

Import

To import system settings from a configuration file, select the configuration file and which settings to bring in, and click Import Config.

Options: ☐ Import Device Certificate(s)?
Note: Checking this will overwrite the existing Device Certificate(s).

Other Import Options: ☐ Import everything (except Device Certificate(s))
☐ Import everything but the IP address
Preserves the IP address, netmask, default gateway, VIPs, ARPs and routes of the network interfaces on this device.
 Note: Use this option only if the exported configuration file is from a standalone node.
☒ Import everything except network settings, cluster settings and licenses
Leaves everything in Network Settings, Clustering Properties, Licensing sections and Onboarding Profile UUID unchanged.
 Note: Always use this option if configuration file was exported from a node that is part of a cluster.
☐ Import only Device Certificate(s)
Imports the Device Certificate(s) only.
 Note: You must check the Import Device Certificate(s) checkbox above.

Config File: **Browse** No file chosen

Password: Use this if the configuration file was password-protected

Note that importing configuration with a different SSL acceleration setting will reboot the IVE.

Import Config

Table100: Import/Export Binary System Configuration File Configuration and Action Guidelines

| Settings | Guidelines |
|--|---|
| Export | |
| Password for configuration file | Specify a password to encrypt and secure the configuration file. |
| Confirm password | Specify the password. |
| Save Config As | Display a dialog box to save the file to your local host. |
| Import | |
| Import Device Certificate(s)? | <p>Overwrite the existing device certificate(s) with the ones in the imported configuration file.</p> <p>NOTE: When importing a device certificate in to a FIPS device, note that you must choose a certificate that uses a FIPS-compliant private key. To ensure FIPS-compliance, select a certificate and corresponding security world private keys were generated on a FIPS device.</p> |
| Other Import Options | |
| Import everything (except Device Certificate(s)) | Import all settings except the device certificate. |

| Settings | Guidelines |
|--|--|
| Import everything but the IP address | Do not overwrite the existing configuration for network interface IP addresses, netmask, default gateway, virtual interfaces, ARP tables, and route tables. Use this option only if the exported configuration file is from a standalone node. TIP: To set up multiple nodes in a cluster behind a load balancer, import everything except the IP address. |
| Import everything except network settings and licenses | Do not allow the imported configuration to change the existing configuration for settings found in the Network Settings and Licensing sections. With this option, network configurations, licenses, cluster configurations, certificates, defined SNMP settings and syslog configurations are not imported. Always use this option if configuration file was exported from a node that is part of a cluster. TIP: To set up a backup node, import everything except network settings and digital certificates. |
| Import only Device Certificate(s) | Import the device certificate(s) only. You also must select the Import Device Certificate(s) check box. |
| Config file | Use the browse button to locate and select the file from your local host. |
| Password | Specify the password (if applicable). |
| Import Config | Import the configuration file. |

Importing/Exporting Binary User Configuration Files

PPS allows you to import/export the system and network settings using binary configuration files. In general, if a menu item falls under the Authentication, Administration, or Users menu, the item is included in the user configuration file (user.cfg). The exception is Sensors event policies, which are under System, but which are exported in the user configuration file. The user configuration file includes the following settings:

- Sign-in settings (includes sign-in policies, sign-in pages, all authentication servers, authentication protocol sets, Pulse Client settings)
- Authentication realms (including admin realms, user realms, and MAC authentication realms)
- Roles
- Network access.
- Infranet Enforcers.
- Host Enforcer.
- Resource policies
- Sensor event policies
- User accounts
- Client-side logs. To export or import client-side logs, export or import both the system and user configuration files.

To export a binary user configuration file:

1. Select Maintenance > Import/Export > Import/Export Users to display the configuration page.
2. Complete the configuration and export/import operation as described below.

Figure505: Binary Export/Import User Configuration File Configuration Page

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance' (highlighted), and 'Wizards'. The breadcrumb trail is 'Import/Export > User Configuration'. The 'User Configuration' section has three tabs: 'Configuration', 'User Accounts' (active), and 'XML Import/Export'. Under the 'User Accounts' tab, there are two main sections: 'Export' and 'Import'. The 'Export' section includes a description, two password input fields, and a 'Save Config As...' button. The 'Import' section includes a description, a 'Browse' button, a file selection area showing 'No file chosen', a password input field, and an 'Import Config' button.

Table101: Binary Export User Configuration File Configuration and Action Guidelines

| Settings | Guidelines |
|---------------------------------|---|
| Export | |
| Password for configuration file | (Optional) Specify a password to encrypt and secure the configuration file. |
| Confirm password | Specify the password. |
| Save Config As | Display a dialog box to save the file to your local host. |
| Import | |
| Browse | Locate and select the file from your local host. |
| Password | Specify the password (if applicable). |
| Import Config | Import the configuration file. |

Importing/Exporting XML Configuration Files

The Admin can save the system and user configuration in XML format. This enables the system to replicate the configurations.

This will help in the following use cases:

- Adding to the configurations of peer nodes, for example, adding many users.
- Modifying multiple instances of a single setting, for example, an authentication server name.
- Deleting settings, for example, deleting authentication servers that are no longer used.
- Creating a configuration template to use for setting up new nodes.
- Tracking configuration changes by comparing differences on periodic exports.

Guidelines and Limitations

The below table summarizes the guidelines and limitations for using the XML import/export feature.

Table102: XML Import/Export Guidelines and Limitations

| Category | Guidelines and Limitations |
|----------|---|
| General | <p>The following guidelines and limitations apply:</p> <ul style="list-style-type: none"> You can import and export configuration files only between systems running the same software version. You might find it useful to use a text editor to modify configuration elements that ought to be distinguished, such as configuration object names and descriptions. Never modify the names of the NIC identifiers. The system relies on knowing that each appliance has two interface cards, known as NIC0 and NIC1. Immediately after importing an Active Directory authentication server configuration, you must edit the configuration to change the Computer Object name. Unexpected problems might arise if two systems join an Active Directory domain using the same Computer Object name. |
| Licenses | <p>The following rules apply to exported and imported licenses:</p> <ul style="list-style-type: none"> You cannot edit the license data that is exported. It is encrypted. An XML import of licenses is valid only if the system does not currently have a license installed. If a license is installed already, any imported licenses are dropped. If you still intend to import a license, you must perform a factory reset before you perform the import operation. If you import a license after deleting a temporary license, the imported license is dropped because you might still be able to reactivate the deleted license. The import operation preserves any licensing data. |
| Clusters | <p>The following guidelines apply to importing a configuration file for nodes that belong to a cluster:</p> <ul style="list-style-type: none"> When you perform an import operation on a cluster, all the cluster nodes must be enabled and running. If you attempt to import a configuration into a cluster in which a node is not running, the import operation might hang or your import results might be unpredictable. The XML configuration that you import must contain the same set of nodes as the original cluster. The signature used to synchronize the cluster when the nodes are reenabled is derived from the IP addresses of the cluster nodes. Therefore, the remaining nodes cannot rejoin the cluster if the imported configuration yields a different signature. When import occurs, the imported configuration file overwrites the node-specific cluster configuration network settings of the remaining nodes. If you change the node-specific network settings, make sure you do not make the remaining nodes unreachable. After you have exported the file, do not modify settings that could render the primary node unreachable, such as changes to network settings. After you have exported the file, do not modify the XML to change the node name, IP address, or IP netmask. After you have exported the file, do not modify virtual port settings or add new virtual port settings. |

To export/import an XML configuration file:

1. Select Maintenance > Import/Export > Export/Import XML to display the configuration page.
2. Complete the configuration and export/import operation as described below.

Figure506: Export/Import XML File Configuration Page

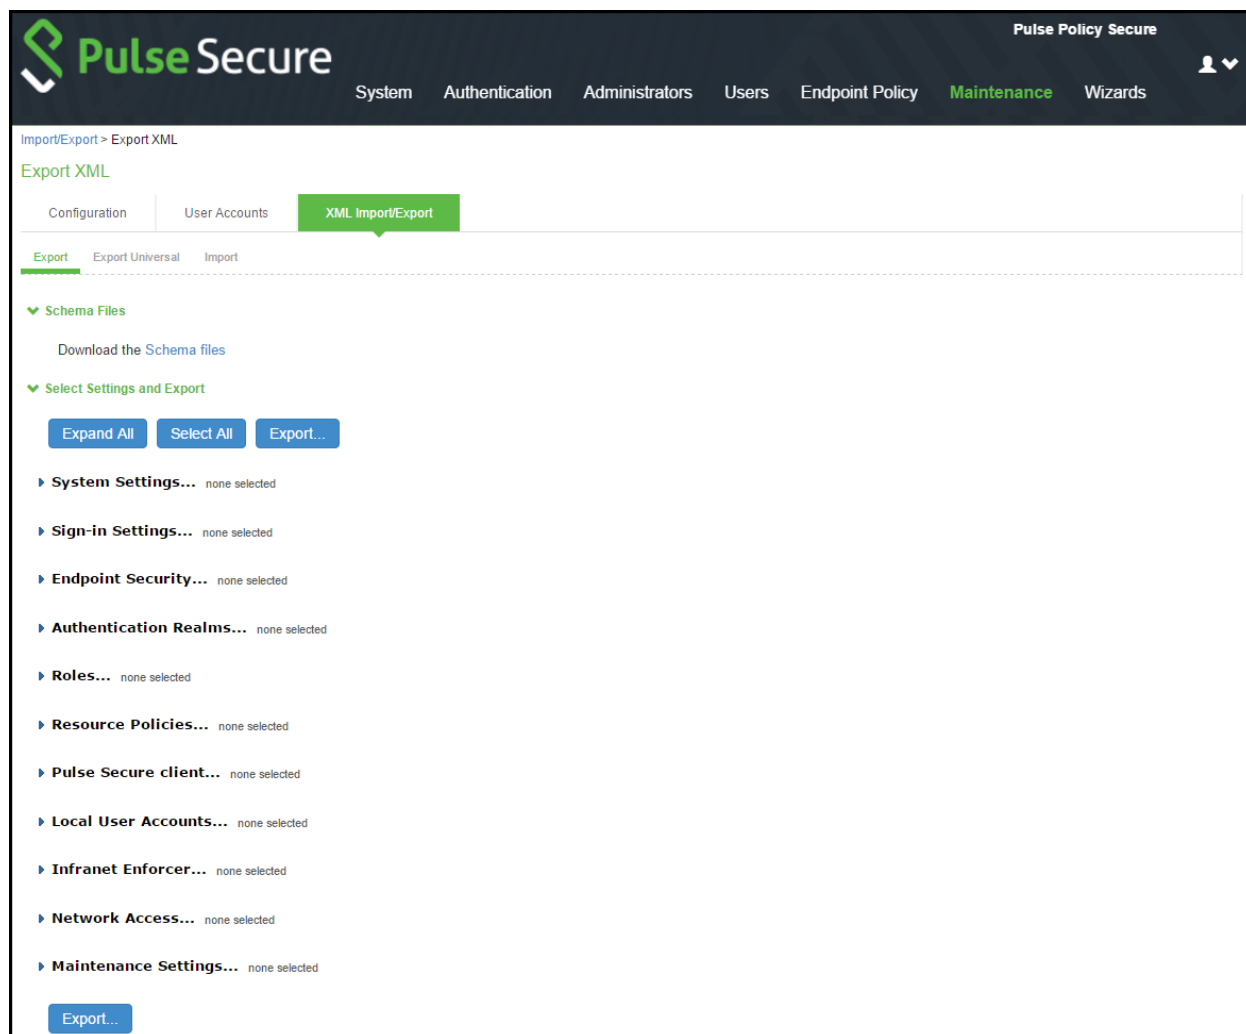


Figure507: Import XML File Configuration Page

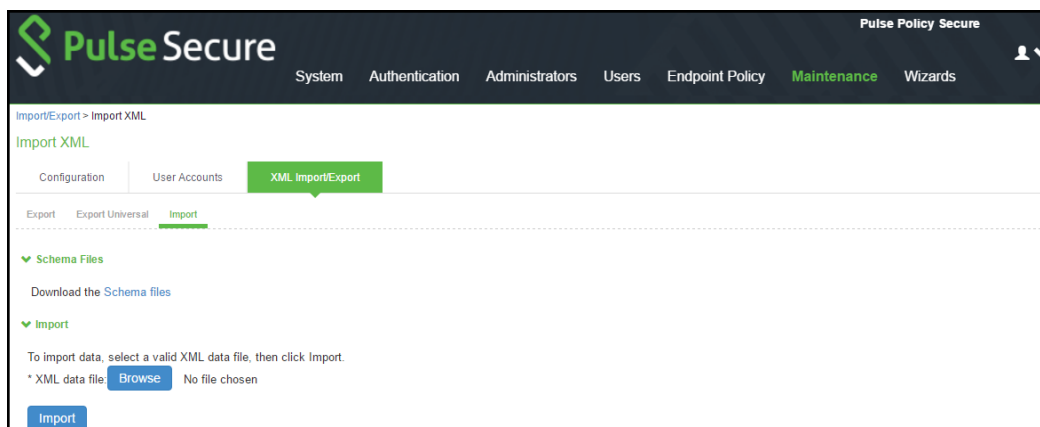


Table103: Export/Import XML File Configuration and Action Guidelines

| Settings | Guidelines |
|----------------------------|---|
| Export | |
| Schema Files | |
| Schema files | Download the XML schema definition (.xsd) files that describe the XML. |
| Select Settings and Export | |
| Expand All | Expand the display of all settings groups. |
| Select All | Select all settings for all groups. |
| Export | Export the selected configuration data to an XML file. |
| Settings | |
| System | Expand this group and select settings found under the System menu. NOTE: Do not select the DMI Agent unless Technical Support instructs you to do so. |
| Sign-in | Expand this group and select settings found under the Sign-in menu. |
| Endpoint Security | Expand this group and select settings found under the Endpoint Security menu. NOTE: ESAP packages are encrypted when exported. |
| Authentication Realms | Expand this group and select authentication realm settings, including user realms and MAC address authentication realms. |
| Roles | Expand this group and select settings found under the Roles menu. |
| Resource Policies | Expand this group and select settings resource policies settings. |
| Pulse Secure | Expand this group and select settings found under the Pulse Secure menu. |
| Local User Accounts | Expand this group and select local authentication server settings. |
| Infranet Enforcer | Expand this group and select settings found under the Infranet Enforcer menu. |
| Network Access | Policy Secure only. |
| Maintenance | Expand this group and select settings found under the Maintenance menu. |
| Export Settings? | |
| Export | Export the selected configuration data to an XML file. |

| Settings | | Guidelines | |
|---------------|--|------------|--|
| Import | | | |
| Schema Files | | | |
| Schema files | Download the XML schema definition (.xsd) files that describe the XML. | | |
| Import | | | |
| XML data file | Locate and select the XML file. | | |
| Import | Import the file. The Import XML Results page is displayed. This page contains information about the imported network settings, roles, resource policies, and other settings. If there are errors in the XML, the import operation stops and rolls back the configuration to the previous state. Error messages are displayed on the Import XML Results page. | | |

Exporting Universal XML

The Universal Export Page is used to create XML configuration data that can be imported by either PPS or PCS. This export page only contains configuration items that can be imported by either appliance type. To export the entire configuration including appliance specific configuration data use the Export page.

Import/Export > Export Universal XML

Export Universal XML

Configuration | User Accounts | **XML Import/Export**

Export | **Export Universal** | Import

The Universal Export Page is used to create XML configuration data that can be imported by either Pulse Policy Secure or Pulse Connect Secure. This export page only contains configuration items that can be imported by either appliance type. To export the entire configuration including appliance specific configuration data use the [Export](#) page.

▼ Select Settings and Export

[Expand All](#) [Select All](#) [Export...](#)

▼ **Endpoint Security...** none selected

☐ Select All Endpoint Settings

Host Checker
All | None

Host Checker Options
All | None

☐ General options (interval, process-timeout, auto-upgrade, dynamic policy)

☐ Virus Signatures list

Host Checker Policies

☒ None

☐ ALL policies

☐ SELECTED policies...

☐ Remote IMV (servers and IMV)

ESAP Versions

☒ None

☐ ALL ESAPs

☐ SELECTED ESAPs...

▼ **Pulse Secure client...** none selected

☐ Select All Configurations

Pulse Secure Connections

☒ None

☐ From ALL connections

☐ From SELECTED connections...

Pulse Secure Components

☒ None

☐ From ALL components

☐ From SELECTED components...

Pulse Secure Versions

☒ None

☐ From ALL versions

☐ From SELECTED versions...

[Export...](#)

Modifying Configuration XML Files

This topic provides guidelines for modifying an exported configuration file. It includes the following information:

- [Understanding the XML Export File](#)
- [Comparing Configuration Settings and Values Shown in the User Interface with the Ones in the XML File](#)
- [Understanding Referential Integrity Constraints](#)
- [Using Operation Attributes](#)

Understanding the XML Export File

When you export a configuration file, the system saves the configuration as an XML file. The data in the exported file is based on the selections you make when you configure the export operation. The file contains all the required XML processing instructions and namespace declarations, which must be included exactly as defined.

The below table provides some basic information and guidelines to help you understand the structured XML used in the export file.

Table104: Structured XML Files: Basic Information and Guidelines

| Topic | Guideline |
|-----------------------------------|--|
| XML schema definition (.xsd) file | <p>The export is based on an XML schema. The schema is a separate file that defines the metadata, and that serves as a model or a template for the exported file. Use the XML schema file to:</p> <ul style="list-style-type: none"> Identify the structure and sequence of configuration objects. Identify optional and required elements, allowable values, default values, and other attributes of the configuration objects. <p>You can download the XML schema definition (.xsd) file in either of the following ways:</p> <ul style="list-style-type: none"> From the XML Import/Export pages by clicking a link. From the URL where the files are stored on the system (you do not need to sign in). <p>To access the .xsd file, access the following URL:</p> <p><a href="https://<IP-or-hostname>/dana-na/xml/config.xsd">https://<IP-or-hostname>/dana-na/xml/config.xsd</p> |
| Elements | <p>An element is a discrete XML unit that defines an object or part of an object. The element typically consists of a pair of tags that may or may not surround string data. Tags are surrounded by angle brackets (< >).</p> |
| Namespaces | <p>Namespaces allow you to use the same words or labels in your code from different contexts or XML vocabularies. Prefixing elements with namespace qualifiers allows the XML file to include references to different objects that originate in different XML vocabularies and that share the same name. If you do not prefix elements with namespace qualifiers, the namespace is the default XML namespace, and you refer to element type names in that namespace without a prefix.</p> <p>When you see namespace identifiers in your XML files, you do not need to be concerned about them, as long as you do not delete or modify the identifiers.</p> |
| Element Sequence | <p>You should avoid changing the sequence of elements in the XML file, whenever possible. Although the schema does not enforce sequence in all cases, you gain no benefit from changing the order of elements from the order in which they appear in the exported file, and, in some cases, you might invalidate the XML structure by changing element sequence.</p> |

Every XML tag fits into one of the following XML tag types:

- Start tag**—Defines the beginning of an element. The start tag consists of an open angle bracket (<), a name, zero or more attributes, and a close angle bracket (>). Every start tag must be followed by an end tag at some point in the document.
- End tag**—Defines the end of an element. The end tag consists of an open angle bracket and a forward slash (</), followed by the same name defined in its corresponding start tag, and ends with a close angle bracket (>).
- Empty tag**—The empty tag is denoted in two forms. If a tag pair has no data between them, the tag pair is considered an empty tag. Officially, according to the XML specification, an empty tag looks something like this:

```
<<empty tag example/>>
```

In this form, the empty tag consists of an open angle bracket (<), followed by an element name, a slash and a close angle bracket (/>). When you see an empty tag in your configuration files, it signifies an element that the schema requires to be included in the XML file, but whose data is optional.

Start tags can contain attributes, and tag pairs (elements) can contain additional elements. The following example shows an XML file for the Users object. In this example, you see only the Administrator configuration settings.

```
<configuration xmlns="http://xml.sample.net/x"
xmlns: xsi="http://www.w3.org/2001/XMLSchema-instance">
  <authentication>
    <auth-servers>
      <auth-server>
        <local>
          <users>
            <user>
              <username>admin</username>
              <fullname>Platform Administrator</fullname>
              <password-encrypted>3u+U</password-encrypted>
              <one-time-use>false</one-time-use>
              <enabled>true</enabled>
              <change-password-at-signin>false</change-password-at-signin>
            </user>
          </users>
        </local>
        <name>Administrators</name>
      </auth-server>
```

You make changes to the string data that is displayed between start and end tags. For example, using the preceding example, you can add to or change the following elements:

- <username>admin</username>
- <fullname>Platform Administrator</fullname>
- <password-cleartext>password</password-cleartext>
- <change-password-at-signin>false</change-password-at-signin>
- <name>Administrators</name>



NOTE: The preceding sample displays the password element's data as encrypted data. You can modify the password if you change the element to password-clear text. If you modify the password, the password value is visible until it is imported back into the system. Once imported, the system encrypts the password.

If you enter passwords for new users in clear text format, the passwords are visible in the file, therefore, you might consider setting the Change Password at Next Login option to true.



NOTE:

- Use the password-clear text element and enter a text password when changing passwords through the XML file.

If you change a user for a given authentication server or an authentication server for a given user, you are creating a different user, not updating an existing user or authentication server. User and authentication server together logically define a unique user.

Comparing Configuration Settings

The elements in the XML file are closely related to the objects and their options as you see them in the admin console. The element names in the XML instance file correlate closely with the displayed object and option names.

For example, select Users > User Roles > [Role] > General > Session Options. The admin console renders the possible values for a roaming session as an option button group, consisting of the values:

- Enabled
- Limit to subnet
- Disabled

The following snippet from the exported configuration file shows the session options for the Users role. On the bolded line, the roaming session option is disabled:

```
<session-options><SessionOptions>
  <MaxTimeout>60</MaxTimeout>
  <RoamingNetmask />
  <Roaming>disabled</Roaming>
  <PersistentSession>>false</PersistentSession>
</SessionOptions>
```

In the schema file, you can locate the allowable values for the roaming session option:

```
<Attribute roaming:START>
<xsd:element name="roaming" minOccurs="0">
...
  <xsd:enumeration value="enabled">
...
  <xsd:enumeration value="limit-to-subnet">
...
  <xsd:enumeration value="disabled">
...
</xsd:element>
<Attribute roaming:END>
```

To change the value for the roaming session from Disabled to Limit to subnet, replace disabled with limit-to-subnet.

This example shows that the admin console often provides all the allowable values, displayed either in an option button group, as check boxes, as list boxes, or as other types of user interface components. The XML file displays only the current state of your configuration. The schema file displays all the actual values for the configuration options that are supported.


Understanding Referential Integrity Constraints

The system configuration objects are part of a data model that is enforced using referential integrity constraints. You cannot change these constraints, but you should understand them before you attempt to delete objects that maintain dependencies to other objects.

If you violate the referential integrity constraints, your import operation fails.

In the below figure the boxes represent object types and the arrows represent dependent relationships between the object types. Arrows point from dependent objects to objects.

Figure508: Object Referential Integrity Constraints

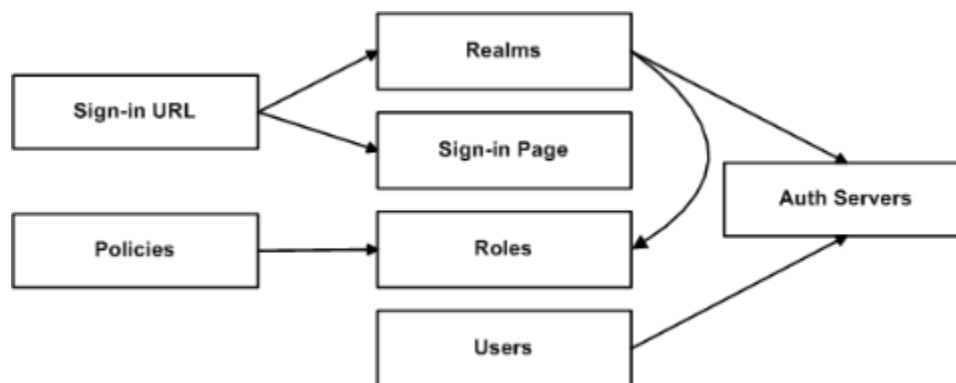

The system does not allow you to delete an object on which another object depends. Conversely, when you add an object, you must add any other objects on which that object depends.

Sign-in URLs depend upon realms and sign-in pages. Realms depend upon both authentication servers and roles. Policies depend upon roles. Users depend upon authentication servers.

Consider the following scenarios based on the preceding figure:

- If you add sign-in URLs, you must add realms, sign-in pages, roles, and authentication servers. You need to add an authentication server and at least one role to support the realm, and you must add the realm and the sign-in page to support the new sign-in URL.
- If you add a user, you must be able to assign it to an authentication server. If there is no authentication server on the target node yet, you must add one in the XML file.
- If you add a policy, you must be able to assign it to a role. If there is no role on the target system, you must add one in the XML file.
- If you delete an authentication server, you might strand realms and users, therefore, you need to make sure no realms or users depend on the authentication server before you attempt to delete it.
- If you delete a role, you might strand policies and realms. To delete a role, you must first delete any policy that depends upon the role, or reassign associated policies to another role. Also, to delete a role, you must first delete or reassign any realm that depends upon that role.
- If you delete a sign-in page, you might strand one or more sign-in URLs. To delete a sign-in page, you must first delete any associated sign-in URLs or reassign them to other sign-in pages.

Referential integrity checks are performed only during XML import.

Using Operation Attributes

Operation attributes define the positioning or action of XML data within the schema. If you do not specify an operation attribute, the modified data is merged by default.

XML data with an operation attribute has the following format:

```

<object1 xc:operation="operator for object1 and its children unless new operator is defined">
  ...
  <object2>
    ...
    <object3 xc:operation="operator for object3">
      ...
    </object3>
  ...

```

```

    </object2>
    ...
  </object1>

```

The operation attribute is applied to all children objects unless a different operation attribute is defined in children objects.

The following operation attributes are supported:

- **Merge**—The configuration data identified by the element that contains this attribute is merged with the configuration at the corresponding level in the configuration datastore identified by the target parameter. This is the default behavior.
- **Replace**—The configuration data identified by the element that contains this attribute replaces any related configuration in the configuration datastore identified by the target parameter. Only the configuration present in the configuration parameter is affected.
- **Create**—The configuration data identified by the element that contains this attribute is added to the configuration if and only if the configuration data does not already exist on the device.
- **Delete**—The configuration data identified by the element that contains this attribute is deleted in the configuration datastore identified by the target parameter.
- **Insert before**—Changes the position of a configuration element in an ordered set.
- **Insert after**—Changes the position of a configuration element in an ordered set.
- **Rename**—Changes the name of one or more of a configuration object's identifiers.

If you are merging a list of objects to an existing list of objects in the configuration store, the results of the merged list might be unexpected. During a merge operation, the order of the objects in the new list is not maintained. If you are importing a list of objects and would like to preserve the order of the new list, you should use the replace operation attribute. You can also use insert before or insert after to ensure that you produce the hierarchy that you intended.

Operation attributes are applied to elements recursively unless new operators are also defined within lower-level elements. There are limitations on the legal operator that can be used in child elements without conflict with the parent operator. The table below shows the legal operator relationships between parent and child elements.

Table105: Legal Operator Attribute Relationships

| Child > V-Parent | Create | Merge | Replace | Delete | Insert before | Insert after | Rename |
|------------------|--------|-------|---------|--------|---------------|--------------|--------|
| None | OK | OK | OK | OK | OK | OK | OK |
| Create | OK | OK | Error | Error | OK | OK | Error |
| Merge | OK | OK | OK | OK | OK | OK | OK |
| Replace | Error | OK | OK | Error | OK | OK | Error |
| Delete | Error | OK | Error | OK | Error | Error | Error |
| Insert Before | OK | OK | OK | OK | OK | OK | OK |
| Insert After | OK | OK | OK | OK | OK | OK | OK |
| Rename | OK | OK | OK | OK | OK | OK | OK |

The following examples demonstrate the import operation:

Example 1: Set the MTU to 1500 on an interface named "Ethernet0/0" in the running configuration.

```
<interface>
  <name>Ethernet0/0</name>
  <mtu>1500</mtu>
</interface>
```

Example 2: Add an interface named "Ethernet0/0" to the running configuration, replacing any previous interface with that name.

```
<interface xc:operation="replace">
  <name>Ethernet0/0</name>
  <mtu>1500</mtu>
  <address>
    <name>192.0.2.4</name>
    <prefix-length>24</prefix-length>
  </address>
</interface>
```



NOTE:

The default import modes have the following equivalent attributes on the root object of the configuration tree:

- Standard Import is always a merge operation.
- Quick Import is a create operation.
- Full Import is a replace operation.

Example: Importing/Exporting XML file configuration to add Multiple Users

This example shows how to use the configuration XML file import/export feature. The example is illustrative. There are additional ways to use export files.

Assume you have just added a new device to the network, and you want to add your 2,000 users to the system. Instead of adding them one at a time in the admin console, you want to perform a mass import. You can export the user accounts, extract the relevant XML that defines users, replicate each element as needed, and then import them. In this situation, your configuration should include the option to force the users to change their passwords the first time they log in to the system.

In this procedure, you only see examples for User 1, User 2, and User 2000. All other users are included in your import file. You set the passwords to numbered instances of the word password, such as password1, password2, and so on. All users in this example are assigned to the same auth server, although you can specify any combination of auth servers that are valid on your system.

To add multiple new users:

1. Select Maintenance > Import/Export > Export XML.
2. Follow the instructions to export local user accounts.
3. Save the exported file as users.xml.
4. Open the users.xml file.
5. Copy and paste the User container element repeatedly until you have added the necessary number of users. Although the example shows only three new users, you might add hundreds of new users to the file.
6. Update the appropriate data in each User container element as shown in ["Example: Updating the User container"](#).
7. Save the users.xml file.
8. Select Maintenance > Import/Export > XML Import/Export > Import.
9. Click Browse to locate and select your users.xml file.

10. Click Import.

Example: Updating the User container

```
<configuration xmlns="http://xml.sample.net/x/x"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <authentication>
    <auth-servers>
      <auth-server>
        <local>
          <users>
            <user>
              <username>user1</username>
              <fullName>User1</fullName>
              <password-cleartext>password1

              </password-cleartext>
              <one-time-use>false</one-time-use>
              <enabled>true</enabled>
              <change-password-at-signin>true

            </change-password-at-signin>
            </user>
            <user>
              <username>user2</username>
              <fullName>User2</fullName>
              <password-cleartext>password2

              </password-cleartext>
              <one-time-use>false</one-time-use>
              <enabled>true</enabled>
              <change-password-at-signin>true

            </change-password-at-signin>
            </user>
            <name>System Local</name>
          </auth-server>
        </auth-servers>
      </authentication>
    </configuration>
```

Pushing the Configuration

The push configuration feature supports simple configuration management across an enterprise without requiring you to deploy the systems as a cluster. You push a partial configuration from the running configuration on the source system to the running configuration on one or more target systems.

It is not desirable to push some groups of settings to a running configuration, so the following groups of settings are not supported:

- Network configurations
- Licenses
- Cluster configurations
- Certificates
- SNMP settings

- Syslog server settings
- Push configuration targets

Guidelines and Limitations

The below table summarizes the guidelines and limitations for using the push configuration feature.

Table106: Push Configuration Guidelines and Limitations

| Category | Guidelines and Limitations |
|----------|--|
| General | <p>The following guidelines and limitations apply:</p> <ul style="list-style-type: none"> • You can push a configuration to systems running the same software version (same build number) or higher software version. • The source device pushes data over the management port (if configured) or the internal port. The target device can receive data over the internal or external port or management port. • You can push to a single target or to multiple targets. For example, if you install several new systems, you can push a common configuration to set their initial configuration. • When a configuration push job begins on a target, no warning is displayed, and the administrators are automatically logged out to avoid potential conflicts. • For selected configuration push, if the configuration to be pushed contains one or more JAM packages, we recommend you to push the JAM packages first considering one JAM package per push and then push the remaining configurations. • When the job has completed on a target, the target device restarts its services. Brief interrupts might occur while the service restarts. You must push to targets when they are idle or when you can accommodate brief interruptions. • You must delete the failed push jobs before performing a new push. • For entire configuration push, when pushing settings such as FIPS settings, security settings on a target even though the job has completed on a target, you might see a connection lost message on the source. You can resume the actual job to see the status and even though the source says connection lost the import will be successful. |
| Licenses | The push configuration job does not push licenses or licensing settings. |
| Clusters | <ul style="list-style-type: none"> • You can push a configuration to target that is a member of a cluster, if the target is not a member of the same cluster as the source. • You can push a configuration to multiple targets, if targets are not part of the same cluster. • You must not perform the clustering operations such as adding a cluster, deleting a cluster, and so on when performing a push configuration. If such events occur, then unsuccessful jobs will be aborted and the backup files will be deleted. • You must not use VIPs during push configuration. Instead you must use the internal IP or the management IP of one of the nodes to create the target. • You must delete the backed-up configuration on the target node(s) as soon as possible to free up the disk space. |

Configuring Targets

To configure push configuration targets:

1. Select Maintenance > Push Config > Targets to display the target list and source options configuration page.
2. Complete the configuration for the source options as described below.
3. Click New Target to display the configuration page for targets.
4. Complete the configuration as described below.
5. Save the configuration.

Figure509: Push Configuration Target List and Source Device Settings Page

Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy **Maintenance** Wizards

Push Configuration > Targets

Targets

Push Configuration **Targets** Results History

☒ Allow this Pulse Policy Secure to be a target
This Pulse Policy Secure will accept configuration pushed from another Pulse Policy Secure. This box must be checked on each target that is configured on this page.

☐ Validate target server certificate
To be configured on source device. This enables source device to validate target device server certificate before pushing configuration.

New Target... Delete... Save Changes

10 records per page Search:

| <input type="checkbox"/> | Target Name | Target Sign-in URL | Admin Username | Auth. Realm |
|--------------------------|-------------|--------------------|----------------|-------------|
| | | | | |

Table107: Push Configuration Target Source Device Configuration Options

| Settings | Guidelines |
|------------------------------------|--|
| Allow this system to be a target | Select this option to allow the system to accept configuration pushed from another system. This option must be selected on targets, but does not have to be selected on the source system. |
| Validate target server certificate | Select this option on the source system if you want the source system to validate the target system server certificate before pushing the configuration. |
| Save Changes | Click this button if you have changed the source device configuration options described above. |
| Delete | Select a row in the table and click Delete to remove the target from the list. You cannot delete a target if it has push configuration results associated with that target. |

Figure510: Push Configuration Targets Configuration Page

Push Configuration > Targets > New Target

New Target

Name: *

Sign-in URL: *

Admin Username: *

Password: *

Auth. Realm: *

[Save Changes](#)

*indicates required field

Table108: Push Configuration Targets Configuration Guidelines

| Settings | Guidelines |
|----------------|---|
| Name | Specify a name to identify the target within the system. Target names and target sign-in URLs cannot be edited after they have been saved. |
| Sign-in URL | Specify the URL for the administrator sign-in page. Sign-in URLs cannot be edited after they have been saved. |
| Admin Username | Specify an account on the target system that the push configuration job can use to sign-in and make changes to the configuration. The job can make wide-ranging configuration changes, so the user must have full administrative privileges. In other words, the user must belong to the Administrators role. |
| Password | Specify the corresponding password. |
| Auth. Realm | <p>Specify the administrator authentication realm on the target system. The access management framework must be configured so that the job process (run as the username specified above) can sign in without any human interaction. For example, you cannot have dynamic credentials or multiple roles that are not merged, as these both require manual interaction.</p> <p>We recommend that you create an administrator account on each target that can be used exclusively for push configuration. Configure the administrator realm so that the realm policy and role mapping rules do not result in prompts requiring human interaction. For example, the user must be able to log in with static password authentication or two-factor tokens that do not use challenge-response type authentication. For example, certificates, Soft ID, and Defender Authentication are not supported.</p> |

Configuring Push Settings

To configure the settings to be pushed:

1. Select Maintenance > Push Config > Push Configuration to display the configuration page.

Complete the configuration and push configuration operation as described below.

Figure511: Push Configuration Selected Settings Page

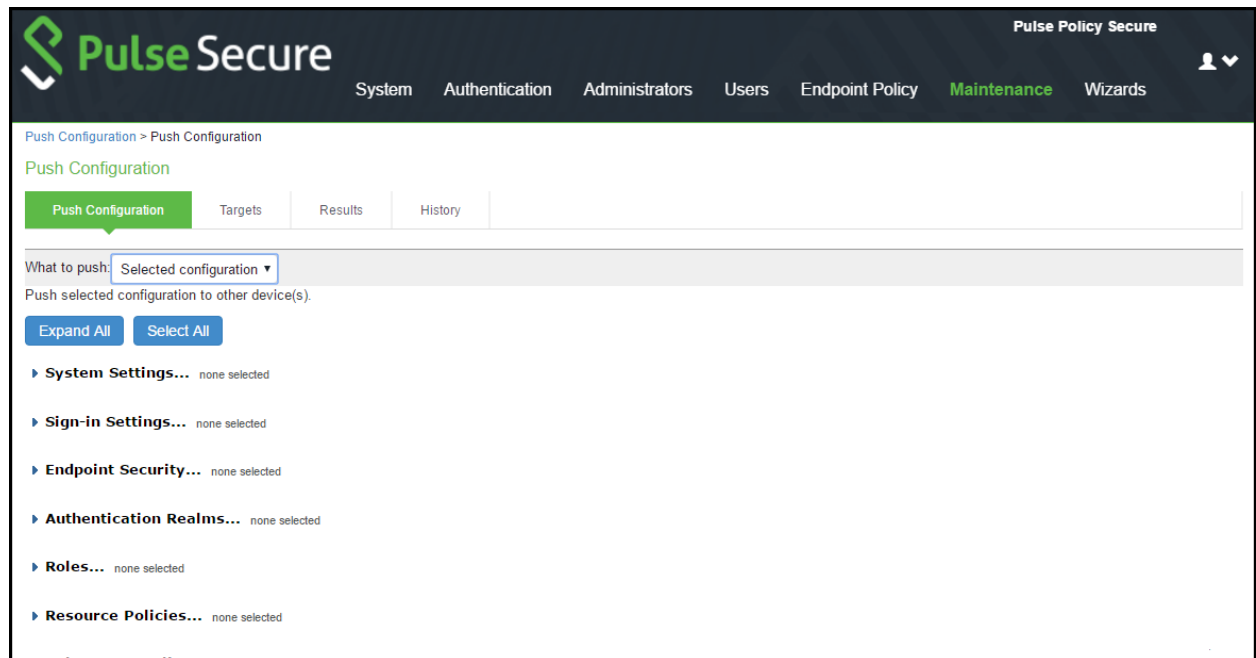


Table109: Push Configuration Selected Settings and Action Guidelines

| Settings | Guidelines |
|--------------------------------------|---|
| Select Settings and Export | |
| What to push | <p>Select Selected configuration or Entire configuration.</p> <p>If you select Selected configuration, the page displays controls to select settings groups.</p> <p>If you select Entire configuration, all settings from the source system are pushed, except for the following:</p> <ul style="list-style-type: none"> • Network configurations • Licenses • Cluster configurations • Certificates • SNMP settings • Syslog server settings • Push configuration targets |
| Expand All | Click this button to expand the display of all settings groups. |
| Select All | Click this button to select all settings for all groups. |
| Settings | |
| System | <p>Expand this group and select settings found under the System menu.</p> <p>NOTE: You cannot push host-specific network settings to a target. If you want to copy these settings to another system, use the configuration XML file import/export feature.</p> |
| Sign-in | Expand this group and select settings found under the Sign-in menu. |
| Endpoint Security | <p>Expand this group and select settings found under the Endpoint Security menu.</p> <p>NOTE: ESAP packages are encrypted when exported.</p> |
| Authentication Realms | Expand this group and select authentication realm settings, including user realms and MAC address authentication realms. |
| Roles | Expand this group and select settings found under the Roles menu. |
| Resource Policies | Expand this group and select settings resource policies settings. |
| Pulse Secure | Expand this group and select settings found under the Pulse Secure menu. |
| Local User Accounts | Expand this group and select local authentication server settings. |
| Infranet Enforcer | <p>Policy Secure only.</p> <p>Expand this group and select settings found under the Infranet Enforcer menu.</p> |
| Network Access | <p>Policy Secure only.</p> <p>Expand this group and select settings found under the Network Access menu.</p> |
| Maintenance | Expand this group and select settings found under the Maintenance menu. |
| Push Configuration | |
| Available Targets / Selected Targets | Use the Add and Remove buttons to select the targets. |
| Overwrite duplicate settings | <p>Select this option to overwrite settings on the target that have the same name as settings being pushed.</p> <p>If you do not select this option, the push configuration job copies only configuration objects that have names different from the configuration objects on the target.</p> |

| Settings | Guidelines |
|--|--|
| Allow Rollback to previous configuration | <p>Select this option to revert to a previous configuration state, effectively rolling back configuration changes.</p> <p>If you select this option, the local configurations on the target node will be backed up before importing the configurations. You can also undo the push configuration if you want to discard the changes and revert to the previous state. We recommend you to delete the backed-up configuration if the import is successful.</p> <p>NOTE: If the target configuration is large the rollback of configurations can take several minutes to complete.</p> |
| Description | Enter the description for the job. The job description is limited to 100 characters. |
| Schedule Import on Target | Select this option to allow a delayed import on the target node. If you select this option, the selection applies to all the targets in the job. The import schedule is measured in HH:MM (hours, minutes) format. The schedule is specified according to source's time zone. |
| Push Configuration | <p>Click this button to push the selected configuration data to the specified targets.</p> <p>You can pause the push for a target during the push process. If errors occur during the push process, the job stops, and the configuration for the target is not imported. However, you can resume the failed push jobs. Error messages are displayed on the Results page.</p> <p>If you have specified multiple targets and a push configuration job to a target fails, the job continues to the next target until specified targets are updated (or fail). The results page displays the status and any problems encountered during the process.</p> |

Viewing Configuration Push Results

Purpose The source system saves and displays the push configuration results in the Results tab.

Action To view push configuration job results:

1. Click the Select Maintenance > Push Config > Results to display the results page.
2. job name to display additional information about the job.
3. Select a job and click Delete to remove it from the results page.

Figure512: Push Configuration Results Page

The below table describes the information displayed on the Results page and the various management tasks you can perform.

Table110: Push Configuration Results

| GUI Element | Guidelines |
|--------------------|---|
| Disk Usage Details | Displays the disk space available for push configuration and the disk space consumed by all the push jobs in the device. The disk space consumed by individual push jobs are also mentioned across each push job under the disk usage column. When total disk space consumed reaches the total disk space push jobs may fail and you can see the results column to see the failure message. You need to monitor the disk space consumed by push configuration to avoid push failures related to disk space limits. |
| Description Column | Displays the type of the push configuration. |

| GUI Element | Guidelines |
|-------------------|---|
| Disk Usage Column | Displays the disk space used by the job. |
| Results Column | Displays the status of the transfer and result of post push action. It also displays the status of the push such as log in, export, transfer, backup, import and so on. The status result message shows the type of data that is getting transferred. For a paused or failed target the information on the current state of the job when it is paused, or failure reasons if any is displayed. This column also shows the progress of data transfer using a bar chart. For selected push, additional configuration data (additional configuration data refers to configuration that is transferred only if it is modified or not available on the target) includes ESAP package, JAM package, VDI configurations, Terminal services, Host Checker files, Custom sign in pages and notifications, and Applet files. For complete configuration push, additional data includes ESAP and JAM packages. |
| Post Push Action | Displays the options that the user can perform after the push such as roll back and delete backup. It also displays the post push actions such as rollback done, backup deleted, rollback failed, performing rollback, deleting back up and so on. |
| Resume | Select this option to resume a paused or a failed push. |
| Undo | Select this option to rollback to previous configuration that was backed up. Note that you can perform this operation only when the push is successful and Allow Rollback to Previous Configuration is selected. This option is available only if the backup is not deleted or undo is not done yet. |
| Abort | Select this option to cancel an entire push job or push to target within a job. An aborted push cannot be resumed. |
| Pause | Select this option to temporarily pause the push operation to a specified target. |
| Delete Backup | Select this option to delete the backup configuration on the specified target. Note that this option is available only when the users selects the Allow Rollback to Previous Configuration option during the push job. |


Viewing Configuration Push History

Purpose The source/target system saves and displays up to 5 push history results per target/source in the History tab. When the history table reaches 5 entries, the system removes the oldest result data when the next push configuration job is started.

Action To view push configuration push history:

1. Select Maintenance > Push Config > History to display the history page.
2. Examine the history to verify success or learn the reasons the push job failed. The history page displays rollback history however the failure reason is not displayed. You can check the failure reason in the details page for each job. It also displays the timestamp history information of successful, failed push jobs, or if a configuration is undone.
3. Select the source name and click Delete History to remove it from the History page.

Figure513: Push Configuration History Page

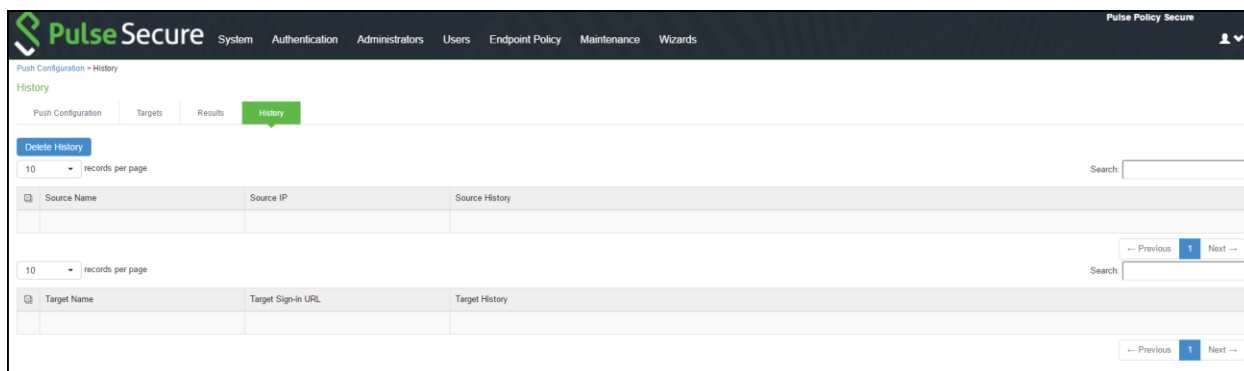

Dashboard and Reports

- [Dashboard and Report Overview](#)
- [Enabling the Dashboard](#)
- [Using the User Summary Report](#)
- [Using the Device Summary Report](#)
- [Using the Single Device Report](#)
- [Using the Device Discovery Report](#)

Dashboard and Report Overview

A dashboard is an interface used to manage the Pulse Secure access management framework. It provides an integrated view of all devices and users accessing the network, their device profile information, authentication methods used to gain access, device posture compliance and so on.

A report is an element of a dashboard used to convey complex data in simplified formats. Pulse Secure access management framework collects log and configuration data from across your network, and it then aggregates the data into reports for you to view and analyze. It provides a standard set of predefined reports that you can use and customize to fit your needs. The reports are grouped into logical categories for information related to authentication, session traffic, device administration, configuration and administration, and troubleshooting.


You can use the system dashboard and reports to analyze system utilization.

Enabling the Dashboard

You can use the admin console to enable or disable the dashboard.


To enable the dashboard.

1. Select System > Status > Activity > Settings.
2. Select Enable Dashboard.

 **NOTE:** The dashboard is enabled by default.

The below figure shows the Dashboard Settings for PPS.

Figure514: Dashboard Settings – PPS

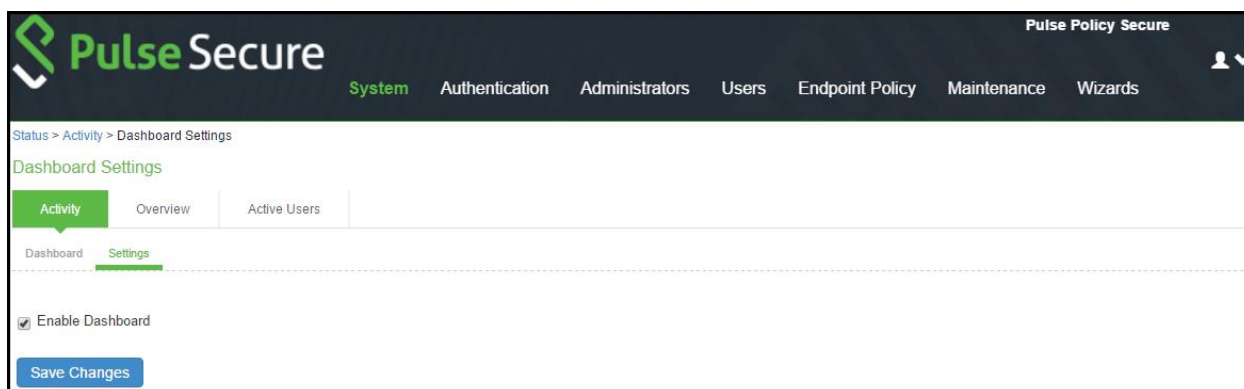

Using the Dashboard

This topic describes the dashboard. It includes the following information:

- [Dashboard Overview](#)
- [Displaying the Dashboard](#)
- [Selecting a Data Time Frame](#)
- [Refreshing Data](#)
- [Drilling Down to Detailed Reports](#)

Dashboard Overview

The dashboard contains six default graphic reports focused on security, network activity, application activity, system monitoring, and compliance.

Table111: Dashboard Status Bar

| Metric | Description |
|-----------------------|--|
| Policy Secure | |
| Total Endpoints | The total number of unique endpoints over a time. If an endpoint provides a unique identifier (mobile device ID, client ID, and so on), then it will be used to identify the endpoint. For a browser-based session where an identifier is not available, each session is considered a unique endpoint. |
| Active Endpoints | The total number of unique endpoints with active sessions. |
| Active Guests | The total number of active guest users. A guest user is defined as a user with an expiration date. This includes administrator-created and GUAM-created guest users. This does not include GUAM-created users without expiration dates. |
| Active MAC Auth Users | The total number of active MAC authentication users. |

The below table describes the default dashboard charts.

Table112: Dashboard Charts

| Dashboard Chart | Description |
|------------------------|--|
| Authentication Success | The number of successful authentications over the selected time (1, 7, or 30 days). The 7-day chart is a bar graph. The 1-day and 30-day charts are line graphs. |
| Authentication Failure | The number of failed authentications over the selected time (1, 7, or 30 days). The 7-day chart is a bar graph. The 1-day and 30-day charts are line graphs. |
| Session OS Count | Pie chart showing the number of the sessions per operating system. |
| Top Roles | Pie chart showing the number of top user roles assigned during the selected time. |
| Compliance Results | Pie chart showing Host Checker posture assessment results: Compliant, Not Compliant, Not Assessed, or Remediated. Compliance results are reported for all instances in which Host Checker is run. The posture assessment chart is clubbed with the compliance results chart for PPS. To view the posture assessment chart, select Posture Assessment from the dropdown list. |

| Dashboard Chart | Description |
|--------------------|--|
| Posture Assessment | Pie chart showing Host Checker policy violations. Policy violations are reported only for instances in which Host Checker is run at initial sign in. |
| Auth Mechanism | Pie chart showing the number of sessions per authentication mechanism: 802.1x, Layer 3, MAC address. It applies to PPS only. |

Dashboard Database

The dashboard monitoring service collects and stores data in a database for 30 days. The total number of records stored in the database can be up to 300,000 records.

The dashboard database is created only after upgrading to PPS version 5.0 or later and enabling the dashboard option. Note that only new sessions are added to the database and changing the Time Frame filter or clicking refresh sends queries to the database. The data is collected only when the dashboard option is enabled.

The below table describes the different actions and their results.


Table113: Dashboard Database

| Action | Description |
|---|--|
| Disable and then reenable the dashboard. | The data collection stops when your dashboard is disabled. |
| Restore the data from backup, snapshot, or import config. | The data is not exported and the data is retained during upgrades. |

Displaying the Dashboard

To display the dashboard, select System > Status > Activity > Dashboard.

Figure515: Dashboard

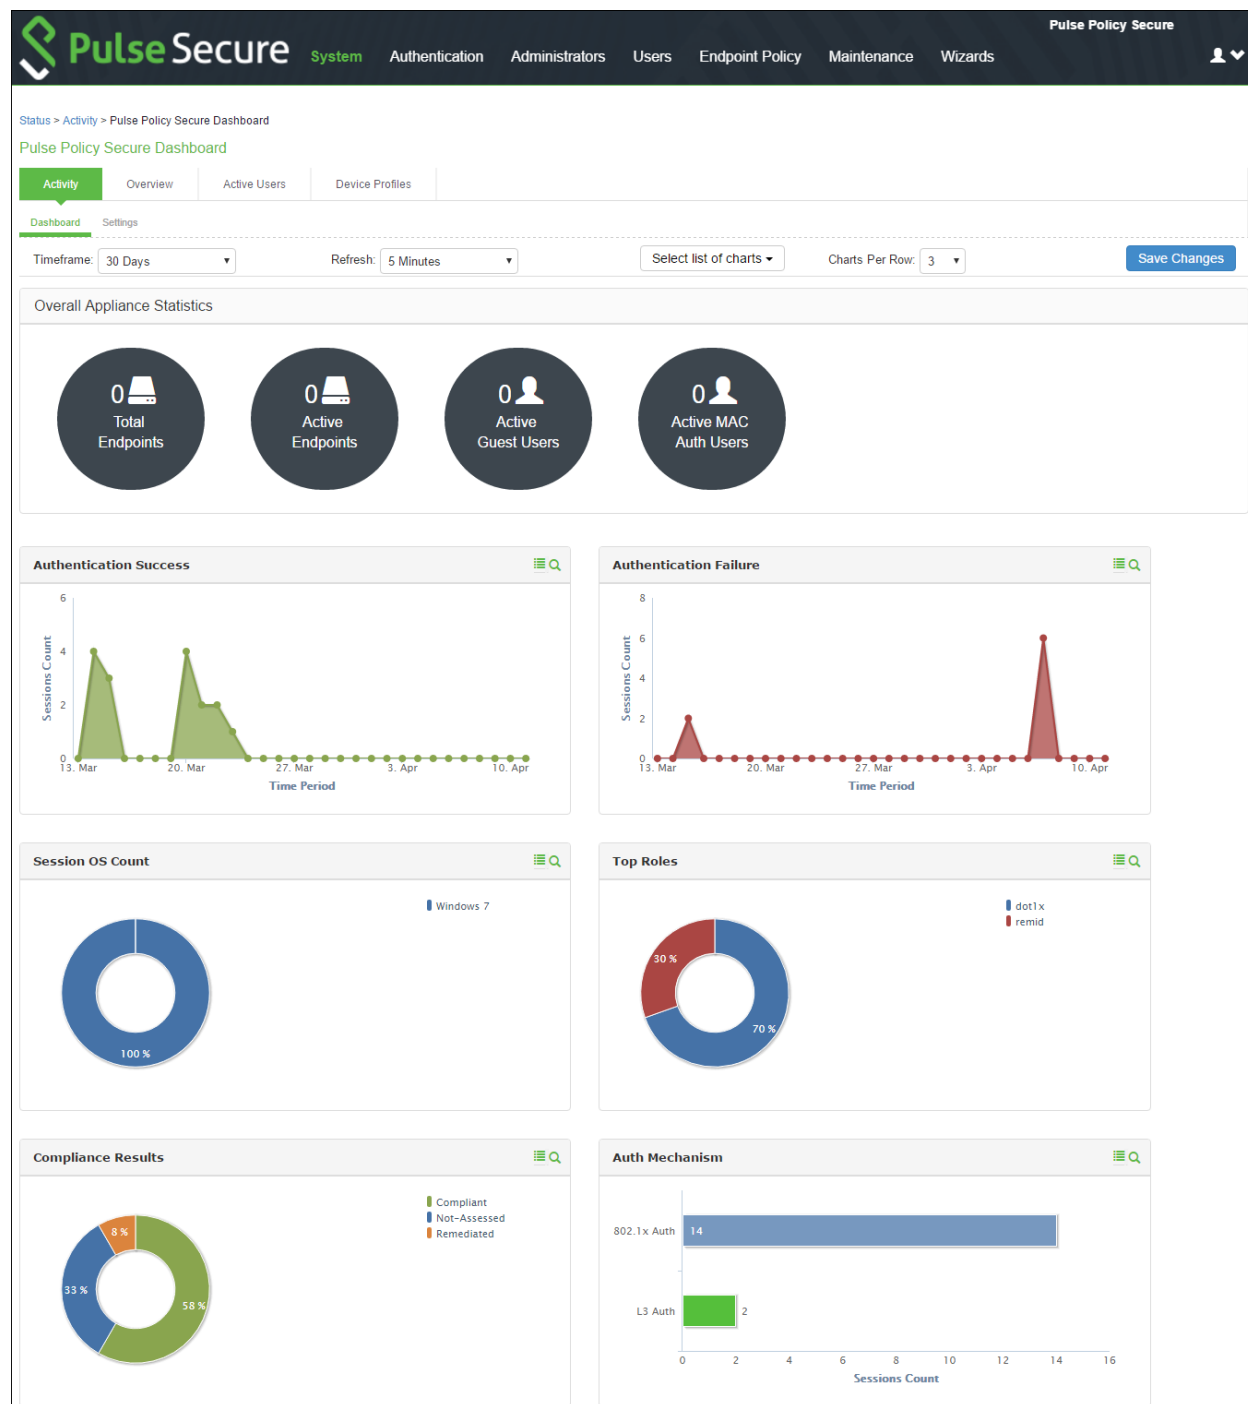

Selecting a Data Time Frame


To select a data timeframe:

1. Select System > Status > Activity > Dashboard.
2. Select one of the following periods from the Time Frame list box:
 - Last 24 Hours– (Default) Refers to the last 24 hours from the current hour.
 - Last 7 Days– Refers to current day and the previous last 6 days.
 - Last 30 Days– Refers to current day and the previous last 29 days.



NOTE: Access records are kept for 30 days. Older records are removed and not included in dashboard charts and reports.

Figure516: Dashboard Showing a 30-Day Time Frame

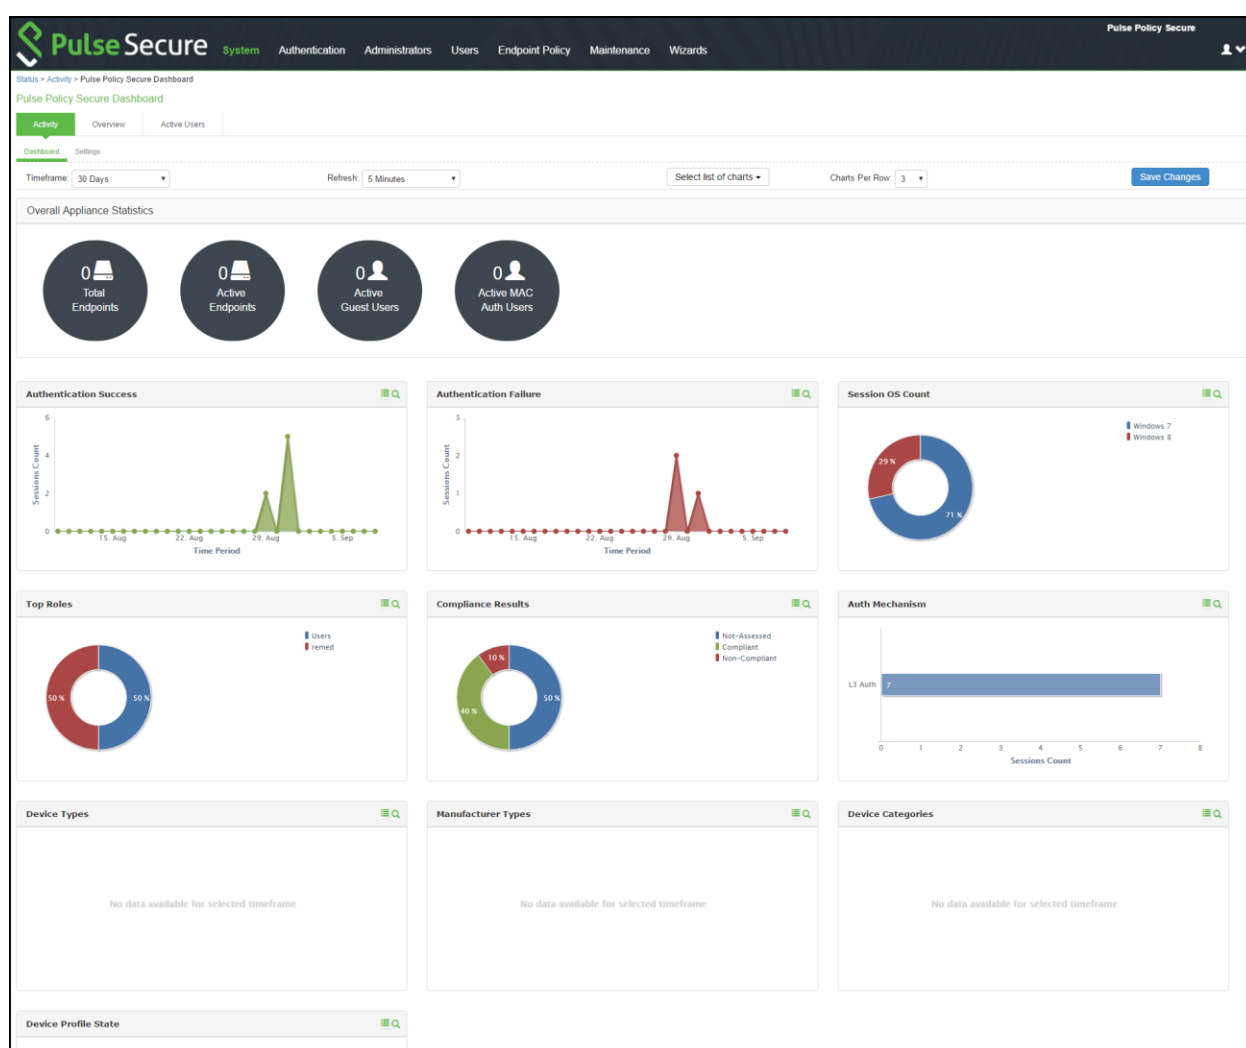

Refreshing Data

To refresh data:

1. Select System > Status > Activity > Dashboard.
2. Select one of the following refresh rates from the Refresh list box:
 - Disabled
 - 5 Minutes
 - 10 Minutes
 - 30 Minutes
 - 60 Minutes

Drilling Down to Detailed Reports

To drill down to view detailed reports:

1. Select System > Status > Activity > Dashboard.
2. Click the search icon to display the corresponding tabular report with predefined search filters.

The below figure shows the detailed authentication report. The Authentication Results filter is set to Success.

Figure517: Detailed Authentication Report

Reports > Authentication Report

Authentication Report

Reports

User Summary Single User Activities Device Summary Single Device Activities **Authentication** Compliance

Authentication Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Authentication Results: All Username: Realm: Apply Filter

View: 10

| Username | Realm | Login Time | Auth Result | Failure Reason | Device ID | Role | Device OS |
|----------------------|-----------------|--------------------------|-------------|----------------|-----------|----------------|-----------|
| pulsesecure\ananthm | Pulse ESP Realm | Thu Mar 17 11:34:52 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure\ananthm | Pulse ESP Realm | Thu Mar 17 11:16:11 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure\mkarthik | Pulse SSL Realm | Thu Mar 17 11:11:18 2016 | Success | | | Pulse SSL Role | Others |
| pulsesecure\gvipin | Pulse ESP Realm | Thu Mar 17 10:58:22 2016 | Success | | | Pulse ESP Role | Windows 8 |
| pulsesecure\shravan | Pulse ESP Realm | Thu Mar 17 10:55:38 2016 | Success | | | Pulse ESP Role | Mac OS |
| pulsesecure\gvipin | Pulse ESP Realm | Thu Mar 17 10:45:26 2016 | Success | | | Pulse ESP Role | Windows 8 |
| pulsesecure\gvipin | Pulse ESP Realm | Thu Mar 17 10:43:06 2016 | Success | | | Pulse ESP Role | Windows 8 |
| pulsesecure\gvipin | Pulse ESP Realm | Thu Mar 17 10:35:47 2016 | Success | | | Pulse ESP Role | Windows 8 |
| pulsesecure\charuv | Users | Thu Mar 17 10:34:15 2016 | Success | | | Users | Windows 7 |
| pulsesecure\gvipin | Pulse ESP Realm | Thu Mar 17 10:33:05 2016 | Success | | | Pulse ESP Role | Windows 8 |

1 2 3 of 6 >>

Using the User Summary Report

This topic describes the user summary report. It includes the following information:

- Overview
- Applying Data Filters
- Sorting Records
- Drilling Down to the Single User Report
- Exporting User Summary Report

Overview

The user summary report displays user statistics such as realm, username, last log in time, last log in IP, successful log in, and so on for each user based on the user activity in the selected time range.

To display the user summary report, select System > Reports > User Summary.

Figure518: User Summary Report

| Username | Realm | Last Login Time | Last Login IP | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions |
|-----------------------|-------------------------|--------------------------|-----------------|---------------|---------------|--------------------|------------------------|
| nvishnu | Terminal Services Realm | Thu Mar 17 10:10:38 2016 | 10.209.126.66 | 1 | 0 | 1 | 0 |
| pulsesecure\ananthm | Pulse ESP Realm | Thu Mar 17 11:34:52 2016 | 180.215.123.120 | 5 | 0 | 0 | 5 |
| pulsesecure\atamsekar | Pulse ESP Realm | Wed Mar 16 21:41:54 2016 | 124.123.18.10 | 1 | 0 | 1 | 0 |

The below table describes the columns on the user summary report.

Table114: User Summary Report Columns

| Column | Description |
|-----------------|---|
| Username | Specifies the name of the user. |
| Realm | Specifies the realm. |
| Last Login Time | Specifies the last time the user logged in. |
| Last Login IP | Specifies the last IP that the user logged in with. |

| Column | Description |
|------------------------|---|
| Login Success | Specifies the number of successful log ins. |
| Login Failure | Specifies the number of failed log ins. |
| Compliant Sessions | Specifies the number of compliant sessions. |
| Non Compliant Sessions | Specifies the number of non compliant sessions. |
| Remediated Sessions | Specifies the number of remediated sessions. |
| Total Session Length | Specifies the total length of the sessions. |
| Average Session Length | Specifies the average length of the sessions. |

Applying Data Filters

To apply a data filter:

1. Select System > Reports > User Summary.
2. Select one of the following periods from the Date Range list box:
 - Last 24 Hours– (Default) Refers to the last 24 hours from the current hour.
 - Last 7 Days– Refers to current day and the previous last 6 days.
 - Last 30 Days– Refers to current day and the previous last 29 days.
3. Enter search criteria in one or more of the following attribute columns:
 - Username
 - Realm
4. Click Apply Filter.

Figure519: Filter User Summary Report

Reports > User Summary Report

User Summary Report

Reports

User Summary Report

User Summary | Single User Activities | Device Summary | Single Device Activities | Authentication | Compliance

User Summary Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Username: nvishnu Realm: Apply Filter

View: 10

| Username | Realm | Last Login Time | Last Login IP | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions | Remediated Sessions | Total Session Length | Average Session Length |
|----------|----------------------------|-----------------------------|---------------|---------------|---------------|--------------------|------------------------|---------------------|----------------------|------------------------|
| nvishnu | Terminal Services Realm | Thu Mar 17 10:10:38 2016 | 10.209.126.66 | 1 | 0 | 1 | 0 | 0 | 1h 45m 58s | 1h 45m 58s |

1 of 1

Sorting Records

The data source determines the default sort order of the data rows in the report. Typically, data appears randomly, so sorting is an important task in creating a useful report. You can sort single data columns or multiple columns.

To sort the user summary report:

1. Select System > Reports > User Summary.
2. Select one of the following columns from the user summary report table, and click either the ascending or descending order icon.
 - Username
 - Realm
 - Last Login Time



NOTE: The username column is sorted in ascending order by default.

Figure520: Sort User Summary Report

Reports > User Summary Report

User Summary Report

Reports
User Summary Report

User Summary | Single User Activities | Device Summary | Single Device Activities | Authentication | Compliance

User Summary Report | Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours | Username: | Realm: | **Apply Filter**

| Username ▲ | Realm | Last Login Time | Last Login IP | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions |
|-----------------------|-------------------------|--------------------------|-----------------|---------------|---------------|--------------------|------------------------|
| nvishnu | Terminal Services Realm | Thu Mar 17 10:10:38 2016 | 10.209.126.66 | 1 | 0 | 1 | 0 |
| pulsesecure\ananthm | Pulse ESP Realm | Thu Mar 17 11:34:52 2016 | 180.215.123.120 | 5 | 0 | 0 | 5 |
| pulsesecure\atamsekar | Pulse ESP Realm | Wed Mar 16 21:41:54 2016 | 124.123.18.10 | 1 | 0 | 1 | 0 |

Drilling Down to the Single User Report

To drill down to a single user report:

1. Select **System > Reports > Single User Report**.
2. Click the username to view the single user report.

Figure521: Detailed Single User Report

Reports > Single User Report

Single User Report

Reports
Single User Report

User Summary **Single User Activities** Device Summary Single Device Activities Authentication Compliance

Single User Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 30 Days Username: pulsesecure\snehal Apply Filter

View: 10

| Username | Realm | Login Time | Logout Time | Duration | Device ID | MAC Address | Auth Result | Compliance | IP Address | Role |
|--------------------|-----------------|--------------------------|--------------------------|------------|-----------|-------------------|------------------------|--------------|-----------------|----------------|
| pulsesecure\snehal | Pulse ESP Realm | Thu Mar 17 10:25:48 2016 | Thu Mar 17 10:26:11 2016 | 0m 23s | | | Success | Compliant | 172.21.8.103 | Pulse ESP Role |
| pulsesecure\snehal | Pulse ESP Realm | Wed Mar 16 11:08:44 2016 | Wed Mar 16 15:04:45 2016 | 3h 56m 1s | | 68-F7-28-5A-54-D4 | Success | Compliant | 172.21.8.103 | Pulse ESP Role |
| pulsesecure\snehal | Pulse ESP Realm | Wed Mar 16 11:08:34 2016 | | | | 68-F7-28-5A-54-D4 | Failure | Not-Assessed | 172.21.8.103 | |
| | | | | | | | Failure Reason: Failed | | | |
| pulsesecure\snehal | Pulse ESP Realm | Wed Mar 16 11:08:24 2016 | | | | 68-F7-28-5A-54-D4 | Failure | Not-Assessed | 172.21.8.103 | |
| | | | | | | | Failure Reason: Failed | | | |
| pulsesecure\snehal | Pulse ESP Realm | Thu Mar 10 11:33:36 2016 | Thu Mar 10 20:47:24 2016 | 9h 13m 48s | | 5C-C5-D4-82-DA-25 | Success | Compliant | 106.216.173.165 | Pulse ESP Role |
| pulsesecure\snehal | Pulse ESP Realm | Wed Mar 09 22:08:36 2016 | Wed Mar 09 22:29:19 2016 | 20m 43s | | 5C-C5-D4-82-DA-25 | Success | Compliant | 106.216.190.96 | Pulse ESP Role |
| pulsesecure\snehal | Pulse ESP Realm | Wed Mar 09 08:08:55 2016 | Wed Mar 09 20:15:06 2016 | 12h 6m 11s | | 5C-C5-D4-82-DA-25 | Success | Compliant | 106.216.140.33 | Pulse ESP Role |
| pulsesecure\snehal | Pulse ESP Realm | Tue Mar 08 10:40:59 2016 | Tue Mar 08 14:50:55 2016 | 4h 9m 56s | | 68-F7-28-5A-54-D4 | Success | Compliant | 172.21.8.86 | Pulse ESP Role |
| pulsesecure\snehal | Pulse ESP Realm | Mon Mar 07 10:16:58 2016 | Mon Mar 07 19:10:26 2016 | 8h 53m 28s | | 5C-C5-D4-82-DA-25 | Success | Remediated | 106.216.162.148 | Pulse ESP Role |
| pulsesecure\snehal | Pulse ESP Realm | Fri Mar 04 08:45:25 2016 | Fri Mar 04 13:35:30 2016 | 4h 50m 5s | | 68-F7-28-5A-54-D4 | Success | Compliant | 182.74.163.90 | Pulse ESP Role |

1 2 3 of 3 >>

Exporting User Summary Report

To export device summary report:

1. Select System > Reports > User Summary.
2. Select a Download Report option.
 - CSV– Exports the report in CSV format.
 - Tab Delimited– Exports the report in tab-delimited format.

Figure522: Export User Summary Report

Reports > User Summary Report

User Summary Report

Reports
User Summary Report

User Summary | Single User Activities | Device Summary | Single Device Activities | Authentication | Compliance

User Summary Report Download Report: [CSV](#) | [Tab Delimited](#)

Filter by: Date Range: Last 24 Hours Username: Realm: [Apply Filter](#)

| Username | Realm | Last Login Time | Last Login IP | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions |
|---------------------|-------------------------|--------------------------|-----------------|---------------|---------------|--------------------|------------------------|
| nvishnu | Terminal Services Realm | Thu Mar 17 10:10:38 2016 | 10.209.126.66 | 1 | 0 | 1 | 0 |
| pulsesecure\ananthm | Pulse ESP Realm | Thu Mar 17 11:34:52 2016 | 180.215.123.120 | 5 | 0 | 0 | 5 |

Using the Device Summary Report

This topic describes the device summary report. It includes the following information:

- [Overview](#)
- [Applying Data Filters](#)
- [Sorting Records](#)
- [Exporting Device Summary Report](#)

Overview

The device summary report displays device information such as device detail, MAC address, last log in time, last log in IP, log in successful, and so on for each user based on device activity in the selected time range.

To display the device summary report:

1. Select System > Reports > Device Summary
2. Select one of the following periods from the Date Range list box:
 - Last 24 Hours– (Default) Refers to the last 24 hours from the current hour.
 - Last 7 Days– Refers to current day and the previous last 6 days.
 - Last 30 Days– Refers to current day and the previous last 29 days.
3. Enter search criteria in one or more of the following columns:
 - Last Login Username
 - MAC Address
4. Click Apply Filter.

| Device ID | MAC Address | Last Login Time | Last Login IP | Last Login Username | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions | Remediated Sessions | Total Session Length | Average Session Length |
|-------------------|-------------------|--------------------------|---------------|---------------------|---------------|---------------|--------------------|------------------------|---------------------|----------------------|------------------------|
| 68-F7-28-69-D2-E3 | 68-F7-28-69-D2-E3 | Fri Apr 07 12:48:42 2017 | 172.21.8.82 | | 0 | 6 | 0 | 0 | 0 | 0m 0s | 0m 0s |
| 00-50-56-BF-7A-31 | 00-50-56-BF-7A-31 | Thu Mar 23 00:23:34 2017 | 192.168.1.15 | test | 16 | 1 | 14 | 0 | 2 | 86h 17m 3s | 5h 23m 33s |

The below table describes the columns on the device summary report.

Table115: Device Summary Report Columns

| Column | Description |
|-----------|--|
| Device ID | Specifies a unique identifier to identify the endpoint. Click the device ID icon to view a single device report. |

| Column | Description |
|------------------------|--|
| MAC Address | Specifies the MAC address of the device. Click the MAC address to view a single device report. |
| Last Login Time | Specifies the last time the device was logged in. |
| Last Login IP | Specifies the last IP that the device logged in with. |
| Last Login Username | Specifies the username that the user logged in with. |
| Login Success | Specifies the number of successfully log ins. |
| Login Failure | Specifies the number of failed log ins. |
| Compliant Sessions | Specifies the number of compliant sessions. |
| Non-Compliant Sessions | Specifies the number of non-compliant sessions. |
| Remediated Sessions | Specifies the number of remediated sessions. |
| Total Session Length | Specifies the total session length. |
| Average Session Length | Specifies the average session length. |



NOTE: If a device has more than one MAC address in a session, then the value appearing in the MAC Address column will be multiple instead of the actual MAC addresses. Note that the value multiple is not hyperlinked.

Applying Data Filters

To apply a data filter:

1. Select System > Reports > Device Summary Select one of the following periods from the Date Range list box:
 - Last 24 Hours– (Default) Refers to the last 24 hours from the current hour.
 - Last 7 Days– Refers to current day and the previous last 6 days.
 - Last 30 Days– Refers to current day and the previous last 29 days.
2. Enter search criteria in one or more of the following columns:
 - Last Login Username
 - Mac Address
3. Click Apply Filter.

Figure523: Filter Device Summary Report

Reports > Device Summary Report

Device Summary Report

Reports



Device Summary Report

User Summary | Single User Activities | **Device Summary** | Single Device Activities | Authentication | Compliance

Device Summary Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Last Login Username: MAC Address: [Apply Filter](#)

View: 10

| Device ID | MAC Address | Last Login Time | Last Login IP | Last Login Username | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions | Remediated Sessions | Total Session Length | Average Session Length |
|---|-------------|--------------------------|---------------|---------------------|---------------|---------------|--------------------|------------------------|---------------------|----------------------|------------------------|
|  | Multiple | Thu Mar 17 13:54:53 2016 | 106.51.138.26 | pulsesecurelcharuv | 8 | 0 | 0 | 8 | 0 | 6h 38m 9s | 49m 46s |
|  | Multiple | Thu Mar 17 13:50:42 2016 | 182.74.163.90 | pulsesecurelsgadde | 3 | 0 | 3 | 0 | 0 | 6h 48m 35s | 2h 16m 11s |
| | | Thu Mar 17 13:14:51 2016 | 10.204.48.240 | pulsesecurelgyvipin | 1 | 0 | 1 | 0 | 0 | 5m 39s | 5m 39s |

Sorting Records

The data source determines the default sort order of the data rows in the report. Typically, data appears randomly, so sorting is an important task in creating a useful report. You can sort single data columns or multiple columns.

To sort the device summary report:

1. Select System > Reports > Device Summary.
2. Select any one of the following column and click either the ascending or descending order icon.
 - Last Login Time
 - Last Login Username



NOTE: You can sort the column in either ascending order or descending order.

Figure524: Sort Records in Device Summary Report

Reports > Device Summary Report

Device Summary Report

Reports

Device Summary Report

User Summary | Single User Activities | **Device Summary** | Single Device Activities | Authentication | Compliance

Device Summary Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Last Login Username: MAC Address: Apply Filter

View: 10

| Device ID | MAC Address | Last Login Time | Last Login IP | Last Login Username | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions | Remediated Sessions | Total Session Length | Average Session Length |
|-----------|-------------|--------------------------|---------------|---------------------|---------------|---------------|--------------------|------------------------|---------------------|----------------------|------------------------|
| | Multiple | Thu Mar 17 13:54:53 2016 | 106.51.138.26 | pulsesecure\charov | 8 | 0 | 0 | 8 | 0 | 6h 38m 9s | 49m 46s |
| | Multiple | Thu Mar 17 13:50:42 2016 | 182.74.163.90 | pulsesecure\sgadde | 3 | 0 | 3 | 0 | 0 | 6h 48m 35s | 2h 16m 11s |
| | | Thu Mar 17 13:14:51 2016 | 10.204.48.240 | pulsesecure\gvipin | 1 | 0 | 1 | 0 | 0 | 5m 39s | 5m 39s |

Exporting Device Summary Report

To export device summary report:

1. Select System > Reports > Device Summary.
2. Select a Download Report option.
 - CSV– Exports the report in CSV format.
 - Tab Delimited– Exports the report in tab-delimited format.

Figure525: Export Device Summary Report

Reports > Device Summary Report

Device Summary Report

Reports

Device Summary Report

User Summary Single User Activities **Device Summary** Single Device Activities Authentication Compliance

Device Summary Report Download Report CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Last Login Username: MAC Address: Apply Filter

View: 10

| Device ID | MAC Address | Last Login Time | Last Login IP | Last Login Username | Login Success | Login Failure | Compliant Sessions | Non-Compliant Sessions | Remediated Sessions | Total Session Length | Average Session Length |
|-----------|-------------------|--------------------------|-----------------|----------------------|---------------|---------------|--------------------|------------------------|---------------------|----------------------|------------------------|
| | Multiple | Thu Mar 17 13:54:53 2016 | 106.51.138.26 | pulsesecure\chanuv | 8 | 0 | 0 | 8 | 0 | 6h 38m 9s | 49m 46s |
| | Multiple | Thu Mar 17 13:50:42 2016 | 182.74.163.90 | pulsesecure\sgadde | 3 | 0 | 3 | 0 | 0 | 6h 48m 35s | 2h 16m 11s |
| | | Thu Mar 17 13:14:51 2016 | 10.204.48.240 | pulsesecure\gvipin | 1 | 0 | 1 | 0 | 0 | 5m 39s | 5m 39s |
| | E8-2A-EA-89-3F-B9 | Thu Mar 17 13:01:49 2016 | 182.74.163.90 | raghpal | 4 | 0 | 4 | 0 | 0 | 2h 36m 57s | 39m 14s |
| | 28-D2-44-F3-DE-68 | Thu Mar 17 12:13:11 2016 | 10.209.122.63 | pulsesecure\cnreddy | 2 | 0 | 0 | 2 | 0 | 3h 28m 36s | 1h 44m 18s |
| | 10-0B-A9-B7-CC-D4 | Thu Mar 17 11:34:52 2016 | 180.215.123.120 | pulsesecure\ananthm | 5 | 0 | 0 | 5 | 0 | 3h 1m 16s | 36m 15s |
| | | Thu Mar 17 11:11:18 2016 | 182.74.163.90 | pulsesecure\mkarthik | 1 | 0 | 0 | 0 | 0 | 2h 7m 40s | 2h 7m 40s |
| | | Thu Mar 17 10:58:22 2016 | 10.204.48.218 | pulsesecure\gvipin | 1 | 0 | 1 | 0 | 0 | 1h 49m 41s | 1h 49m 41s |
| | A0-99-9B-0F-09-6B | Thu Mar 17 10:55:38 2016 | 172.21.17.26 | pulsesecure\shravan | 4 | 0 | 4 | 0 | 0 | 4h 47m 45s | 1h 11m 56s |
| | | Thu Mar 17 10:45:26 2016 | 10.204.48.218 | pulsesecure\gvipin | 1 | 0 | 1 | 0 | 0 | 1m 17s | 1m 17s |

1 2 3 of 4 >>

Using the Single Device Report

This topic describes the single device report. It includes the following information:

- Overview
- Applying Data Filters
- Sorting Records
- Exporting Single Device Activities Report

Overview

The single device activities report displays the device activity information such as username, realm, log in time, log out time, device detail, MAC address, authentication mechanism, authentication result, compliance, IP address, role and so on for each device.

To display the single device activities report, select System > Reports > Single Device Activities.

Single Device Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 30 Days

Compliance Results: Compliant, Non-Compliant, Remediated, Not-Assessed

Authentication Mechanism: All

MAC Address: 00-50-56-BF-7A-31

Device ID:

Apply Filter

| Username | Realm | Login Time | Logout Time | Duration | Device ID | MAC Address | Auth Mechanism | Auth Result | Compliance | IP Address | Role | Device Detail |
|----------|-------|--------------------------|--------------------------|-------------|-----------|-------------------|----------------|-------------|------------|--------------|-------|---------------|
| test | dot1x | Thu Mar 23 00:23:34 2017 | Thu Mar 23 10:58:00 2017 | 10h 34m 26s | | 00-50-56-BF-7A-31 | 802.1x Auth | Success | Compliant | 192.168.1.15 | dot1x | |
| test | dot1x | Wed Mar 22 12:20:32 2017 | Thu Mar 23 00:23:34 2017 | 12h 3m 2s | | 00-50-56-BF-7A-31 | 802.1x Auth | Success | Compliant | 192.168.1.15 | dot1x | |

The below table describes the columns on the single device report.

Table116: Single Device Report Columns

| Column | Description |
|----------------|---|
| Username | Specifies the name of the user. |
| Realm | Specifies the realm. |
| Login Time | Specifies the time the user logged in. |
| Logout Time | Specifies the time the user logged out. |
| Duration | Specifies the total duration of the user session. |
| Device ID | Specifies a unique identifier used to identify an end point. Click the device ID icon to view a single device report. |
| MAC Address | Specifies the MAC address of the device. |
| Auth Mechanism | Specifies the authentication mechanism: 802.1x, Layer 3, MAC address. |
| Auth Result | Specifies the authentication result. |
| Compliance | Specifies the Host Checker posture assessment results: Compliant, Not Compliant, Not Assessed, or Remediated. |

| Column | Description |
|---------------|---|
| IP Address | Specifies the IP that the user logged in with. |
| Role | Specifies the role of the user. |
| Device Detail | Displays the URL that is used for connecting to the MDM server. |

Applying Data Filters

To apply a data filter:

1. Select **System > Reports > Single Device Activities**.
2. Select one of the following periods from the Filter by: Date Range list box:
 - Last 24 Hours– (Default) Refers to the last 24 hours from the current hour.
 - Last 7 Days– Refers to current day and the previous last 6 days.
 - Last 30 Days– Refers to current day and the previous last 29 days.
3. Enter search criteria in one or more of the following columns:
 - Compliance Results
 - MAC Address
 - Device ID
 - Authentication Mechanism (L3 Auth, 802.1X Auth, MAC auth, all).
4. Click Apply Filter.

Sorting Records

The data source determines the default sort order of the data rows in the report. Typically, data appears randomly, so sorting is an important task in creating a useful report. You can sort single data column.

To sort the single device activities report:

1. Select System > Reports > Single Device Activities.
2. Select Login Time column and click either the ascending or descending order icon.



NOTE: You can sort the column in either ascending order or descending order.

Figure526: Sort Records in Single Device Activities Report

Reports > Single Device Report

Single Device Report

Reports
Single Device Report

User Summary | Single User Activities | Device Summary | **Single Device Activities** | Authentication | Compliance

Single Device Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Compliance Results:
 Compliant
 Non-Compliant
 Remediated
 Not-Assessed

MAC Address: Device ID: 2c67f29e7ca746cd8dceed Apply Filter

View: 10

| Username | Realn | Login Time | Logout Time | Duration | Device ID | MAC Address | Auth Result | Compliance | IP Address | Role | Device Detail |
|--------------------|-------|--------------------------|--------------------------|-----------|-----------|-------------------|-------------|---------------|----------------|-------|---------------|
| pulsesecure\charuv | Users | Thu Mar 17 12:54:47 2016 | Session in progress | 3m 53s | | 60-67-20-6C-89-04 | Success | Non-Compliant | 106.51.138.26 | Users | |
| pulsesecure\charuv | Users | Thu Mar 17 11:54:16 2016 | Thu Mar 17 12:54:40 2016 | 1h 0m 24s | | 60-67-20-6C-89-04 | Success | Non-Compliant | 106.51.140.105 | Users | |
| pulsesecure\charuv | Users | Thu Mar 17 10:34:15 2016 | Thu Mar 17 11:35:14 2016 | 1h 0m 59s | | 00-21-CC-CB-FE-16 | Success | Non-Compliant | 103.227.98.234 | Users | |
| pulsesecure\charuv | Users | Thu Mar 17 09:33:46 2016 | Thu Mar 17 10:34:12 2016 | 1h 0m 26s | | 00-21-CC-CB-FE-16 | Success | Non-Compliant | 103.227.98.234 | Users | |
| pulsesecure\charuv | Users | Wed Mar 16 16:17:40 2016 | Wed Mar 16 16:53:41 2016 | 36m 1s | | 60-67-20-6C-89-04 | Success | Non-Compliant | 106.197.61.22 | Users | |
| pulsesecure\charuv | Users | Wed Mar 16 15:05:24 2016 | Wed Mar 16 16:05:30 2016 | 1h 0m 6s | | 00-21-CC-CB-FE-16 | Success | Non-Compliant | 182.74.163.90 | Users | |
| pulsesecure\charuv | Users | Wed Mar 16 14:05:16 2016 | Wed Mar 16 15:05:17 2016 | 1h 0m 1s | | 60-67-20-6C-89-04 | Success | Non-Compliant | 172.21.16.149 | Users | |

1 of 1

Exporting Single Device Activities Report

To export single device activities report:

1. Select System > Reports > Single Device Activities.
2. Select a Download Report option.
 - CSV– Exports the report in CSV format.
 - Tab Delimited– Exports the report in tab-delimited format.

Figure527: Export Single Device Activities Report

Reports > Single Device Report

Single Device Report

Reports
Single Device Report

User Summary | Single User Activities | Device Summary | **Single Device Activities** | Authentication | Compliance

Single Device Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Compliance Results:
 Compliant
 Non-Compliant
 Remediated
 Not-Assessed

MAC Address: Device ID: 2c67f29e7ca746cd8dcecd Apply Filter

View: 10

| Username | Realm | Login Time | Logout Time | Duration | Device ID | MAC Address | Auth Result | Compliance | IP Address | Role | Device Detail |
|--------------------|-------|--------------------------|--------------------------|-----------|-----------|-------------------|-------------|---------------|----------------|-------|---------------|
| pulsesecure\charuv | Users | Thu Mar 17 12:54:47 2016 | Session in progress | 1m 14s | | 60-67-20-6C-89-04 | Success | Non-Compliant | 106.51.138.26 | Users | |
| pulsesecure\charuv | Users | Thu Mar 17 11:54:16 2016 | Thu Mar 17 12:54:40 2016 | 1h 0m 24s | | 60-67-20-6C-89-04 | Success | Non-Compliant | 106.51.140.105 | Users | |
| pulsesecure\charuv | Users | Thu Mar 17 10:34:15 2016 | Thu Mar 17 11:35:14 2016 | 1h 0m 59s | | 00-21-CC-CB-FE-16 | Success | Non-Compliant | 103.227.98.234 | Users | |

Using the Device Discovery Report

You can view the device discovery report if you have integrated Profiler with PPS. The Device Discovery Report contains the list of devices that are discovered in the network. Select **System > Reports > Device Discovery** to view the report.

Figure528: Device Discovery Report

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Reports > Device Discovery Report

Device Discovery Report

Reports

User Summary Single User Activities Device Summary Single Device Activities **Device Discovery** Authentication Compliance

Device Discovery Report

Last 24hrs Last Week Last Month Unprofiled Devices Profiled Devices Profile Changed Devices Active Sessions Remote Sessions

On-premise Sessions Manually Edited Devices with Notes Unmanaged Devices Managed Devices Show Advanced Clear All

+ Add Device Delete Selected Download Report

Showing 1 to 8 of 8 entries 10 records per page Search:

| | MAC Address | IP Address | Hostname | Manufacturer | Operating System | Category | First Seen | Last Seen |
|--|-------------------|--------------|----------|---|------------------|----------|---------------------------|---------------------------|
| | 68:f7:28:69:d2:ef | 172.21.8.93 | | LCFC(HeFei) Electronics Technology co., Ltd | Windows 8.x | Windows | Thu, 23 Mar 2017 10:58:01 | Tue, 18 Apr 2017 12:59:30 |
| | 00:50:56:bf:7a:31 | 192.168.1.15 | ADMIN-PC | VMware, Inc. | Windows 7.x | Windows | Wed, 15 Mar 2017 16:25:36 | Thu, 23 Mar 2017 01:23:35 |

To view more information about a profiled device, click the + icon to the left of the MAC address. See [Pulse Secure Profiler Deployment Guide](#) for more information.

Using the Authentication Report

This topic describes the authentication report. It includes the following information:

- Overview
- Displaying the Authentication Report
- Applying Data Filters
- Sorting Records
- Exporting Authentication Report

Overview

The authentication report displays the authentication result for each user based on the device activity in the selected time range.


Displaying the Authentication Report

To display the authentication report, select **System > Reports > Authentication**.

Figure529: Authentication Report

Reports > Authentication Report

Authentication Report




 **Reports**
Authentication Report

User Summary | Single User Activities | Device Summary | Single Device Activities | **Authentication** | Compliance

Authentication Report Download Report: [CSV](#) | [Tab Delimited](#)

Filter by: Date Range: Authentication Results: Username: Realm: [Apply Filter](#)

View:

| Username | Realm | Login Time | Auth Result | Failure Reason | Device ID | Role | Device OS |
|---------------------|-----------------|--------------------------|-------------|----------------|---|----------------|-----------|
| raghpai | NC ESP Realm | Thu Mar 17 12:22:18 2016 | Success | |  | NC ESP Role | Windows 7 |
| pulsesecure\cnreddy | Pulse ESP Realm | Thu Mar 17 12:13:11 2016 | Success | |  | Pulse ESP Role | Windows 7 |
| pulsesecure\charuv | Users | Thu Mar 17 11:54:16 2016 | Success | |  | Users | Windows 7 |

The below table describes the columns on the authentication report.

Table117: Authentication Report Columns

| Column | Description |
|----------------|---|
| Username | Specifies the name of the user. |
| Realm | Specifies the realm. |
| Login Time | Specifies the time the user logged in. |
| Auth Mechanism | Specifies the authentication mechanism: 802.1x, Layer 3, MAC address. |
| Auth Result | Specifies the authentication result. |
| Failure Reason | Specifies the host checker failure reason. |
| Device ID | Specifies a unique identifier used to identify an end point. Click the device ID icon to view a single device report. |
| Role | Specifies the user role. |
| Device OS | Specifies the operating system of the device. |

Applying Data Filters

To apply a data filter:

1. Select System > Reports > Authentication.
2. Select one of the following periods from the Filter by: Date Range list box:
 - Last 24 Hours– (Default) Refers to the last 24 hours from the current hour.
 - Last 7 Days– Refers to current day and the previous last 6 days.
 - Last 30 Days– Refers to current day and the previous last 29 days.
3. Enter search criteria in one or more of the following columns:
 - Authentication Results

- Username
- Realm

4. Click Apply Filter.

Figure530: Filter Authentication Report

The screenshot shows the 'Authentication Report' page. At the top, there are tabs for 'User Summary', 'Single User Activities', 'Device Summary', 'Single Device Activities', 'Authentication' (selected), and 'Compliance'. Below the tabs, there's a 'Filter by:' section with a 'Date Range' dropdown set to 'Last 24 Hours', an 'Authentication Results' dropdown set to 'Success', and input fields for 'Username' and 'Realm'. An 'Apply Filter' button is to the right. Below the filter section, there's a 'View:' dropdown set to '10'. The main table has columns: Username, Realm, Login Time, Auth Result, Failure Reason, Device ID, Role, and Device OS. The table contains five rows of data.

| Username | Realm | Login Time | Auth Result | Failure Reason | Device ID | Role | Device OS |
|---------------------|-----------------|--------------------------|-------------|----------------|-----------|----------------|-----------|
| raghpal | NC ESP Realm | Thu Mar 17 12:22:18 2016 | Success | | | NC ESP Role | Windows 7 |
| pulsesecure/cnreddy | Pulse ESP Realm | Thu Mar 17 12:13:11 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure/charuv | Users | Thu Mar 17 11:54:16 2016 | Success | | | Users | Windows 7 |
| pulsesecure/ananthm | Pulse ESP Realm | Thu Mar 17 11:34:52 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure/ananthm | Pulse ESP Realm | Thu Mar 17 11:16:11 2016 | Success | | | Pulse ESP Role | Windows 7 |

Sorting Records

The data source determines the default sort order of the data rows in the report. Typically, data appears randomly, so sorting is an important task in creating a useful report. You can sort single data column.

To sort the authentication report:

1. Select System > Reports > Authentication.
2. Select Login Time column and click either the ascending or descending order icon.

Figure531: Sort Records in Authentication Report

The screenshot shows the 'Authentication Report' page, similar to Figure 530. The 'Filter by:' section is the same. The 'View:' dropdown is set to '10'. The 'Login Time' column header is highlighted with a red box, and a dropdown arrow is visible next to it, indicating it is selected for sorting. The table contains the same five rows of data as in Figure 530.

| Username | Realm | Login Time | Auth Result | Failure Reason | Device ID | Role | Device OS |
|---------------------|-----------------|--------------------------|-------------|----------------|-----------|----------------|-----------|
| raghpal | NC ESP Realm | Thu Mar 17 12:22:18 2016 | Success | | | NC ESP Role | Windows 7 |
| pulsesecure/cnreddy | Pulse ESP Realm | Thu Mar 17 12:13:11 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure/charuv | Users | Thu Mar 17 11:54:16 2016 | Success | | | Users | Windows 7 |
| pulsesecure/ananthm | Pulse ESP Realm | Thu Mar 17 11:34:52 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure/ananthm | Pulse ESP Realm | Thu Mar 17 11:16:11 2016 | Success | | | Pulse ESP Role | Windows 7 |

Exporting Authentication Report

To export an authentication report:

1. Select System > Reports > Authentication.
2. Select a Download Report option.
 - CSV– Exports the report in CSV format.
 - Tab Delimited– Exports the report in tab-delimited format.

Figure532: Export Records in Authentication Report

The screenshot shows the 'Authentication Report' page in the Pulse Policy Secure administration console. The breadcrumb trail is 'Reports > Authentication Report'. The page title is 'Authentication Report'. Below the title, there are tabs for 'User Summary', 'Single User Activities', 'Device Summary', 'Single Device Activities', 'Authentication' (which is selected), and 'Compliance'. A red box highlights the 'Download Report: CSV | Tab Delimited' link. Below this, there are filter options: 'Filter by: Date Range: Last 24 Hours', 'Authentication Results: All', 'Username: [text box]', and 'Realm: [text box]', followed by an 'Apply Filter' button. A 'View: 10' dropdown is also present. The main content is a table with the following columns: Username, Realm, Login Time, Auth Result, Failure Reason, Device ID, Role, and Device OS. The table contains five rows of data.

| Username | Realm | Login Time | Auth Result | Failure Reason | Device ID | Role | Device OS |
|---------------------|-----------------|--------------------------|-------------|----------------|-----------|----------------|-----------|
| raghpal | NC ESP Realm | Thu Mar 17 12:22:18 2016 | Success | | | NC ESP Role | Windows 7 |
| pulsesecure\cnreddy | Pulse ESP Realm | Thu Mar 17 12:13:11 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure\charuv | Users | Thu Mar 17 11:54:16 2016 | Success | | | Users | Windows 7 |
| pulsesecure\ananthm | Pulse ESP Realm | Thu Mar 17 11:34:52 2016 | Success | | | Pulse ESP Role | Windows 7 |
| pulsesecure\ananthm | Pulse ESP Realm | Thu Mar 17 11:16:11 2016 | Success | | | Pulse ESP Role | Windows 7 |

Using the Compliance Report

This topic describes the compliance report. It includes the following information:

- [Overview](#)
- [Applying Data Filters](#)
- [Sorting Records](#)
- [Exporting Compliance Report](#)

Overview

The compliance report displays compliance status such as compliant, not compliant, remediated, not assessed information for each user based on the device activity in the selected time range.

To display the compliance report, select System > Reports > Compliance.

Figure533: Compliance Report

| Username | Realm | Device ID | MAC Address | Session Compliance | Initial Host Check Time | Initial Host Check Details |
|---------------------|-----------------|-----------|-------------------|--------------------|--------------------------|--|
| raghpal | NC ESP Realm | | E8-2A-EA-89-3F-B9 | Compliant | Thu Mar 17 12:22:18 2016 | Host check result: Pass |
| pulsesecure/cnreddy | Pulse ESP Realm | | 28-D2-44-F3-DE-68 | Non-Compliant | Thu Mar 17 12:13:11 2016 | Host check result: Fail Failed Policies: • AV Failure reasons: • Anti-virus scan time check failed |
| pulsesecure/chanuv | Users | | 60-67-20-6C-89-04 | Non-Compliant | Thu Mar 17 11:54:16 2016 | Host check result: Fail Failed Policies: |

The below table describes the different columns on the compliance report.

Table118: Compliance Report Columns

| Column | Description |
|----------------------------|---|
| Username | Specifies the name of the user. |
| Realm | Specifies the realm. |
| Device ID | Specifies a unique identifier used to identify an end point. Click the device ID icon to view a single device report. |
| MAC Address | Specifies the MAC address of the device. |
| Session Compliance | Specifies the Host Checker posture assessment results: Compliant, Not Compliant, Not Assessed, or Remediated. |
| Initial Host Check Time | Specifies the initial host check time. |
| Initial Host Check Details | Specifies the host check result. |

The posture assessment chart is also a part of compliance report. It is displayed based on Initial Host Checker evaluation details (Login time).

The below table lists the type and the failure reasons for Host Checker.

Table119: Host Checker Failure Reasons– Posture Assessment Chart

| Type | Failure Reason |
|-----------------------------|-----------------------------------|
| Antivirus | Anti-virus not installed |
| | Anti-virus not running |
| | Anti-virus not up to date |
| | Anti-virus scan time check failed |
| Firewall | Firewall not installed |
| | Firewall not running |
| Antimalware | Anti-malware not installed |
| Antispyware | Anti-spyware not installed |
| | Anti-spyware not running |
| OS Checks | Unsupported OS |
| Port | Restricted ports open |
| | Required ports not open |
| Process | Detected restricted processes |
| | Required processes not detected |
| File | Detected restricted files |
| | Required files missing |
| Registry | Incorrect registry settings |
| NetBIOS | Detected restricted NetBIOS names |
| | Required NetBIOS names not found |
| MAC Address | Detected restricted MAC address |
| | Required MAC address not present |
| Machine Certificate | Certificate missing |
| Patch Assessment | Patches missing |
| Cache Cleaner | Cache cleaner failed |
| Remote IMV | Remote IMV failure |
| 3rd party | NA (Not considered for reporting) |
| 3rd party sub policy | 3rd party sub policy failed |
| Rooting Detection | Detected rooted devices |
| Jail Breaking Detection | Detected jail broken devices |
| Mobile Security Suite (MSS) | Mobile security suite not active |
| 3rd party NHC Check | Generic failure |

Table120 Host Checker Failure

| Type | Failure Reason |
|---------------------|---|
| Statement of Health | Generic failure |
| Connection Control | Generic failure |
| HC | HDEncryption software not installed |
| | Detected Unencrypted drives |
| | Drives are missing |
| | Unsupported client for HDEncryption check |
| | Patch Management software not installed |
| | Detected missing patches |
| | Unsupported client for PatchMgmt check |
| | Deprecated patch assessment rule |

Applying Data Filters

To apply a data filter:

1. Select System > Reports > Compliance.
2. Select one of the following periods from the Filter by: Date Range list box:
 - Last 24 Hours– (Default) Refers to the last 24 hours from the current hour.
 - Last 7 Days– Refers to current day and the previous last 6 days.
 - Last 30 Days– Refers to current day and the previous last 29 days.
3. Enter search criteria in one or more of the following columns:
 - Compliance Results
 - Username
 - Realm
 - MAC Address
4. Click Apply Filter.

Figure534: Filter Compliance Report

Reports > Compliance Report

Compliance Report

Reports
Compliance Report

User Summary Single User Activities Device Summary Single Device Activities Authentication **Compliance**

Compliance Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Compliance Results: Compliant Non-Compliant Remediated Not-Assessed Username: Realm: MAC Address: **Apply Filter**

View: 10

| Username | Realm | Device ID | MAC Address | Session Compliance | Initial Host Check Time | Initial Host Check Details |
|-----------------------|-----------------|-----------|-------------------|--------------------|-------------------------|----------------------------|
| pulsesecure/gayaraman | Pulse ESP Realm | | 68-F7-28-5A-4A-70 | Not-Assessed | | |
| pulsesecure/mkarthik | Pulse SSL Realm | | | Not-Assessed | | |

Sorting Records

The data source determines the default sort order of the data rows in the report. Typically, data appears randomly, so sorting is an important task in creating a useful report. You can sort single data column.

To sort the compliance report:

1. Select System > Reports > Compliance.
2. Select Initial Host Check Time or Username column and click either the ascending or descending order icon.

Figure535: Sort Records in Compliance Report

The screenshot displays the 'Compliance Report' page in the Pulse Policy Secure administration console. The breadcrumb trail at the top reads 'Reports > Compliance Report'. Below this, there's a 'Compliance Report' header with a 'Download Report: CSV | Tab Delimited' link. A navigation bar includes tabs for 'User Summary', 'Single User Activities', 'Device Summary', 'Single Device Activities', 'Authentication', and 'Compliance' (which is active). Below the navigation bar, there's a 'Filter by: Date Range: Last 24 Hours' dropdown and a 'Compliance Results' dropdown menu. The 'Compliance Results' dropdown is open, showing options: 'Compliant', 'Non-Compliant', 'Remediated', and 'Not-Assessed'. To the right of the dropdowns are input fields for 'Username', 'Realm', and 'MAC Address', followed by an 'Apply Filter' button. Below the filters, there's a table with columns: 'Username', 'Realm', 'Device ID', 'MAC Address', 'Session Compliance', 'Initial Host Check Time', and 'Initial Host Check Details'. The 'Initial Host Check Time' column header has a dropdown arrow, which is highlighted with a red box. The table contains two rows of data. The first row shows a user 'pulsesecure/gayaraman' with a 'Pulse ESP Realm' and a 'Device ID' of '68-F7-28-5A-4A-70'. The second row shows a user 'pulsesecure/mkarthik' with a 'Pulse SSL Realm' and a 'Device ID' of '68-F7-28-5A-4A-70'. Both rows show 'Not-Assessed' for 'Session Compliance'. The 'View: 10' dropdown is located to the right of the table.

| Username | Realm | Device ID | MAC Address | Session Compliance | Initial Host Check Time | Initial Host Check Details |
|-----------------------|-----------------|-------------------|-------------|--------------------|-------------------------|----------------------------|
| pulsesecure/gayaraman | Pulse ESP Realm | 68-F7-28-5A-4A-70 | | Not-Assessed | | |
| pulsesecure/mkarthik | Pulse SSL Realm | | | Not-Assessed | | |

Exporting Compliance Report

To export a compliance report:

1. Select System > Reports > Compliance.
2. Select a Download Report option.
 - CSV– Exports the report in CSV format.
 - Tab Delimited– Exports the report in tab-delimited format.

Figure536: Export Compliance Report

Reports > Compliance Report

Compliance Report

Reports
Compliance Report

User Summary Single User Activities Device Summary Single Device Activities Authentication **Compliance**

Compliance Report Download Report: CSV | Tab Delimited

Filter by: Date Range: Last 24 Hours Compliance Results: **Not-Assessed** Username: Realm: MAC Address: Apply Filter

View: 10

| Username | Realm | Device ID | MAC Address | Session Compliance | Initial Host Check Time | Initial Host Check Details |
|------------------------|-----------------|-----------|-------------------|--------------------|-------------------------|----------------------------|
| pulsesecure/gjayaraman | Pulse ESP Realm | | 68-F7-28-5A-4A-70 | Not-Assessed | | |
| pulsesecure/mkarthik | Pulse SSL Realm | | | Not-Assessed | | |

System Maintenance

This chapter covers the following information:

- [Overview](#)
- [Configuring System Platform](#)
- [Configuring System Maintenance Options](#)
- [Installing the Service Package](#)
- [Downloading Client Installer Files](#)
- [Testing Network Connectivity](#)

Overview

The system maintenance operations must be planned to ensure that your system functions properly and to avoid any network disruptions. You can check the PPS platform information and perform the required tasks, which includes upgrading or downgrading the software, downloading the client installer files, performing disk cleanup operations and so on.

The system maintenance menu includes the following components:

- **Platform-** Use this option to check the platform information such as model, version, serial number, current version, and the rollback version. This helps the Administrator to perform/plan any routine system maintenance operations.
- **Upgrade/Downgrade-** Use this option to upgrade/downgrade the PPS software.
- **Change Personality-** Use this option to change the personality of the PPS device to a PCS device.
- **Options-** Use this option to check the global system parameters, including hardware settings.
- **Installers-** Use this option to download the client installer files based on the user platform.

Configuring System Platform

The platform page provides a quick overview of the current state of the system. This gives a quick overview of what Operation System the system has booted, the fallback version, host name, hardware model, serial number, uptime, current version, and the rollback version.

Figure537: System Platform

Pulse Secure System Authentication Administrators Users Endpoint Policy **Maintenance** Wizards

System Maintenance > Platform

Platform

Platform Upgrade/Downgrade Change Personality Options Installers

Hostname: localhost2
Model: MAG-4610
Serial Number: 0274082011000012
Uptime: 94 days, 1 hour, 46 minutes, 6 seconds
Current version: 5.4R1 (build 42499)
Rollback version: 5.3R5.HF1 (build 38757)

Node operations: Restart Services Reboot... Shut Down... Rollback...

Connectivity:
 This will ping various configured servers to test the device's connectivity. Test Connectivity

Hardware Status

Fan Status:

| Fan | Status |
|-----|--------|
| 0 | OK |
| 1 | OK |

Temperature: 21 °C

To restart, reboot, rollback or shut down the system:

1. Select Maintenance > System > Platform to display the system maintenance platform page.
2. Click the desired node operation:
 - Restart—Kills all processes and restarts the system. The system is available again after a few minutes.
 - Reboot—Power cycles and reboots the system. The system is available again after a few minutes.
 - Shut Down—Shuts down the system. The system is not available again until the physical power button on the physical device is used to restart the system.
 - Rollback- The system is rolled back to the previous software version and configuration state. The system is rebooted and unavailable for a few minutes when you rollback.



NOTE:

- The restart, reboot, and shutdown operations are applied to all enabled members of a cluster. If you do not want to apply the operations to all members of the cluster, use the System > Clustering > Status page to disable members; then perform the restart, reboot, or shut down operation.
- If you have enabled logging for Administrator changes (System > Log/Monitoring > Admin Access > Settings page), a log is written to the Admin Access logs page. If you have enabled logging for System Status (System > Log/Monitoring > Events > Settings page), logs are written to the Events logs page.

Configuring System Maintenance Options

You can use the maintenance options page to enable various system maintenance features.

To enable various system maintenance features:

1. Select Maintenance > System > Options to display the maintenance options page.
2. Select options as described in the below table.
3. Save the configuration.

Figure538: System options

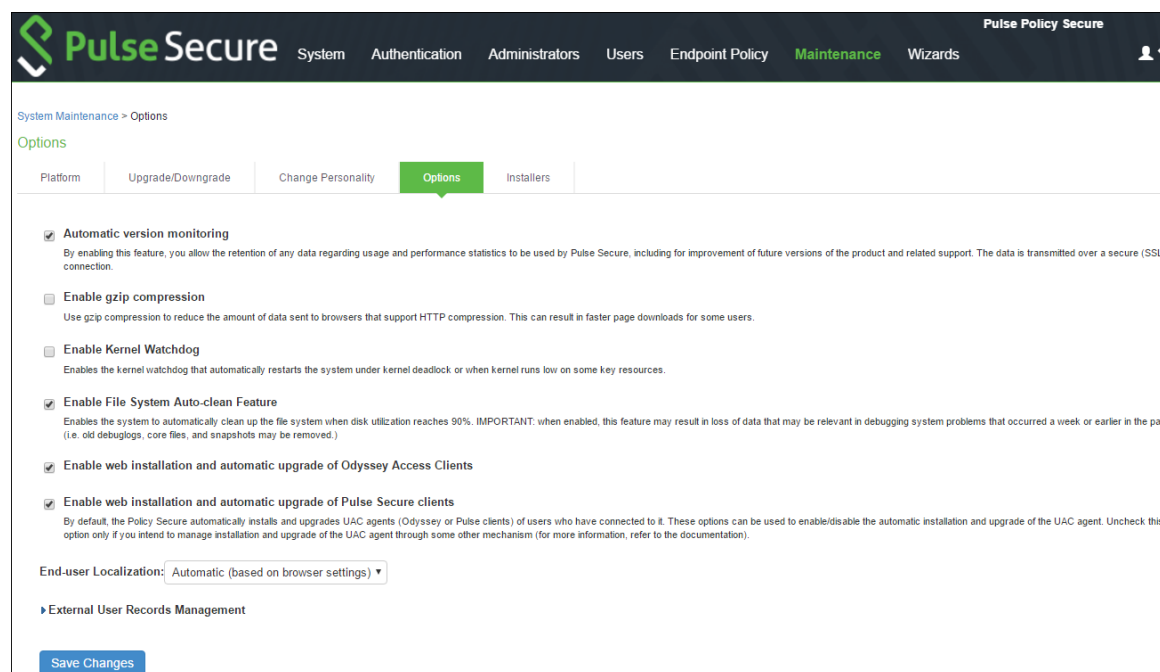


Table121: System Maintenance Options Configuration Guidelines

| Options | Guidelines |
|--|--|
| Automatic version monitoring | <p>If you enable this option, the system reports the following data to PPS:</p> <ul style="list-style-type: none"> • Machine identifier. • Information describing your current software, including: <ul style="list-style-type: none"> • Software build number and build name. • An MD5 hash of your license settings. • An MD5 hash of the internal interface IP address. • If this node is in a cluster, the number of nodes within that cluster. • Current state of the node. • Cluster type (active/active, active/passive). • Total number of unique subnets on the cluster nodes. • Version of Pulse Policy Secure. • Version of ESAP. • Cluster log synchronization status. • Number of Infranet Enforcers configured • Names of RADIUS vendors configured • Total number of concurrent users on the device. • Number of Network Connect and Pulse tunnels. <p>We strongly recommend that you enable this service.</p> |
| Kernel Watchdog | <p>Enables the kernel watchdog that automatically restarts the system under kernel deadlock or when kernel runs low on some key resources.</p> <p>NOTE: Enable the kernel watchdog only when instructed by Pulse Secure Global Support Center .</p> |
| File System Auto-clean | <p>Enables the system to automatically clean up the file system when disk utilization reaches 90%.</p> <p>NOTE: The clean-up operation deletes files that might be relevant in debugging—for example, debug logs, core files, and snapshots might be deleted.</p> |
| Web installation and automatic upgrade of Pulse Secure Clients | <p>After you deploy Pulse Secure client software to endpoints, software updates occur automatically. A Pulse client can receive updates from the server. If you upgrade the Pulse software on your Pulse server, updated software components are pushed to a client the next time it connects.</p> <p>A bound endpoint receives connection set options and connections from its binding server, but it can have its Pulse client software upgraded from any Pulse server that has the automatic upgrade option enabled. During a client software upgrade the client loses connectivity temporarily.</p> |
| Virtual Terminal console | <p>Enables the virtual terminal on a virtual appliance. Clear this check box to use the serial console. Changing this setting will restart the system.</p> |
| End-user Localization | <p>Select one of the following options:</p> <ul style="list-style-type: none"> • Automatic (based on browser settings) • English (U.S.) • Chinese (Simplified) • Chinese (Traditional) • French • German • Japanese • Korean • Spanish |

External User Records Management

| Options | Guidelines |
|--|--|
| Persistent user records limit | Specify the maximum number of user records. This feature is useful when system performance is affected due to many user records. We highly recommend you consult Pulse Secure Global Support Center prior to using this feature. Deleting a user record removes all persistent cookies, SSO information, and other resources for that user. It does not remove the user record from the external or internal authentication server. If you delete a user record and that user logs back in to the authentication server, new user records are created. Records are not removed if that user is currently logged in. |
| Number of records to delete when the limit is exceeded | Specify a number. Older records are removed first. A user record is not deleted if that user is currently logged in. |
| Delete records now | Check whether the persistent user records limit has been exceeded. If it is, delete the number of user records specified in the option above. |
| Automatic deletion of user records during new user log ins | Check whether the persistent user records limit will be exceeded whenever a new user record is about to be created. If true, delete the records prior to creating the user new record. |

Installing the Service Package

This topic describes how to upgrade, downgrade, and rollback the system software. It includes the following information:

- [Downloading and Uploading the Software Package](#)
- [Upgrading the System Software](#)
- [Downgrading the System Software](#)

Downloading and Uploading the Software Package

To download a software package:

1. Go to <http://www.pulsesecure.net/support/downloads/> and browse to the software download page for your product.
2. When prompted, log in with your Pulse Secure customer username and password.
3. Accept the license agreement.
4. When prompted, save the software package to your local host.

You can upload a software package to the system without immediately initiating the upgrade process. This is known as staging the upgrade. You can stage one package. Uploading a second package overwrites the previous staging.

To upload a software package:

1. Select Maintenance > System > Upgrade/Downgrade to display the system software maintenance page.
2. Under Managed Staged Service Package, select Upload new package into staging area and use the Browse button to locate and select the service package file.
3. Click Submit to upload the file.

The Upload Status window shows the progress of the upload operation.

Figure539: Software Upgrade Page



NOTE: If you have enabled logging for Administrator changes (System > Log/Monitoring > Admin Access > Settings page), a log is written to the Admin Access logs page.

Upgrading the System Software

Installing a service package can take several minutes and requires the system to reboot. Because existing system data is backed up during this process, you can decrease installation time by clearing your system log before trying to install a service package.

Note: When the system software is upgraded, it automatically upgrades PPS to OpenSSL version 1.0.2n.

To upgrade the operating system:

1. Select Maintenance > System > Upgrade/Downgrade to display the system software maintenance page.
2. Under Install Service Package, select one of the following options to proceed:
 - From File—Use the Browse button to locate and select the service package file.
 - From Staged Package—Select the service package file that was previously uploaded.




NOTE: Do not select the Deletesoption when you are upgrading software. The Deletes option is available to support downgrading software.

3. Click Install.

The system displays the Service Package Installation Status page, which provides a summary of the integrity checks and compatibility checks and other status indicators.

Figure540: Service Package Installation

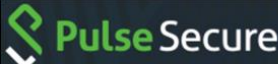


Service Package Installation Status

The installation process takes a few minutes. When complete, the system needs to reboot. Please wait...

- Step 1: Verifying package integrity complete (32 seconds)
- Step 2: Extracting install script complete (43 seconds)
- Step 3: Extracting install script complete (14 seconds)
- Step 4: Preparing disk partitions complete (1 seconds)
- Step 5: Extracting contents of new package complete (14 seconds)
- Step 6: Saving package complete (14 seconds)
- Step 7: Finalizing installation complete (23 seconds)
- Step 8: Encrypting drive please wait complete (96 seconds)
- Step 9: Switching current system to "rollback" and enabling new system ... complete (1 seconds)

🟢 Installation completed successfully and the system will now reboot.: Note that the Administrator Console will be unavailable while the system reboots.(Watch the serial console for messages).
When the system reboots click [here](#) to continue using the Administrator Console.

 **NOTE:** If you have enabled logging for Administrator changes (System > Log/Monitoring > Admin Access > Settings page), a log is written to the Admin Access logs page. If you have enabled logging for System Status (System > Log/Monitoring > Events > Settings page), logs are written to the Events logs page.

Downgrading the System Software

If necessary, you can downgrade to an earlier version of the system software. When you downgrade, you must clear the system and configuration data to avoid unexpected behavior that can occur when the system has data that relates to the newer software.

If you downgrade the system, you must reestablish network connectivity before you can reconfigure it.

To downgrade the operating system:

1. Select Maintenance > System > Upgrade/Downgrade to display the system software maintenance page.
2. Under Install Service Package, select one of the following options to proceed:
 - From File—Use the Browse button to locate and select the service package file.
 - From Staged Package—Select a service package file that was previously uploaded.
3. Select the Deletes all system and user configuration data...option to delete all system and user configuration data before installing the service package, restoring the member to an unconfigured state.
4. Click Install.


Changing the Device Personality

You can use this page to change the device's personality from PPS to PCS. You must perform a backup operation to avoid losing the configuration data before using this configuration.

To change the device personality:

1. Click **Browse** and select the PCS service package to install.
2. Click **Change Now**.

Figure541: Change Device Personality

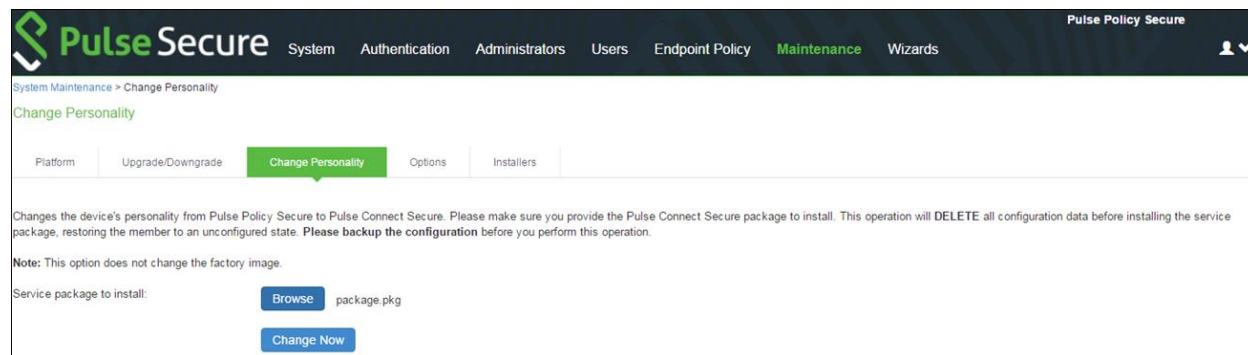

Downloading Client Installer Files

You can use the system maintenance client installers page to download client installer files. The downloadable files include .exe and .msi files for use installing clients on Windows platforms, and .dmg files for installing clients on Macintosh platforms.

To download client installer files:

1. Select Maintenance > System > Installers to display the client installer files page.
2. Click Download to download the file to your local host.

Figure542: System Maintenance Client Installers Page

The screenshot displays the 'System Maintenance > Installers' page in the Pulse Policy Secure interface. The page features a navigation bar with tabs for Platform, Upgrade/Downgrade, Change Personality, Options, and Installers (which is currently selected). Below the navigation bar, there is a list of client installer files available for download. Each entry includes an icon, a title, a brief description, the version number, and a 'Download' link.

| Platform | Upgrade/Downgrade | Change Personality | Options | Installers |
|--|-------------------|--------------------|---------|------------|
| Pulse Secure Installer Service (.exe) This component simplifies future installation and upgrades of Pulse Secure's client software for users with limited desktop privileges. Use this self-extracting .exe package unless a specific requirement exists for Microsoft Windows Installer (.msi) packages. This package can be deployed with limited user privileges if a previous version of the Installer Service is running. version: 5.4R1 (build 40720)[5.4.1-40720(2700)] [Download] | | | | |
| Pulse Secure Installer Service (.msi) This component simplifies future installation and upgrades of Pulse Secure's client software for users with limited desktop privileges. Deploy this Microsoft Windows Installer (.msi) package if your organization or infrastructure requires msi packages. One such example would be automated software installation using Microsoft Systems Management Server. version: 5.4R1 (build 40720)[5.4.1-40720(2700)] [Download] | | | | |
| Host Checker This component verifies security settings on user's workstation. version: 5.4R1 (build 40720)[5.4.1-40720(2700)] [Download] | | | | |
| Third-party Integrity Measurement Verifier (IMV) Server This component allows third-party integrity measurement verifiers (IMV's) to be used with the Pulse Policy Secure version: 5.4R1 (build 40720)[5.4.1-40720(2700)] [Download] | | | | |
| UAC Agent (32-bit) This component authenticates user, conducts host check, and provides optional encrypted transport to Enforcer. Please consult the Pulse Secure Supported Platforms Guide for this version to determine which versions of Windows 32-bit client operating systems are supported. version: 4.4.19.39906 [Download] | | | | |
| UAC Agent (64-bit) This component authenticates user, conducts host check, and provides optional encrypted transport to Enforcer. Please consult the Pulse Secure Supported Platforms Guide for this version to determine which versions of Windows 64-bit client operating systems are supported. version: 4.4.19.39906 [Download] | | | | |
| Pulse Secure Installer (32-bit) This setup application installs all Pulse Secure components. Please consult the Pulse Secure Supported Platforms Guide for this version to determine which versions of Windows 32-bit client operating systems are supported. version: 5.3.1.346 [Download] | | | | |
| Pulse Secure Installer (64-bit) This setup application installs all Pulse Secure components. Please consult the Pulse Secure Supported Platforms Guide for this version to determine which versions of Windows 64-bit client operating systems are supported. version: 5.3.1.346 [Download] | | | | |
| Pulse Secure Installer (Macintosh) This setup application installs all Pulse Secure components. Please consult the Pulse Secure Supported Platforms Guide for this version to determine which versions of Macintosh client operating systems are supported. version: 5.3.1.346 [Download] | | | | |
| Pulse Application Launcher Installer (Windows) This setup application installs all Pulse Application Launcher components. version: 5.4R1 (build 40720)[5.4.1-40720(2700)] [Download] | | | | |
| Pulse Application Launcher Installer (Macintosh) This setup application installs all Pulse Application Launcher components. version: 5.4R1 (build 40720)[5.4.1-40720(2700)] [Download] | | | | |


Testing Network Connectivity

You can use the admin console to test network connectivity to all the servers with which the system is configured to communicate, for example network services or AAA servers.

To test network connectivity:

1. Select Maintenance > System > Platform to display the system maintenance platform page.
2. Click Test Connectivity.

Figure543: System Maintenance Platform Page

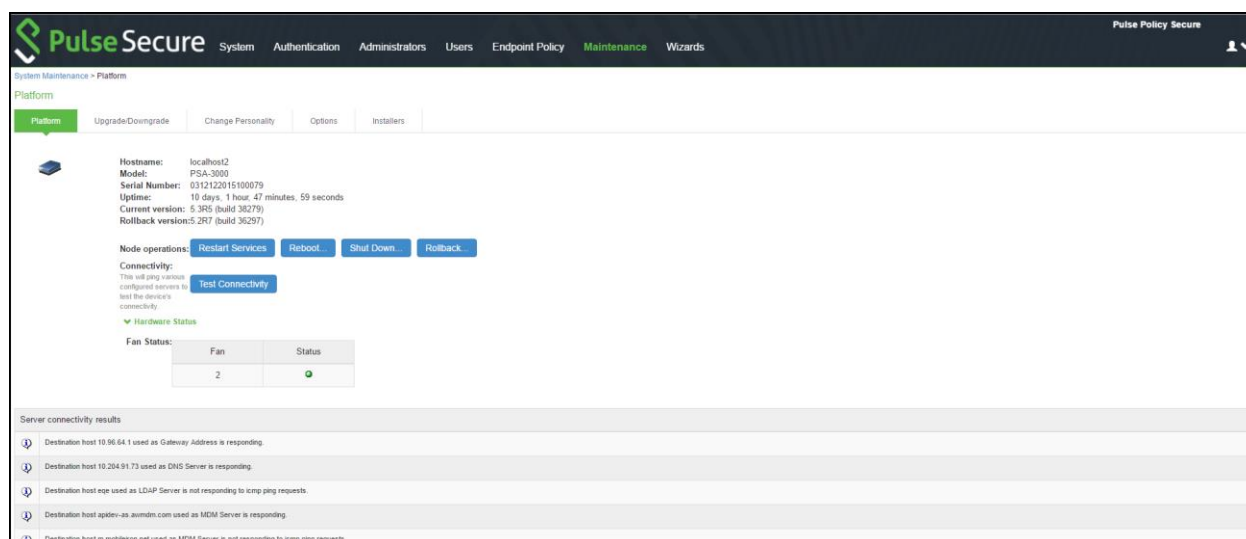

Troubleshooting

This part covers the following chapters:

- [Logging and Monitoring](#)
- [Troubleshooting](#)

Logging and Monitoring

This chapter describes local logging features, SNMP, and syslog. It includes the following information:

- [Overview](#)
- [Displaying System Logs](#)
- [Configuring Log Events Settings](#)
- [Log Filtering](#)
- [Monitoring using SNMP](#)
- [Configuring an External Syslog Server](#)
- [Configuring Advanced Settings](#)
- [Displaying System Status](#)
- [Displaying System Status](#)
- [Displaying Hardware Status](#)
- [Displaying Active Users](#)
- [Displaying User Access Statistics](#)

Logging Overview

PPS provides logging and monitoring capabilities to help you track events and user activities. The system generates event logs related to system performance, administrator actions, network communications, access management framework results, user sessions, and so forth.

The available logs, includes:

- **Event Logs-** This file contains a variety of system events, such as session timeouts, systems errors and warnings, server restart notifications and connectivity requests.
- **User Access Logs-** This file contains information about when the user access the appliance, time, number of simultaneous users, user sign-ins and sign-outs.
- **Admin Access Logs-** This file contains administration information, including administrator changes to user, system and network settings, such as changes to session timeouts, license changes and so on.
- **Sensor Log-** This file contains information related to IDP sensor.

The system supports the following log collection methods:

- Local log collector and log viewer.
- Reporting to syslog servers.
- Reporting to SNMP servers.

The below table describes the event log severity levels.

Table122: Event Log Severity Levels

| Severity Level | Description |
|----------------|--|
| Critical | The system cannot serve user and administrator requests or loses functionality to a majority of subsystems. |
| Major | The system loses functionality in one or more subsystems, but users can still access the system for other access mechanisms. |
| Minor | The system encounters an error that does not correspond to a major failure in a subsystem. Minor events generally correspond to individual request failures. |
| Info | The system writes an informational event to the log when a user makes a request or when an administrator makes a modification. |

In addition to managing system logs, you can use the admin console to configure collection of client-side logs, including Host Checker logs.

Displaying System Logs

This topic describes how to display local system logs. It includes the following information:

- [Displaying System Logs](#)
- [Displaying Events Logs](#)
- [Displaying User Access Logs](#)
- [Displaying Admin Access Logs](#)
- [Displaying Sensor Logs](#)

Displaying Events Logs

The Events logs include system events, such as session timeouts, system errors and warnings, requests to check server connectivity, and system restart notifications. The local log viewer displays the most recent 5000 log messages (the display limit).

To display Events logs:

1. Select System Log/Monitoring.
2. Click the Events tab.
3. Click the Log tab to display the log page.
4. Use the features described in table below to examine log records or manage the log collection.

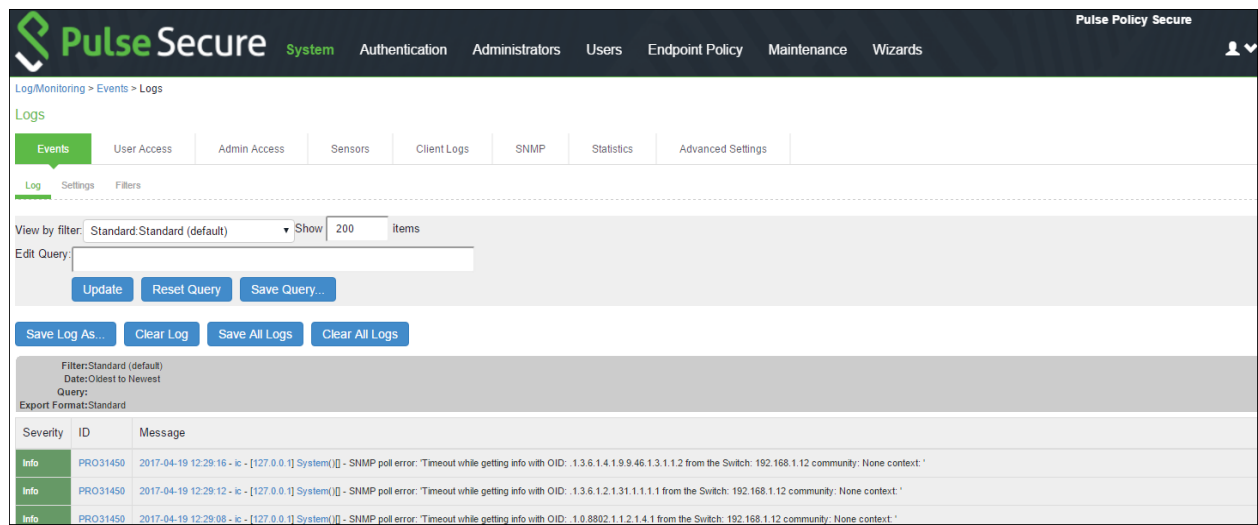


Table123: Log Management Features


| Controls | Description |
|----------------|--|
| Filter | <p>Select a filter format. Any custom filter formats and the following predefined filter formats are available:</p> <ul style="list-style-type: none"> Standard (default)—This log filter format logs the date, time, node, source IP address, user, realm, event ID, and message. WELF—This customized WebTrends Enhanced Log Format (WELF) filter combines the standard WELF format with information about the system realms, roles, and messages. WELF-SRC-2.0-Access Report—This filter adds access queries to the customized WELF filter. You can use this filter with NetIQ's SRC to generate reports on user access methods. <p>NOTE: Format filters change only the data displayed (or columns exported), and do not affect the log data that has been collected.</p> |
| Query | <p>In the log display, several fields are hyperlinks. The hyperlinks function as dynamic queries on the local log collection. For example, if you click the log ID, the date, or an IP address or username, the log viewer queries the log collection for records that match the value you clicked, and redisplay the log collection. You can apply additional query filters by clicking additional hyperlinked values, essentially creating a Boolean AND query (for example, date AND IP address).</p> <p>Use the Reset Query button to clear the query filters and redisplay the unfiltered log collection.</p> <p>Use the Save Query button to save the dynamic log query as a custom filter. When you click the Save Query button, the system displays the Filters tab displays with the Query field prepopulated with the variables you selected from the log.</p> <p>NOTE: Query filters change only the display (or rows exported), and do not affect the log data that has been collected.</p> |
| Save Log As | <p>Save the local log collection to a file. We recommend you retain the system generated log name, which follows a consistent convention: pulsesecure.logtype.nodename.log.</p> <p>The local log viewer displays the most recent 5000 log messages (the display limit). If the current log file contains fewer than 5000 log messages, older log messages from the backup log file are displayed, up to a total of 5000 log messages. This makes the log files appear as one, even though they are stored separately.</p> <p>When you save the log messages or use the FTP archive function, the backup log file is appended to the current log file, and is then downloaded as one log file. If the log files are not archived or saved by the time they are rolled over again, the oldest log messages (saved in the backup log file) are lost.</p> |
| Clear Log | <p>Clear the local log and log.old file.</p> <p>When you clear the local log, events recorded by the syslog server are not affected. Subsequent events are recorded in a new local log file.</p> |
| Save All Logs | <p>The Save All Logs button appears on the Events, User Access, Admin Access, and Sensors tabs. When you click Save All Logs, the system generates a file that includes event, user access, admin access, sensor logs, and XML data for all of the system statistics and graphs shown on the Status > Overview page. After you click Save All Logs, you are prompted to download a file named pulsesecurelogs-graphs.tar.gz to your local host.</p> |
| Clear All Logs | <p>The Clear All Logs button appears on the Events, User Access, Admin Access, and Sensors tabs. It clears event, user access, admin access, sensor logs, and XML data for all of the system statistics and graphs shown on the Status > Overview page. When you clear the local log, events recorded by the syslog server are not affected. Subsequent events are recorded in a new local log file.</p> |

Displaying User Access Logs

The User Access logs include information about user access, such as the number of simultaneous users at each one hour interval (logged on the hour) and user sign-ins and sign-outs. The local log viewer displays the most recent 5000 log messages (the display limit).

To display User Access logs:

1. Select System Log/Monitoring.
2. Click the User Access tab.
3. Click the Log tab.
4. Use the features described in table below to examine log records or manage the log collection.

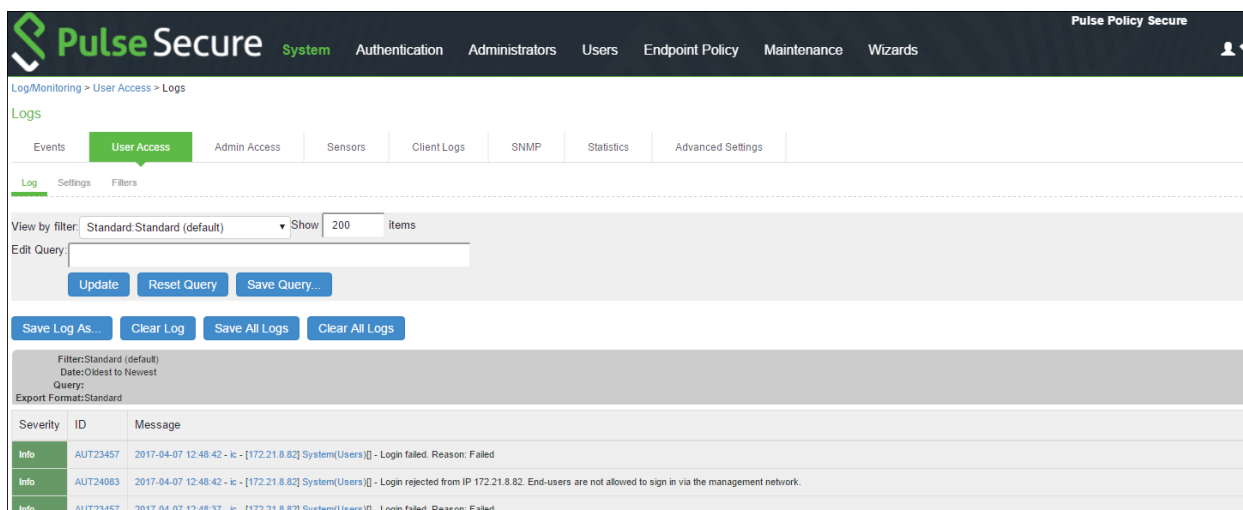

The screenshot shows the Pulse Secure System Log/Monitoring interface. The top navigation bar includes the Pulse Secure logo and tabs for System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail indicates the path: Log/Monitoring > User Access > Logs. The 'Logs' section has tabs for Events, User Access (selected), Admin Access, Sensors, Client Logs, SNMP, Statistics, and Advanced Settings. Below these tabs, there are sections for 'Log' (with sub-tabs Log, Settings, Filters), 'View by filter' (Standard/Standard (default)), 'Show' (200 items), 'Edit Query' (with buttons for Update, Reset Query, and Save Query...), and 'Save Log As...' (with buttons for Clear Log, Save All Logs, and Clear All Logs). The log entries are displayed in a table with columns for Severity, ID, and Message. The table shows three log entries, all with 'Info' severity and 'AUT23457' ID, indicating login failures or rejections.

| Severity | ID | Message |
|----------|----------|---|
| Info | AUT23457 | 2017-04-07 12:48:42 - ic - [172.21.8.82] System(Users)[] - Login failed. Reason: Failed |
| Info | AUT24083 | 2017-04-07 12:48:42 - ic - [172.21.8.82] System(Users)[] - Login rejected from IP 172.21.8.82. End-users are not allowed to sign in via the management network. |
| Info | AUT23457 | 2017-04-07 12:48:37 - ic - [172.21.8.82] System(Users)[] - Login failed. Reason: Failed |

Displaying Admin Access Logs

The Admin Access logs include information about administrator actions, such as administrator changes to user, system, and network settings. It includes a log entry whenever an administrator signs in, signs out, or changes licenses on the appliance. The local log viewer displays the most recent 5000 log messages (the display limit).

To display Admin Access logs:

1. Select System Log/Monitoring.
2. Click the Admin Access tab.
3. Click the Log tab.
4. Use the features to examine log records or manage the log collection.

The screenshot shows the Pulse Secure web interface. The top navigation bar includes the Pulse Secure logo and tabs for System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail indicates the path: Log/Monitoring > Admin Access > Logs. Below this, there are tabs for Events, User Access, Admin Access (selected), Sensors, Client Logs, SNMP, Statistics, and Advanced Settings. Under the Admin Access tab, there are sub-tabs for Log, Settings, and Filters. The Log sub-tab is active, showing a list of log entries. Above the list, there are controls for filtering and displaying the logs, including a 'View by filter' dropdown set to 'Standard-Standard (default)', a 'Show' input set to '200', and an 'items' label. There is also an 'Edit Query' text box and buttons for 'Update', 'Reset Query', and 'Save Query...'. Below these are buttons for 'Save Log As...', 'Clear Log', 'Save All Logs', and 'Clear All Logs'. The log entries are displayed in a table with columns for Severity, ID, and Message. The first three entries are visible:

| Severity | ID | Message |
|----------|----------|---|
| Info | ADM22668 | 2017-04-19 12:03:34 - ic - [172.21.8.123] admin(Admin Users)[Administrators] - Login succeeded for admin/Admin Users from 172.21.8.123 via management port. |
| Info | AUT30684 | 2017-04-19 12:03:34 - ic - [172.21.8.123] admin(Admin Users)[] - Primary authentication successful for admin/Administrators from 172.21.8.123 |
| Info | ADM22671 | 2017-04-19 11:59:11 - ic - [172.21.8.93] admin(Admin Users)[Administrators] - Logout from 172.21.8.93 |

Displaying Sensor Logs

The Sensor logs include information related to communication with an IDP sensor if you have deployed a coordinated threat control solution. The local log viewer displays the most recent 5000 log messages (the display limit).

To display Sensor logs:

1. Select System Log/Monitoring.
2. Click the Sensor tab.
3. Click the Log tab.
4. Use the features to examine log records or manage the log collection.

The screenshot displays the Pulse Secure web interface. The top navigation bar includes the Pulse Secure logo and several menu items: System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. Below this, a breadcrumb trail indicates the current location: Log/Monitoring > Sensors > Logs. The 'Logs' section has a sub-navigation bar with tabs: Events, User Access, Admin Access, Sensors (selected), Client Logs, SNMP, Statistics, and Advanced Settings. Under the 'Sensors' tab, there are further sub-tabs: Log (selected), Settings, and Filters. The 'Log' sub-tab shows a search and filter interface with a 'View by filter' dropdown set to 'Standard:Standard (default)', a 'Show' dropdown set to '200', and an 'Items' label. Below this is an 'Edit Query' text box and buttons for 'Update', 'Reset Query', and 'Save Query...'. Further down are buttons for 'Save Log As...', 'Clear Log', 'Save All Logs', and 'Clear All Logs'. A summary section shows 'Filter:Standard (default)', 'Date:Oldest to Newest', 'Query:', and 'Export Format:Standard'. The main log table has three columns: Severity, ID, and Message. It contains three log entries, all with 'Info' severity and 'IDP24672' ID, showing 'IDP Monitor initialized' messages from different system IDs.

| Severity | ID | Message |
|----------|----------|---|
| Info | IDP24672 | 2017-03-14 11:22:24 - ic - [127.0.0.1] System() - IDP Monitor initialized |
| Info | IDP24672 | 2017-02-22 15:01:43 - ic - [127.0.0.1] System() - IDP Monitor initialized |
| Info | IDP24672 | 2016-11-25 11:09:09 - ic - [127.0.0.1] System() - IDP Monitor initialized |

Configuring Log Events Settings

The log type has its own settings that allow you to specify which events are logged, the maximum file size, and whether to log events to system log server in addition to logging them locally.

To configure log event categories:

1. Select System > Log/Monitoring.
2. Click the Settings tab to display the configuration page.
3. Complete the configuration as described below.
4. Save the configuration.

Figure544: Log Events Settings Configuration Page

The screenshot displays the 'Log settings' configuration page in the Pulse Secure interface. The page is titled 'Log settings' and includes a breadcrumb trail 'Log/Monitoring > Events > Log settings'. The 'Events' tab is selected, showing a list of log categories: User Access, Admin Access, Sensors, Client Logs, SNMP, Statistics, and Advanced Settings. The 'Settings' sub-tab is active, showing a 'Log' dropdown set to 'Settings' and a 'Filters' dropdown. Below these are 'Save Changes' and 'Reset' buttons. The 'Maximum Log Size' section shows a 'Max Log Size' of 200 MB. A note indicates that to archive log data, users should see the 'Archiving' page. The 'Select Events to Log' section contains a list of checkboxes for various event types, including Connection Requests, System Status, System Errors, Enforcer Events, License Protocol Events, IF-MAP Server Trace, RADIUS Statistics, MDM API Trace, Pulse One Events, and Profiler Events. The 'Syslog Servers' section includes a 'Delete' button and a table for configuring external Syslog servers. The table has columns for 'Server name/IP', 'Facility', 'Type', 'Client Certificate', and 'Filter'. The first row is pre-filled with 'LOCAL0', 'UDP', 'Select Client Cert', and 'Standard: Standard (default)'. An 'Add' button is located at the end of the table. At the bottom of the page are 'Save Changes' and 'Reset' buttons.

| Server name/IP | Facility | Type | Client Certificate | Filter |
|----------------|----------|------|--------------------|------------------------------|
| | LOCAL0 | UDP | Select Client Cert | Standard: Standard (default) |
| | | | | |
| | | | | |
| | | | | |
| | | | | |



NOTE: To configure log events for each local log category, you must perform this procedure on each local log tab: Events, User Access, Admin Access, and Sensors.

Table124: Log Events Settings

| Settings | Guidelines |
|--|--|
| Maximum Log Size | |
| Max Log Size | <p>Specify the maximum size of the local log. The default is 200 MB. The maximum is 500 MB. The default is a good choice for logs formatted with the Standard format. If you use a more verbose format, such as WELF, specify a larger value.</p> <p>When the local log reaches the maximum log size, the current data is rolled over to a backup log file. A new, empty, file is then created for all subsequent (new) log messages. The log viewer displays the most recent 5000 log messages (the display limit). If the current log file contains fewer than 5000 log messages, older log messages from the backup log file can be displayed, up to a total of 5000 log messages. This makes the log files appear as one, even though they are stored separately.</p> <p>When you save the log messages or use the FTP archive function, the backup log file is appended to the current log file and is then downloaded as one log file. If the log files are not archived or saved by the time they are rolled over again, the oldest log messages (saved in the backup log file) are lost.</p> |
| Archiving | Click the Archiving link to display the configuration page for Archiving jobs, including log archiving. |
| Select Events to Log – Events Tab | |
| Connection Requests | Log events related to connection requests. |
| System Status | Log events related to changes in system status. |
| System Errors | Log events related to system errors. |
| Enforcer Events | Log events related to Infranet Enforcer communication. |
| Enforcer Command Trace | Log events related to Infranet Enforcer command execution. |
| Statistics | Log user access statistics reported on the System > Log/Monitoring > Statistics tab. If you unselect the Statistics option, the statistics are not written to the log file, but are still reported on the statistics page. |
| Performance | Log events related to performance, such as CPU utilization. |
| License Protocol Events | Log events related to licensing. |
| IF-MAP Server Trace | Log events related to IF-MAP. |
| RADIUS Statistics | Logs events related to RADIUS. |
| Select Events to Log – User Access Tab | |
| Login/log out | Log events related to sign in and sign out. |
| User Settings | Log events related to changes to user settings. |
| Client Certificate | Log events related to certificate security. |
| Enforcer Deny Messages | Log events related to Infranet Enforcer. |
| IF-MAP Client User Messages | Log events related to IF-MAP. |
| RADIUS Accounting Messages | Log events related to RADIUS. |

| Settings | Guidelines |
|---|--|
| Endpoint Heartbeat Messages | Log events related to endpoint heartbeat messages. |
| Pulse Client Messages | Log events related to Pulse clients. |
| Select Events to Log – Admin Access Tab | |
| Administrator changes | Log events related to configuration changes. |
| Administrator logs | Log events related to administrator access. |
| License changes | Log events related to licensing. |
| Select Events to Log – Sensor Tab | |
| None | If you have configured communication with an IDP sensor for coordinated threat control, communication between the network nodes is logged. There is no way to select less than the whole set of sensor event logs. |

Log Filtering

PPS allows you to filter and format the data in your events, user access, and administrator access log files. When you filter log files, PPS displays only those messages specified within the filter query. For example, you can create a query that logs only entries for a particular range of IP addresses, or users who are signed into a specific realm. This topic describes how to use log filters. It includes the following information:

- [Creating a Custom Log Collection Filter](#)
- [Reviewing the Configuration of Predefined Log Format Filters](#)
- [Example: Using the Source IP Address Filter](#)
- [Displaying User Access Statistics](#)

Creating a Custom Log Collection Filter

If desired, you can create custom log collection filters to change the records displayed or exported. For example, it is common to see administrators use a filter for RADIUS accounting logs. This filter allows only the accounting log message, and it puts the entire message in a comma separated list. The order of the filtered message is: Date, Time, User, Realm, "List of Roles", NAS-ID, Acct-Status, Auth-Type, Attr-Value1, Attr-Value2, Attr-Value3.

Accounting attribute messages are different from authentication attribute messages in that the attribute name is not printed in the log message, but a comma is inserted for every attribute to be logged, even if it is not present.

To create a custom log collection filter:

1. Select System Log/Monitoring.
2. Click the Events tab.
3. Click the Filter tab.
4. Click New Filter to display the configuration page.
5. Complete the configuration as described below.
6. Save the configuration.

Figure545: New Filter Page

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Log/Monitoring > Events > Filters > New Log filter

New Log filter

Events User Access Admin Access Sensors Client Logs SNMP Statistics Advanced Settings

Log Settings **Filters**

Filter

Filter Name:

☐ Make default for syslog and archiving filter selection

Query

Start Date: ☐ Earliest Date / /

End Date: ☐ Latest Date (moving) / /

Query:

Filter Variables Dictionary

eventid
eventtypecode
syslog
syslogcode
user
time
node
sourceip
realm
role
msg

< Insert Expression

Export Format

Format: ☒ Standard ☐ WELF ☐ Custom

`%date% %time% - %node% - (%sourceip%) %user%(%realm%)
[%role%] - %msg%`

Save Cancel

Table125: Filter Settings

| Settings | Guidelines |
|---------------|---|
| Filter Name | Specify a name that is helpful to you and other administrators in understanding usage for your customer filter. |
| Make default | Make the filter the default on syslog and archiving configuration pages. |
| Query | |
| Start Date | Enter a start date. Click Earliest Date to write all logs from the first available date stored in the log file. |
| End Date | Enter an end date. Click Latest Date to write all logs up to the last available date stored in the log file. |
| Query | <p>Use the Filter Variables Dictionary to insert query expressions in the Query box. Enclose the query value in single quotes.</p> <p>For example, insert the query expression sourceip=. Then complete the expression by adding the value '192.168.0.1'.</p> |
| Export Format | <p>Select an export format:</p> <ul style="list-style-type: none"> Standard (default)—This log filter format logs the date, time, node, source IP address, user, realm, event ID, and message. WELF—This customized WebTrends Enhanced Log Format (WELF) filter combines the standard WELF format with information about the system realms, roles, and messages. Custom—Use the Standard as a template for your custom selection of columns to be included in exports (when log collections are saved to files). |



NOTE: Log query filters change only the data displayed (or rows exported). Log format filters change only the data displayed (or columns exported). Use of filters does not affect the log data that has been collected.

Reviewing the Configuration of Predefined Log Format Filters

To view the configuration of predefined log format filters:

1. Select System > Log/Monitoring.
2. Click the Events tab.
3. Click the Filter tab to display the log filters page.
4. Click the hyperlinked name of the filter to display its configuration page. You cannot edit the predefined filter named Standard, but you may edit the predefined WELF filters and any other custom filters that appear in the list.

Figure546: Log Filters Page

| Filter | Query | Export Format |
|--|--|---------------|
| Standard (default) | Date: Oldest to Newest Query: | Standard |
| WELF | Date: Oldest to Newest Query: | WELF |
| WELF-SRC-2.0-Access-Report | Date: Oldest to Newest Query: id = ('WEB20174' or 'EML20825' or 'FBR20512' or 'FBR20503' or 'FBR20501' or 'FBR20536' or 'FBR20540' or 'JAV20023' or 'NWC23464' or 'NWC23465' or 'MTG20742' or 'MTG20749' or 'MTG20866' or 'MTG20869' or 'MTG20875' or 'MTG20877' or 'STA22721') | WELF |

Example: Using the Source IP Address Filter

When drilling into logs to verify behavior or troubleshoot an issue with a dual-stack device, it is helpful to redisplay the log collection filtered on the IP address.

To filter on an IP address:

1. Select System > Log/Monitoring.
2. Create the filter:
3. Select User Access and then Filter.
4. Define the filter expression, name the filter, and click Save. In this example, we create a filter based on source IP address and name it IPv6_Address_Filter:Standard.
5. Use the filter:
6. Select Logs to display the user logs table.
7. Under View by filter, select IPv6_Address_Filter:Standard.
8. If desired, under Edit Query, edit the value of the sourceip= variable expression to filter on different source IP addresses.
9. Click Update to apply the filter and redisplay the log collection.

Displaying User Access Statistics

Every hour, the system logs the peak count of Web users in the previous hour. It displays the hourly counts for the past week on the Statistics page. It writes the report to the system log once a week.

To display user statistics:

1. In the admin console, select System > Log/Monitoring.
2. Click the Statistics tab to display the page.
3. Scroll the page to view the data.

Figure547: User Statistics Page

Pulse Secure System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Log/Monitoring > SNMP

SNMP

Events User Access Admin Access Sensors Client Logs **SNMP** Statistics Advanced Settings

▼ MIB File

You must download the [Pulse Secure MIB file](#) and install it in your SNMP manager application to monitor the device.

▼ SNMP Version data

SNMP Version:

● v2c ● v3

▼ Agent Properties

SNMP Queries: ☐

SNMP Traps: ☐

System Name:

System Location:

System Contact:

Community:

▼ Trap Thresholds

Set thresholds for traps.

Check Frequency: seconds (50-1000 seconds)

Log Capacity: % Disk %

Users: % CPU %

Physical Memory: %

Swap Memory (Virtual Memory): %

To monitor the device for memory starvation condition it is recommended to use 'Virtual Memory' traps as Physical memory traps may get generated even if the device is not showing symptoms of memory starvation.

▼ Optional traps

☐ Critical Log Events

☐ Major Log Events

[Save Changes](#)

▼ SNMP Trap Servers

Specify the servers to which the device will send any traps it generates.

10 records per page Search:

| Hostname/IP Address (IPv4/IPv6) | Port | Community (optional) | |
|---------------------------------|----------------------|----------------------|---------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | Add |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | |

[Previous](#) [1](#) [Next](#)



NOTE: Upgrading software clears all statistics. If you configure the system to log statistics hourly, however, older statistics are still available in the log file after an upgrade.

Monitoring using SNMP

You can use a third-party SNMP manager, such as HP OpenView, to monitor PPS system health. PPS supports SNMP version 2 (v2) and SNMPv3. PPS implements a private MIB, and defines its own traps. Download the PPS MIB file and specify the appropriate information to receive the traps.

To configure the SNMP agent:

1. Select System > Log/Monitoring.
2. Click the SNMP tab to display the SNMP configuration page.
3. Complete the configuration as described below.
4. Save the configuration.

Figure548: SNMP Configuration Page

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy Maintenance Wizards

Log/Monitoring > SNMP

SNMP

Events User Access Admin Access Sensors Client Logs **SNMP** Statistics Advanced Settings

MIB File

You must download the [Pulse Secure MIB file](#) and install it in your SNMP manager application to monitor the device.

SNMP Version data

SNMP Version:
☒ v2c ☐ v3

Agent Properties

SNMP Queries: ☐
 SNMP Traps: ☐

System Name:
 System Location:
 System Contact:
 Community:

Trap Thresholds

Set thresholds for traps.

Check Frequency: seconds (60-1000 seconds)

Log Capacity: % Disk: %
 Users: % CPU: %
 Physical Memory: %
 Swap Memory (Virtual Memory): %

To monitor the device for memory starvation condition it is recommended to use 'Virtual Memory' traps as Physical memory traps may get generated even if the device is not showing symptoms of memory starvation.

Optional traps

☐ Critical Log Events
☐ Major Log Events

[Save Changes](#)

SNMP Trap Servers

Specify the servers to which the device will send any traps it generates.

10 records per page Search:

| Hostname/IP Address (IPv4/IPv6) | Port | Community (optional) | |
|---------------------------------|----------------------|----------------------|---------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | Add |
| | | | |
| | | | |
| | | | |
| | | | |

-- Previous **1** Next --

Table126: SNMP Configuration Settings

| Settings | Guidelines | | | | |
|----------------------|--|--|--|---------------------------------------|--|
| MIB File | Use the Pulse Secure MIB file link to download the device management information base MIB file. You add this file to your SNMP manager configuration. | | | | |
| SNMP Version | Select your SNMP server version: <ul style="list-style-type: none">v2cv3 | | | | |
| Agent Properties | | | | | |
| SNMP Queries | Select to support SNMP queries. | | | | |
| SNMP Traps | Select to send SNMP traps. | | | | |
| System Name | Specify a system name. | | | | |
| System Location | Specify a location. | | | | |
| System Contact | Specify a system contact. | | | | |
| Community String | <ul style="list-style-type: none">Required only for SNMPv2c.To query the system, your network management station must send it the community string.To stop the SNMP system, clear the community field. | | | | |
| SNMPv3 Configuration | | | | | |
| Username | Specify the SNMPv3 username. The User-Based Security Model (USM) is the default Security Module for SNMPv3. The system supports only one user at a time to be registered with an SNMP engine. Editing the SNMPv3 user attributes overwrite any already registered SNMPv3 user. The SNMPv3 user must have read-only access on all MIBs supported by the system. SNMPv3 user configuration attributes can also be used for SNMP traps. | | | | |
| Security Level | Selection | Auth Protocol | Auth Password | Priv Protocol | Priv Password |
| | No Auth, NoPriv | — | — | — | — |
| | Auth, NoPriv | Select MD5 (HMAC-MD5-96) or SHA (HMAC-SHA-96). | Enter an authentication password. The password can contain any ASCII characters and must be at least 8 characters in length. | — | — |
| | Auth, Priv | Select MD5 (HMAC-MD5-96) or SHA (HMAC-SHA-96). | Enter an authentication password. The password can contain any ASCII characters and must be at least 8 characters in length. | Select either CBC-DES or CFB-AES-128. | Enter a privacy password. The password can contain any ASCII characters and must be at least 8 characters in length. |
| Trap Thresholds | NOTE: Setting a threshold value to 0 disables that respective trap. | | | | |
| Check Frequency | Specify the frequency in seconds for sending traps. The default is 180 seconds. | | | | |
| Log Capacity | Specify the percent of log space used. The default is 90%. | | | | |
| Users | Specify the percent of user capacity used. The default is 100%. | | | | |
| Physical Memory | Specify the percent of physical memory used. The default is 0 (not reported). | | | | |

| Settings | Guidelines |
|------------------------------|---|
| Swap Memory (Virtual Memory) | Specify the percent of swap memory used. The default is 0 (not reported). NOTE: We recommend you monitor swap memory to alert you to potential memory issues. The threshold for traps for physical memory usage might be reached even if the system is not experiencing any difficulties. |
| Disk | Specify the percent of disk utilization. The default is 80%. |
| CPU | Specify the percent of CPU utilization. The default is 0 (not reported). |
| Meeting Users | Specify the percent of meeting users. The default is 100%. |
| Optional Traps | |
| Critical Log Events | Send traps when the system logs critical events. |
| Major Log Events | Send traps when the system logs major events. |
| Save SNMP Settings? | Click Save Changes to update the SNMP agent configuration. The page is refreshed and displays the SNMP engine ID. If the configuration is changed to move from SNMP v2c to SNMP v3, the system generates and displays two engine IDs. |
| SNMP Servers | |
| Hostname / IP address | Specify the hostname or IP address for the SNMP servers to which the system will send any traps it generates. |
| Port | Specify the port for the SNMP server. Typically, SNMP uses port 162. |
| Community | Specify the community string (if necessary). |

Keep the following configuration tips in mind when you configure your SNMP manager to listen for this SNMP agent:

- Add the Pulse Secure MIB file to the SNMP manager configuration.
- If using SNMPv2c, the community string configuration for the SNMP manager and SNMP agent must match.
- If using SNMPv3, the SNMPv3 user configuration for the SNMP manager and the SNMP agent must match.
- If using SNMPv3, you must specify the Authoritative Engine ID for SNMPv3 traps that was generated when you saved the SNMP agent configuration.

The table below is a reference of MIB objects for the system.

Table127: MIB Objects

| Object | Description |
|-------------------|---|
| logFullPercent | Returns the percentage of available file size filled by the current log as a parameter of the logNearlyFull trap. |
| signedInWebUsers | Returns the number of users signed in through a Web browser. |
| signedInMailUsers | Returns the number of users signed in to the e-mail client. |
| blockedIP | Returns the IP address—blocked due to consecutive failed log in attempts—sent by the iveTooManyFailedLoginAttempts trap. The system adds the blocked IP address to the blockedIPList table. |
| authServerName | Returns the name of an external authentication server sent by the externalAuthServerUnreachable trap. |
| productName | Returns the licensed product name. |
| productVersion | Returns the software version. |

| Object | Description |
|------------------------|--|
| fileName | Returns the file name sent by the archiveFileTransferFailed trap. |
| meetingUserCount | Returns the number of concurrent meeting users sent by the meetingUserLimit trap. |
| iveCpuUtil | Returns the percentage of CPU used during the interval between two SNMP polls. This value is calculated by dividing the amount of CPU used by the amount of CPU available during the current and previous SNMP polls. If no previous poll is available, the calculation is based on the interval between the current poll and system boot. |
| iveMemoryUtil | Returns the percentage of memory utilized by the system at the time of an SNMP poll. The system calculates this value by dividing the number of used memory pages by the number of available memory pages. |
| iveConcurrentUsers | Returns the total number of users logged in. |
| clusterConcurrentUsers | Returns the total number of users logged in for the cluster. |
| iveTotalHits | Returns the total number of hits to the system since last reboot. Includes total values from iveFileHits, iveAppletHits, meetingHits, and iveWebHits. |
| iveFileHits | Returns the total number of file hits to the system since last reboot. Incremented by the Web server with each GET/POST corresponding to a file browser request. |
| iveWebHits | Returns the total number of hits by means of the Web interface since last reboot. Incremented by the Web server for each http request received by the system, excluding file hits, applet hits, and meeting hits. |
| iveAppletHits | Returns the total number of applet hits to the system since last reboot. Incremented by the Web server for each GET request for a Java applet. |
| ivetermHits | Returns the total number of terminal hits to the system since last reboot. |
| logName | Returns the name of the log (admin/user/event) for the logNearlyFull and iveLogFull traps. |
| iveSwapUtil | Returns the percentage of swap memory pages used by the system at the time of an SNMP poll. The system calculates this value by dividing the number of swap memory pages used, by the number of available swap memory pages. |
| diskFullPercent | Returns the percentage of disk space used in the system for the iveDiskNearlyFull trap. The system calculates this value by dividing the number of used disk space blocks by the number of total disk space blocks. |
| blockedIPList | Returns a table with the 10 most recently blocked IP addresses. The blockedIP MIB adds blocked IP addresses to this table |
| ipEntry | An entry in the blockedListIP table containing a blocked IP address and its index (see IPEntry). |
| IPEntry | The index (ipIndex) and IP address (ipValue) for an entry in the blockedIPList table. |
| ipIndex | Returns the index for the blockedIPList table. |
| ipValue | A blocked IP address entry in the blockedIPList table. |
| logID | Returns the unique ID of the log message sent by the logMessageTrap trap. |
| logType | Returns a string sent by the logMessageTrap trap stating whether a log message is major or critical. |
| logDescription | Returns a string sent by the logMessageTrap trap stating whether a log message is major or critical. |
| Name | Returns the name of a virtual system. |
| ocspResponderURL | Returns the name of an OCSP responder. |
| fanDescription | Returns the status of the system fans. |
| psDescription | Returns the status of the system power supplies. |
| raidDescription | Returns the status of the system RAID device. |

| Object | Description |
|-------------------------------|--|
| iveLogNearlyFull | <p>The log file (system, user access, or administrator access) specified by the logName parameter is nearly full. When this trap is sent, the logFullPercent (%of log file full) parameter is also sent. You can configure this trap to be sent at any percentage. To disable this trap, set the Log Capacity trap threshold to 0%. The trap's default value is 90%.</p> <p>NOTE: When SNMP traps are enabled, the iveLogNearlyFull and iveLogFull traps are sent when the log files are 90% full and 100% full respectively, even if the threshold is set to 0 (disabled).</p> |
| iveLogFull | <p>The log file (system, user access, or administrator access) specified by the logName parameter is completely full.</p> <p>NOTE: When SNMP traps are enabled, the iveLogNearlyFull and iveLogFull traps are sent when the log files are 90% full and 100% full respectively, even if the threshold is set to 0 (disabled).</p> |
| iveMaxConcurrentUsersSignedIn | Maximum number or allowed concurrent users are currently signed in. You can configure this trap to be sent at any percentage. To disable this trap, set the Users trap threshold to 0%. The trap's default value is 100%. |
| iveTooManyFailedLoginAttempts | <p>A user with a specific IP address has too many failed sign-in attempts. Triggered when a user fails to authenticate according to the settings for the Lockout options on the Security Options tab.</p> <p>When the system triggers this trap, the system also triggers the blockedIP (source IP of log in attempts) parameter.</p> |
| externalAuthServerUnreachable | <p>An external authentication server is not responding to authentication requests.</p> <p>When the system sends this trap, it also sends the authServerName (name of unreachable server) parameter.</p> |
| iveStart | The system has just been turned on. |
| iveShutdown | The system has just been shut down. |
| iveReboot | The system has just been rebooted. |
| archiveServerUnreachable | The system is unable to reach the configured archive server. |
| archiveServerLoginFailed | The system is unable to log into the configured archive server. |
| archiveFileTransferFailed | The system is unable to successfully transfer files to the configured archive server. When the system sends this trap, it also sends the fileName parameter. |
| iveRestart | Supplies notification that the system has restarted according to the administrator's instruction. |
| iveDiskNearlyFull | Supplies notification that the system disk drive is nearly full. When the system sends this trap, it also sends the diskFullPercent parameter. You can configure this trap to be sent at any percentage. To disable this trap, set the Disk trap threshold to 0%. This trap's default value is 80%. |
| iveDiskFull | Supplies notification that the system disk drive is full. |
| logMessageTrap | The trap generated from a log message. When the system sends this trap, it also sends the logID, logType, and logDescription parameters. |
| memUtilNotify | Supplies notification that the system has met the configured threshold for memory utilization. To disable this trap, set the Physical Memory trap threshold to 0. The threshold is 0%, by default. |
| cpuUtilNotify | Supplies notification that the system has met the configured threshold for CPU utilization. To disable this trap, set the CPU trap threshold to 0. The threshold is 0%, by default. |
| swapUtilNotify | Supplies notification that the system has met the configured threshold for swap file memory utilization. To disable this trap, set the Swap Memory trap threshold to 0. The threshold is 0%, by default. |

| Object | Description |
|--|---|
| iveFanNotify | Supplies notification that the status of the fans has changed. |
| ivePowerSupplyNotify | Supplies notification that the status of the power supplies has changed. |
| iveRaidNotify | Supplies notification that the status of the RAID device has changed. |
| iveNetExternalInterfaceDownTrap (nicEvent) | Supplies the type of event that brought down the external interface. The nicEvent parameter can contain values of "external" for an external event and "admin" for an administrative action. |
| iveNetInternalInterfaceDownTrap (nicEvent) | Supplies the type of event that brought down the internal interface. The nicEvent parameter can contain values of "external" for an external event and "admin" for an administrative action. |
| iveClusterDisableNodeTrap (clusterName,nodeList) | Supplies the name of the cluster that contains disabled nodes, as well as a string containing the names of all disabled nodes. Node names are separated by white space in the string. |
| iveClusterChangedVIPTrap(vipType, currentVIP, newVIP) | Supplies the status of a virtual IP for the cluster. The vipType indicates whether the changed VIP was external or internal. The currentVIP contains the VIP prior to the change, and newVIP contains the VIP after the change. |
| iveNetManagementInterfaceDownTrap (nicEvent) | Supplies the type of event that brought down the management port. The nicEvent parameter can contain values of "external" for an external event and "admin" for an administrative action. |
| iveClusterDelete(nodeName) | Supplies the name of the node on which the cluster delete event was initiated. |

Configuring an External Syslog Server

PPS allows you to send the log data to an external syslog server. You should use syslog if your enterprise has any long-term record-keeping or accounting requirements.

To configure reporting to a syslog server:

1. Select System > Log/Monitoring.
2. Click the Settings tab to display the configuration page.
3. Specify the maximum log size and select the events to be logged.
4. Specify the server configuration as described below and click Add. You can specify multiple syslog servers.
5. Save the configuration.



NOTE: To enable syslog reporting for each local log category, you must perform this procedure on each local log tab: Events, User Access, Admin Access, and Sensors.

Figure549: Syslog Server Configuration Page

Table128: Syslog Server Configuration Guidelines

| Settings | Guidelines |
|--------------------|---|
| Server name/IP | <p>Specify the fully qualified domain name or IP address for the syslog server.</p> <p>NOTE: If you select TLS from the Type list, the server name must match the CN in the subjectDN in the certificate obtained from the server.</p> |
| Facility | <p>Select a syslog server facility level (LOCAL0-LOCAL7).</p> <p>Your syslog server must accept messages with the following settings: facility = LOG_USER and level = LOG_INFO.</p> |
| Type | <p>Select the connection type to the syslog server. You can select:</p> <ul style="list-style-type: none"> UDP (User Datagram Protocol) - A simple non-secure transport model. TCP (Transmission Control Protocol) - A core protocol of the Internet Protocol suite (IP), but lacks strong security. TLS (Transport Layer Security) - Uses cryptographic protocols to provide a secure communication. |
| Client Certificate | <p>(optional) If you select TLS from the Type menu and your remote syslog server requires client certificates, select the installed client certificate to use to authenticate to the syslog server. Client certificates are defined in the Configuration > Certificates > Client Auth Certificates page. Client certificates must be installed on the device before they can be used.</p> <p>NOTE: There is no fallback if a connection type fails.</p> |
| Filter | <p>Select a filter format. Any custom filter format and the following predefined filter formats are available:</p> <ul style="list-style-type: none"> Standard (default)—This log filter format logs the date, time, node, source IP address, user, realm, event ID, and message. WELF—This customized WebTrends Enhanced Log Format (WELF) filter combines the standard WELF format with information about the system realms, roles, and messages. WELF-SRC-2.0-Access Report—This filter adds access queries to the customized WELF filter. You can use this filter with NetIQ's SRC to generate reports on user access methods. |

Configuring Advanced Settings

This option helps to configure fault tolerance on each configured TCP and TLS syslog server available. Fault tolerance is supported only for TCP and TLS syslog servers. UDP syslog servers cannot be configured for fault-tolerance. This functionality helps the syslog server to recover the logs lost during a disconnect. The administrator can configure fault-tolerance on syslog servers by enabling this option from the admin UI. PPS/PCS reads the lost pending logs during a disconnect from the log disk and transports them to the syslog server on a reconnect. Fault tolerance is supported only for the syslog servers configured under the following log-types:

- Events
- User Access
- Admin Access

 **NOTE:** Fault tolerance is node-specific. In case of clusters, the setting needs to be enabled/disabled by logging into each of the cluster members.

To configure advance settings to a TCP and TLS syslog server:

1. Select System > Log/Monitoring.
2. Click the **Advance** Settings tab to display the configuration page.
3. Complete the configuration as described in below table.
4. Save the configuration.


 **NOTE:** This feature is limited to configuring fault tolerance settings of an existing syslog server; and cannot be used to create or delete a new syslog server.

Figure 550: Log Events Settings Configuration Page

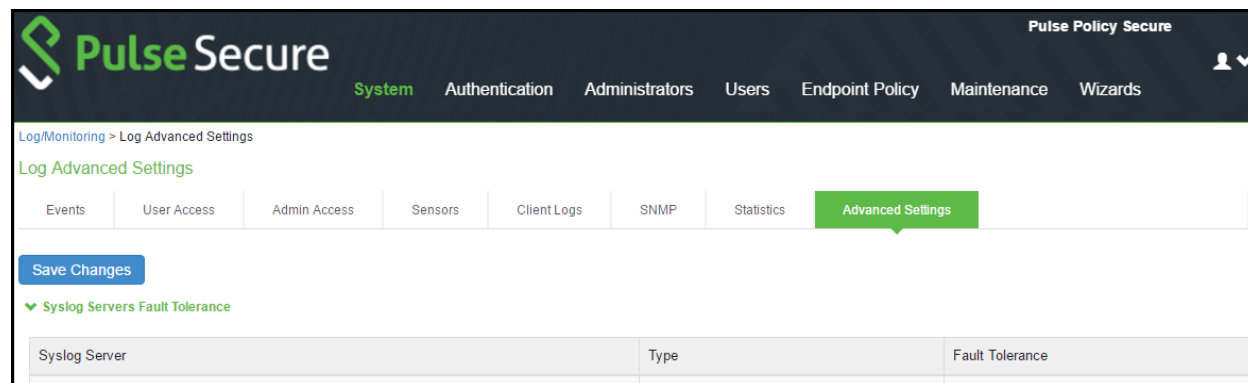


Table 129: Advanced Settings

| Settings | Guidelines |
|-------------------------------|---|
| Syslog Server Fault Tolerance | |
| Syslog Server | Lists the existing Syslog servers. |
| Type | Specifies if the Syslog server is a TLS or TCP type. |
| Fault Tolerance | Tolerates the loss of network connection to a TCP/TLS syslog server for a brief period (maximum of 4 hours) by sending the logs missed during the disconnect time. Click the checkbox to enable this option. Fault-tolerance is disabled by default on any syslog server. |


Enabling Client-Side Logging

Client-side logging is not enabled by default. You can enable client-side logging for Host Checker. PPS writes a client side log to endpoints when client side logging is enabled.

To enable client-side logging:

1. Select System > Log/Monitoring.
2. Click the Client Logs tab to display the configuration page.
3. Select the Host Checker option to enable client-side logging when Host Checker is run on the endpoint.
4. Save the configuration.

Figure551: Client Logs Configuration Page

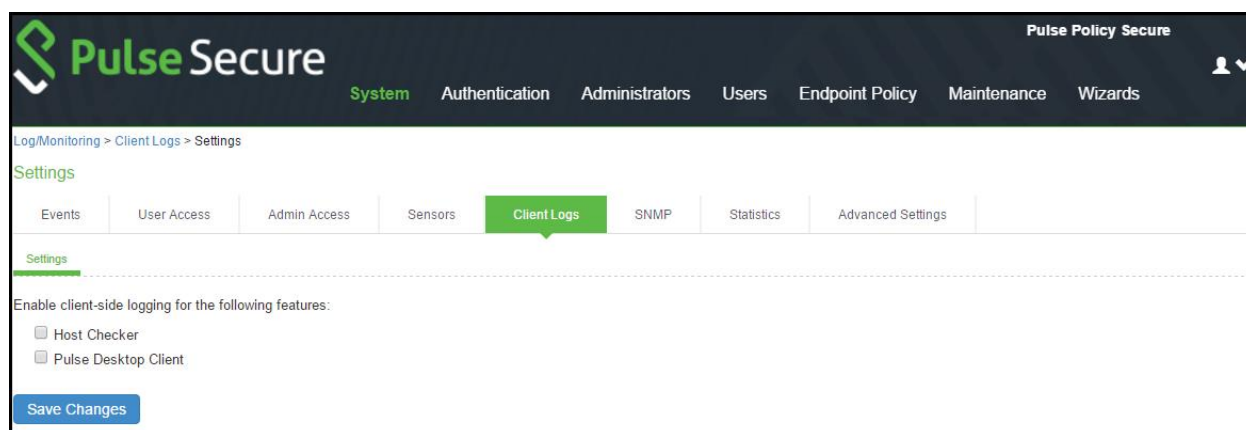


Displaying System Status

The System Status page is a dashboard of system version information, system capacity utilization, uptime, and summary user information. The System Status page is the “home” page that is displayed when you log into the admin console as an administrator. To navigate to the System Status page from other admin console pages, select System > Status.

The following figure shows the System Status page for PPS. The table that follows describes the various options available.

Figure552: System Status Page

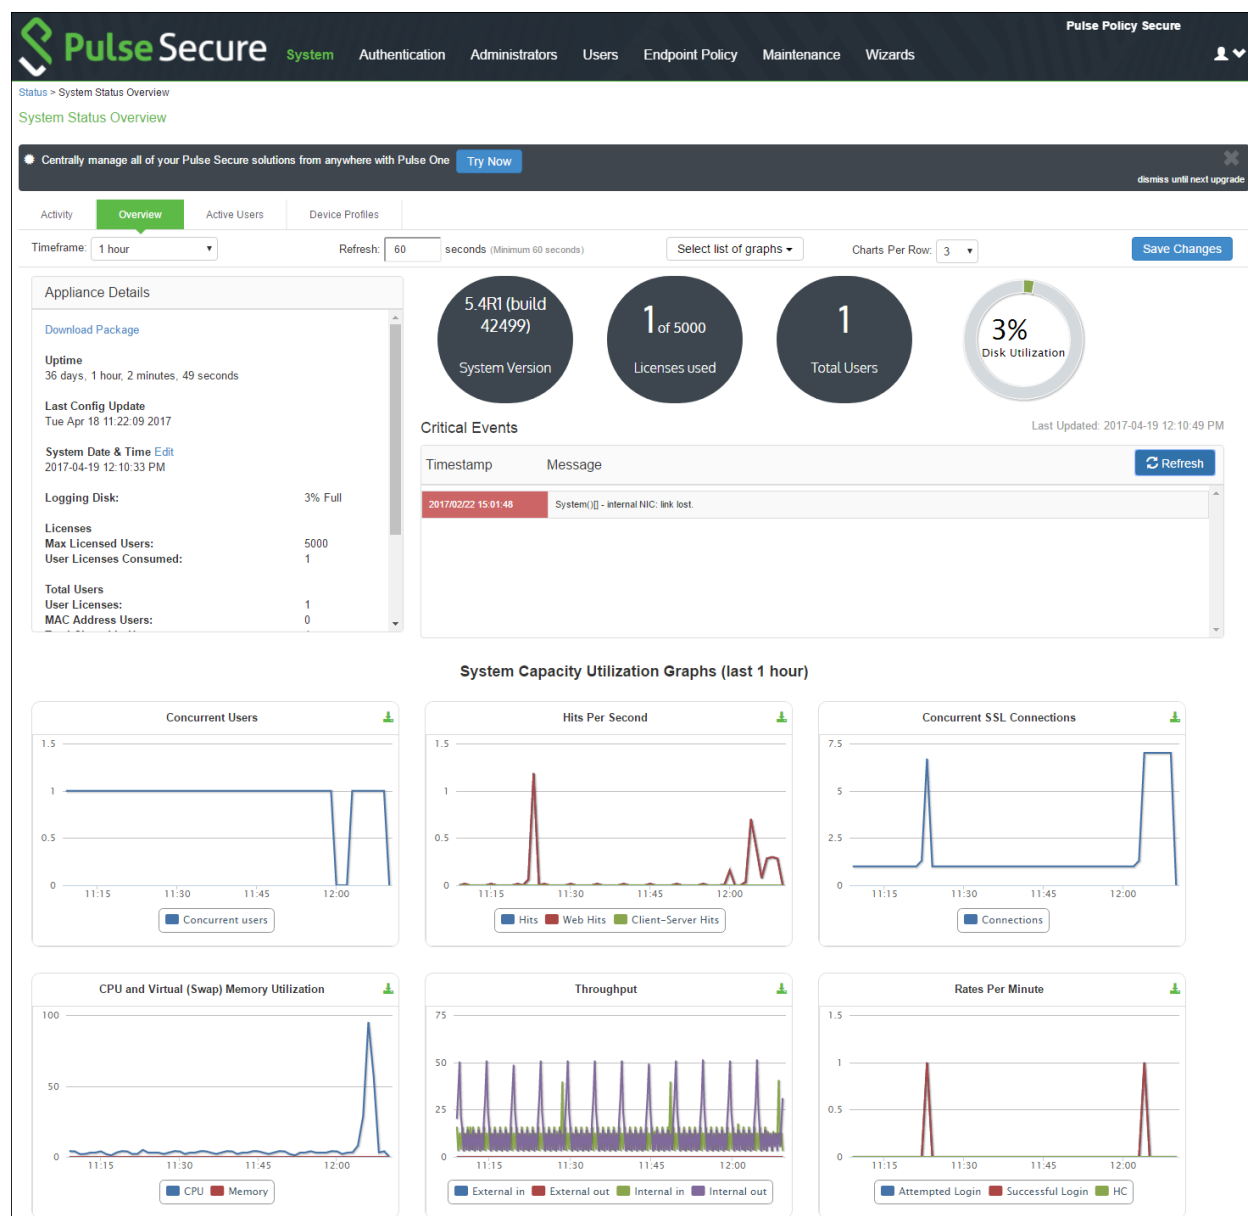

| Item | Description |
|------|--|
| 1 | Click the Critical Events link to display a new window with a table of the last 10 critical system events. |

| Item | Description |
|------|--|
| 2 | Click the Page Settings link to display a new window with the System Status Settings page. |
| 3 | Click the System Version Download Package link to download the software version running on the system. You might do this when you need to synchronize software on another node to the software version running on this system. |
| 4 | Click the System Date and Time Edit link to display the System Date and Time configuration page. |
| 5 | Click a System Capacity Utilization report Edit link to display a new window with controls to customize the appearance of the report graphs. |
| 6 | Click a System Capacity Utilization report Download link to download graph data in XML format. |
| 7 | Click an Enforcer Status link to navigate to its configuration page. |

Table130: Licenses and Total Users

| Item | Description |
|------------------------|--|
| Licenses | |
| Max Licensed Users | Displays the maximum number of licensed users by supported platform type. |
| User Licenses Consumed | Displays how user licenses are being used. Pulse Secure client connections and agentless connections count as user licenses. |
| Total Users | |
| User Licenses | Displays the number of Pulse Secure client connections and agentless connections. These types of connections count as user licenses. The maximum number of licenses is the sum of the capacity provisioned by the licenses that have been added to the system. |
| MAC Address Users | Displays the number of connections through MAC Address authentication realms. This number is reported only if a MAC Address realm has been configured. These connections do not count as user licenses, and there is no maximum number of licenses set by rule. |
| RADIUS Users | Displays the number of RADIUS user connections. These connections do not count as user licenses, and there is no maximum number of licenses set by rule. |
| Total Signed-In Users | Displays the sum of user licenses in use. <ul style="list-style-type: none"> • User Licenses count • Odyssey Users count • MAC Address Users count • RADIUS Users count |

You can use this page to select the reports displayed on the System Status page, as well as data properties, such as the time dimension and refresh rate.

The following reports are available:

- **Concurrent Users**—Shows a count of users signed into the system. In clustered environments, the graph includes two lines. The first line displays the number of local users signed into the node selected from the list, and the second line displays the number of concurrent users signed into the entire cluster.

- **Hits per Second**—Shows a count of hits currently being processed by the system. In a clustered environment, you may select a node from the list to determine which node's data is displayed in the graph. The graph includes three lines: total number of hits, number of Web hits, and number of client/server hits.
- **CPU and Memory Usage**—Shows the percentage of the CPU and memory being used. In a clustered environment, you may select a node from the list to determine which node's data is displayed in the graph.
- **Throughput**—Shows the amount of data (in KB) being processed. In a clustered environment, you may select a node from the list to determine which node's data is displayed in the graph. The graph includes four lines: external in, external out, internal in, and internal out.
- **Connections**—Shows a count of concurrent SSL connections.
- **Rates**—Shows the rate of attempted log ins, successful log ins, and Host Checker updates.

Displaying Hardware Status

You can use the Maintenance > System > Platform page to display the hardware health status, including information about hard drives, fans, and power supplies.

To display hardware health status:

1. Select Maintenance > System > Platform to display the System Maintenance page.
2. Review the hardware status information described below.

Figure553: System Maintenance Page

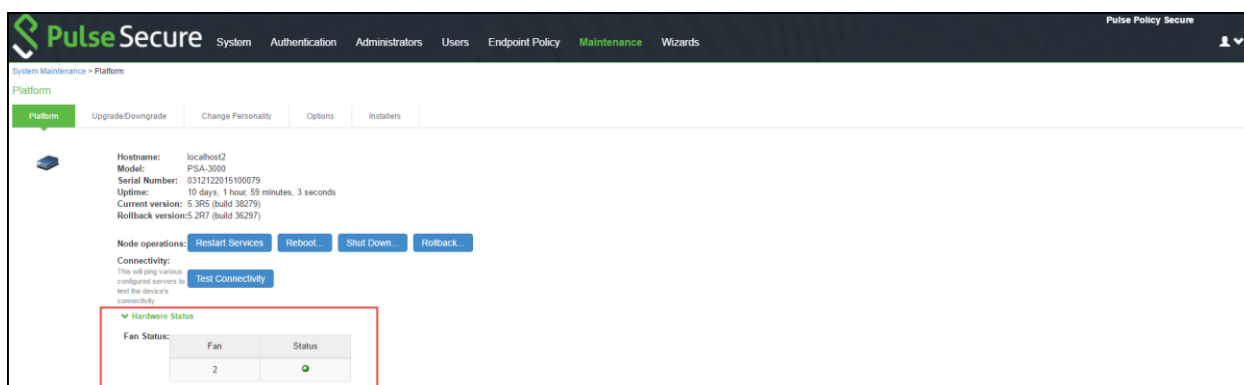


Table131: Hardware Status Information

| Hardware Component | Status Message |
|--------------------|--|
| Hard Disk Status | Displays a health statement for the device disk drive. |
| Fan Status | Displays a health statement for the device fan(s). |
| Power Supply | Displays a health statement for the device power supply. |

The below table lists the RAID status and hard drive status. Depending on your system, you may or may not see all these possible statuses.

Table132: RAID and Hard Drive Status

| RAID Status | Drive 1 | Drive 2 |
|--|----------------|----------------|
| Hard Disk RAID is operational | Active | Active |
| Hard Disk RAID is in single drive mode | Missing | Active |
| Hard Disk RAID is in single drive mode | Active | Missing |
| Hard Disk RAID has failed | Failed | Active |
| Hard Disk RAID has failed | Active | Failed |
| Hard Disk RAID is in the process of recovering | Active | Reconstructing |
| Hard Disk RAID is in the process of recovering | Reconstructing | Active |

| RAID Status | Drive 1 | Drive 2 |
|--|-----------|-----------|
| Hard Disk RAID is in the process of recovering | Active | Verifying |
| Hard Disk RAID is in the process of recovering | Verifying | Active |
| Hard Disk RAID status is unknown | Unknown | Active |
| Hard Disk RAID status is unknown | Active | Unknown |
| Hard Disk RAID status is unknown | Unknown | Unknown |
| Not available | n/a | n/a |

Using Software RAID on PSA7000



NOTE: All hard disks are encrypted with AES128 using a random generated key.

This section describes the use of software RAID. It includes the following information:

- [Overview of Software RAID](#)
- [Configuring RAID Controller](#)
- [Checking RAID Statuses](#)

Overview of Software RAID

The PSA7000 device has two hard disks. However, there is no hardware RAID controller. In PPS 5.4R1, RAID functionality is enabled through the software RAID available in Linux. Software is used to create RAID devices in the RAID 1 layer. These individual disk partitions can also be used as regular partitions. All partitions, which include boot, root, data, var, tmp, swap, and so on are created out of the software RAID. Software RAID does not affect any of the other hardware models except PSA7000. It works the same way either with hardware RAID or no RAID at all.

Configuring RAID Controller

To configure a RAID controller on the PSA7000, disks are hot plugged on the PSA7000. Configuring RAID on the PSA7000 also involves some manual configuration steps in the admin console. RAID configuration is carried out by the following steps:

To remove a disk from the second slot in the system:

1. Select Menu option: 4. System Operations
2. Select Menu option: 20. Manage RAID
3. A prompt appears: Are you sure you want to manage RAID? (y/n)
4. Enter y for the prompt.
5. Choose Menu option: 2. Remove Disk2. This will detach the disk in the second slot from software RAID.
6. Physically unplug the disk from the second slot.

To insert a disk to the second slot in the system:

1. Physically plug in the disk in the second slot.
2. Select Menu option: 4. System Operations
3. Select Menu option: 20. Manage RAID

4. A prompt appears: Are you sure you want to manage RAID? (y/n)
5. Enter y for the prompt.
6. Choose Menu option: 4. Add Disk2. This will attach the disk in the second slot to the software RAID.

Checking RAID Statuses

To check the status of RAID and individual disks:

1. Go to system > platform page of the web interface.
2. Status of RAID and individual disks are displayed. The below table shows the hard disk status and the hard disk RAID status.

Table 133: Hard Disk and Hard Disk RAID Statuses

| | Status | Guidelines |
|----------------|------------|---|
| Hard Disk | Active | A disk that is present and part of RAID |
| | Inactive | A disk that is present but not part of RAID |
| | Missing | A disk that is removed. |
| Hard Disk RAID | Operation | Both disks are active and part of the software RAID |
| | Recovering | Both disks are active and syncing with each other |
| | Failed | Both disks are active but one of them is not part of RAID |

i **NOTE:** In the single drive mode, only one disk is active. The other disk is either missing or inactive.

LCD Display

This section describes the addition of LCD to PPS devices. It includes the following information:


- Overview of adding LCD for PPS
- Modes Supported by the LCD

Overview of adding LCD for PPS

The addition of a LCD screen allows field technicians to quickly gauge the health of the system without logging into the device. The buttons on the LCD panel allow navigation through the display menus. The directional buttons are used to access the menu modes and find device information. The LCD can display two line of text. The below figure shows the LCD screen with navigation buttons.

i **NOTE:** LCD display is available for the PSA-7000 platform model only.


Figure 554: LCD with Navigation Buttons

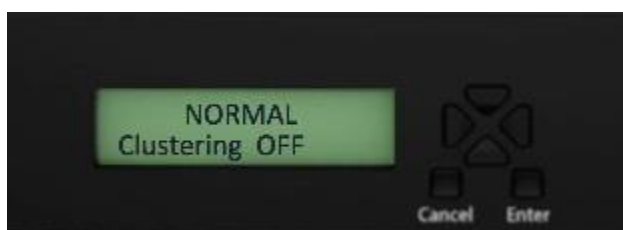

Modes Supported by the LCD

The LCD supports two modes namely the display mode (default) and the menu mode. Pressing any button in the display mode will change the mode to menu mode. If a user presses the cancel button, the LCD immediately changes back to display mode and shows the appropriate state. The LCD remains in display mode. If the LCD is in menu mode and the user does not press any button for more than two minutes, then the LCD changes back to display mode. The below figure shows the two modes supported by the LCD


Figure 555: Two Modes Supported by the LCD

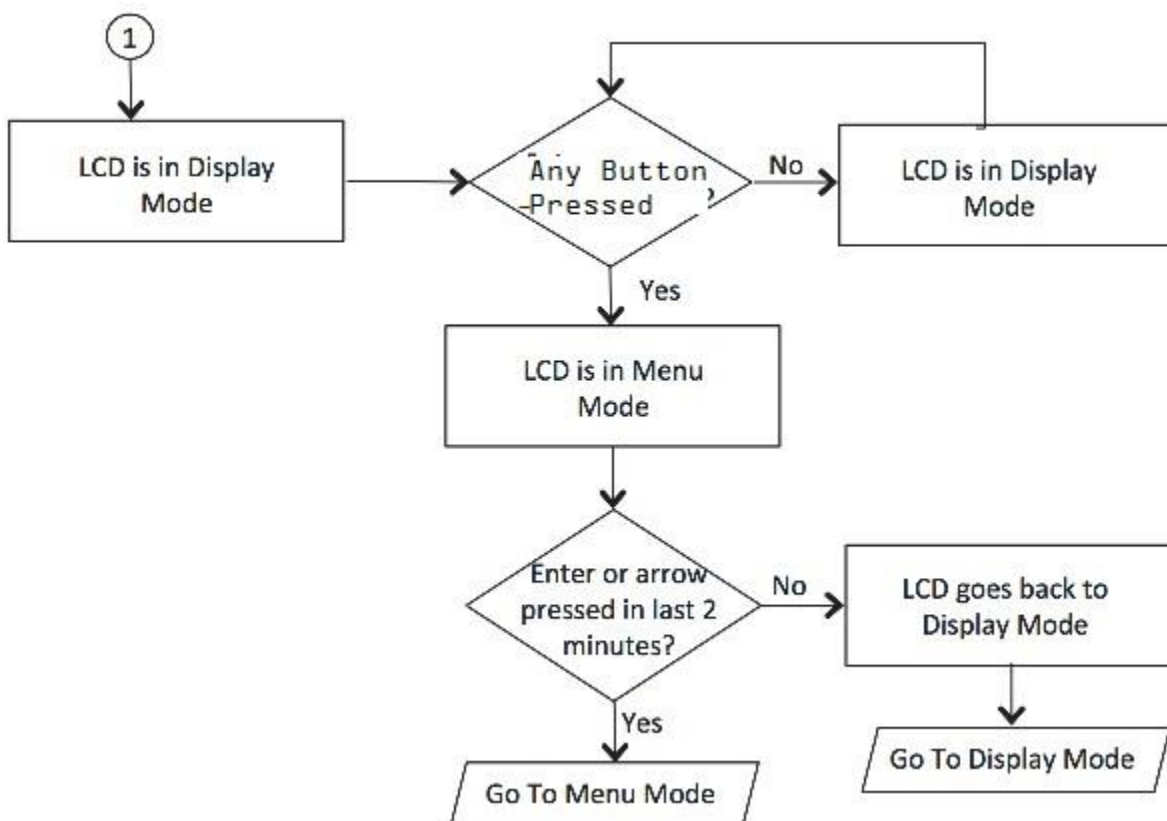

Display Mode

The display mode describes the current state of the system, such as normal state or error conditions (e.g., fan speed and overheat). It represents the default status. The LCD goes into display mode after boot-up is complete. In display mode, the LCD is either set to NORMAL or shows a label that describes an error condition. If all systems are functioning normally, then the LCD shows NORMAL. The second line in the NORMAL state is used to show whether the appliance is configured as part of a cluster. The valid states in the display mode are Clustering OFF and Clustering ON. Figure 556 below figure shows the two valid states in display mode.

Figure 556: Valid States in Display Mode

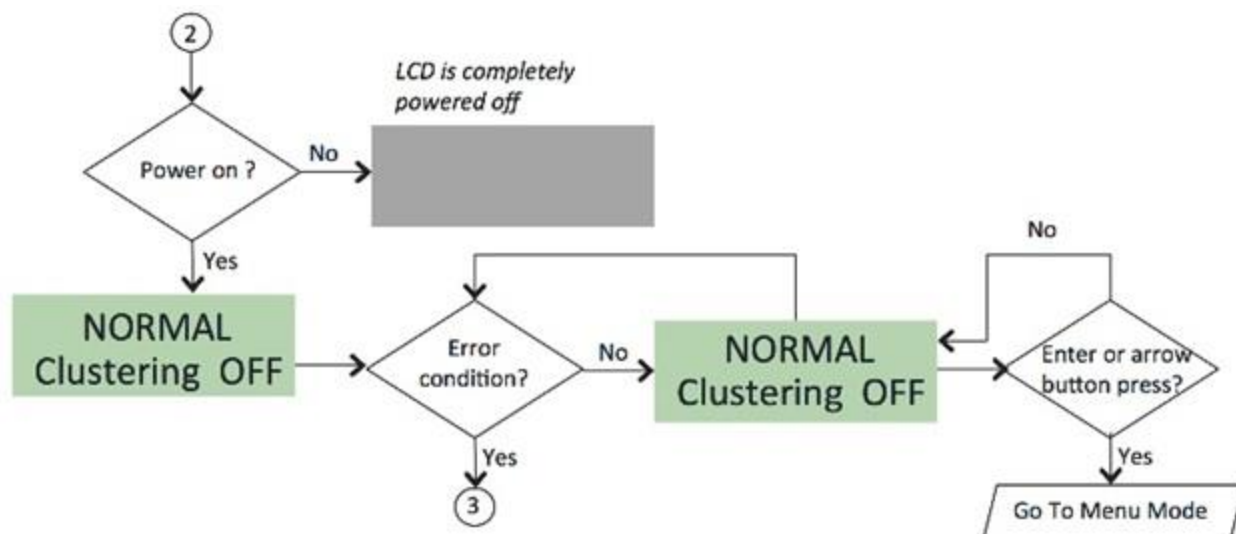


Detecting Error Conditions in Display Mode

If more than one error condition is detected, all error conditions will be displayed in sequence with a 2 second pause before switching to the next one. All error conditions need to be cleared before the status returns back to the NORMAL state. Error conditions include:

- Overheat
- Fan Failure
- RAID Errors

The below figure shows the various error conditions that are detected.

Figure 557: Error Conditions

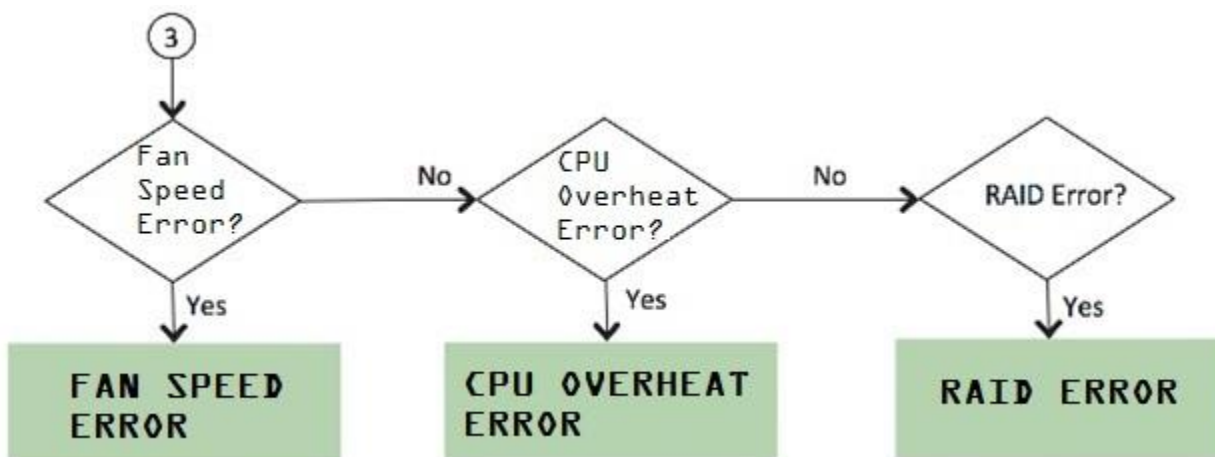

To detect the error conditions in the display mode:

If there are any error conditions, they are automatically shown on the LCD screen when it is in the display mode. The types of errors displayed are: Fan Failures, CPU overheating and RAID errors. If there are multiple errors they would be displayed in the order shown in the above figure with a two second pause between successive displays.

The error message is automatically cleared when the underlying error condition is resolved. For example: the CPU overheat message disappears when CPU temperature is lowered. The user can enter the Menu mode at any point, even if an error message is being displayed.

Menu Mode

The menu mode is activated when the user presses any button. A single press of the button changes to menu mode and loads the last selected menu selection.

To view information in the menu mode:


1. Press any button. This puts the LCD into menu mode.
2. Press the right and left arrows keys to obtain the available system configuration data.
3. View information starting with the Internal IP and moving in a clockwise direction.
4. The menu screens loop back in a cycle.
5. Press Cancel at any point to exit to display mode.



NOTE: Any button, even cancel will put the user in the menu mode.

The below figure show the available system configuration data available in menu mode.

Figure 558: System Configuration Data Available in Menu Mode

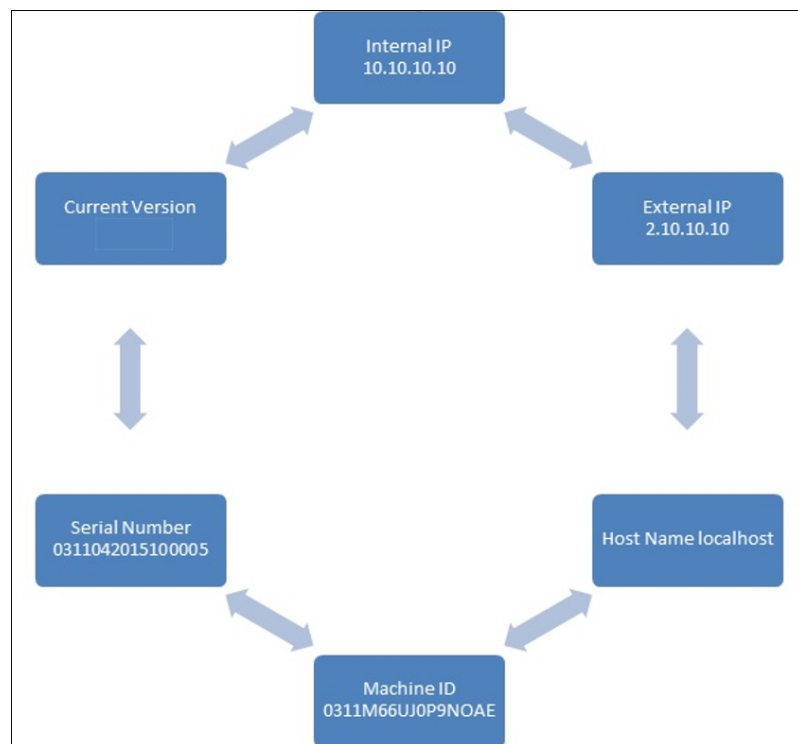

Displaying Active Users

You can use the Active Users page to display the system active users table and to perform administrative actions pertaining to active sessions.

The system active users table displays all users who have an active session (in contrast to the users tables that appear on the authentication server configuration pages, which display session records for active and inactive sessions that were authenticated by the particular authentication server).

If a user signs in and is placed in a VLAN without an IP address, the table does not display an IP address under Signed in IP.

If there is a NAT device between the user's computer and the Infranet Enforcer, the table displays both the NAT device's IP address and the endpoint's virtual source IP address under Signed in IP. For example, if the NAT device's IP address is 10.64.9.26, and the endpoint's virtual source IP address is 192.168.80.128, the following information is displayed under Signed in IP: 10.64.9.26 (192.168.80.128 behind NAT).

To display the system Active Users page:

1. Select System > Status.
2. Click the Active Users tab to display the system active users page.
3. Use the controls described in table below to perform administrative actions pertaining to active sessions.

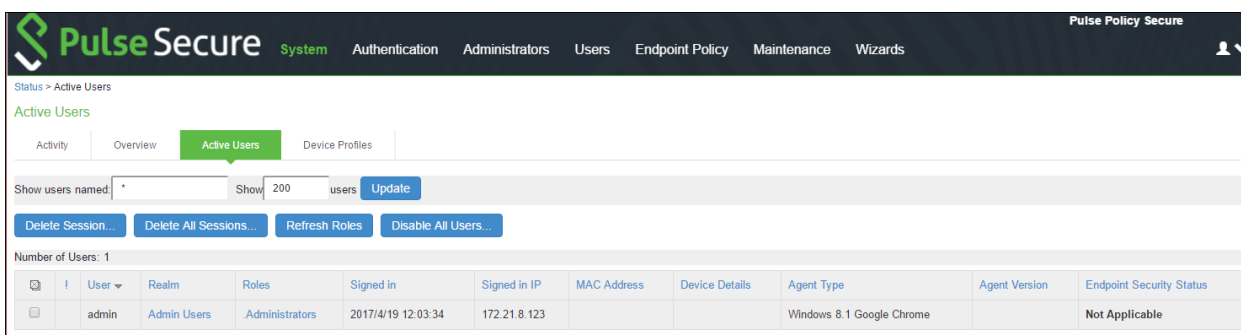


Table134: Active Users Page

| Buttons | Administrative Actions |
|---------------------|---|
| Update | <p>Refresh records displayed on the page:</p> <ul style="list-style-type: none"> • To refresh the page, click Update. • To display a specific user, enter the username in the Show Users Named box and click Update. If you do not know the exact username, use the asterisks (*) as a wildcard character. • To change the table size, enter a number in the Show N users box and click Update. <p>TIP: To sort the table of currently signed-in users and administrators, click a column header.</p> |
| Delete Session | <p>Select the check box next to the appropriate names and then click Delete Session to immediately delete the session. The user is signed out by your action.</p> |
| Delete All Sessions | <p>Use this option to immediately delete all sessions. Users are signed out by your action.</p> <p>NOTE: If you want to sign out administrators, you must choose them individually and use the Delete Session button.</p> |
| Refresh Roles | <p>Manually evaluate all authentication policies, role-mapping rules, role restrictions, user roles, and resource policies for all currently signed-in users. Use this button if you make changes to an authentication policy, role-mapping rules, role restrictions, or resource policies and you want to immediately refresh the roles of all users.</p> |
| Disable All Users | <p>Sign out all end users who are currently signed-in and also prevent any other users from signing in. To allow users to sign in again after you disable all users, click Enable All Users.</p> |

Troubleshooting

This chapter describes admin console troubleshooting tools. It includes the following information:

- [Overview](#)
- [Policy Tracing](#)
- [Debug Logs](#)[RADIUS Diagnostic Logs](#)
- [Samba Diagnostic Logs](#)
- [TCP Dump](#)
- [Network Troubleshooting Commands](#)
- [Kerberos Debugging](#)
- [Remote Debugging](#)
- [Troubleshooting the Common Issues with PPS](#)

Overview

You can use the admin console troubleshooting tools to investigate user access issues and system issues. The following tools are available through the Maintenance > Troubleshooting pages:

- Policy tracing—Diagnose user access issues.
- Debug logs—Work with PSGSC to diagnose system issues.
- RADIUS diagnostic log—Diagnose issues with PPS RADIUS server.
- tcpdump—Sniff packet headers to diagnose networking issues.
- Network troubleshooting commands—Use standard network commands, such as ping, traceroute, NSlookup, and other commands to diagnose networking issues.
- Kerberos debugging—Diagnose issues with Kerberos communication.
- System snapshots—Work with PSGSC to reproduce and diagnose system issues.
- Remote debugging—Enable PSGSC to access your system directly to help you diagnose system issues.

If the admin console is unavailable, you can use the serial port console to perform some troubleshooting operations, such as use ping and traceroute commands, view logs, create system snapshots, and perform configuration rollbacks and factory resets.

Policy Tracing

It is common to encounter a situation where the system denies a user access to the network or to resources, and the user logs a trouble ticket. You can use the policy tracing utility and log to determine whether the system is working as expected and properly restricting access, or whether the user configuration or policy configuration needs to be updated to enable access in the user's case.

To create a policy trace log:

1. Select Troubleshooting > User Sessions > Policy Tracing to display the configuration page.

Figure559: Policy Tracing Configuration Page

Pulse Secure

System Authentication Administrators Users Endpoint Policy **Maintenance** Wizards

Troubleshooting > User Session > Policy Tracing

Policy Tracing

User Sessions Monitoring Tools System Snapshot Remote Debugging

Record policy trace events for a given user under a given realm. Policy trace events determine policies applied on the user under the given realm. Specify the source IP address for events before the user id is resolved.
Enter the user, realm, and/or the source IP address, and check the events to be tracked. Events get logged from the time you *Start Recording*. Inspect the trace file after you *Stop Recording*. Please contact [Pulse Secure Support](#) for any further review.

▼ **Record Trace File**

Status: ☒ Not Recording

User:

Source IP:

Realm:

▼ **Events to Log**

☐ Pre-Authentication ☐ Authentication ☐ Role Mapping ☐ IF-MAP

☐ Sensor Event Policies

☐ Infranet Enforcer Policies

☐ IPsec ☐ Auth Table Mapping ☐ Source Interface ☐ IP Address Pools

☐ RADIUS Attributes Policies

☐ Host Enforcer Policies

☐ UAC Message Trace

2. Complete the configuration as described below.

Table135: Policy Trace Configuration Guidelines


| Settings | Guidelines |
|-------------------|---|
| Record Trace File | |
| User | Specify the username to trace. If you are tracing anonymous access, you can use the asterisks wildcard character (*) because you might not know the internal username the system assigns to the next anonymous session. |
| Source IP | Specify the source IP address if you know it. If you are able to provide the source IP address, the policy trace log can include events that occur before the user ID is entered into the system. |
| Realm | Select the realm to trace. |

| Settings | Guidelines |
|----------------------------|---|
| Events to Log | |
| Pre-Authentication | Logs events related to evaluation of realm rules. |
| Authentication | Logs events related to authentication. |
| Role Mapping | Logs events related to role mapping. |
| IF-MAP | Logs events related to IF-MAP queries related to the session. |
| Sensor Event Policies | Logs events related to sensor policies. |
| Infranet Enforcer Policies | Logs events related to Layer 3 Infranet Enforcer policies. |
| RADIUS Attributes Policies | Logs events related to Layer 2 802.1X access. |
| PPS Message Trace | Logs PPS messages. |

3. Click Start Recording.

The following figure shows the policy tracing page with the recording indicator.

Figure560: Policy Tracing Page During Recording

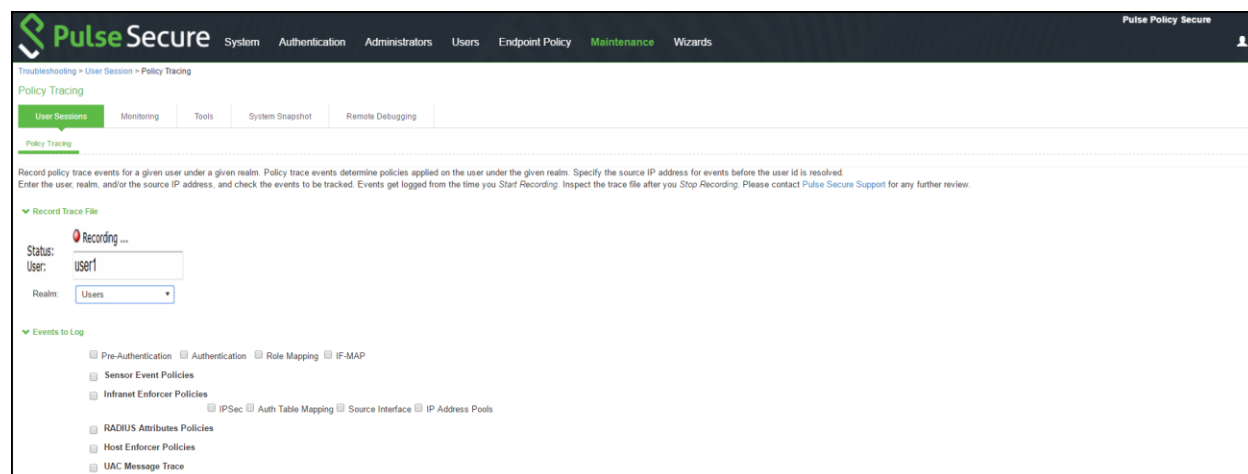

4. Initiate the action you want to trace, such as a user sign in.

5. Click View Log to display the policy trace results log.

6. Click Stop Recording when you have enough information.

The below table describes options for managing the policy trace results log file.

Table136: Post-Trace Options

| Control | Guidelines |
|--------------|---|
| Delete Trace | Under Events to Log, click Delete Trace to clear the results displayed on this page. |
| Update | Specify a number of rows to display and click Update to change the number of rows that are displayed. |

| Control | Guidelines |
|-------------|---|
| Save Log As | Click this button to save the trace results log to a file. This is useful particularly when you are working with the Pulse Secure Global Support Center (PSGSC) to troubleshoot a case. |
| Clear Log | Click this button to clear the log file from the system. |

Debug Logs

The Pulse Secure Global Support Center (PSGSC) might direct you to create a debug log to assist them in helping you debug an issue with the system. The debug log is used only by PSGSC.

To use debug logging:

1. Select Troubleshooting > Monitoring > Debug Log to display the configuration page.
2. Complete the configuration as described below.
3. Click Save Changes. When you save changes with Debug Logging On selected, the system begins generating debug log entries.
4. Initiate the action you want to debug, such as a user sign in. You can reset the debug log file to restart debug logging if it takes you too long to initiate the action.
5. Click Save Debug Log to save the debug log to a file that you can send to PSGSC. You can clear the log after you have saved it to a file.
6. Unselect Debug Logging On and click Save Changes to turn off debug logging.

Figure561: Debug Logging Configuration Page

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance' (highlighted), and 'Wizards'. The breadcrumb trail is 'Troubleshooting > Monitoring > Debug Log'. The 'Debug Log' page has tabs for 'User Sessions', 'Monitoring' (active), 'Tools', 'System Snapshot', and 'Remote Debugging'. Below these are sub-tabs: 'Debug Log' (active), 'Node Monitor', 'Cluster', and 'Diagnostic Logs'. A row of buttons includes 'Save Changes', 'Reset', 'Save Debug Log', and 'Clear Log...'. The 'Debug Log Settings' section is expanded, showing:

- Current Log Size: 2552592 bytes
- Debug Logging On: ☐
- Max Debug Log Size: 2 MB (with a range of 1-250)
- Debug Log Detail Level: 0 (with a note: 'A positive number')
- Include logs: ☒ (with a note: 'Selecting this option will include system logs')
- Process Names: (empty text box, with a note: 'Comma separated, list of process names to log')
- Event Codes: (empty text box, with a note: 'Comma separated, list of events to log')

Table137: Debug Log Configuration Guidelines

| Settings | Guidelines |
|------------------------|--|
| Current Log Size | Displays the size of the current log file. If it is large, use the controls to save, reset, or clear the log file. |
| Debug Logging On | Select to turn on debug logging. |
| Debug Log Size | Specify a maximum debug log file size. The default is 2 MB. The maximum is 250 MB. |
| Debug Log Detail Level | Specify the debug log detail level. Obtain this from PSGSC. |
| Include logs | Select this option to include system logs in the debug log file. Recommended. |
| Process Names | Specify the process name. Obtain this from PSGSC. |

| Settings | Guidelines |
|-------------|---|
| Event Codes | Specify the event code. Obtain this from PSGSC. |

RADIUS Diagnostic Logs

The RADIUS diagnostic log utility allows you to view trace and debug-level RADIUS messages. When RADIUS diagnostic logging is enabled, the diagnostic tool logs all requests that PPS receives from RADIUS clients. RADIUS requests initiated by PPS do not appear in the log.

Observe the following guidelines:

- Diagnostic logging affects system performance.
- All events that appear in the log have an ID code, and all messages in a thread are tagged with the same ID. This allows you to track individual log ins or log in attempts.
- Source IP addresses are represented as 127.0.0.1 (the loopback address).
- For Layer 2 connections, the calling station ID is the MAC address of the endpoint.
- Passwords are suppressed and do not appear in the logs.
- When the log fills up, logging stops. You can clear the log to restart logging.
- Raw traffic is not available in the log. To view raw traffic, use the tcpdump feature.

To use RADIUS diagnostic logging:

1. Select Troubleshooting > Monitoring > RADIUS to display the configuration page.
2. Complete the configuration as described below.
3. Click Save Changes. When you save changes with RADIUS Diagnostic Logging On selected, the system begins generating diagnostic log entries.
4. Initiate the action you want to debug, such as a user sign in. You can clear the debug log file to restart diagnostic logging if it takes you too long to initiate the action.
5. Manage the resulting log:
 - Click Save Log to save the log files in a zipped format.
 - Click Clear Log to remove previous logs and start diagnostic logging with a fresh file.
 - Click Save And Clear Log to save the diagnostic log to a file that you can send to PSGSC. The existing logs in the device will be cleared after saving.
6. Unselect RADIUS Diagnostic Logging On and click Save Changes to turn off diagnostic logging.

Figure562: RADIUS Diagnostic Logging Configuration Page

Pulse Secure Pulse Policy Secure

System Authentication Administrators Users Endpoint Policy **Maintenance** Wizards

Troubleshooting > Monitoring > Diagnostic Logs

Diagnostic Logs

User Sessions **Monitoring** Tools System Snapshot Remote Debugging

Debug Log Node Monitor Cluster **Diagnostic Logs**

Info : Radius Diagnostic Logging is off

Info : Samba Diagnostic Logging is off

Info : Pulse One Diagnostic Logging is off

Save Log Clear Log Save And Clear Log

Diagnostic Log Settings

Radius Diagnostic Logging On ☐

Samba Diagnostic Logging On ☐

Pulse One Diagnostic Logging On ☐

Max Diagnostic Log Size MB 1-1000

This option is for generating internal logs related to AD authentication server modules and the underlying Samba modules. It should be used only when the admin UI error messages, Event logs and Admin logs do not help. Changing this option will restart certain modules and user logins may fail during the brief restart period.

This option is for generating internal logs related to tracing information between the appliance and Pulse One Server. It should be used for troubleshooting only when the admin UI error messages, Event logs and Admin logs do not help.

Table138: RADIUS Debug Log Configuration Guidelines

| Settings | Guidelines |
|------------------------------|---|
| RADIUS Diagnostic Logging On | Specify the source IP address if you know it. If you are able to provide the source IP address, the policy trace log can include events that occur before the user ID is entered into the system. |
| Max Diagnostic Log Size | Specify a maximum logfile size. The default is 1000 MB. |

Samba Diagnostic Logs

The Samba diagnostic log utility allows you to view trace and debug the samba troubleshooting messages on the new AD authentication server. When samba diagnostic logging is enabled, the internal logs related to AD authentication server is generated.

Observe the following guidelines:

- Diagnostic logging affects system performance.
- Must be used only when the admin UI error messages, event logs and admin logs are not very useful.
- Enabling/Disabling samba logs will restart certain modules and user log ins may fail during the restart.
- The default debug log setting will generate minimal logs. Enabling debug log with event AAA or AAA::samba along with this feature can generate more logs based on the debug log level.
- Enabling samba logs will cause logs to be generated from all configured AD authentication servers. Logs from multiple AD servers are interleaved and can be identified by the header in each line of the logs.

To use samba diagnostic logging:

1. Select Troubleshooting > Monitoring > Diagnostic Logs to display the configuration page.
2. Complete the configuration as described below.
3. Click Save Changes. When you save changes with Samba Diagnostic Logging On selected, the system begins generating diagnostic log entries.
4. Initiate the action you want to debug, such as a user sign in.
5. Manage the resulting log:
 - Click Save Log to save the log files in a zipped format.
 - Click Clear Log to remove previous logs and start diagnostic logging with a fresh file.
 - Click Save And Clear Log to save the diagnostic log to a file that you can send to PSGSC. The existing logs in the device will be cleared after saving.
6. Unselect Samba Diagnostic Logging On and click Save Changes to turn off diagnostic logging.

Figure563: Samba Diagnostic Logging Configuration Page

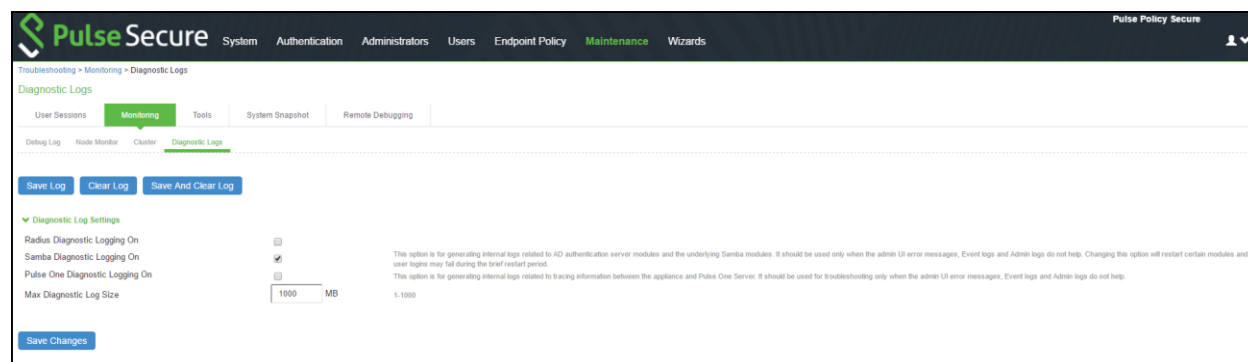


Table139: Samba Debug Log Configuration Guidelines

| Settings | Guidelines |
|-----------------------------|--|
| Samba Diagnostic Logging On | Select this option to generate logs related to AD server. |
| Max Diagnostic Log Size | Specify a maximum log file size. |
| | PPS |
| | <ul style="list-style-type: none"> • Default (MB)- 10 • Maximum (MB)-100 |

TCP Dump

This is a tool to sniff the packet, when you want to examine that the expected packet really reached a node. You can run the tcpdump utility to sniff the packet headers on the network and save them on a dump file.

To use tcpdump:

1. Select Troubleshooting > Tools > TCP Dump to display the configuration page.
2. Complete the configuration as described below.
3. Click Start Sniffing to start the tcpdump process.
4. Initiate the action you want to debug, such as a user sign in.
5. Click Stop Sniffing to write the tcpdump output to the screen.
6. Click Get to save the output to a file, or click Delete to clear the output.

Figure564: TCP Dump Configuration Page

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance' (highlighted), and 'Wizards'. The breadcrumb trail is 'Troubleshooting > Tools > TCP Dump'. The 'Tools' tab is selected, showing sub-tabs for 'TCP Dump', 'Commands', 'Kerberos', and 'Licensing Protocol Trace'. The 'TCP Dump' sub-tab is active, displaying a configuration form. The form includes a 'TCP Dump Status: Stopped' indicator. The 'Interface' section has 'Internal Port' selected. The 'VLAN Port' dropdown shows 'Internal Port (10.204.88.199)'. The 'Promiscuous mode' has 'On' selected. There are input fields for 'Filter' and 'Options'. A blue 'Start Sniffing' button is at the bottom of the form.

Table140: Debug Log Configuration Guidelines

| Settings | Guidelines |
|-----------------|---|
| TCP Dump Status | Displays whether the utility is stopped or running. |
| Interface | Select the ports on which to sniff. |
| VLAN Port | Select the VLAN port. |

| Settings | Guidelines | | | | | | | | | | | | | | | | | | | | |
|---|--|---------|--------|-------------|--------------------------------|---------|---------------------------------------|----|-------------------------|-----|--------------------------|-------------|---|-------------|--|---------------------|--------------------------------|-----------------------------|--|---|--|
| Promiscuous mode | Select a promiscuous mode option. | | | | | | | | | | | | | | | | | | | | |
| Filter | Specify a filter expression. For information about TCP dump filter expressions, see the UNIX man page . | | | | | | | | | | | | | | | | | | | | |
| | <table> <tr> <th>Example</th><th>Result</th></tr> <tr> <td>tcp port 80</td><td>Sniffs packets on TCP port 80.</td></tr> <tr> <td>port 80</td><td>Sniffs packets on TCP or UDP port 80.</td></tr> <tr> <td>ip</td><td>Sniffs the IP protocol.</td></tr> <tr> <td>tcp</td><td>Sniffs the TCP protocol.</td></tr> <tr> <td>dst #.#.#.#</td><td>Sniffs the destination IP address specified, where #.#.#.# is a valid IP address.</td></tr> <tr> <td>src #.#.#.#</td><td>Sniffs the source IP address specified, where #.#.#.# is a valid IP address.</td></tr> <tr> <td>port 80 or port 443</td><td>Sniffs on port 80 or port 443.</td></tr> <tr> <td>src #.#.#.# and dst #.#.#.#</td><td>Sniffs the source and destination IP addresses or hosts specified, where each #.#.#.# represents a valid IP address.</td></tr> <tr> <td>tcp port 80 or port 443 and dst #.#.#.# and src #.#.#.#</td><td>This example shows how to specify multiple parameters to create a filter that sniffs on TCP port 80, or on TCP or UDP port 443, and on the destination and source ports, where each #.#.#.# represents a valid IP address.</td></tr> </table> | Example | Result | tcp port 80 | Sniffs packets on TCP port 80. | port 80 | Sniffs packets on TCP or UDP port 80. | ip | Sniffs the IP protocol. | tcp | Sniffs the TCP protocol. | dst #.#.#.# | Sniffs the destination IP address specified, where #.#.#.# is a valid IP address. | src #.#.#.# | Sniffs the source IP address specified, where #.#.#.# is a valid IP address. | port 80 or port 443 | Sniffs on port 80 or port 443. | src #.#.#.# and dst #.#.#.# | Sniffs the source and destination IP addresses or hosts specified, where each #.#.#.# represents a valid IP address. | tcp port 80 or port 443 and dst #.#.#.# and src #.#.#.# | This example shows how to specify multiple parameters to create a filter that sniffs on TCP port 80, or on TCP or UDP port 443, and on the destination and source ports, where each #.#.#.# represents a valid IP address. |
| Example | Result | | | | | | | | | | | | | | | | | | | | |
| tcp port 80 | Sniffs packets on TCP port 80. | | | | | | | | | | | | | | | | | | | | |
| port 80 | Sniffs packets on TCP or UDP port 80. | | | | | | | | | | | | | | | | | | | | |
| ip | Sniffs the IP protocol. | | | | | | | | | | | | | | | | | | | | |
| tcp | Sniffs the TCP protocol. | | | | | | | | | | | | | | | | | | | | |
| dst #.#.#.# | Sniffs the destination IP address specified, where #.#.#.# is a valid IP address. | | | | | | | | | | | | | | | | | | | | |
| src #.#.#.# | Sniffs the source IP address specified, where #.#.#.# is a valid IP address. | | | | | | | | | | | | | | | | | | | | |
| port 80 or port 443 | Sniffs on port 80 or port 443. | | | | | | | | | | | | | | | | | | | | |
| src #.#.#.# and dst #.#.#.# | Sniffs the source and destination IP addresses or hosts specified, where each #.#.#.# represents a valid IP address. | | | | | | | | | | | | | | | | | | | | |
| tcp port 80 or port 443 and dst #.#.#.# and src #.#.#.# | This example shows how to specify multiple parameters to create a filter that sniffs on TCP port 80, or on TCP or UDP port 443, and on the destination and source ports, where each #.#.#.# represents a valid IP address. | | | | | | | | | | | | | | | | | | | | |

Network Troubleshooting Commands

You can run common network troubleshooting commands such as arp, ping, ping6, traceroute, traceroute6, NSlookup, and AvgRTTs from the admin console. You can use these connectivity tools to see the network path from the system to a specified server. If a client can ping or traceroute to the access system, and the access system can ping the target server, any remote users should be able to access the server through the access system.

To run network troubleshooting commands:

1. Select Troubleshooting > Tools > Commands to display the configuration page.
2. Complete the configuration as described below.
3. Click OK to run the command and write the output to the screen.
4. Click Clear to clear the output.

Figure565: Network Troubleshooting Commands Configuration Page

The screenshot shows the Pulse Secure web interface. The top navigation bar includes the Pulse Secure logo and tabs for System, Authentication, Administrators, Users, Endpoint Policy, Maintenance (highlighted), and Wizards. Below the navigation bar, the breadcrumb trail is Troubleshooting > Tools > Commands. The main content area is titled 'Commands' and features a tabbed interface with User Sessions, Monitoring, Tools (selected), System Snapshot, and Remote Debugging. Under the 'Tools' tab, there are sub-tabs for TCP Dump, Commands (selected), Kerberos, and Licensing Protocol Trace. The 'Commands' sub-tab contains the following fields: 'Command' (a dropdown menu with 'Ping' selected), 'Target server' (a text input field), 'Interface' (a radio button selection with 'Internal Port' selected), and 'VLAN Port' (a dropdown menu with 'Internal Port (10.204.88.199)' selected). Below these fields are 'OK' and 'Clear' buttons. At the bottom, there is an 'Output:' label followed by the text 'None'.

Table141: Network Troubleshooting Commands Configuration Guidelines

| Settings | Guidelines |
|---------------|---|
| Command | <p>Select a network troubleshooting command:</p> <ul style="list-style-type: none"> • Ping/Ping6—Use the ping command to verify that the system can connect to other systems on the network. In the event of a network failure between the local and remote nodes, you do not receive a reply from a pinged device. In that case, contact your LAN administrator for help. The ping command sends packets to a server and returns the server response, typically a set of statistics including the target server's IP address, the time spent sending packets and receiving the response, and other data. You can ping unicast or multicast addresses, and you must include the target server name in the request. Select ping to ping an IPv4 address or hostname. Select ping6 to ping an IPv6 address. We do not support DNS resolution for hosts with IPv6 addresses. Hence, ping6 does not support pings to hostnames. • Traceroute/Traceroute6—Use the traceroute command to discover the path that a packet takes from PPS to another host. Traceroute sends a packet to a destination server and receives an ICMP TIME_EXCEEDED response from each gateway along its path. The TIME_EXCEEDED responses and other data are recorded and displayed in the output, showing the path of the packet round-trip. Select traceroute to target an IPv4 address or hostname. Select traceroute6 to target an IPv6 address. We do not support DNS resolution for hosts with IPv6 addresses. Hence, traceroute6 does not support traceroute to hostnames. • NSlookup—Use NSlookup to get detailed information about a name server on the network. You can query on several different types of information, including a server's IP address, alias IP address, start-of-authority record, mail exchange record, user information, well-known services information, and other types of information. • ARP—Use the arp command to map IP network addresses to the hardware addresses. The Address Resolution Protocol (ARP) allows you to resolve hardware addresses. To resolve the address of a server in your network, a system sends information about its unique identifier to a server process executed on a server in the intranet. The server process then returns the required address to the client process. • AvgRTTs—Use AvgRTTs to display the average round-trip time (RTT) to the localhost. • Portprobe—Display the Transmission Control Protocol (TCP) or the User Datagram Protocol (UDP) port status (open or closed). |
| Target server | Specify the IP address or hostname for the target server. |
| Interface | Select the interface from which to send the command. |
| VLAN Port | Select a VLAN port, to test connectivity to a subscriber intranet. |
| Output | Displays command output. |

Troubleshooting TCP and UDP Port Status

| | |
|----------|---|
| Problem | Description: The system makes several connections to back-end servers using various port numbers. If communication between the system and the back-end servers stops, it can be difficult to determine the source of the problem. |
| Solution | You can use the Portprobe command to display the Transmission Control Protocol (TCP) or the User Datagram Protocol (UDP) port status (open or closed). |



NOTE: Only the system internal ports, management port and internal VLAN ports support the Portprobe command.

A TCP port can be closed under two conditions:

- The system sends a connection request to the back-end server port and the back-end server closes the connection (sends an RST packet).
- The connection request times out because the back-end server is not found or the back-end server is too busy to respond to the connection request.

If either of these conditions occurs, the system sends a ping command to the back-end server. If the ping command is successful, the back-end server is considered reachable but the back-end server port is closed. If the ping command fails, the back-end server is considered unreachable.

For UDP ports, the system sends a UDP datagram with a ping to the back-end server port. If the back-end server responds with Internet Control Message Protocol (ICMP) port unreachable or ICMP unreachable, the back-end port is considered unreachable. If the back-end server responds with ICMP host unreachable then the back-end server is considered unreachable.

To troubleshoot the TCP or UDP port:

1. Select Maintenance > Troubleshooting > Tools > Commands.
2. Select the Portprobe command.
3. Select either TCP or UDP.
4. Enter the target server and port number. You can enter an IP address, hostname or FQDN for the target server.
5. Enter the probe count. This is the number of times the system attempts to communicate with the back-end server port. The default for TCP is one; the default for UDP is five.
6. Enter the probe timeout. This is the number of seconds the system waits for a response from the back-end server port.
7. Select either the internal port or the management port. If the management port is not configured, it is not displayed.
8. If using an internal port, select the internal VLAN port from the list.
9. Click OK.

The following figure shows an example of a successful and an unsuccessful port probe.

Figure566: Successful TCP Port Probe

Troubleshooting > Tools > Commands

Commands

User Sessions | Monitoring | **Tools** | System Snapshot | Remote Debugging

TCP Dump | **Commands** | Kerberos | Licensing Protocol Trace

IPv6 is not supported

Command: Portprobe

Protocol: TCP

Target Server: www.google.com Target port[1-65535]: 80

Probe Count: 6 (default: tcp = 1, udp = 5, max = 100)

Probe Timeout: 1 (default: 1 secs, max = 180 secs)

Interface: ☒ Internal Port ☐ Management Port

VLAN Port: Internal Port (10.96.3.3)

Output:

```
Resolving IP address for www.google.com
Resolved IP address: 172.217.18.68
Starting port probing

Tcp probe : 172.217.18.68:80 Open
Tcp probe : 172.217.18.68:80 Open
Tcp probe : 172.217.18.68:80 Open
Tcp probe : 172.217.18.68:80 Open
Tcp probe : 172.217.18.68:80 Open
Tcp probe : 172.217.18.68:80 Open
Tcp probe : 172.217.18.68:80 Open

Operation complete
```

Figure567: Unsuccessful UDP Port Probe

Troubleshooting > Tools > Commands

Commands

User Sessions | Monitoring | **Tools** | System Snapshot | Remote Debugging

TCP Dump | **Commands** | Kerberos | Licensing Protocol Trace

IPv6 is not supported

Command: Portprobe

Protocol: UDP

Target Server: 10.209.118.10 Target port[1-65535]: 8888

Probe Count: 5 (default: tcp = 1, udp = 5, max = 100)

Probe Timeout: 1 (default: 1 secs, max = 180 secs)

Interface: ☒ Internal Port ☐ Management Port

VLAN Port: Internal Port (10.96.3.3)

Output:

```
Resolving IP address for 10.209.118.10
Resolved IP address: 10.209.118.10
Starting port probing

UDP probe: 10.209.118.10:8888 Close ( Destination host is unreachable )
UDP probe: 10.209.118.10:8888 Close ( Destination host is unreachable )
UDP probe: 10.209.118.10:8888 Close ( Destination host is unreachable )
UDP probe: 10.209.118.10:8888 Close ( Destination host is unreachable )
UDP probe: 10.209.118.10:8888 Close ( Destination host is unreachable )

Operation complete
```

Testing Server Connectivity

To run NSLookup to test name server connectivity:

1. In the admin console, choose Maintenance > Troubleshooting > Tools > Commands.
2. From the Command list, select NSLookup.
3. Select the type of query to use from the Query Type drop down menu.
4. Enter the query, which is a hostname, an IP address, or other information, depending on your selection of query type.
5. Enter the VLAN port.
6. Click OK to run the command.

Figure568: Network Troubleshooting Commands Configuration Page

The screenshot displays the Pulse Secure admin console interface. The top navigation bar includes the Pulse Secure logo and menu items: System, Authentication, Administrators, Users, Endpoint Policy, Maintenance (highlighted), and Wizards. Below the navigation bar, the breadcrumb trail shows Troubleshooting > Tools > Commands. The main content area is titled 'Commands' and features a tabbed interface with 'Tools' selected. Under the 'Tools' tab, there are sub-tabs: User Sessions, Monitoring, Tools (active), System Snapshot, and Remote Debugging. Below these, there are tabs for TCP Dump, Commands (active), Kibana, and Licensing Protocol Trace. The 'Commands' configuration section includes a 'Command' dropdown set to 'NSLookup', a 'Query Type' dropdown set to 'ANY - All available information', a 'Query' text input field with a placeholder 'Hostname, or IPv4/IPv6 address, or other information based on Query Type', an 'Interface' dropdown set to 'Internal Port', and a 'VLAN Port' dropdown set to 'Internal Port (19 96 71 1)'. At the bottom of this section are 'OK' and 'Clear' buttons. An 'Output' section at the very bottom shows 'None'.

Kerberos Debugging

You can run the Kerberos debugging utility from the admin console. The utility checks the DNS infrastructure for validity of the Kerberos realms and defined credentials.

To use the Kerberos debugging utility:

1. Select Maintenance > Troubleshooting > Tools > Kerberos to display the configuration page.
2. Complete the configuration as described below.
3. Click Run to start the debugging process.
4. Click Get to save the output to a file, or click Delete to clear the output.

Figure569: Kerberos Debugging Utility Configuration Page

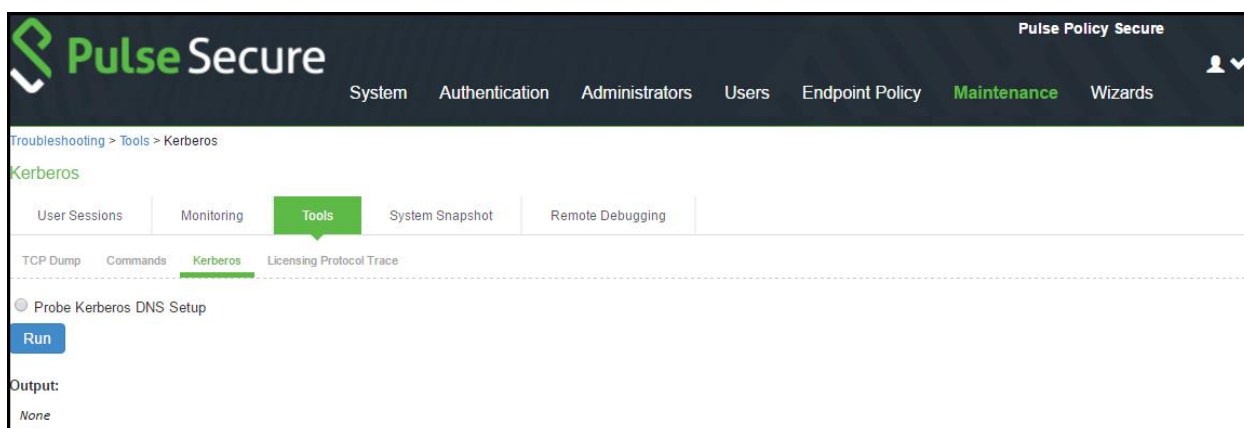


Table142: Kerberos Debugging Utility Configuration Guidelines

| Settings | Guidelines |
|--------------------------|--|
| Probe Kerberos DNS Setup | Select this option to display the configuration elements for the Kerberos DNS test. |
| Kerberos Realm | Specify the realm name. |
| Site | Specify the fully qualified domain name. |
| Output | Displays results of the probe, for example: KDCs for realm matrix.net: top.matrix.net,top.matrix.net operation complete |

Remote Debugging

Remote debugging allows Pulse Secure Global Support Center (PSGSC) to directly access this system over a secure connection. You should enable this feature only if you have been requested to do so by PSGSC in response to an issue that you have reported.

To enable remote debugging:

1. Select Maintenance > Troubleshooting > Remote Debugging to display the configuration page.
2. Complete the configuration and actions as described below.

Figure570: Remote Debugging Configuration Page

The screenshot shows the Pulse Secure web interface. The top navigation bar includes 'System', 'Authentication', 'Administrators', 'Users', 'Endpoint Policy', 'Maintenance' (highlighted), and 'Wizards'. Below this, the breadcrumb 'Troubleshooting > Remote Debugging' is visible. The 'Remote Debugging' tab is selected in a sub-navigation bar. The main content area contains a description: 'Remote debugging allows Pulse Secure to directly access this system over a secure connection. You should only enable this feature if you have been requested to do so by Pulse Secure Customer Support in response to an issue you have reported.' Below this, the 'Debugging Status' is 'Disabled'. There is a 'Debugging Code' input field and a 'Connect to' field with the value 'service.pulsesecure.net'. An 'Enable Debugging' button is at the bottom.

Table143: Remote Debugging Configuration and Action Guidelines

| Settings | Guidelines |
|------------------|---|
| Debugging Status | Displays whether remote debugging is enabled or disabled. |
| Debugging Code | Specify a code as instructed by PSGSC. |
| Connect to | Specify the fully qualified domain name as instructed by PSGSC. |
| Enable Debugging | Click this option to allow remote debugging. |

Troubleshooting the Common Issues with PPS

The below table describes the common issues with PPS and provides the possible resolution.

Table144: Troubleshooting

| Category | Description | Resolution/KB docs |
|--|--|--|
| Installation | Integrating Cisco IP phone 7941 or 7911G for 802.1x authentication with the PPS solution | For more information, see KB 13668 . |
| | Configuring Odyssey Client for Wired 802.1x | For problem resolution, see KB 10654 . |
| | Pulse Secure Desktop Client prompts for certificate validation even though the Trusted Root certificate is installed | For problem resolution, see KB 23479 . |
| | Communication Ports that are open by default on PPS device | For more information, see KB 24280 . |
| Layer 2 (802.1X, MAC Auth, SNMP, RADIUS) | 802.1X- "TLS handshake failed" posted to the PPS user access log | For problem resolution, see KB 13716 . |
| | MAC Auth- Does PPS count MAC authentication against the concurrent user license? | For more information, see KB 24574 . |
| | SNMP monitoring of PPS devices | For more information, see KB 26207 . |
| | RADIUS dropped new Radius authentication request | For resolution, see KB 30167 . |
| Layer 3 (SRX, SOS, PAN, Fortinet) | Juniper SRX firewalls disconnect and reconnect at random times causing loss of access to protected resources | For resolution, see KB KB 40024 . |
| | Delay in removal of user session from Palo Alto Firewall after termination of session on PPS | For resolution, see KB 40165 . |
| Host Checker | Upgrading ESAP in an L2 authentication environment | For resolution, see KB 28732 . |
| | How to enforce domain membership with Host Checker Policy | For resolution, see KB 17389 . |
| IF-MAP | Information on IF-Map Server and IF-Map Client | For more information, see KB 22006 . |
| | Cannot find an option to enable IF-MAP server in admin GUI | For more information, see KB 23043 . |

| Category | Description | Resolution/KB docs |
|-------------------------|---|--|
| | | |
| Cluster | Cluster VIP flapping between both of the nodes in Active/Passive cluster | For resolution, see KB 21584 . |
| | Cluster Licensing Best Practices | For more information, see KB 40093 . |
| | Do the active nodes monitor the state of their own interface? Each node monitors both of its interfaces by sending an ARP to the default gateway. This ARP message is sent every 5 seconds. The PPS waits up to 5 seconds for a response. If there is no response the PPS begins a wait period of 45 seconds. If there is still no response, the PPS marks the interface as down. Note: The ARP timeout value is configurable from the network settings page for each interface. Additionally, you can configure how many ARP ping timeouts are received before marking the interface as down. This applies to both interfaces and all nodes in the cluster. On the cluster properties page, there is an option to have each PPS disable their external interface in the event their internal interface goes down. This is a cluster-wide setting. | |
| | How big is the Synchronization Packet? This depends on how much data is synchronized. It is observed that approximately 1MB of data is transferred for 1000 users when a node is added to the cluster and synchronized. After the nodes are synchronized, data is sent only upon a status change. For example, user session status, user properties (bookmarks), or a change to the system configuration. | |
| | How does the PPS inform the local nodes if the passive becomes the Master? When one PPS fails, the other PPS detects the outage and assumes the VIP. It then issues a gratuitous ARP so that all local nodes (switches and routers included) will know the new MAC address for the VIP. | |
| | Explanation on LEADER cluster status and Sync Rank | For more information, see KB 13295 . |
| | I have received my replacement PPS; how do I join it to my existing cluster? | For more information, see KB 13727 . |
| | Procedure for replacing a device in an Active/Passive or Active/Active cluster | For more information, see KB 16146 . |
| | Procedure to collect logs | For more information, see KB 21714 . |
| AAA (AD, LADAP, RADIUS) | Users intermittently fail auth to Active Directory; NT_STATUS_IO_TIMEOUT seen in logs | For resolution, see KB 40179 . |
| | Does the PPS server support, multiple instances of Active Directory/Windows NT, for the same domain? | For resolution, see KB 21702 . |
| | What permissions are needed on the service account used within PCS/PPS Active Directory standard mode authentication server and | For resolution, see KB 40401 . |

| Category | Description | Resolution/KB docs |
|----------|--|---|
| | how to set it up using Delegate Control Wizard | |
| | Mapping based on Primary Group by using LDAP Authorization Server. | For more information, see KB 2527 . |
| Guest | <p>500 Internal Error, when attempting to sign into the GUAM portal</p> <p>Note: The customization for GUAM is no more supported from the PPS 5.2 release.</p> | For resolution, see KB 40296 . |

Appendix

Custom Expressions and System Variables Reference

- [Using Custom Expressions in Rule Configuration](#)

Using Custom Expressions in Rule Configuration

This topic describes custom expressions. It is intended for advanced users. It includes the following information:

- [Custom Expressions](#)
- [Custom Expression Elements](#)
- [Wildcard Matching](#)
- [Using Multivalued Attributes](#)
- [Specifying Multivalued Attributes in a Bookmark Name](#)
- [Distinguished Name Variables](#)
- [System Variables](#)
- [Custom Variables and Macros](#)
- [append](#)
- [daysdiff](#)
- [regmatch](#)
- [Specifying Fetch Attributes in a Realm](#)
- [Specifying the homeDirectory Attribute for LDAP](#)

Custom Expressions

Many system rules, such as role mapping rules or resource policy rules, support custom expressions. A custom expression is a combination of variables that the system evaluates as a Boolean object. The expression returns true, false, or error.

You can write custom expressions in the following formats. Note that elements of these formats are described in greater detail in the table that follows:

- *variable comparisonOperator variable*
- *variable comparisonOperator simpleValue*
- *variable comparisonOperator (simpleValue)*
- *variable comparisonOperator (OR Values)*
- *variable comparisonOperator (AND Values)*
- *variable comparisonOperator (time TO time)*

- *variable comparisonOperator (day TO day)*
- *isEmpty (variable)*
- *isUnknown (variable)*
- *(customExpr)*
- *NOT customExpr*
- *! customExpr*
- *customExpr OR customExpr*
- *customExpr || customExpr*
- *customExpr AND customExpr*
- *customExpr && customExpr*

Custom Expression Elements

Table 145: Custom Expression Elements

| Element | Description |
|-----------------|--|
| <i>variable</i> | <p>Represents a system variable. A variable name is a dot-separated string, and each component can contain characters from the set [a-z A-Z 0-9_] but cannot start with a digit [0-9]. Variable names are case-insensitive. For system variables that you may use in role mapping rules and resource policies.</p> <p>When writing a custom expression in a log query field, you need to use system log variables. These variables are described in the Filter Variables Dictionary on the Filter page (System > Log/Monitoring > Events User Access Admin Access > Filters > <i>Select Filter</i> tab).</p> <p>Quoting syntax for variables:</p> <p>The system supports a quoting syntax for custom expression variables that allows you to use any character except '.' (period) in a user attribute name. To escape characters in an attribute name, quote some or all of the variable name using { } (curly-braces). For example, these expressions are equivalent:</p> <ul style="list-style-type: none"> • <code>userAttr.{Login-Name} = 'xyz'</code> • <code>userAttr.Login{-}Name = 'xyz'</code> • <code>{userAttr.Login-Name} = 'xyz'</code> • <code>userA{ttr.L}{ogin-}Name = 'xyz'</code> <ul style="list-style-type: none"> • Escape characters supported within quotes: <ul style="list-style-type: none"> • <code>\—Escape a backslash (\).</code> • <code>\{—Escape a left curly brace ({).</code> • <code>\}—Escape a right curly brace (}).</code> • <code>\hh—Escape a hexadecimal value where hh is two characters from [0-9A-Fa-f].</code> <p>Examples:</p> <ul style="list-style-type: none"> • <code>userAttr.{Tree Frog} = 'kermit'</code> • <code>userAttr.{Tree\20Frog} = 'kermit'</code> <p>Notes:</p> <ul style="list-style-type: none"> • There is no limit to the number of quotes you can use in a variable name. • You can use the quoting syntax with any variable, not just <code>userAttr.*</code> variables. • You need to use curly-brace quotes only when writing custom expressions. |

| Element | Description |
|---------------------------|---|
| <i>comparisonOperator</i> | <p>One of the following:</p> <ul style="list-style-type: none"> ==—Equal to. Use with strings, numbers, and DNs. !=—Not equal to. Use with strings, numbers, and DNs. <—Less than. Use with numbers. <=—Less than or equal to. Use with numbers. >—Greater than. Use with numbers. >=—Greater than or equal to. Use with numbers. |
| <i>simpleValue</i> | <p>One of the following:</p> <ul style="list-style-type: none"> <i>string</i> — quoted string that may contain wildcards. <i>IP Address</i>—a.b.c.d <i>subnet</i>—a.b.c.d/subnetBitCount or a.b.c.d/netmask <i>number</i>—Positive or negative integer <i>day</i>—SUN MON TUE WED THU FRI SAT <p>Notes about strings:</p> <ul style="list-style-type: none"> A string may contain all characters except <nl> (newline) and <cr> (carriage return). Strings can be any length. String comparisons are case-insensitive. Strings can be quoted with single- or double-quotes. A quoted string may contain wildcards, including star(*), question mark (?), and square brackets ([]). <i>variable comparisonOperator variable</i> comparisons are evaluated without wildcard matching. Use a backslash to escape these characters: <ul style="list-style-type: none"> single-quote (') — \' double-quote (") — \" backslash (\) — \\ hexadecimal — \hh [0-9a-fA-F] <p>Note about <i>day</i>:</p> <p>Day and time comparisons are evaluated in the system's time zone. Day range (<i>day TO day</i>) calculations start with the first day and step forward until the second day is reached. In time range (<i>time TO time</i>) calculations, the first value must be earlier than the second value. Only time variables can be compared to day and time values. The time variables are: <i>time.*</i> and <i>log inTime.*</i>.</p> |
| <i>time</i> | <p>Time of day in one of the following formats:</p> <ul style="list-style-type: none"> <i>HH:MM</i> — 24-hour <i>HH:MMam</i> — 12-hour <i>HH:MMpm</i> — 12-hour <i>H:MM</i> — 24-hour <i>H:MMam</i> — 12-hour <i>H:MMpm</i> — 12-hour <p>Day and time comparisons are evaluated in the system's time zone. Day range (<i>day TO day</i>) calculations start with the first day and step forward until the second day is reached. In time range (<i>time TO time</i>) calculations, the first value must be earlier than the second value. Only time variables can be compared to day and time values. The time variables are: <i>time.*</i> and <i>log inTime.*</i>.</p> |
| OR Value | <p>String containing one or more OR comparisons:</p> <p>Examples:</p> <p><i>variable comparisonOperator (number OR number ...)</i></p> <p><i>variable comparisonOperator (string OR string ...)</i></p> |

| Element | Description |
|-------------------|--|
| AND Value | String containing one or more AND comparisons. Examples: <i>variable comparisonOperator (number AND number ...)</i> <i>variable comparisonOperator (string AND string ...)</i> |
| isEmpty | Function that takes a single variable name (<i>variable</i>) argument and returns a boolean value. isEmpty() is true if the variable is unknown or has a zero-length value, zero-length strings, and empty lists. Example: isEmpty(userAttr.terminationDate) |
| isUnknown | Function that takes a single variable name (<i>variable</i>) argument and returns a boolean value. isUnknown() is true if the variable is not defined. User attributes (userAttr.* <i>variables</i>) are unknown if the attribute is not defined in LDAP or if the attribute lookup failed (such as if the LDAP server is down). Example: isUnknown(userAttr.bonusProgram) |
| NOT, ! | Logical negation <i>comparisonOperator</i> . The negated expression evaluates to true if the <i>customExpr</i> is false and evaluates to false if the <i>customExpr</i> is true. The operators NOT, AND, and OR are evaluated from highest to lowest precedence in this order: NOT (from right), AND (from left), OR (from left). |
| OR, | Logical operator OR , which are equivalent. The operators NOT, AND, and OR are evaluated from highest to lowest precedence in this order: NOT (from right), AND (from left), OR (from left). |
| AND, && | Logical AND or &&, which are equivalent. The operators NOT, AND, and OR are evaluated from highest to lowest precedence in this order: NOT (from right), AND (from left), OR (from left). |
| <i>customExpr</i> | Expression written in the Custom Expression Syntax (see above). |

Wildcard Matching

In a quoted string, supported wildcards include:

- star (*)—A star matches any sequence of zero or more characters.
- question mark (?)—A question mark matches any single character.
- square brackets ([])—Square brackets match one character from a range of possible characters specified between the brackets. Two characters separated by a dash (-) match the two characters in the specified range and the lexically intervening characters. For example, 'dept[0-9]' matches strings "dept0", "dept1", and up to "dept9".

To escape wildcard characters, place them inside square brackets. For example, the expression 'userAttr.x = "value [*]"' evaluates to true if attribute x is exactly "value**".

Using Multivalued Attributes

Multivalued attributes—attributes that contain two or more values—provide you with a convenient method for defining resources that expand into multiple individual bookmarks on the users' bookmarks page.

For example, assume that the user's LDAP directory contains the multivalued attribute HomeShares: \\Srv1\Sales;\\Srv2\Marketing. When you configure the Windows File share resource definition using the HomeShares multivalued attribute, \\<userAttr.HomeShares>, the user sees two bookmarks:

- \\Srv1\Sales

- \\Srv2\Marketing

Now let's assume the user's LDAP directory contains a second multivalued attribute defined as HomeFolders: Folder1;Folder2;Folder3. When you configure the Windows File share resource using both of the multivalued attributes, \\<userAttr.HomeShares>\<userAttr.HomeFolders>, the user sees the following six bookmarks:

- \\Srv1\Sales\Folder1
- \\Srv1\Sales\Folder2
- \\Srv1\Sales\Folder3
- \\Srv2\Marketing\Folder1
- \\Srv2\Marketing\Folder2
- \\Srv2\Marketing\Folder3

The only exception to this functionality is when the variable includes an explicit separator string. In this case, only one bookmark containing multiple resources displays on the users' bookmark page.

You specify the separator string in the variable definition using the syntax `sep='string'` where string equals the separator you want to use. For example, to specify a semi-colon as the separator, use the syntax `<variable.Attr sep=';'>`.

Use the following syntax for multivalued attributes handling. Note that `<variable>` refers to a session variable such as `<userAttr.name>` or `<CertAttr.name>`:

- `<variable[Index]>`—You specify indexes in a variety of ways. If, for example, the total number of values for a given index is 5, and you want to specify the entire range of values you use `<variable[ALL]>`. If you want to specify only the fourth value, you use `<variable[4]>`.
- `<variable>` is the same as `<variable[ALL]>`.
- `<variable>` is the same as `<variable[ALL]>`.
- `<variable sep='str'>` and `<variable[All] sep='str'>` — These variable definitions always refer to a single string value with all the tokens expanded out with separator strings between the values.



NOTE: Variable names cannot contain spaces.

Specifying Multivalued Attributes in a Bookmark Name

Another common case of using multivalued attributes occurs when you include a variable in a bookmark name and in a URL or file server/share field.

For example, again assume that the user's LDAP directory contains the multivalued attribute HomeShares: \\Srv1\Sales;\\Srv2\Marketing. When you configure the Windows File share resource definition using the HomeShares multivalued attribute, \\<userAttr.HomeShares>, and you use the same attribute in the bookmark name field, <userAttr.HomeShares>, the system creates two bookmarks:

- Srv1\Sales bookmark pointing to \\Srv1\Sales
- Srv2\Marketing bookmark pointing to \\Srv2\Marketing

This does not create a situation in which you end up with the following set of conditions:

- Srv1\Sales bookmark pointing to \\Srv1\Sales
- Srv1\Marketing bookmark pointing to \\Srv1\Marketing (error)
- Srv2\Sales bookmark pointing to \\Srv1\Sales (error)

- Srv2\Marketing bookmark pointing to \\Srv2\Marketing

Distinguished Name Variables

You can compare a distinguished name (DN) to another DN or to a string, but the system ignores wildcards, white space, and case. Note, however, that the system takes the order of DN keys into consideration.

When the system compares an expression to a DN to a string, it converts the string to a distinguished name before evaluating the expression. If the system cannot convert the string due to bad syntax, the comparison fails. The DN variables are:

- userDN
- certDN
- certIssuerDN

The system also supports DN suffix comparisons using the matchDNSuffix function. For example:

```
matchDNSuffix( certDn, "dc=danastreet,dc=net")
```

Within the parenthesis, the first parameter is the "full" DN and the second is the suffix DN. You can use a variable or string for each parameter. Note that this first parameter should have more keys than the second (suffix parameter). Otherwise, if they are equal, it is the same as *<firstparam> = <secondparam>*. If the second parameter has more keys, matchDNSuffix returns false.

System Variables

The below table lists and defines system variables, gives an example for each system variable, and provides a guide as to where you may use system variables.

Table 146: System Variables and Examples

| Variable | Description | Usage | Examples |
|----------------------|--|---|--|
| authMethod | Type of authentication method used to authenticates a user. | role mapping rules, resource policy rules | authMethod = 'ACE Server' |
| cacheCleanerStatus | The status of Cache Cleaner. Possible values: 1 - if it is running 0 - if otherwise | | cacheCleanerStatus = 1 cacheCleanerStatus = 0 |
| certAttr.<cert-attr> | Attributes from a client-side certificate. Examples of certAttr attributes include: <ul style="list-style-type: none"> • C - country • CN - common name • description - description • e-mailAddress - e-mail address • GN - given name • initials - initials • L - locality name • O - organization • OU - organizational unit • SN - surname • serialNumber- serial number • ST - state or province • title - title • UI - unique identifier <p>Use this variable to check that the user's client has a client-side certificate with the value(s) specified.</p> | <ul style="list-style-type: none"> • role mapping rules • resource policy rules • SSO parameter fields • LDAP configuration | certAttr.OU = 'Retail Products Group' |

| Variable | Description | Usage | Examples |
|-----------------------------|--|---|--|
| certAttr.altName.<Alt-attr> | <p>Subject alternative name value from a client-side certificate where <Alt-attr> may be:</p> <ul style="list-style-type: none"> Email EmailId EmailDomain DNS registeredId ipAddress UPN UPNid UPNDomain fascn fascnAC fascnSC fascnCN fascnCS fascnICl fascnPI fascnOC fascnOI fascnPOA fascnLRC | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields LDAP configuration | <ul style="list-style-type: none"> certAttr.altName.email = "joe@company.com" certAttr.altName.ipAddress = 10.10.83.2 |
| certAttr.serialNumber | <p>Client certificate serial number.</p> <p>Note that all characters other than [0-9 a-f A-F] are stripped out of a string before comparison with certAttr.SN. Wildcards are not supported.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields LDAP configuration | <ul style="list-style-type: none"> certAttr.SerialNumber = userAttr.certSerial certAttr.SerialNumber = "6f:05:45:ab" |
| certDN | Client certificate subject DN. Wildcards are not permitted. | role mapping rules, resource policy rules | <ul style="list-style-type: none"> certDN = 'cn=John Harding,ou=eng,c=Company' certDN = userDN (match the certificate subject DN with the LDAP user DN) certDN = userAttr.x509SubjectName certDN = ('cn=John Harding,ou=eng,c=Company' or 'cn=Julia Yount,ou=eng,c=Company') |

| Variable | Description | Usage | Examples |
|----------------------------|---|---|---|
| certDN.<subject-attr> | Any variable from the client certificate subject DN, where subject-attr is the name of the RDN key. Use to test the various subject DN attributes in a standard x.509 certificate. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields LDAP configuration | <ul style="list-style-type: none"> certDN.OU = 'company' certDN.E = 'joe@company.com' certDN.ST = 'CA' |
| certDNText | Client certificate user DN stored as a string. Only string comparisons to this value are allowed. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | certDNText = 'cn=John Harding,ou=eng,c=Company' |
| certIssuerDN | Client certificate-issuer subject DN. This variable works like a standard DN attribute such as CertDN. Wildcards are not permitted. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | <ul style="list-style-type: none"> certIssuerDN = 'cn=John Harding,ou=eng,c=Company' certIssuerDN = userAttr.x509Issuer certIssuerDN = ('ou=eng,c=Company' or 'ou=operations,c=Company') |
| certIssuerDN.<issuer-attr> | Any variable from the client certificate-issuer subject DN, where issuer-attr is the name of the RDN key. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | <ul style="list-style-type: none"> certIssuerDN.OU = 'company' certIssuerDN.ST = 'CA' |
| certIssuerDNText | Client certificate-issuer subject DN stored as a string. Only string comparisons to this value are allowed. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | certIssuerDNText = 'cn=John Harding,ou=eng,c=Company' |
| defaultNTDomain | Contains the Domain value set in the authentication server configuration when you use AD/NT authentication. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | defaultNTDomain=" CORP" |

| Variable | Description | Usage | Examples |
|--------------------|---|--|--|
| group.<group-name> | User's group membership as provided by the realm authentication or directory server. | <ul style="list-style-type: none"> role mapping rules resource policy rules <p>Only those groups evaluated for role mapping rules are available in the detailed rules (conditions) in the resource policies. We recommend that you use the groups variable instead of group.<group-name>, which is supported only for backwards compatibility.</p> | <ul style="list-style-type: none"> group.preferredPartner group.goldPartner or group.silverPartner group.employees and time.month = 9 <p>Combination examples: Allow all partners with active status from Monday to Friday but preferred partners Monday through Saturday: (group.partners and time = (Mon to Fri)) or (group.preferredPartners and time = (Mon to Sat))) and userAttr.partnerStatus = 'active'</p> <p>NOTE: Spaces are not supported, such as, group.sales managers</p> |
| Groups | <p>List of groups as provided by the realm authentication or directory server.</p> <p>NOTE: You can enter any characters in the groupname, although wildcard characters are not supported.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | groups=('sales managers') |
| hostCheckerPolicy | Host Checker polices that the client has met. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | hostCheckerPolicy = ('Norton' and 'Sygate') and cacheCleanerStatus = 1 hostCheckerPolicy = ('Norton' and 'Sygate') |
| log inHost | Hostname or IP address that the browser uses to contact the Pulse Secure service. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields LDAP configuration | log inHost = 10.10.10.10 |

| Variable | Description | Usage | Examples |
|----------------------|---|---|--|
| log inTime | <p>The time of day at which the user submits his credentials. The time is based on system time.</p> <p>NOTE: When using this variable in an SSO parameter field, the variable returns the UNIX string time.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | <ul style="list-style-type: none"> log inTime = (8:00am) log inTime= (Mon to Fri) |
| log inTime.day | <p>The day of month on which the user submits his credentials, where day is 1-31. The time is based on the system time.</p> <p>You cannot use the TO operator with this variable.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules | log inTime.day = 3 |
| log inTime.dayOfWeek | <p>The day of the week on which the user submits his credentials, where dayOfWeek is in the range [0-6] where 0 = Sunday.</p> <p>The system does not support the TO operator with time.dayOfWeek expressions if you use numbers instead of strings. In other words, “log inTime.dayOfWeek = (2 TO 6)” does not work, but “log inTime.dayOfWeek = (mon to fri)” does work.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules | <ul style="list-style-type: none"> log inTime.dayOfWeek = (0 OR 6) log inTime.dayOfWeek = (mon TO fri) log inTime.dayOfWeek = (1) log inTime.dayOfWeek = 5 |
| log inTime.dayOfYear | <p>The numeric day of the year on which the user submits his credentials, where dayOfYear can be set to [0-365].</p> <p>You cannot use the TO operator with this variable.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules | log inTime.dayOfYear = 100 |
| log inTime.month | <p>The month in which the user submits his credentials, where month can be set to [1-12] where 1 = January.</p> <p>You cannot use the TO operator with this variable.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules | log inTime.month >= 4 AND log inTime.month <=9 |
| log inTime.year | <p>The year in which the user submits his credentials, where year can be set to [1900-2999].</p> <p>You cannot use the TO operator with this variable.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules | log inTime.year = 2005 |
| log inURL | URL of the page that the user accessed to sign in. The system gets this value from the Administrator URLs User URLs column on the Authentication > Signing In > Sign-in Policies page of the admin console. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields LDAP configuration | log inURL = */admin |

| Variable | Description | Usage | Examples |
|--|---|---|--|
| networkIf | The network interface on which the user request is received. Possible values: internal, external | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | sourceIp = 192.168.1.0/24 and networkIf = internal |
| Ntdomain | The NetBIOS NT domain used in NT4 and Active Directory authentication. | <ul style="list-style-type: none"> role mapping rules SSO parameter fields | ntdomain = jnpr |
| Ntuser | The NT username used in Active Directory authentication | <ul style="list-style-type: none"> role mapping rules SSO parameter fields | ntuser = jdoe |
| password password[1] password[2] | The password entered by the user for the primary authentication server (password and password[1]) or the secondary authentication server (password[2]). | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | password = A1defo2z |
| Realm | The name of the authentication realm to which the user is signed in. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | Realm = ('GoldPartners' or 'SilverPartners') NOTE: AND condition will always fail as a user is only allowed to sign in to a single realm in a session. |
| Role | List of all the user roles for the session. In SSO, if you want to send all the roles to back-end applications, use <role sep = ";"> - where sep is the separator string for multiple values. The system supports all separators except " and >. | <ul style="list-style-type: none"> resource policy rules SSO parameter fields | <ul style="list-style-type: none"> Role = ('sales' or 'engineering') Role = ('Sales' AND 'Support') |

| Variable | Description | Usage | Examples |
|------------------------------------|---|---|---|
| radius.requestAttributes.<reqAttr> | <p>Allows the user to filter the roles based on the incoming RADIUS request attributes.</p> <p>The list of default value are as follows:</p> <ul style="list-style-type: none"> radius.requestAttributes.Calling-Station-Id = <ANY> radius.requestAttributes.NAS-IP-Address = <ANY> radius.requestAttributes.NAS-Identifier = <ANY> radius.requestAttributes.NAS-Port-Type = <ANY> radius.requestAttributes.Called-Station-Id = <ANY> radius.requestAttributes.Aruba-Essid-Name = <ANY> radius.requestAttributes.User-Name = <ANY> | role mapping rules | radius.requestAttributes.Calling-Station-Id = "00:aa:3f:* |
| locationGroup | Allows the user to filter the roles based on the location group. | role mapping rules | locationGroup = "bangalore" |
| eapProtocol.<protocolLayer> | <p>Allows the user to filter the roles based on EAP protocol. <protocolLayer> indicates whether the variable matches the inner protocol or outer protocol.</p> <ul style="list-style-type: none"> The values for the outerProtocol variable are EAP-PEAP and EAP-TTLS. The values for the innerProtocol are PAP, CHAP, MS-CHAP, MS-CHAP-V2, EAP-MD5, EAP-TLS, EAP-MSCHAP-V2, EAP-GTC, and EAP-JUAC. | role mapping rules | eap-protocol.outerProtocol != "EAP-PEAP" |
| sourceIP | The IP address of the machine on which the user authenticates. You can specify the netmask using the bit number or in the netmask format: '255.255.0.0'. Note that you can evaluate the sourceIP expression against a string variable such as an LDAP attribute. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | <ul style="list-style-type: none"> sourceIP = 192.168.10.20 sourceIP = 192.168.1.0/24 and networkIf internal userAttr.dept = ('eng' or 'it') and sourceIP = 10.11.0.0/16 sourceIP = 192.168.10.0/24 (Class C) is the same as: sourceIP = 192.168.10.0/255.255.255.0 sourceIP=userAttr.sourceip |

| Variable | Description | Usage | Examples |
|----------------|--|---|---|
| Time | The time of day at which the role mapping rule or resource policy rule is evaluated. The time of the day can be in 12-hour or 24-hour format. | <ul style="list-style-type: none"> role mapping rules resource policy rules | <ul style="list-style-type: none"> time = (9:00am to 5:00pm) time = (09:00 to 17:00) time = (Mon to Fri) <p>Combination examples: Allow executive managers and their assistants access from Monday to Friday:</p> <p>userAttr.employeeType = ("manager" or "assistant") and group.executiveStaff and time = (Mon to Fri)</p> |
| time.day | The day of month on which the user submits his credentials to, where day is 1-31. The time is based on the system time. | <ul style="list-style-type: none"> role mapping rules resource policy rules | log inTime.day = 3 |
| time.dayOfWeek | The day of the week on which the role mapping rule or resource policy rule is evaluated, where dayOfWeek is in the range [0-6] where 0 = Sunday. | <ul style="list-style-type: none"> role mapping rules resource policy rules | <ul style="list-style-type: none"> log inTime.dayOfWeek = (0 OR 6) log inTime.dayOfWeek = (1 to 5) log inTime.dayOfWeek = 5 |
| time.dayOfYear | The day of the year on which the role mapping rule or resource policy rule is evaluated. Possible values include: 1-365. | <ul style="list-style-type: none"> role mapping rules resource policy rules | time.dayOfYear = 100 |
| time.month | The month in which the role mapping rule or resource policy rule is evaluated. Possible values include: 1-12 | <ul style="list-style-type: none"> role mapping rules resource policy rules | <ul style="list-style-type: none"> time.month >= 9 and time.month <= 12 and time.year = 2004 group.employees and time.month = 9 |
| time.year | The year in which the role mapping rule or resource policy rule is evaluated, where year can be set to [1900-2999]. | <ul style="list-style-type: none"> role mapping rules resource policy rules | time.year = 2005 |

| Variable | Description | Usage | Examples |
|--|---|---|--|
| user user@primary_auth_server_name user@secondary_auth_server_name | <p>Pulse Secure username for the user's primary authentication server (user and user@primary_auth_server_name) or secondary authentication server (user@secondary_auth_server_name). Use when authenticating against an Active Directory server, domain and username.</p> <p>primary_auth_server_name is the name of the primary auth server. If there are spaces or special characters in the name, it can be enclosed in curly brackets. For example user@{My Primary Auth Server}</p> <p>secondary_auth_server_name is the name of the secondary auth server. If there are spaces or special characters in the name, it can be enclosed in curly brackets. For example user@{My Secondary Auth Server}</p> <p>NOTE: When including a domain as part of a username, you must include two slashes between the domain and user. For example: user='yourcompany.net\joeuser'.</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | <ul style="list-style-type: none"> user = 'steve' user = 'domain\steve' |
| username username@primary_auth_server_name username@secondary_auth_server_name | <p>Pulse Secure system username for the user's primary authentication server (username and username@primary_auth_server_name) or secondary authentication server (username@secondary_auth_server_name). If the user is signing in to a certificate authentication server, then the user's Pulse Secure system username is the same as CertDN.cn.</p> <p>primary_auth_server_name is the name of the primary auth server. If there are spaces or special characters in the name, it can be enclosed in curly brackets. For example user@{My Primary Auth Server}</p> <p>secondary_auth_server_name is the name of the secondary auth server. If there are spaces or special characters in the name, it can be enclosed in curly brackets. For example user@{My Secondary Auth Server}</p> | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | <ul style="list-style-type: none"> username = 'steve' and time = mon username = 'steve' username = 'steve' username = ('steve' or "jankowski") |
| userAgent | The browser's user agent string. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | The browser's user agent string. |

| Variable | Description | Usage | Examples |
|----------------------|---|---|---|
| userAttr.<auth-attr> | User attributes retrieved from an LDAP, RADIUS, or SiteMinder authentication or directory server. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | <ul style="list-style-type: none"> userAttr.building = ('HQ*' or 'MtView[1-3]') userAttr.dept = ('sales' and 'eng') userAttr.dept = ('eng' or 'it' or 'custsupport') userAttr.division = 'sales' userAttr.employeeType != 'contractor' userAttr.salaryGrade > 10 userAttr.salesConfirmed >= userAttr.salesQuota <p><i>Negative examples:</i></p> <ul style="list-style-type: none"> userAttr.company != "Acme Inc" or not group.contractors not (user = 'guest' or group.demo) <p><i>Combination examples:</i></p> <p>Allow executive managers and their assistants access from Monday to Friday:</p> <p>userAttr.employeeType = (*manager* or *assistant*) and group.executiveStaff and time = (Mon to Fri)</p> <p>Allow all partners with active status from Monday to Friday but preferred partners Monday through Saturday:</p> <p>((group.partners and time = (Mon to Fri)) or (group.preferredPartners and time = (Mon to Sat))) and userAttr.partnerStatus = 'active'</p> |
| userDN | The user DN from an LDAP server. If the user is authenticated by the LDAP server, then this DN is from the authentication server; otherwise, the DN comes from the realm's Directory/Attribute server. Wildcards are not permitted. | <ul style="list-style-type: none"> role mapping rules resource policy rules | <ul style="list-style-type: none"> userDN = 'cn=John Harding,ou=eng,c=Company' userDN = certDN |

| Variable | Description | Usage | Examples |
|--------------------|--|---|--|
| userDN.<user-attr> | Any variable from the user DN, where user-attr is the name of the RDN key. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | Any variable from the user DN, where user-attr is the name of the RDN key. |
| userDNText | User DN stored as a string. Only string comparisons to this value are allowed. | <ul style="list-style-type: none"> role mapping rules resource policy rules SSO parameter fields | userDNText = 'cn=John Harding,ou=eng,c=Company' |

Custom Variables and Macros

Custom variables, like system variables, are name-value pair tags that you can use when defining role mapping rules, resource policy rules and SSO parameter fields.

Custom variables are created in the Server Catalog (for example, Authentication > Auth Server > *Name* > Settings) by using a predefined macro on a system variable. Available macros are:

- REGMATCH – Matches a regular expression pattern against a string text.
- APPEND – Appends a text string to another text string.
- DAYSDIFF – Calculates the difference between two dates.



NOTE: These macros are located under Variable Operators in the Variables tab of the Server Catalog window.

A custom variable name is a dot-separated string. Each component can contain characters from the set [a-z A-Z 0-9 _] but cannot start with a digit [0-9]. Custom variable names are case-insensitive.

Custom variables are referenced as customVar.<variableName> . For example, if you create a custom variable with the name check-prefix, you reference this custom variable as customVar.check-prefix.

append

| | |
|-------------|---|
| Syntax | APPEND (attr, TextString) APPEND (attr, attr2) |
| Description | Append a text string to an attribute or append an attribute to another attribute and store the resulting string in the custom variable. |
| Options | attr—System variable of type string. TextString—Quoted ASCII string. attr2—System variable of type string. |

Output Fields Returns a String value. If no match is found, returns an empty string.

If the system variable is multivalued, the custom variable is also multivalued and uses the same order as the system variable.

Sample Output

```
APPEND (userName, "@sample.net")
```

In this example, the string "@sample.net" is appended to the userName value.

daysdiff

Syntax DAYSDIFF (attr, timeformat)

Description Calculates the number of days between the attribute and the current time.

Options attr—System variable of type string.

timeformat—Output time format. Valid values are: UTC, TIMET, MMDDYYYY

Output Fields Returns an Integer value.

Sample Output

```
DAYSDIFF ( certAttr.validUpto, UTC)
```

In this example, calculate the difference in days between the current time and the value of certAttr.validUpto and express the time in UTC (Coordinated Universal Time).

regmatch

Syntax REGMATCH (attr, regex, groupingNumber)

Description Match the regular expression pattern against an attribute and store the result in the custom variable.

Options attr—System variable of type string.

regex—Quoted string containing the regular expression to be applied to the attr option.

groupingNumber—The group value to assign to the custom variable.

Additional Information The regular expression supports the Perl Compatible Regular Expressions (PCRE) syntax. A grouping (capture buffer) in the regex pattern can also be used to define a custom variable.

Output Fields Returns a String value. If no match is found, returns an empty string.

If the system variable is multivalued, the custom variable is also multivalued and uses the same order as the system variable.

Sample Output

```
REGMATCH (mailId, "^(.*)@sample.net$", 1)
```

In this example, a mailId of myName@sample.net creates a custom variable with value "myName".

Specifying Fetch Attributes in a Realm

To facilitate the support for various parameterized settings in user roles and resource policies, you have the ability to specify additional fetch attributes. The system stores the fetch attributes when users log in so that you can use them in parameterized role or resource policy definitions.

The system pulls all the attributes that are currently stored in the Server Catalog for the user's authentication or authorization LDAP server. So, make sure to add the LDAP user attributes that are used in role or resource policy definitions in the LDAP Server Catalog first.

When a user logs in, the system retrieves user attributes that are referenced in the role mapping rules plus all of the additional attributes referenced in the Server Catalog and stores all these values. Note that this should not incur a significant performance overhead because all the user attributes are retrieved in one single LDAP query.



NOTE: When you substitute variables, such as in IP/Netmasks or hostnames, the values in the session are appropriately converted into the data type that is required by the particular application definition.

Specifying the homeDirectory Attribute for LDAP

You can create a bookmark that automatically maps to a user's LDAP home directory. You can accomplish this using the LDAP attribute homeDirectory. You need to configure a realm that specifies the LDAP server instance as its auth server, and you need to configure role-mapping rules and a bookmark that points to the LDAP homeDirectory attribute.

REST API Support

- Overview
- Sample GET/POST/PUT/DELETE Request and Responses

Overview

The REST API provides a standardized method for Next-Gen firewalls and third-party systems to interact with PPS. **Representational state transfer (REST)** or RESTful Web services are one way of providing interoperability between computer systems on the Internet. REST-compliant Web services allow requesting systems to access and manipulate textual representations of Web resources using a uniform and predefined set of stateless operations. In a RESTful Web service, requests made to a resource's URI will elicit a response that may be in XML, HTML, JSON or some other defined format. PPS supports JSON format only.

REST methods determine the HTTP method for manipulating the resources defined in the service operation. The kind of operations available include those predefined by the HTTP verbs GET, POST, PUT, DELETE and so on. The response may confirm that some alteration has been made to the stored resource, and it may provide hypertext links to other related resources or collections of resources. By making use of a stateless protocol and standard operations, REST systems aim for fast performance, reliability, and the ability to grow, by re-using components that can be managed and updated without affecting the system as a whole, even while it is running.

Note: REST API Support for PPS involves only Configuration APIs. Also, PPS supports only the GET, POST, PUT and DELETE APIs.

The valid and supported values are described in the Table 147.

Table 147: Valid and Supported Values

| HTTP Verb | Definition |
|-----------|--|
| DELETE | Delete an existing resource. |
| GET | Retrieve a representation of a resource. |
| POST | Create a new resource |
| PUT | Create a new resource to a new URL, or modify an existing resource to an existing URL. |

The error codes supported are described in the Table 148.

Table 148: Error Codes Supported

| HTTP Verb | Definition |
|-------------|--|
| 200 OK | Requesting for resource information successful using GET Resource updation successful using PUT |
| 201 Created | Resource creation successful using POST |

| HTTP Verb | Definition |
|----------------------------|---|
| 204 No Content | Deletion of resource successful with no body. Even PUT, POST may return 204 if no errors or warnings seen |
| 400 – Bad Request | Any Request (GET/PUT/POST/DELETE, and so on) is invalid. Example : Incorrect JSON format |
| 401 – Unauthorized | Any REST Call with invalid credentials |
| 403 – Forbidden | REST Call with valid credentials but no permission. |
| 404 – Not found | Requested resource in URI does not exists |
| 422 – Unprocessable Entity | Any validation/referential integrity errors that would result in failure of PUT/POST/DELETE request |
| 500 Server Error | When PPS rest server is not responding |

Authentication for REST APIs

Basic authentication using the HTTP authorization header is used to authenticate username/password on the Administrators authserver. It is expected that the user is already configured in the Administrators authserver. On a successful login, a random token (api_key) is generated and sent back as a JSON response. Further access to APIs can use this api_key in their Authorization header for access. The entire communication is over TLS. An example is explained below:

REQUEST

GET /api/v1/auth HTTP/1.1

Host: xx.xx.xx.xx

Authorization: Basic YWRtaW5kYjpkYW5hMTIz

Content-Type: application/json

RESPONSE

HTTP/1.1 200 OK

Cache-Control: no-store

Connection: Keep-Alive

Content-Type: application/json

Expires: -1

Keep-Alive: timeout=15

{ "api_key": "p5mMlc7RQu81R2NvssLCCZhP05kf0N2ONFeYeLXX6aU=" }

Authorization header for all future request should perform Basic Auth using above api_key value as username and password as empty.

REQUEST

GET /api/v1/configuration HTTP/1.1

Host: xx.xx.xx.xx

Authorization: Basic cDVtTWxjN1JRdTgxUjJOdnNzTENDWmhQMDVrZjBOMk9ORmVZZUxYWDZhVT06

RESPONSE

HTTP/1.1 200 OK

Content-Length →283

Content-Type →application/json

```
{  
  "administrators":  
    { "href": "/api/v1/configuration/administrators" }  
  ,  
  "authentication":  
    { "href": "/api/v1/configuration/authentication" }  
  ,  
  "system":  
    { "href": "/api/v1/configuration/system" }  
  ,  
  "users":  
    { "href": "/api/v1/configuration/users" }  
}
```


Enabling REST API Configuration

The configuration of PPS can be accessed using REST APIs. The PPS configuration is represented in a JSON form when accessed using REST APIs. The structure of the JSON representation is very similar to the structure of PPS XML configuration.

A new admin UI option for users under "Administrators" authserver has been added. REST API authentication would be successful only for those users who have this option enabled.

To enable this checkbox:

1. Go to Authentication > Auth. Servers > Administrators > Users > New/Update.
2. Select the Allow access to REST APIs checkbox.
3. Click on **Save Changes**.

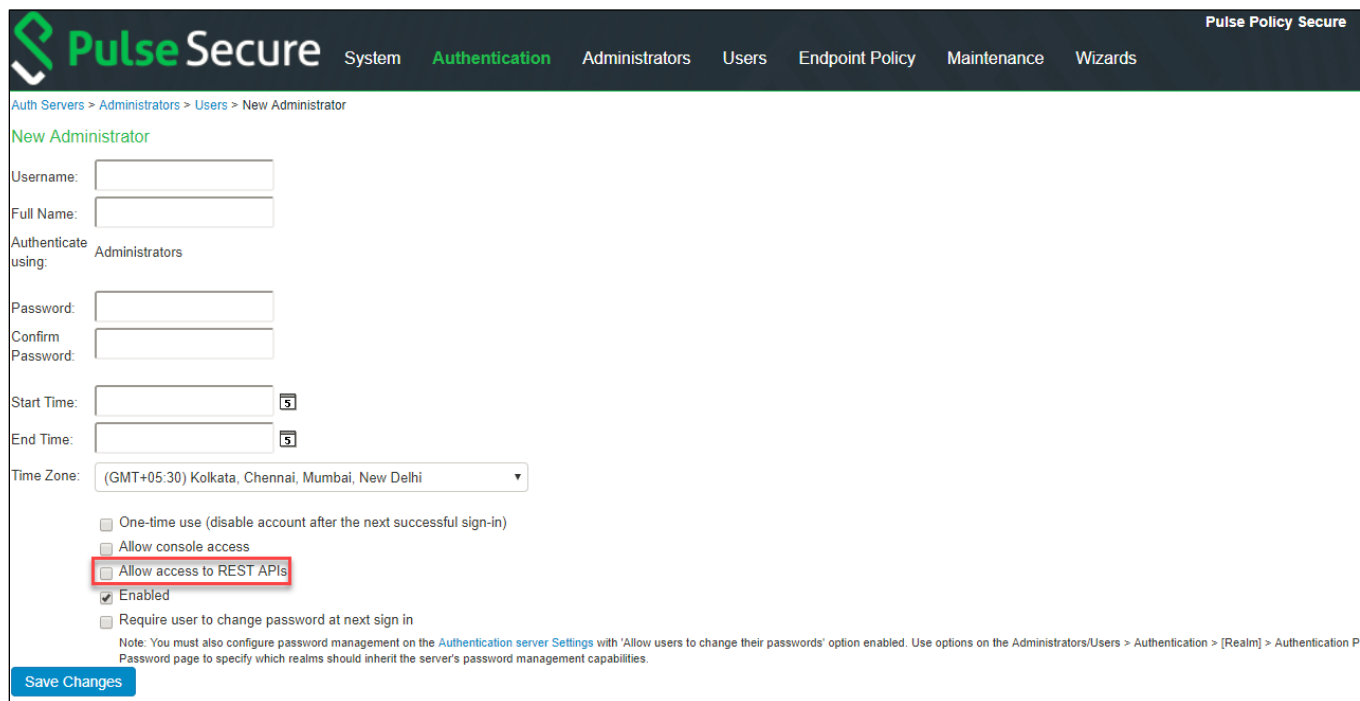

The screenshot shows the Pulse Secure Administration UI. The top navigation bar includes the Pulse Secure logo and tabs for System, Authentication, Administrators, Users, Endpoint Policy, Maintenance, and Wizards. The breadcrumb trail is: Auth Servers > Administrators > Users > New Administrator. The page title is "New Administrator". The form contains the following fields and options:

- Username:
- Full Name:
- Authenticate using: Administrators
- Password:
- Confirm Password:
- Start Time:
- End Time:
- Time Zone: (GMT+05:30) Kolkata, Chennai, Mumbai, New Delhi
- ☐ One-time use (disable account after the next successful sign-in)
- ☐ Allow console access
- ☐ Allow access to REST APIs (highlighted with a red box)
- ☒ Enabled
- ☐ Require user to change password at next sign in

Note: You must also configure password management on the [Authentication server Settings](#) with 'Allow users to change their passwords' option enabled. Use options on the Administrators/Users > Authentication > [Realm] > Authentication Password page to specify which realms should inherit the server's password management capabilities.

Sample GET/POST/PUT/DELETE Request and Responses

Below is a sample of GET/POST/PUT/DELETE request and responses:

GET API call: It will fetch the details under Endpoint Policy in PPS

```
REQUEST
GET /api/v1/configuration/uac HTTP/1.1

Host xx.xx.xx.xx

Authorization : Basic
VU9qSTlGTzNrYVk5d0t2aXpBN1dPZ0FyZlN1S3FmTkNnQUh0R0ZuR0xSbz06

Content-Type: application/json

{
  "admissionControl": {
    "href": "/api/v1/configuration/uac/admissionControl"
  },
  "host-enforcer": {
    "href": "/api/v1/configuration/uac/host-enforcer"
  },
  "infranet-enforcer": {
    "href": "/api/v1/configuration/uac/infranet-enforcer"
  },
  "mac-address-realms": {
    "href": "/api/v1/configuration/uac/mac-address-realms"
  },
  "network-access": {
    "href": "/api/v1/configuration/uac/network-access"
  },
  "snmpEnforcement": {
    "href": "/api/v1/configuration/uac/snmpEnforcement"
  }
}
RESPONSE

HTTP/1.1 200 OK

Content-Length: 340

Content-Type: application/json
```

POST API call : It will create SRX Enforcer in Infranet Enforcer connection

```
REQUEST

POST /api/v1/configuration/uac/infranet-
enforcer/connections/infranet-enforcer/ HTTP/1.1

Host xx.xx.xx.xx
```



```

Authorization : Basic
VU9qSTlGTzNrYVYk5d0t2aXpBN1dPZ0FyZlN1S3FmTkNnQUh0R0ZuR0xSbz06

Content-Type: application/json

{
  "idp-for-local-sessions-only": "true",
  "junos": {
    "location-group": "- No 802.1X -",
    "password-encrypted":
"3u+UR6n8AgABAAAAofSnIBrU19vdwUslG5LG4cg1QH6CbXDSmY4ZW0x85HY="
  },
  "name": "SRX",
  "serial-number": [
    "SJFIOQJI4KNM"
  ],
  "severity-filter": "medium",
  "use-idp": "false"
}

```

RESPONSE

HTTP/1.1 201 OK

Content-Length: 122

Content-Type: application/json

```

{
  "result": {
    "info": [
      {
        "message": "Operation succeed without warning or
error!"
      }
    ]
  }
}

```

PUT API call: It will update the existing configuration. Configured Location Group as "Guest" and updated to "Default" Location group.

Before Updating the Location Group

```

REQUEST
GET api/v1/configuration/uac/network-access/radius-clients/radius-
client/Radius%20Client HTTP/1.1

Host xx.xx.xx.xx

Authorization : Basic
VU9qSTlGTzNrYVYk5d0t2aXpBN1dPZ0FyZlN1S3FmTkNnQUh0R0ZuR0xSbz06

```

```
Content-Type: application/json
```

```
{
  "coa-support": "true",
  "description": "",
  "disconnect-support": "true",
  "dynamic-auth-port": "3799",
  "enable": "true",
  "gatewayid": "",
  "ip-address": "10.204.88.12",
  "ip-address-range": "1",
  "kek-encrypted": "",
  "key-wrap-format": "HEX",
  "key-wrap-support": "false",
  "location-group": "Guest",
  "mack-encrypted": "",
  "make-model": "Ruckus Wireless",
  "name": "Radius Client",
  "ruckus-certificate-verification": "false",
  "ruckus-password-encrypted": "",
  "shared-secret-encrypted":
  "3u+UR6n8AgABAAAAofSnIBrU19vdwUs1G5LG4cg1QH6CbXDSmY4ZW0x85HY="
}
```

```
RESPONSE
```

```
HTTP/1.1 200 OK
```

```
Content-Length: 122
```

```
Content-Type: application/json
```

After Updating the Location Group

```
REQUEST
```

```
PUT api/v1/configuration/uac/network-access/radius-clients/radius-
client/Radius%20Client HTTP/1.1
```

```
Host xx.xx.xx.xx
```

```
Authorization : Basic
```

```
VU9qSTlGTzNrYVtk5d0t2aXpBN1dPZ0FyZlN1S3FmTkNnQUh0R0ZuR0xSbz06
```

```
Content-Type: application/json
```

```
{
  "coa-support": "true",
  "description": "",
  "disconnect-support": "true",
  "dynamic-auth-port": "3799",
```

```

    "enable": "true",
    "gatewayid": "",
    "ip-address": "xx.xxx.xx.xx",
    "ip-address-range": "1",
    "kek-encrypted": "",
    "key-wrap-format": "HEX",
    "key-wrap-support": "false",
    "location-group": "Default",
    "mack-encrypted": "",
    "make-model": "Ruckus Wireless",
    "name": "Radius Client",
    "ruckus-certificate-verification": "false",
    "ruckus-password-encrypted": "",
    "shared-secret-encrypted":
    "3u+UR6n8AgABAAAAofSnIBrU19vdwUslG5LG4cg1QH6CbXDSmY4ZW0x85HY="
  }

```

RESPONSE

HTTP/1.1 200 OK

Content-Length: 122

Content-Type: application/json

```

{
  "result": {
    "info": [
      {
        "message": "Operation succeed without warning or
error!"
      }
    ]
  }
}

```

DELETE API Call: Deleting SNMP device from PPS

REQUEST

DELETE api/v1/configuration/uac/snmpEnforcement/clients/client/ruckus
HTTP/1.1

Host 10.96.73.37

Authorization : Basic

VU9qSTlGTzNrYVks5d0t2aXpBNldPZ0FyZlNlS3FmTkNnQUh0R0ZuR0xSbz06

Content-Type: application/json

```

{
  "default-vlan": "0",

```

```
"description": "",
"enable": "true",
"ip-address": "10.204.88.12",
"location-group": "none",
"model": "Ruckus Wireless",
"name": "ruckus",
"read-auth-password-encrypted": "",
"read-auth-protocol": "md5",
"read-priv-password-encrypted": "",
"read-priv-protocol": "",
"read-security-level": "auth",
"read-username": "public",
"snmp-enforcement": "false",
"snmp-version": "V2",
"sys-contact": "https://support.ruckuswireless.com/contact_us",
"sys-description": "Ruckus Wireless ZD1200",
"sys-location": "350 West Java Dr. Sunnyvale, CA 94089 US",
"sys-name": "ruckus",
"trap-auth-password-encrypted": "",
"trap-auth-protocol": "md5",
"trap-priv-password-encrypted": "",
"trap-priv-protocol": "",
"trap-security-level": "auth",
"trap-username": "public",
"use-samecredential": "true",
"write-auth-password-encrypted": "",
"write-auth-protocol": "md5",
"write-priv-password-encrypted": "",
"write-priv-protocol": "",
"write-security-level": "auth",
"write-username": "public"
}
```

RESPONSE

HTTP/1.1 204 NO CONTENT

Content-Length: 0

Content-Type: application/json